

Assembly Instruction

—— CBN256A ——



General Guidelines

- Please read the following instructions carefully and use the product accordingly.
- Please keep this manual and hand it over when you transfer the product.
- This summary may not include every detail of all variations and considered steps. Please contact us if further information or assistance is needed.


Notes

- The product is intended for indoor use only. It must be assembled and used in accordance with the provisions of the manual. Personal injury and/or damage to the product may occur if the product is used outside of its intended purpose and/or if it has been changed/modified from its original design. The seller does not assume any responsibility or liability for injury or damage caused by incorrect assembly or improper use.
- Avoid long-term exposure to humid environments to prevent mildew.
- Keep the product away from fire sources and high temperatures. Do not expose the product to direct sunlight.
- Do not place any hot objects on the surface of the product.
- If there are any defective or missing parts after unpacking, please cease assembly immediately and contact us.
- Assemble the item on a spacious surface and avoid placing the unwrapped product directly on the ground to prevent damage.
- Do not stand or sit on the wooden boards.
- Wear gloves during the assembly and/or disassembly process to avoid scratches from any sharp edges.
- Match each part and fitting based on the part number in the manual.
- If a part does not match the fitting, please check the manual for clarification.
- During assembly, first loosely align all screws with the corresponding pre-drilled holes, then tighten them one by one.
- Periodically inspect the screw tightness while the product is in use. Retighten if necessary to ensure structural integrity.
- If you accidentally spill water or any other liquid on the surface, immediately wipe it clean with a dry towel.
- Keep the product away from sharp, pointed objects and corrosive substances to prevent damage.
- Place the item on level, solid ground during use.





Warnings

- During assembly, keep all small parts out of the reach of children, as they may be fatal if swallowed or inhaled.
- Children should not climb or play on the product to avoid tipping over and causing serious injury.
- To avoid the potential danger of suffocation, keep all packaging materials (film, plastic bags, foam, etc.) away from babies and children.

Exploded(EN)



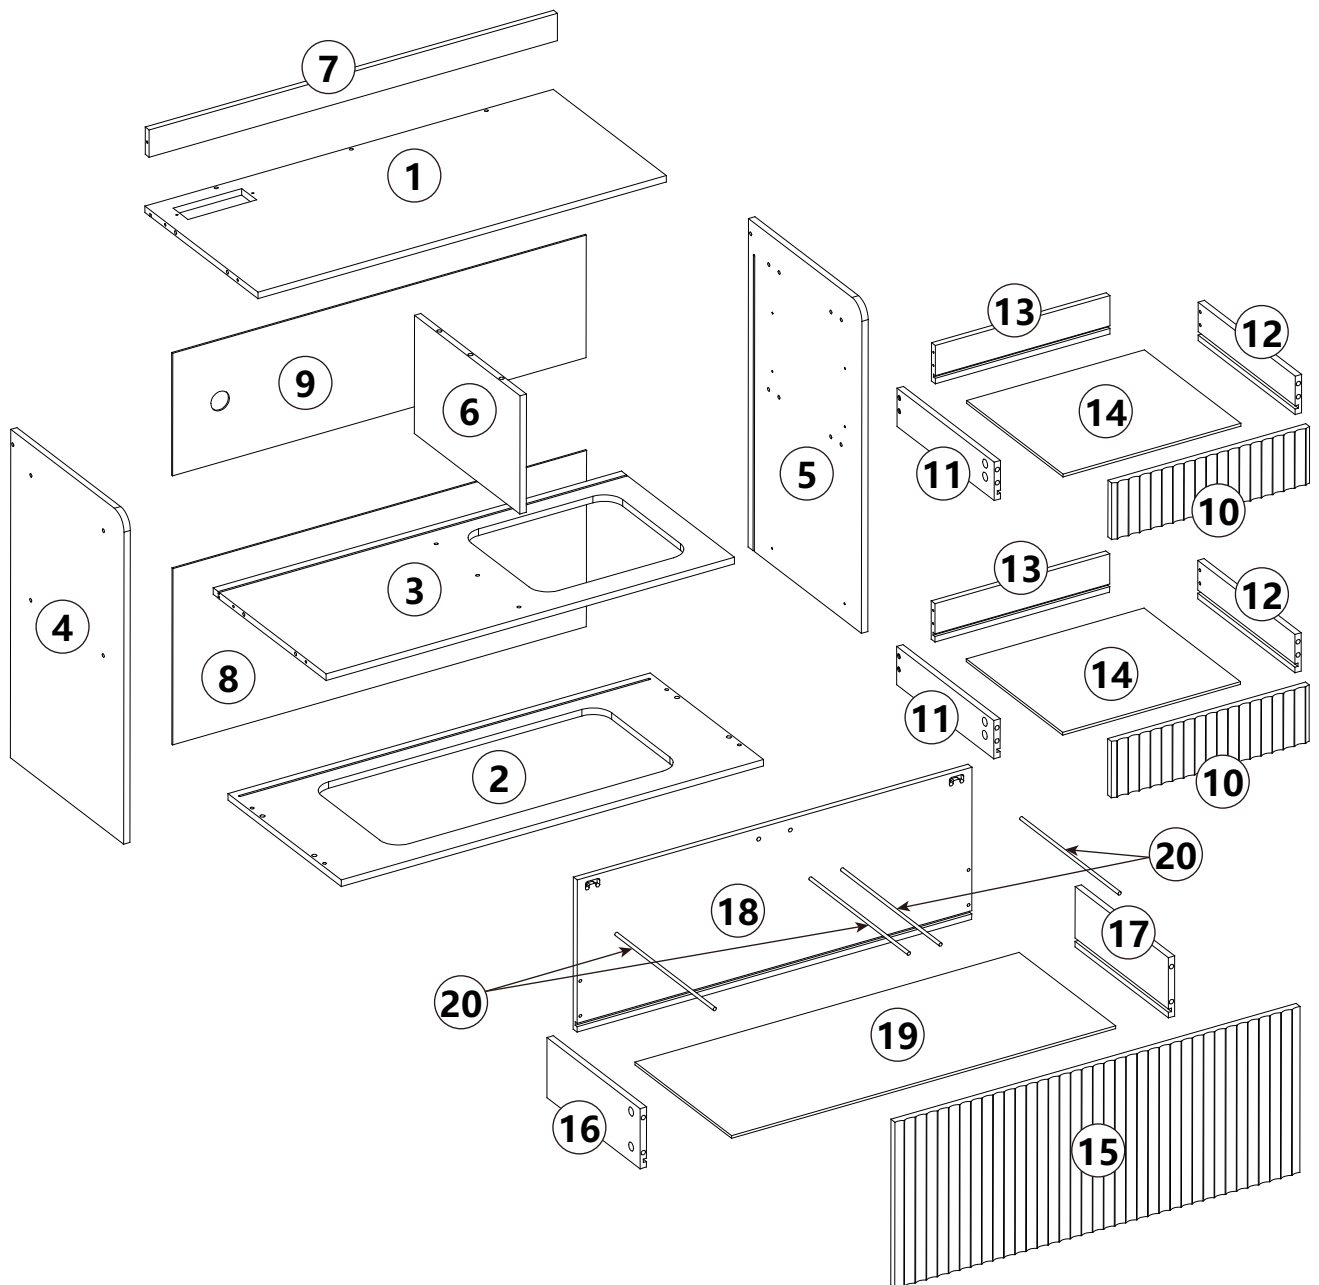

















Parts List(EN)

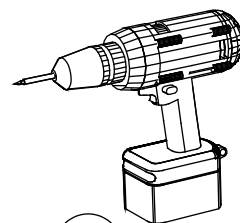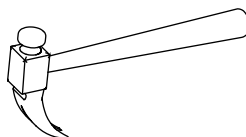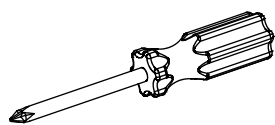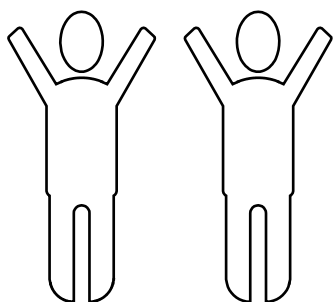

1 x1	2 x1	3 x1	4 x1
5 x1	6 x1	7 x1	8 x1
9 x1	10 x2	11 x2	12 x2
13 x2	14 x2	15 x1	16 x1
17 x1	18 x1	19 x1	20 x4

Hardware List(EN)

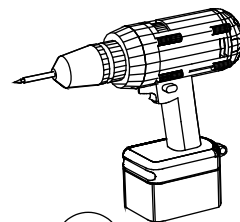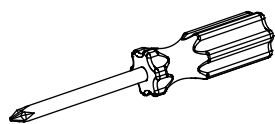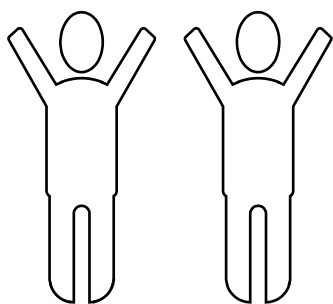

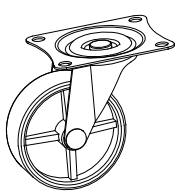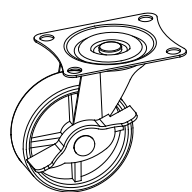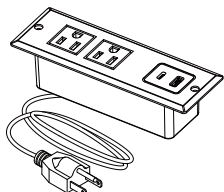A  6*40mm 14+1PC	B  15*9.5mm 14+1PC	C  6*30mm 14+1PC	D  ST5*40mm 19+1PC
E  M3.5*12mm 48+3PCS	F  M3.5*25mm 12+1PC	G  3PCS	H  12+1PC
I  2PCS	J  2PCS	K  1PC	L  14+1PC
M  3mm 1PC	N  1PC	CL  300mm 3PCS	CR  300mm 3PCS
DL  300mm 3PCS	DR  300mm 3PCS		

Instructions For Fastening CAM-BOLT and CAM-LOCK




CAM-BOLT




CAM-LOCK


Tools Required




INSERTING AND TIGHTENING CAM-BOLT

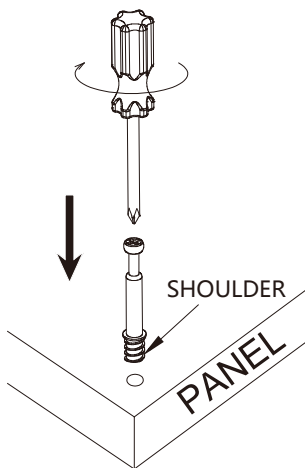

Place Cam-bolt on pre-drilled hole and screw in vertically

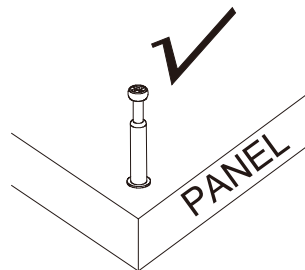


Shoulder is flushed (on the same level) with the panel

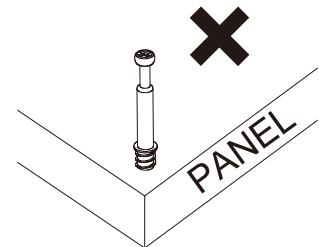


Shoulder is above the panel

Place Cam-bolt on the designated pre-drilled holes on the panel. Use a Phillips Screwdriver to screw-in Cam-bolt vertically until shoulder is flushed (on the same level) with panel.


INSERTING CAM-LOCK

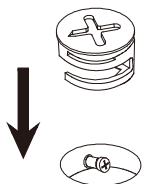

Insert Cam-lock with arrow align to Cam-bolt head

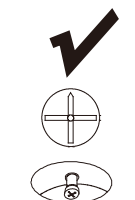


CORRECT

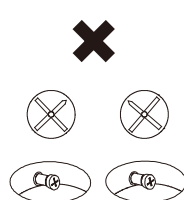

WRONG

TIGHTENING CAM-LOCK

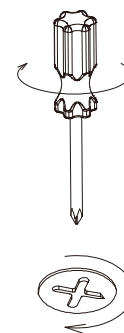


Align the arrow on the Cam-lock to the Cam-bolt head and insert the Cam-lock. Ensure Cam-lock is fully inserted.

Use a Flat-head Screwdriver to turn Camlock clockwise so it locks onto the head of the Cam-bolt. Turn until it is snug (about 3/4ths of a turn) -- over-tightening could damage Cam-lock or/and Cam-bolt.


Assembly Steps(EN)

STEP 1

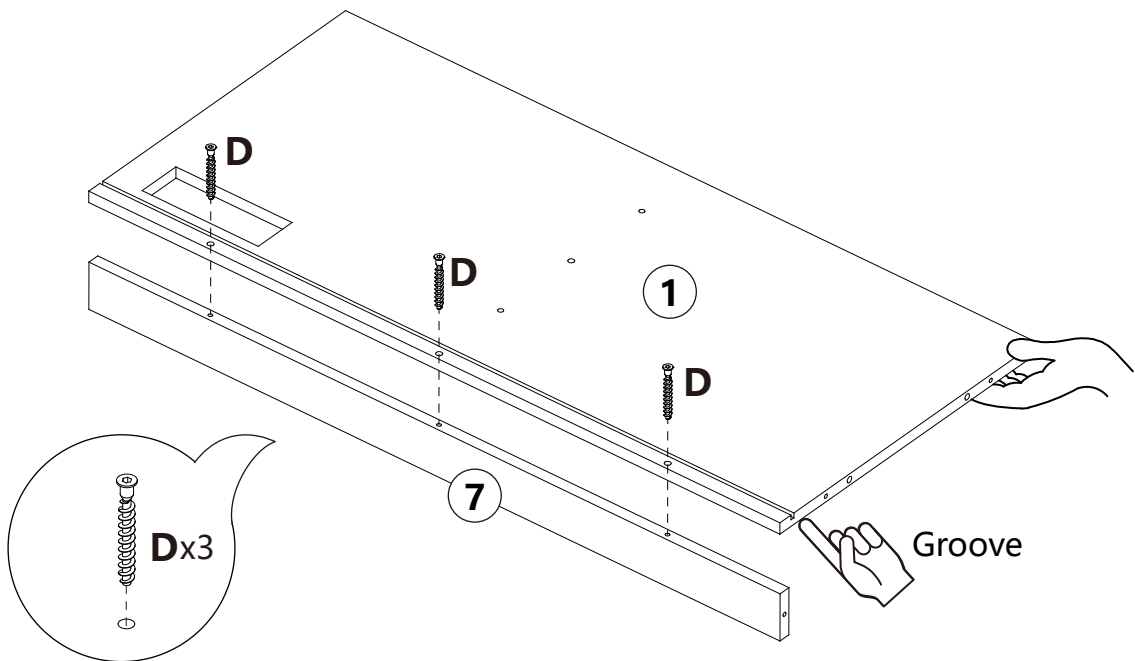

D	 x3
M	 x1



STEP 2

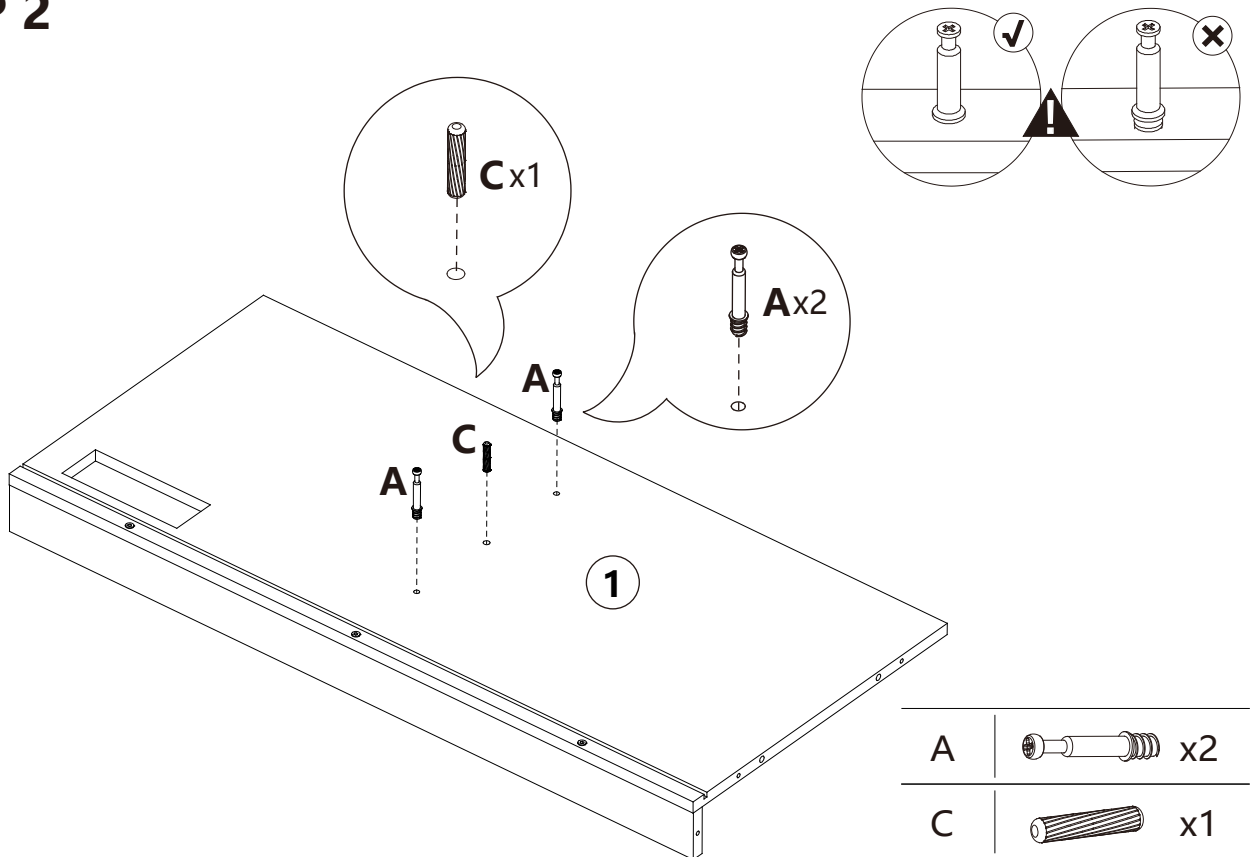


A		x2
C		x1
N		x1

Assembly Steps(EN)

STEP 3

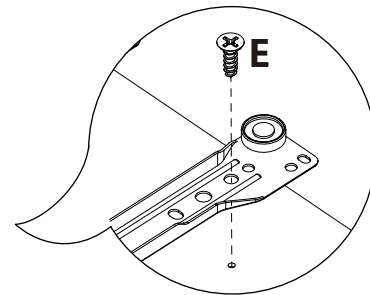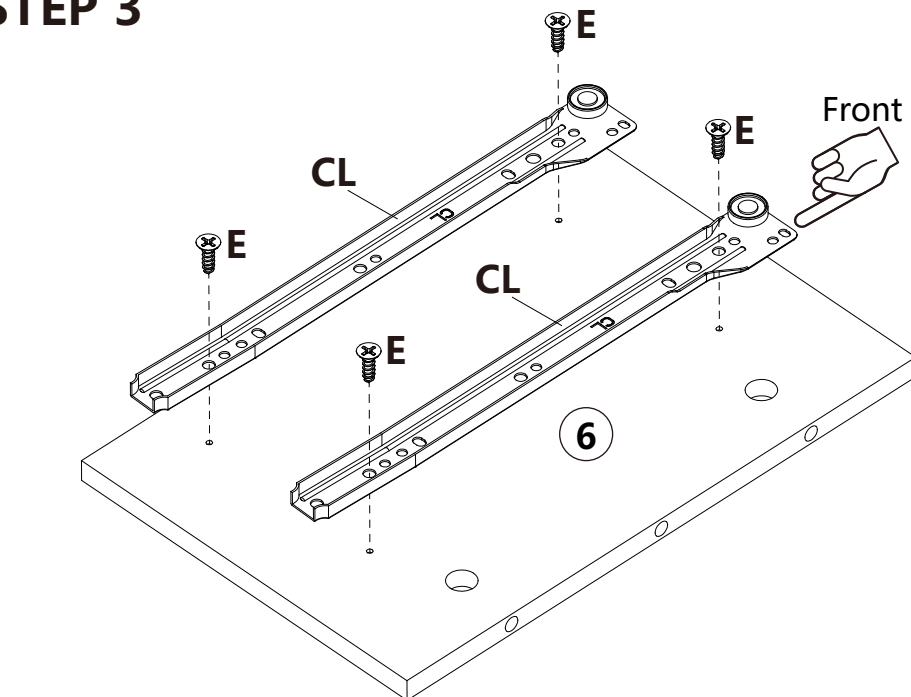



! When installing, please make sure that the screws are flat and not skewed.

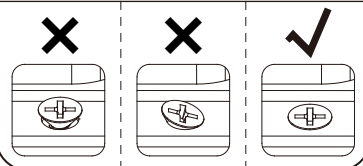

E  x4




CL  x2

N  x1

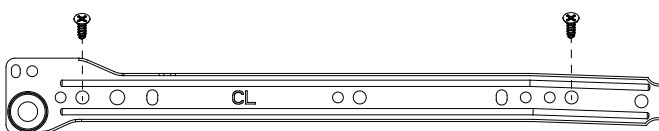


! Pay attention to the position of the screws.

STEP 4

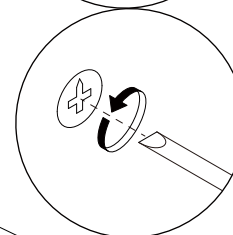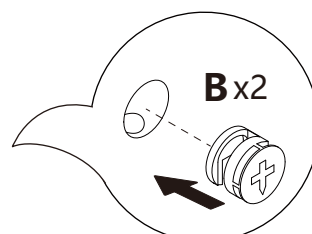
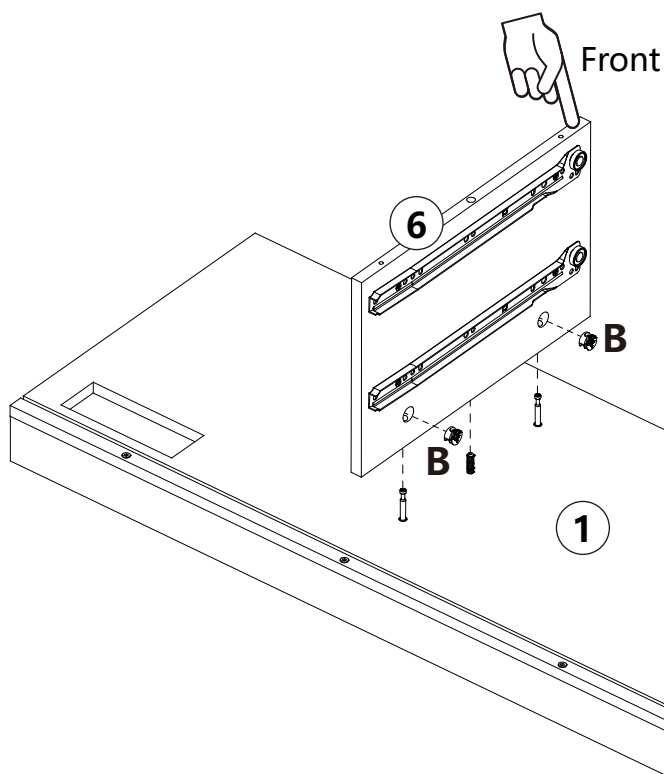


B  x2

N  x1



Assembly Steps(EN)


STEP 5

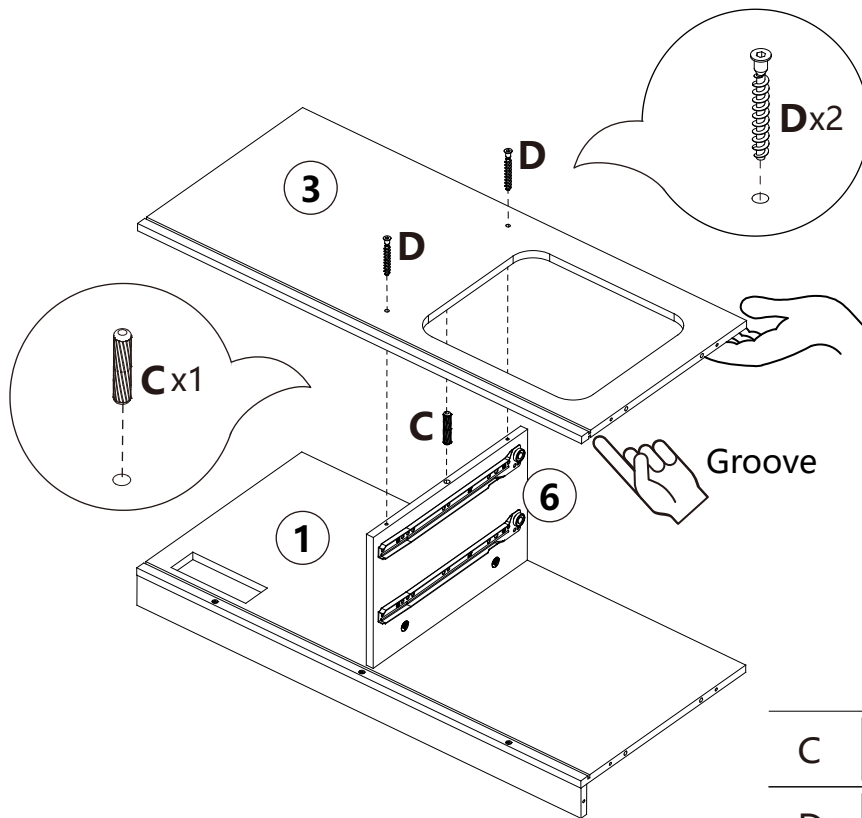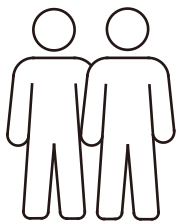

C		x1
D		x2
M		x1

STEP 6

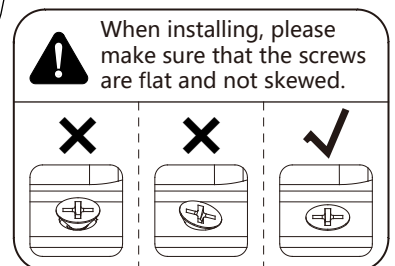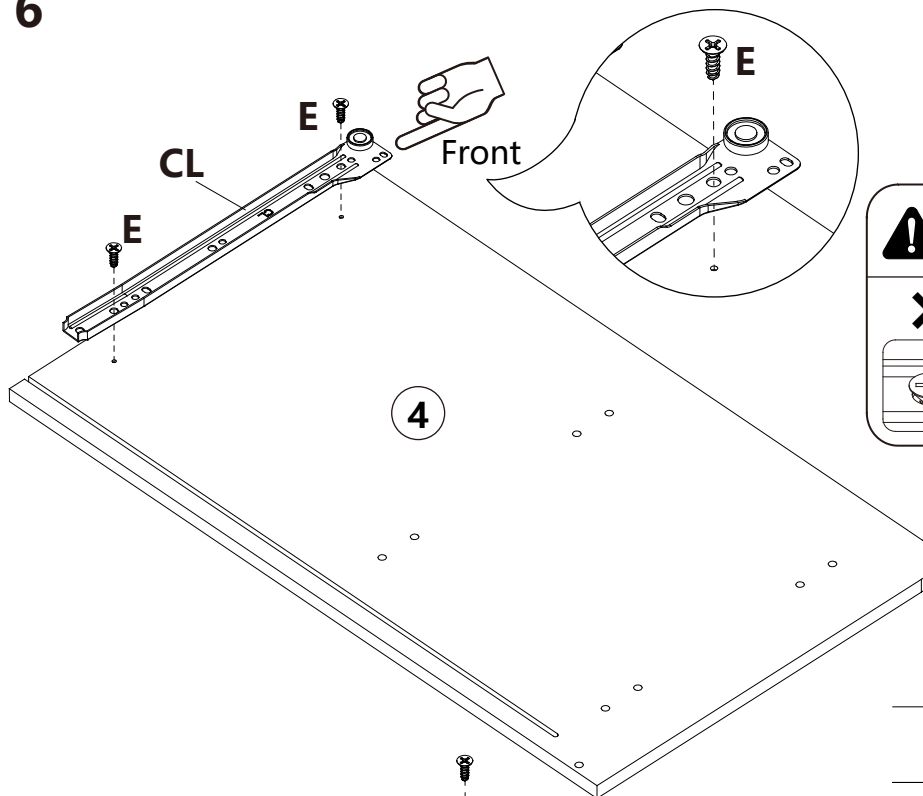


E		x2
CL		x1
N		x1


! Pay attention to the position of the screws.

Assembly Steps(EN)

STEP 7


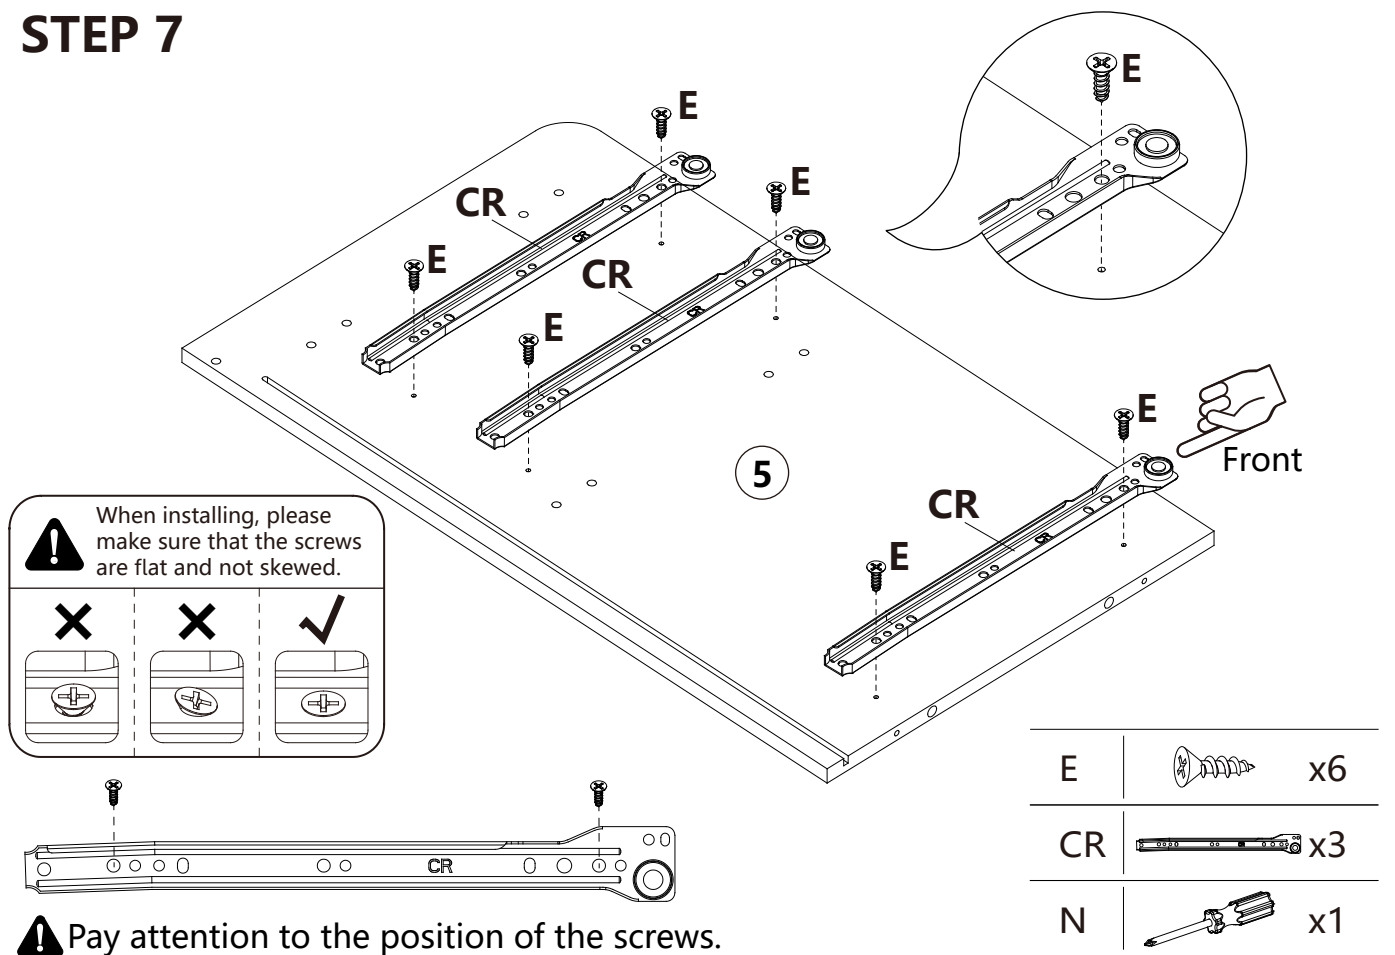


STEP 8

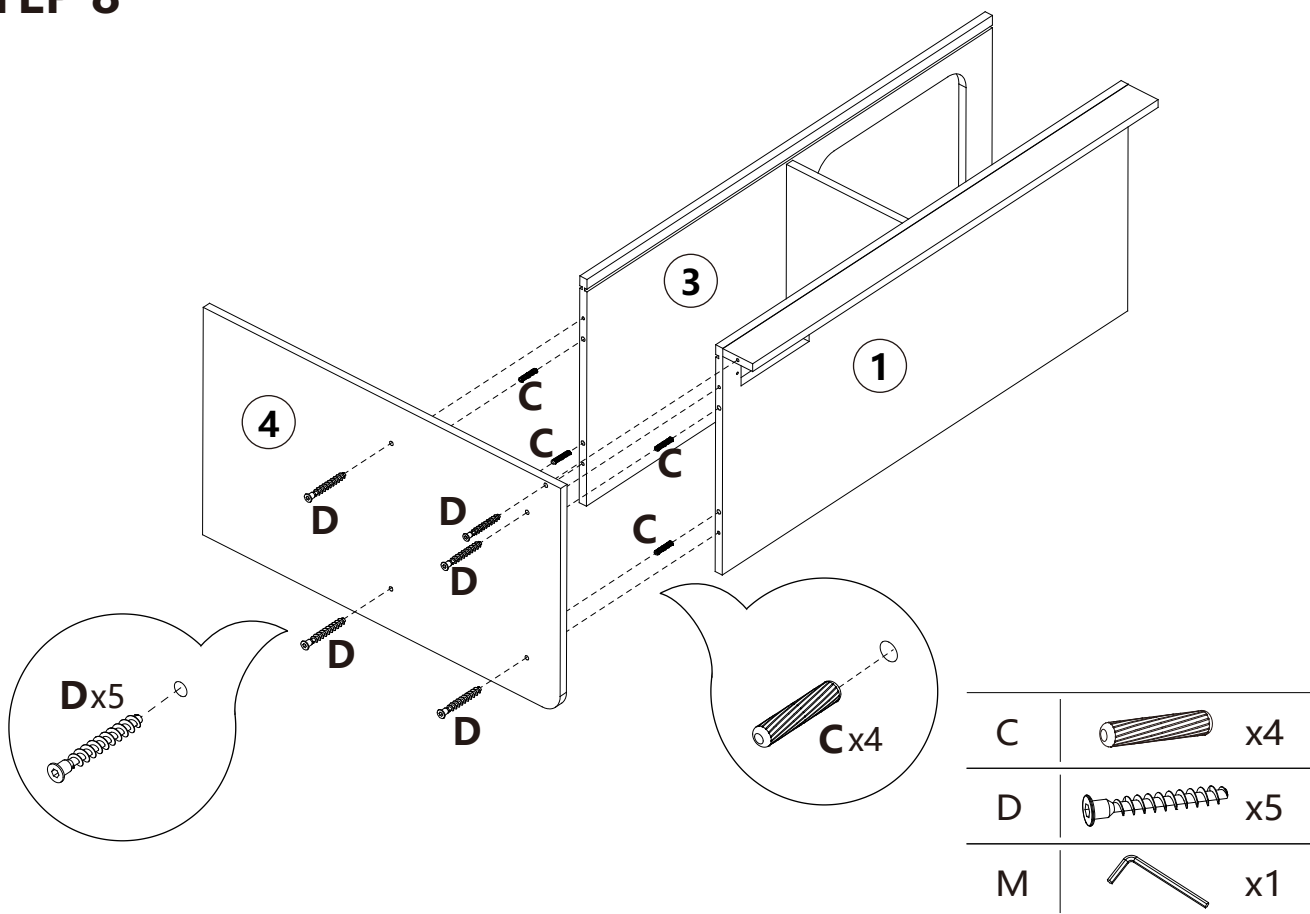


Assembly Steps(EN)

STEP 9

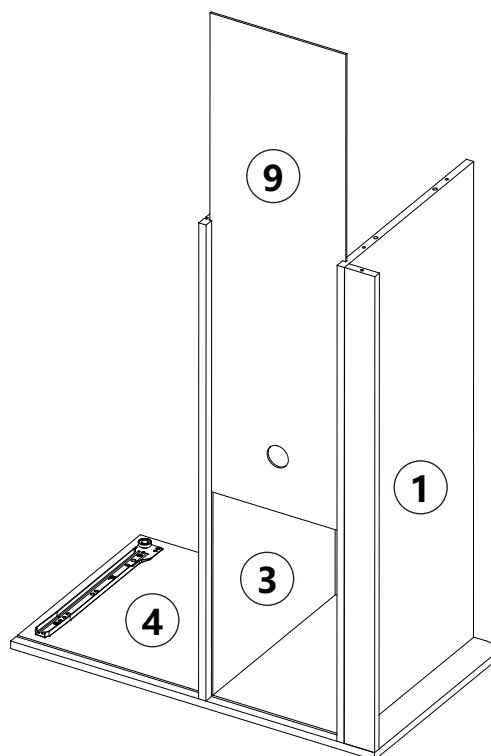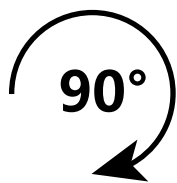



Place a piece of foam on the ground to prevent the panels from being scratched.

STEP 10

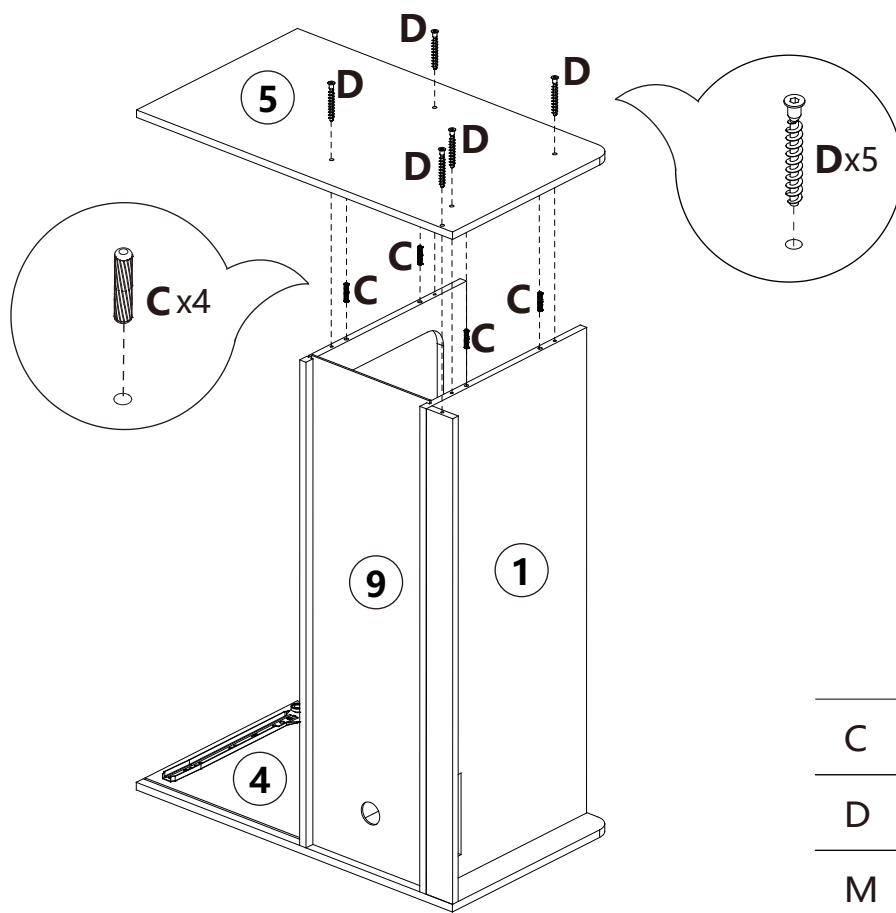


Assembly Steps(EN)

STEP 11

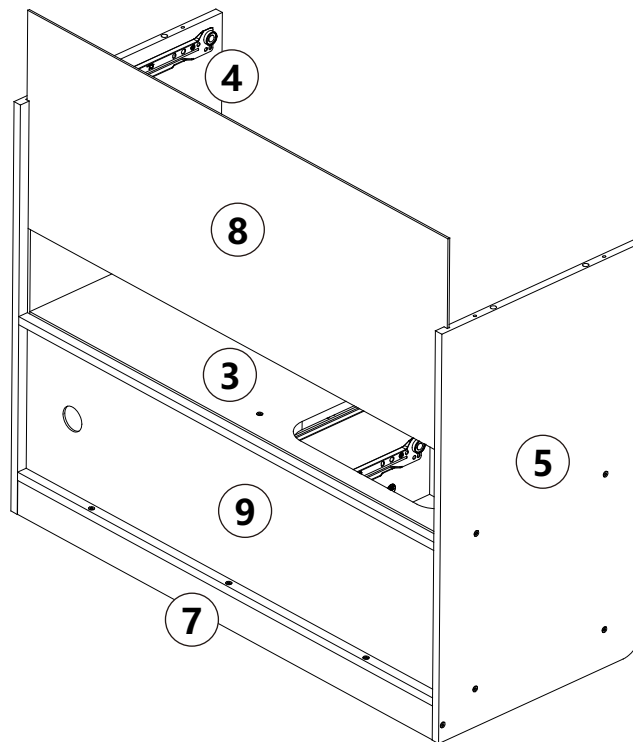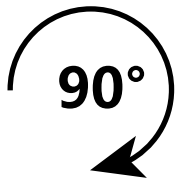

Place a piece of foam on the ground to prevent the panels from being scratched.

STEP 12


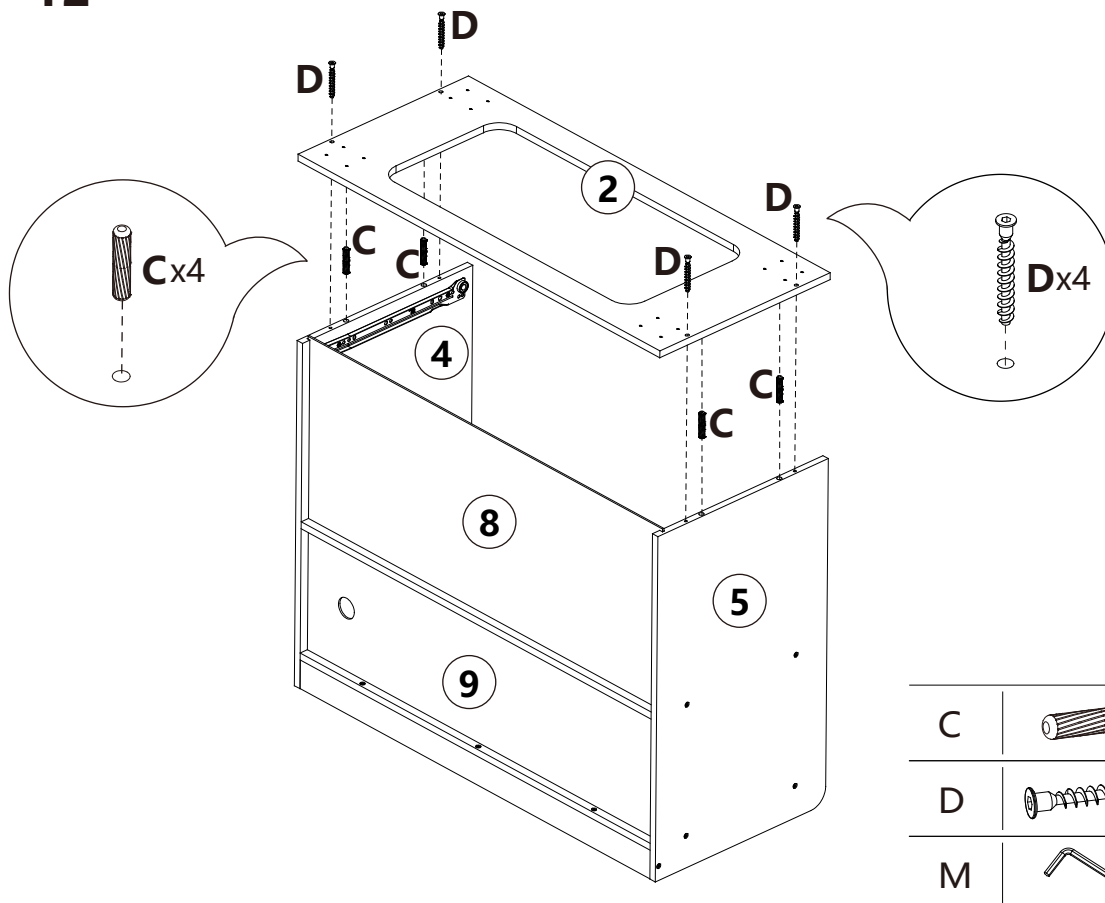



Assembly Steps(EN)

STEP 13



Please ensure that 2 lockable casters J are installed diagonally for better stability when fixing the product.

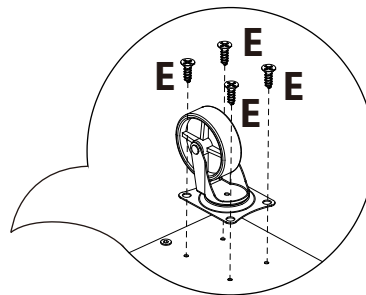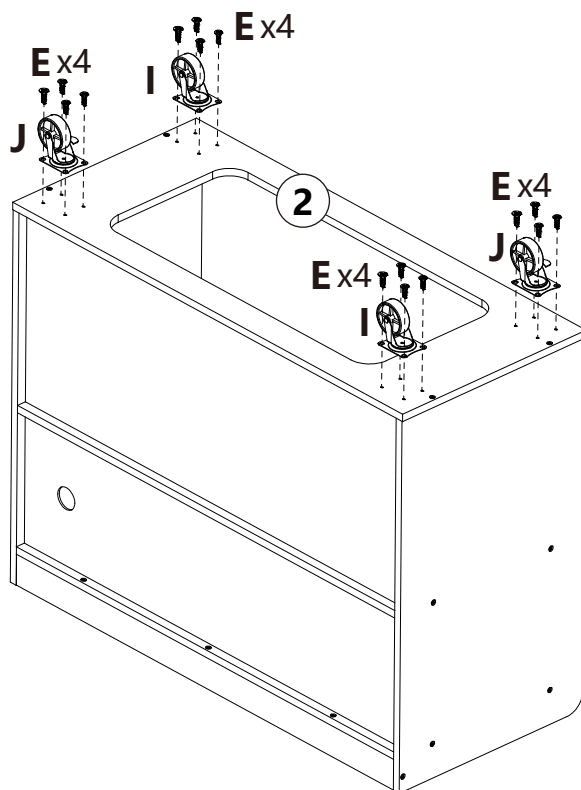



E		x16
I		x2
J		x2
N		x1

After installation, turn the cabinet over by 180 degrees.

STEP 14





To ensure the structural stability during use, be sure to install the back insert buckles as shown.

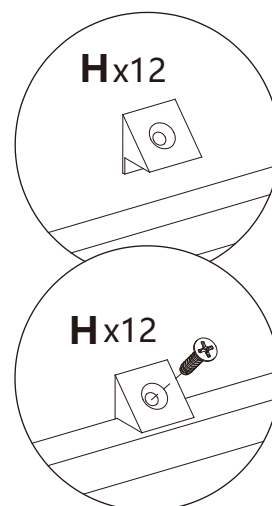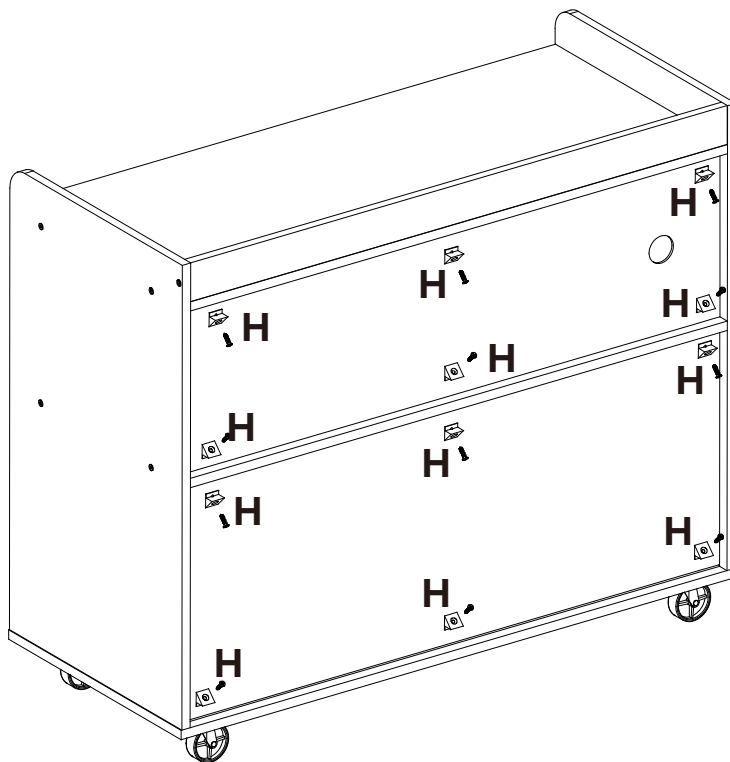



H		 x12
N		x1

Assembly Steps(EN)


STEP 15

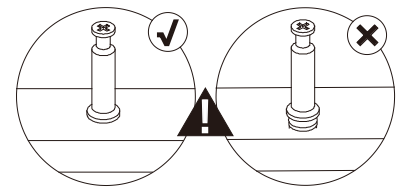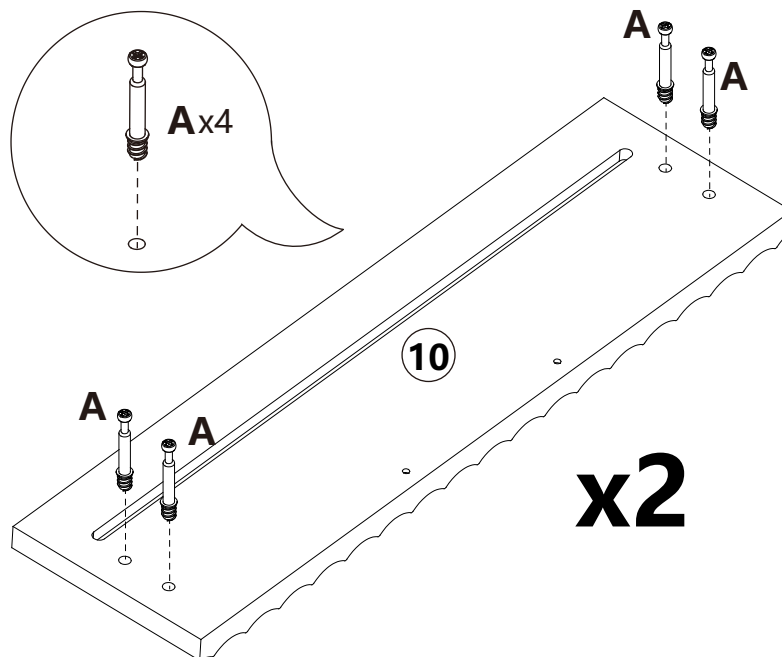


Place a piece of foam on the ground to prevent the panels from being scratched.

A		x8
N		x1


STEP 16

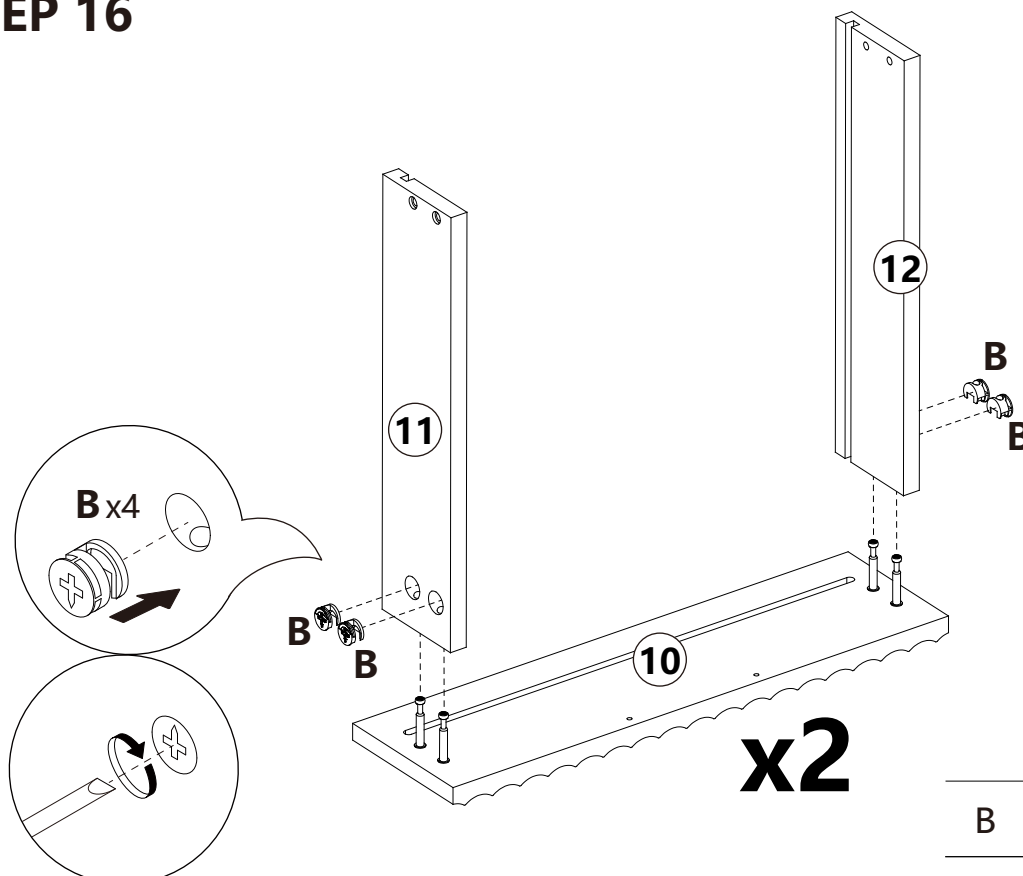


B		x8
N		x1


Assembly Steps(EN)

STEP 17

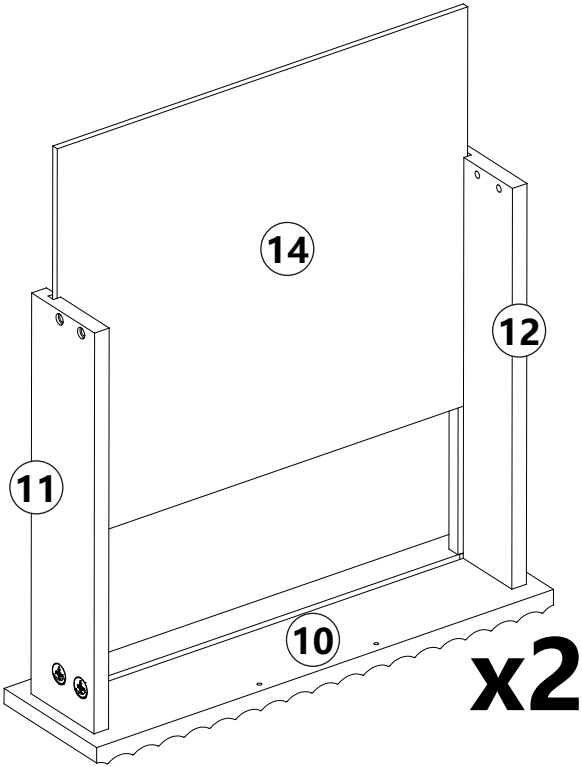

STEP 18

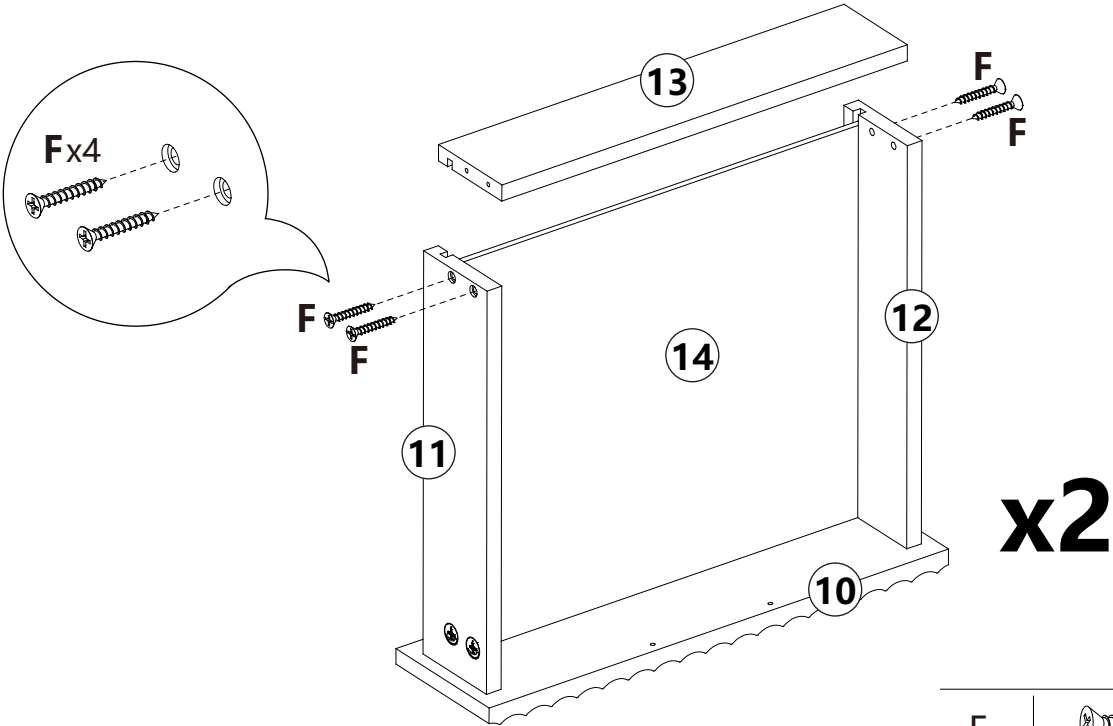

F		x8
N		x1


Assembly Steps(EN)

STEP 19




When installing, please make sure that the screws are flat and not skewed.




✗




✗




✓

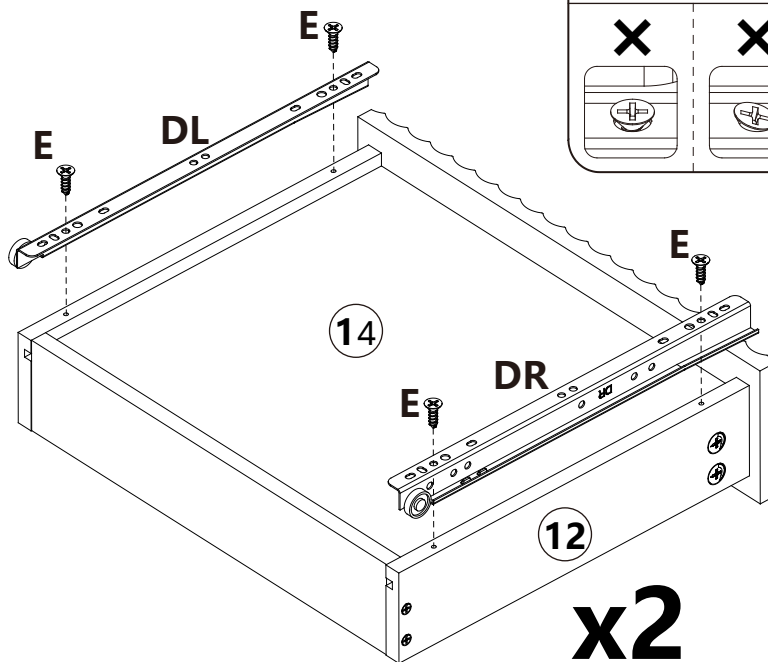


⚠ Pay attention to the position of the screws.

E		x8
DL		x2
DR		x2
N		x1


STEP 20

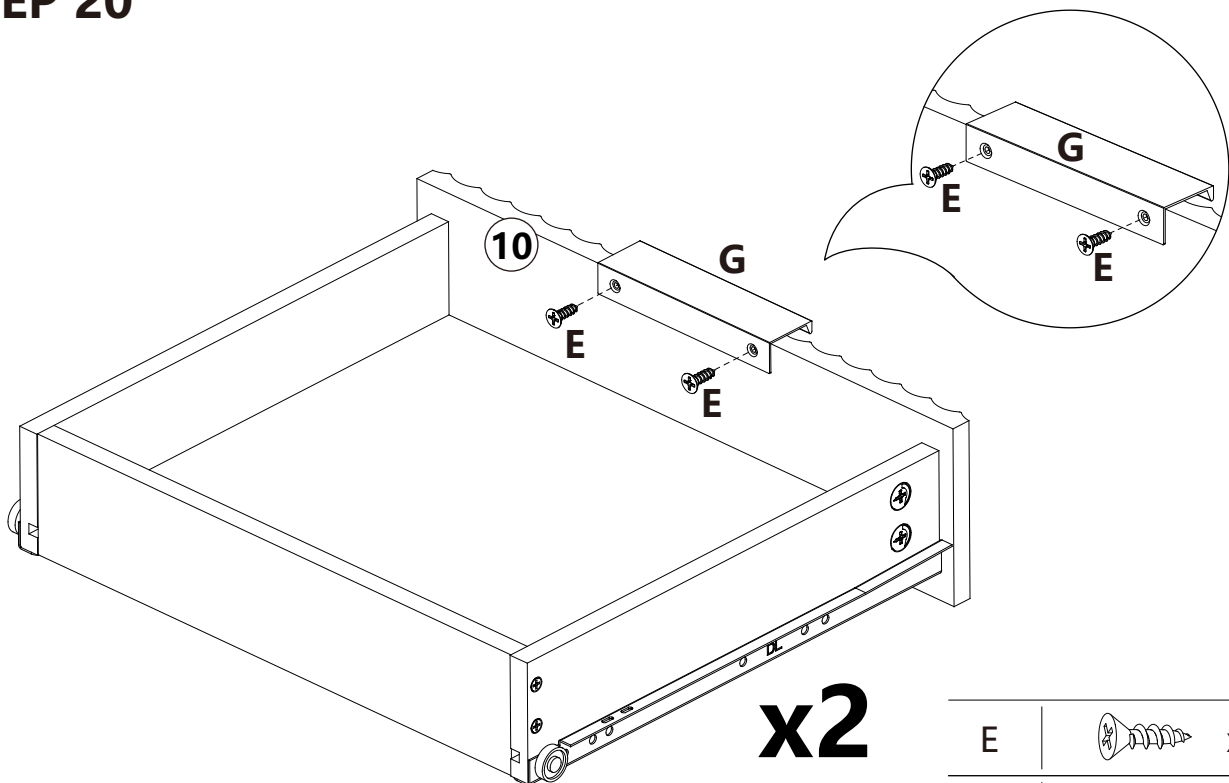



E		x4
G		x2
N		x1

Assembly Steps(EN)


STEP 21

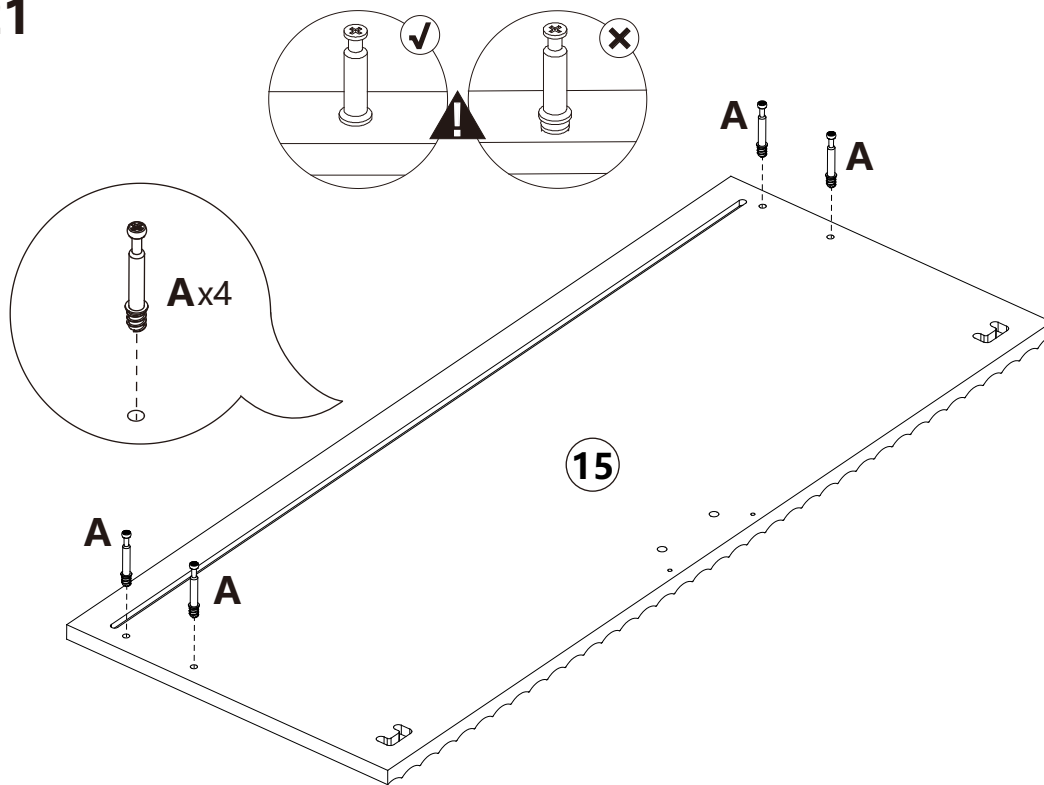


Place a piece of foam on the ground to prevent the panels from being scratched.

A		x4
N		x1


STEP 22

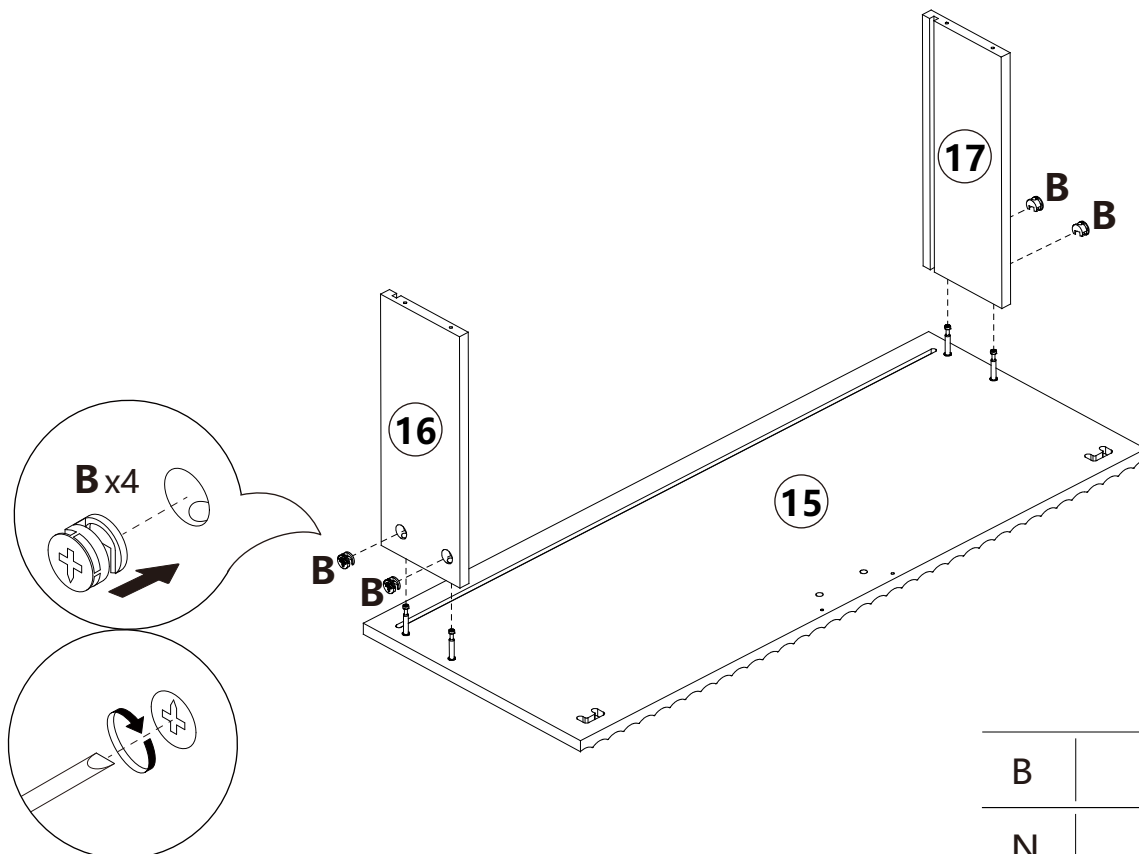




B		x4
N		x1

Assembly Steps(EN)

STEP 23

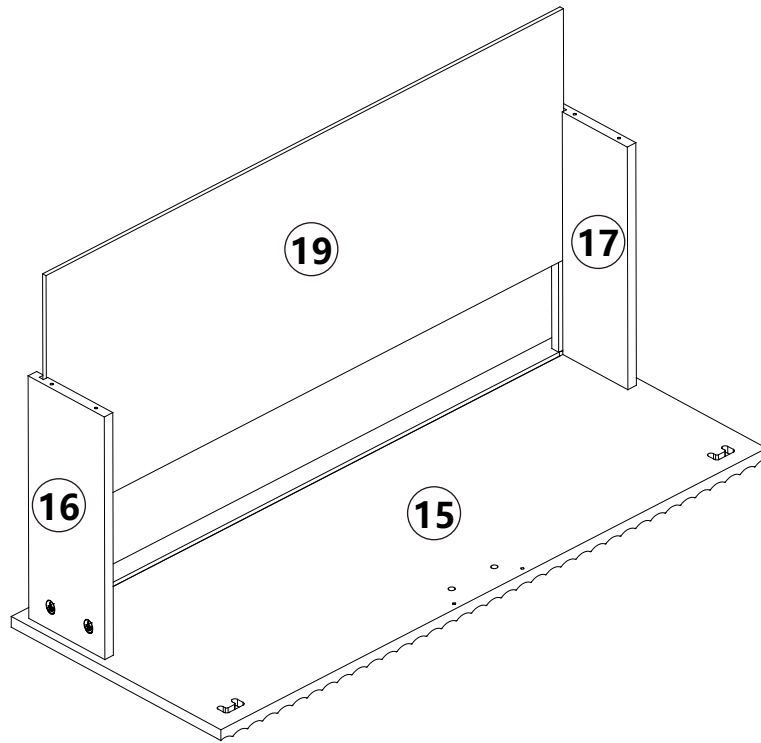


STEP 24

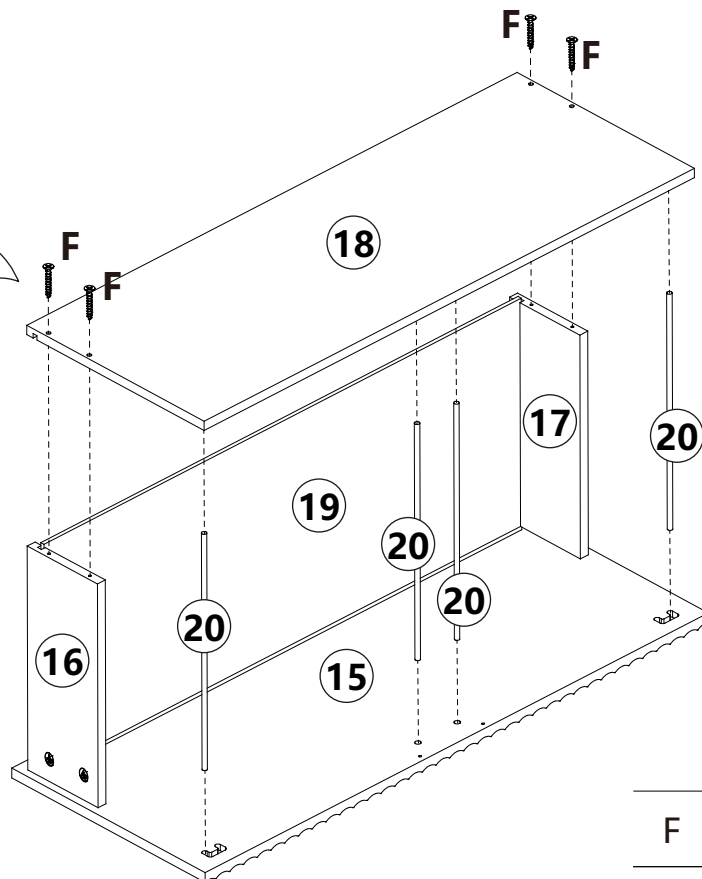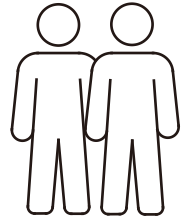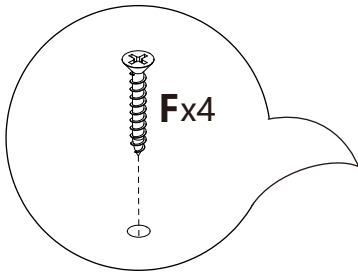


F		x4
N		x1

Assembly Steps(EN)


STEP 25

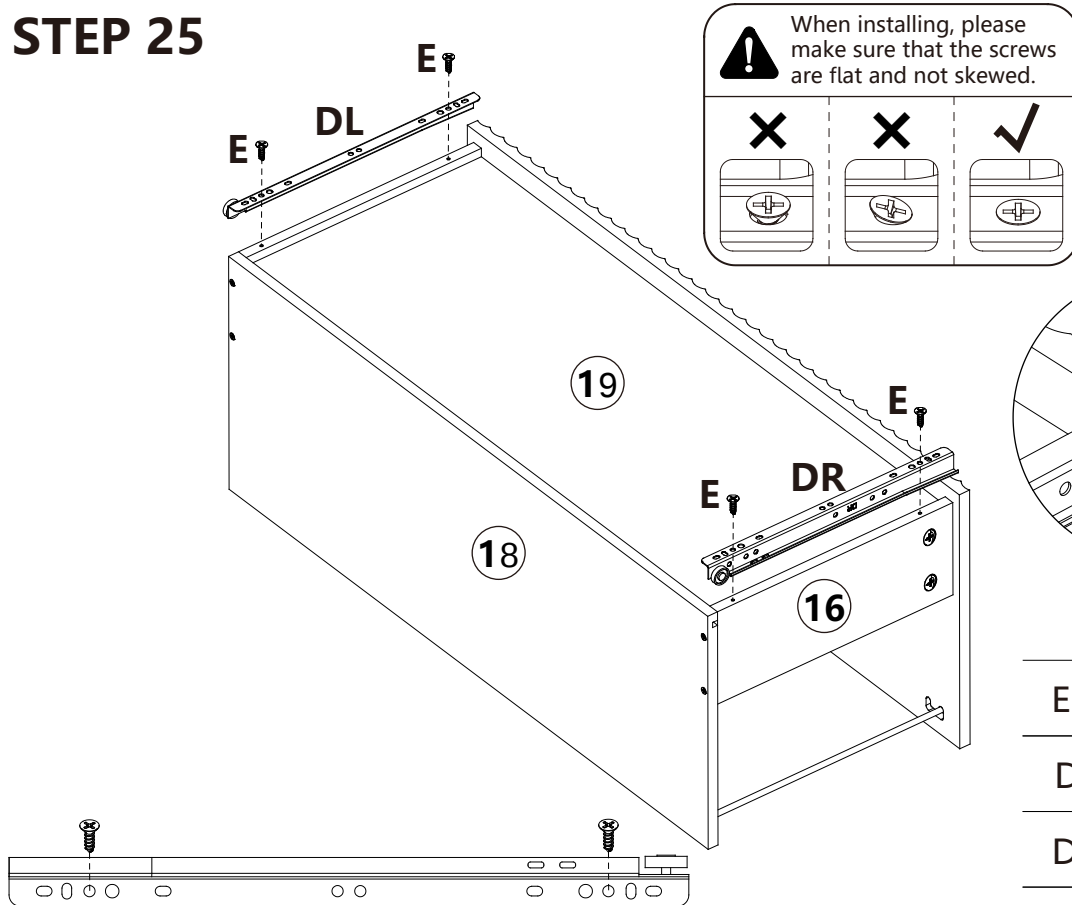


⚠ Pay attention to the position of the screws.

E		x4
DL		x1
DR		x1
N		x1



STEP 26

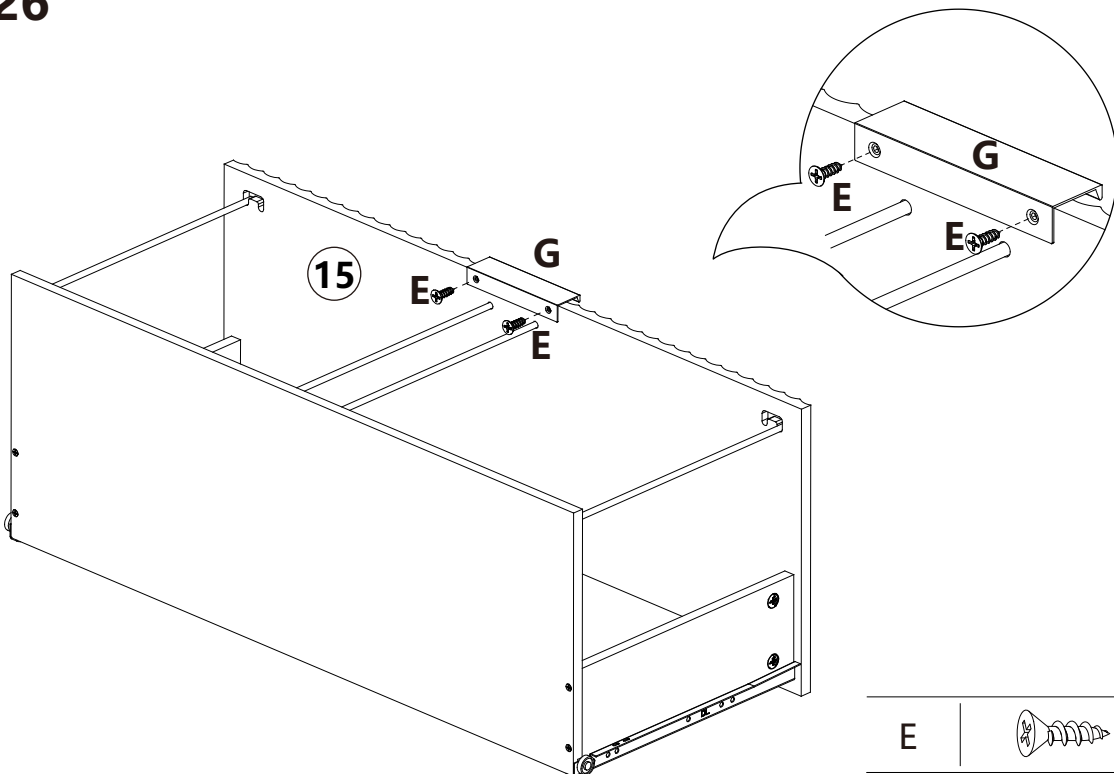


E		x2
G		x1
N		x1


Assembly Steps(EN)

STEP 27

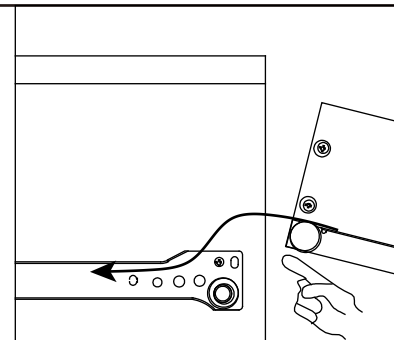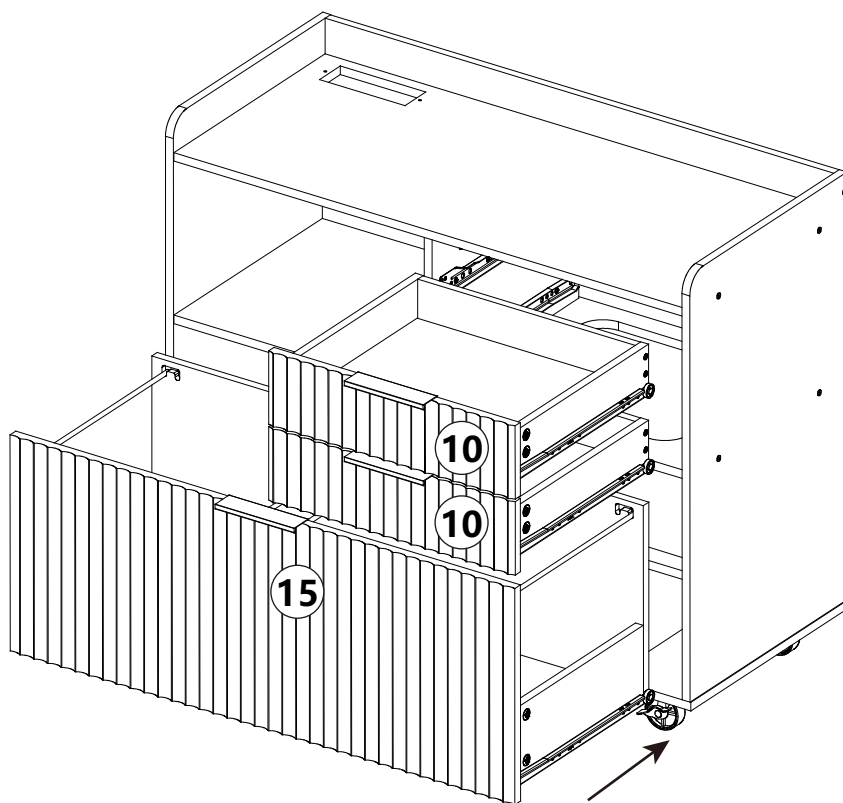



STEP 28

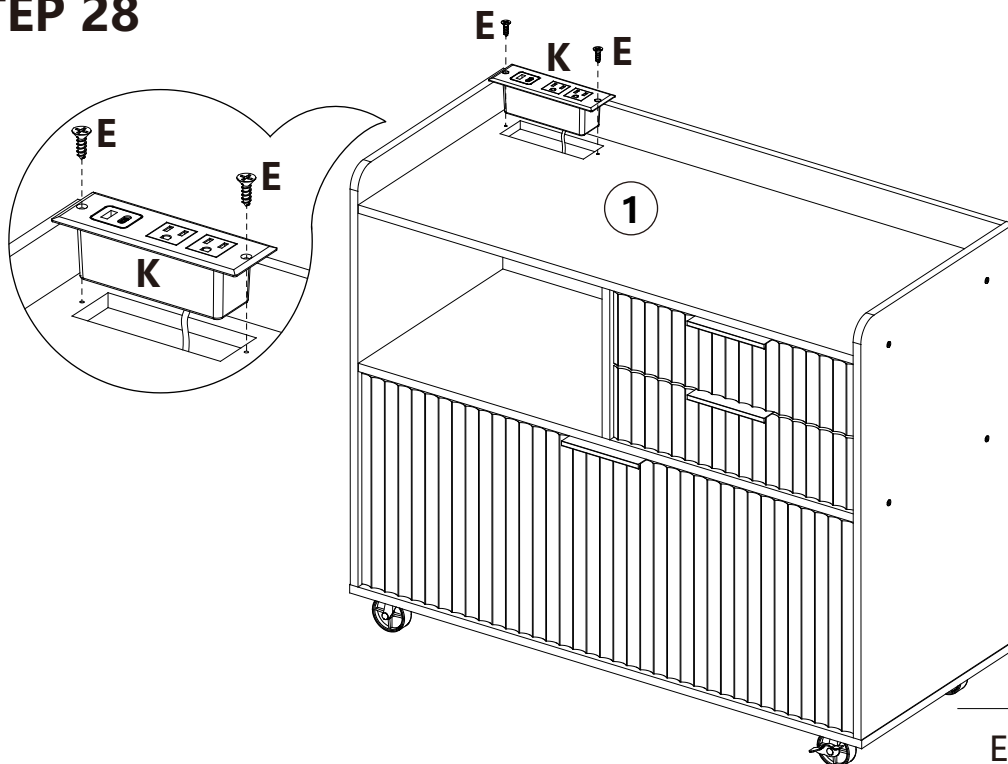


E		x2
K		x1
N		x1

Assembly Steps(EN)

STEP 29

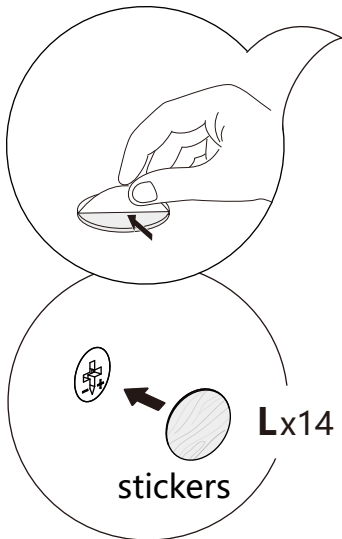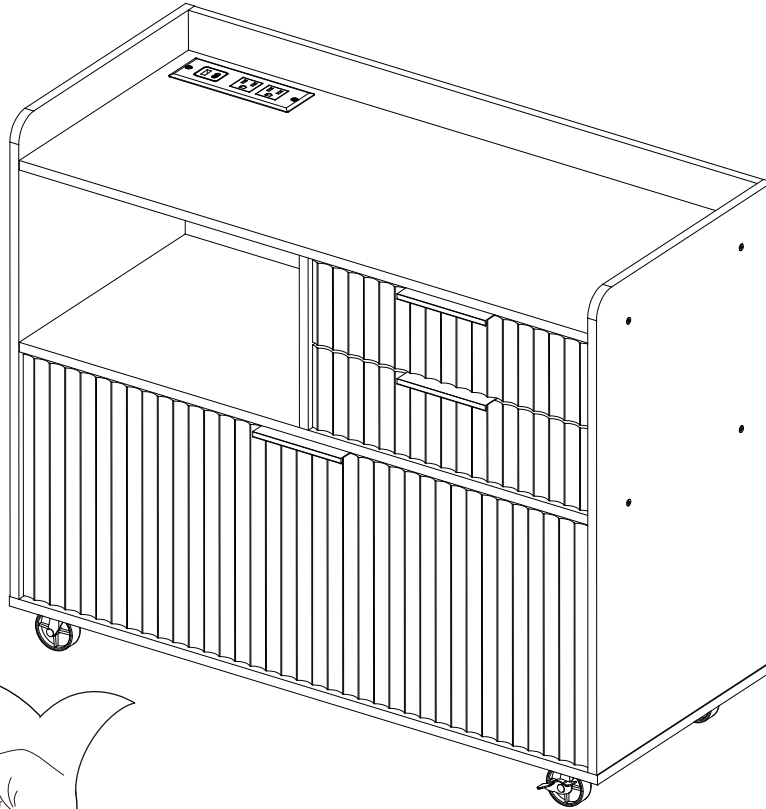

Apply screw stickers over exposed screw holes for aesthetics.



Finish!