

A×4



B×16



C×4



D×4



E×1



F×10





G×8



H×1




I×1

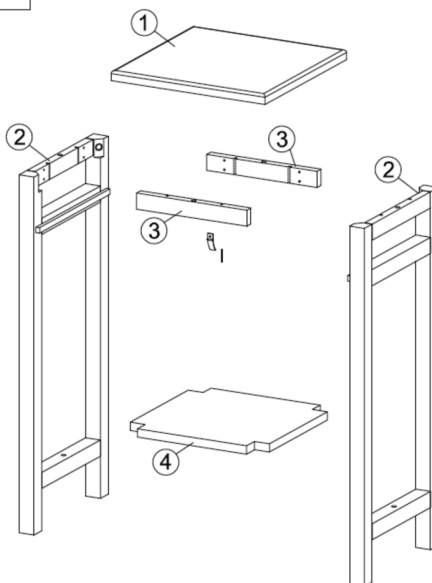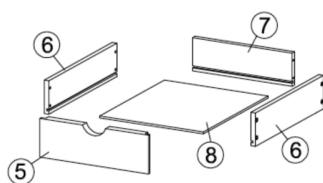


1

Install the drawer stopper part I with wood screw H—this will keep the drawer from falling out unless you wish to remove it. It should point down and curve away from the front of the drawer

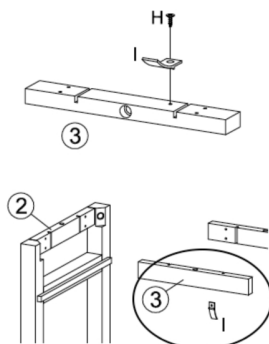




2

Loosely attach parts 2 and 3 to table top 1 with F bolts

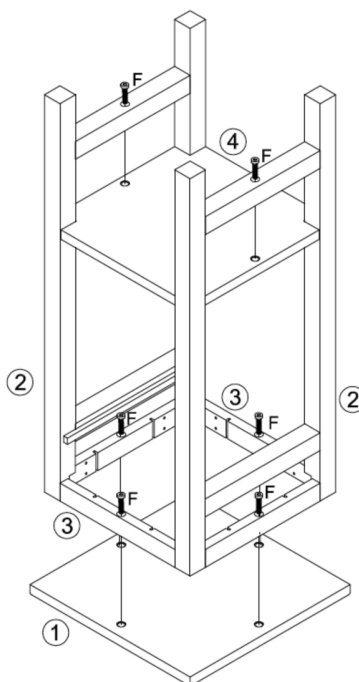


# 3

Insert all 4 A brackets into the grooves on parts 2 and 3 — note you may have to adjust the angle of the brackets slightly if they are not wide enough

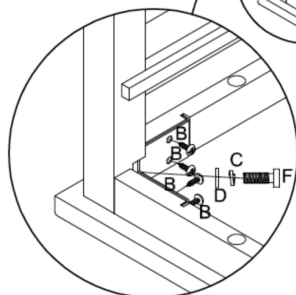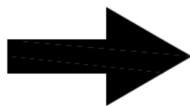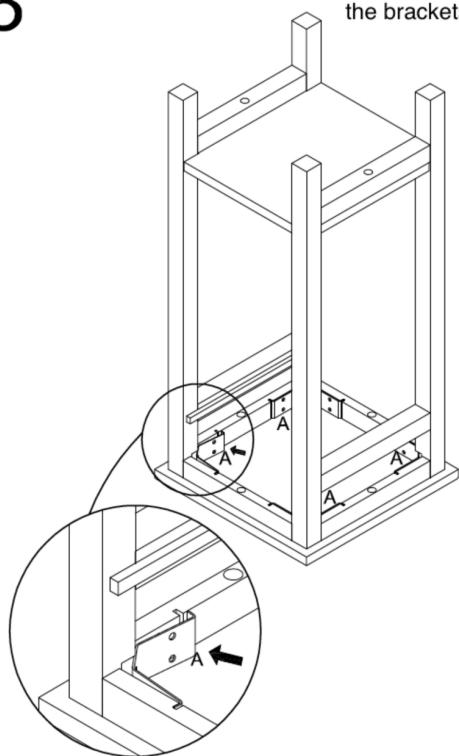

After brackets are in place, insert F bolts w washers C & D in each corner and tighten, then attach the B screws

# 4

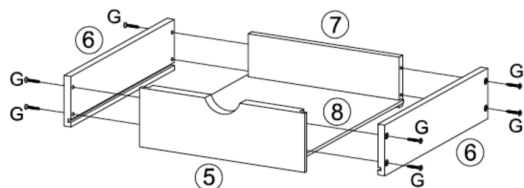

# 5

