


# ASSEMBLY INSTRUCTION

## Storage Bench

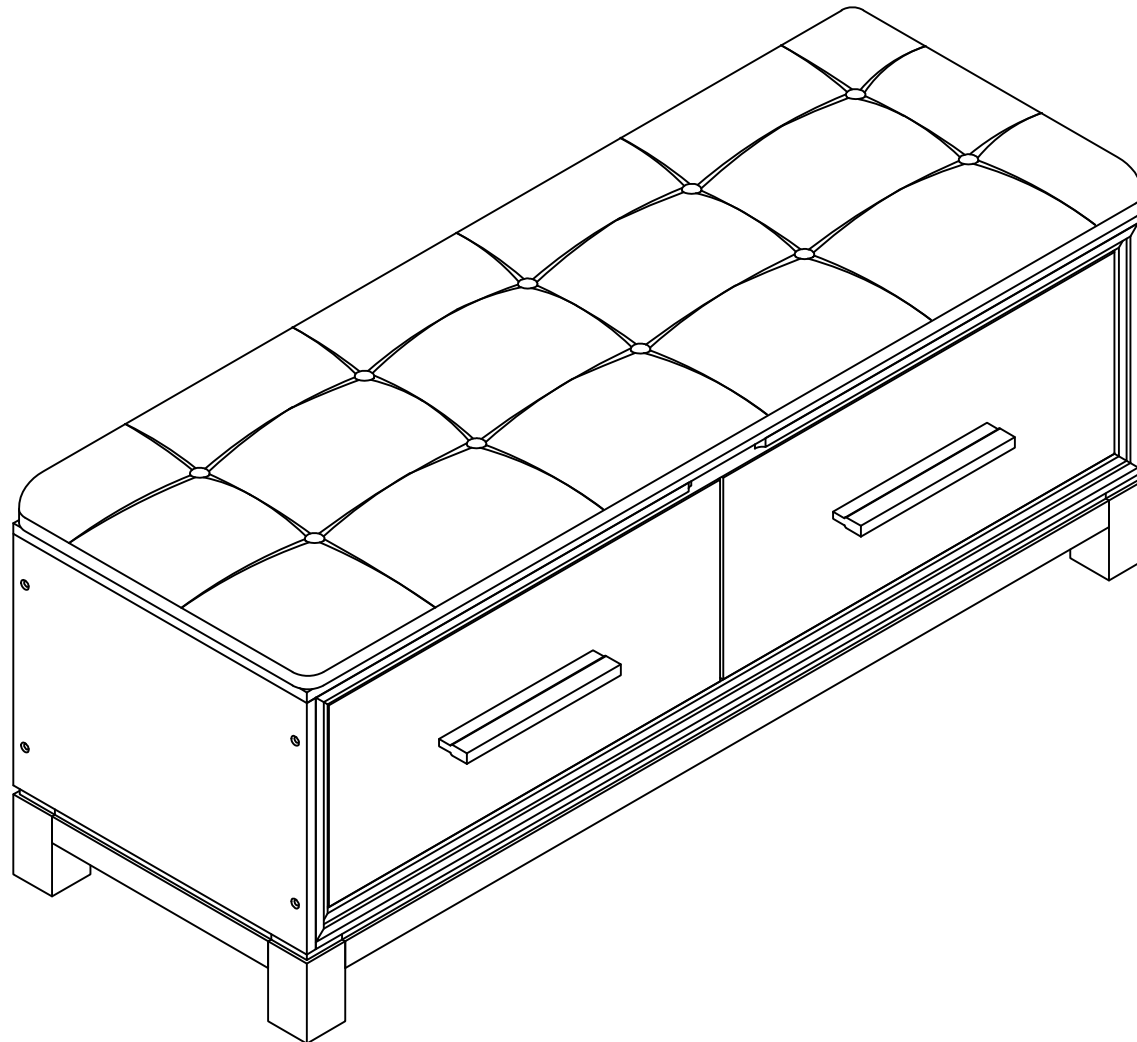

# ASSEMBLY INSTRUCTION

## \*Important - Please read these instructions fully before starting assembly

+ Check you have all the components and tools listed on the following pages

+ Remove all fittings from the plastic bags and separate them into their groups.

+Keep children and animals away from the work area, small parts could choke if swallowed.


+ Make sure you have enough space to layout the parts before starting.

+During assembly do not stand or put weight on the product, this could cause damage

+Assemble the item as close to its final position (in the same room) as possible.

+Assemble on a soft level surface to avoid damaging the unit or your floor.

+Parts of the assembly will be easier with 2 people.

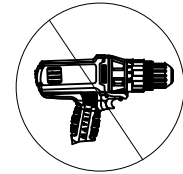

+To reduce the likelihood of damaging your product please ensure that your power drill is set on a low torque setting.

## \*Care and maintenance

+Only clean using a damp cloth and mild detergent, do not use bleach or abrasive cleaners.

+From time to time check that there are no loose screws on this unit.


+This product should not be discarded with household waste. Take to your local authority waste disposal centre

## \*Handy Hints

+Assemble all parts and bolts loosely during assembly, only once the product is complete should you fully tighten the bolts


+Regularly check and ensure That all bolts and fittings are tightend properly.

# ASSEMBLY INSTRUCTION

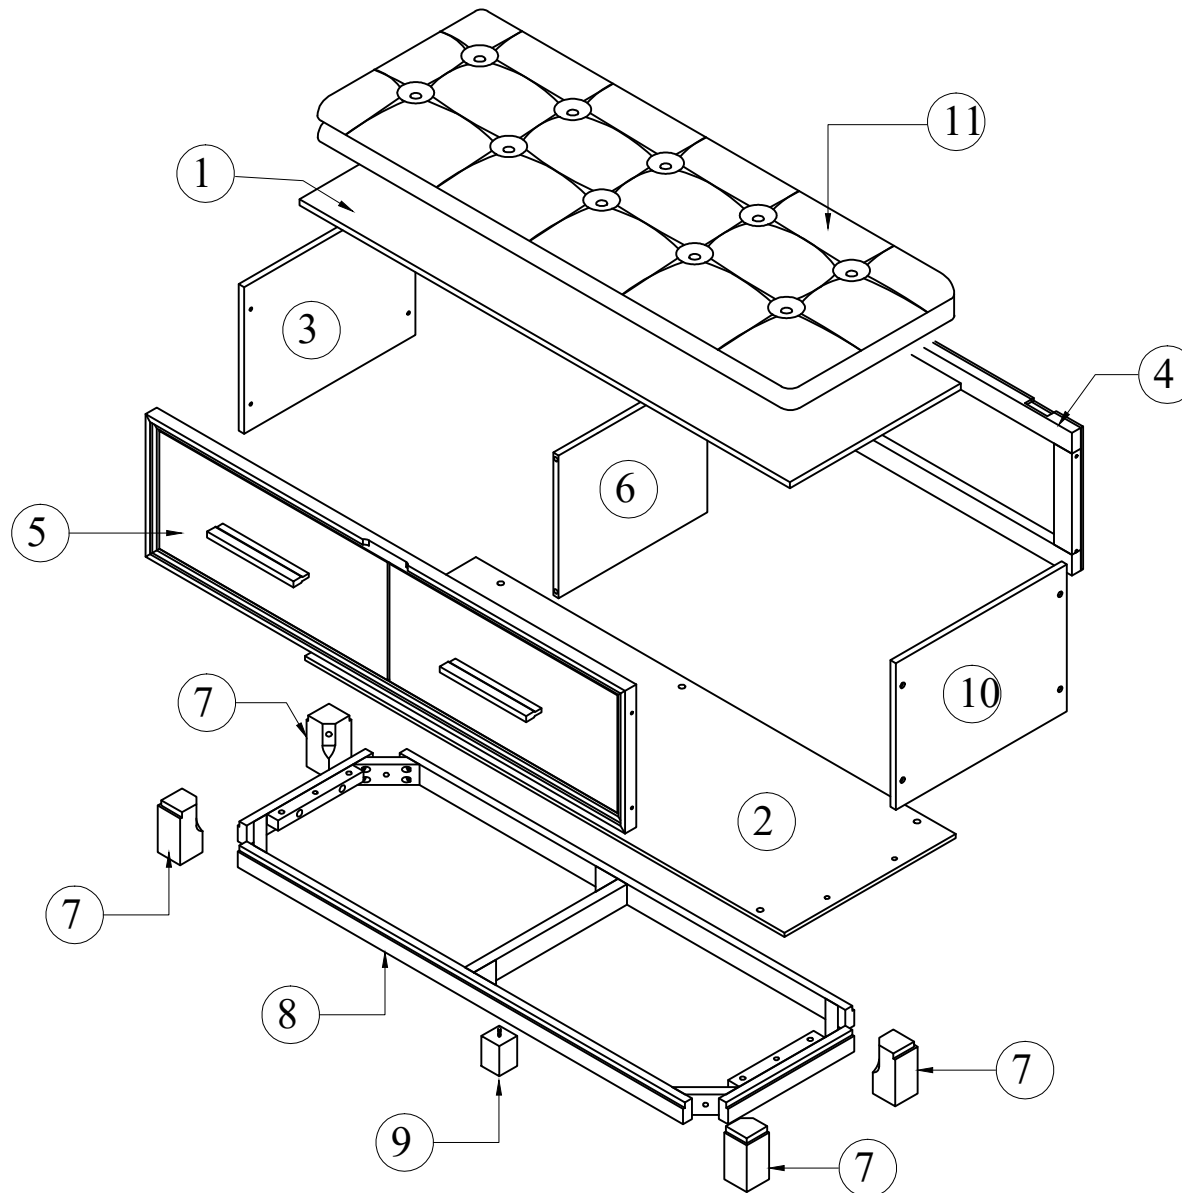


# CARTON CONTENT N715P233804

① x 1

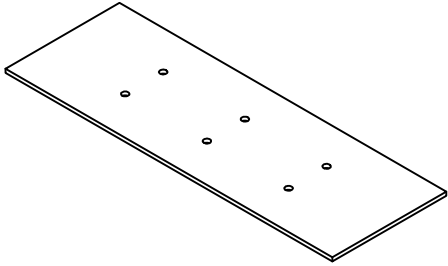


Top panel

④ x 1

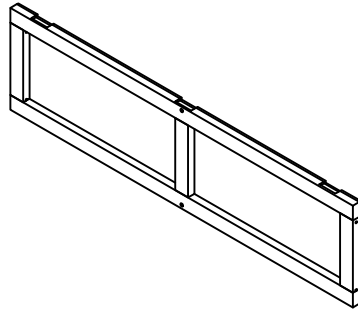


Back panel

⑦ x 4




Legs

⑩ x 1

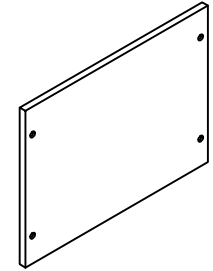


Right panel

② x 1

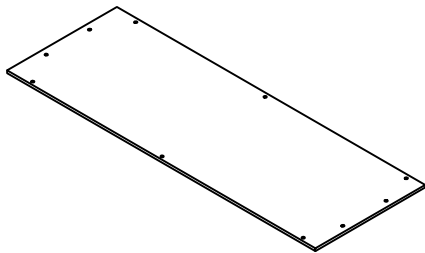


Bottom panel

⑤ x 1

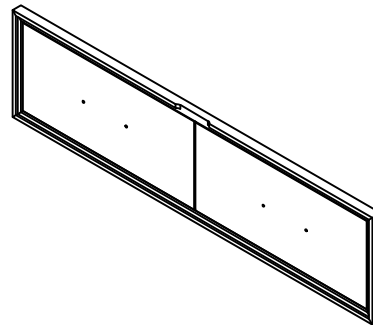


Front panel

⑧ x 1

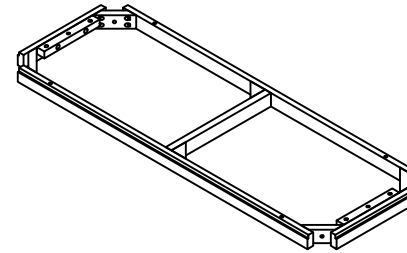


Wooden base frame

⑪ x 1

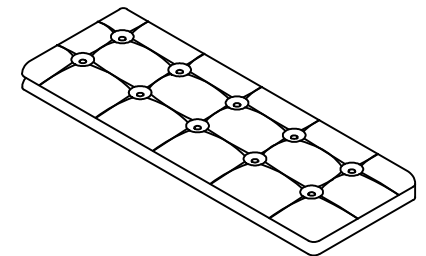


Seat cushion

③ x 1

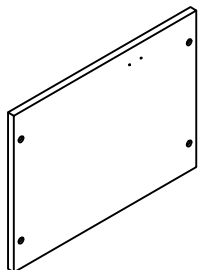


Left panel

⑥ x 1

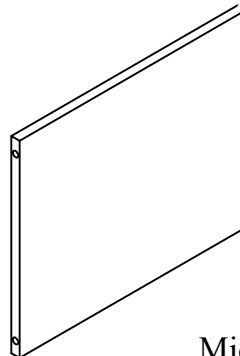

Middle panel

⑨ x 1






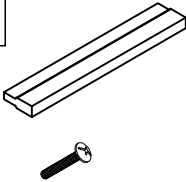
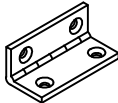
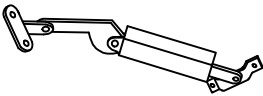

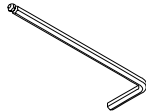


Support legs


HARDWARE

# ASSEMBLY INSTRUCTION

## HARDWARE LIST

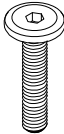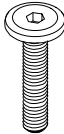
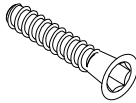
|                                                                                                                       |                                                                                                                                         |                                                                                                                        |                                                                                                                            |
|-----------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------|
| <b>A</b> <br>1/4x40mm<br>Bolt (4pcs) | <b>B</b> <br>1/4x25mm<br>Bolt (4pcs)                   | <b>C</b> <br>7x40mm<br>Bolt (14pcs) | <b>D</b> <br>M3.5*12mm<br>Screw (24pcs) |
| <b>E</b> <br>Dowel Ø8*20 (6pcs)      | <b>F</b> <br>Handle (2pcs)<br>5/32x15mm<br>Bolt (4pcs) | <b>G</b> <br>Leaf hinge (3pcs)      | <b>H</b> <br>Shock absorber ( 2pcs )    |
| <b>I</b> <br>Metal pat (2pcs)        | <b>L</b> <br>Allen Key (1pc)                           |                                                                                                                        |                                                                                                                            |

## Tool required

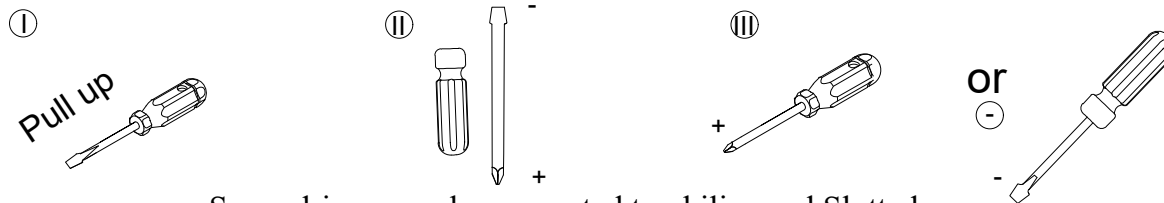

Screwdrivers can be converted to philips and Slotted


Ruler - Use this ruler to help correctly identify the screws





The screw length is measured from the head to th point (35mm screw shown)

# ASSEMBLY INSTRUCTION

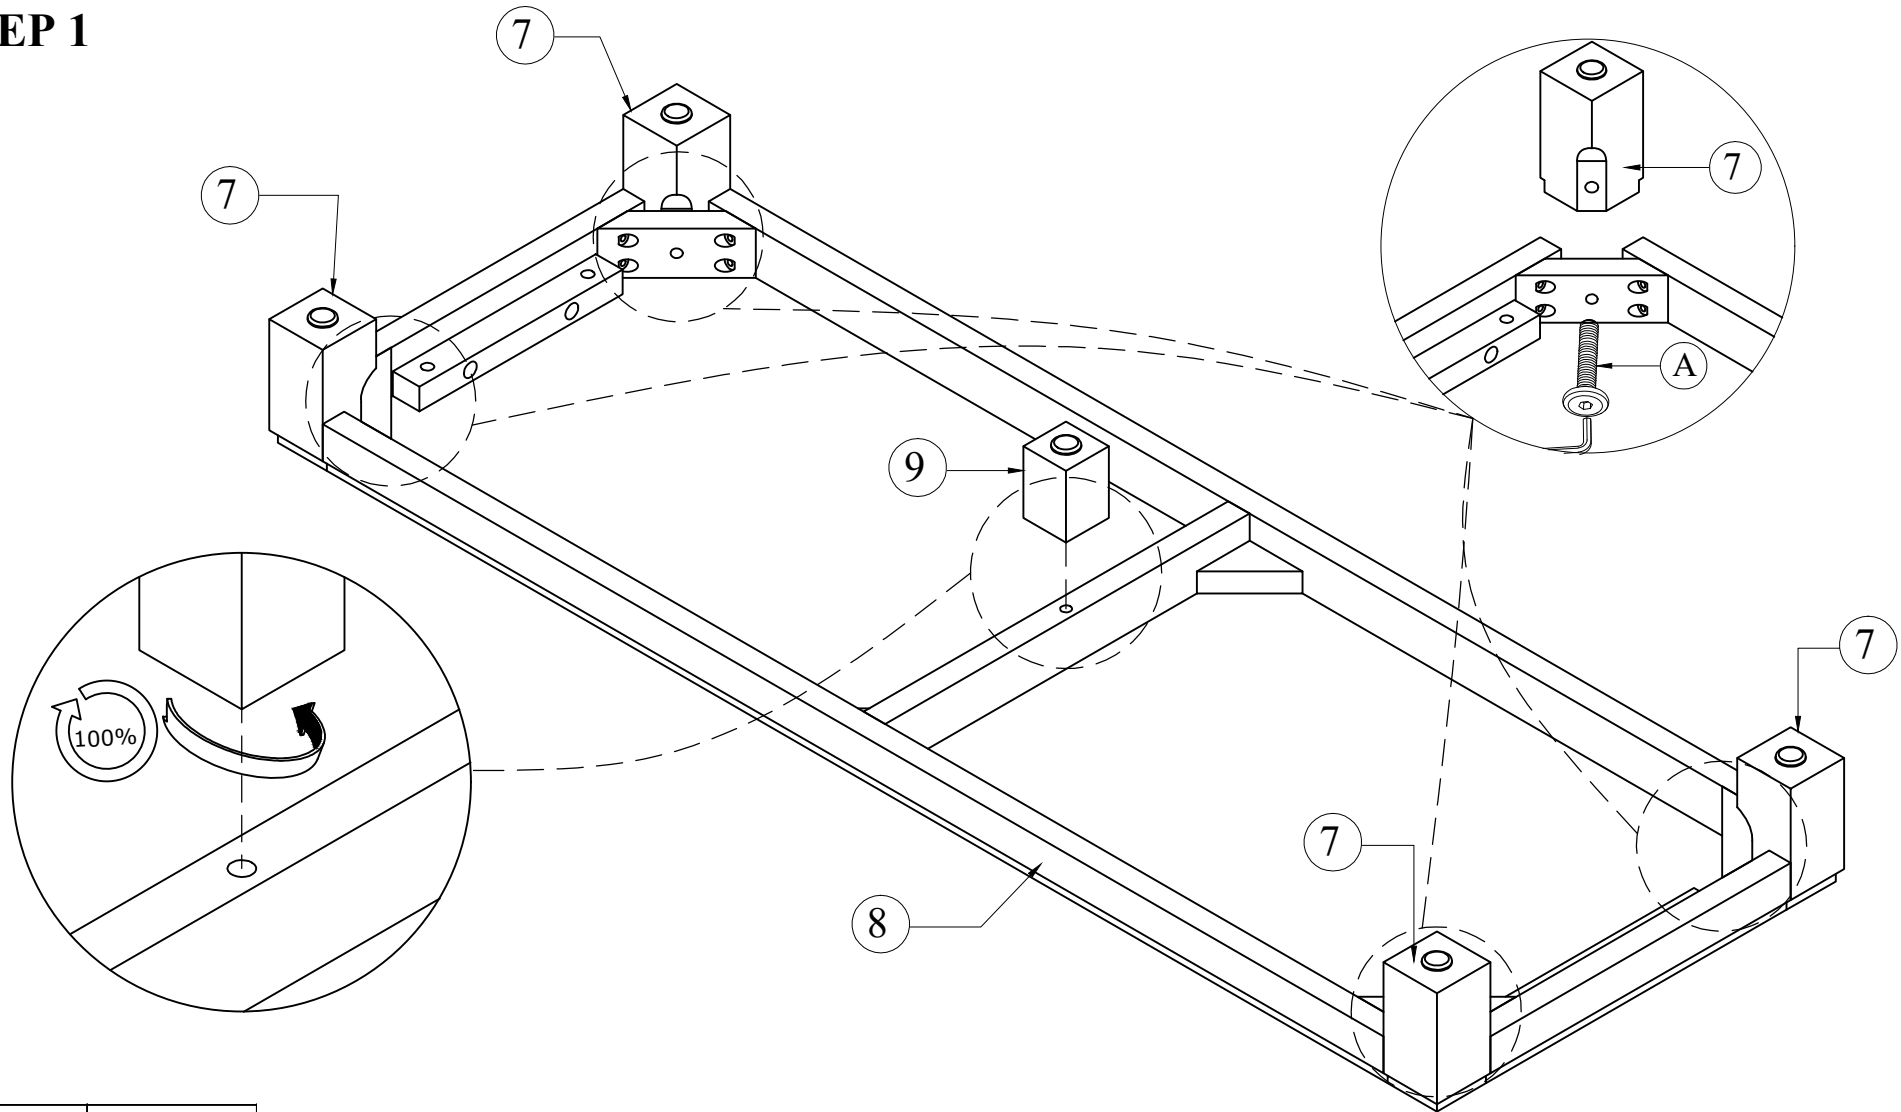
## STEP 1



|                                                                                     |                                                                                     |
|-------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------|
|  |  |
| 1/4x40mm                                                                            | Allen Key                                                                           |
| A x 4                                                                               | L x 1                                                                               |

# ASSEMBLY INSTRUCTION

## STEP 2

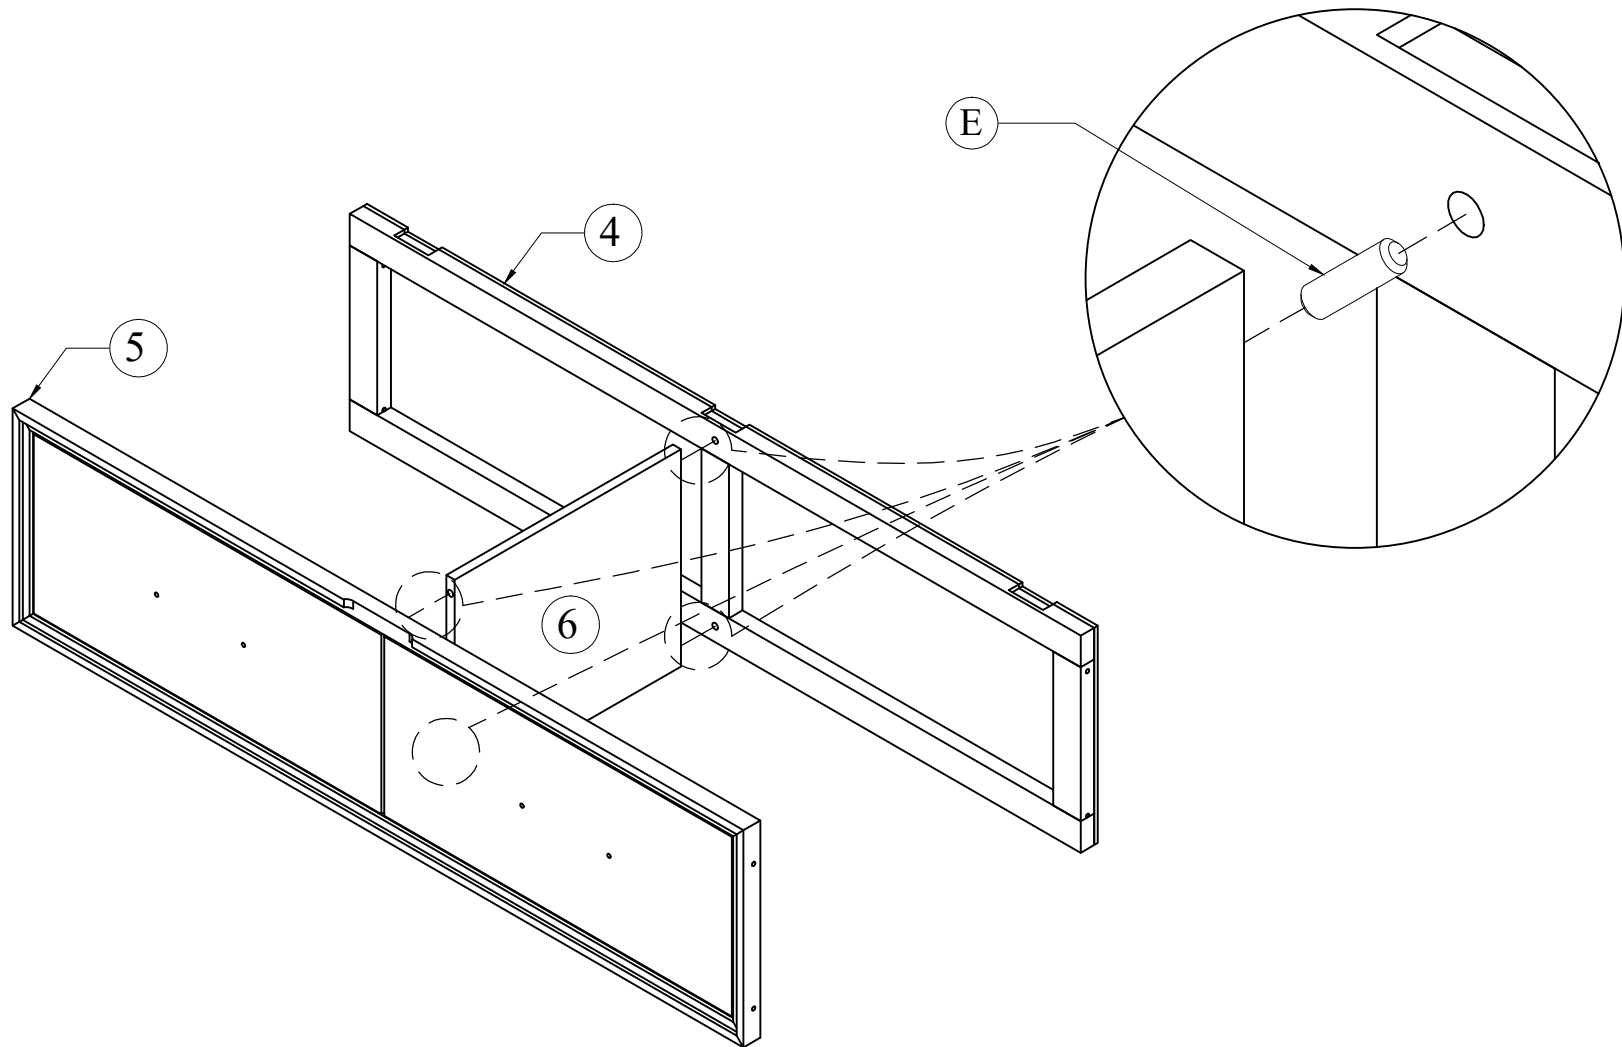


Dowel Ø8\*20

E x 4

# ASSEMBLY INSTRUCTION

## STEP 3

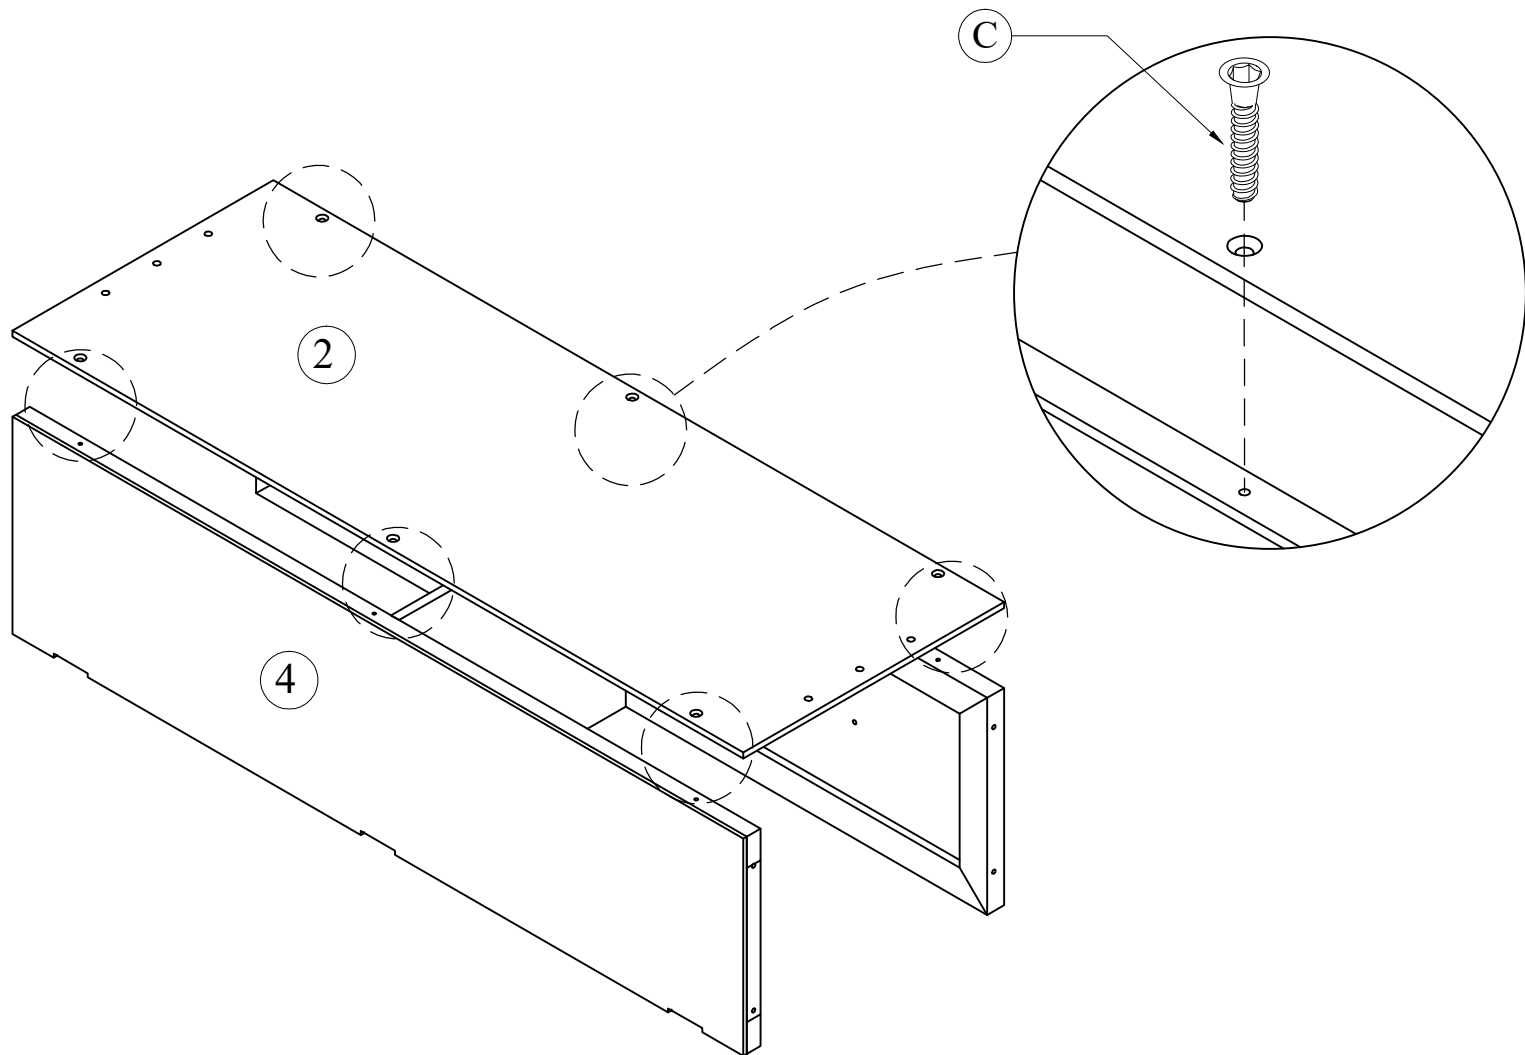


Bolt 7\*40mm





C x 6



# ASSEMBLY INSTRUCTION


## STEP 4

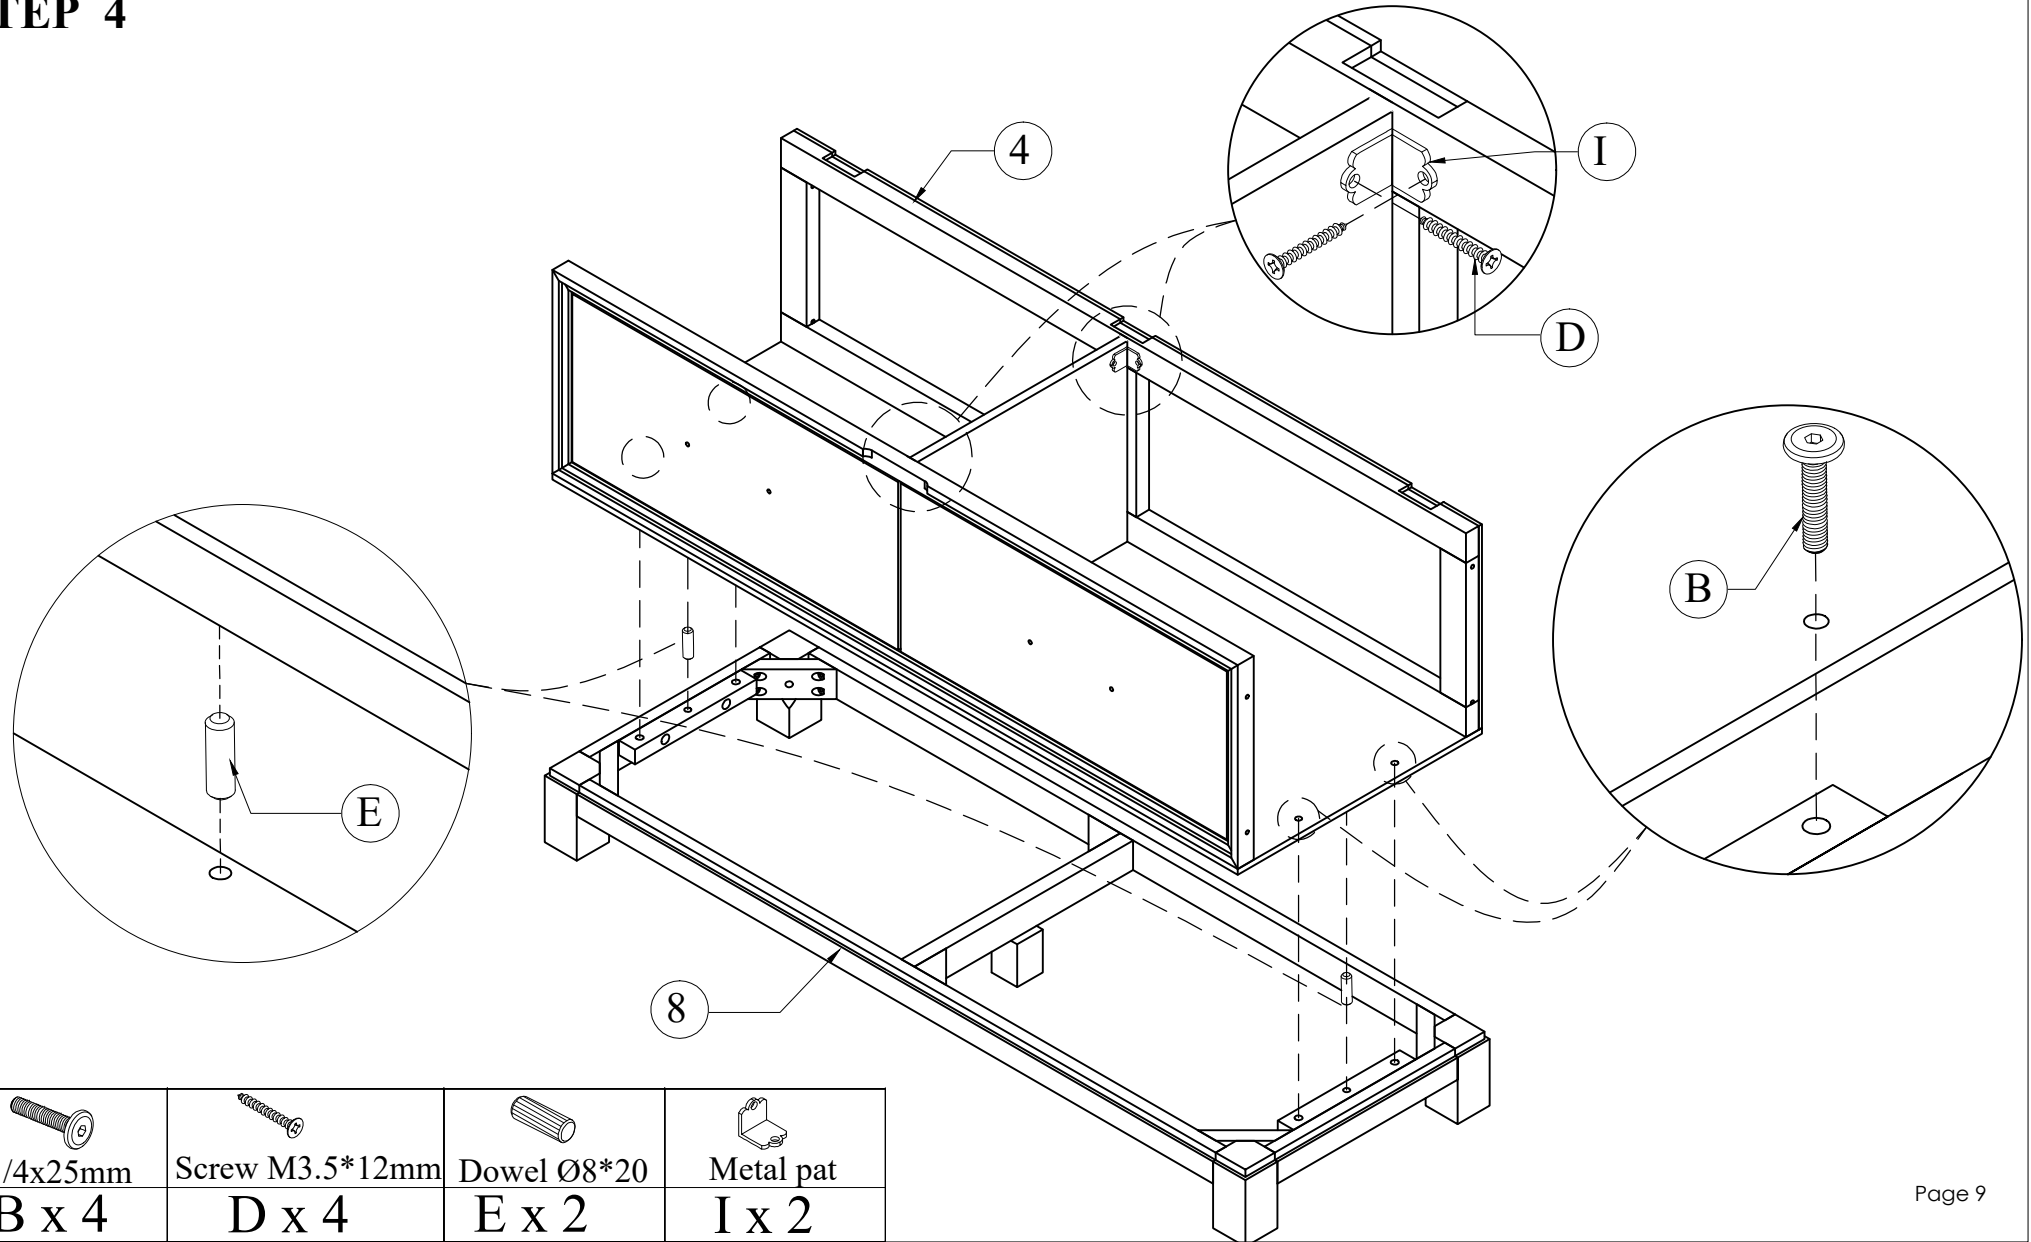




|                                                                                     |                                                                                     |                                                                                     |                                                                                     |
|-------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------|
|  |  |  |  |
| 1/4x25mm                                                                            | Screw M3.5*12mm                                                                     | Dowel Ø8*20                                                                         | Metal pat                                                                           |
| <b>B x 4</b>                                                                        | <b>D x 4</b>                                                                        | <b>E x 2</b>                                                                        | <b>I x 2</b>                                                                        |

# ASSEMBLY INSTRUCTION

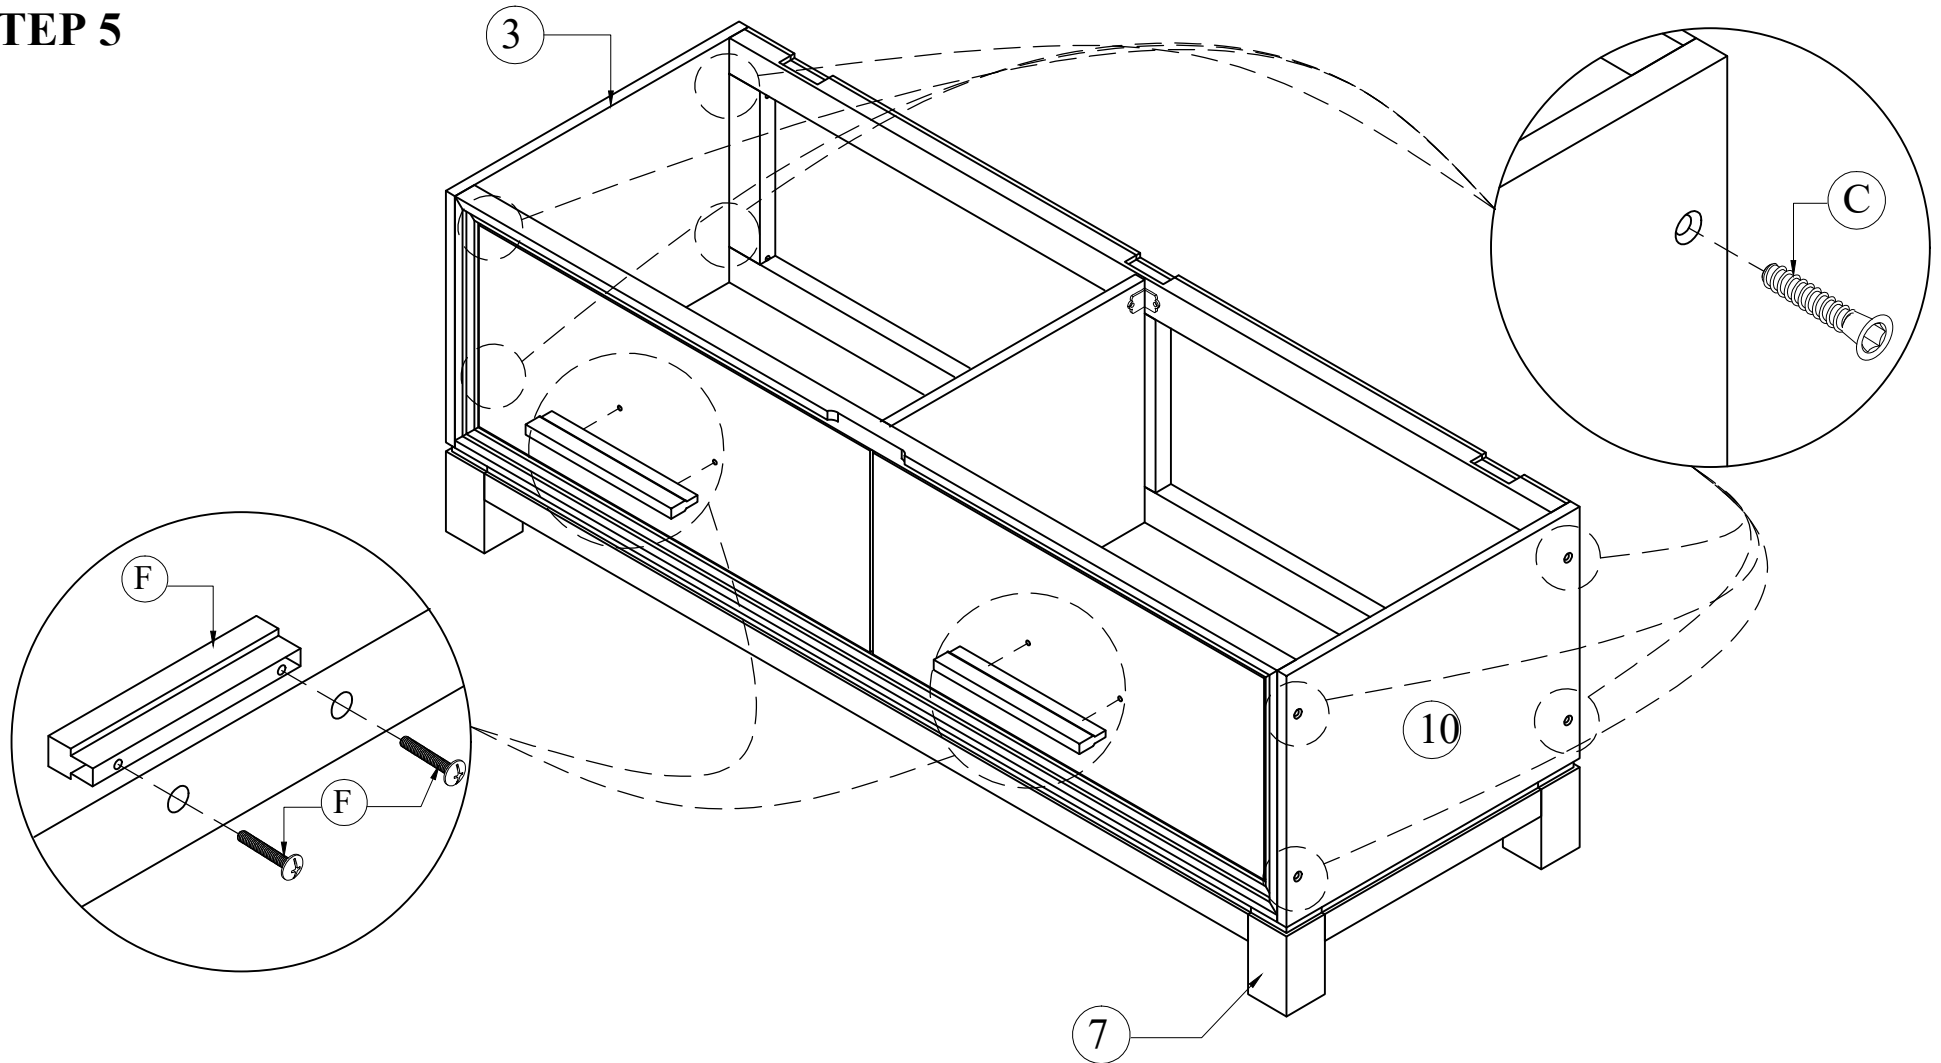
## STEP 5





|                                                                                     |                                                                                     |                                                                                     |
|-------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------|
|  |  |  |
| Bolt 7*40mm                                                                         | Handle                                                                              | Bolt 5/32x15mm                                                                      |
| C x 8                                                                               | F x 2                                                                               |                                                                                     |

# ASSEMBLY INSTRUCTION



## STEP 6

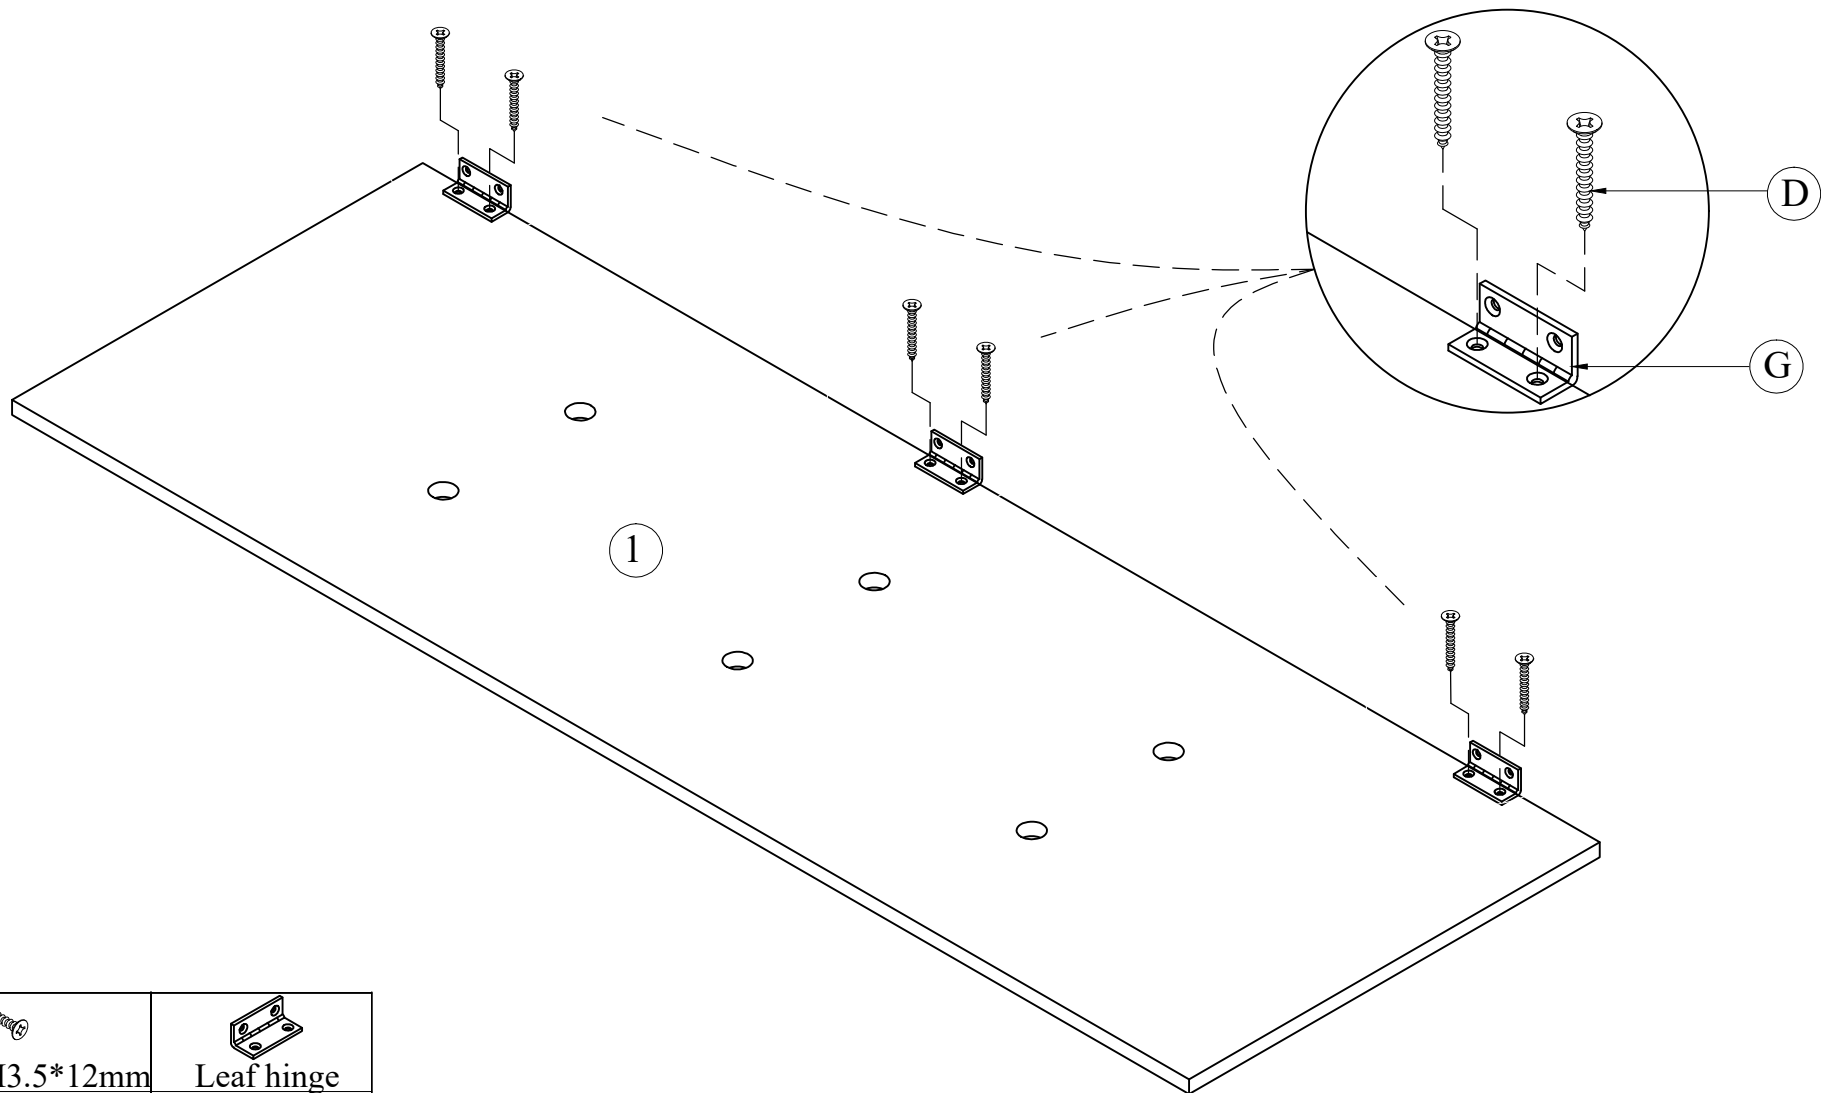

|                                                                                     |                                                                                     |
|-------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------|
|  |  |
| Screw M3.5*12mm                                                                     | Leaf hinge                                                                          |
| D x 6                                                                               | G x 3                                                                               |


# ASSEMBLY INSTRUCTION

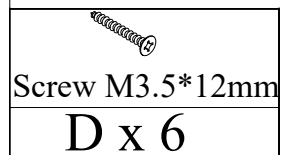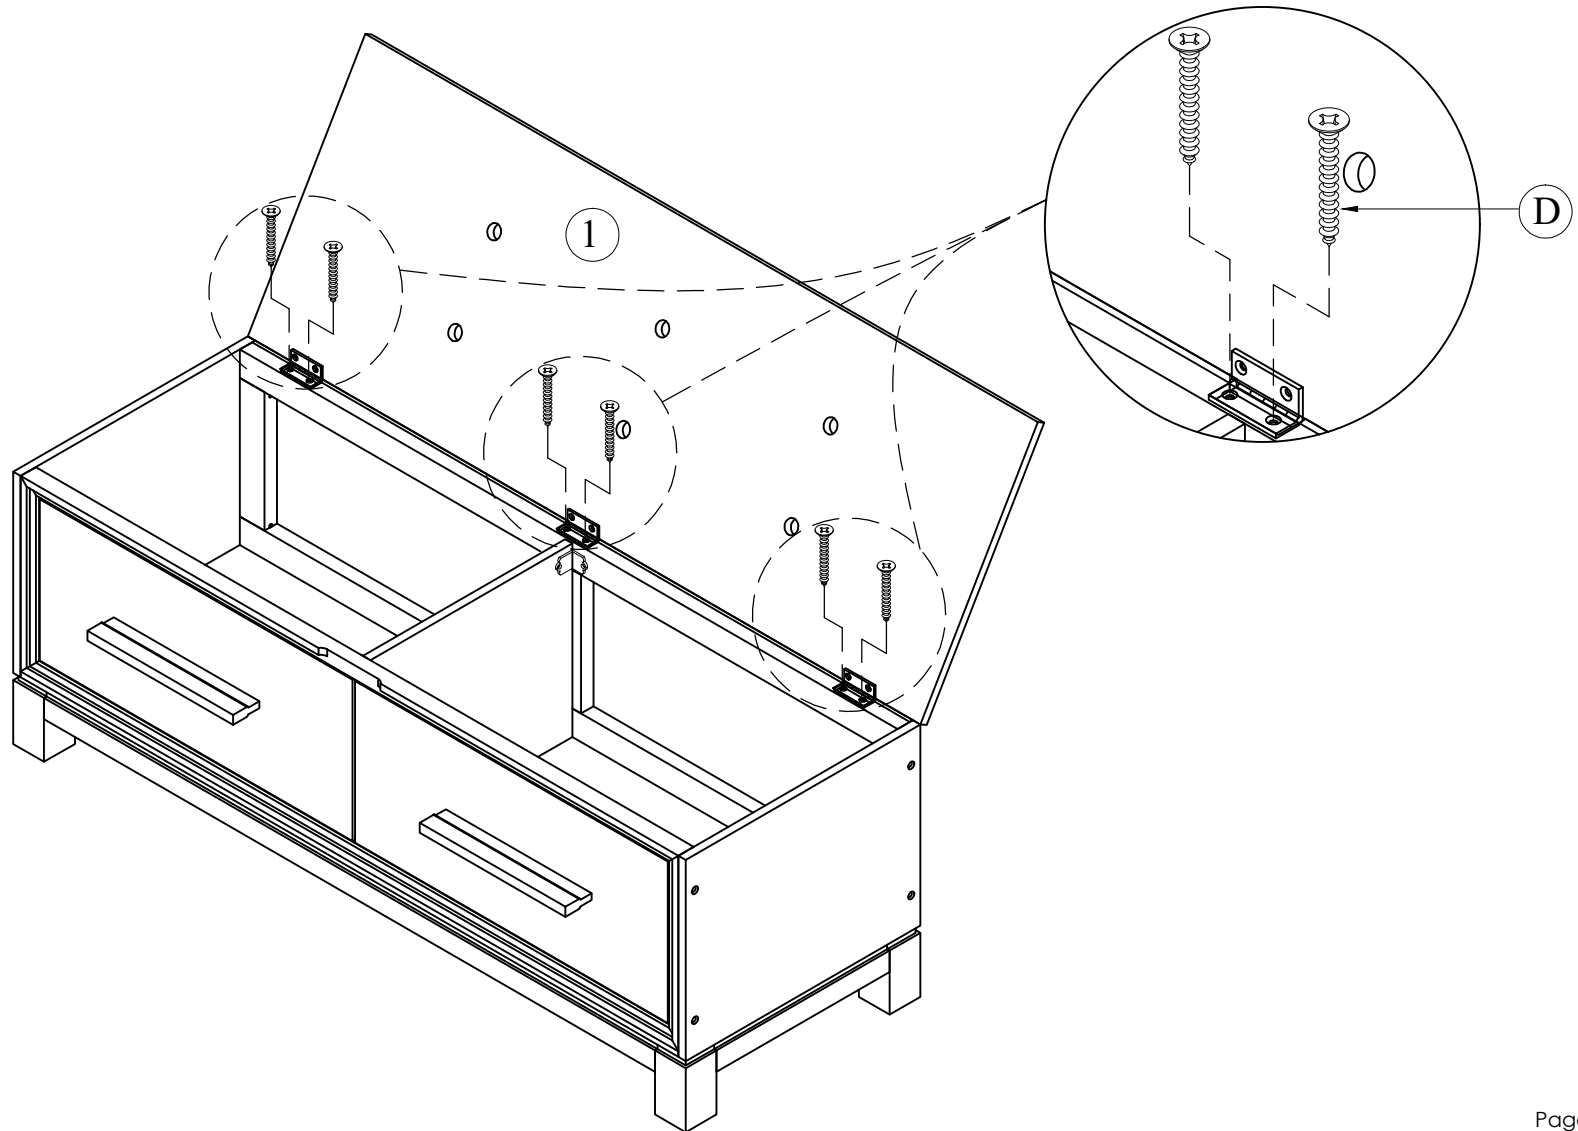

## STEP 7



# ASSEMBLY INSTRUCTION
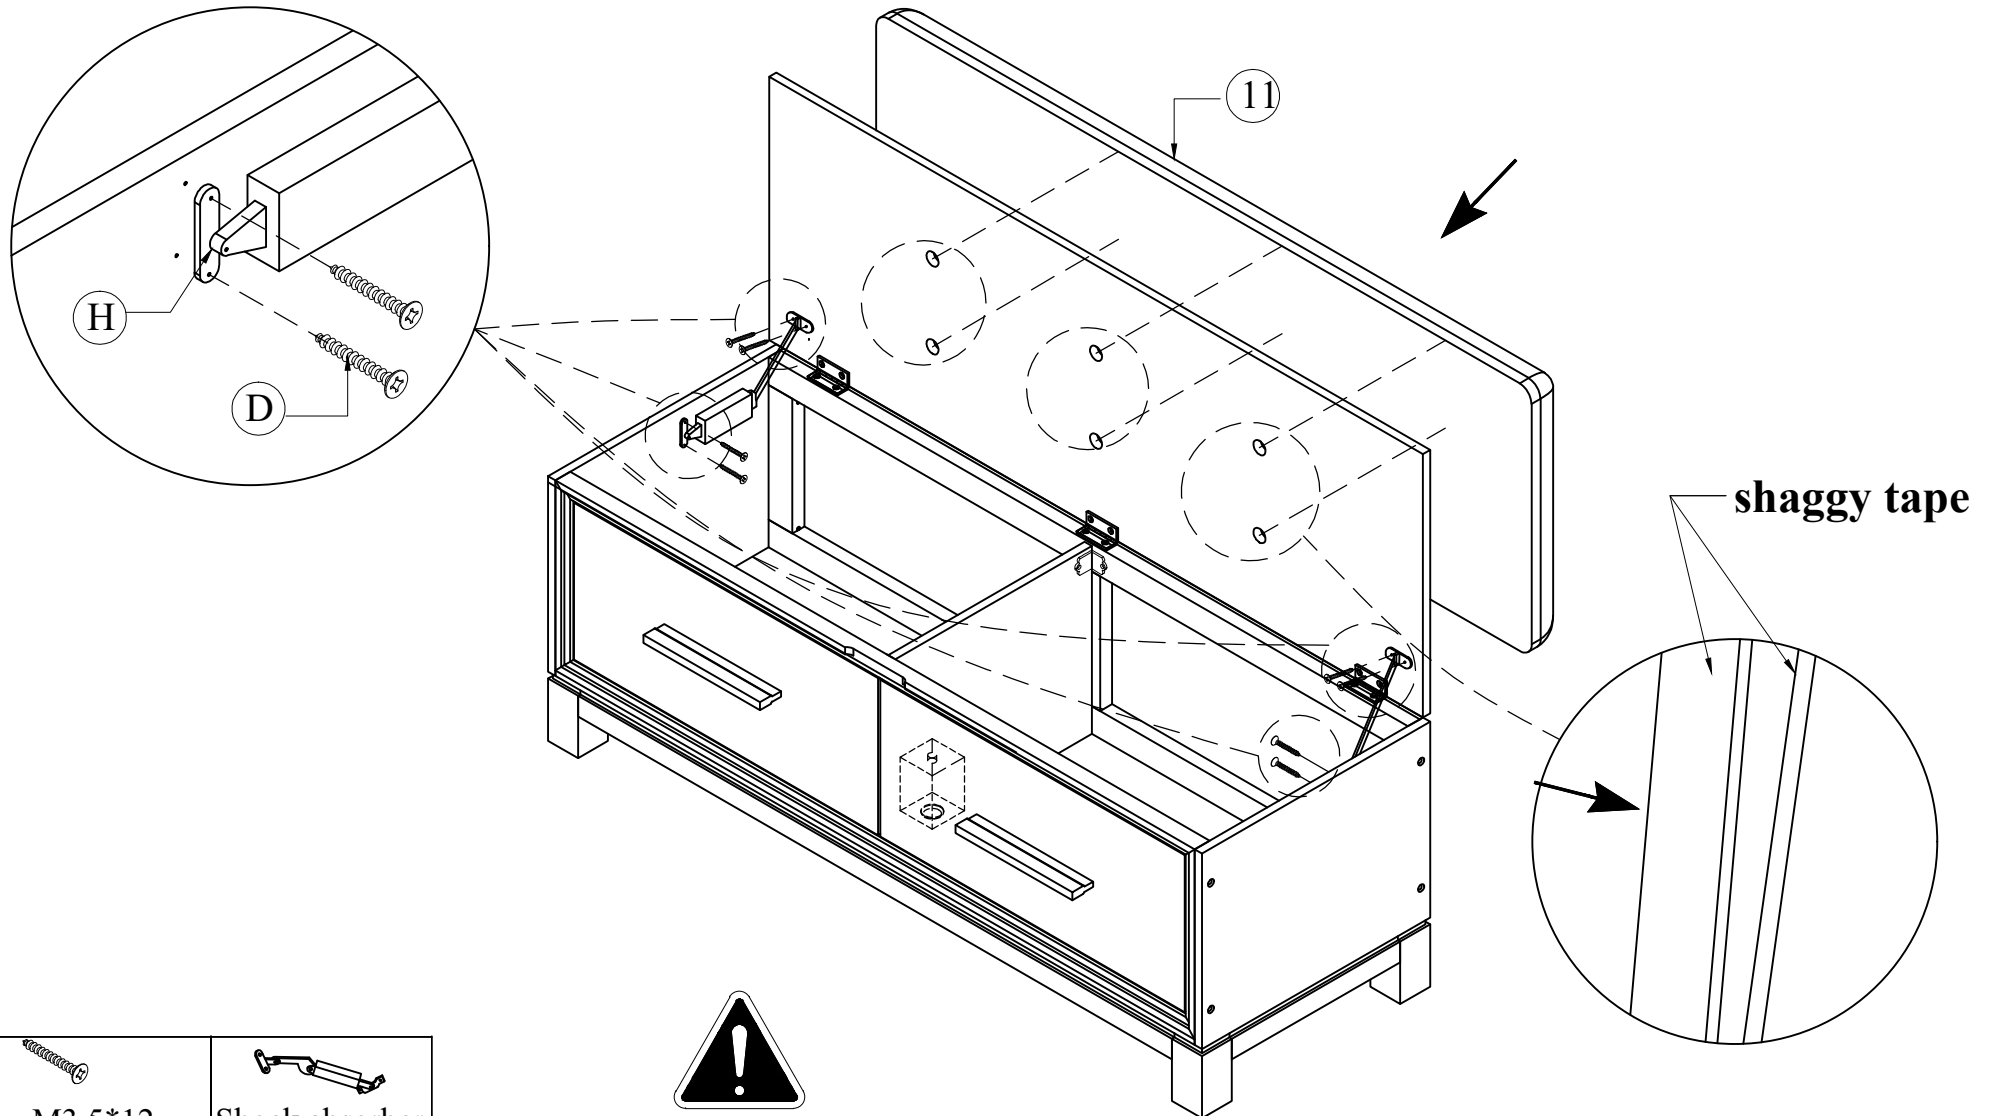
## STEP 8



|                                                                                     |                                                                                     |
|-------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------|
|  |  |
| Screw M3.5*12mm                                                                     | Shock absorber                                                                      |
| D x 8                                                                               | H x 2                                                                               |

Note: After moving your unit to its final location, you can adjust the levelers if needs

# ASSEMBLY INSTRUCTION

## FINISH

