


BedClaw® Unibody Adjustable Center Support Leg Instructions

Please remove your mattress and box spring from the bed before installation. This will make attachment of Modification Plates easier and safer. Do not attempt to move the mattress by yourself. Get help. Do not suspend your headboard or footboard using this bracket.

STEP 1

Place assembled bed frame in front of headboard and position Modification Plate to determine which slots will line up with the Headboard Brackets of your frame and your Headboard. Use provided Lock Nuts and Bolts to attach Plates to Headboard Brackets, as shown in the picture to the right.

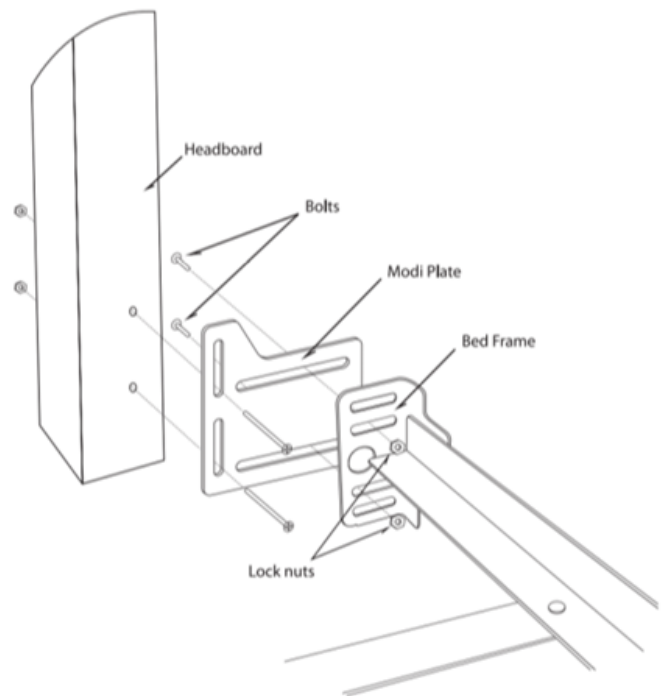

STEP 2

Use the extended nuts and bolts from your existing hardware or from the optional 'Combo Bag' to attach the Modification Plate to your headboard.

STEP 3 (Optional)

If the attachment bolts are too long and protrude beyond the headboard, you may want to trim them down with a hacksaw or similar cutting tool to prevent damage to your wall or personal injury. See figure 2.

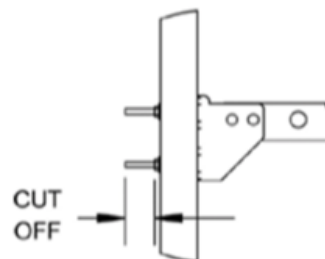


Figure 2

For your safety, please be sure to orient the plates so no excess protrudes beyond the bed or in a way which can cause a hazard in your bedroom. Note that the picture above is for demonstration and may not exactly match the Modification Plate you have. However, the installation process is the same.

REQUIRED TOOLS

- 7/19" Wrench
- Adjustable Wrench
- Flashlight
- Tape Measure

Questions or comments?
Phone: 336-781-0504
Email: support@wallaceflynn.com



This product is covered by our **Ltd. Lifetime Service Policy**.
For more information on this, visit us at
www.wallaceflynncollective.com/pages/lifetime-service-policy

bedCLAW®
BedClaw® is a registered trademark
of Wallace Flynn Inc.