















Assembly Instructions

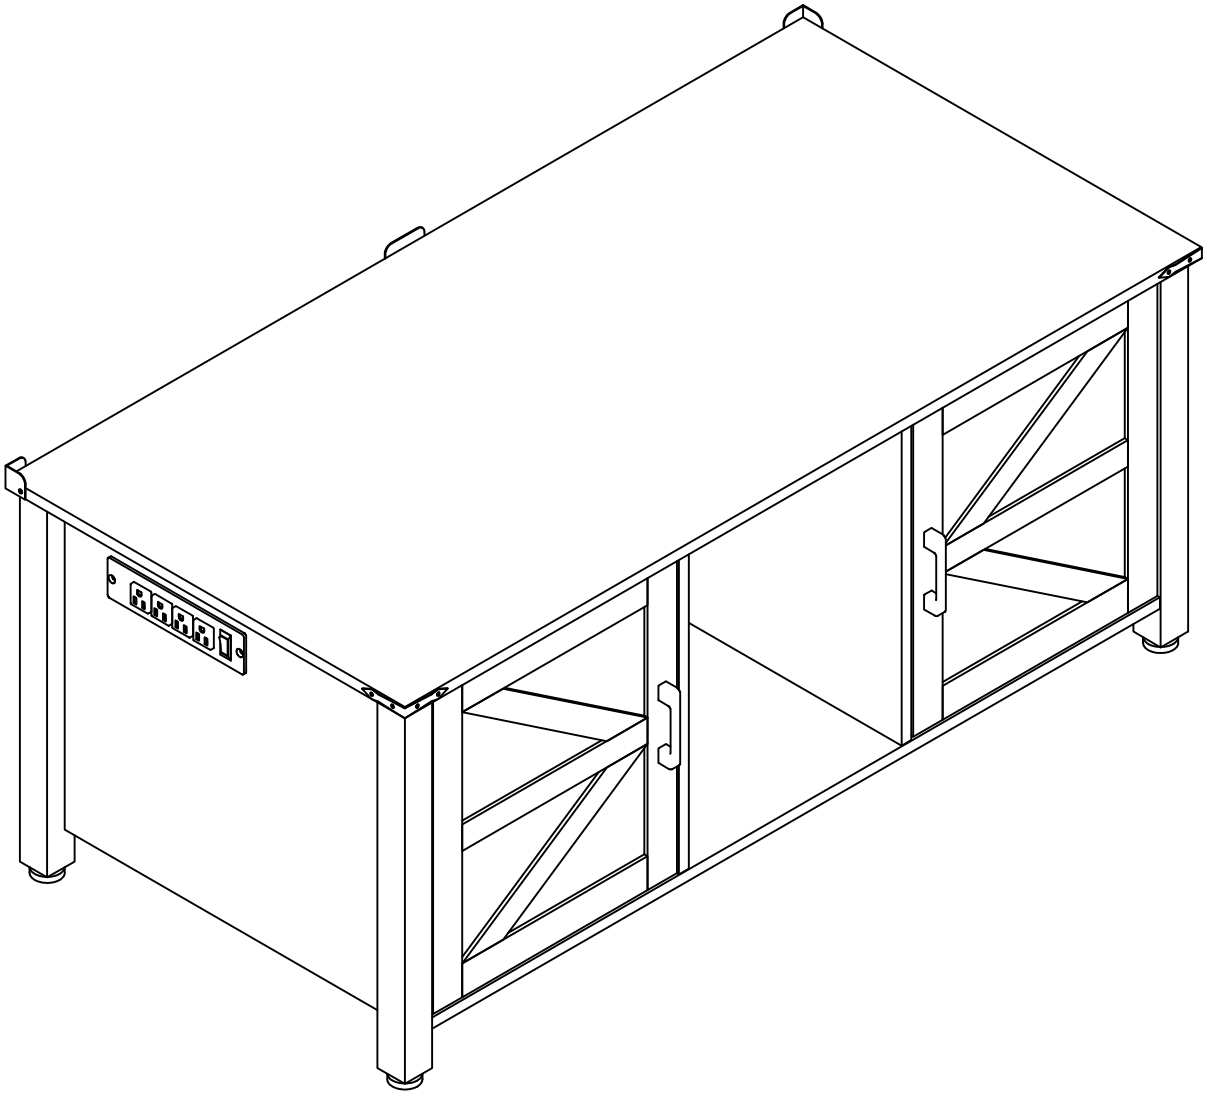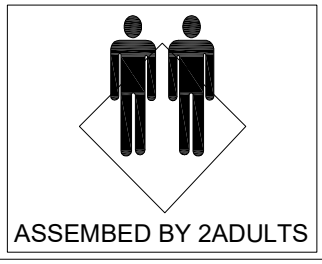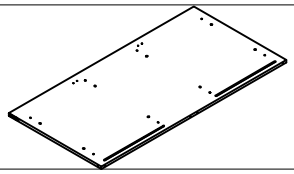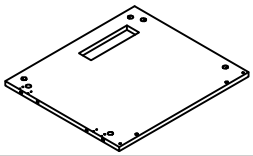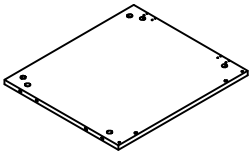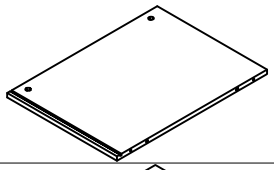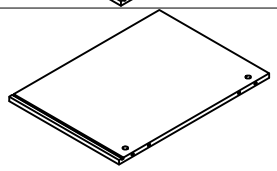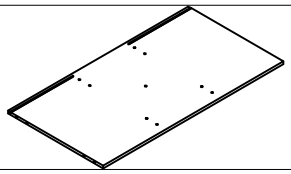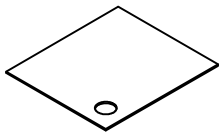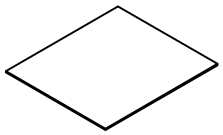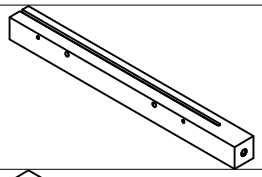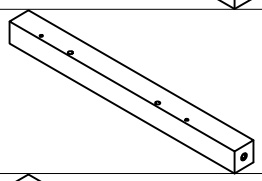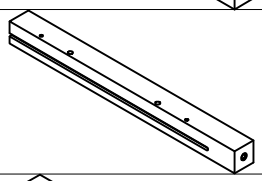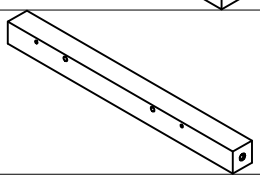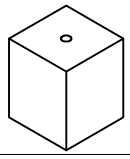



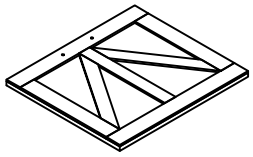






Parts List


ITEM	PART	QTY
1		1PC
2		1PC
3		1PC
4		1PC
5		1PC
6		1PC
7		1PC

ITEM	PART	QTY
8		1PC
9		1PC
10		1PC
11		1PC
12		1PC
13		1PC
14		2PCS


Hareware List


ITEM	PART	QTY
A	 7.8x30mm	24+2PCS
B	 6x35mm	20+2PCS
C	 15*10	20+2PCS
D	 7x38mm	5+1PCS
E	 7x3.5x12mm	30+4PCS
F	 7x3.5x14mm	6+1PCS
G		2PCS
H	 M4x22mm	4PCS
I		2PCS

ITEM	PART	QTY
J		4PCS
K		1+1PCS
L		5PCS
M		1PC
N		12+1PCS
O	 6x3x16mm	12+1PCS
P		2PCS
Q		1PC
		1PC

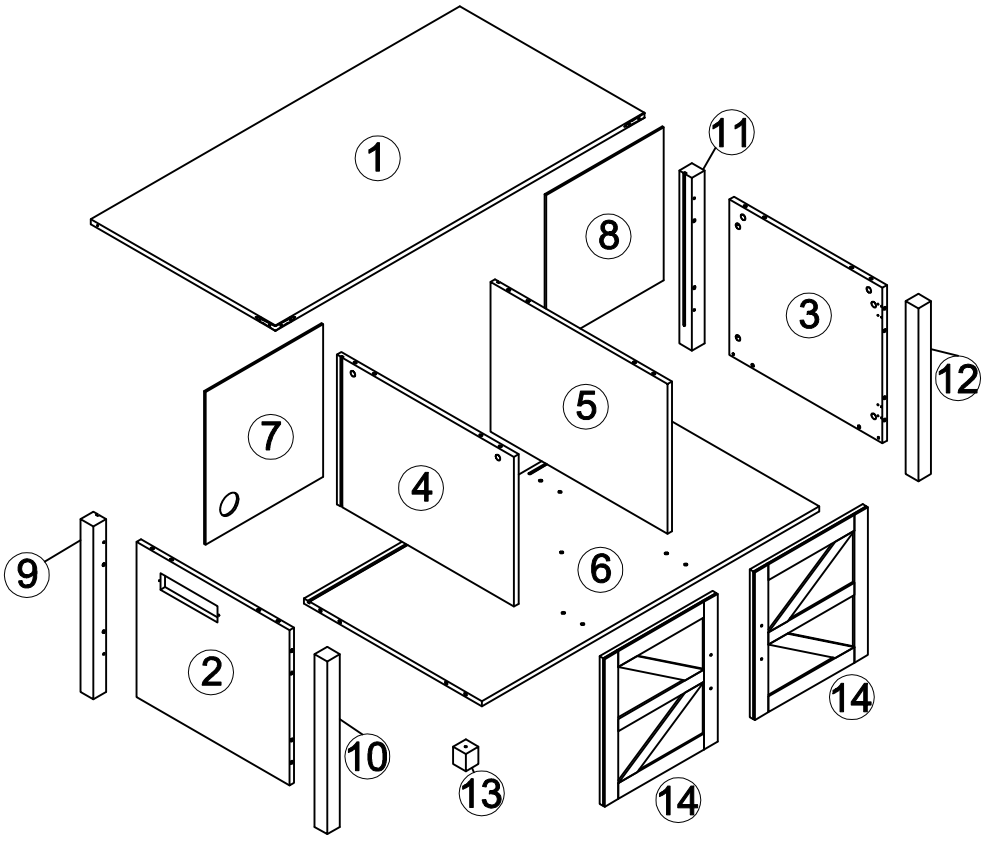


1 Attach Part #13 to Part #6 with screws D x1 as shown.

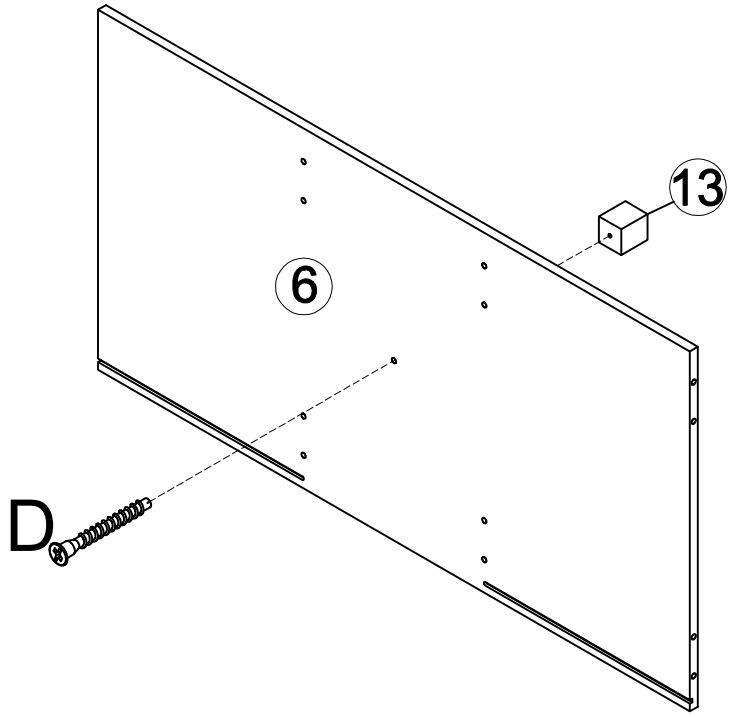

 Dx1


2 Install dowel A x4 to Part #4&5 as shown.Attach Part #4&5 to Part #6 with screws D x4 as shown.
Note: When installing, the side with the back panel rail should be on the same side.

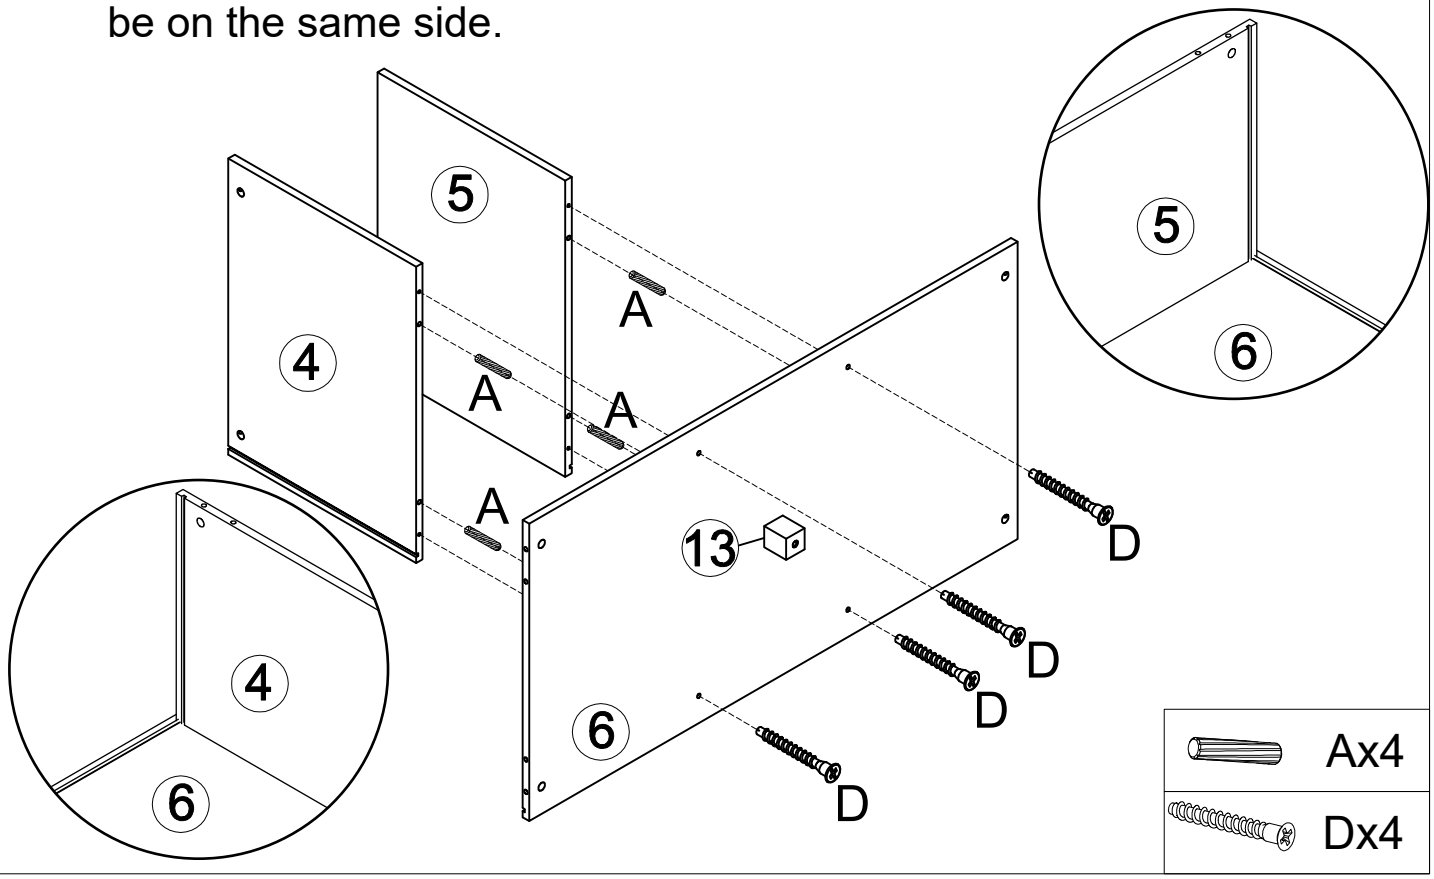


 Ax4

 Dx4


3 Install cam bolt B x8 to Part #9&10, Part #11&12 as shown.

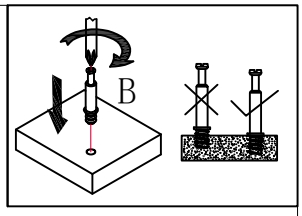

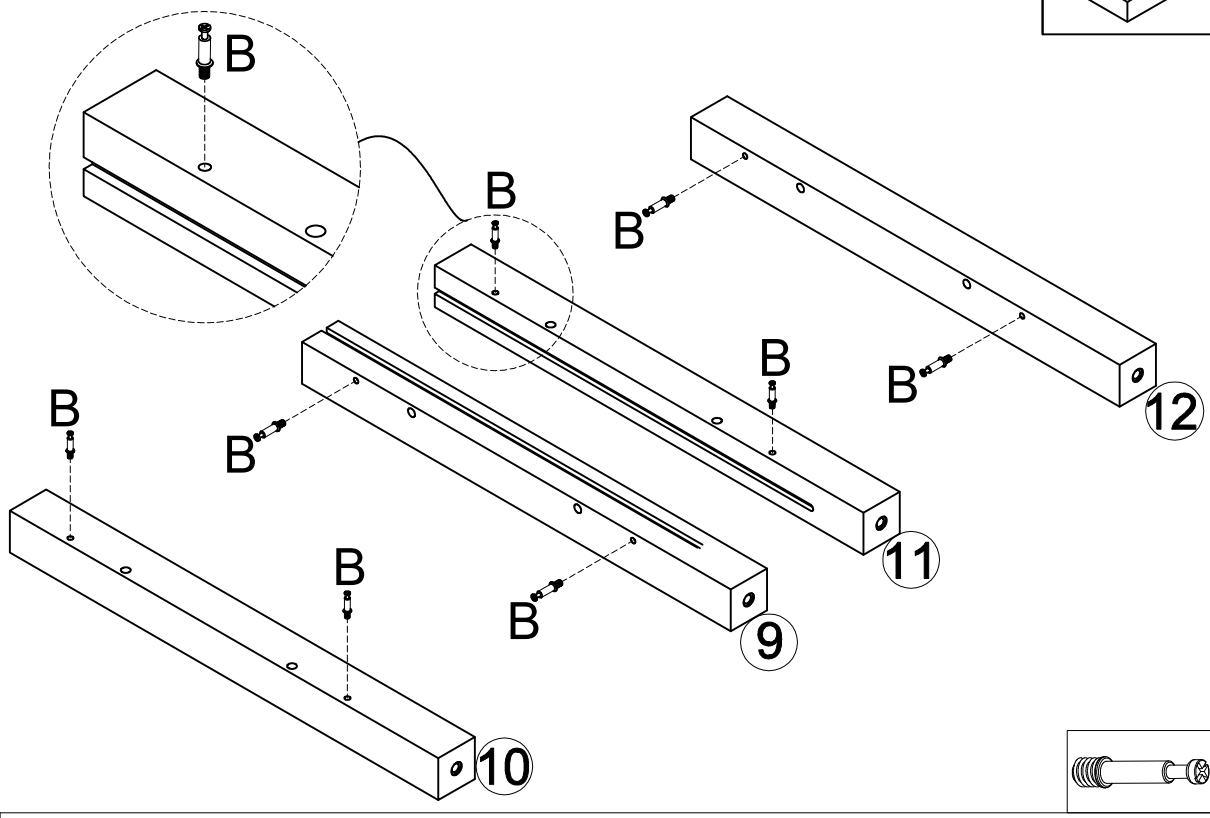

Bx8

4 Attach Part #9&10 to Part #2 with dowel A x4 as shown.
Install and Turn nuts C x4 to secure position as shown.
Install cam bolt B x2 to Part #2 as shown.

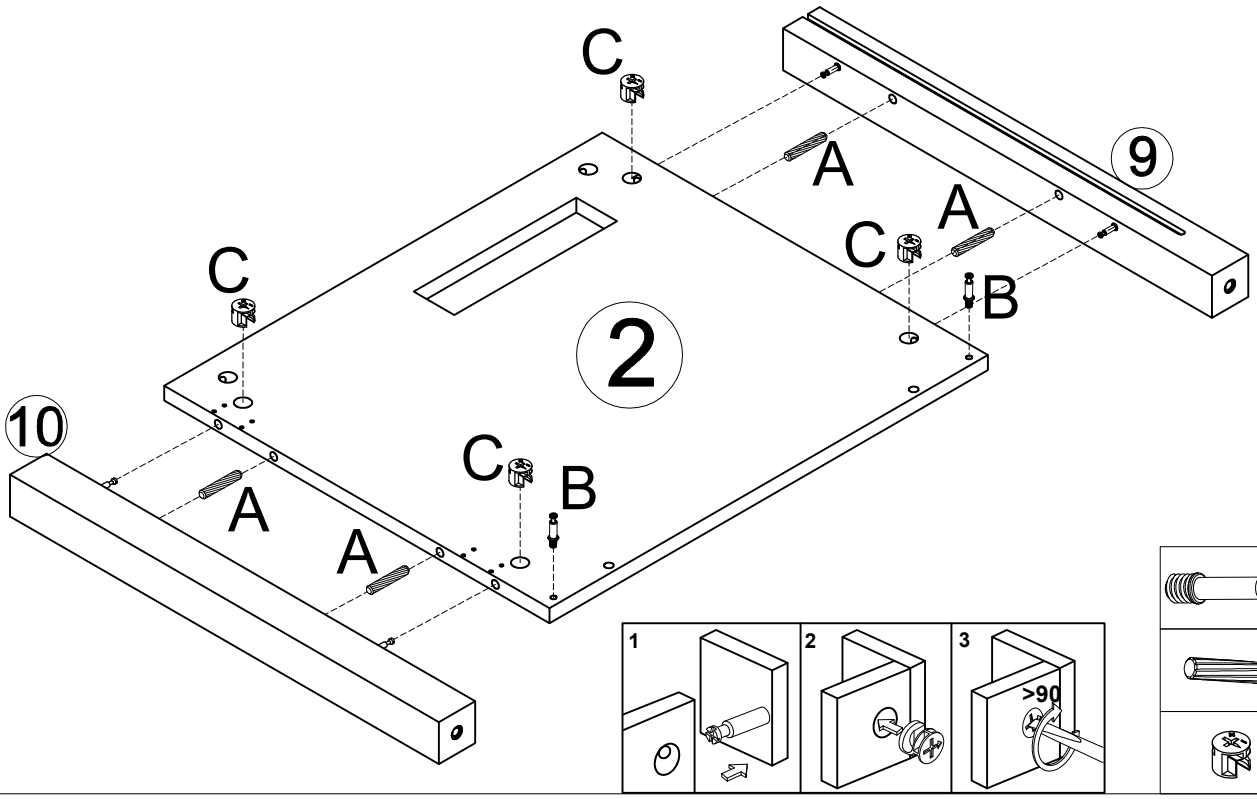


Bx2


Ax4

Cx4

5


Attach Part #11&12 to Part #3 with dowel A x4 as shown.
Install and Turn nuts C x4 to secure position as shown.
Install cam bolt B x2 to Part #3 as shown.

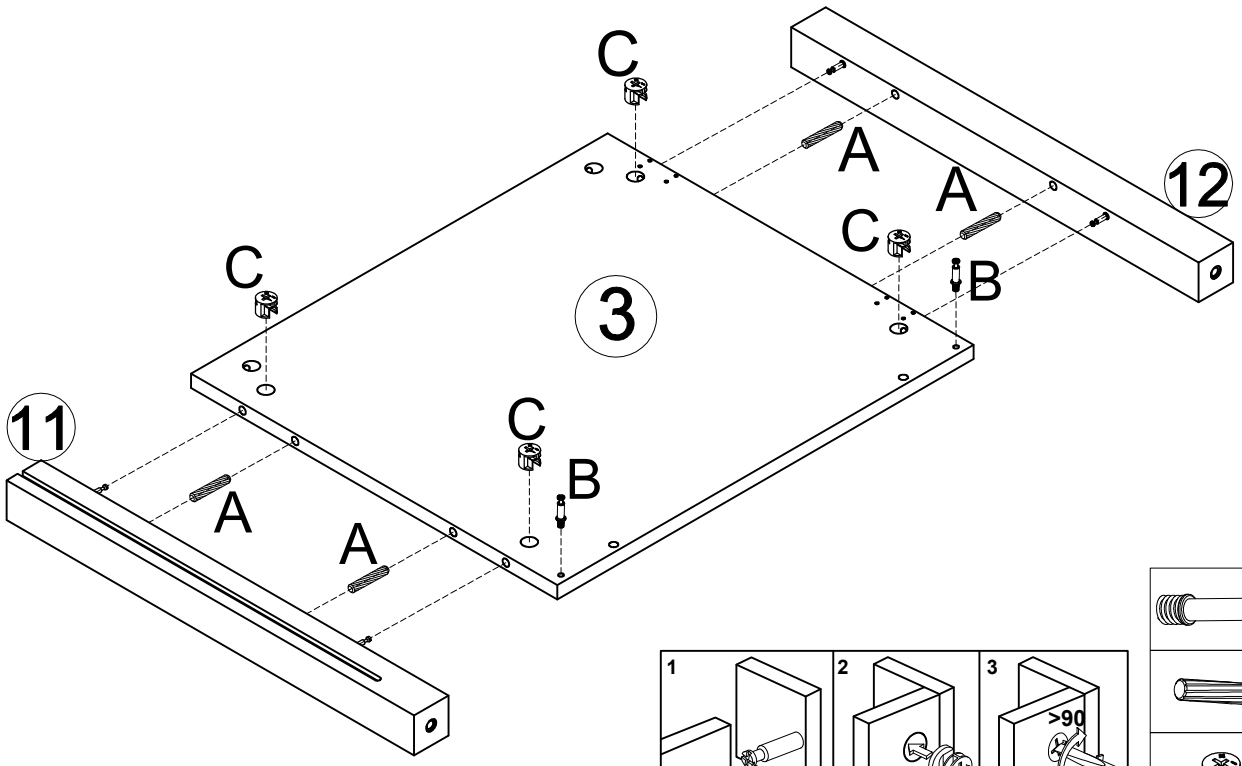

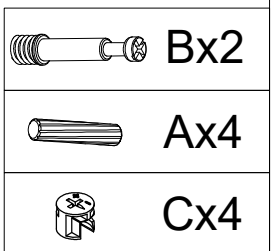


6

Attach Part #2&3 to Part #6 with dowel A x4 as shown.
Install and Turn nuts C x4 to secure position as shown.
Note: When installing, the side with the back panel rail should be on the same side.

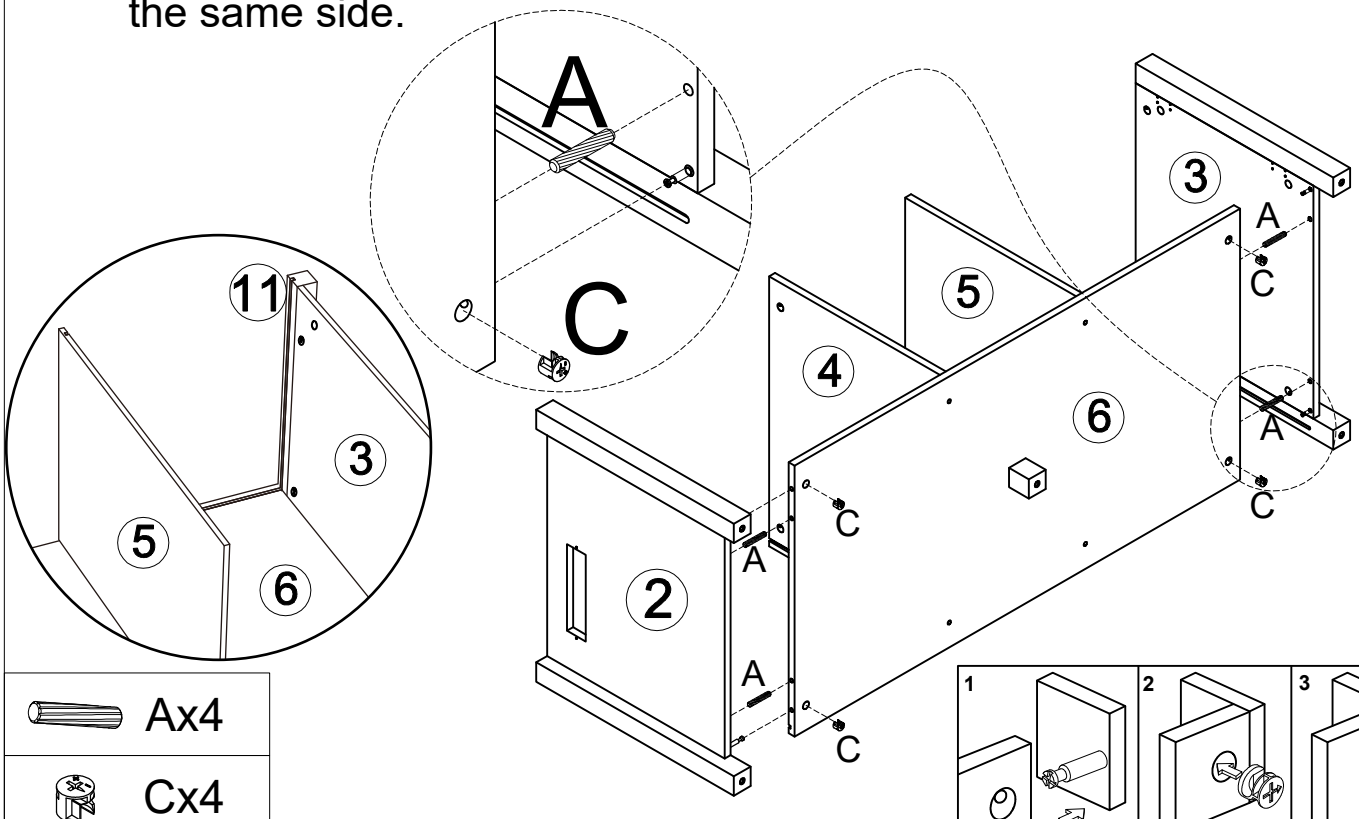

7


Attach adjustable feet L x5 as shown.

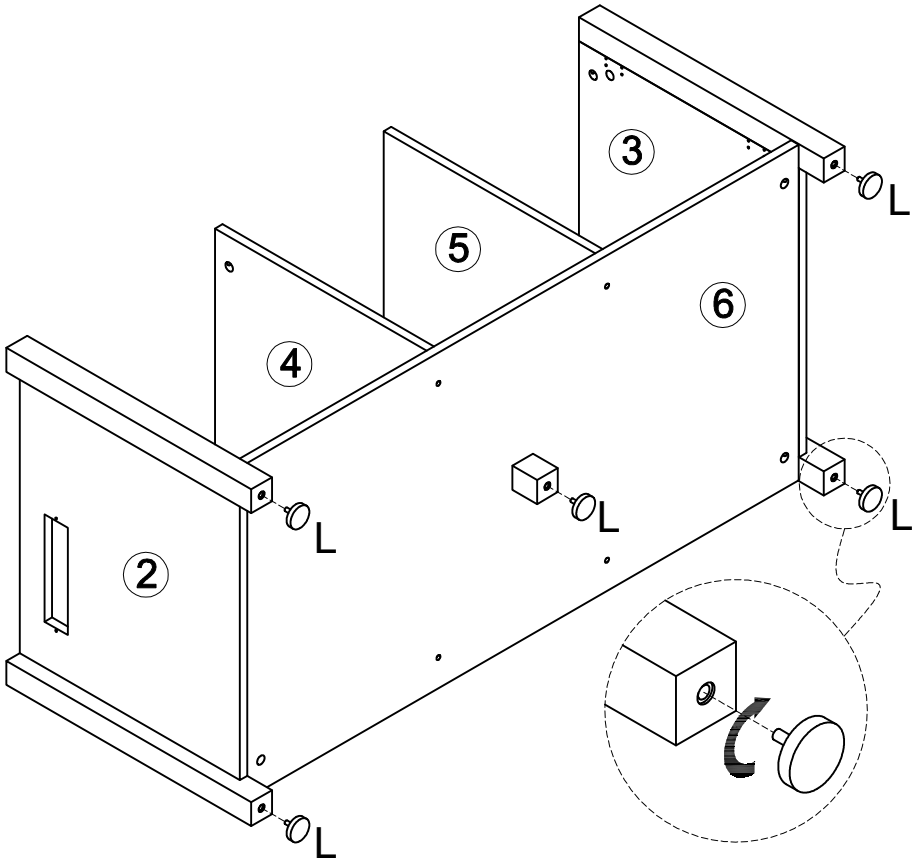

 Lx5


8


Attach Back panel Part #7 to the Part #2&4.
Attach Back panel Part #8 to the Part #3&5.

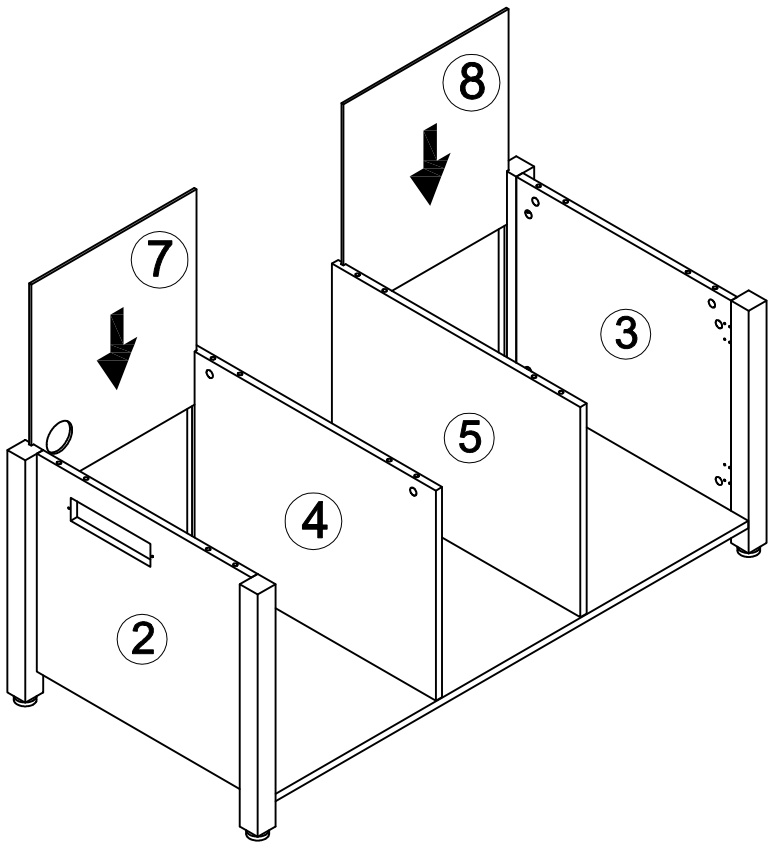


9

Install Cam bolt B x8 to Part #1 as shown.
Install I x2 to Part #1 with screws E x4 as shown.

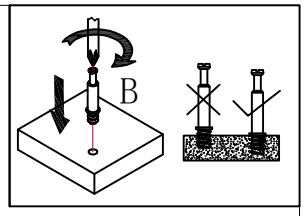


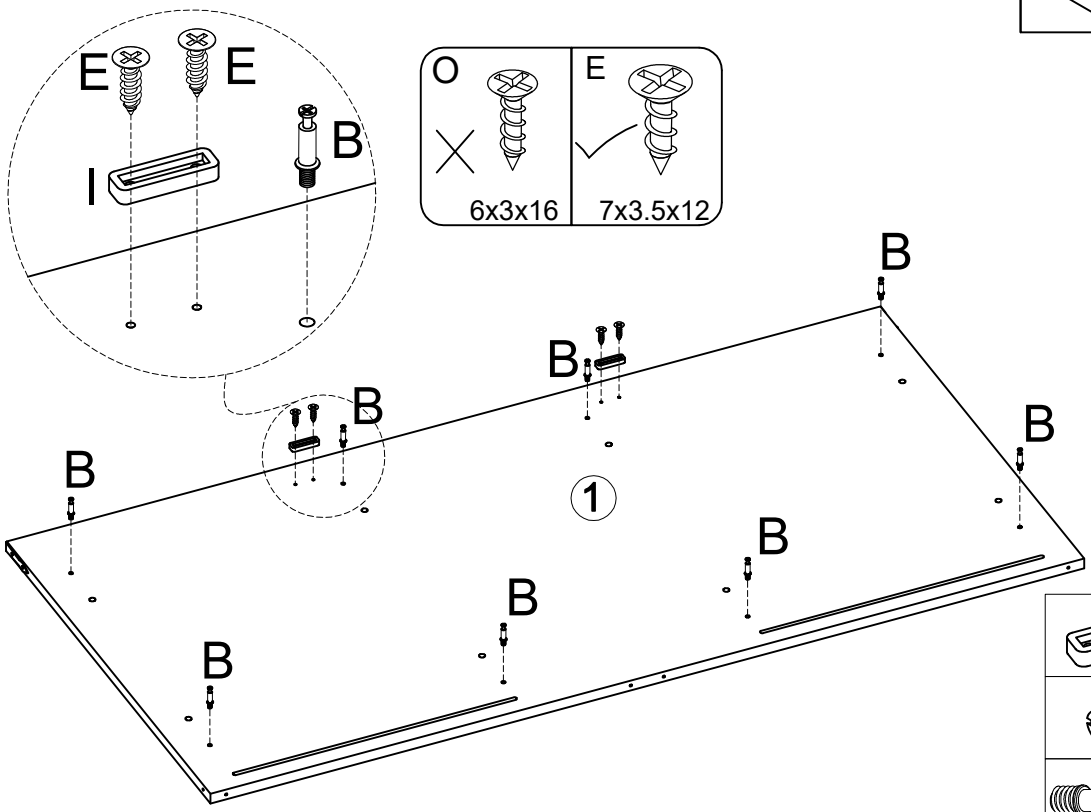


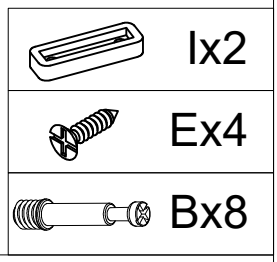

10


Attach Part #1 to Part #2&3&4&5 with dowel A x8 as shown.
Install and Turn nuts C x8 to secure position as shown.

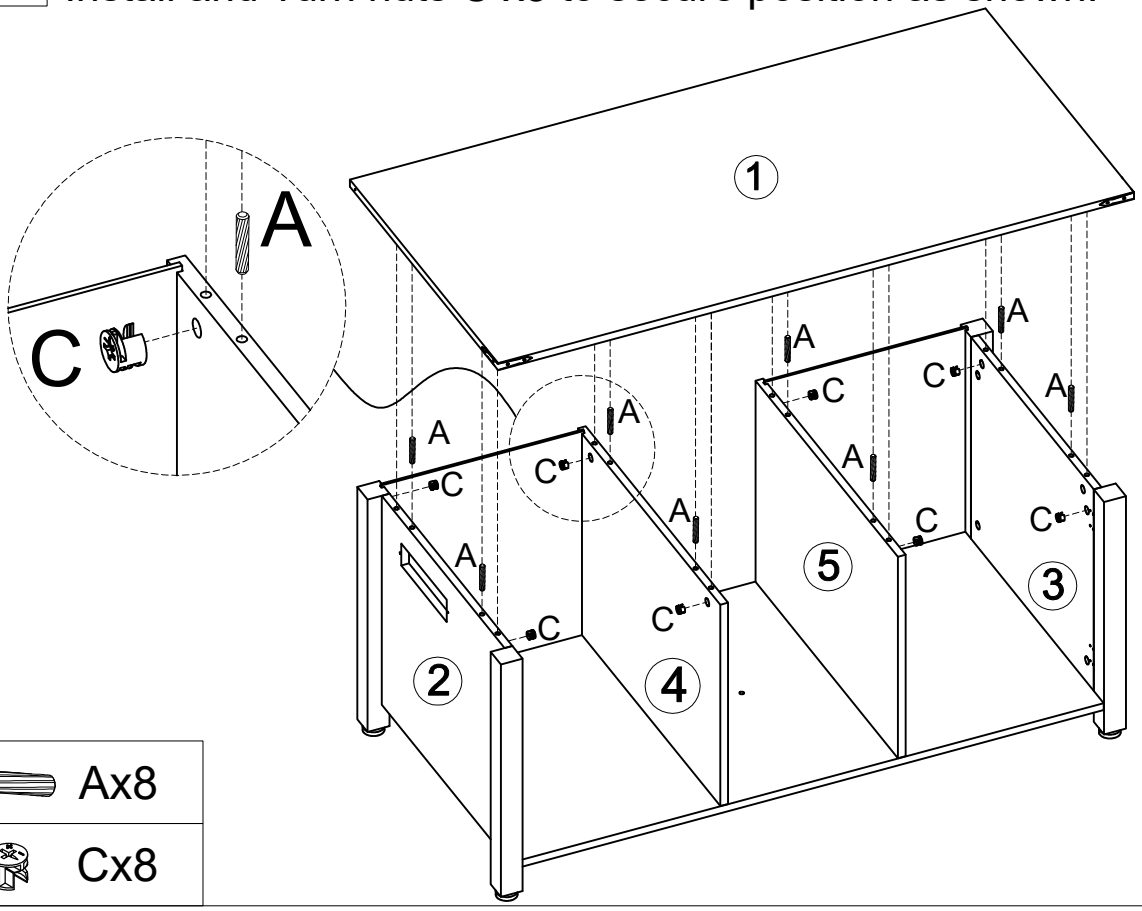

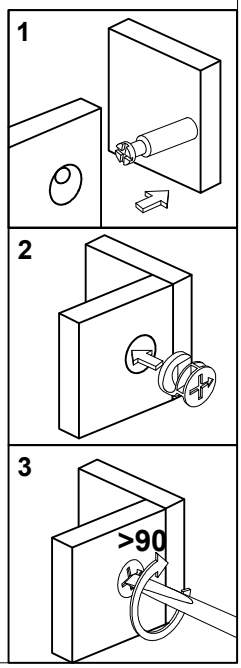


11


Install G x2 to Part #14 x2 with screws H x4 as shown.
Install J x4 to Part #14 x2 with screws E x8 as shown.

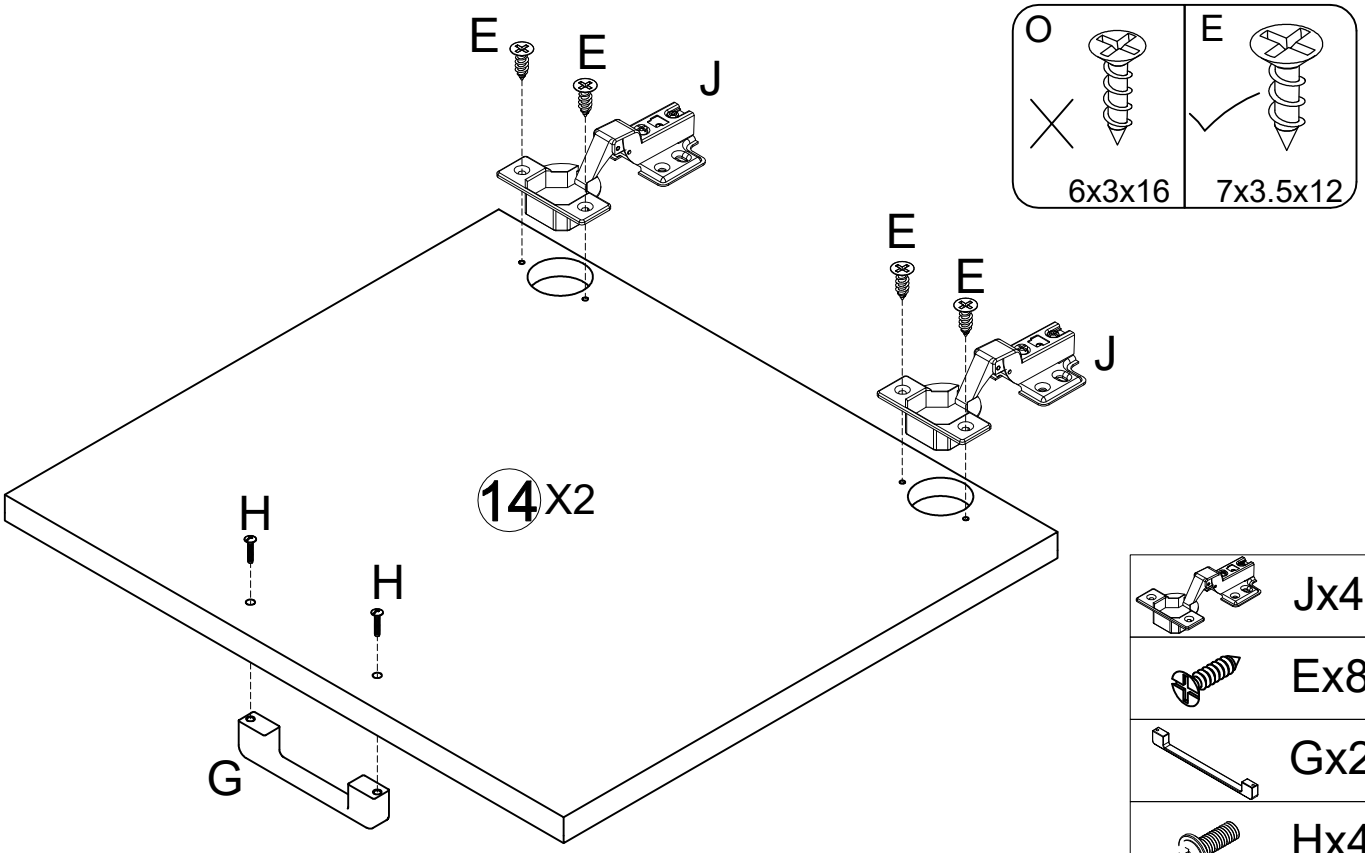



12

Attach Part #14 x2 to Part #2&3 with screws E x16 as shown.
(You can make the door more compliant by adjusting the door hinges as the above image shows.)

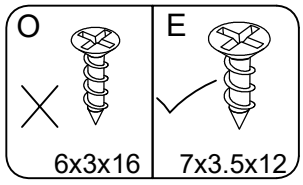

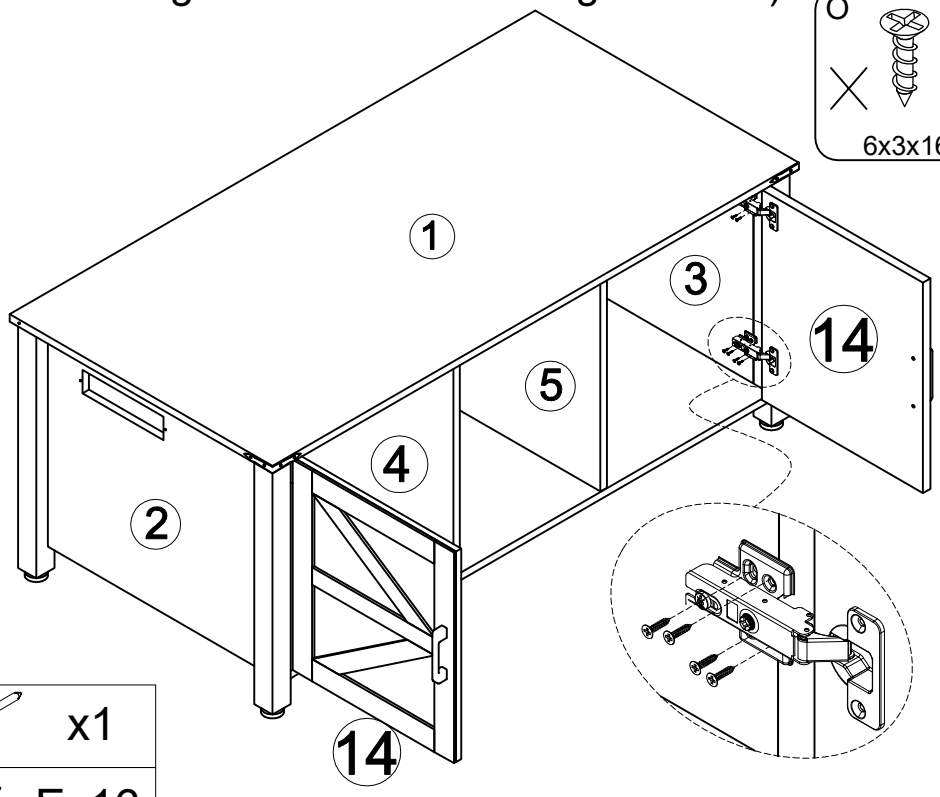


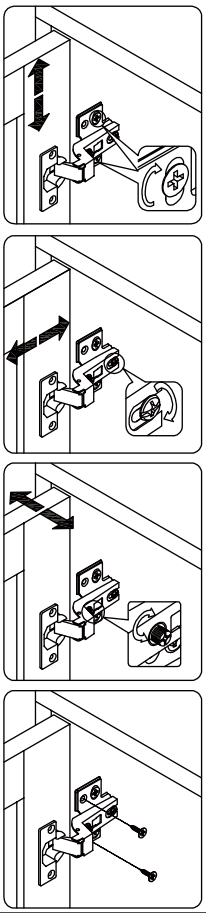

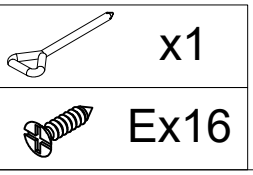


13


Install P x2 to backside (Part #1) with screws F x4 as shown.
Install Q x1 to backside (Part #1) with screws F x2 as shown.

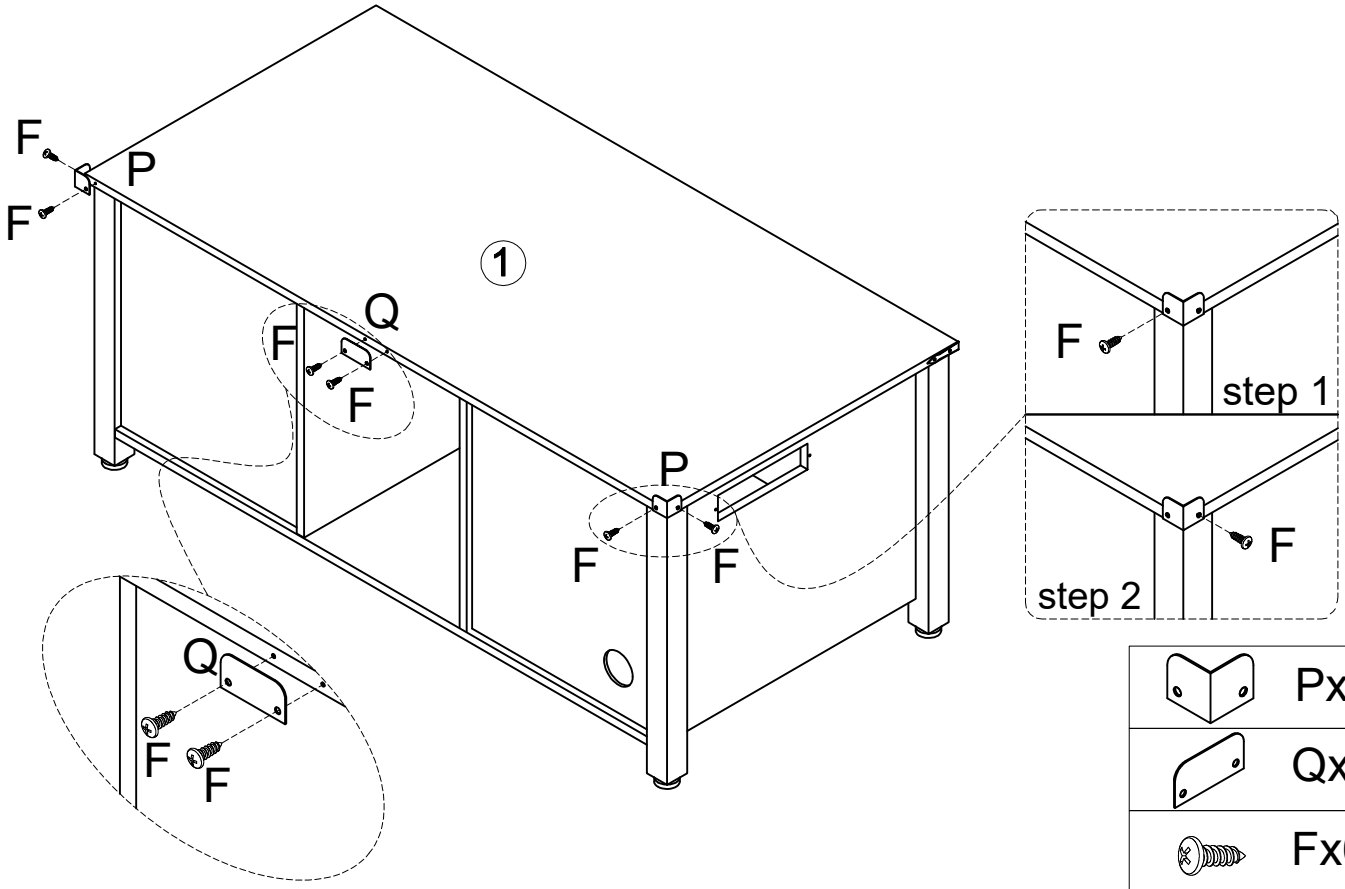


14

Install Back Buckle N x12 to backside (Part #7&8) with screws O x12 as shown to make the product more stable.

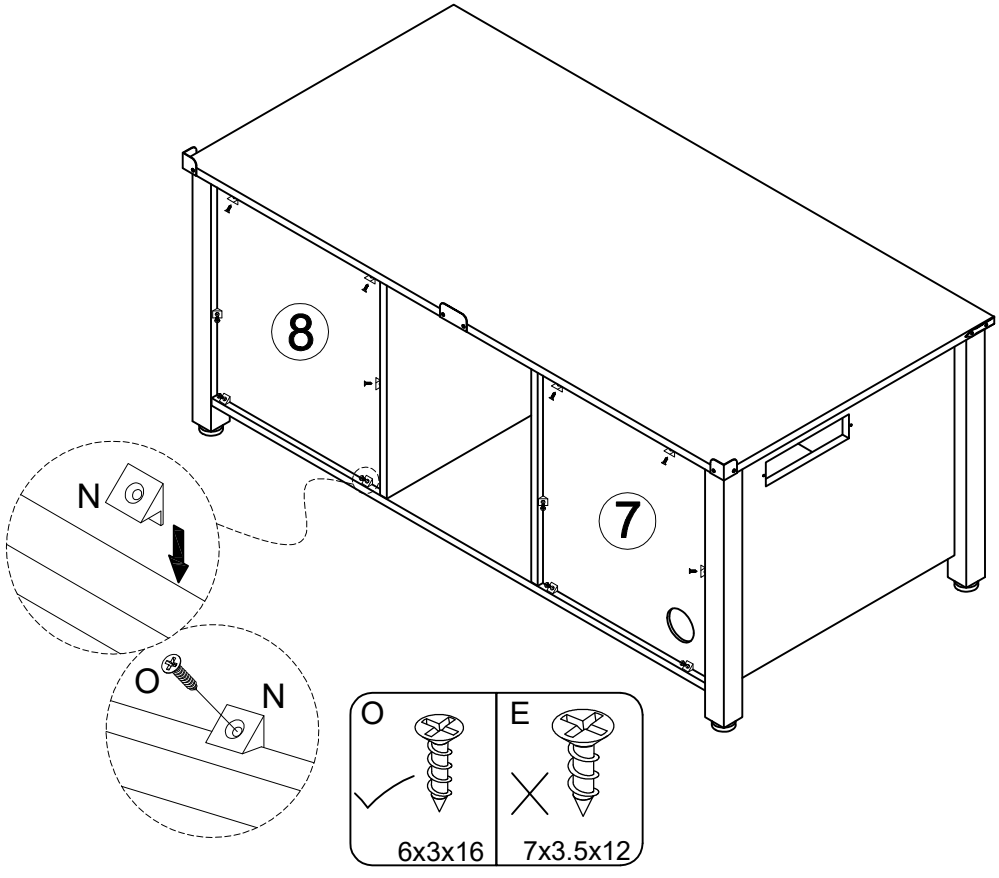

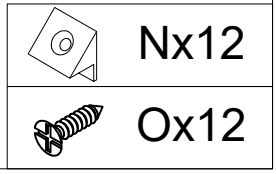

15 Install socket Part N to Part #2 with screws E x2 as shown.

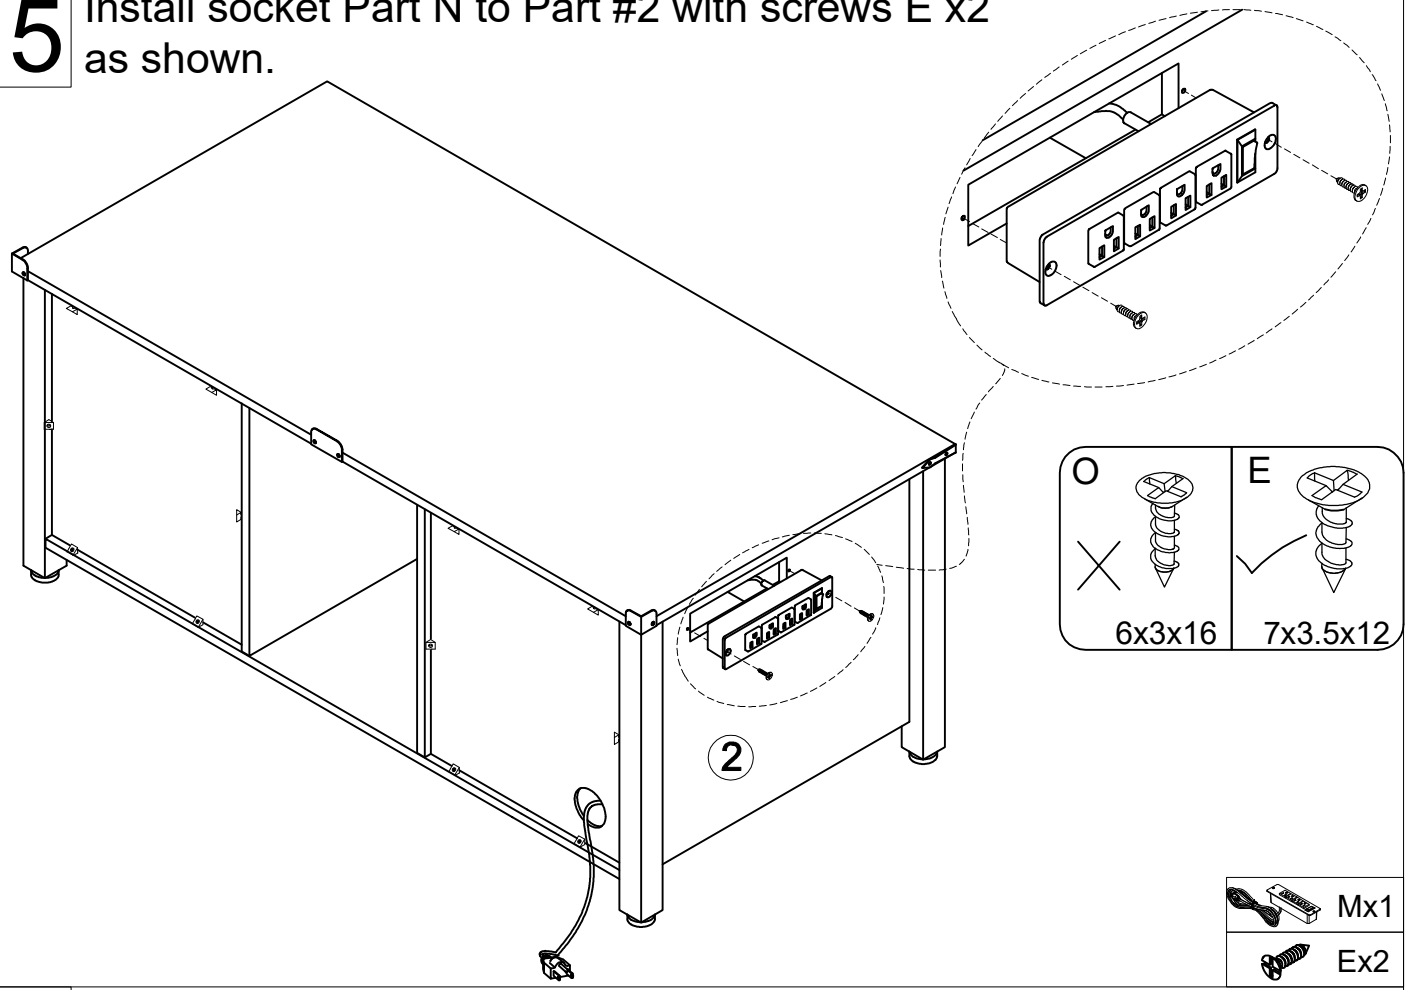

16 We provide round stickers K. You can stick it to cover the nuts so as to look nicer.

