




Assembly Instruction

(SKU:420001)

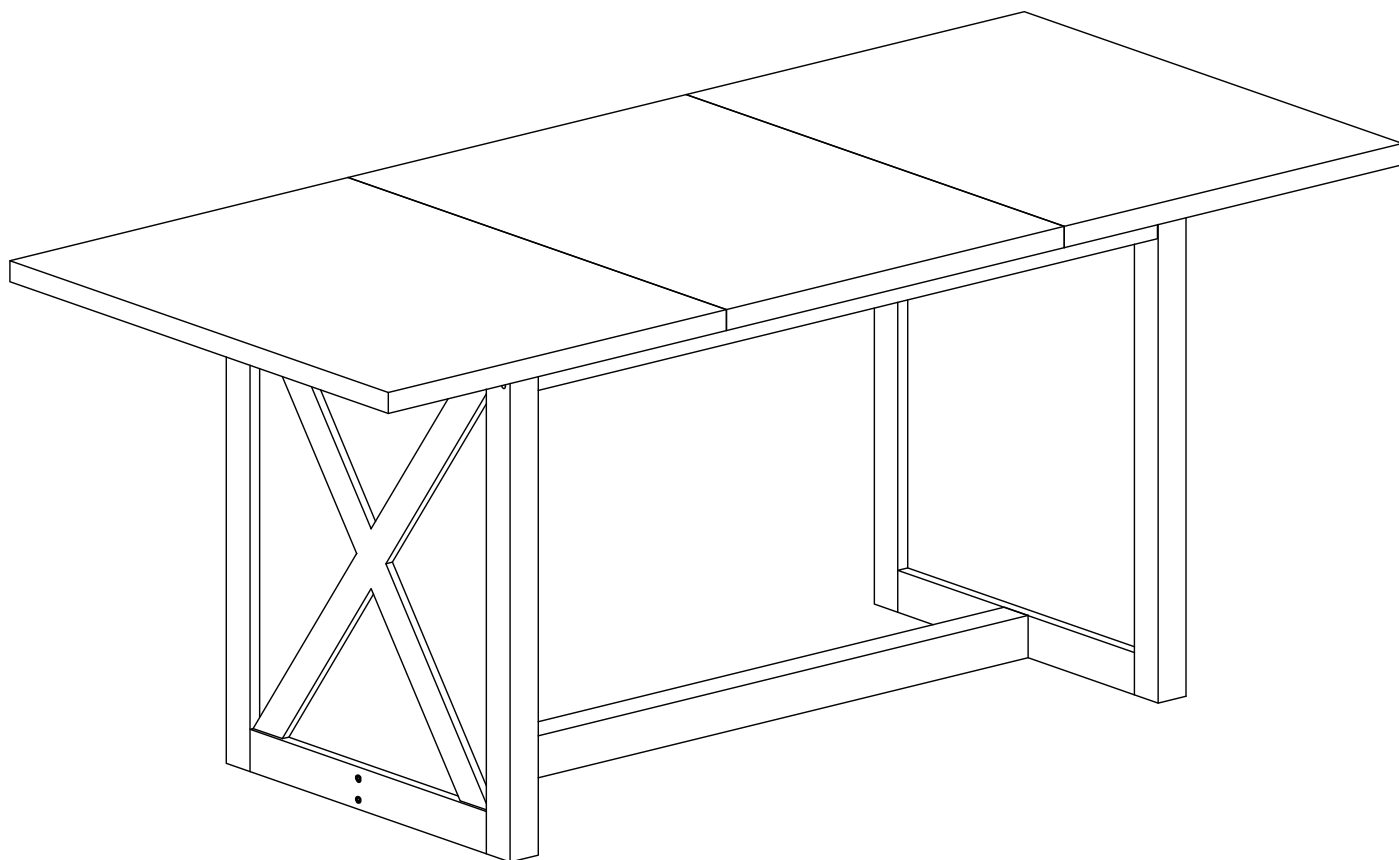


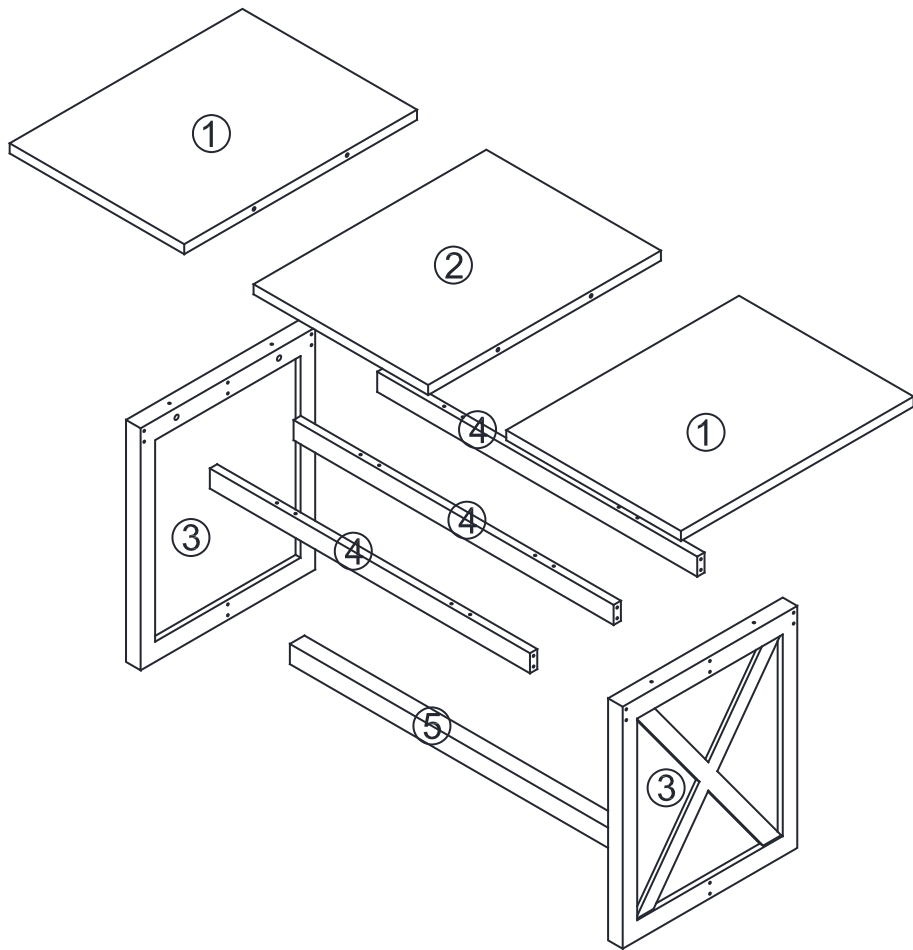


"IMPORTANT, RETAIN FOR FUTURE REFERENCE: READ CAREFULLY"

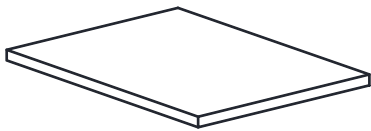


① x2

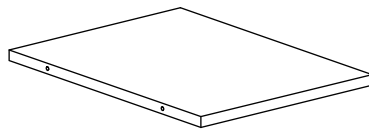


② x1

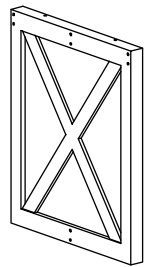




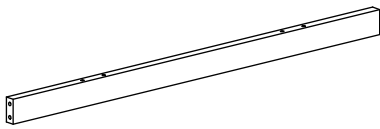

③ x2

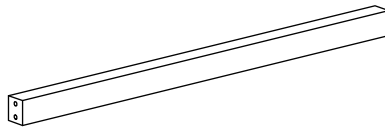


④ x3






⑤ x1

A	x4	B	x4	C	x4	D	x16	E	x1
									
Ø6x35mm		Ø15x10mm		Ø10x50mm		M7x85mm		M4x71mm	



F	x12
	
M6x75mm	

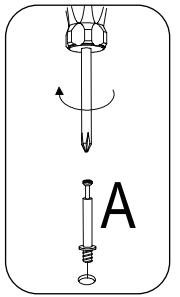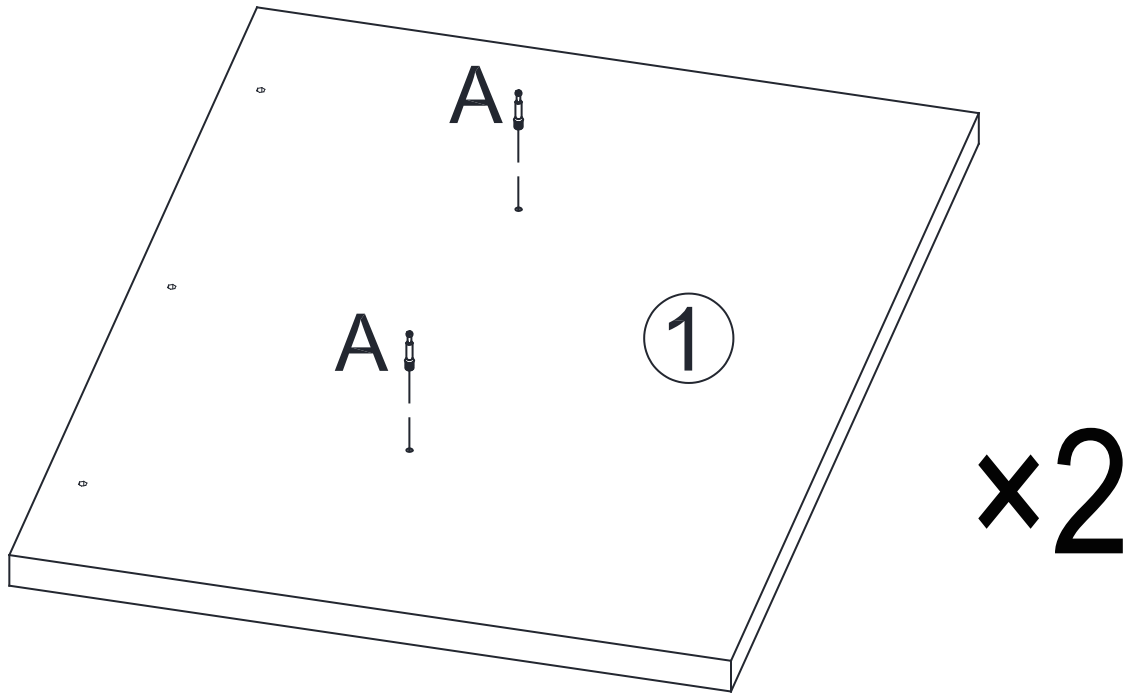

STEP 1




A	x4
	
Ø6x35mm	

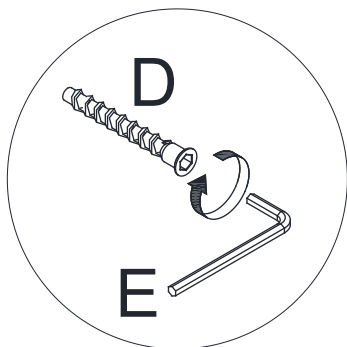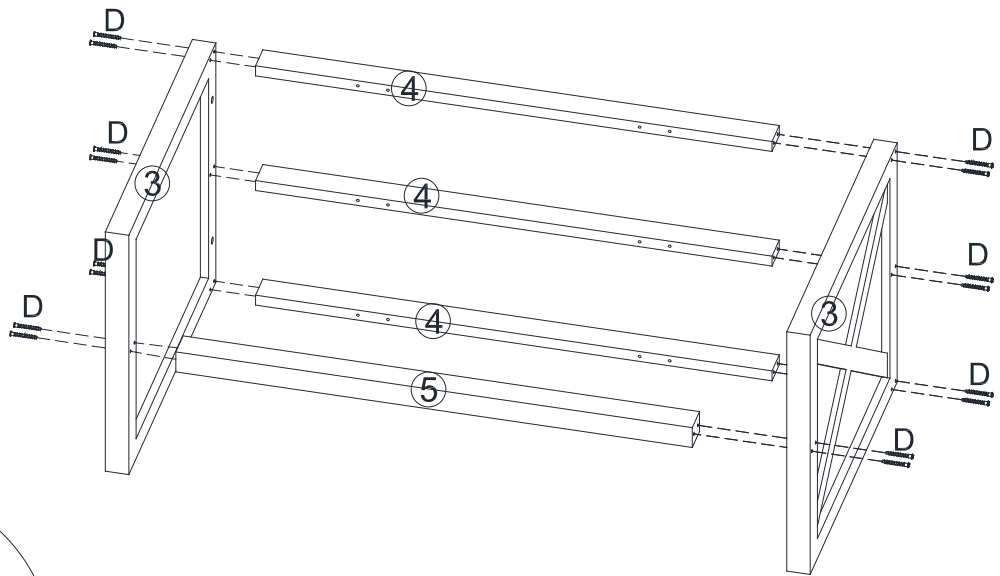
STEP 2




D	x16	E	x1
			
M7x85mm		M4x71 mm	

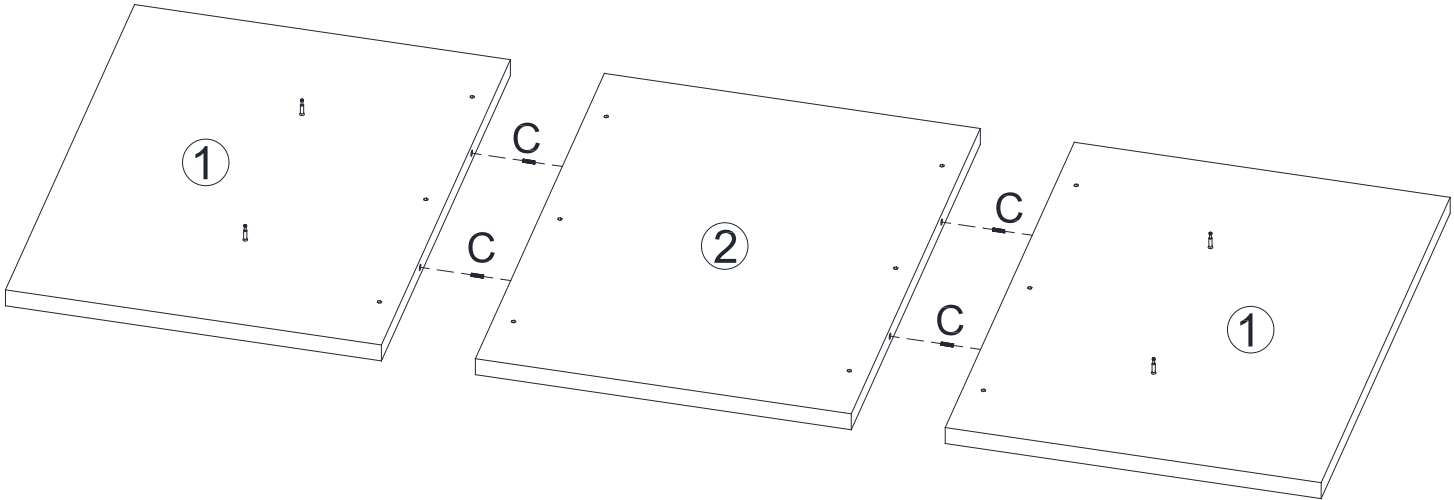


STEP 3




C	x4
	
Ø10×50mm	

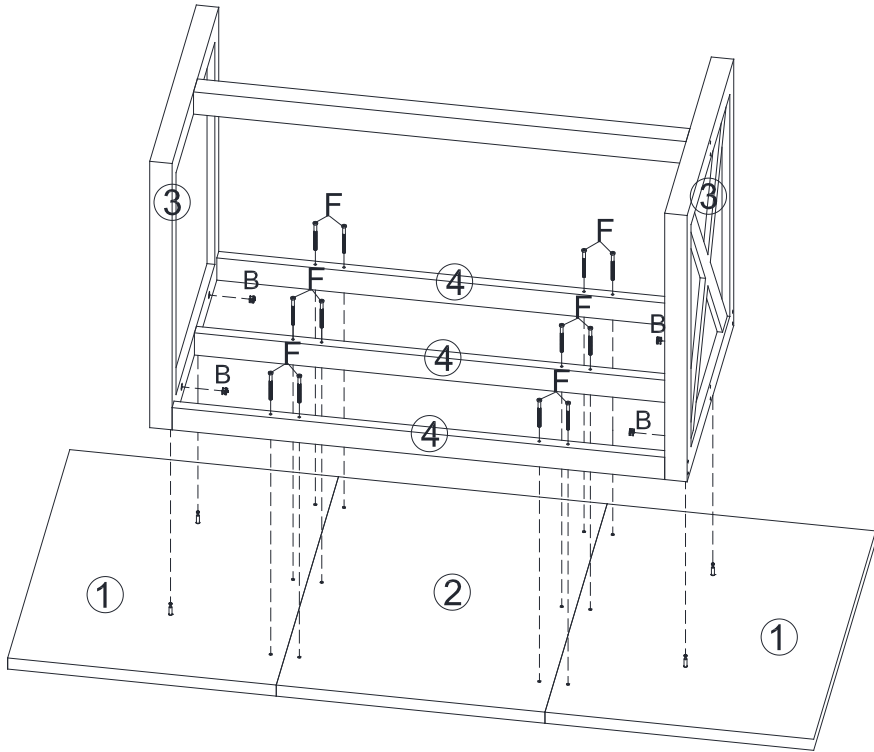STEP 4



E	x1	B	x4	F	x12
					
M4×71 mm		Ø15×10 mm		M6×75 mm	

STEP 5

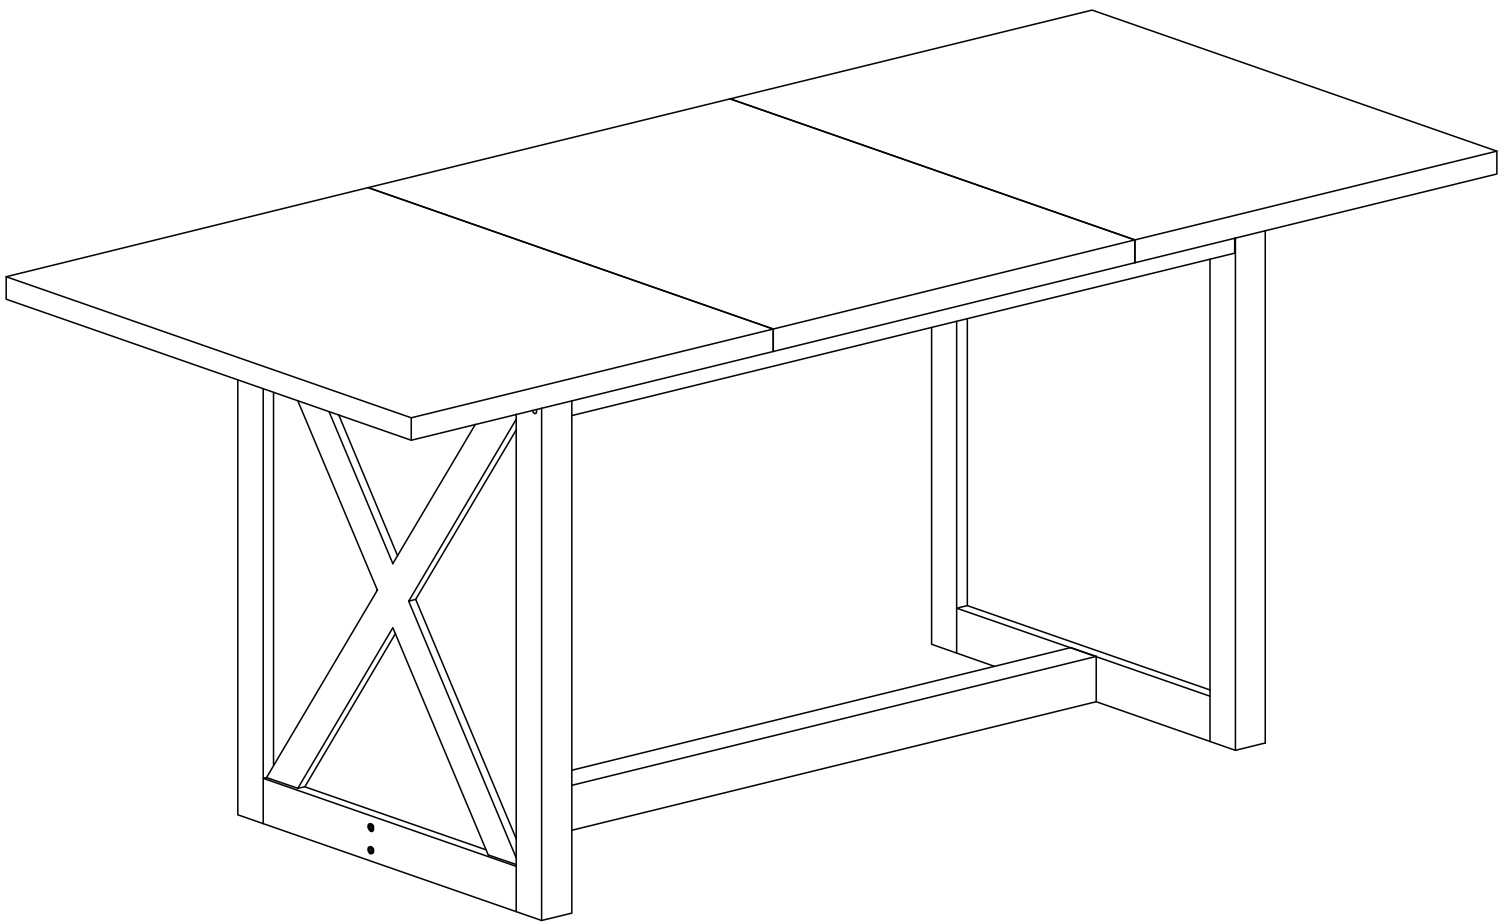

Installation Completed