


# **ASSEMBLY INSTRUCTIONS.**



LEFT ARM FACING SOFA OFF WHITE

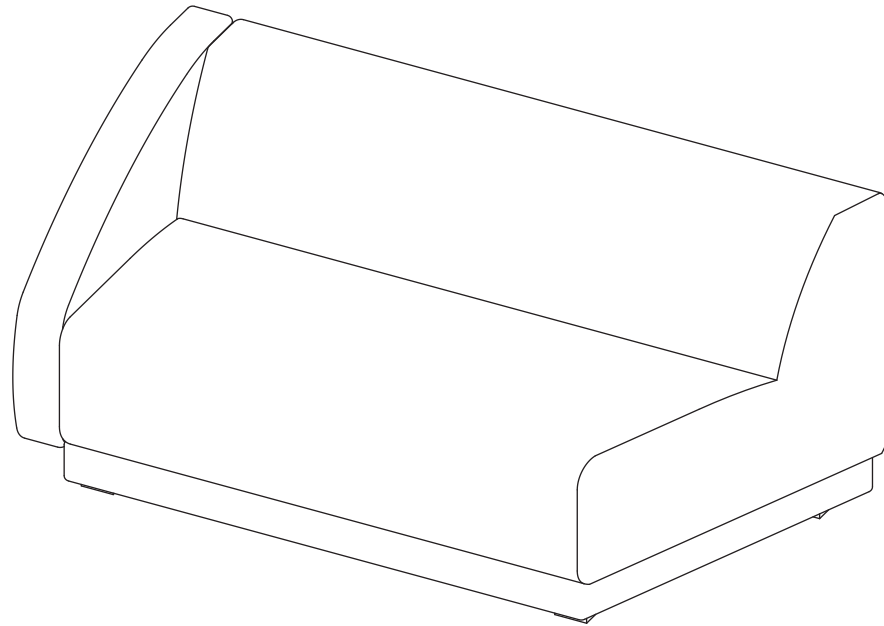







THANK YOU FOR YOUR PURCHASE!

## PARTS AND HARDWARE.

### PARTS LIST

No.	DESCRIPTION	IMAGE	Q'TY
P1	SEAT		1
P2	LEGS		4

### HARDWARE LIST


No.	DESCRIPTION	IMAGE	Q'TY
H1	BOLTS (M6-25MM)		8
H2	FLAT WASHERS (Ø11-Ø6.5-1.5MM)		8
H3	ALLEN WRENCH (K4)		1
H4	FELT PAD (70-70MM)		4
H5	MALE BRACKETS (55-43-18MM)		2
H6	SCREWS (M3-25MM)		10

## NOTES.


Thank you for purchasing this quality product! Be sure to check all packing material carefully for small part that may have come loose inside the carton during shipping.

**CAUTION:** The item is heavy, assembly should be performed by two people.


## STEP 1.

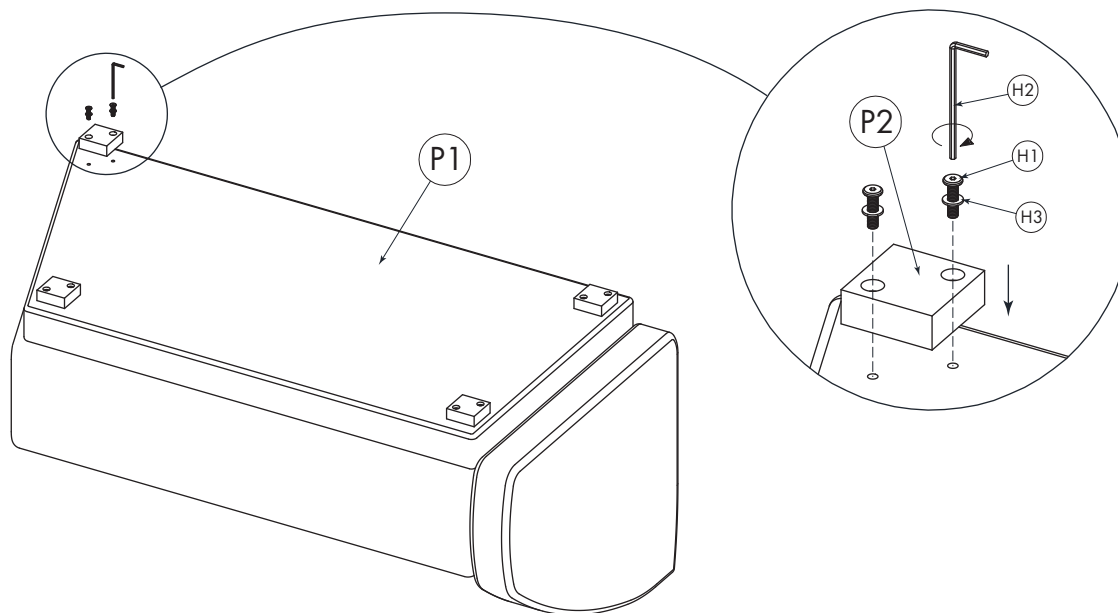


## STEP 2.

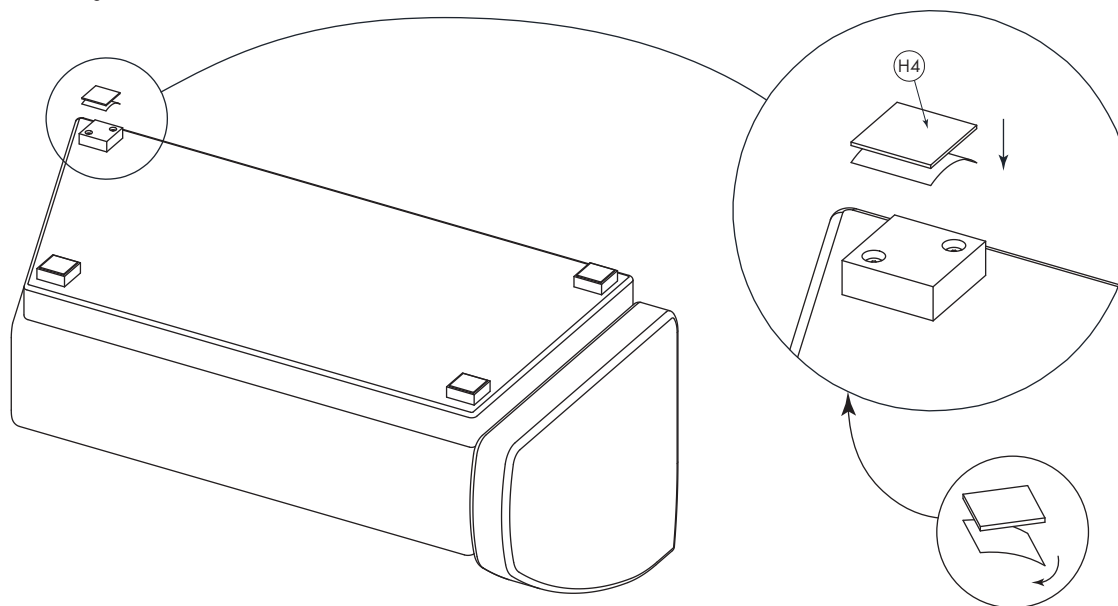


### STEP 3.

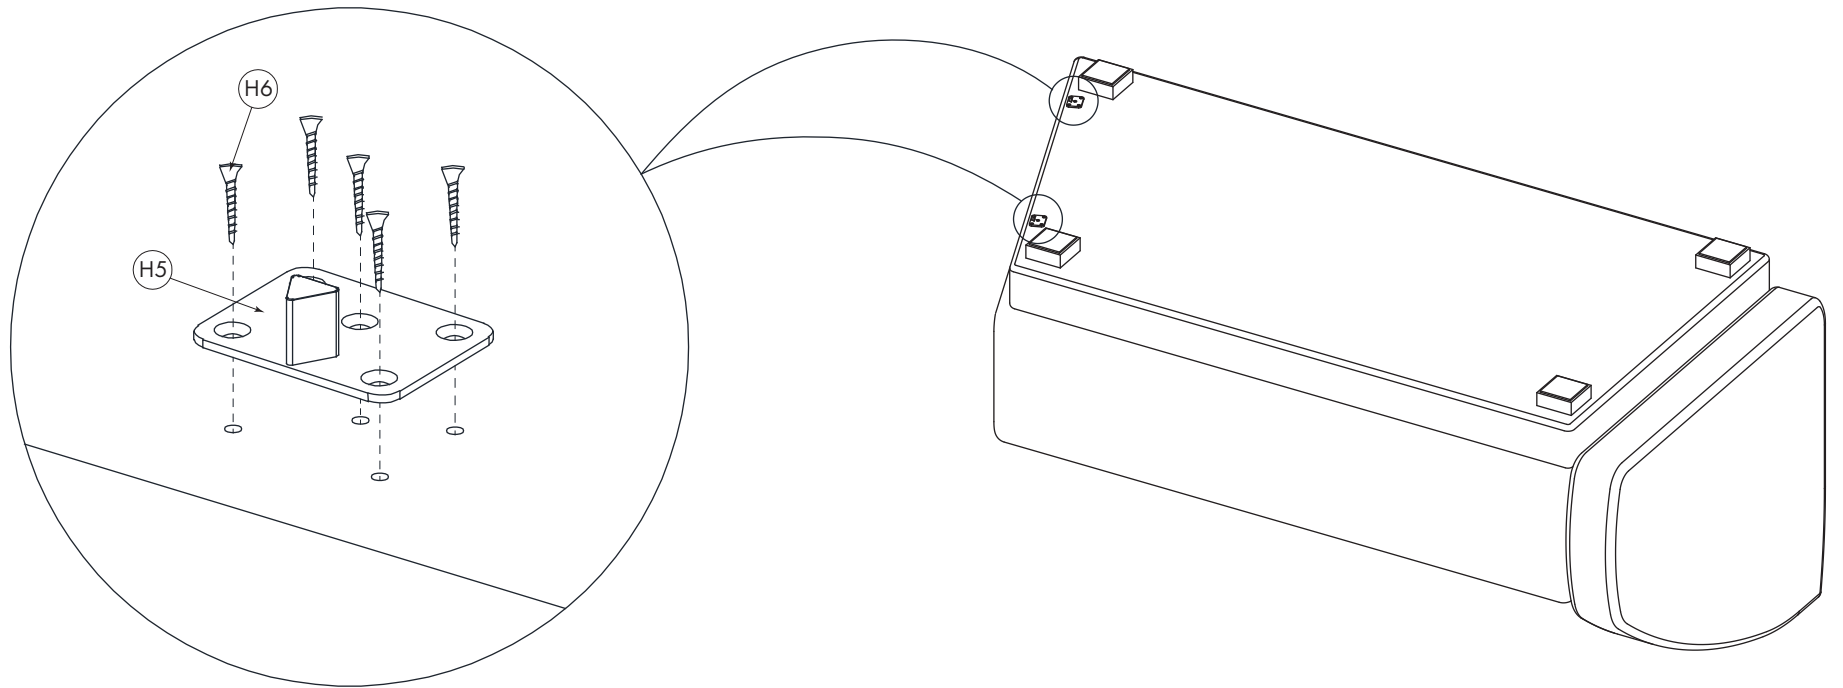


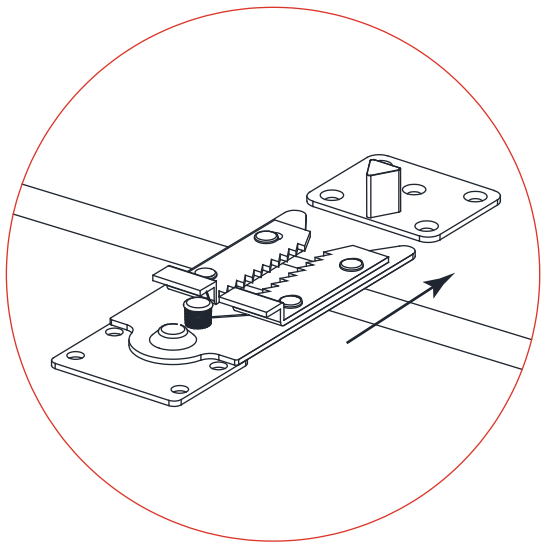


**OPTION 1**

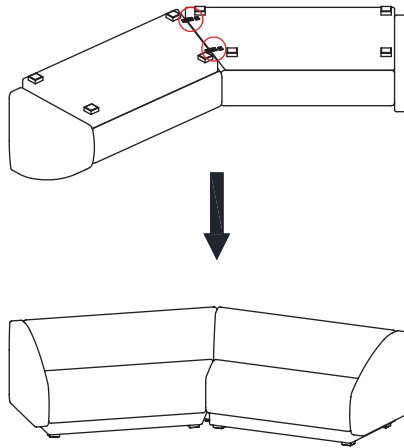


**OPTION 2**

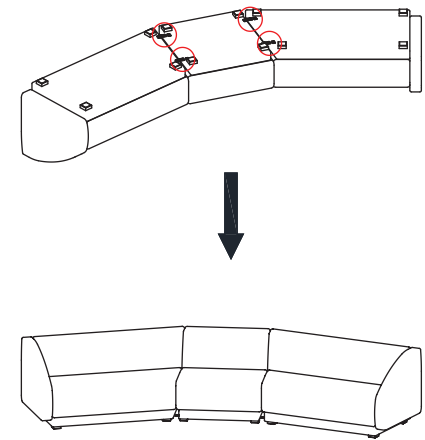

**OPTION 3**

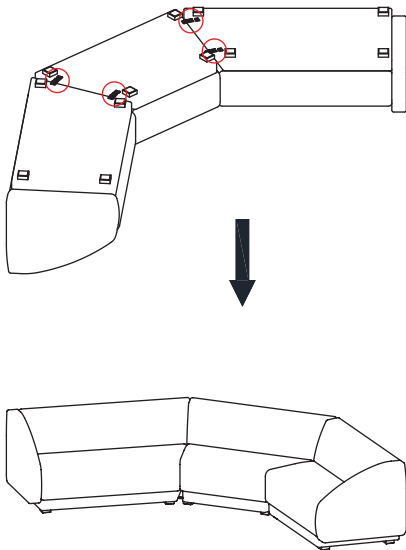

**OPTION 4**

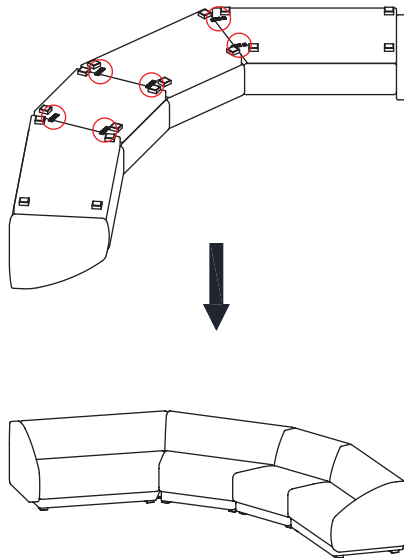

**OPTION 5**

