


# ASSEMBLY INSTRUCTIONS

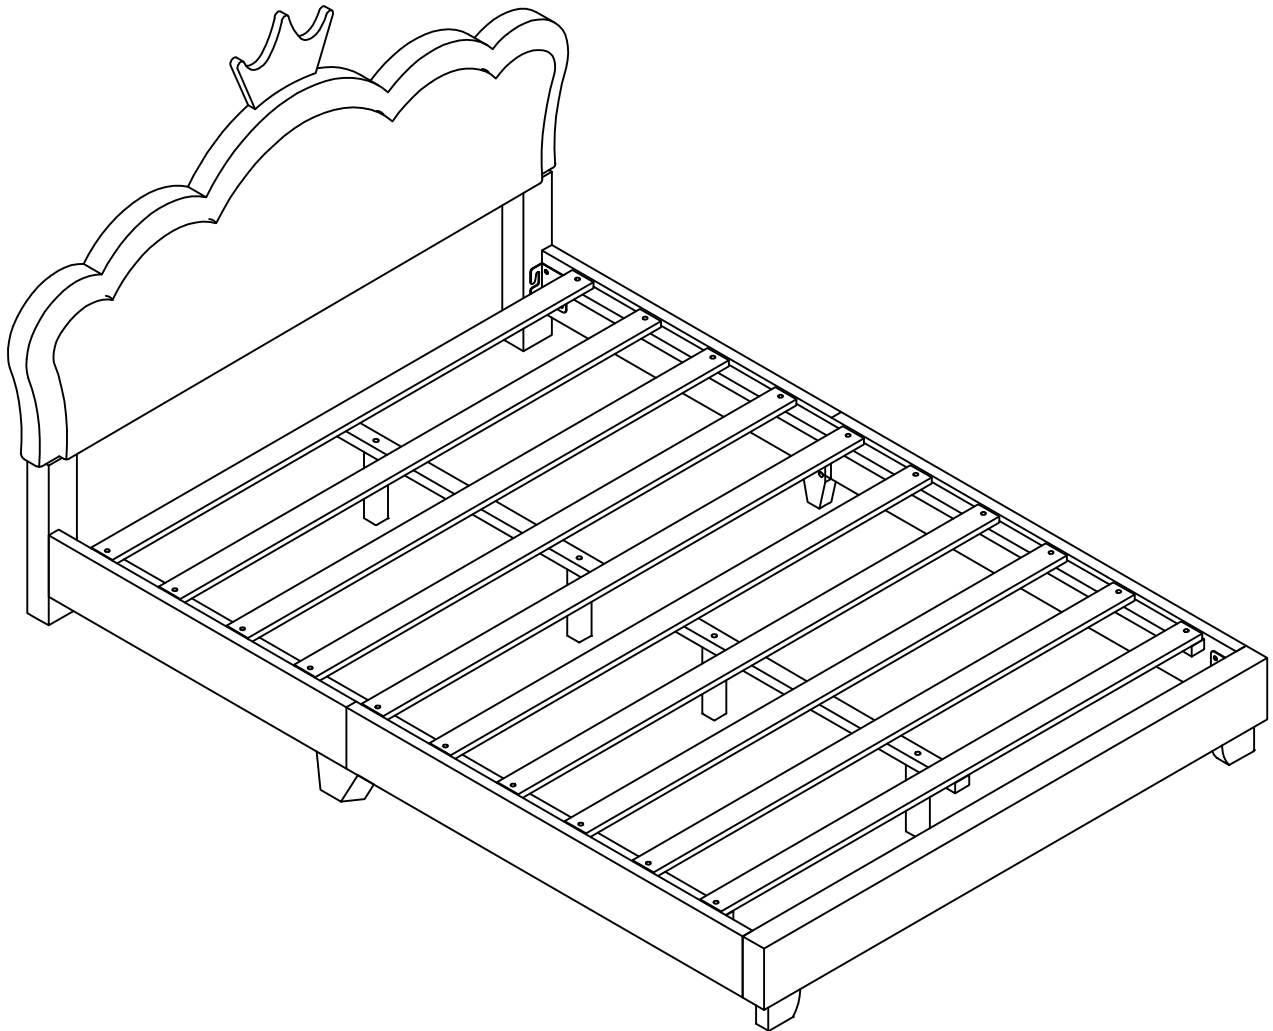


## **IMPORTANT NOTE**

**\*\*PLACE ALL PARTS ON A CLEAN AND SMOOTH SURFACE SUCH AS A RUG OR CARPET TO AVOID THE PARTS FROM BEING SCRATCHED**







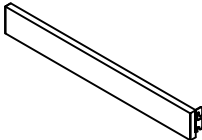
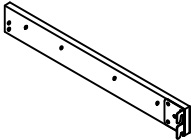

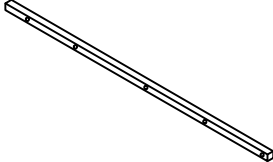
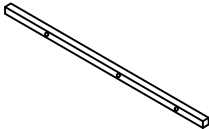



**\*\* BEFORE YOU BEGIN , KINDY FOLLOW THE ASSEMBLY INSTRUCTIONS STEP BY STEP**

**\*\*DO NOT TIGHTEN ALL SCREWS AND BOLTS UNTIL THE BED IS FULLY SET-UP**

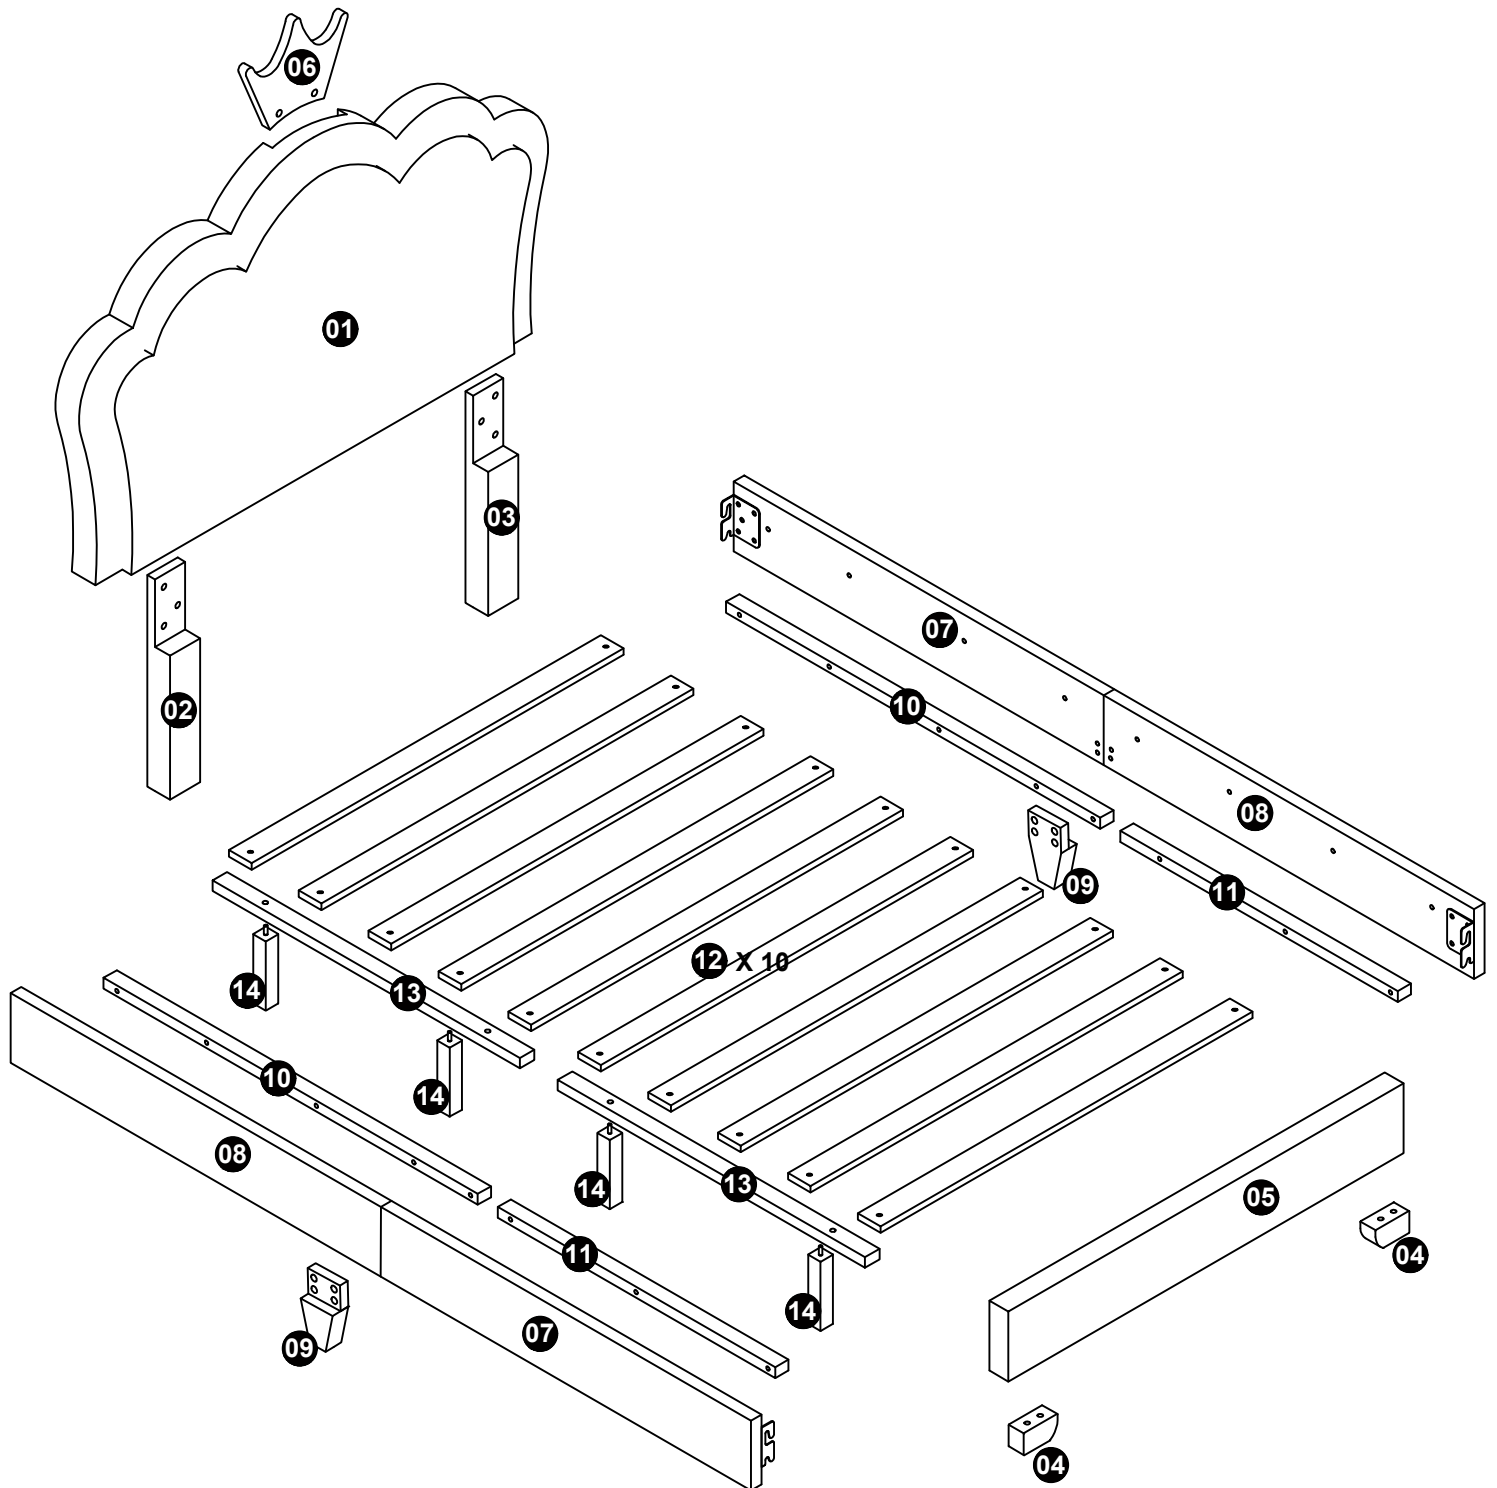








# ASSEMBLY INSTRUCTIONS

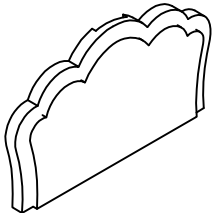

# ASSEMBLY INSTRUCTIONS


<div data-bbox="39 248 79 291">1</div>  <p>Headboard Panel (1 pc)</p>	<div data-bbox="544 248 584 291">2</div>  <p>Left Headboard leg( 1 pc )</p>	<div data-bbox="1048 248 1088 291">3</div>  <p>Right Headboard Leg( 1 pc )</p>
<div data-bbox="39 562 79 604">4</div>  <p>Leg (2 pcs)</p>	<div data-bbox="544 562 584 604">5</div>  <p>Footboard Panel (1 pc)</p>	<div data-bbox="1048 562 1088 604">6</div>  <p>Headboard crown (1 pc)</p>
<div data-bbox="39 875 79 918">7</div>  <p>Left Lower Rail (2 pcs)</p>	<div data-bbox="544 875 584 918">8</div>  <p>Right Lower Rail (2pcs)</p>	<div data-bbox="1048 875 1088 918">9</div>  <p>Rail support legs (2pcs)</p>
<div data-bbox="39 1189 79 1232">10</div>  <p>Bed Support Bar (2 pcs)</p>	<div data-bbox="544 1189 584 1232">11</div>  <p>Bed Support Bar (2 pcs)</p>	<div data-bbox="1048 1189 1088 1232">12</div>  <p>Roll Slat (10 pcs)</p>
<div data-bbox="39 1503 79 1545">13</div>  <p>Center Rail( 2 pcs )</p>	<div data-bbox="544 1503 584 1545">14</div>  <p>Support leg (4pcs)</p>	





# ASSEMBLY INSTRUCTIONS

<div data-bbox="39 264 79 302">A</div> <div data-bbox="231 414 368 470"></div> <div data-bbox="193 580 384 629"><p><b>Short Bolt (8pcs)</b> (Ø 5/16 "X25mm)</p></div>	<div data-bbox="544 264 584 302">B</div> <div data-bbox="697 396 844 443"></div> <div data-bbox="668 580 860 629"><p><b>Long Bolt (2 pcs)</b> (Ø 5/16 "X32mm)</p></div>	<div data-bbox="1048 264 1088 302">C</div> <div data-bbox="1217 396 1382 443"></div> <div data-bbox="1204 580 1409 629"><p><b>Long Bolt (14 pcs)</b> (Ø 5/16 "X38mm)</p></div>
<div data-bbox="39 633 79 672">D</div> <div data-bbox="158 703 387 768"></div> <div data-bbox="188 943 387 992"><p><b>Long Bolt (16pcs)</b> (Ø 5/16 "X45mm)</p></div>	<div data-bbox="544 633 584 672">E</div> <div data-bbox="694 761 940 826"></div> <div data-bbox="740 943 925 992"><p><b>Long Bolt (2pcs)</b> (Ø 5/16 "X50mm)</p></div>	<div data-bbox="1048 633 1088 672">F</div> <div data-bbox="1267 754 1425 831"></div> <div data-bbox="1200 943 1422 992"><p><b>Allen Wrench (1 pc)</b> (M4x75mm x32mm)</p></div>
<div data-bbox="39 1003 79 1041">G</div> <div data-bbox="226 1108 394 1189"></div> <div data-bbox="173 1303 408 1352"><p><b>Flat Washer (42 pcs)</b> (Ø 5/16 "-RBW )</p></div>	<div data-bbox="544 1003 584 1041">H</div> <div data-bbox="715 1090 863 1184"></div> <div data-bbox="679 1303 946 1352"><p><b>Spring Washer (42 pcs)</b> (Ø 5/16 "-RBW )</p></div>	<div data-bbox="1048 1003 1088 1041">I</div> <div data-bbox="1203 1128 1406 1178"></div> <div data-bbox="1160 1308 1447 1357"><p><b>Flat Head Screw (24 pcs)</b> ( m4x30mm-RBW)</p></div>

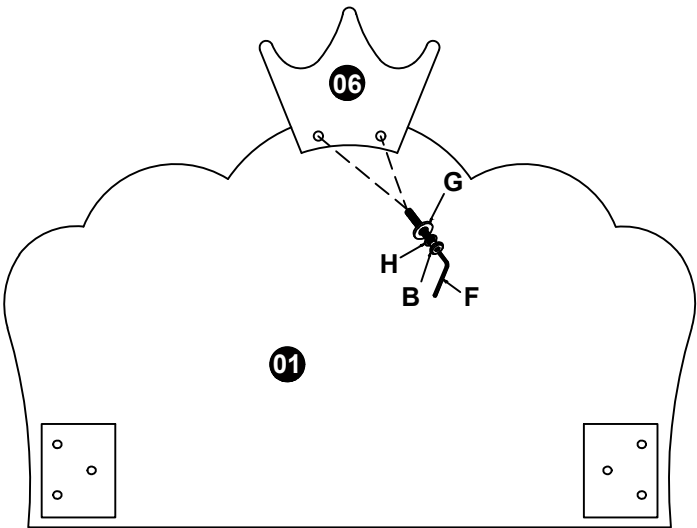
# ASSEMBLY INSTRUCTIONS





## STEP 1

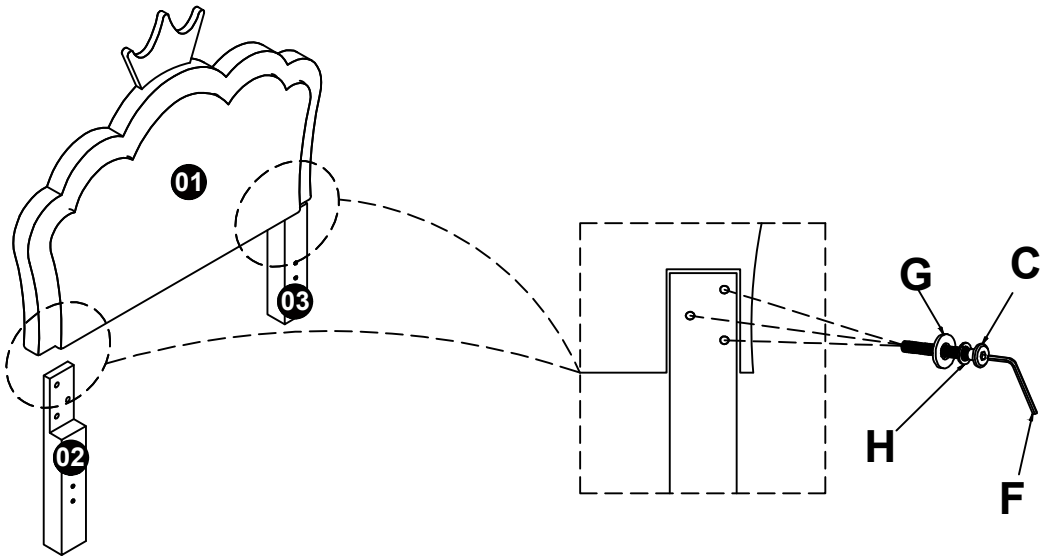

B	<b>Bolt</b> (Ø 5/16 "X32mm)		2pcs	G	<b>Flat Washer</b> ( Ø 5/16 "-RBW )		2pcs
F	<b>Allen Wrench</b> (M4x75mm x32mm)		1pc	H	<b>Spring Washer</b> ( Ø 5/16 "-RBW )		2pcs


## STEP 2







C	<b>Bolt</b> (Ø 5/16 "X38mm)		6pcs	G	<b>Flat Washer</b> ( Ø 5/16 "-RBW )		6pcs
F	<b>Allen Wrench</b> (M4x75mm x32mm)		1pc	H	<b>Spring Washer</b> ( Ø 5/16 "-RBW )		6pcs

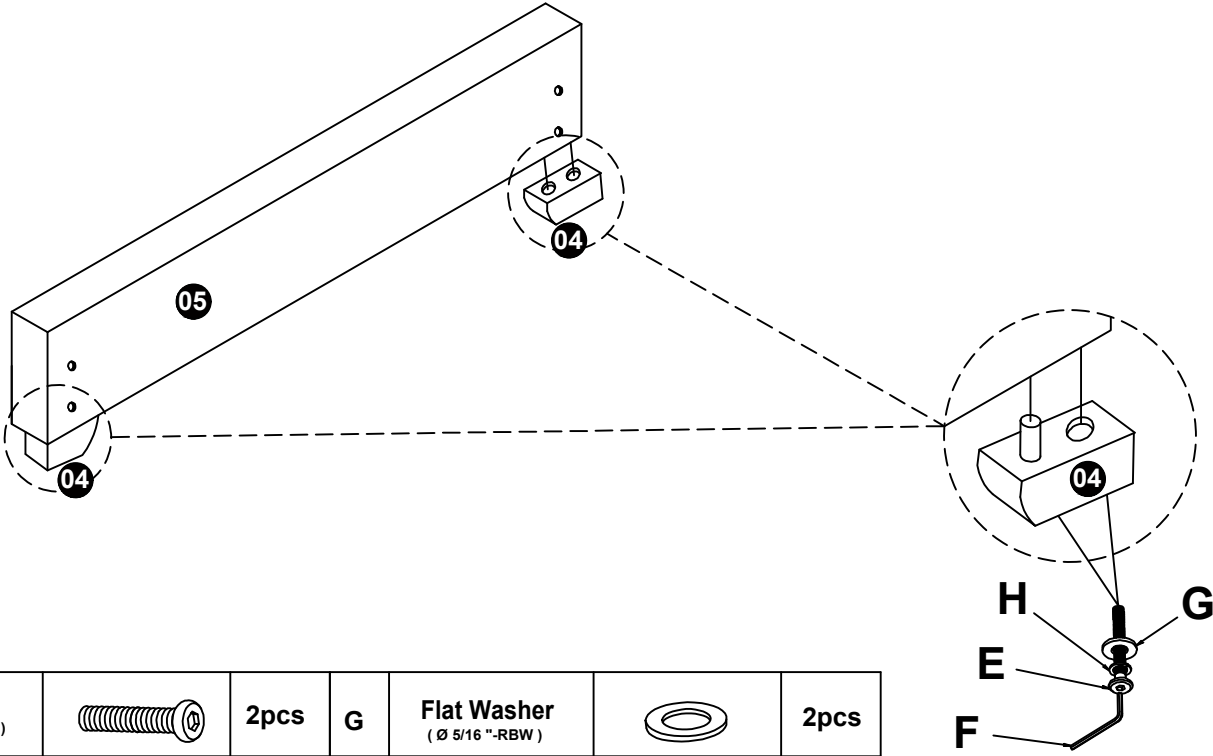
# ASSEMBLY INSTRUCTIONS





## STEP 3

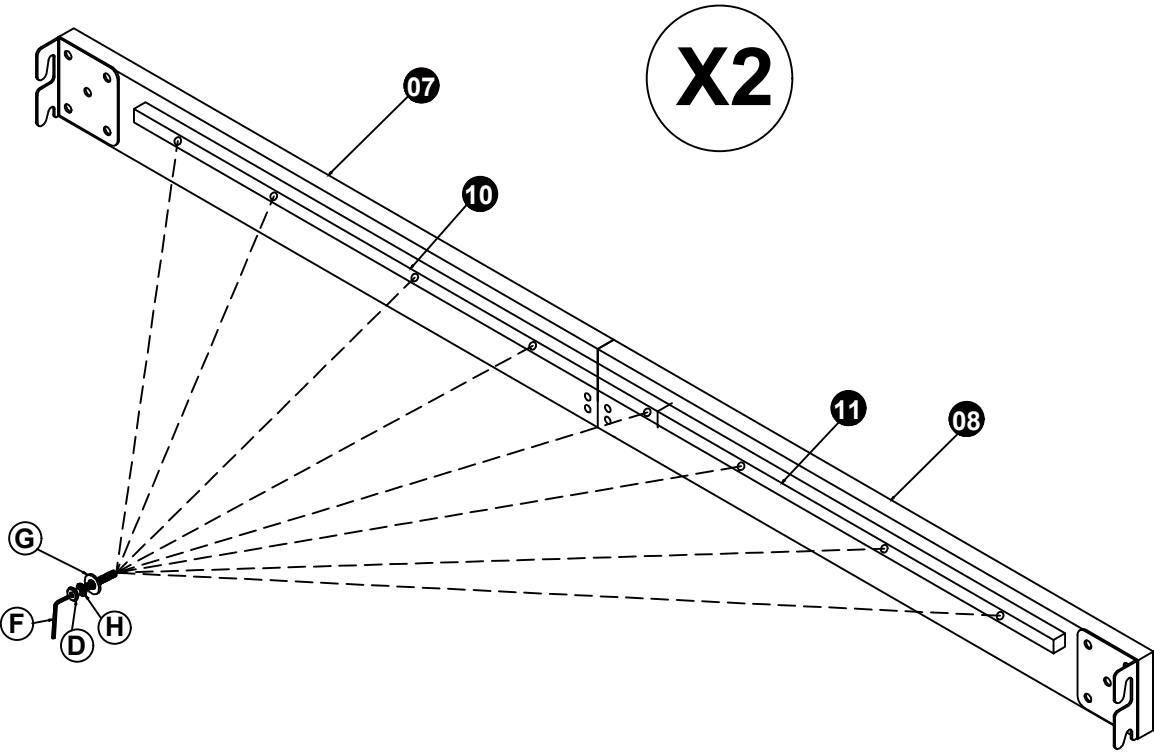

E	Bolt (Ø 5/16 "X50mm)		2pcs	G	Flat Washer (Ø 5/16 "-RBW)		2pcs
F	Allen Wrench (M4x75mm x32mm)		1pc	H	Spring Washer (Ø 5/16 "-RBW)		2pcs


## STEP 4







D	Bolt (Ø 5/16 "X45mm)		16pcs	G	Flat Washer (Ø 5/16 "-RBW)		16pcs
F	Allen Wrench (M4x75mm x32mm)		1pc	H	Spring Washer (Ø 5/16 "-RBW)		16pcs

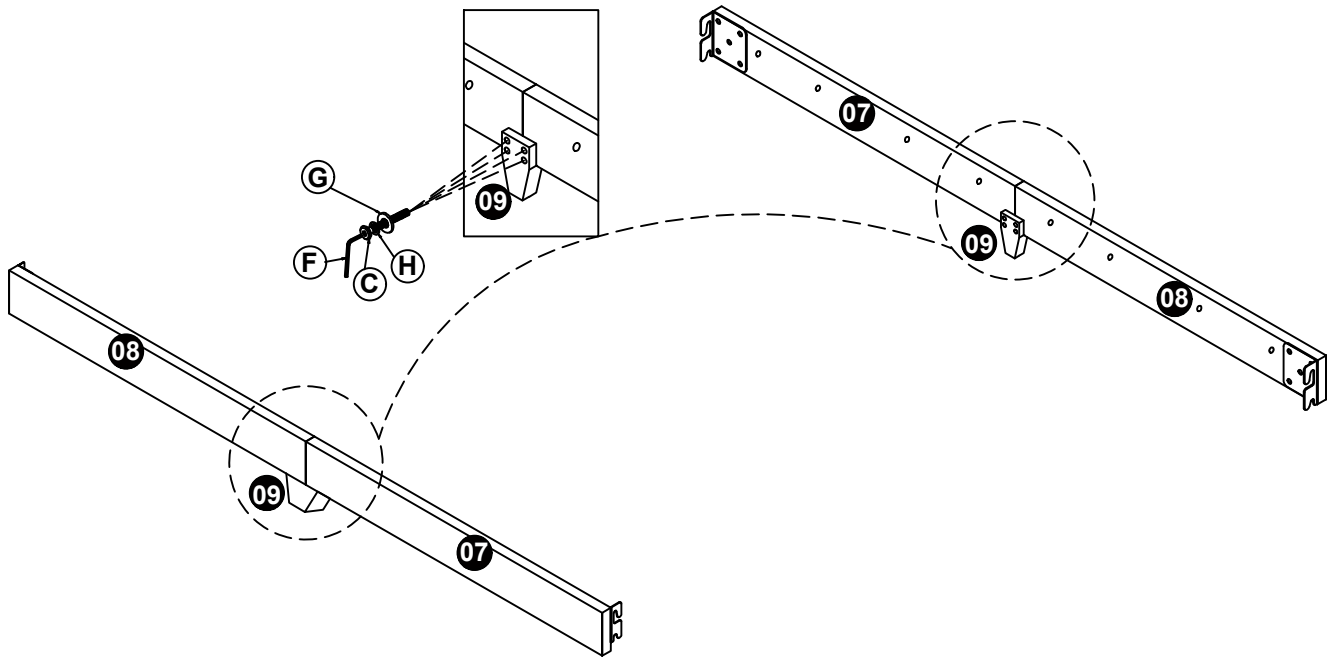
# ASSEMBLY INSTRUCTIONS





## STEP 5

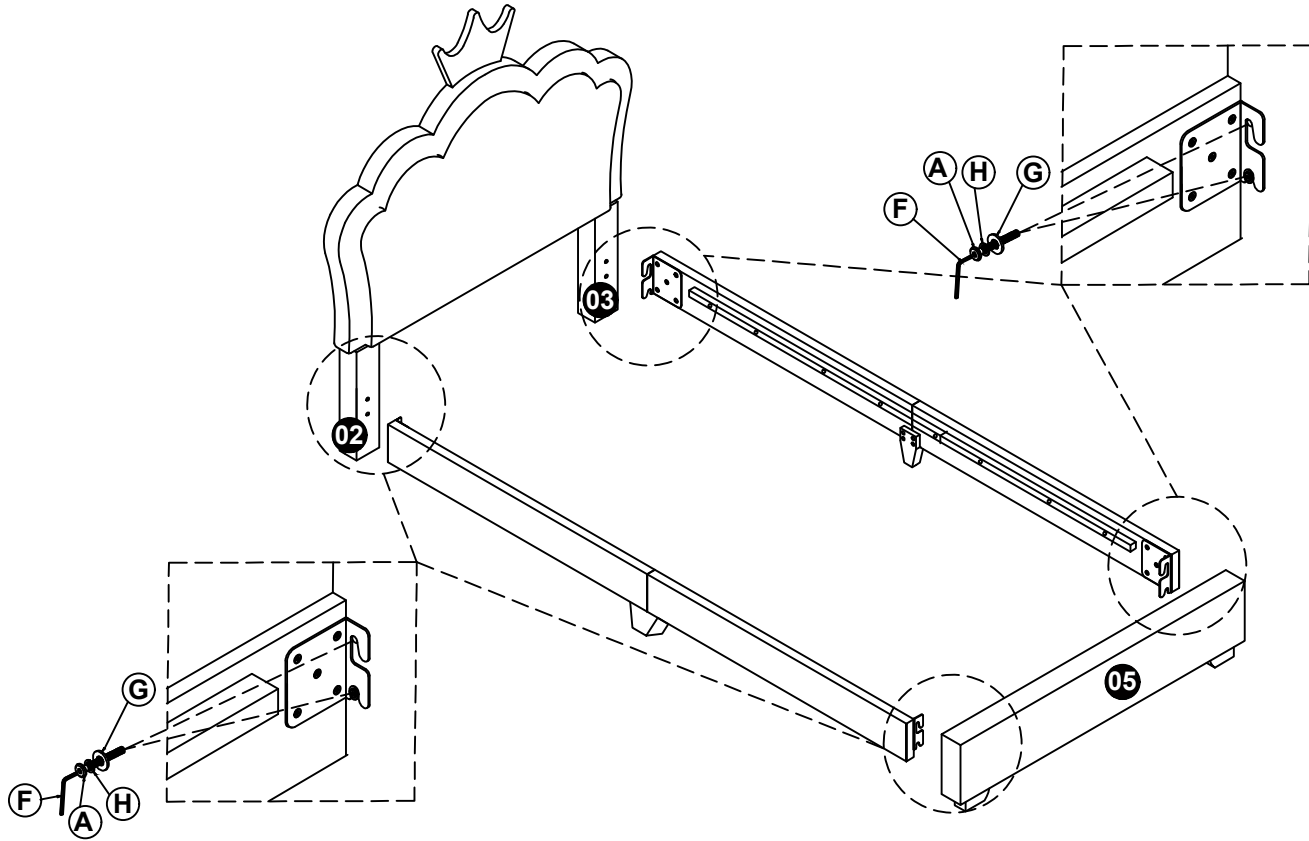

C	<b>Bolt</b> (Ø 5/16 "X38mm)		8pcs	G	<b>Flat Washer</b> (Ø 5/16 "-RBW)		8pcs
F	<b>Allen Wrench</b> (M4x75mm x32mm)		1pc	H	<b>Spring Washer</b> (Ø 5/16 "-RBW)		8pcs


## STEP 6




A	<b>Bolt</b> (Ø 5/16 "X25mm)		8pcs	G	<b>Flat Washer</b> (Ø 5/16 "-RBW)		8pcs
F	<b>Allen Wrench</b> (M4x75mm x32mm)		1pc	H	<b>Spring Washer</b> (Ø 5/16 "-RBW)		8pcs

# ASSEMBLY INSTRUCTIONS

## STEP 7

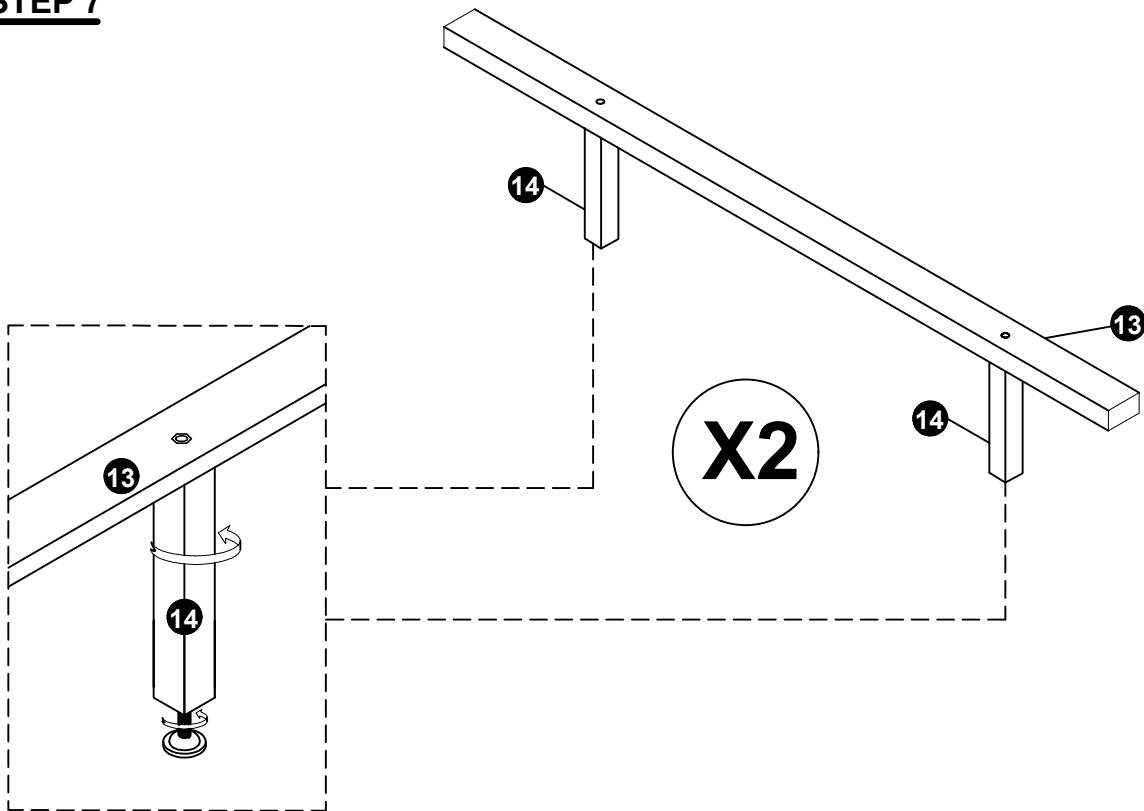


## STEP 8

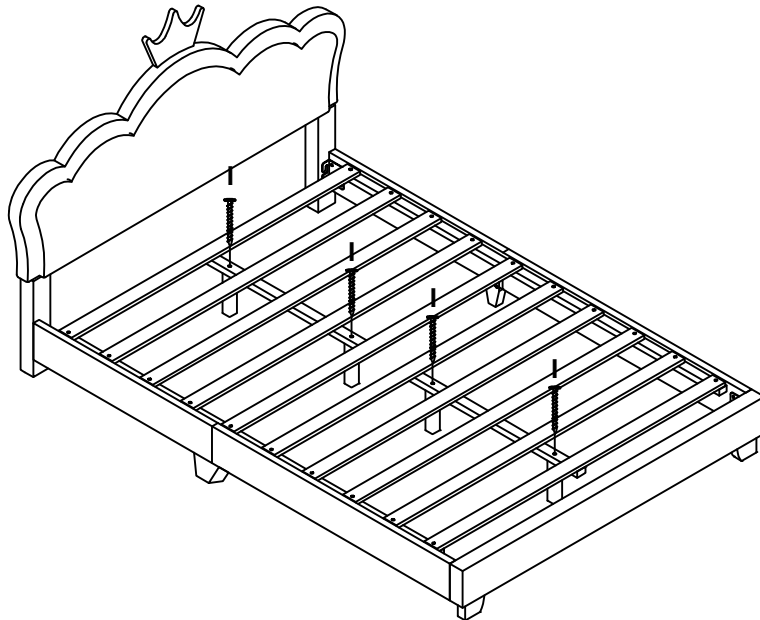

I	Flat Head Screw ( m4x30mm-RBW)		4pcs
---	-----------------------------------	---	------

# ASSEMBLY INSTRUCTIONS

## STEP 9

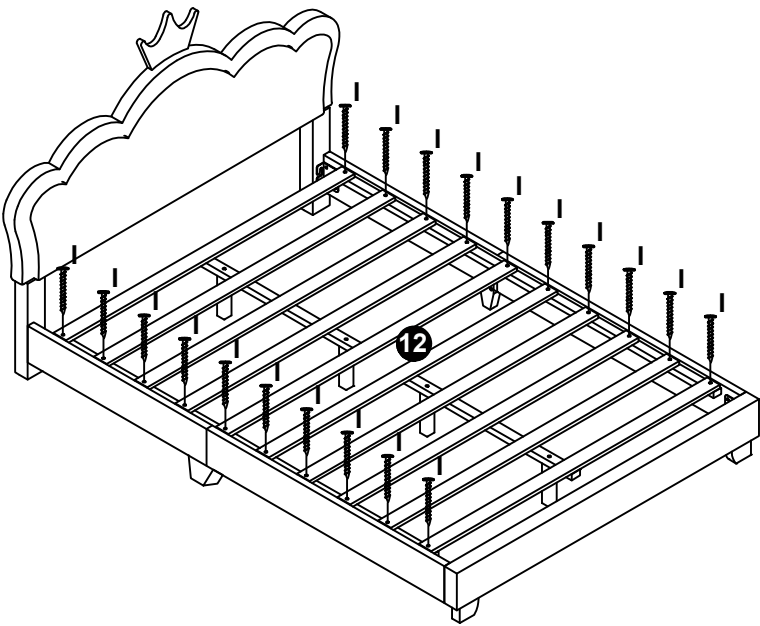

I	Flat Head Screw ( m4x30mm-RBW)		20pcs
---	-----------------------------------	---	-------

## STEP 10 COMPLETE

