


Assembly Instruction

INSTRUCTION DE MONTAGE
MONTAGEANLEITUNG
SAMLEVEJLEDNING

**MAKE SURE THE LETTERS
MATCH BEFORE ASSEMBLING
NEED ASSEMBLY ASSISTANCE? CALL US**

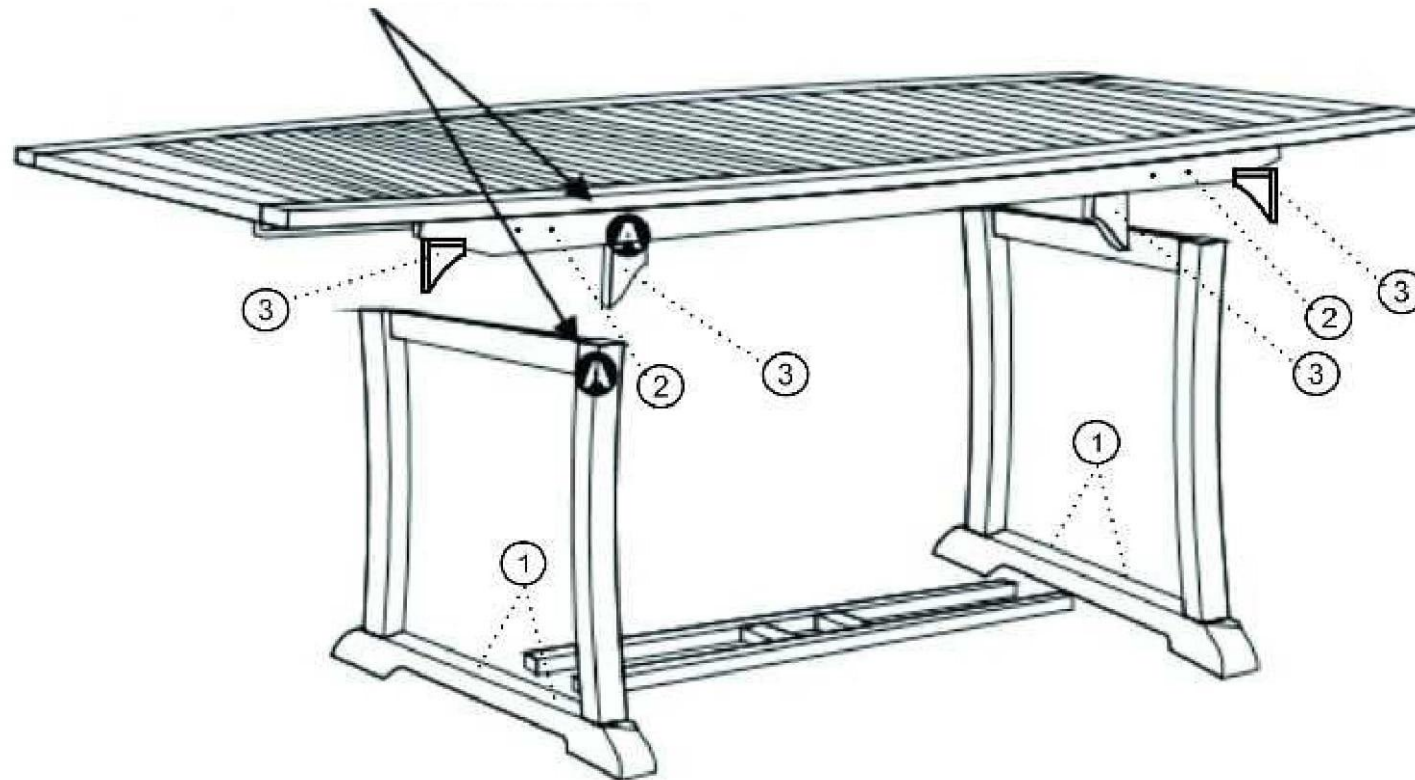

**Make sure to use Gorilla Glue (Not Included)
on all wood joints before assembly**


Hardware



1. Custom Bolt 40 Mm (4 Pcs)



2. Custom Bolt 25 Mm (4 Pcs)



3. Screw 40 Mm (8 Pcs)

Tool



Socket Wrench 4m/14 Ft

Total Section

4 Section