


Assembly Instruction

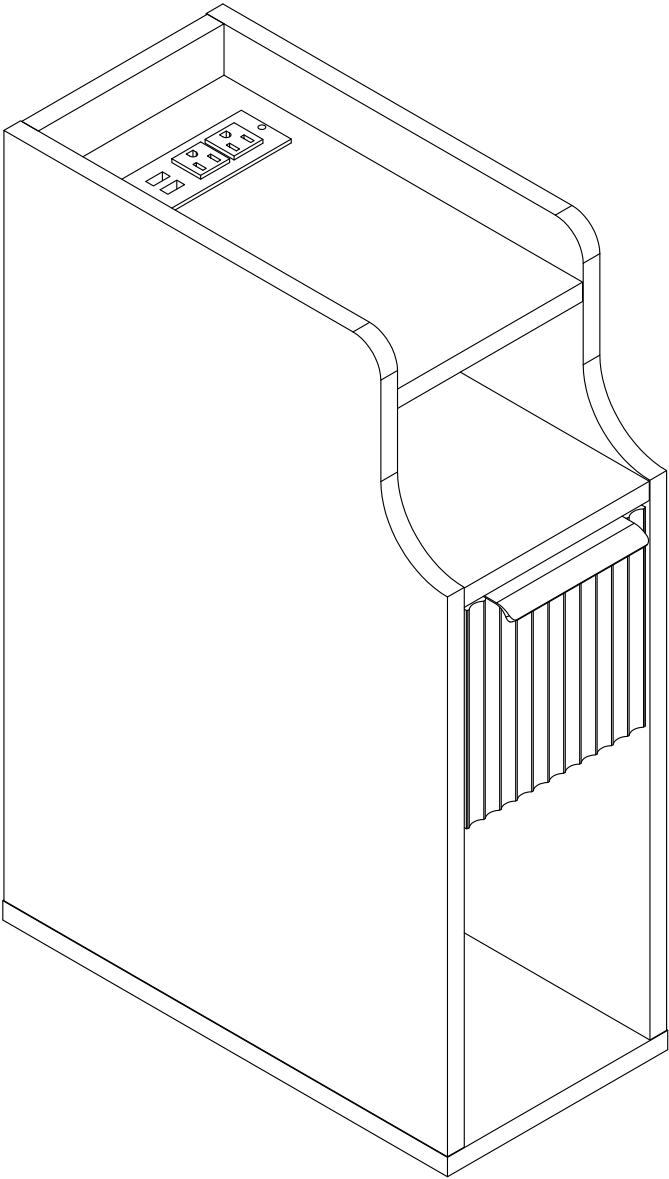

Scan QR Code for Assembly Video












Scan this QR code to watch the step-by-step assembly video.

Follow the video instructions to complete installation quickly and correctly. If you cannot scan the code, please copy and open the YouTube link below in your browser:

<https://youtu.be/KIXjByjflQg>



Keep small parts out of reach of children !

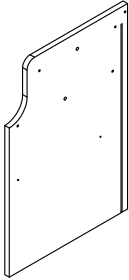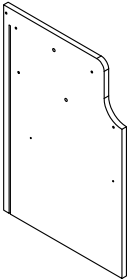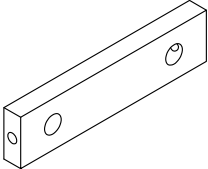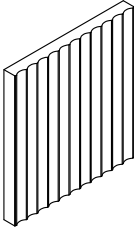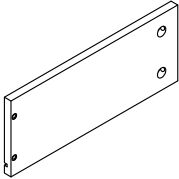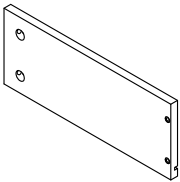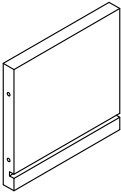① 	② 	③ 	④ 
1PC	1PC	1PC	1PC
⑤ 	⑥ 	⑦ 	⑧ 
1PC	1PC	1PC	1PC
⑨ 	⑩ 	⑪ 	⑫ 
1PC	1PC	1PC	1PC


A	X14	B	X14	C	X14	D	X4	E	X1	F	X5	G	X6	H	X4	I	X1
																	
M6x35mm				M3.5x12mm		M3x16mm		4mm		M5x40mm							
J	X5	K	X1	M	X1	N	X1	O	X1	P	X2	Q	X4	L	X1	R	X1
																	
M4x35mm						M4x12mm								CL DL		DR CR	


Cam Lock Fastening System

Insert the cam bolt into the hole first,then insert the cam lock and lock it.

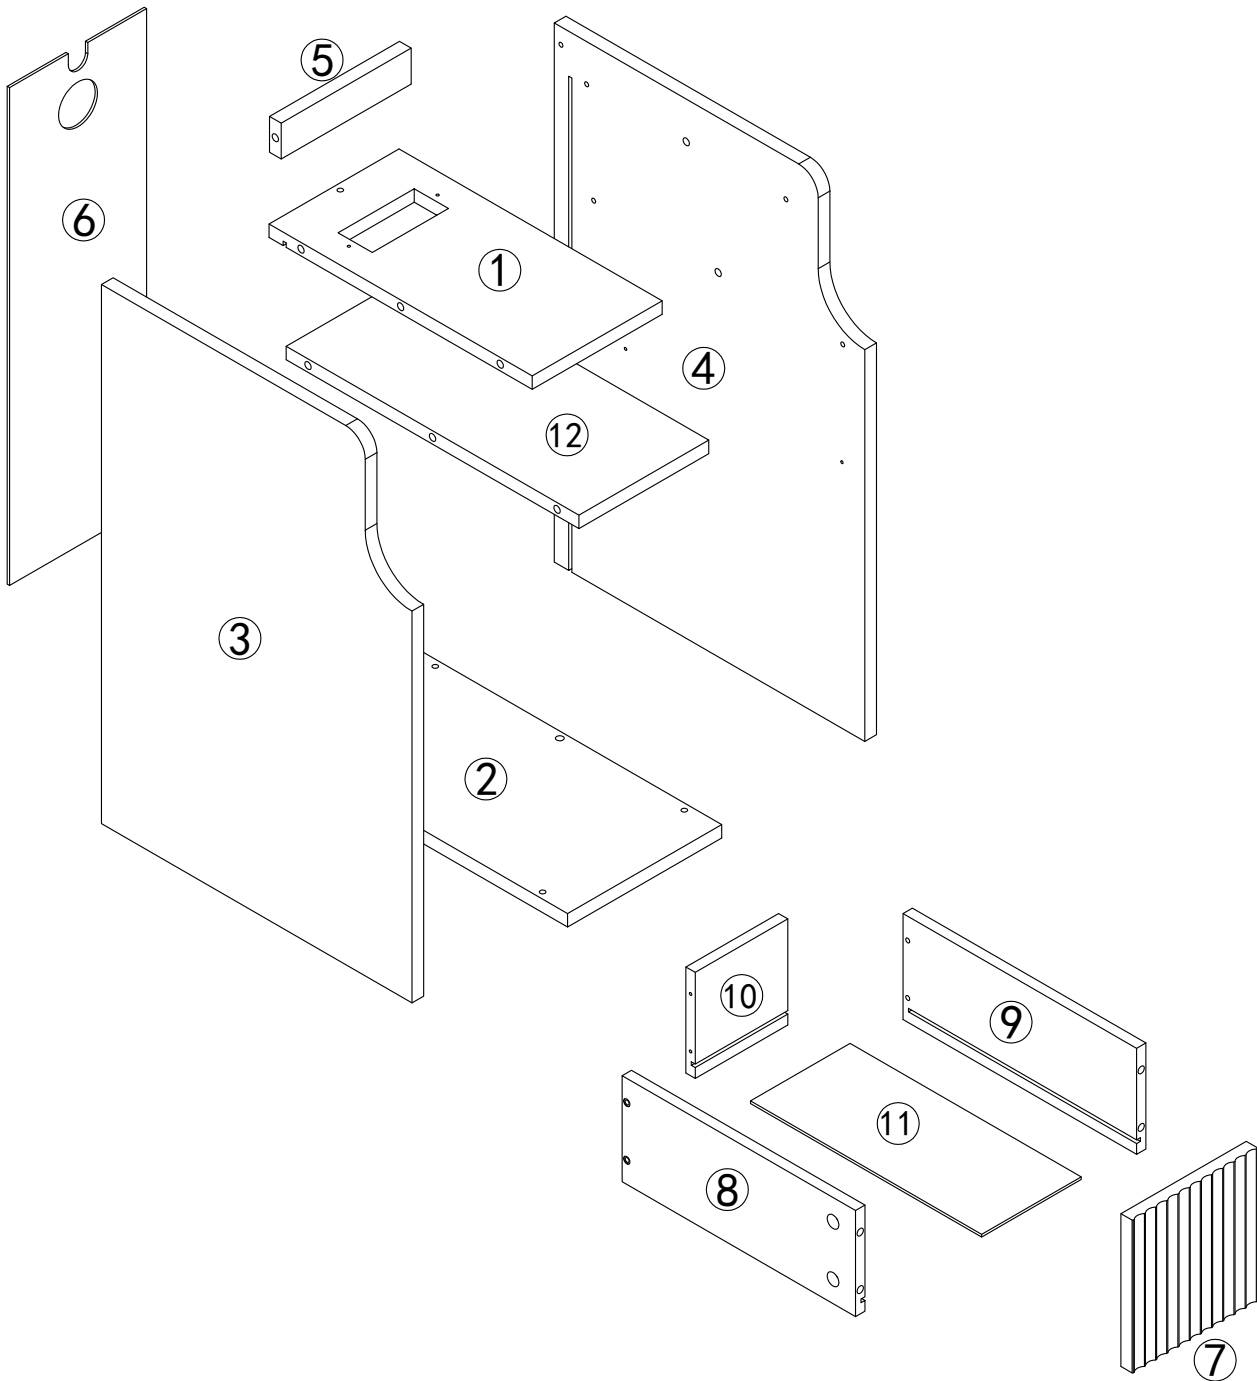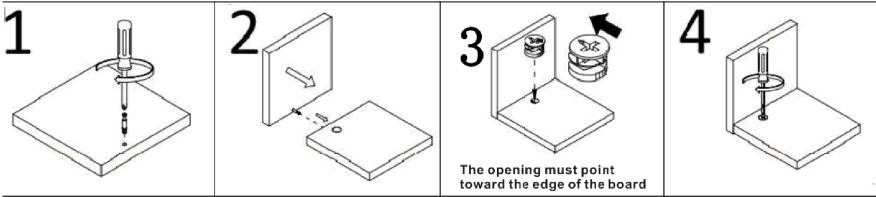


1

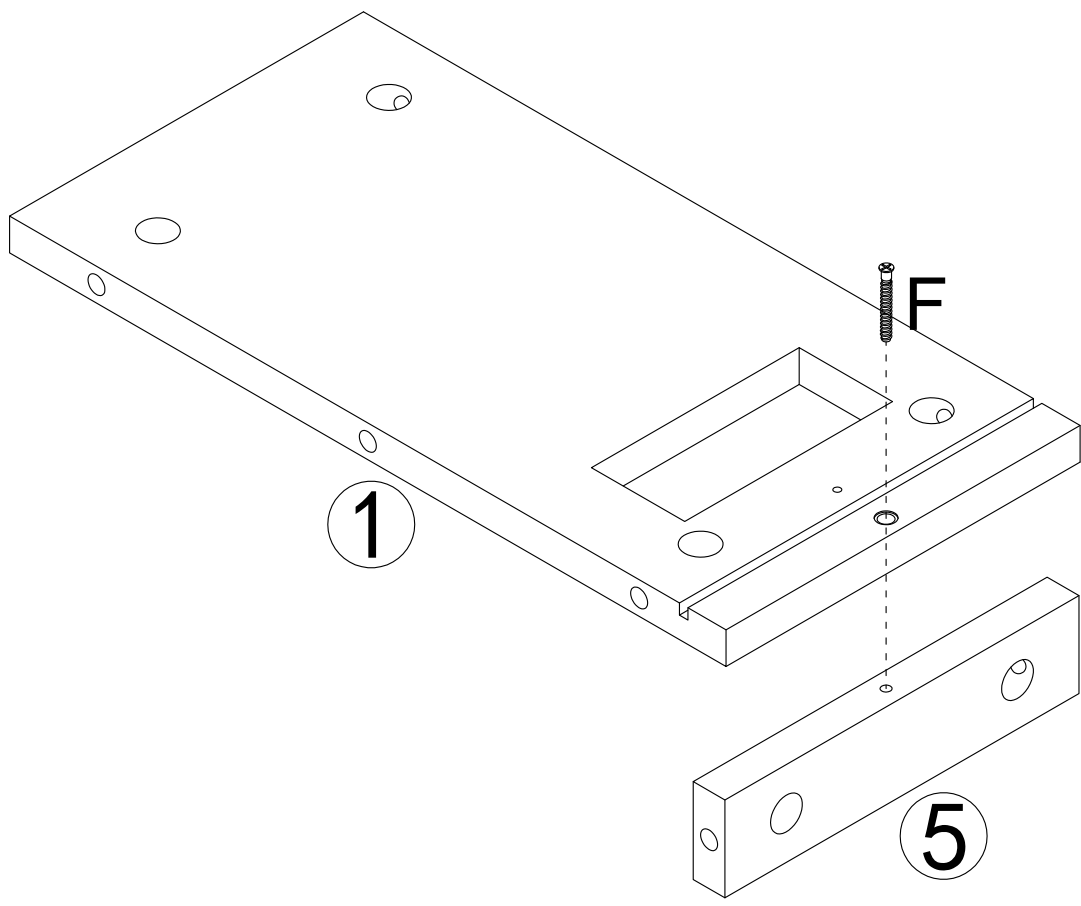

F	X1
	
M5x40mm	


2

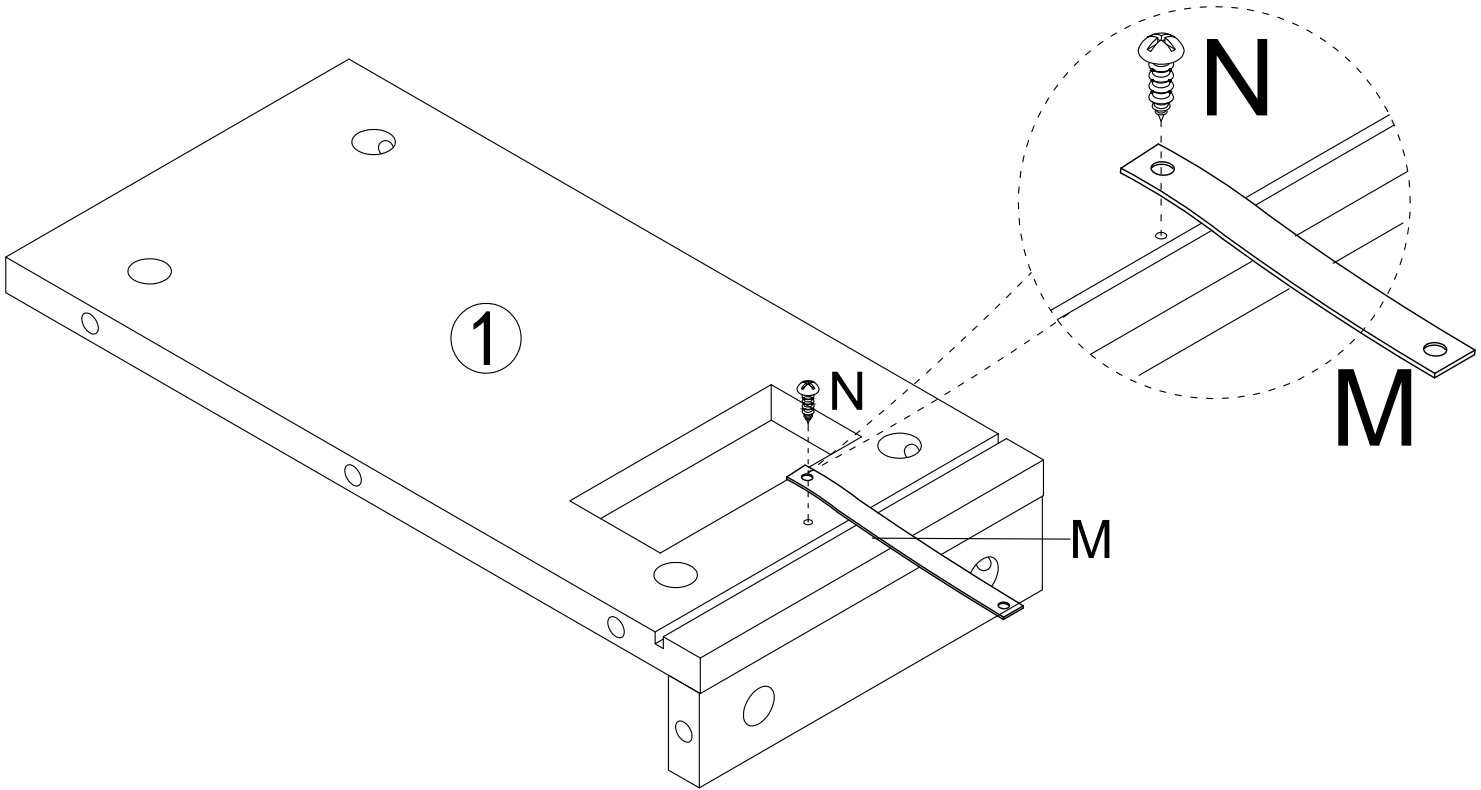

M	X1
	


I	X1
	
M4x12mm	

3

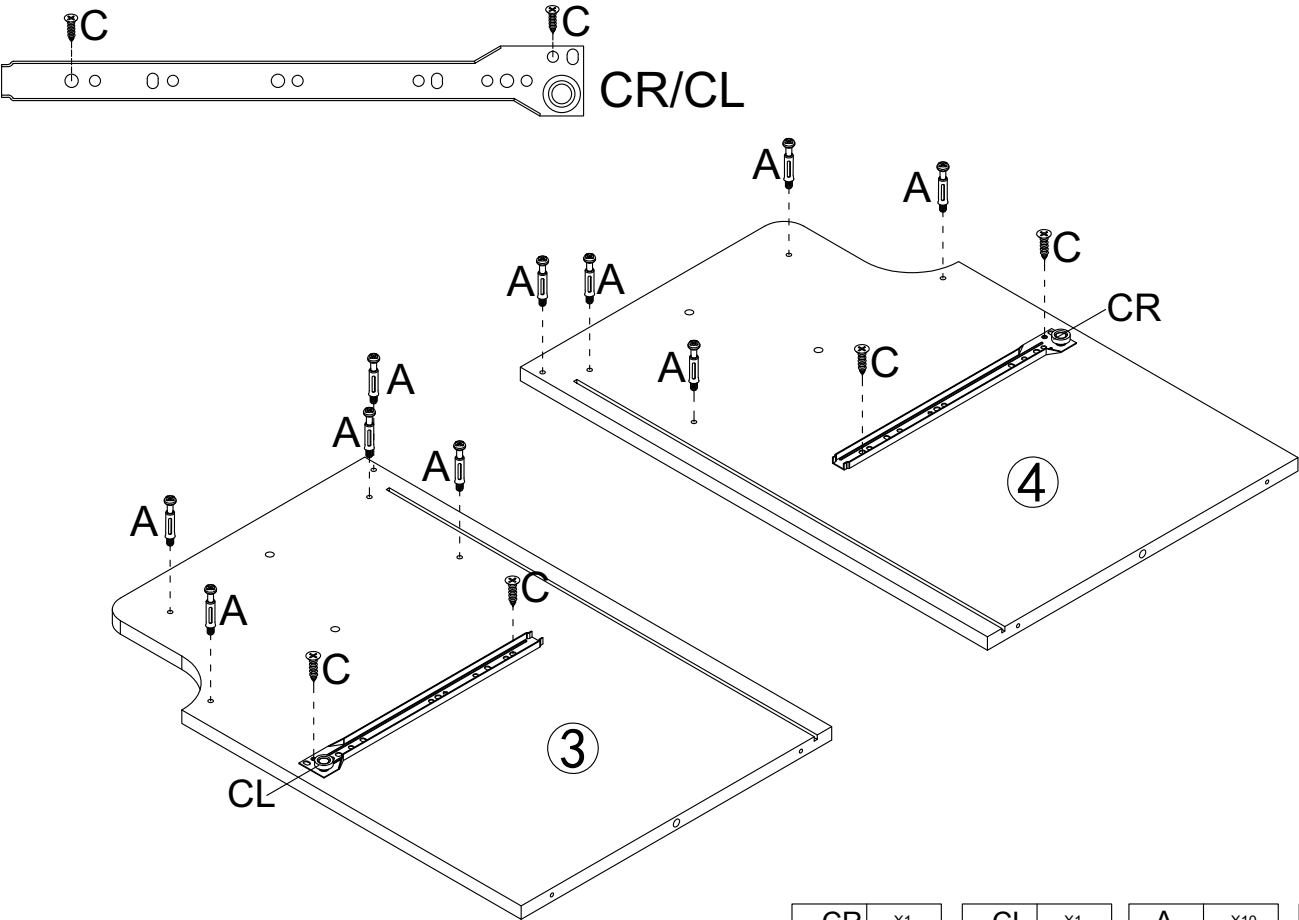


CR	X1	CL	X1	A	X10	C	X4
							
				M6x35mm		M3.5x12mm	

4

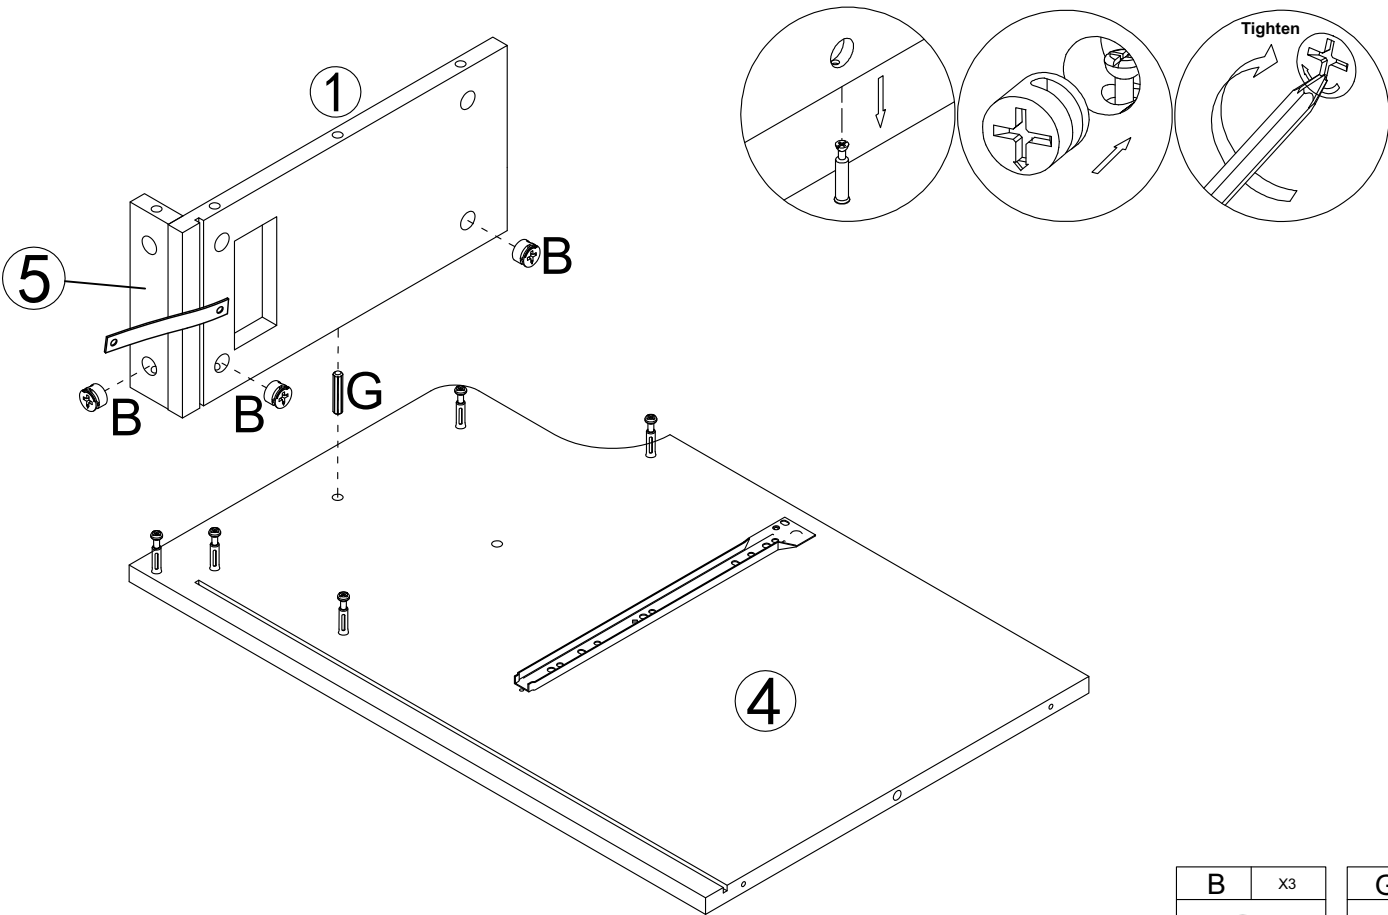


B	X3	G	X1
			


5

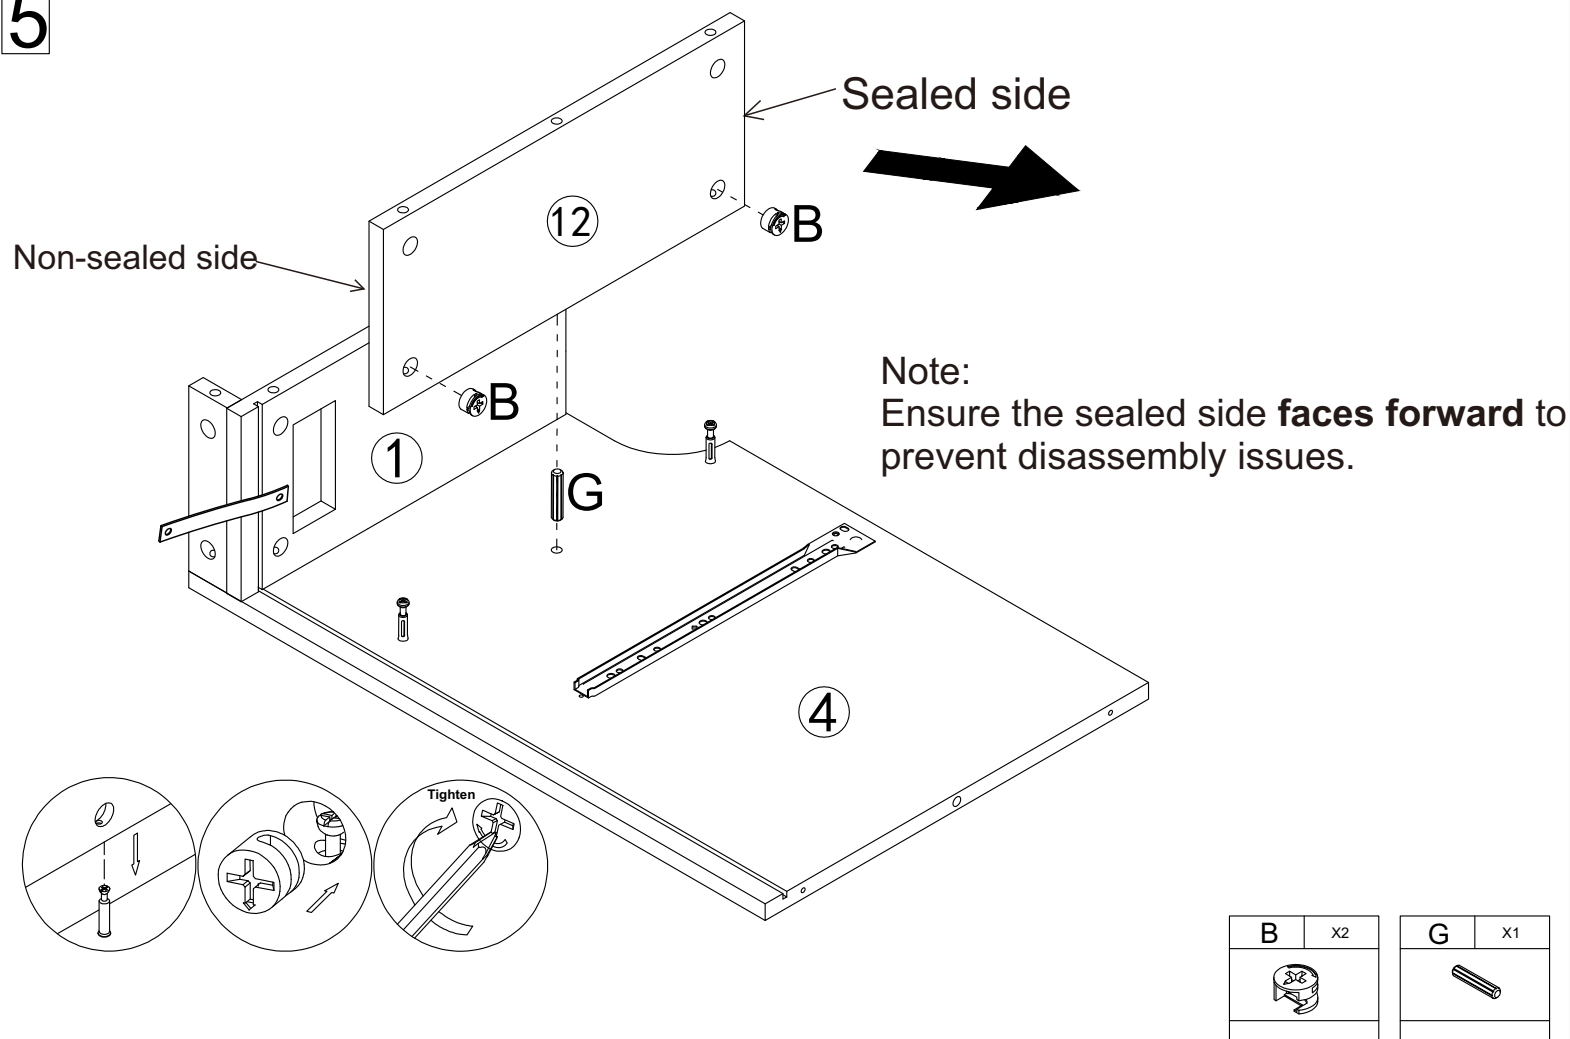


6

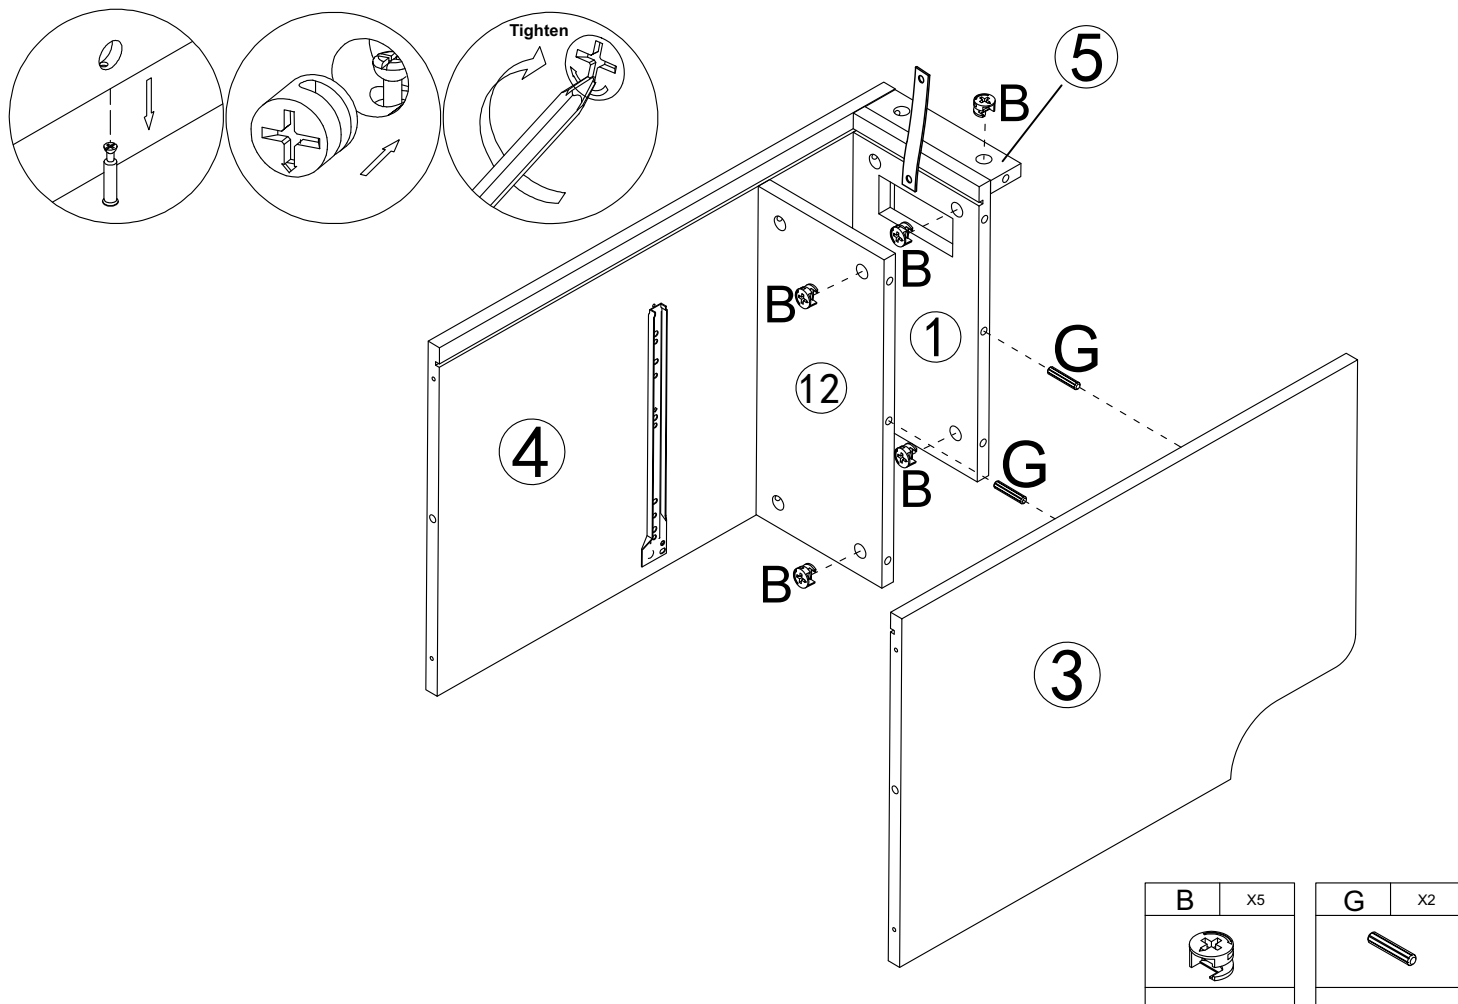

7

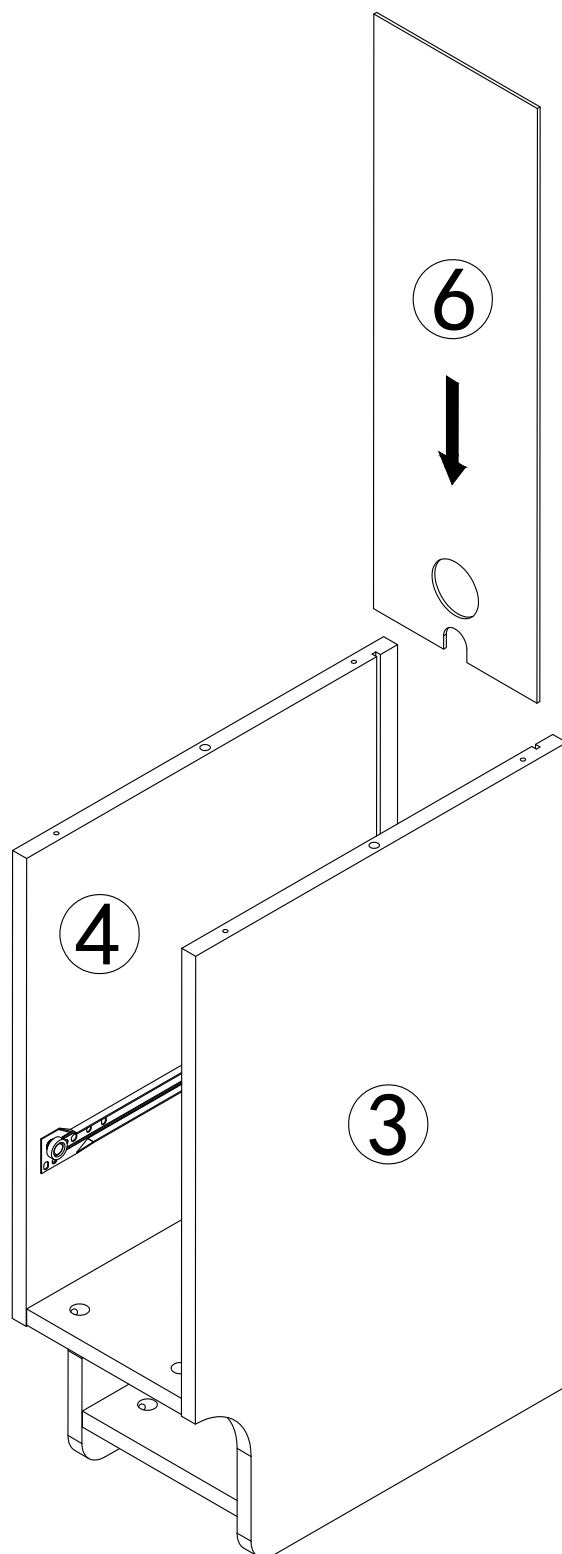


8

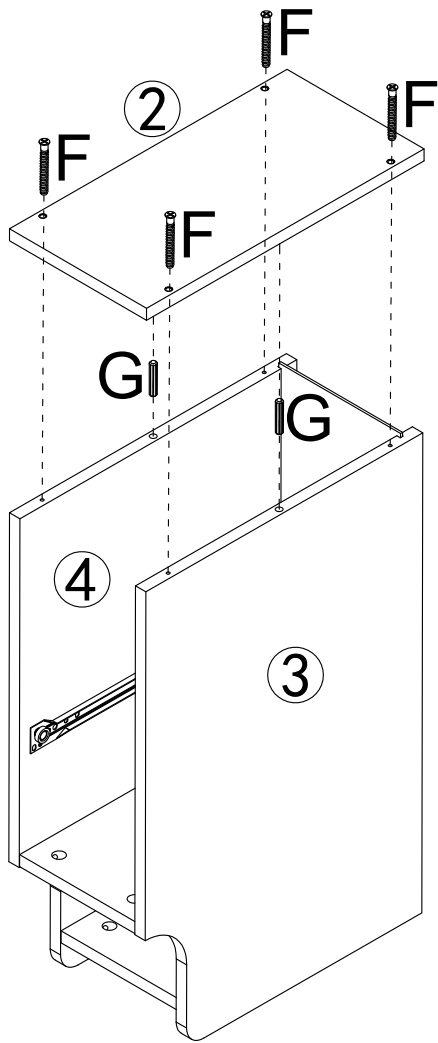

F	X4
	
M5x40mm	


G	X2
	

9

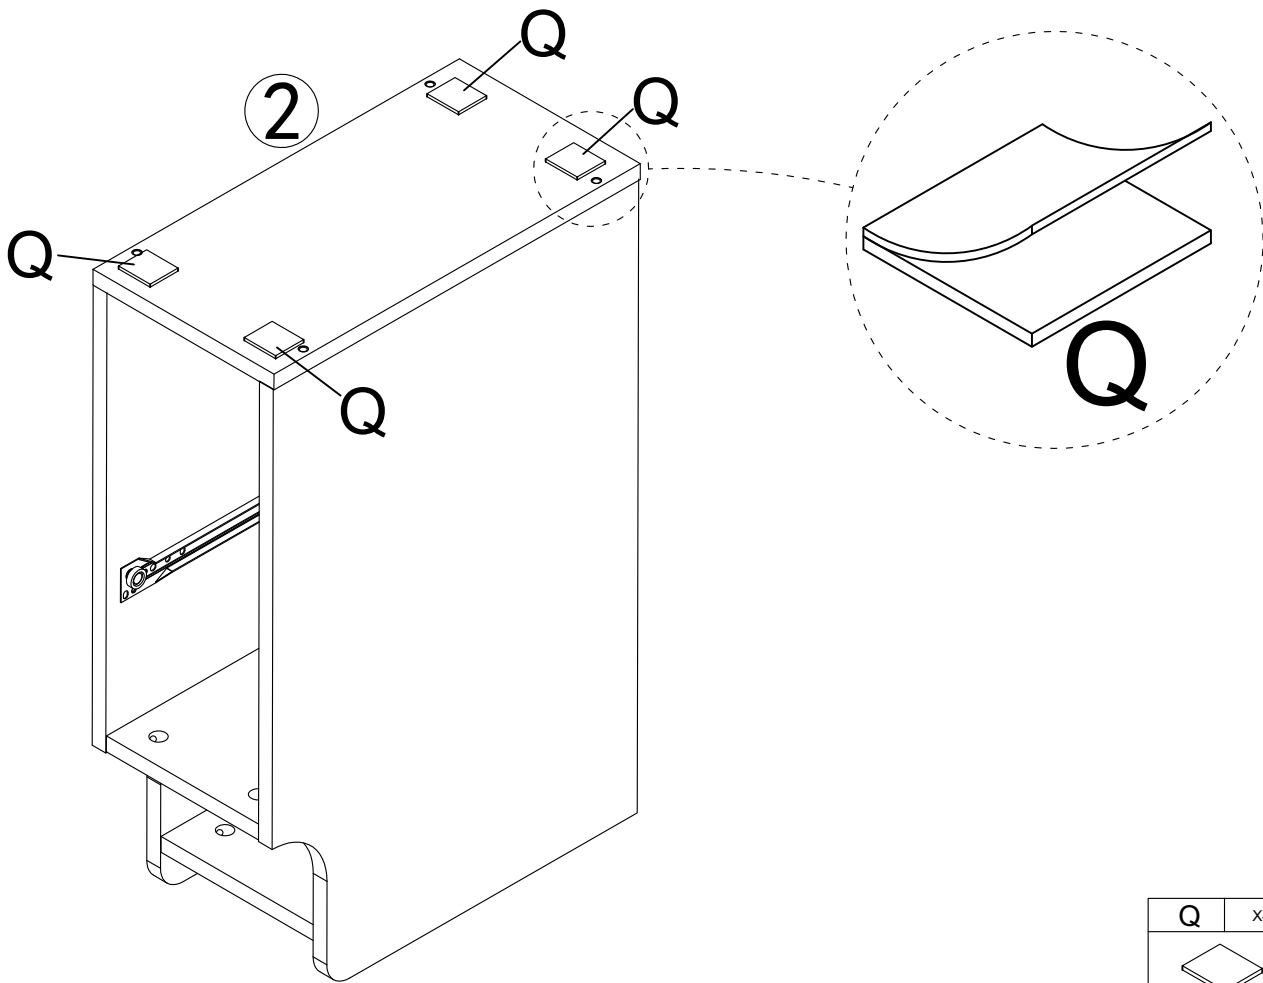

Q	X4
	


10

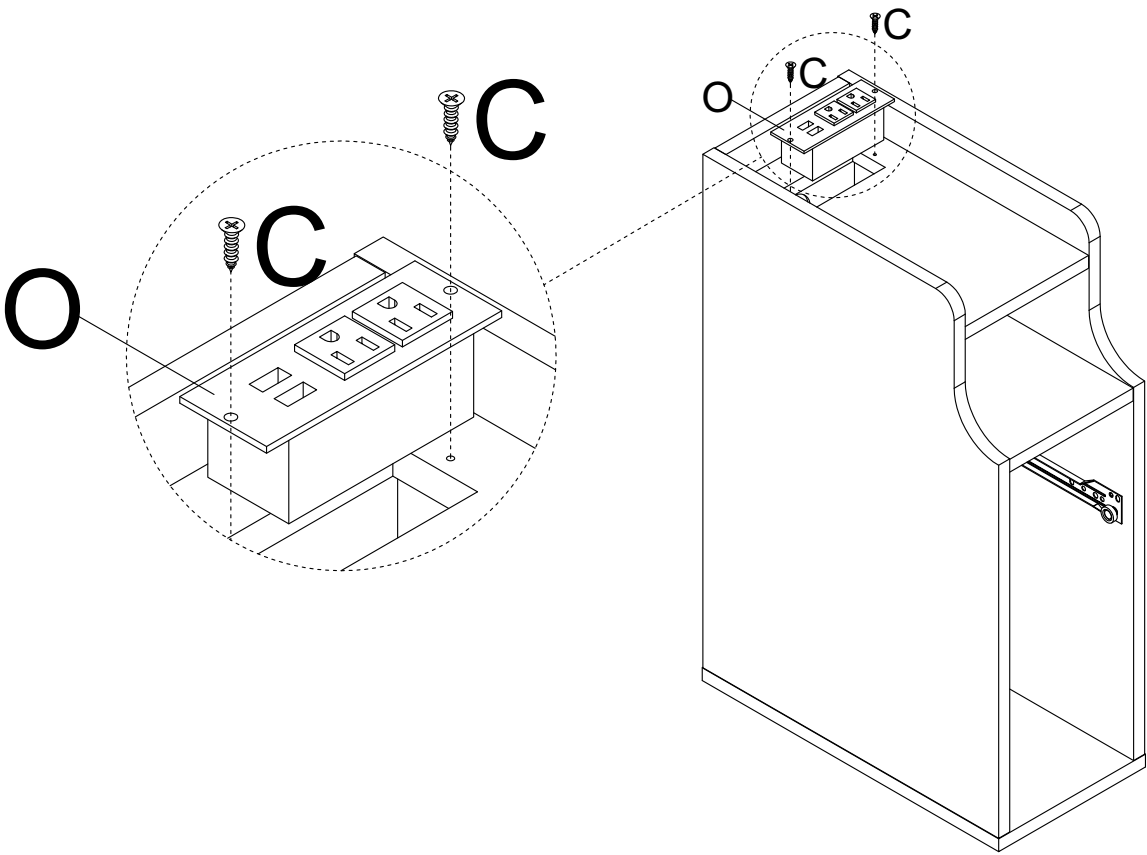

C	X2
	
M3.5x12mm	

O	X1
	

11

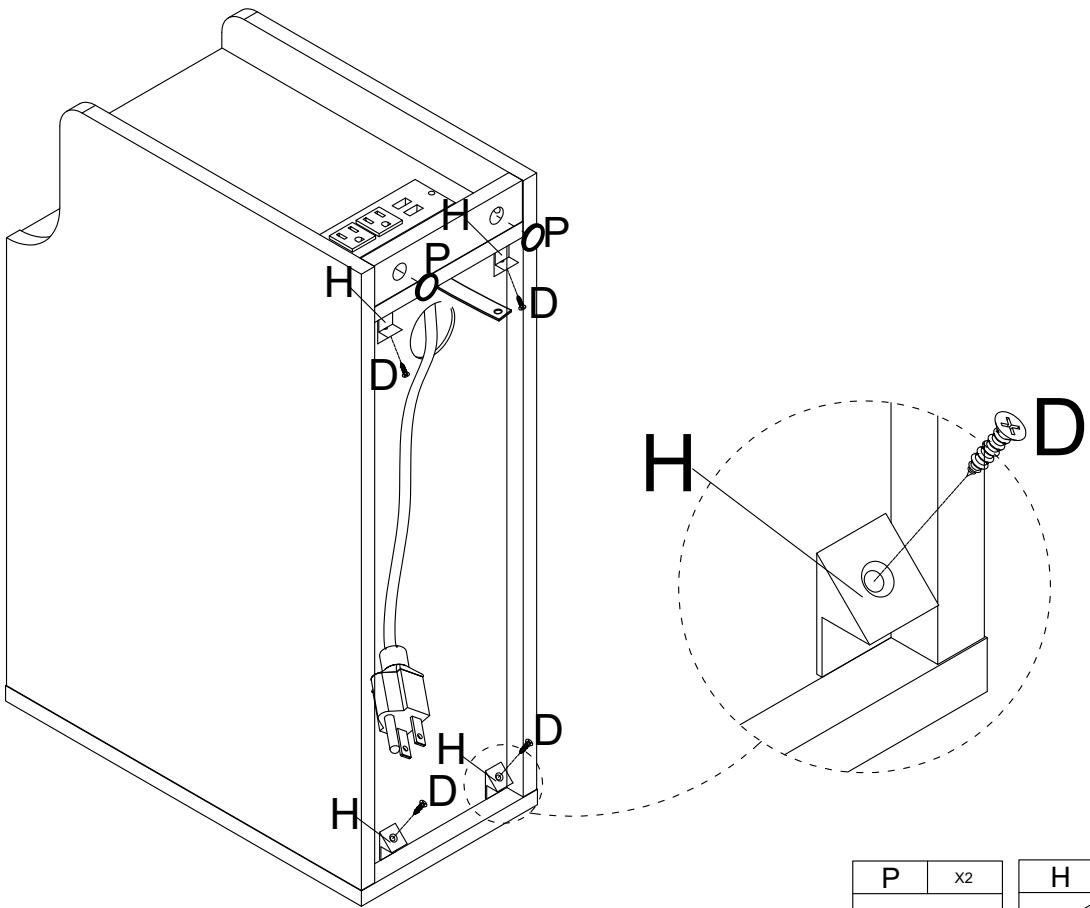


P	X2
	

H	X4
	

D	X4
	
M3x16mm	


12

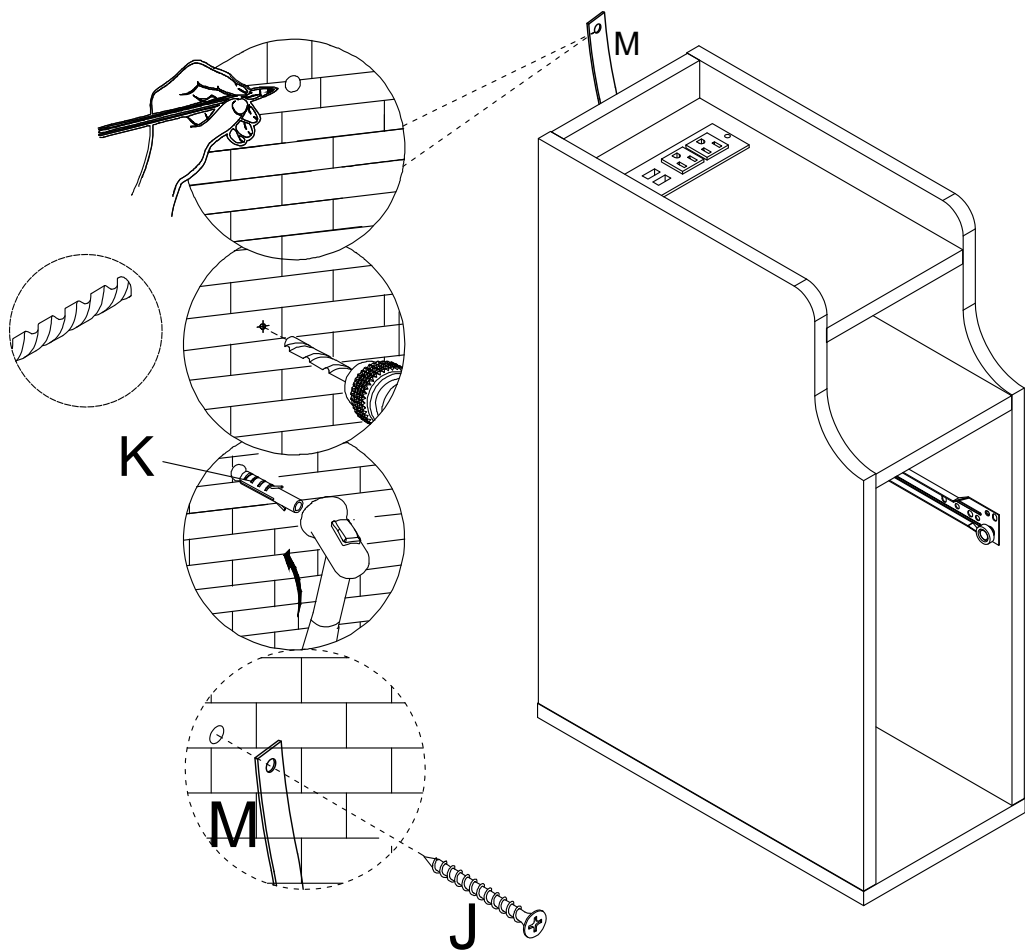

K	X1
	


J	X1
	
M4x35mm	

13



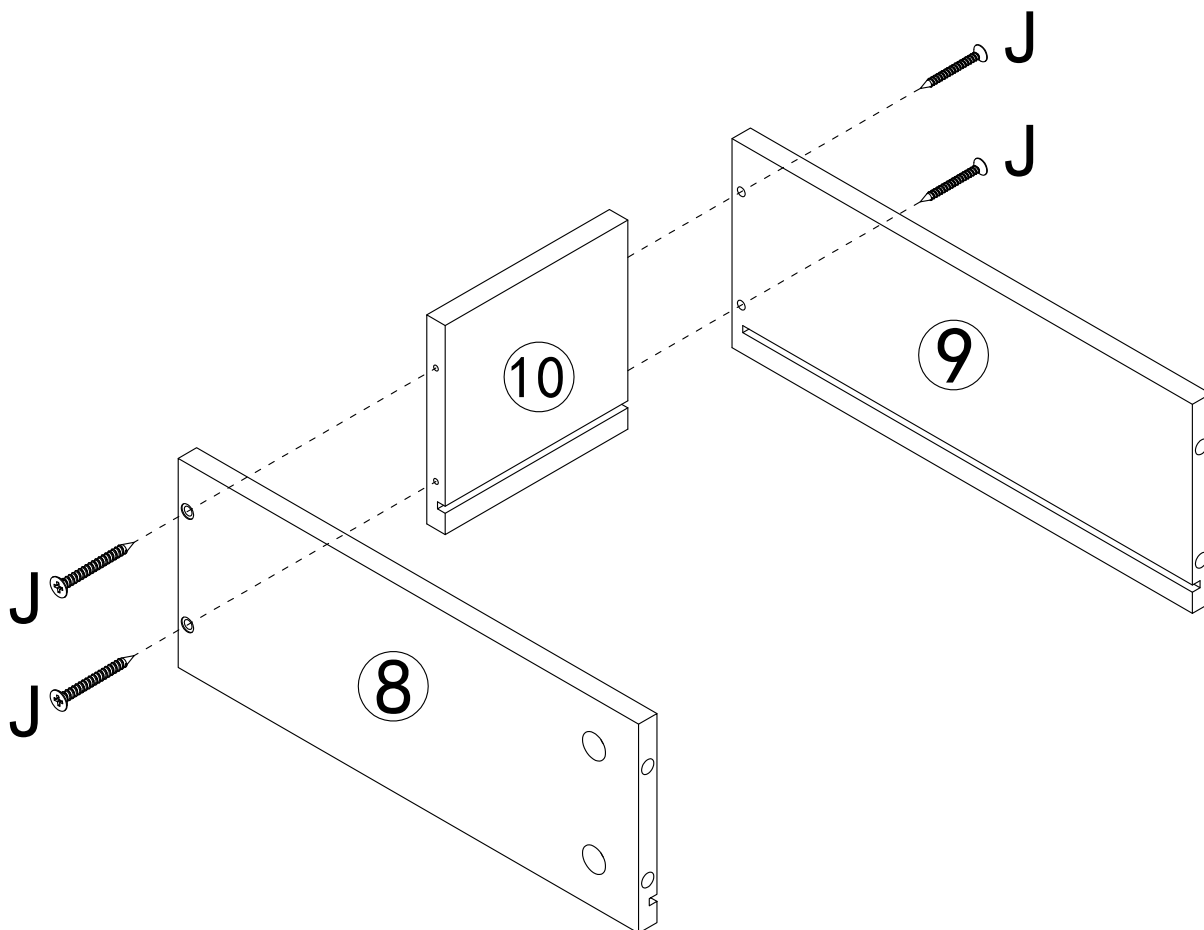


J	X4
	
M4x35mm	

14

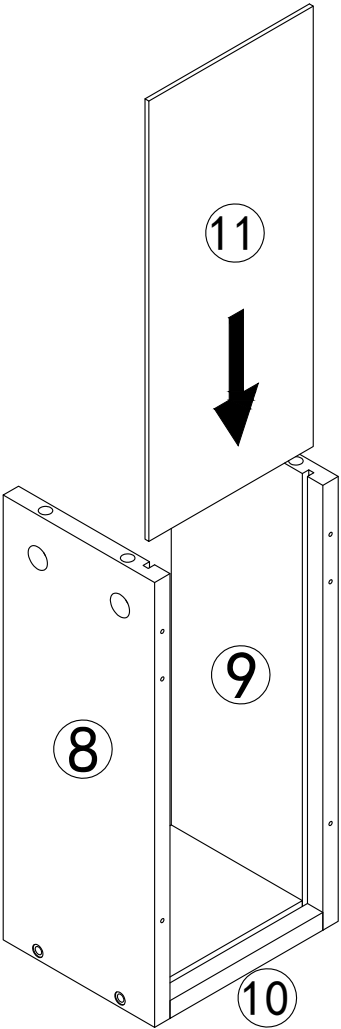


15

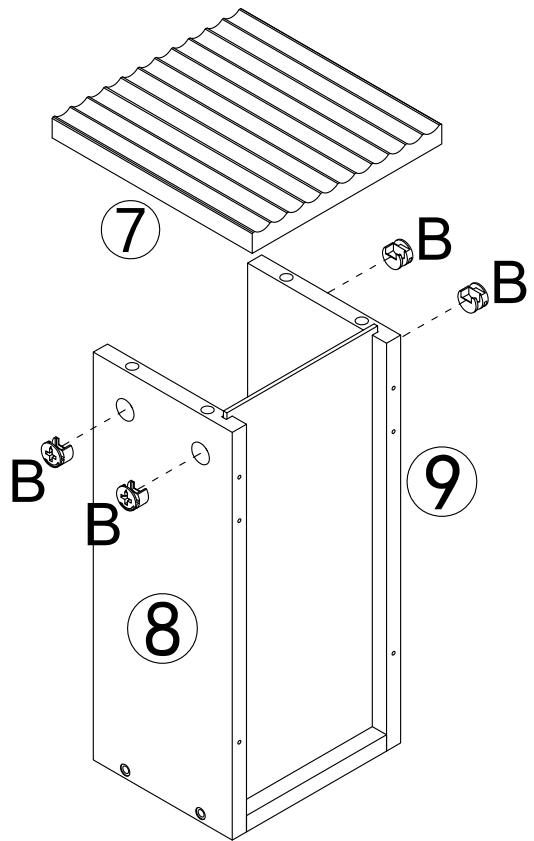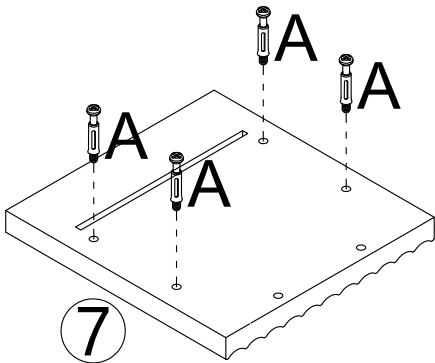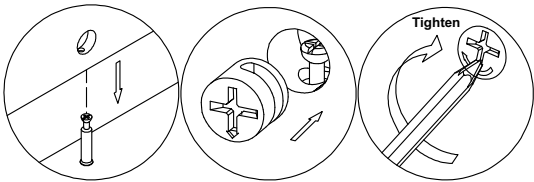

A	X4
	
M6x35mm	

B	X4
	


16

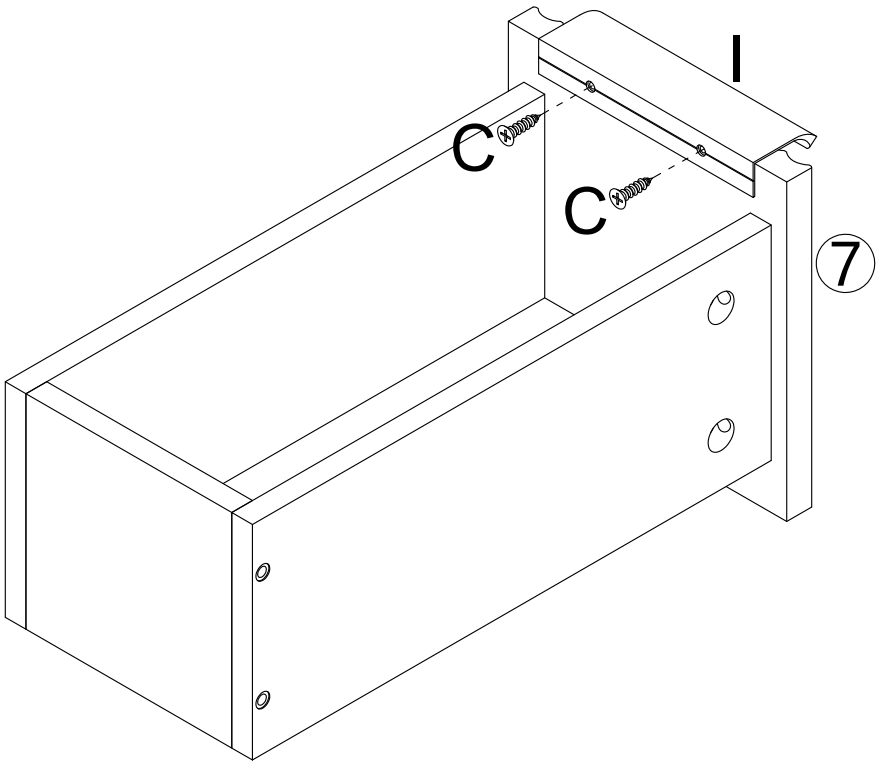


C	x2
	
M3.5x12mm	


I	x1
	


17

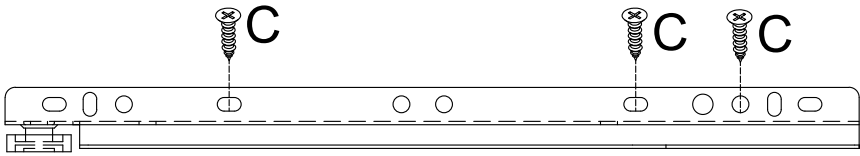

DL/DR

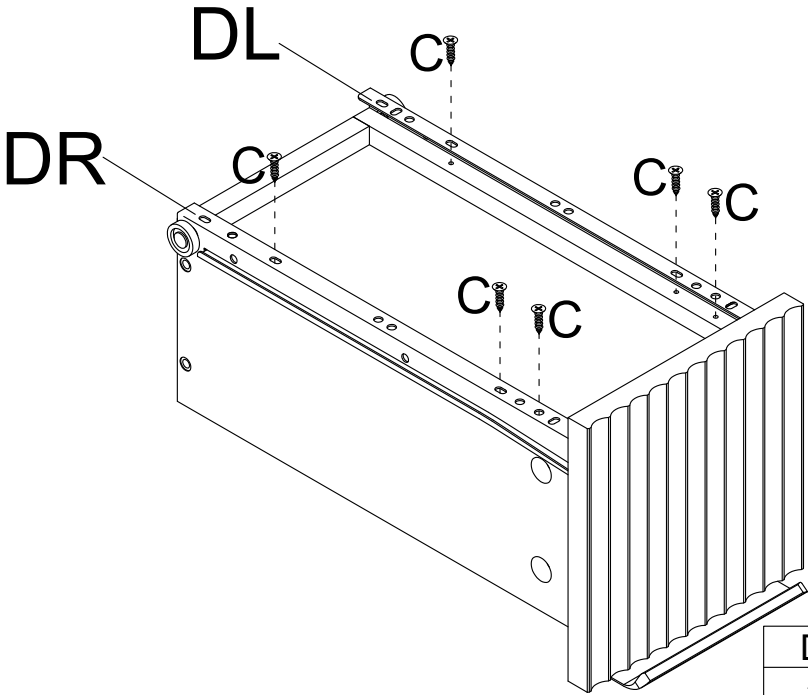


DL	x1
	

DR	x1
	

C	x6
	
M3.5x12mm	

18

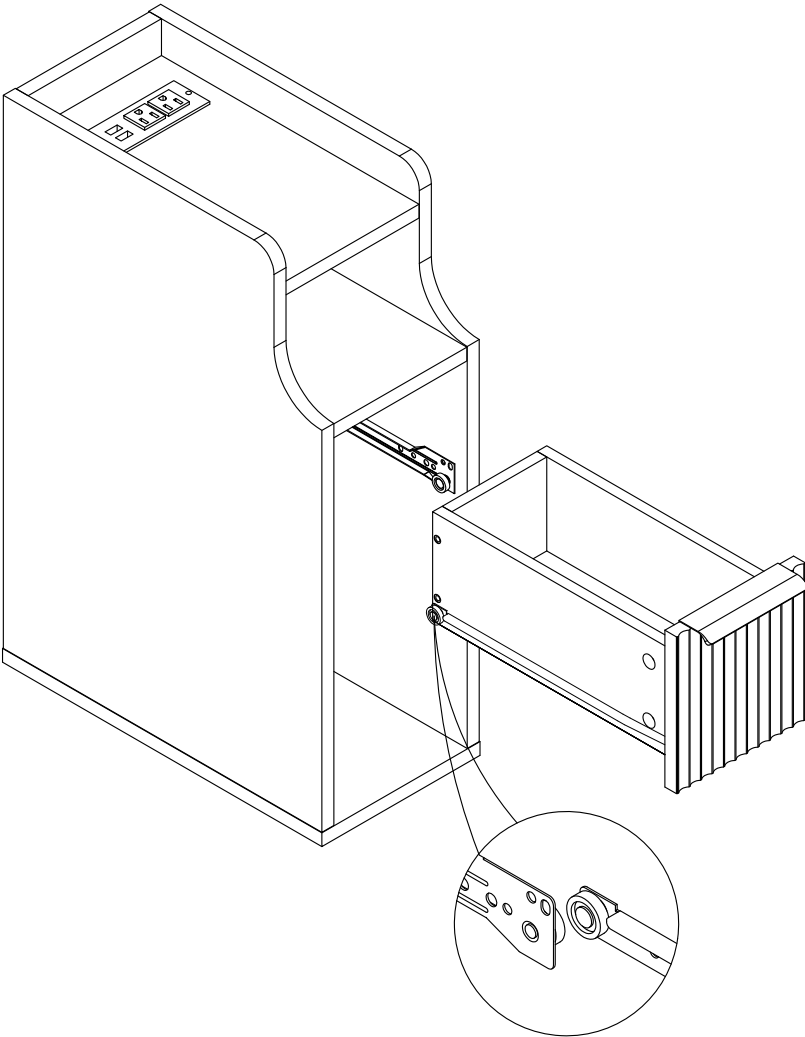

19

