


ASSEMBLY INSTRUCTION


SKU CODE: (WF298392/WF298393)

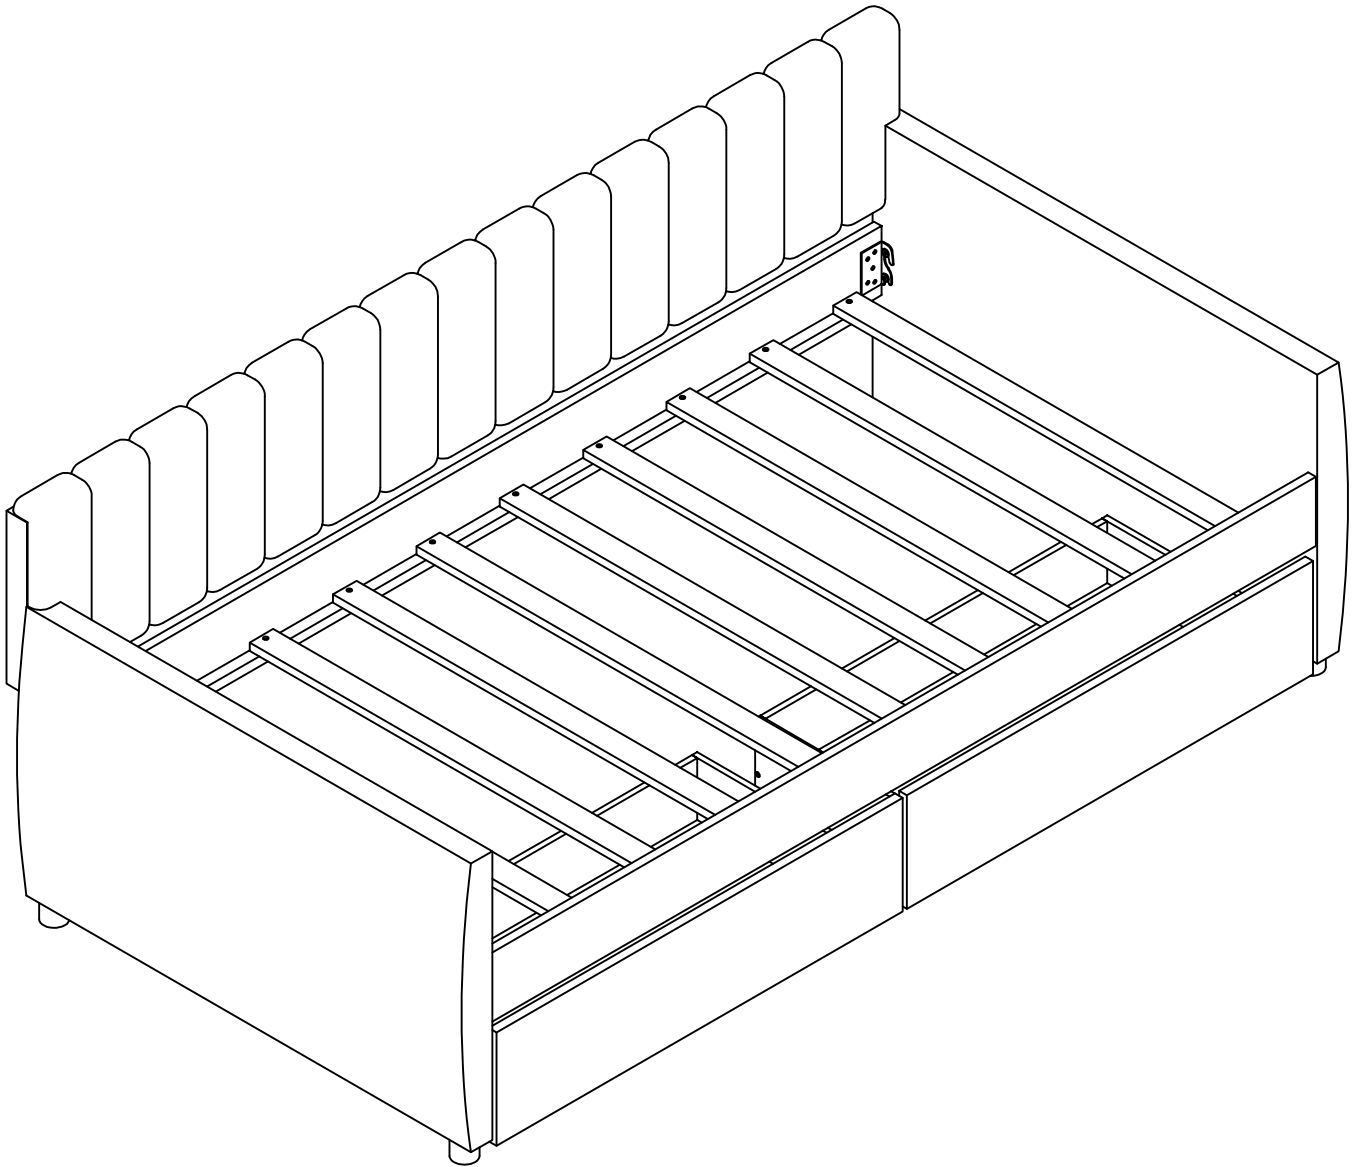





! SAFETY WARNINGS !

1. This bed is designed for use FULL Mattress 74 inch Long and 38 inch Wide
2. Always use the recommended size mattresses or mattress supports, or both, to help prevent the likelihood of entrapment or falls.
3. Do not allow horseplay on or under the bed and prohibit jumping on the bed
4. Do not use substitute parts. Contact the manufacturer or dealer for replacement parts.
5. Keep these instructions for future reference







ASSEMBLY INSTRUCTION

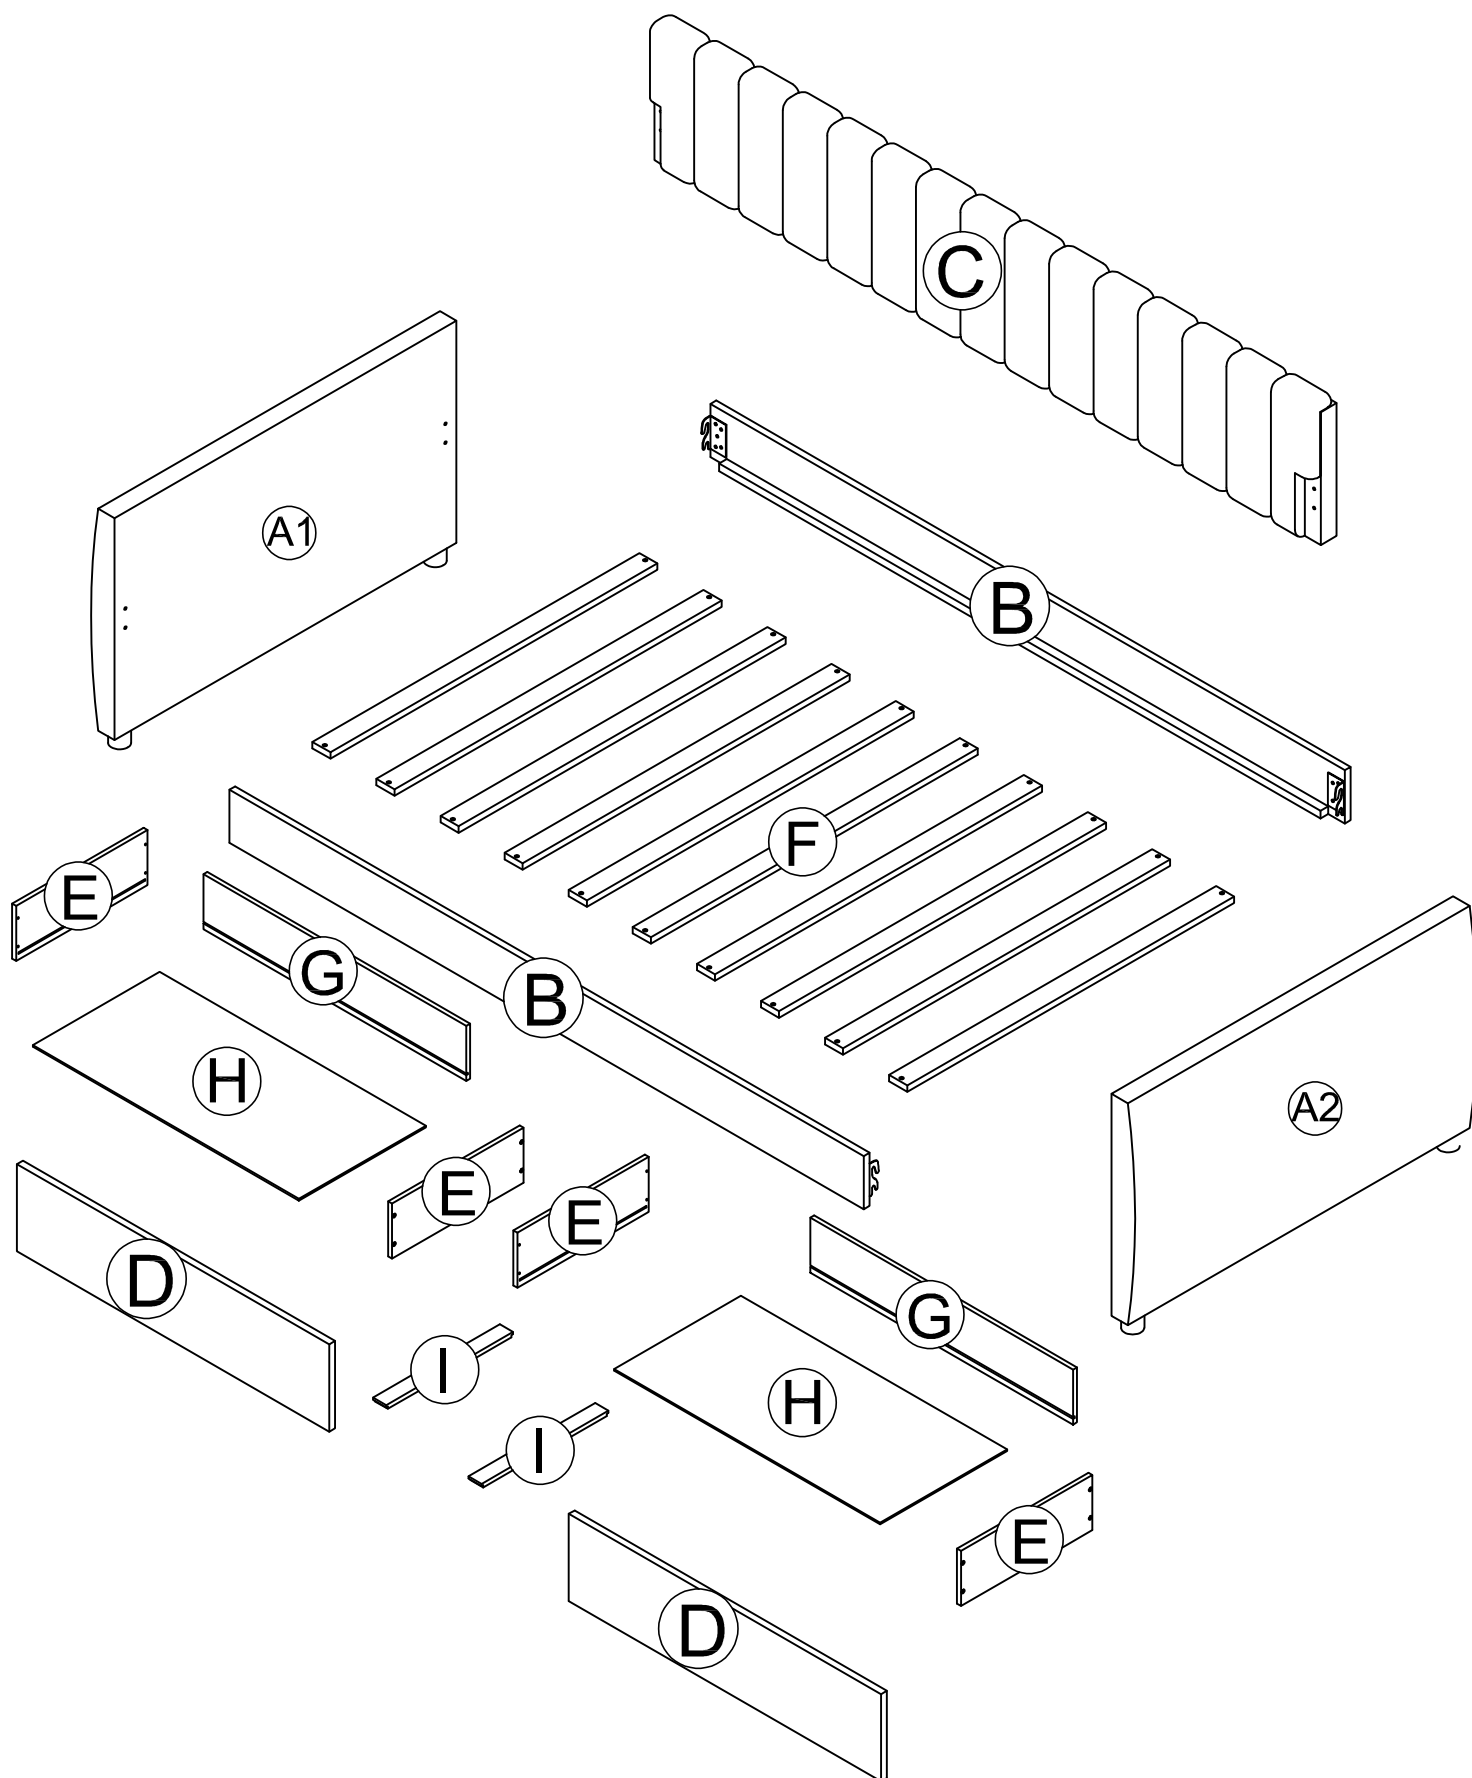





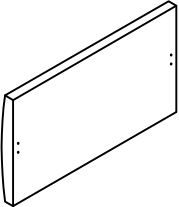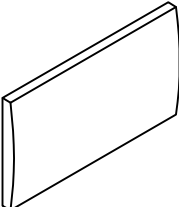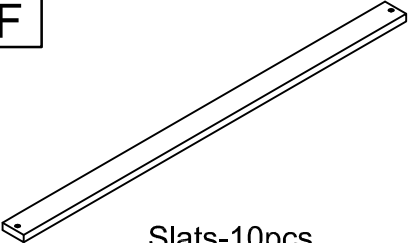
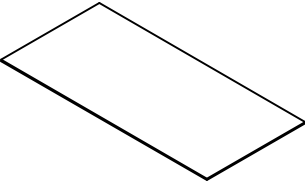


Part List(WF298392)

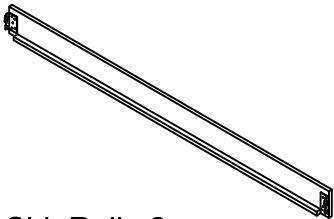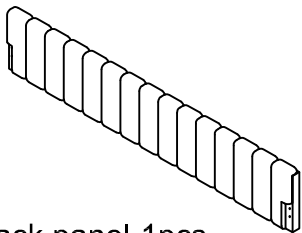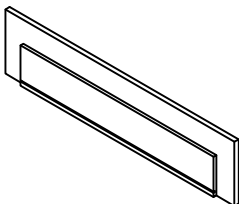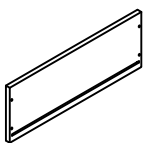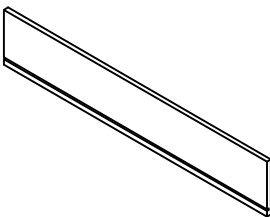
<div>A1</div> <div></div> <div>Right Arm-1pcs</div>	<div>A2</div> <div></div> <div>Left Arm-1pcs</div>	<div>F</div> <div></div> <div>Slats-10pcs</div>
<div>H</div> <div></div> <div>Drawers-Bottom Panel-2pcs</div>		

Part List(WF298393)

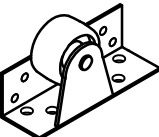B  <p>Side Rails-2pcs</p>	C  <p>Back panel-1pcs</p>	D  <p>Drawers-Font Panel-2pcs</p>
E  <p>Drawers-Side Panel-4pcs</p>	G  <p>Drawers-Back Panel-2pcs</p>	I  <p>Drawers-Support Panel-2pcs</p>

Hardware List


1  <p>Plastic Feet(Ø50x40) 4pcs</p>	2  <p>Wheels 8pcs</p>	3  <p>M4 x 15 mm Wood Screws 20pcs</p>
4  <p>M4 x 30 mm Wood Screws 36pcs</p>	5  <p>Ø1/4" x 70mm Hex-Head bolts 4pcs</p>	6  <p>Ø1/4" x 25mm Hex-Head bolts 8pcs</p>
7  <p>Allen Key 1pcs</p>	8  <p>Plastic Drawer Stopper 4 pcs</p>	




Assembly Tools Required (Not Included)

STEP 1: Following below illustration Assembly Plastic Feet(#1) With Headboard and Footboard use HW #2

1




4pcs

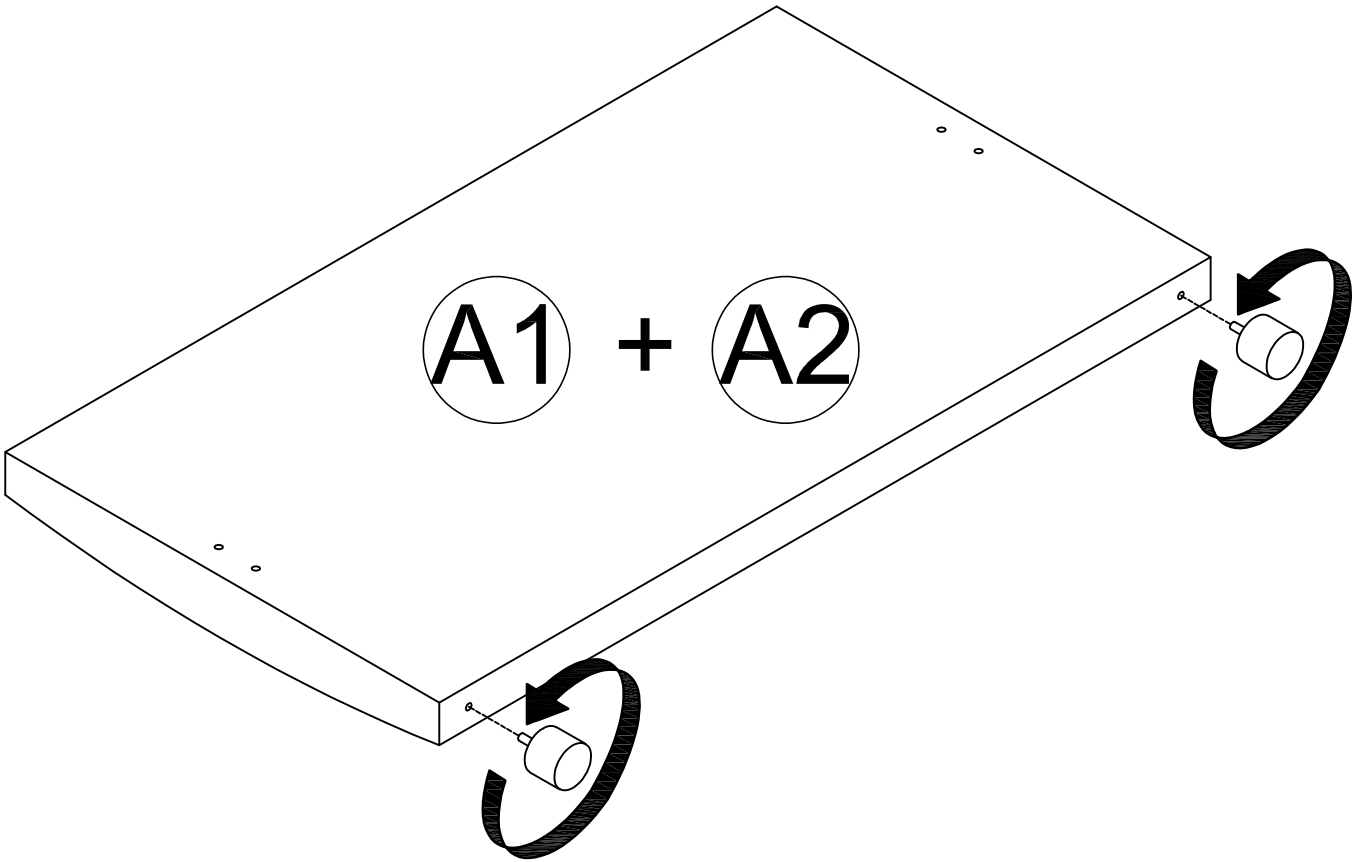


STEP 2: Following below illustration Using hardward #2 to Assembly
Headboard and Footboard with siderail B(x2).Look at detail view for more detail

6




8pcs

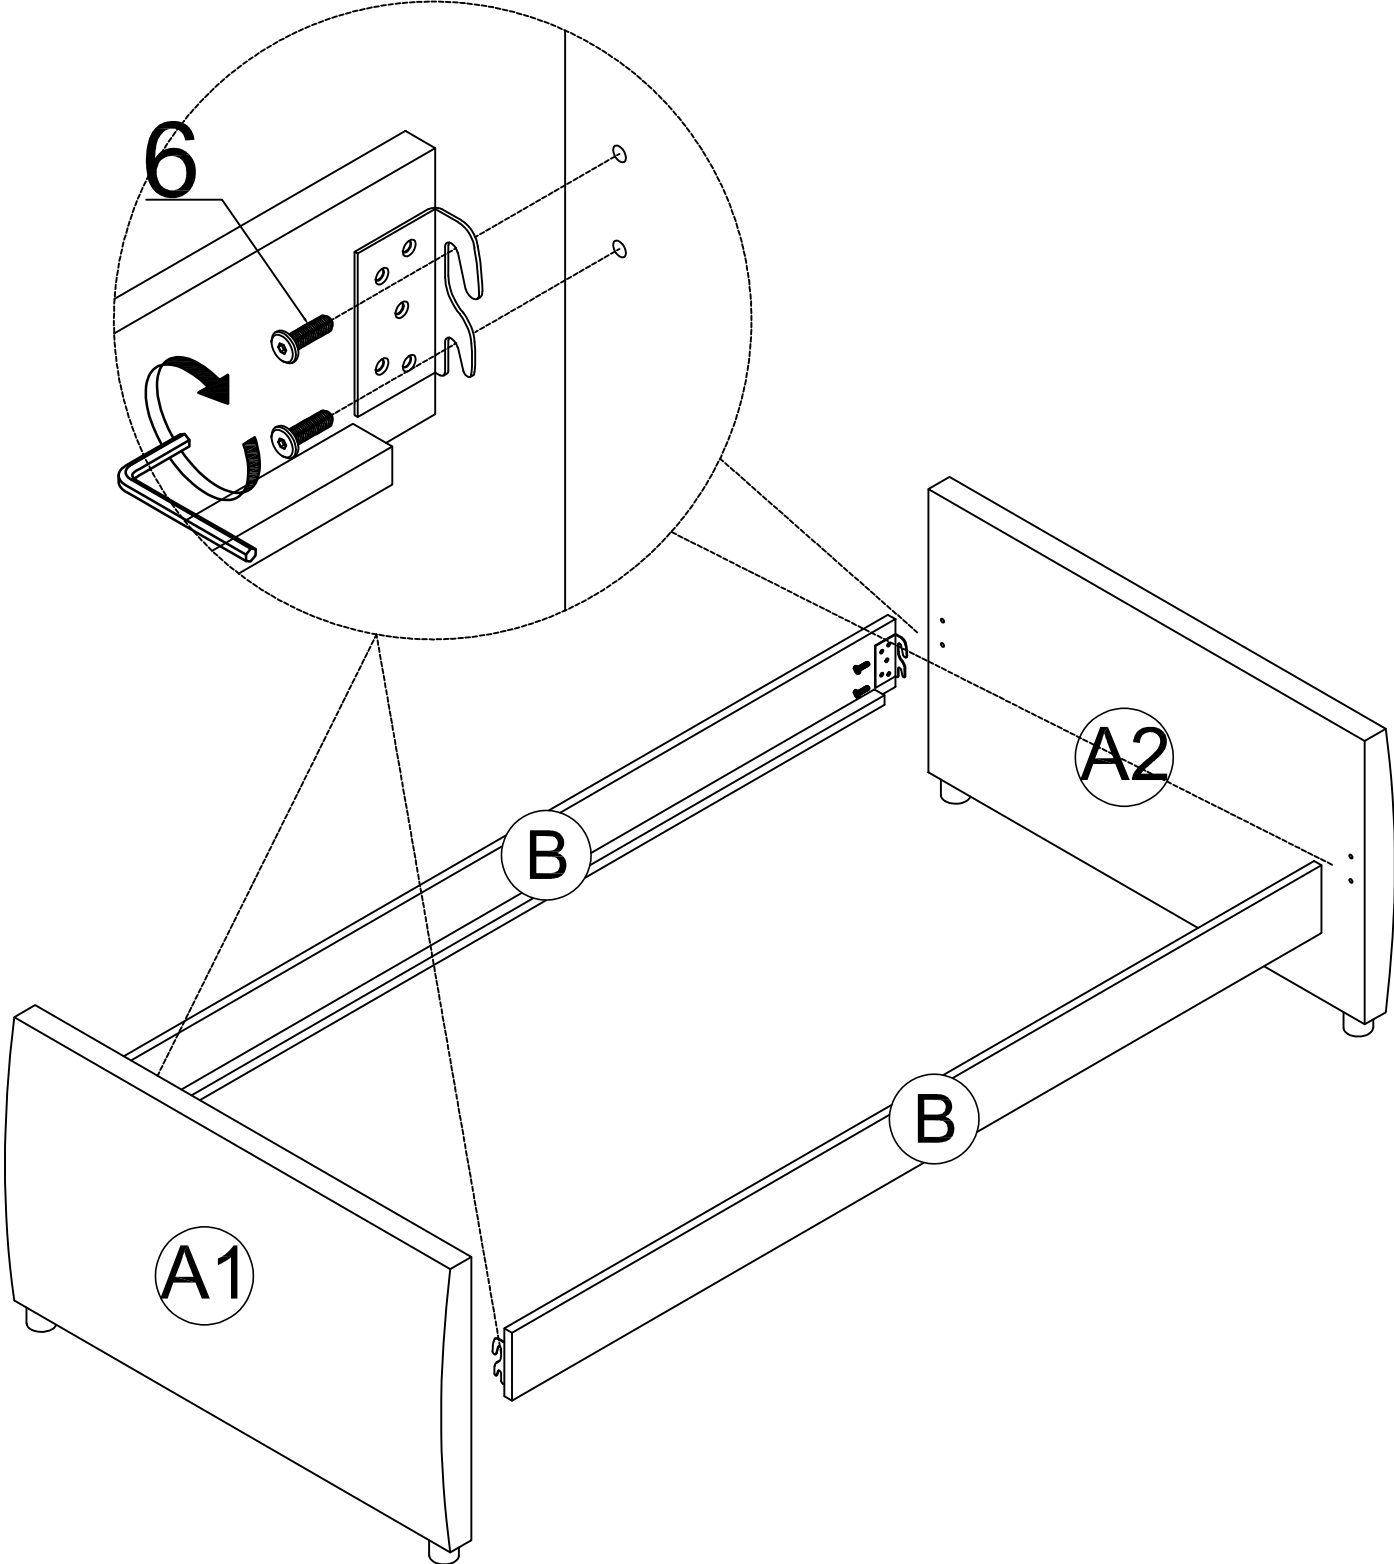



STEP 3: Following below illustration

-Using hardward #3 to Assembly Frame(completed on step 2) with Bach Frame C

5



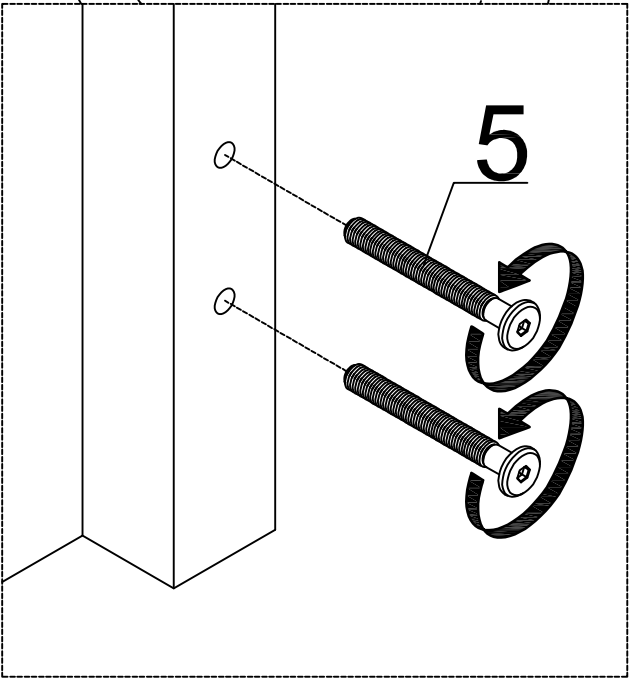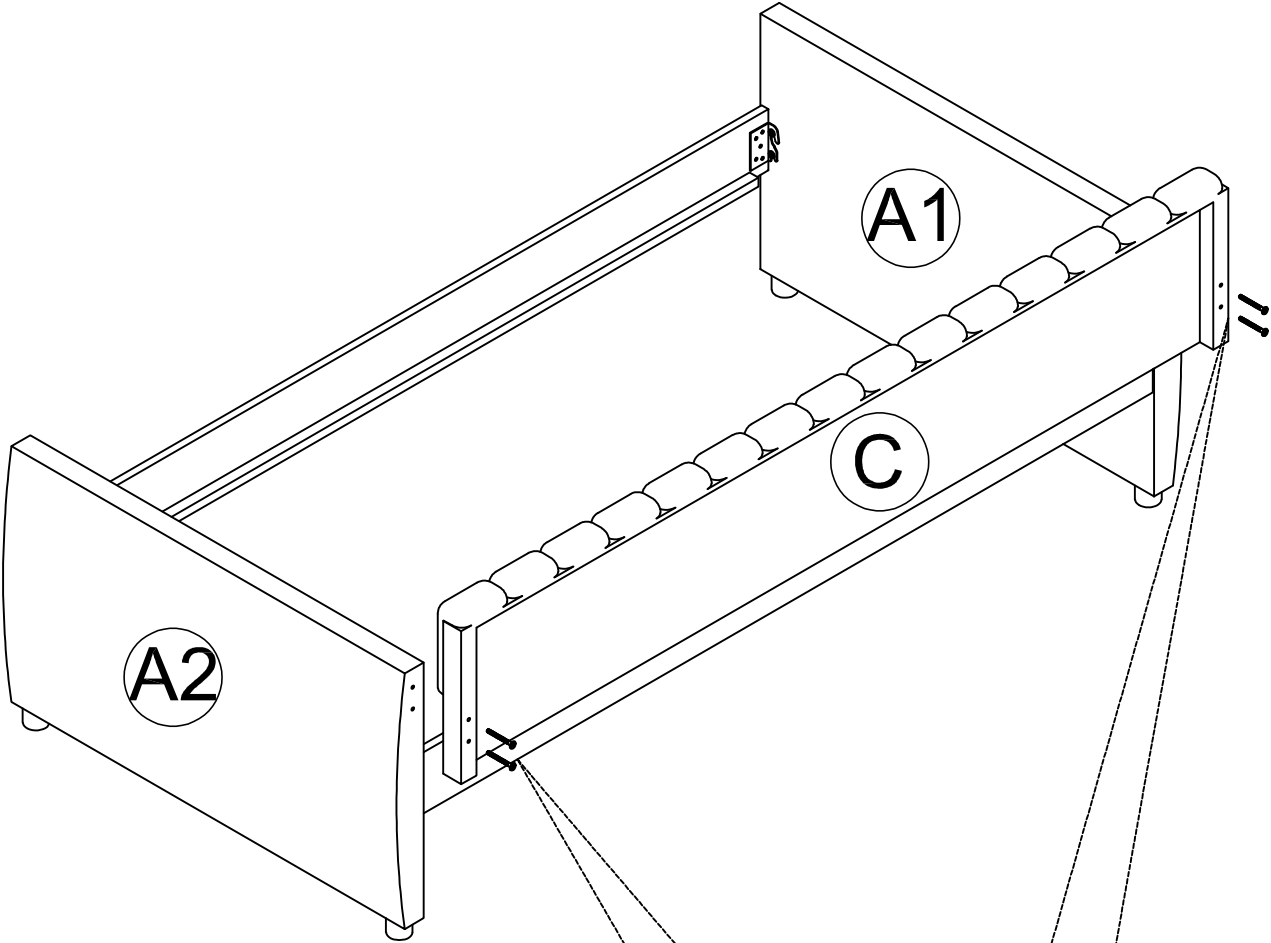


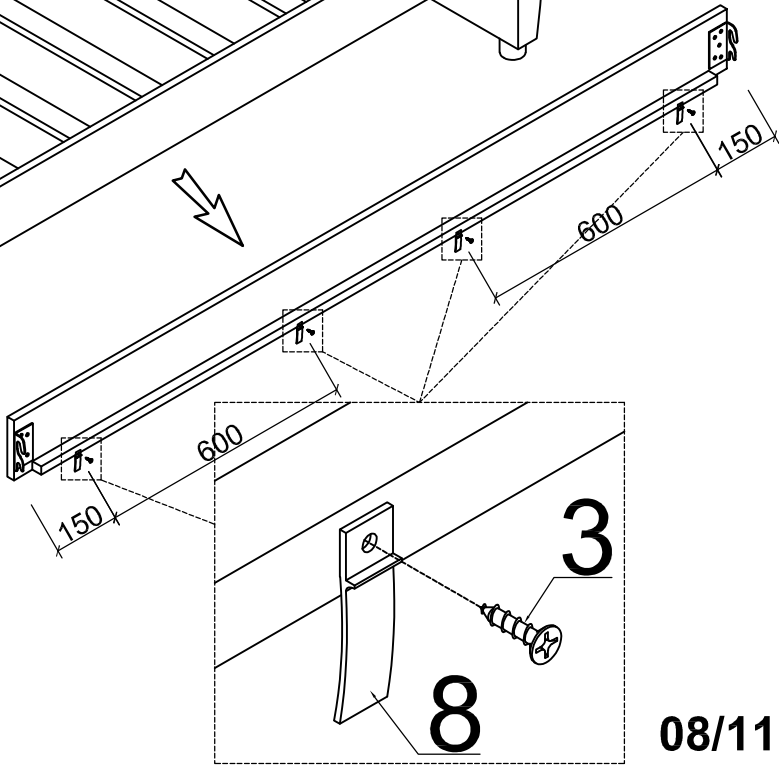
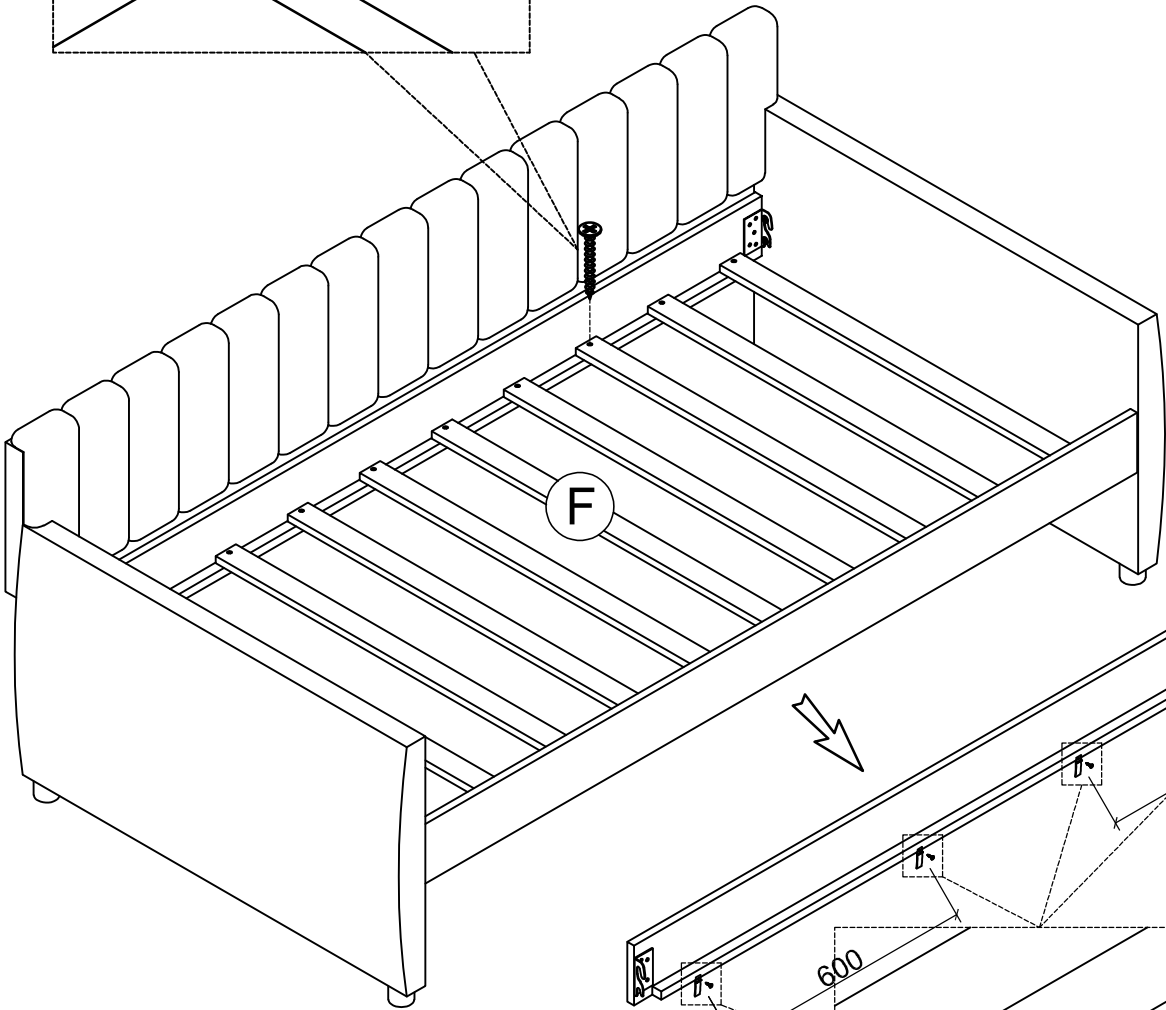
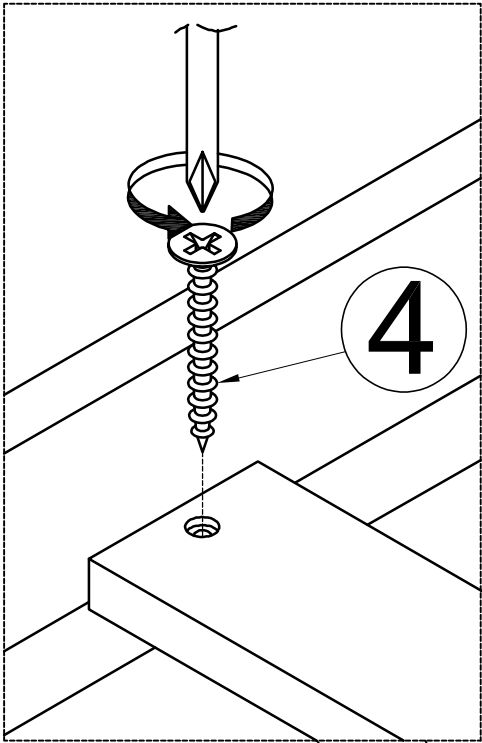
4pcs



STEP 4: Following below illustration:


- Screw 10 slats F with Side Rail B by using hardward #4.
- Look at detail view for more detail

3		8		4	
4pcs		4pcs		20pcs	




STEP 5-1: Following below illustration:


4




8pcs

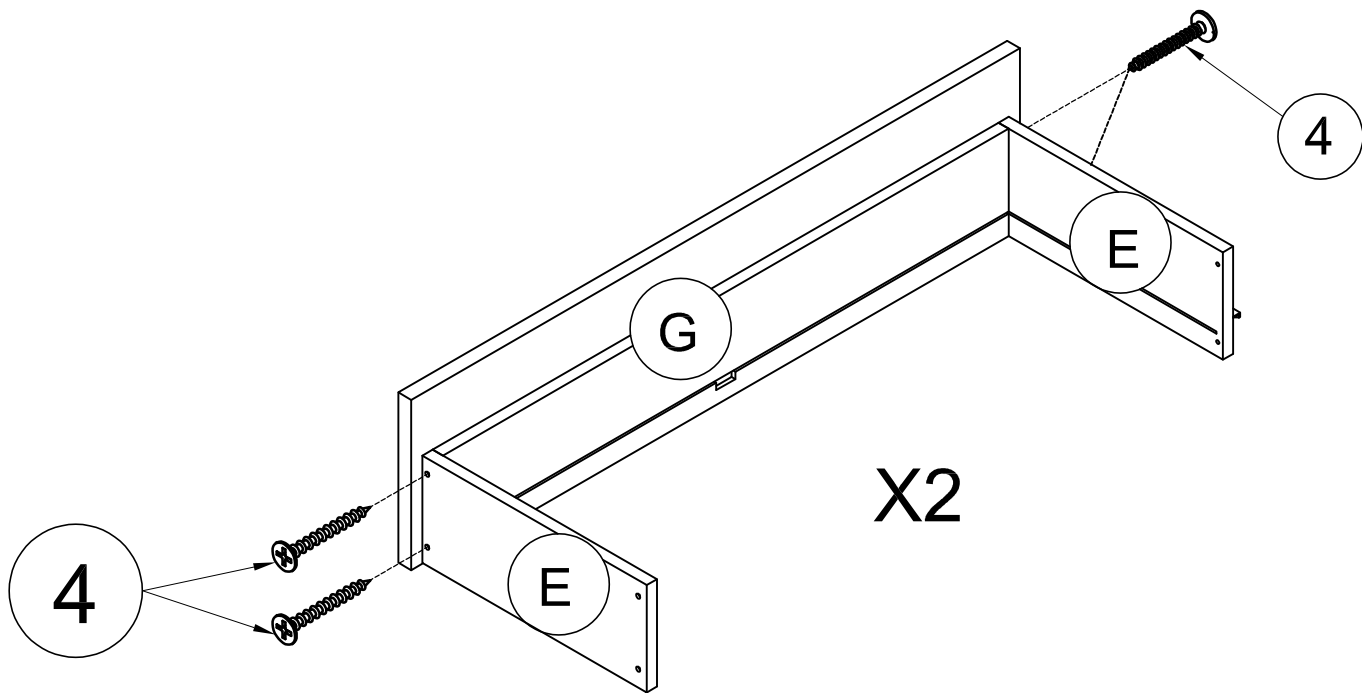

STEP 5-2: Following below illustration:

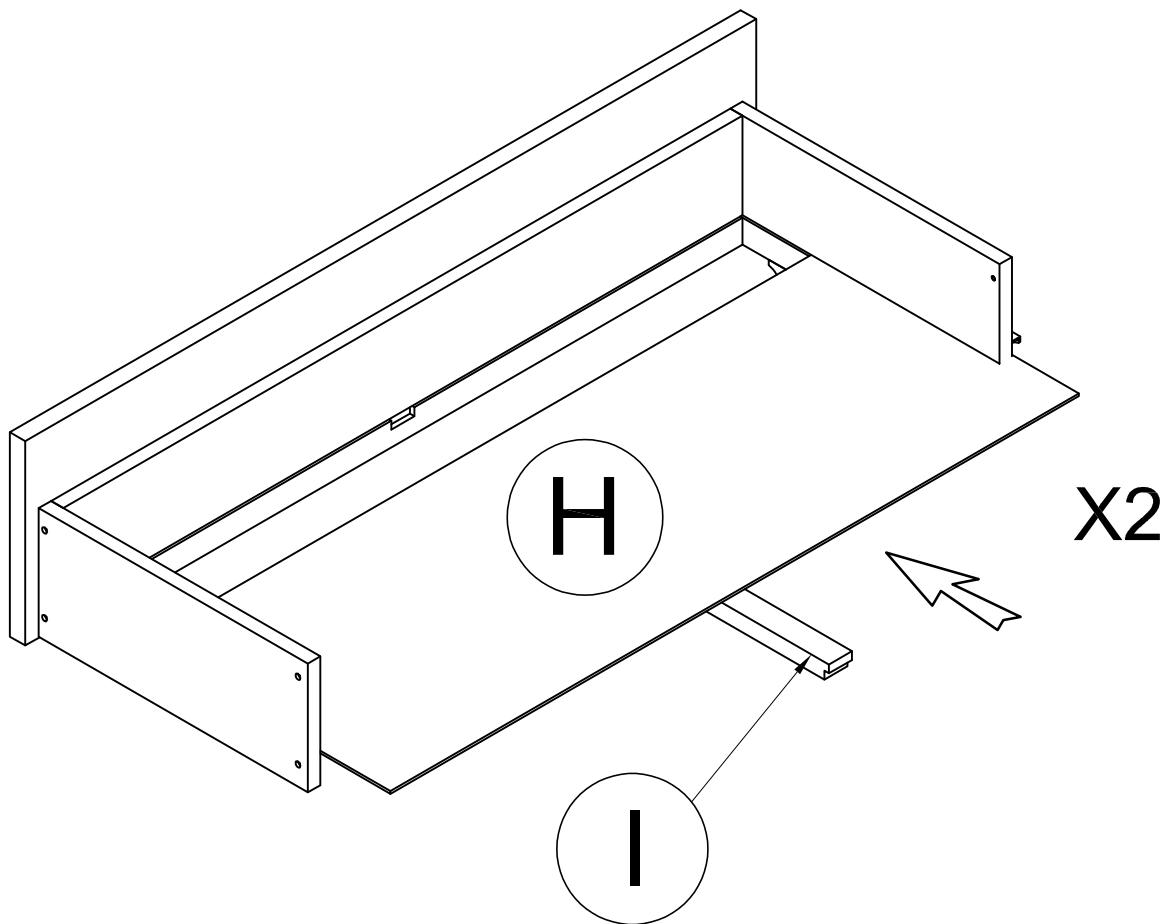


STEP 5-3: Following below illustration:

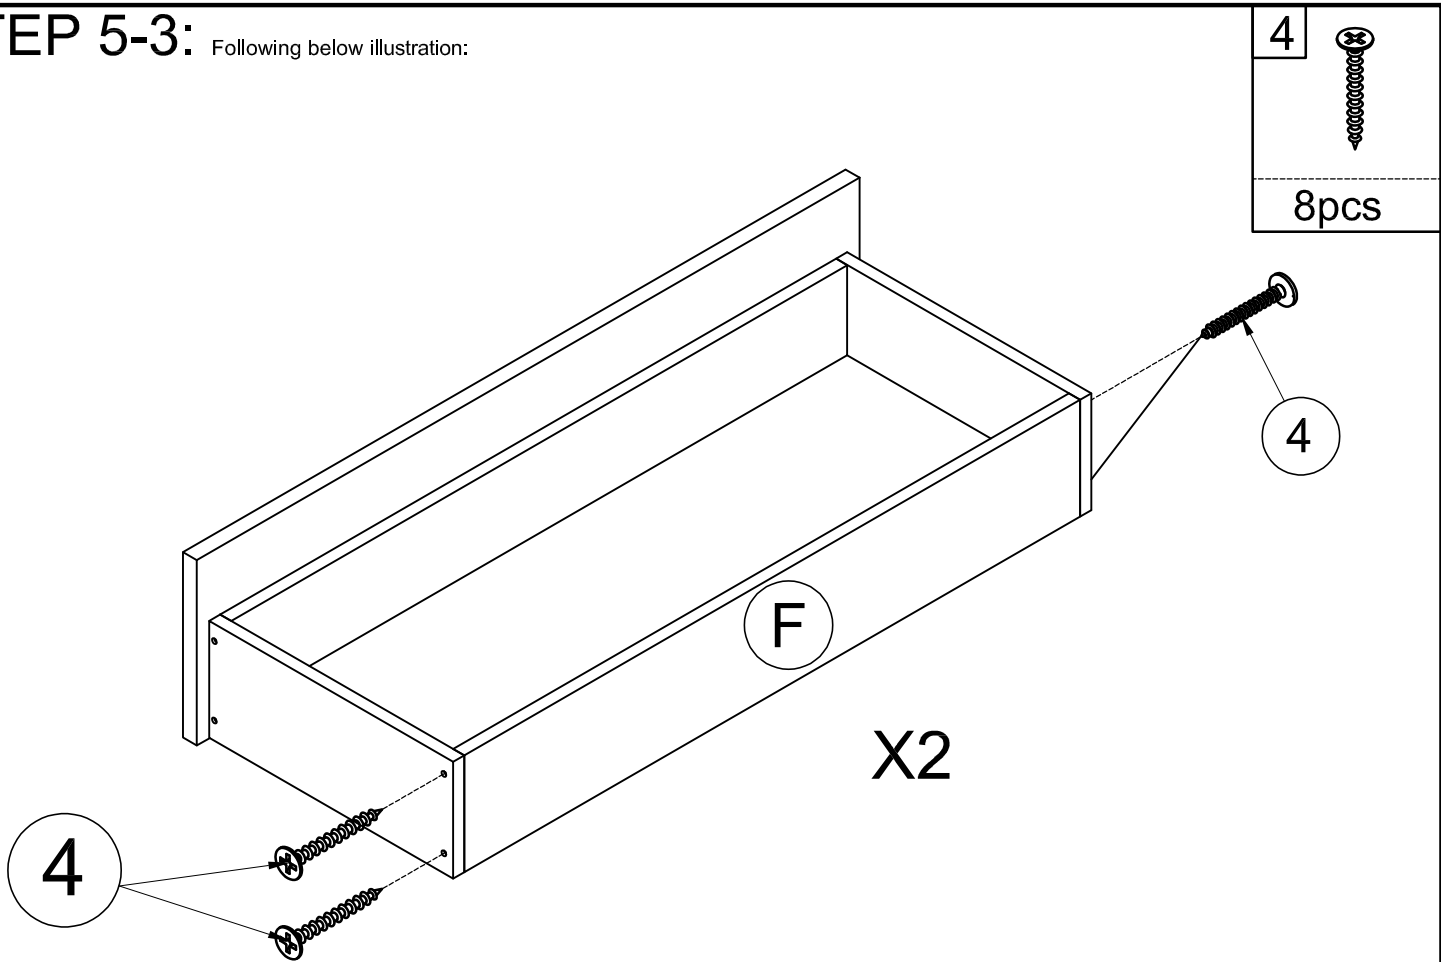

STEP 5-4:

Following below illustration:

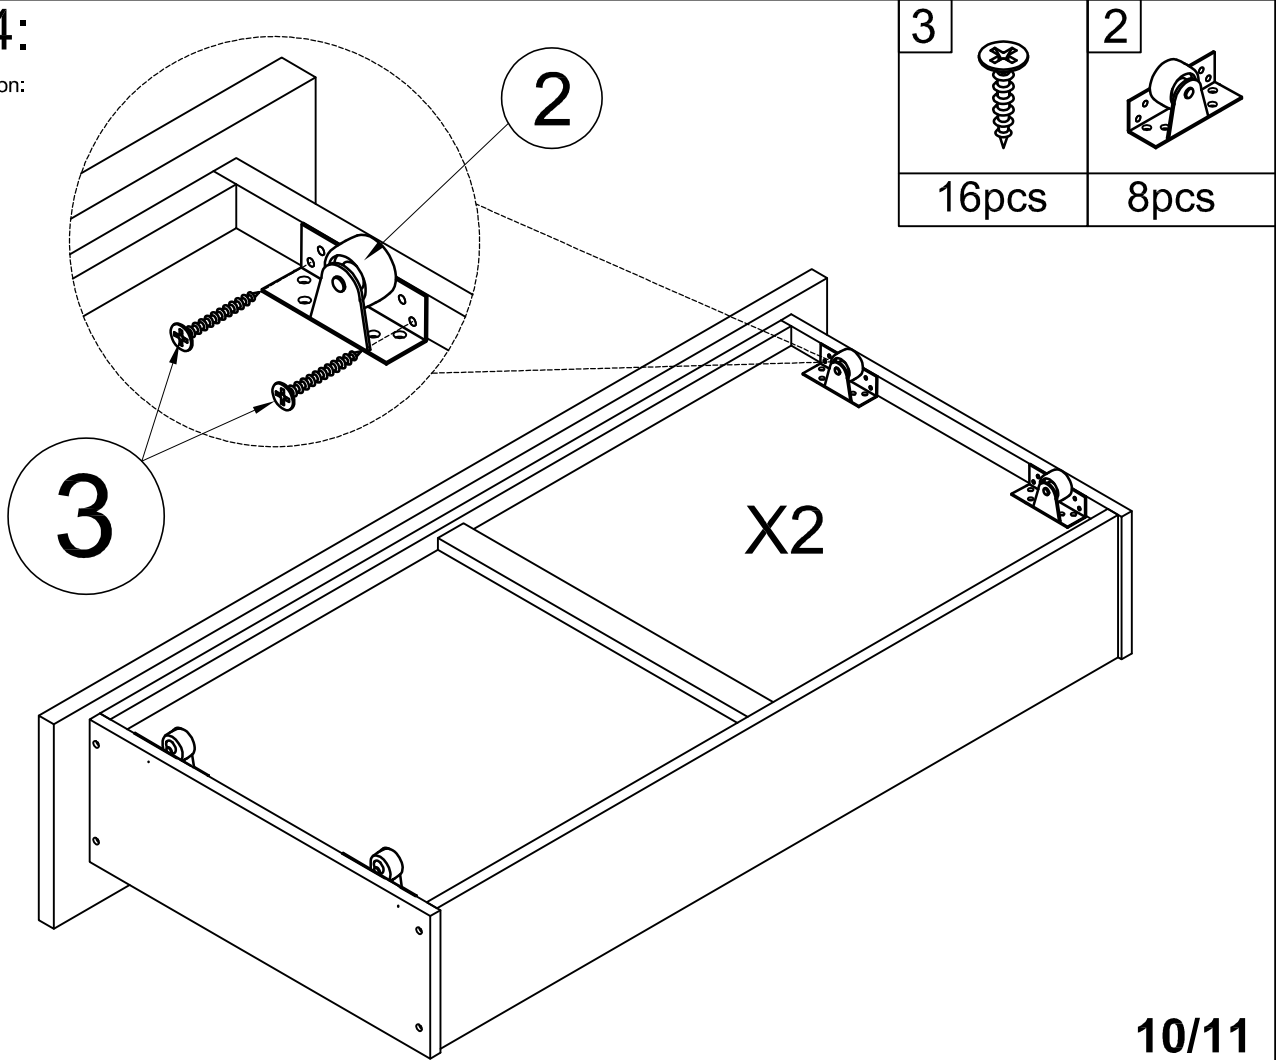

FINISH

