


ASSEMBLY INSTRUCTION

ITEM NO.: TYXY1012

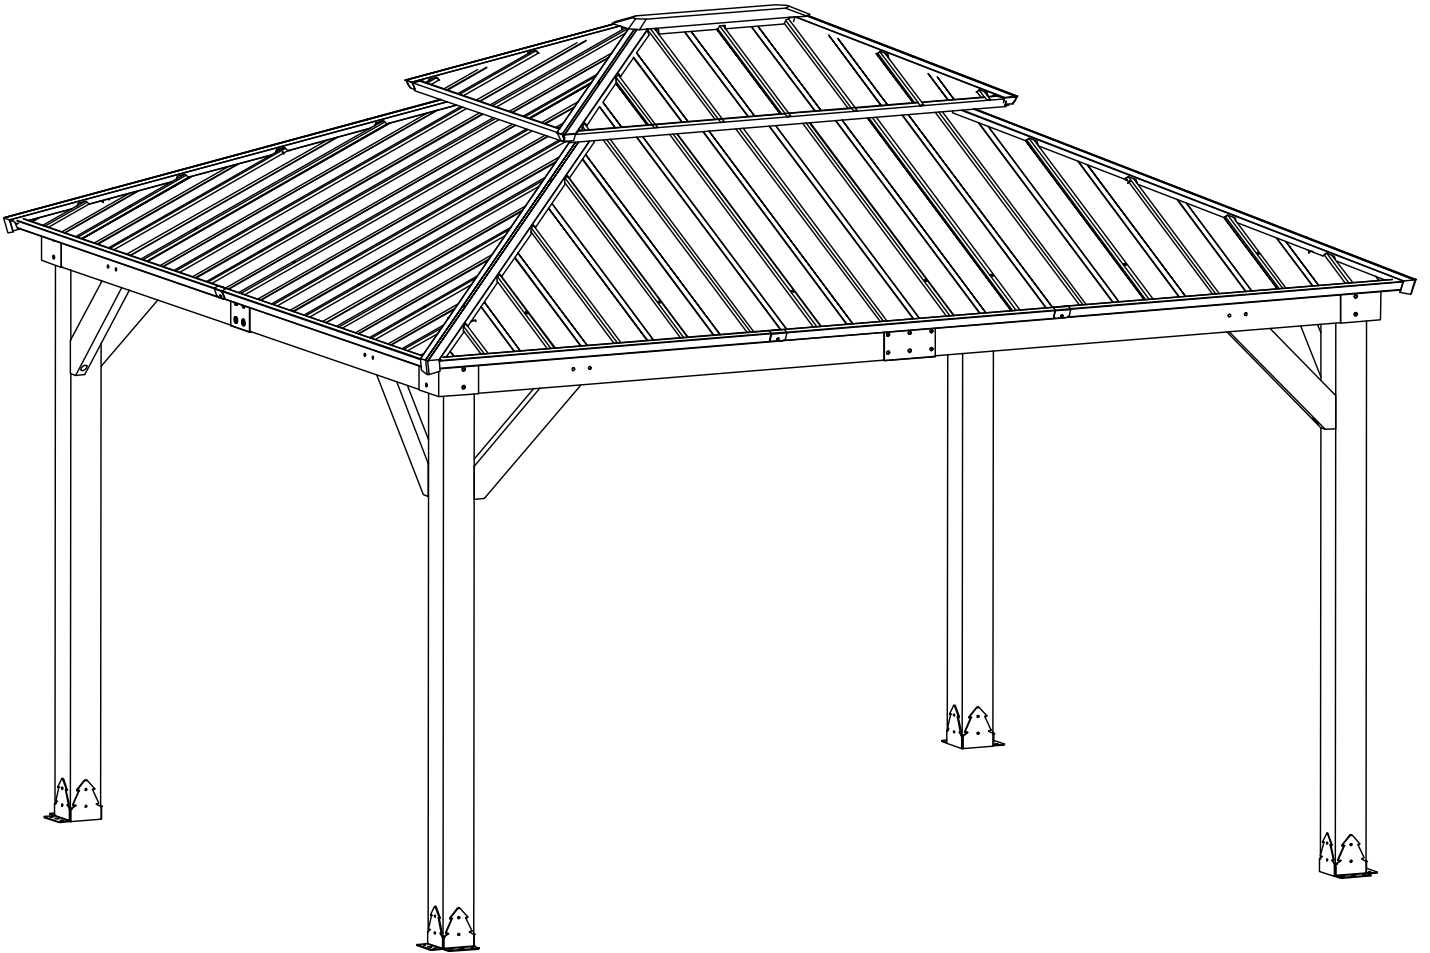

Before You Start

Please read all instruction carefully.
Retain instructions for future reference.
Separate and count all parts and Hardware.
Read through each step carefully and follow the proper order.
Keep all small parts and packaging materials for this product .

Tools Required For Assembly



1. It required two or more people to complete assembly.




2. You will need one stepladder.



3. You may need to wear protective gloves.



4. A safety hat is recommended.



5. Use the hex keys in the box.















6. Please use a screwdriver. For ease of construction, you may need to use a drill.











7. Please do not tighten screws fully prior to complete assembly.

PARTS LIST






Item no	Qty	Reference Image
01	4	 1515mm 2/4 BOX
02	4	 1714mm 1/4 BOX
04	8	 4/4 BOX
05	4	 1/4 BOX:2PCS 2/4 BOX:2PCS













Item no	Qty	Reference Image
A1	4	
B1	6	
D1	2	
D2	2	
E1	2	
E2	2	
E3	2	
E4	2	
F1	4	
H2	2	 F
H6	2	 F
H7	2	 F
H8	2	 F
H9	2	 F
I5	2	
I6	2	
K1	2	
K2	2	
K3	2	

3/4 BOX











Item no	Qty	Reference Image	3/4 BOX
K4	2	 794	
K16	2	 1105	
K17	2	 1105	
K12	2	 629	
K13	2		
K14	4		
S1	4		
S2	4		
L1	1		
L2	1		




3/4 BOX

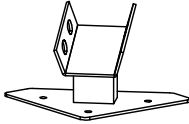Item no	Qty	Reference Image	Item no	Qty	Reference Image
M1	4		N1	4	
Z2	4		Z3	2	
Z4	6		Z6	2	
X1	8		X2	8	
X3	4		X4	4	
Q1	10		Q2	1	



Item no	Qty	Description	Reference Image
AA	8	M8*145	
BB	40+4	M5*30	
CC	8	M10*80	
DD	8	M6*70	
EE	12+2	M5*40	
FF	20+1	M8*25	
GG	14+2	M6	
HH	16	M8*60	
KK	12+1	M6*55	
LL	20+2	M6*45	
MM	22+1		
NN	2+1	M6*25	
TT	138+14	M6*15	
UU	16	Φ 6x200	
Y1	1	M6	
Y2	1	M6	
Y3	2	M10	
Y4	2	M8	
Y5	2	M8	
Y6	2	M6	
Y7	1	M6	
Y8	1	M8	

3/4 BOX

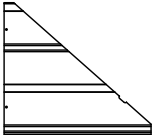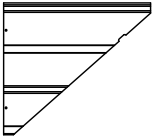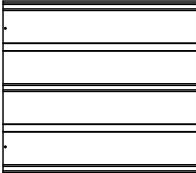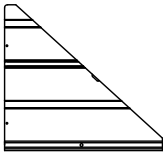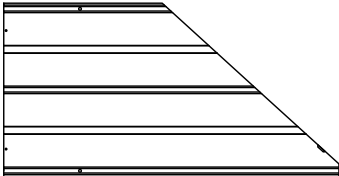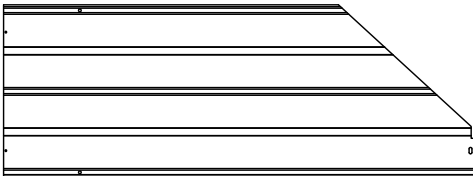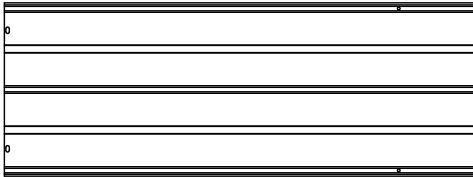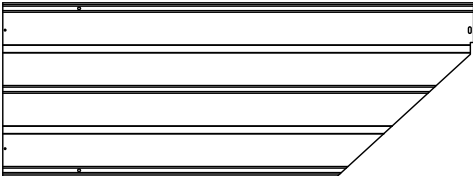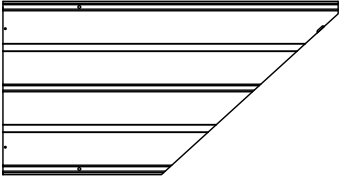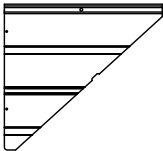Item no	Qty	Reference Image	4/4 BOX
T1	4		
T7	4		
T8	2		
T12	4		
T13	4		
T14	4		
T15	2		
T16	4		
T17	4		
T18	4		

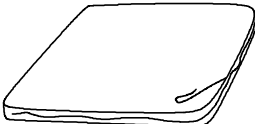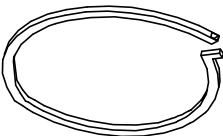
Item no	Qty	Reference Image	4/4 BOX
VV	1		
WW	1		
SS	104+5		

STEP. 1

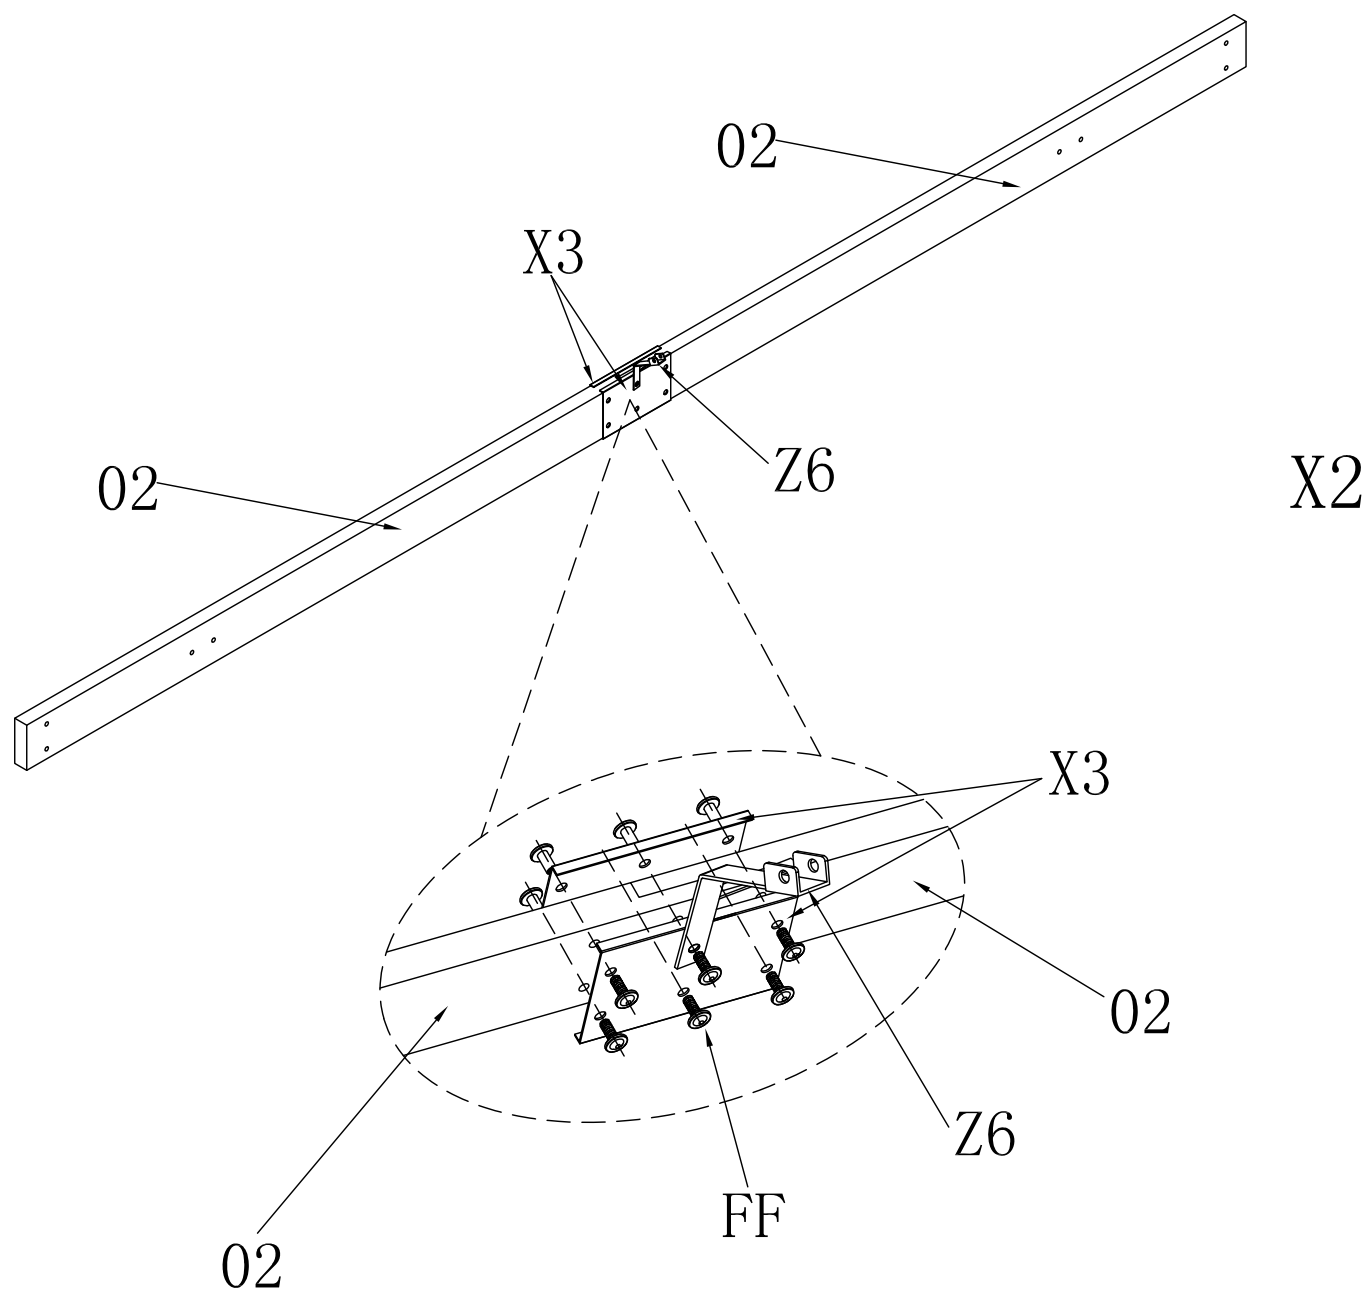


1714mm

02 4X



Z6 2X









X3 4X





M8*25

FF 12X



STEP. 2

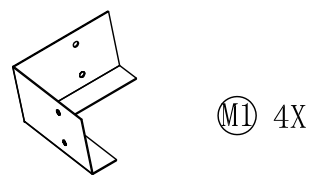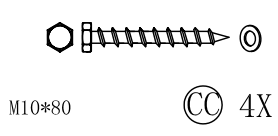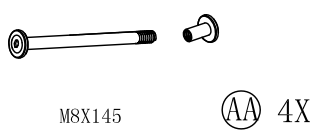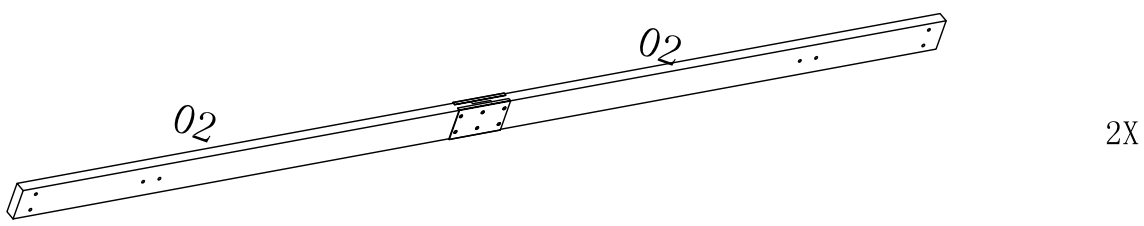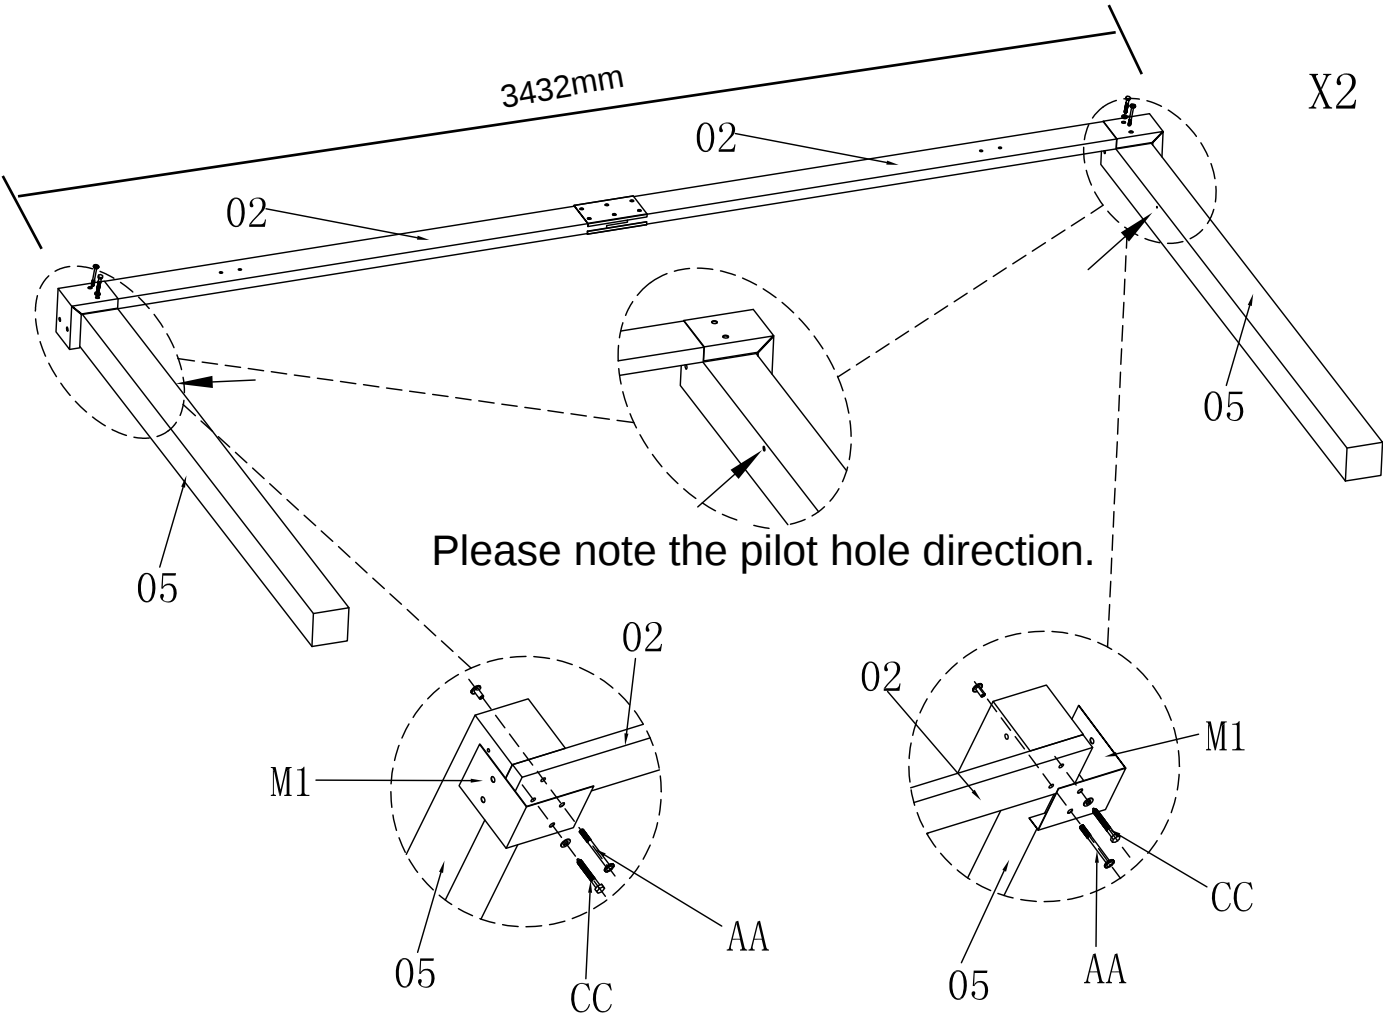

STEP. 3

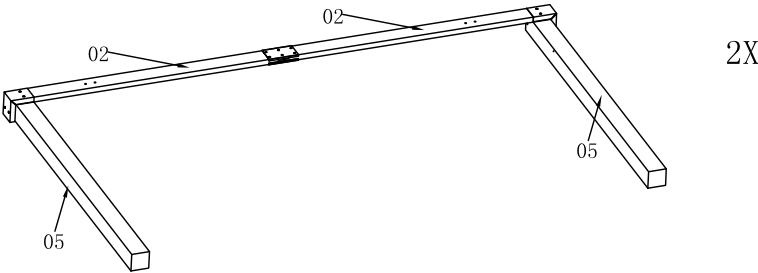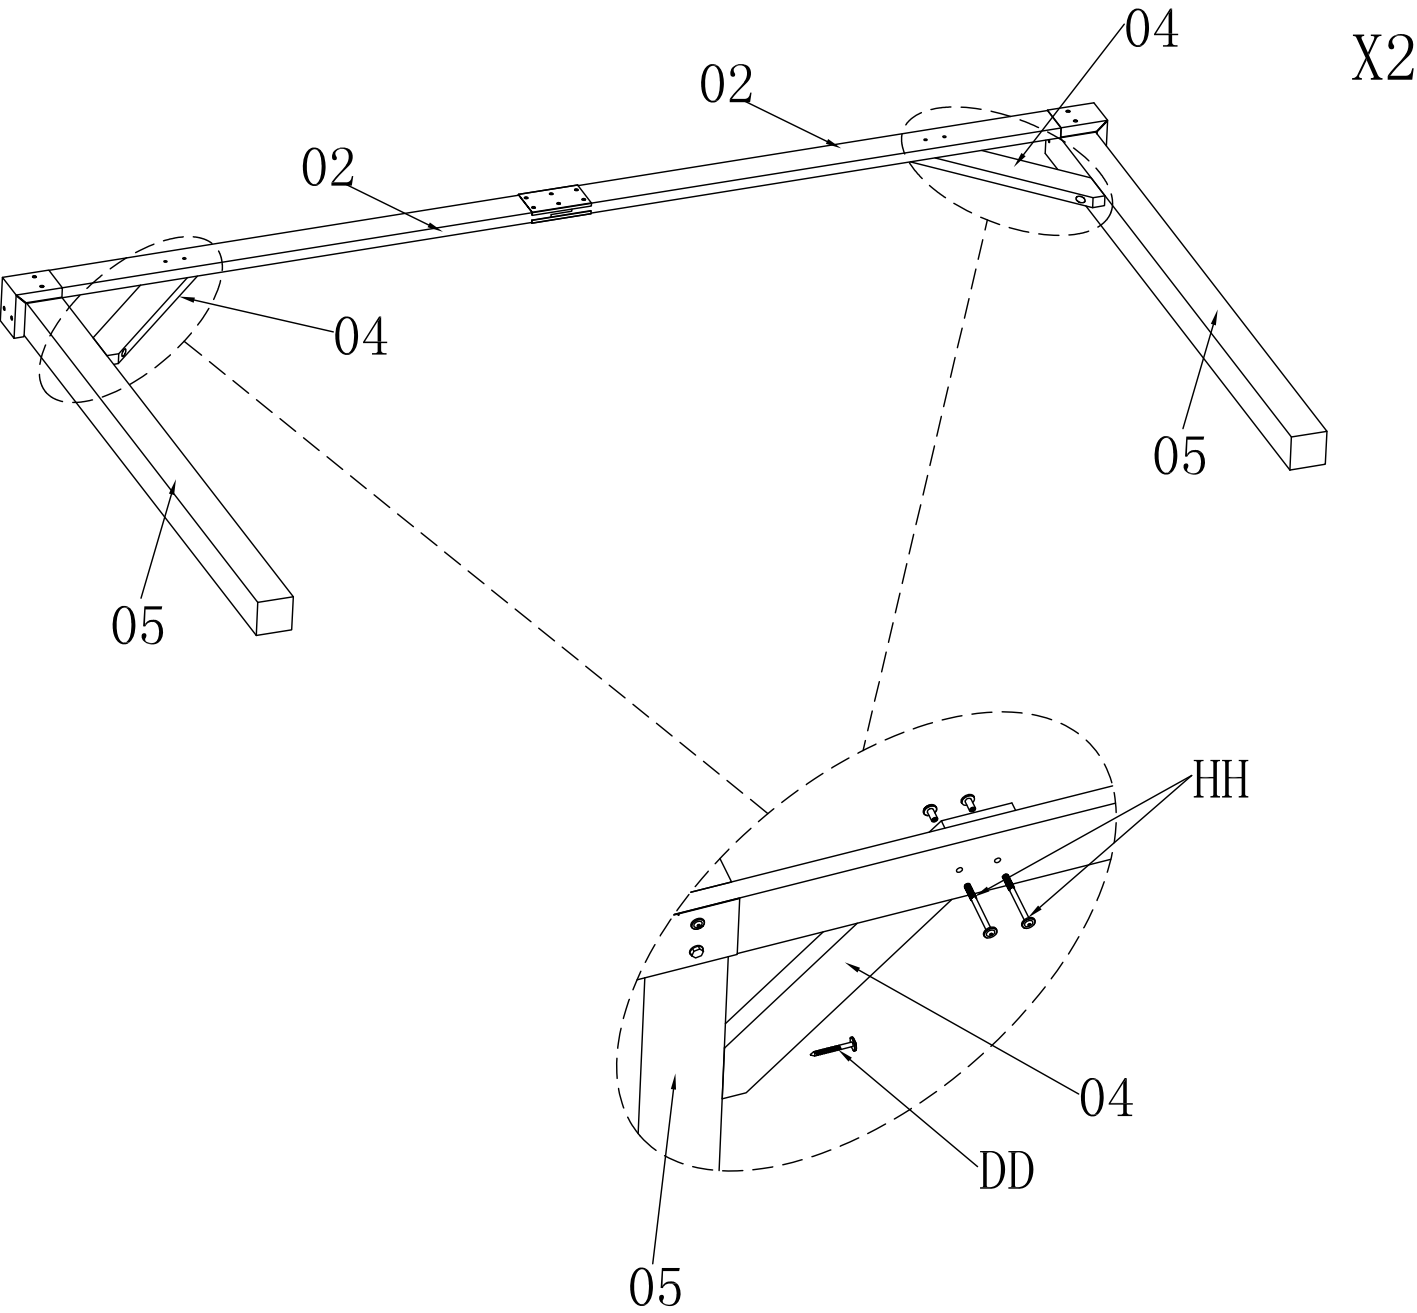

STEP. 4

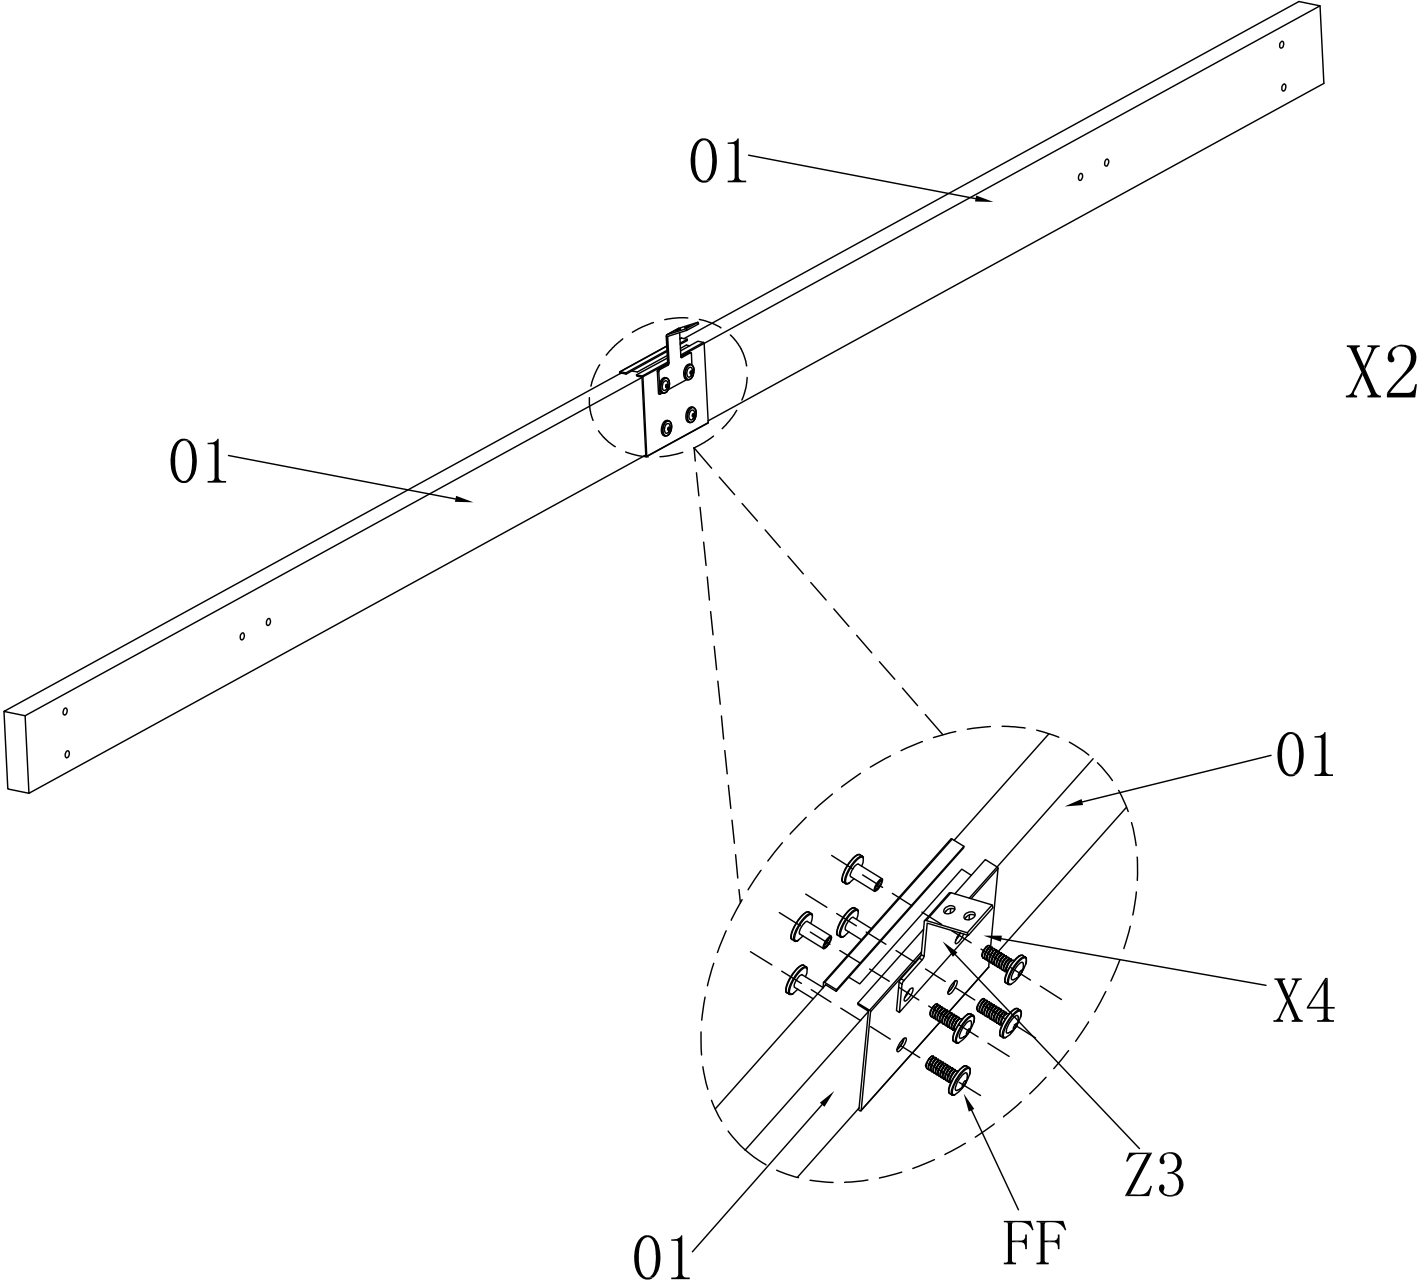

1515mm

① 4X



③ 2X




④ 4X




M8*25

⑥ 8X


STEP. 5

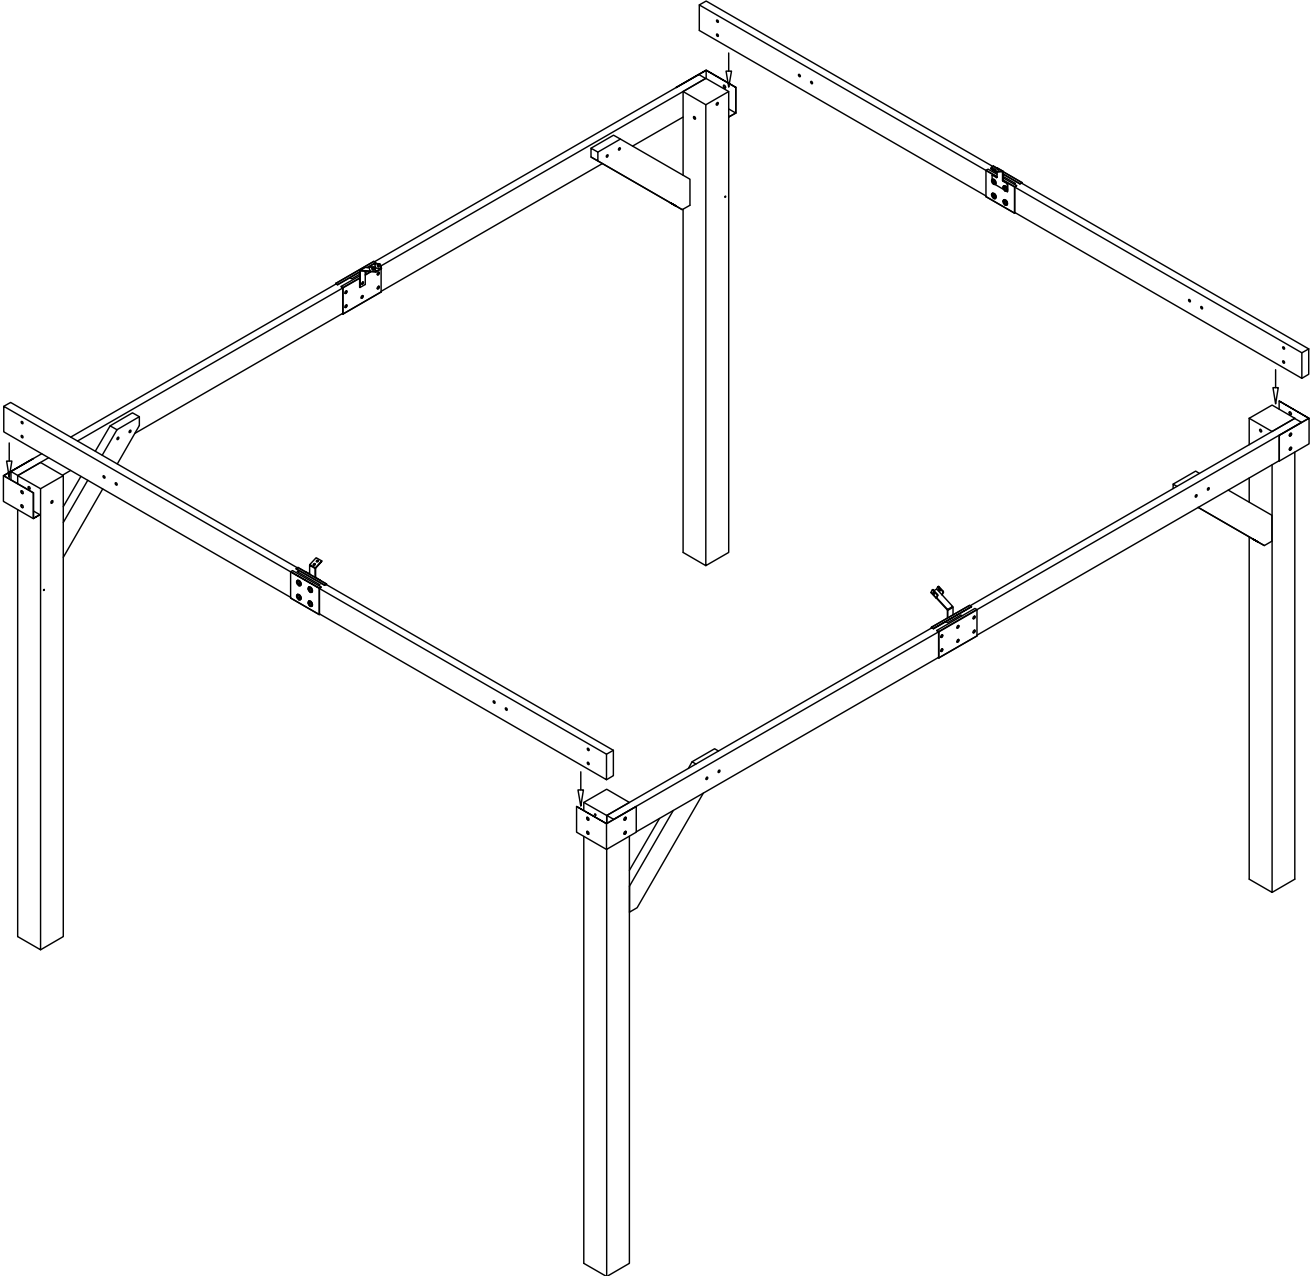

STEP. 6

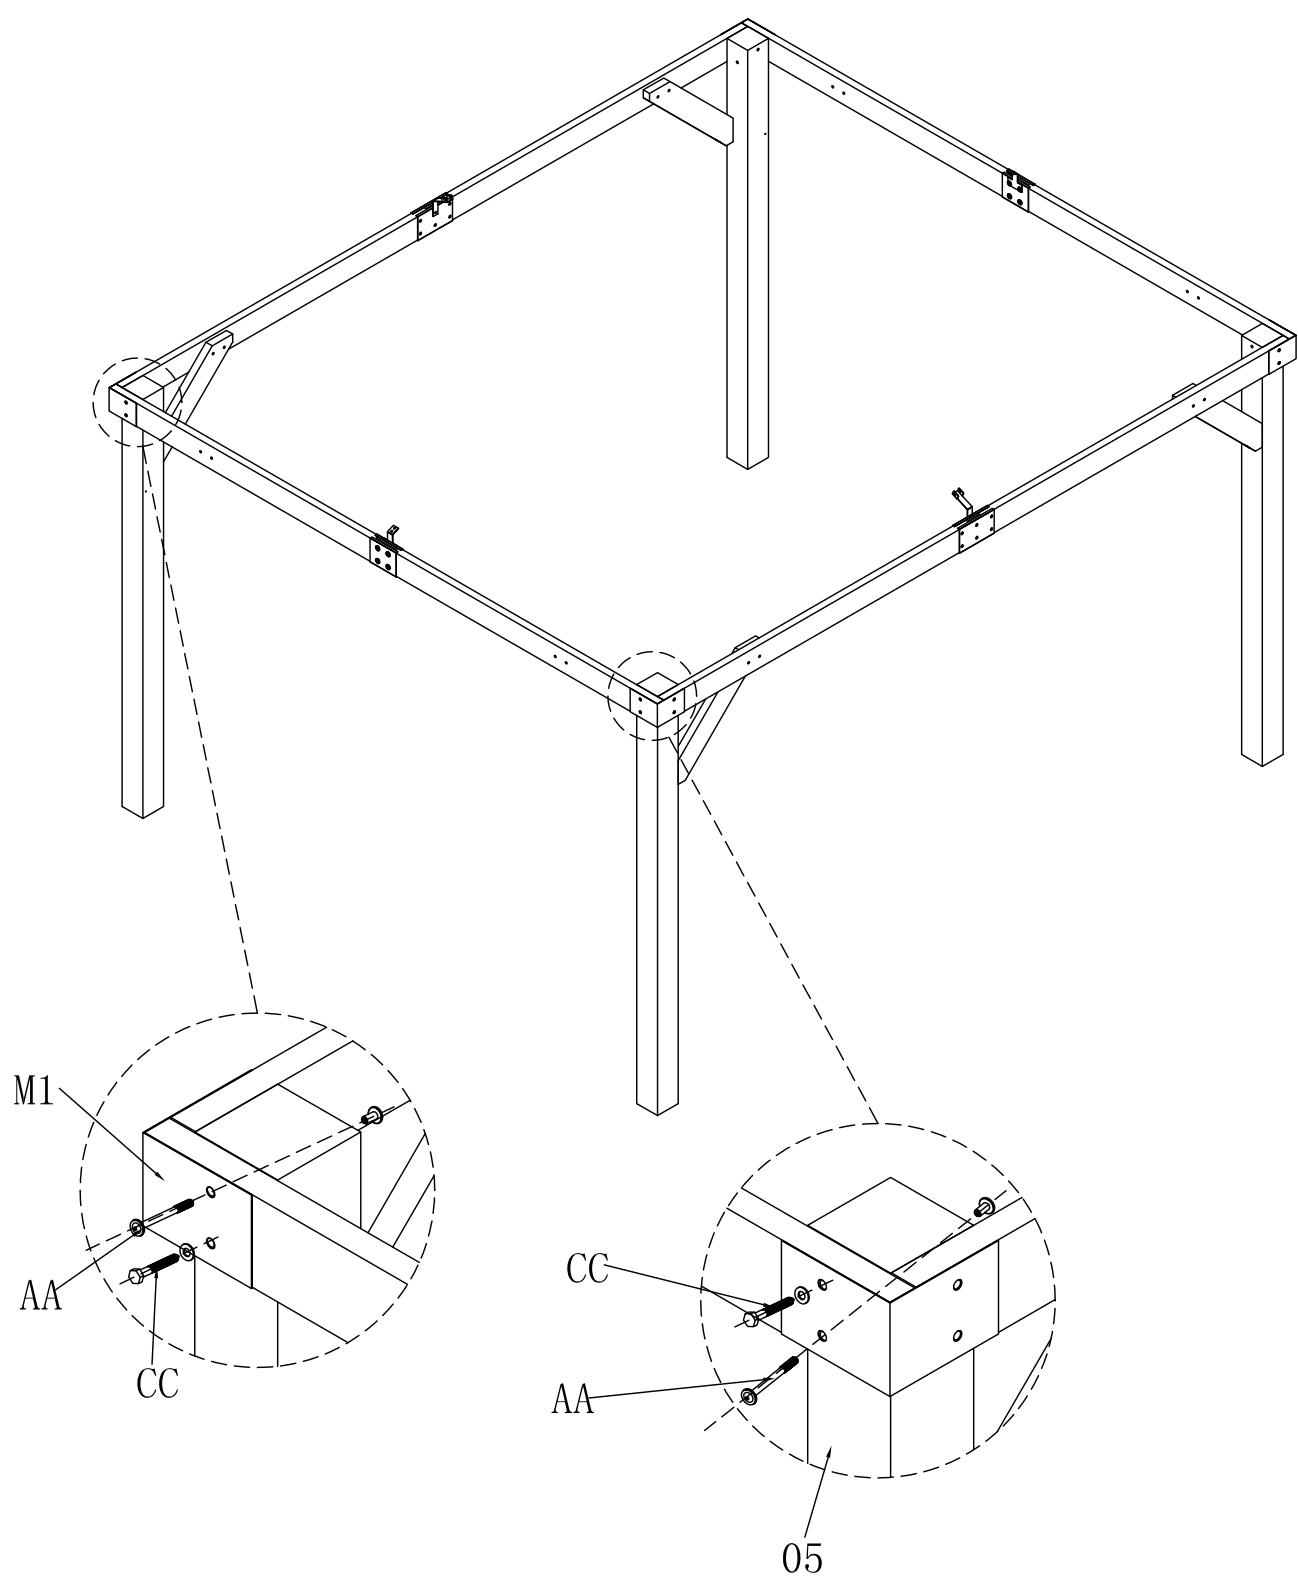


M8X145 (AA) 4X




M10*80 (CC) 4X

STEP. 7

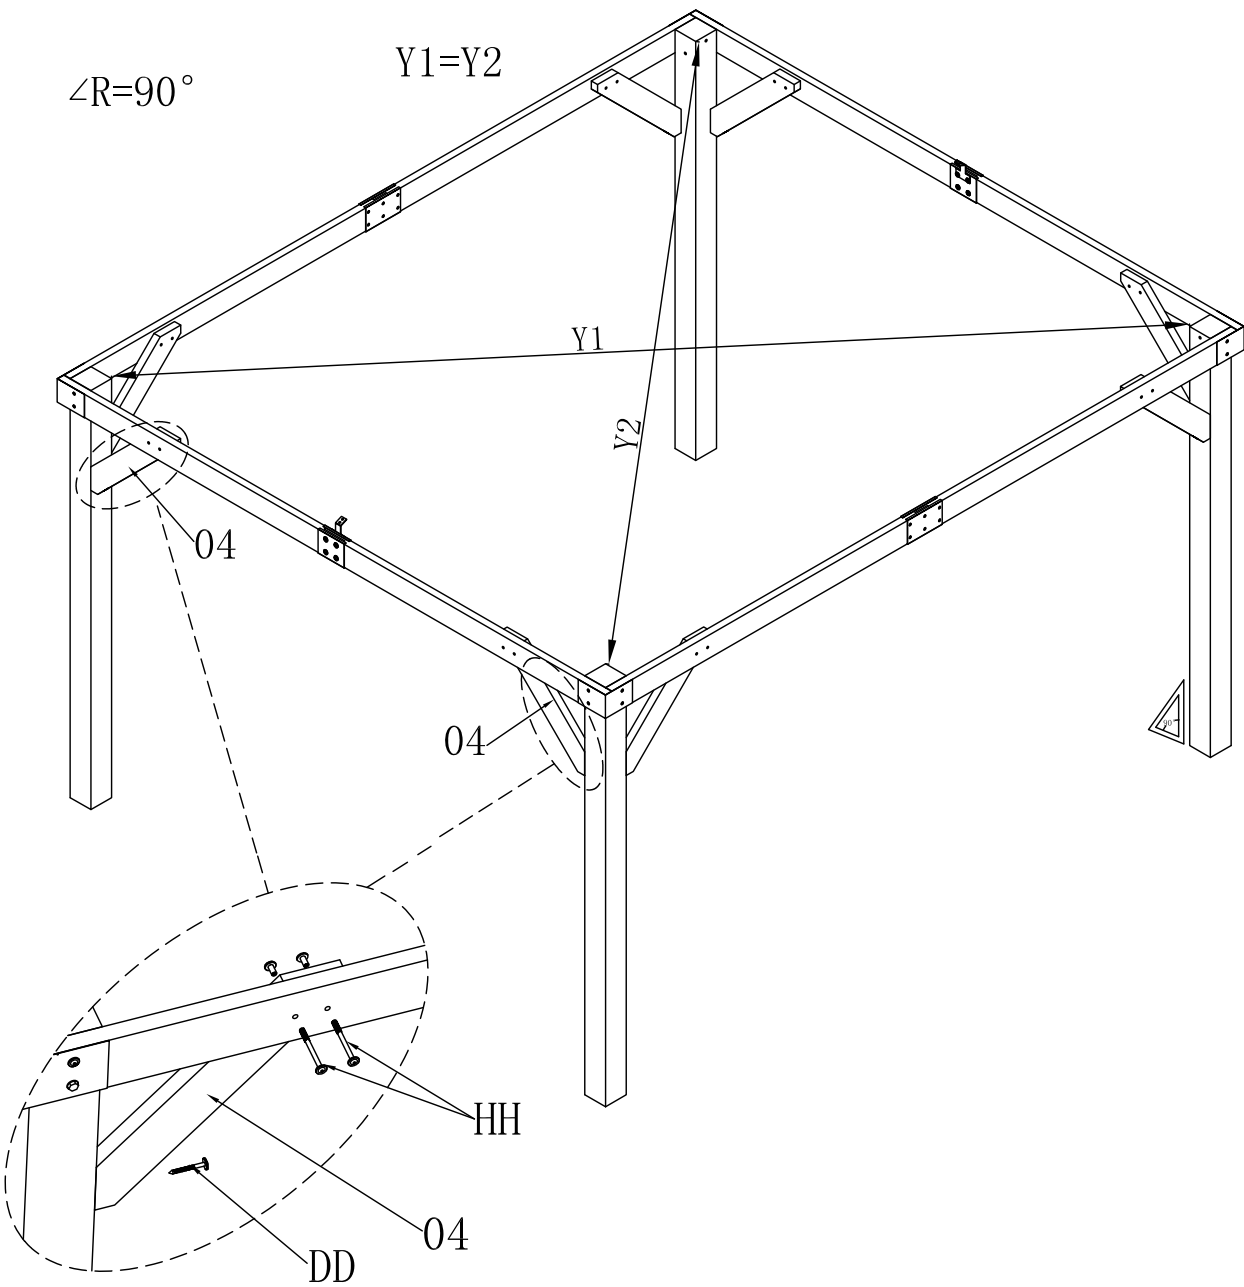

04 4X



DD 4X



M6*70



HH 8X

M8X60

STEP. 8

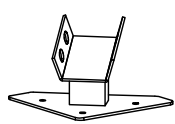
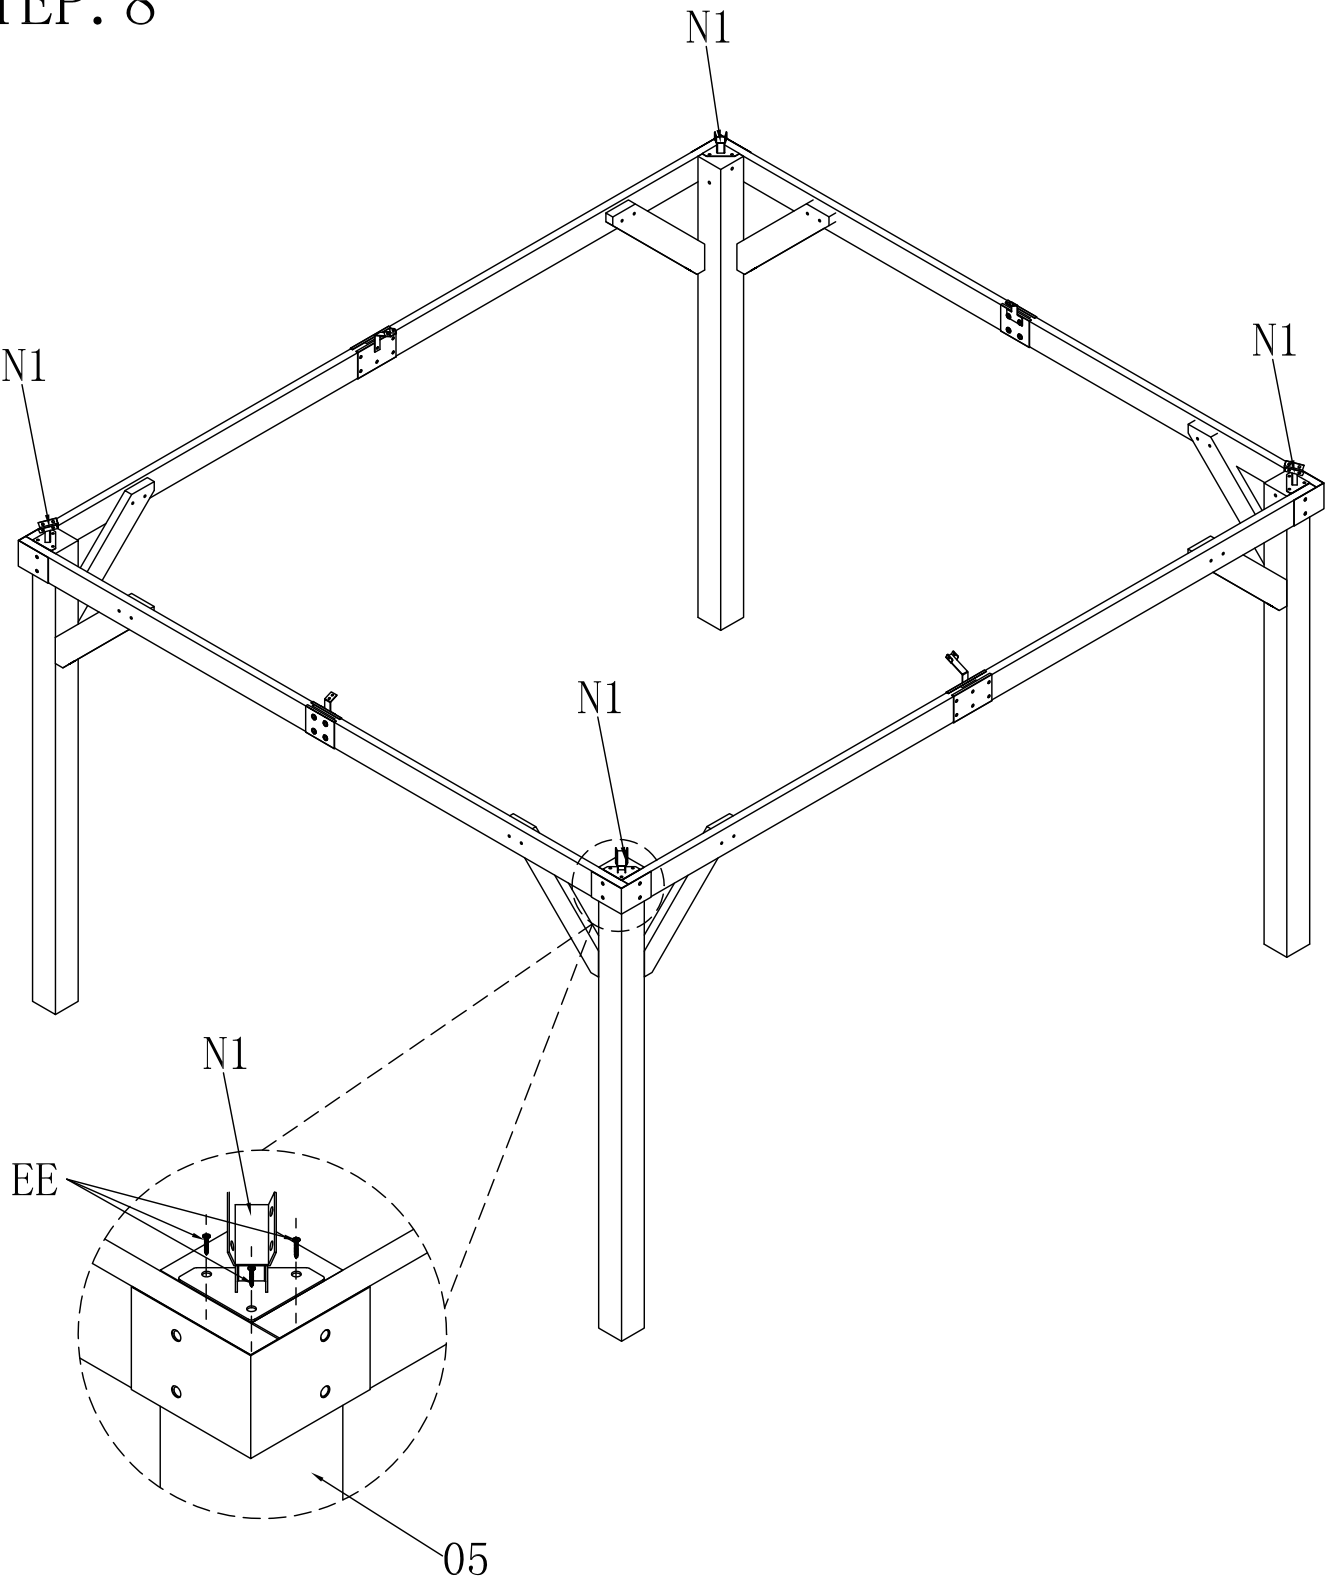


(N1) 4X



(EE) 12X

STEP. 9

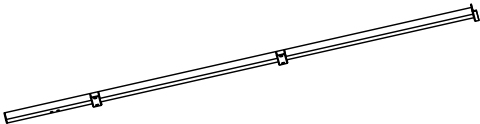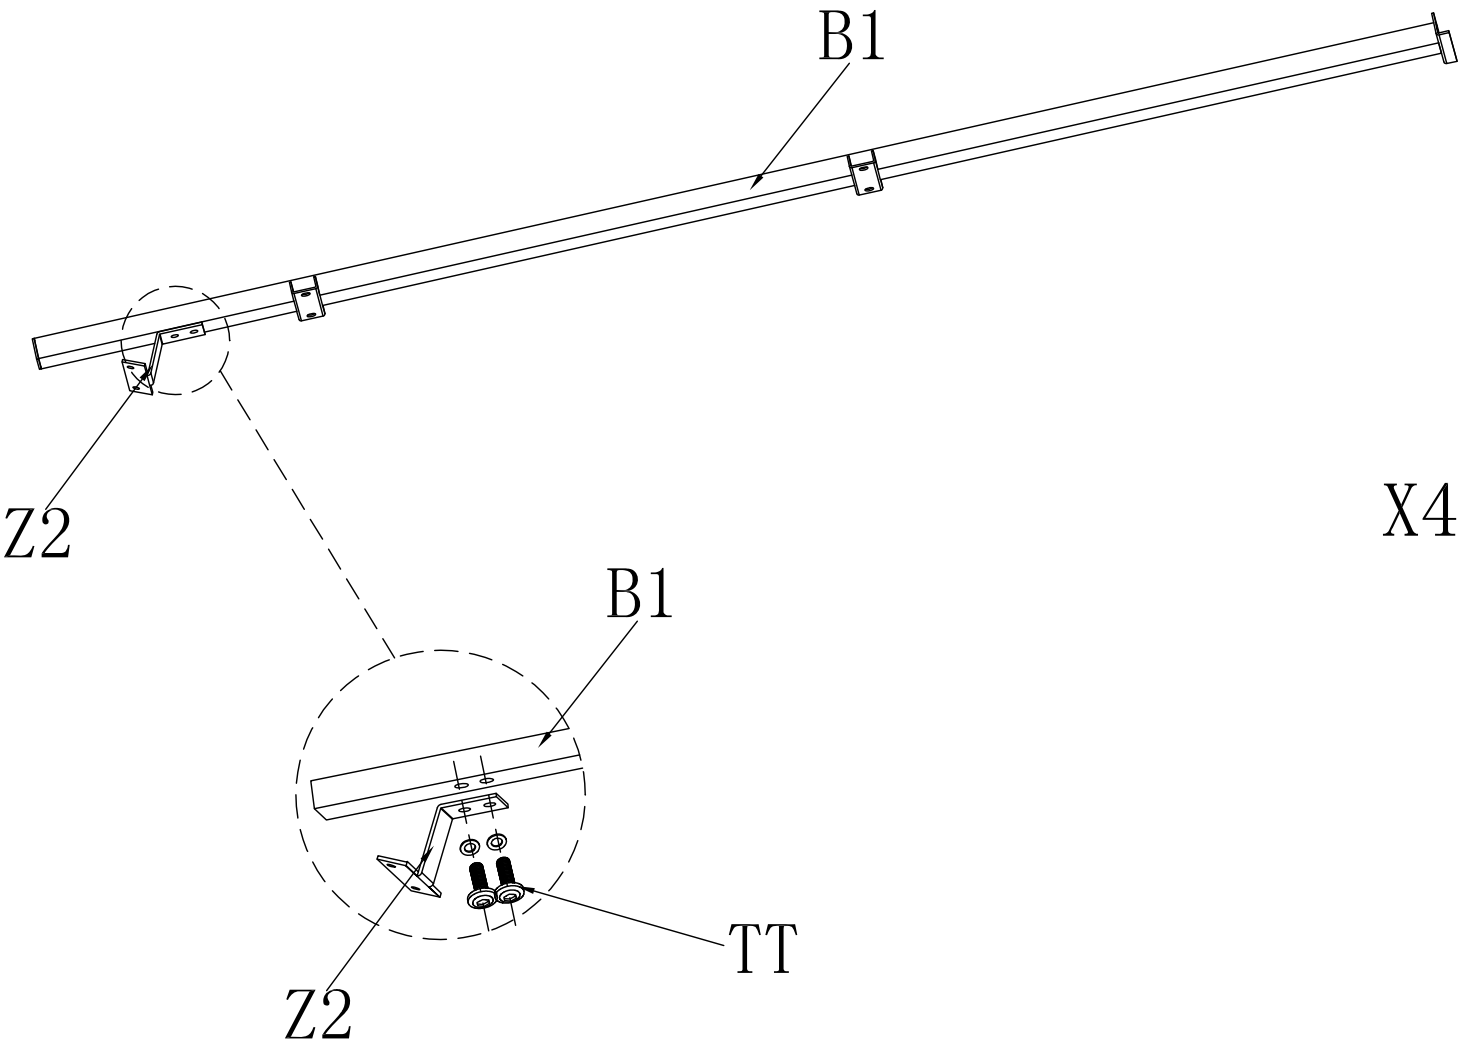

(B1) 4X





(Z2) 4X




M6X15

(TT) 8X

STEP. 10

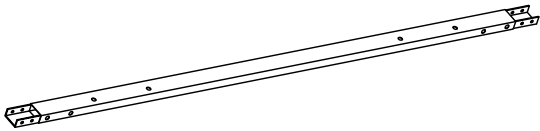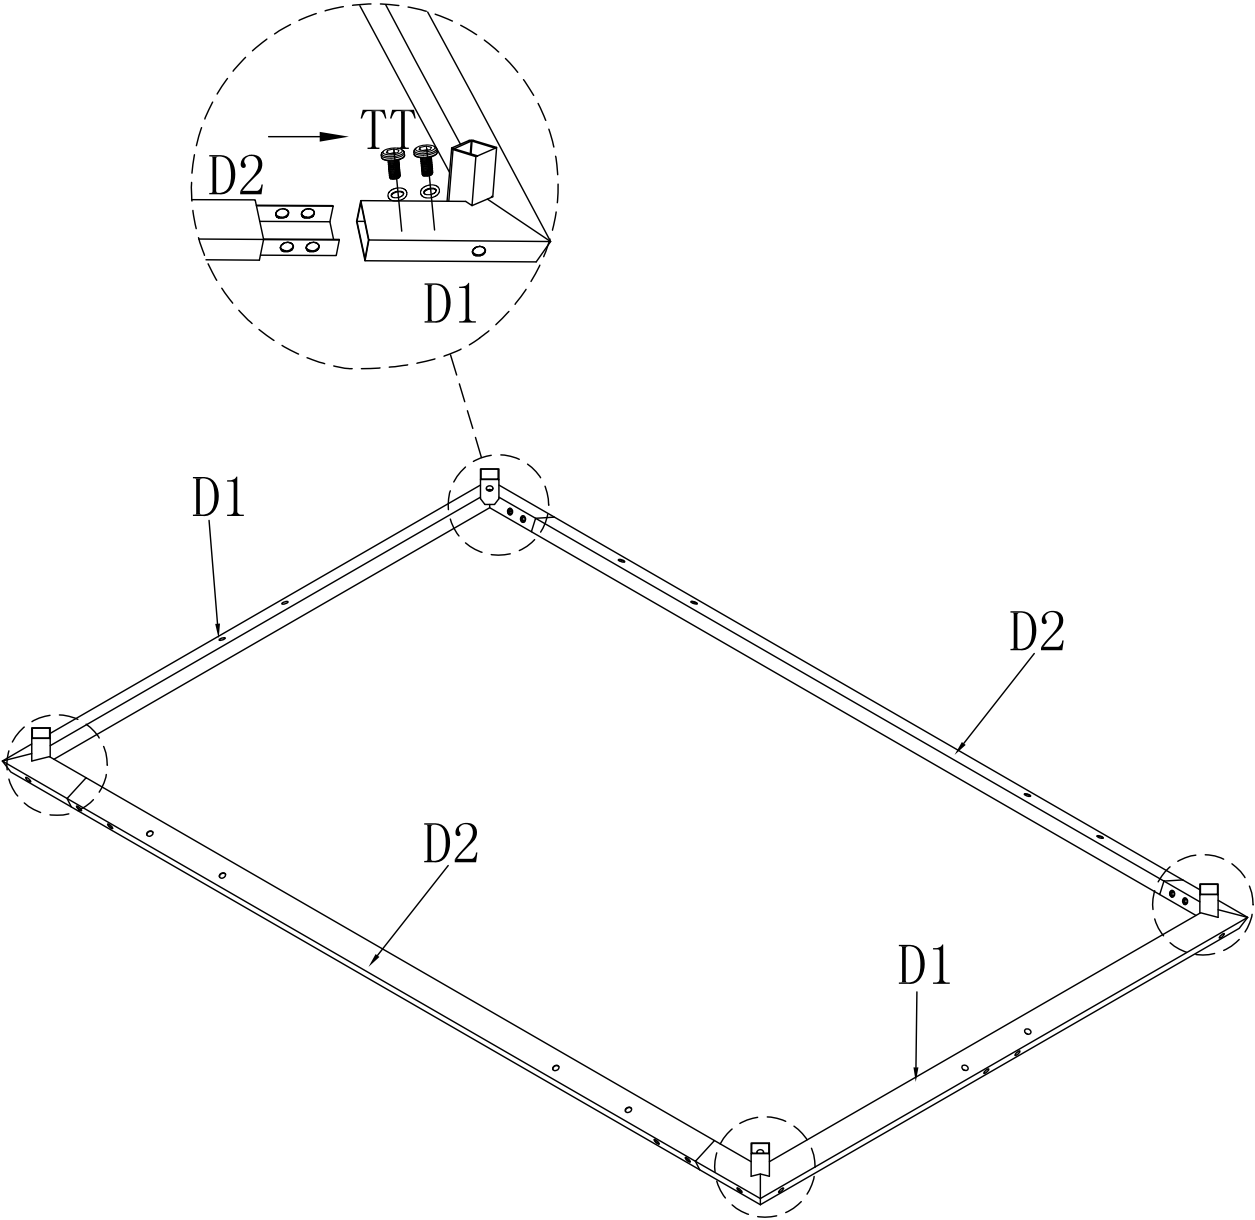

⌀2 2X

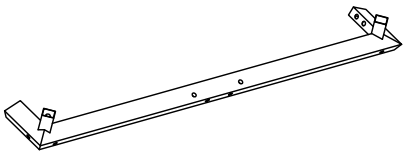


⌀1 2X





Ⓣ 8X

STEP. 11

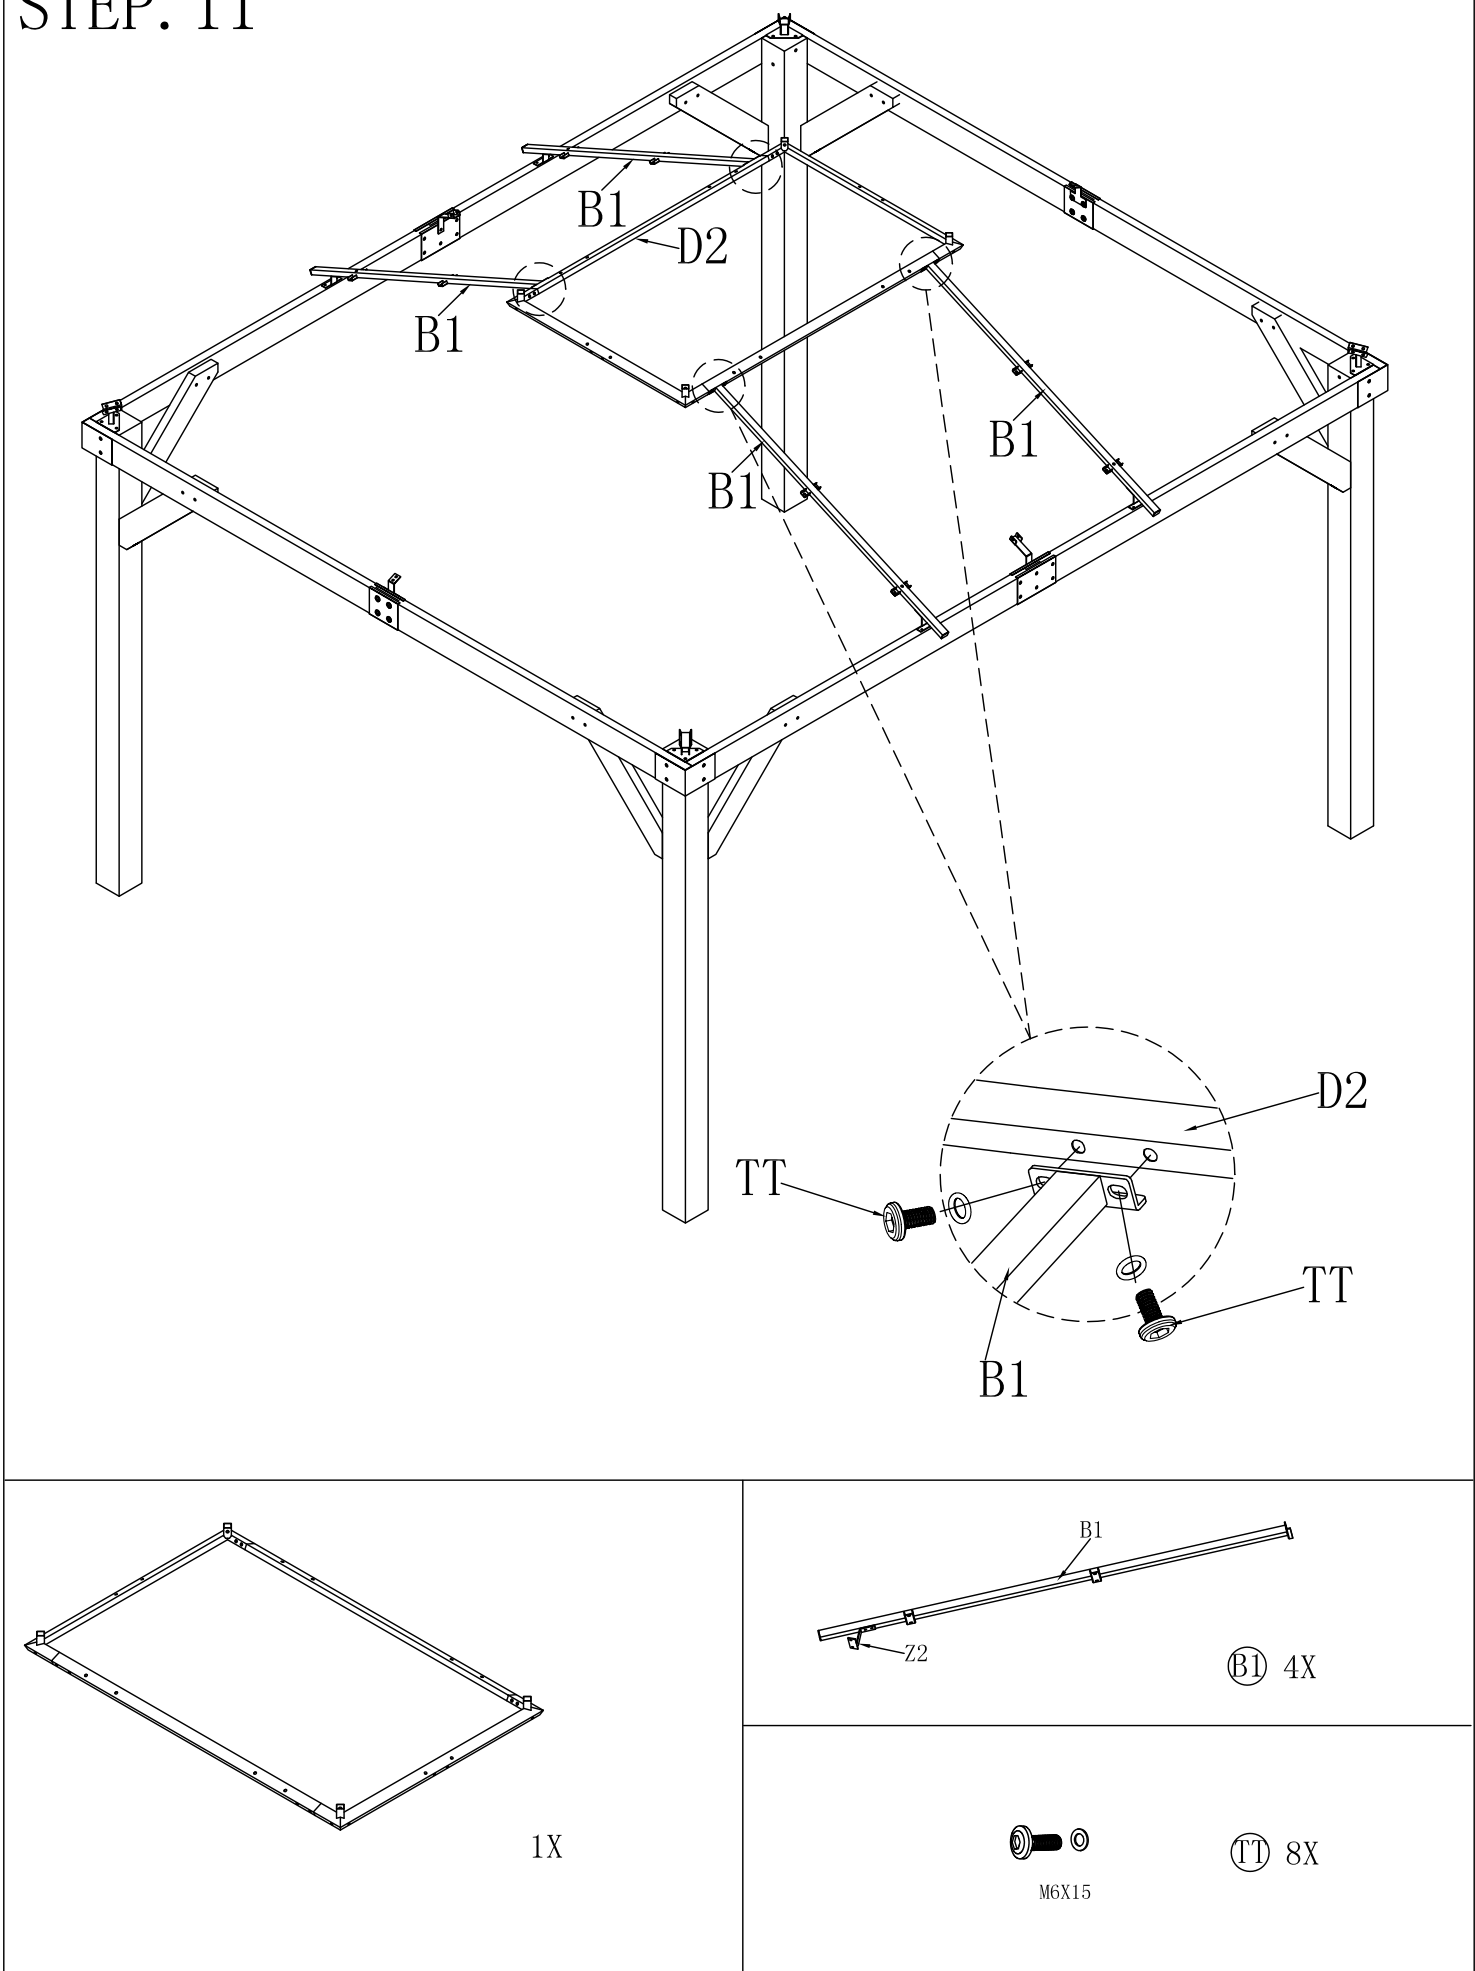

STEP. 12

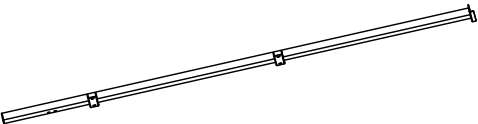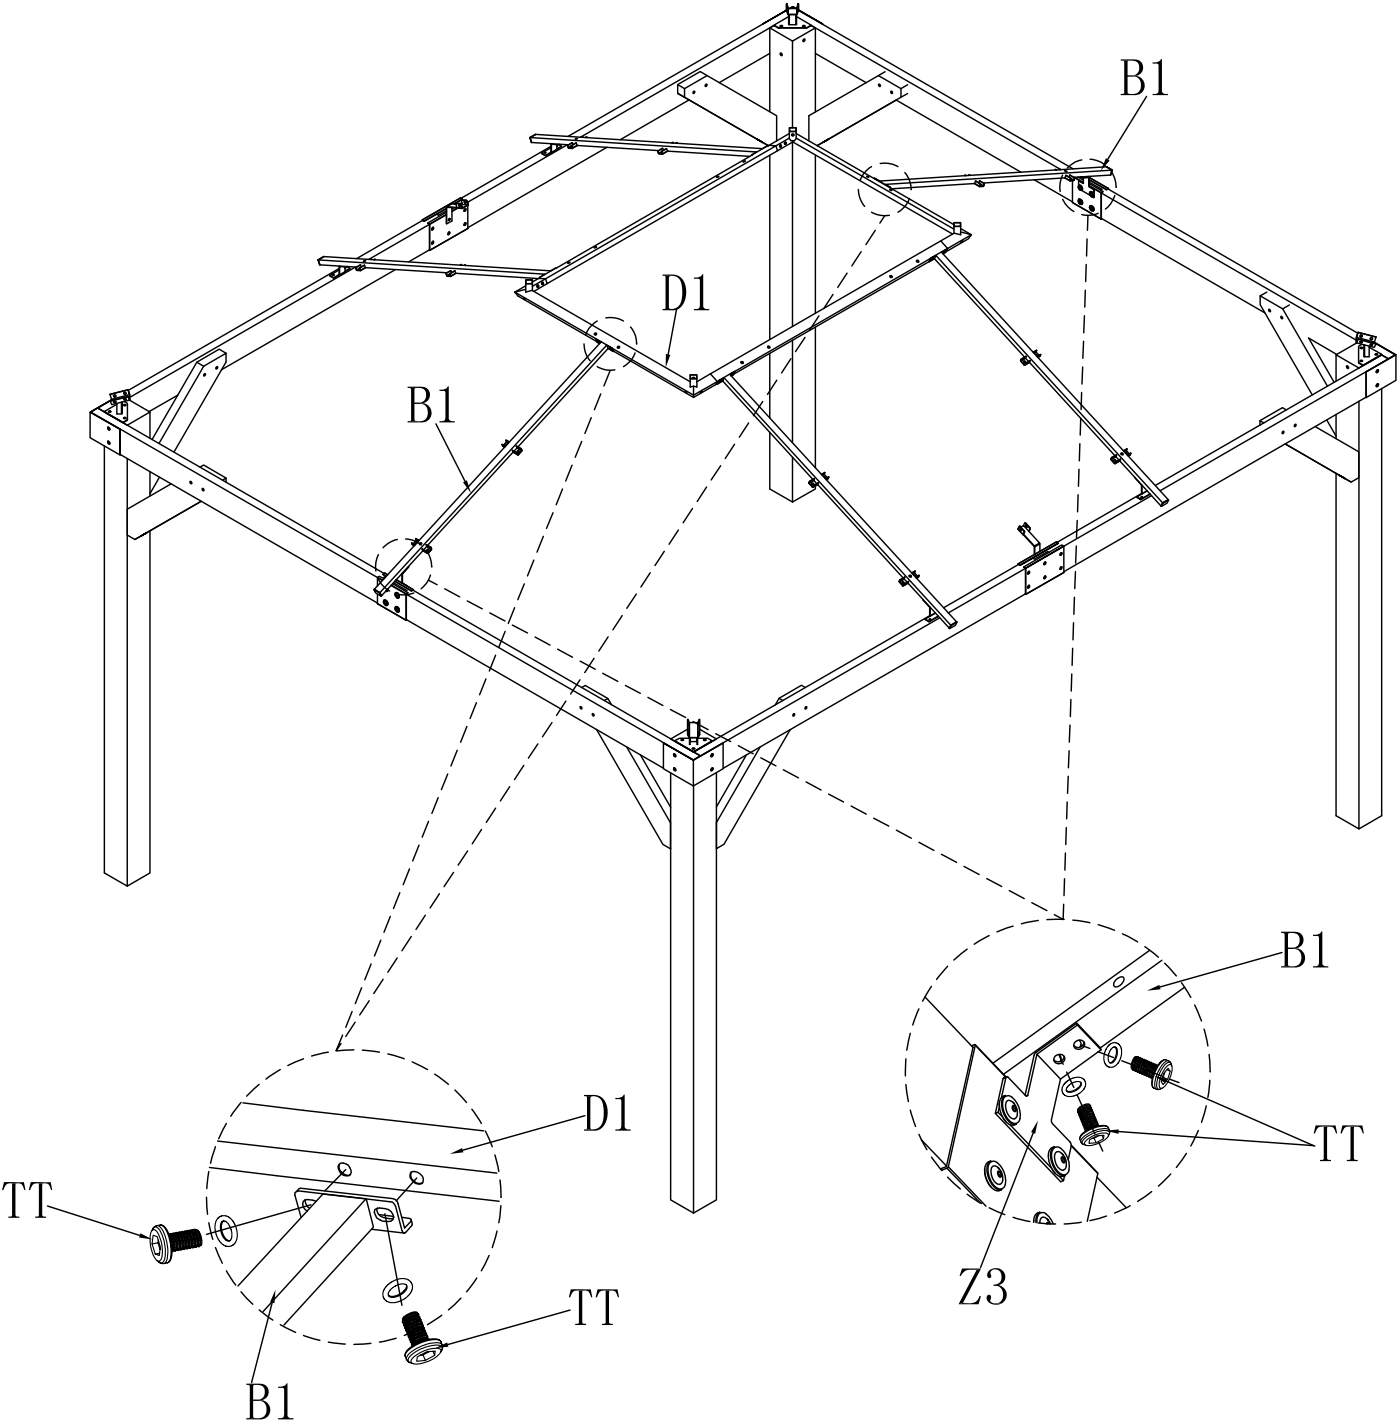



(B1) 2X



M6X15

(TT) 8X

STEP. 13

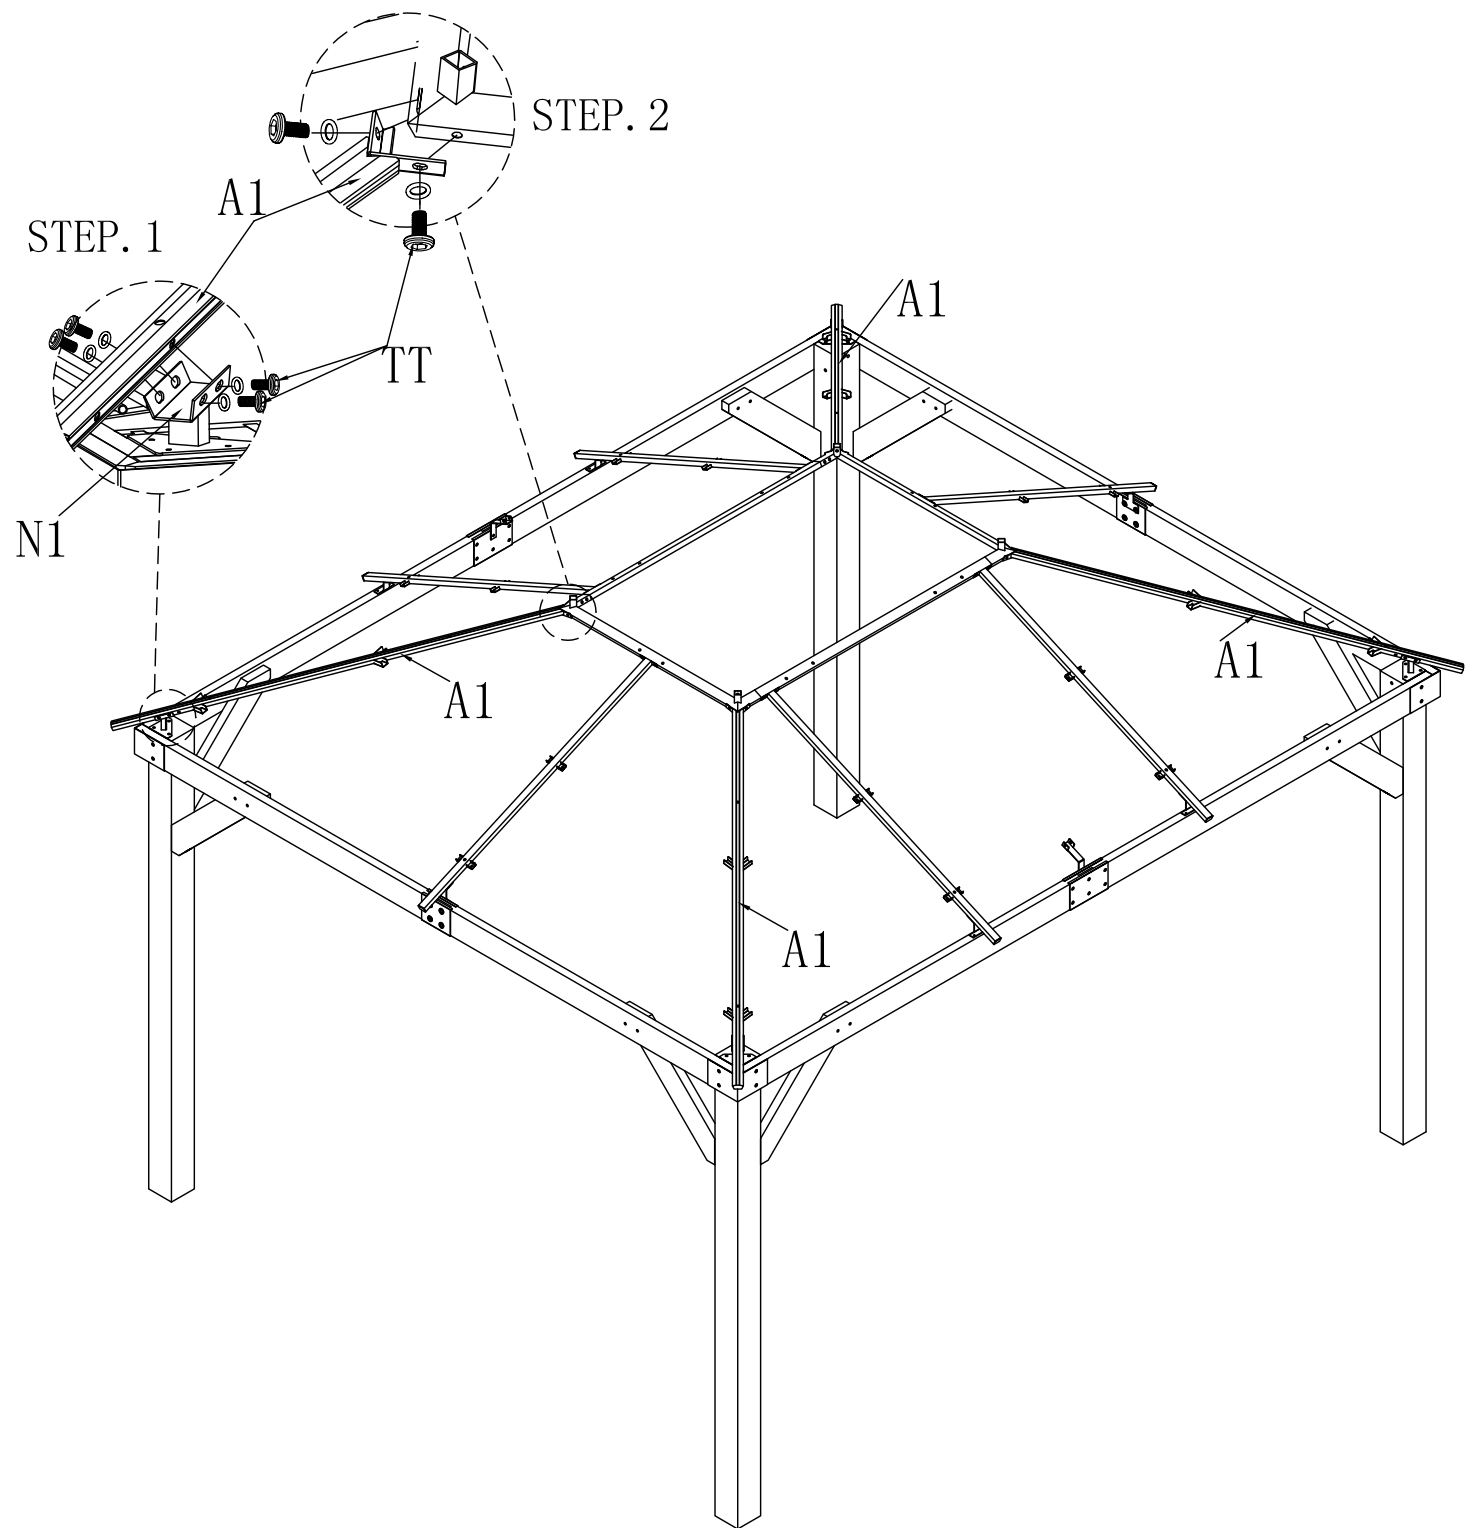



(A1) 4X




M6X15

(TT) 24X

STEP. 14

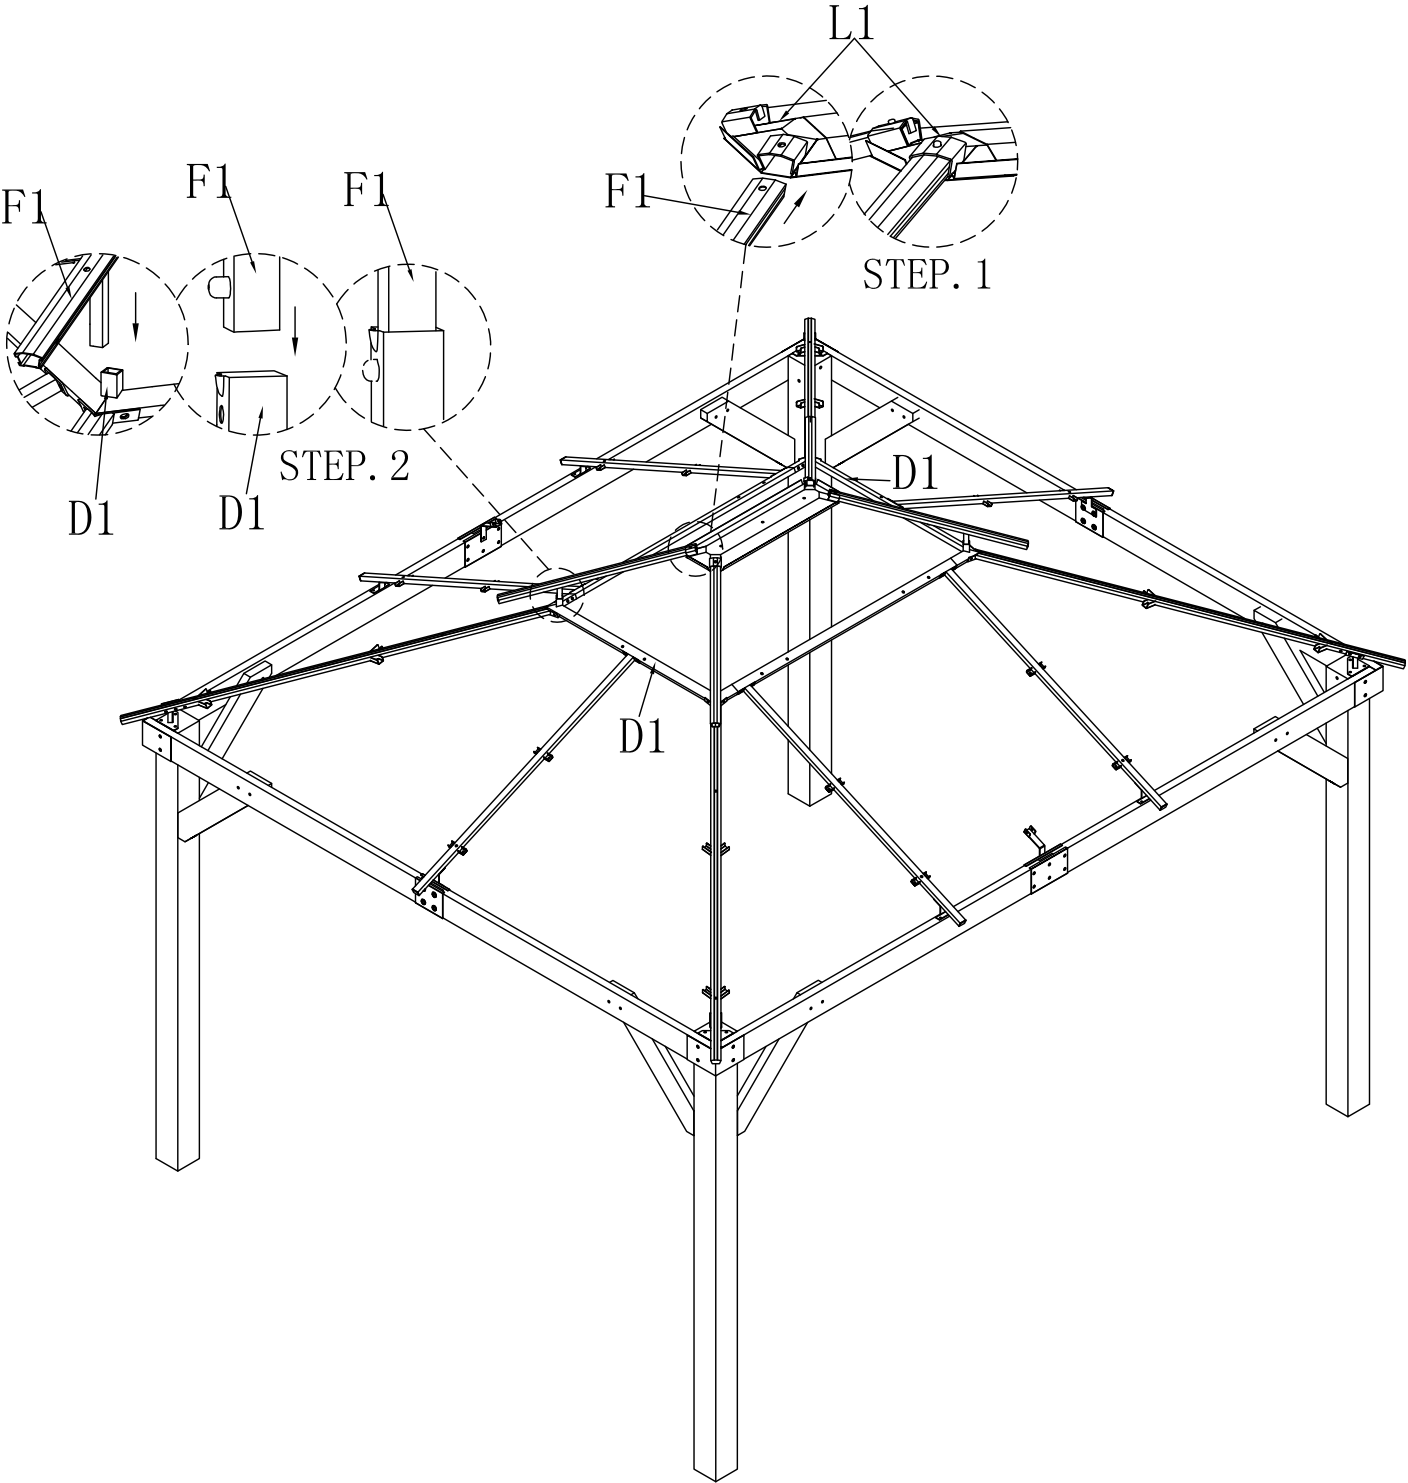


ⓕ1 4X




Ⓛ1 1X

STEP. 15

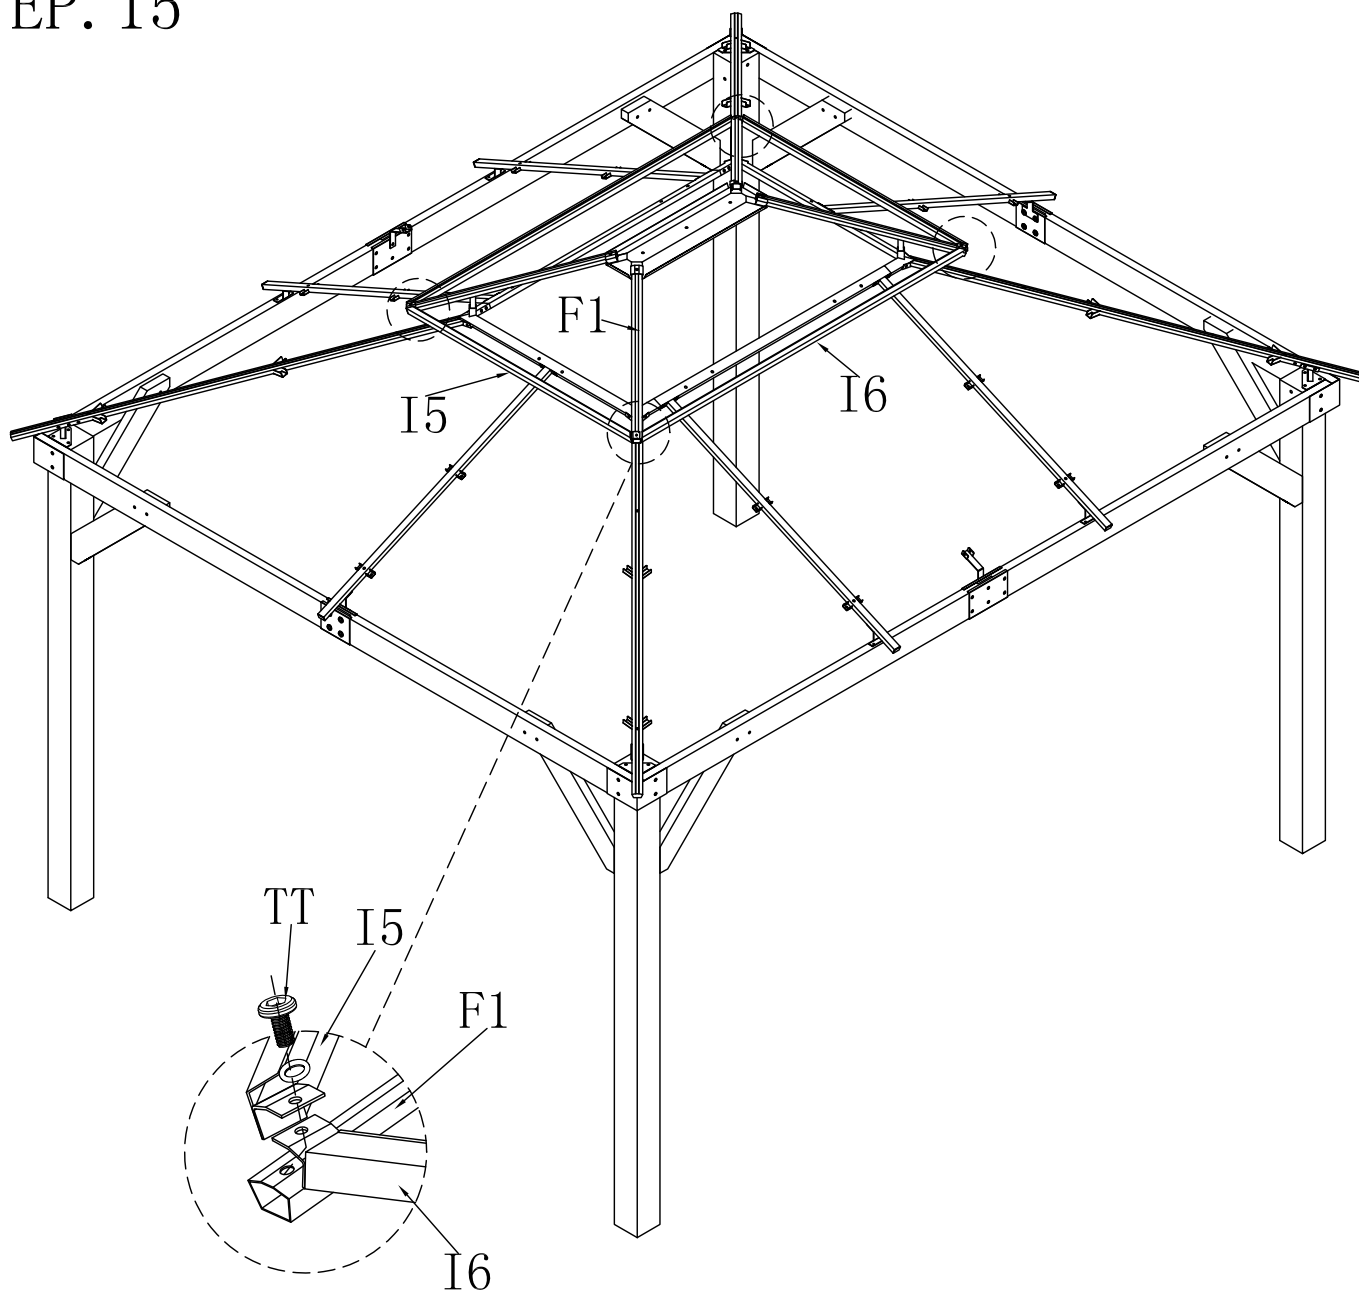

⑮ 2X





⑯ 2X




M6X15

Ⓣ 4X


STEP. 16

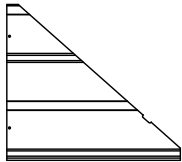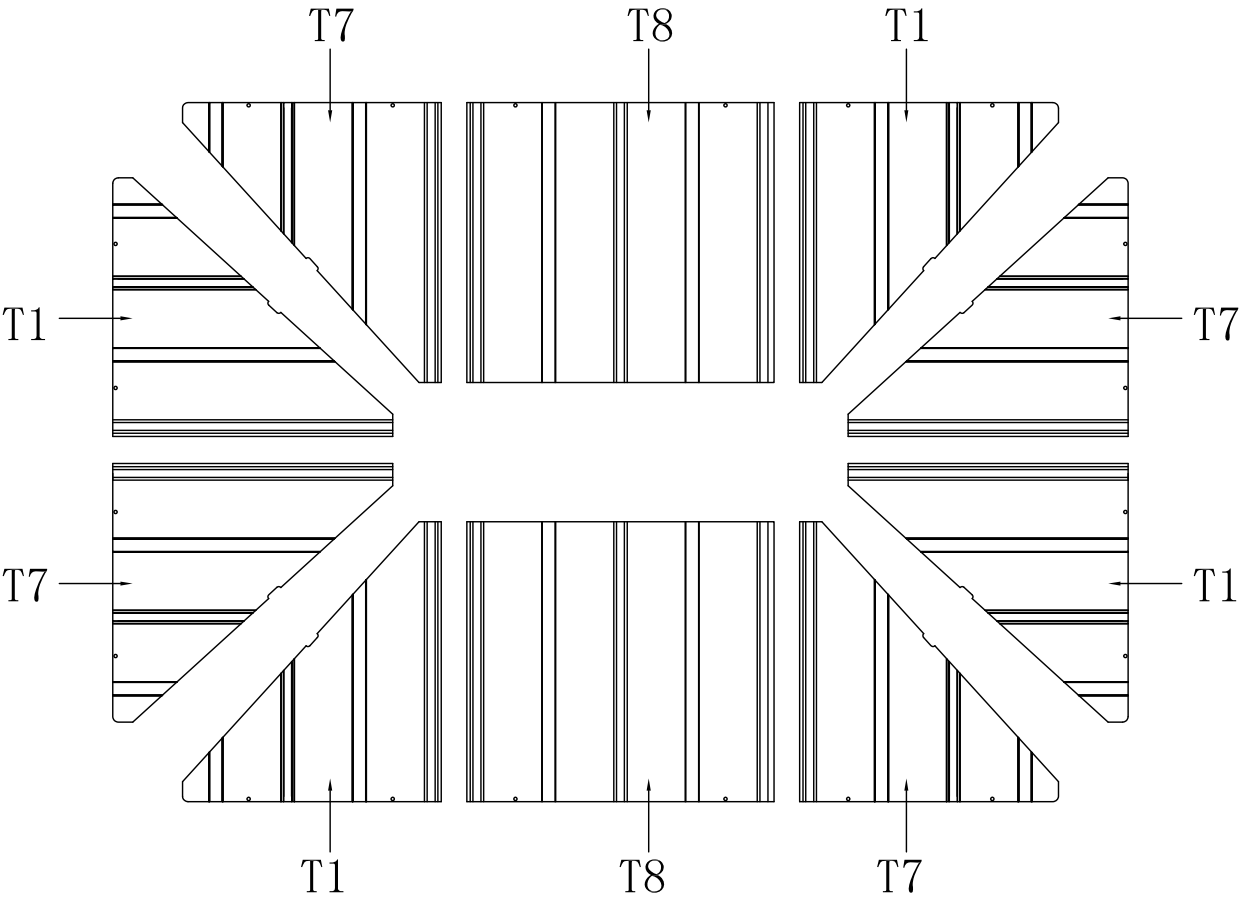

Ⓣ1 4X



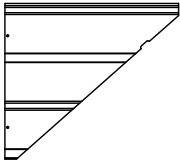


Ⓣ7 4X

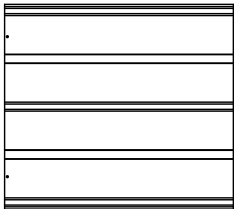


Ⓣ8 2X


STEP. 17

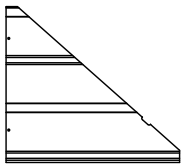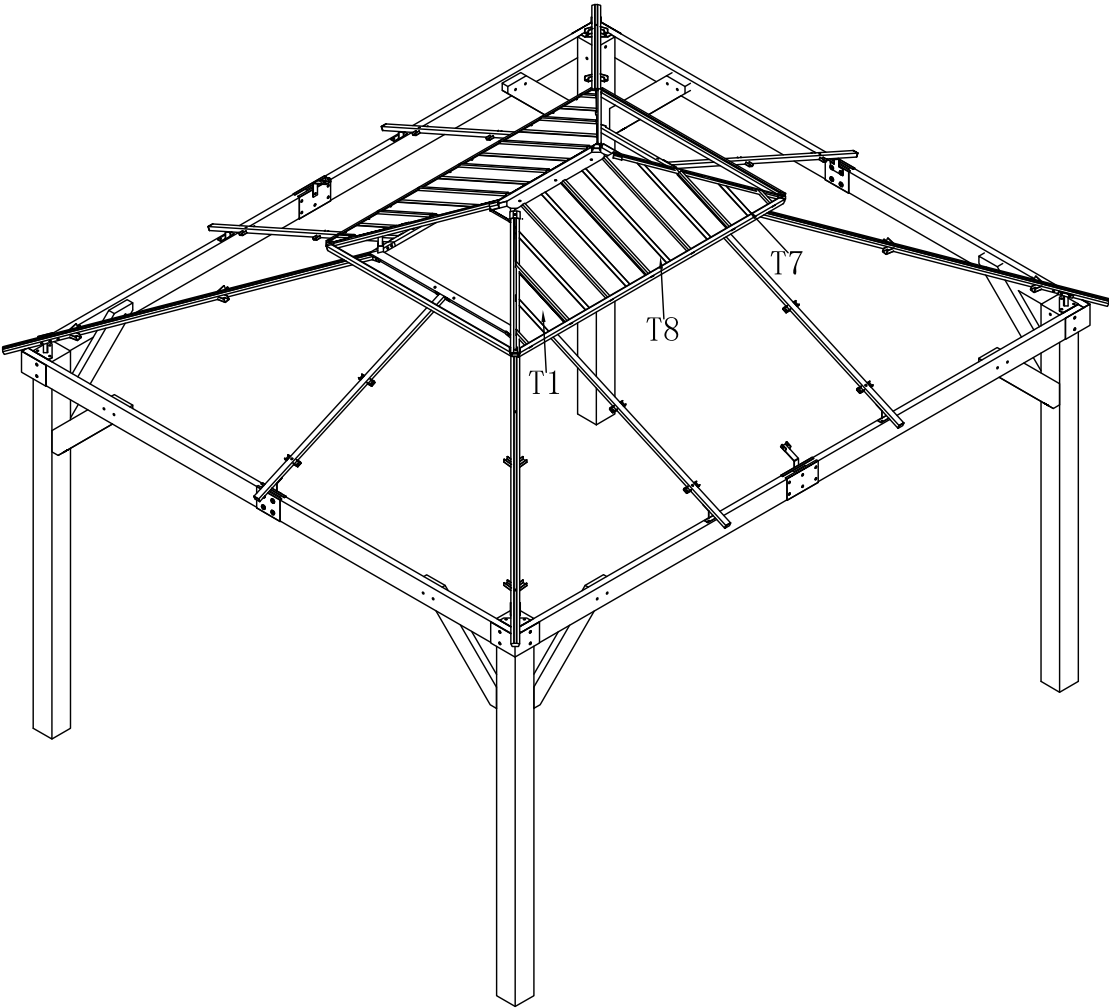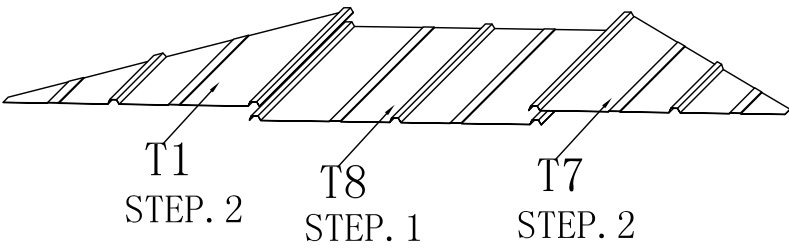

Ⓣ1 2X



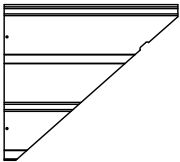


Ⓣ7 2X

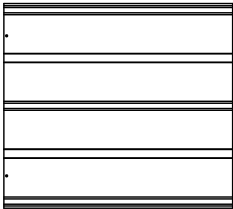


Ⓣ8 2X

STEP. 18

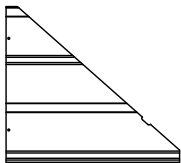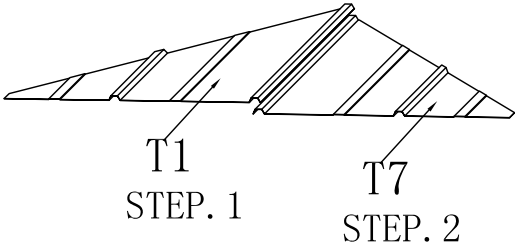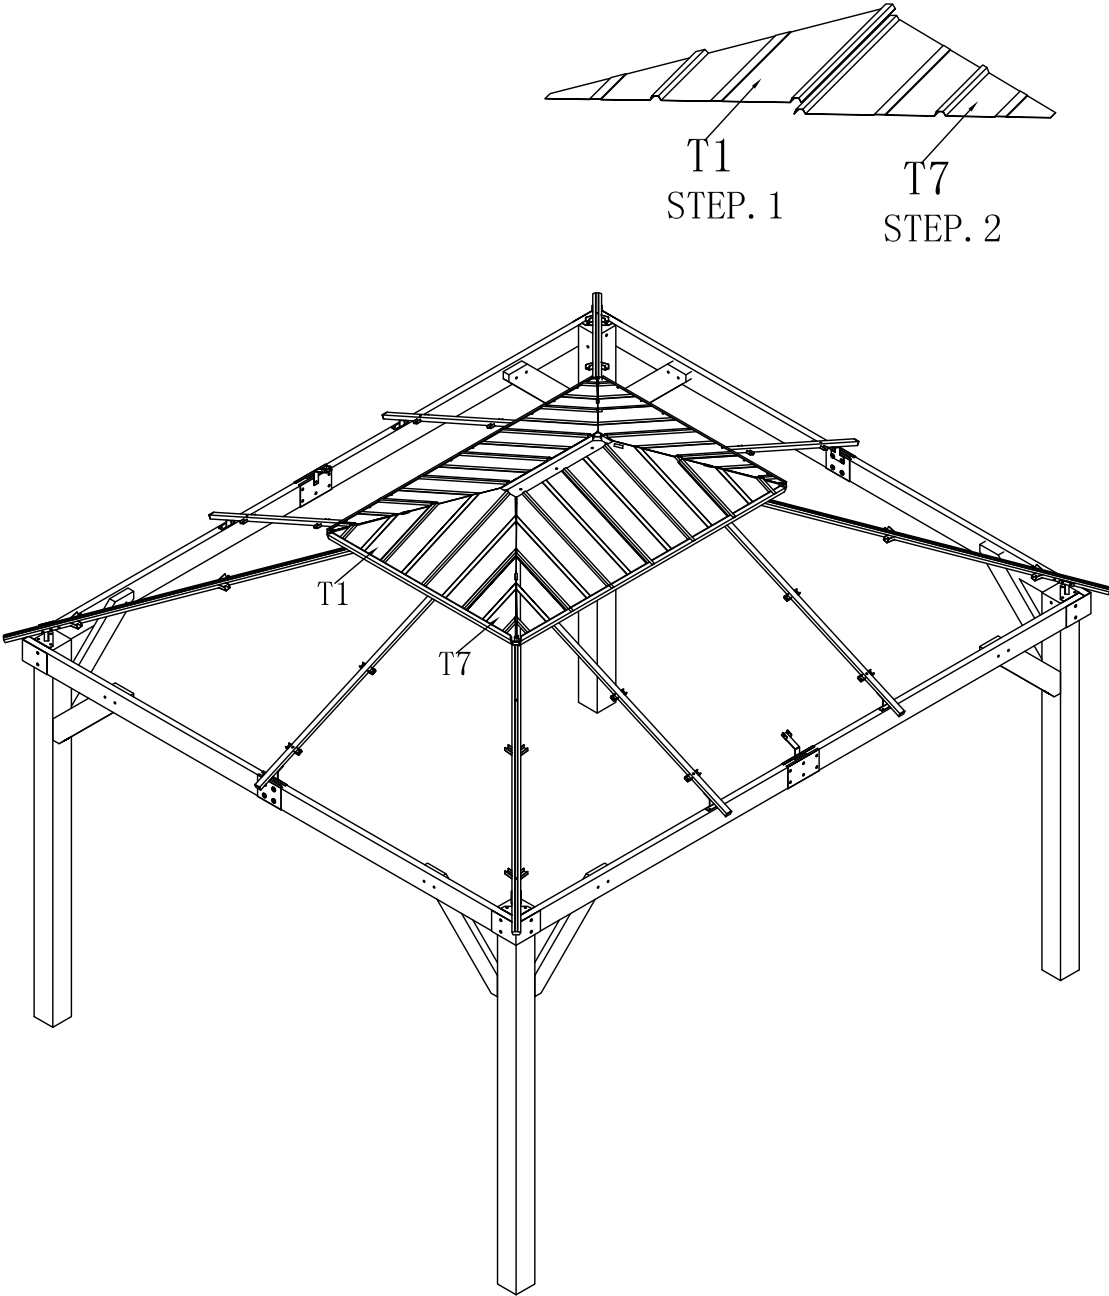


(T1) 2X

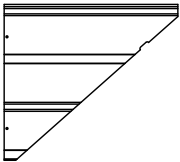


(T7) 2X

STEP. 19

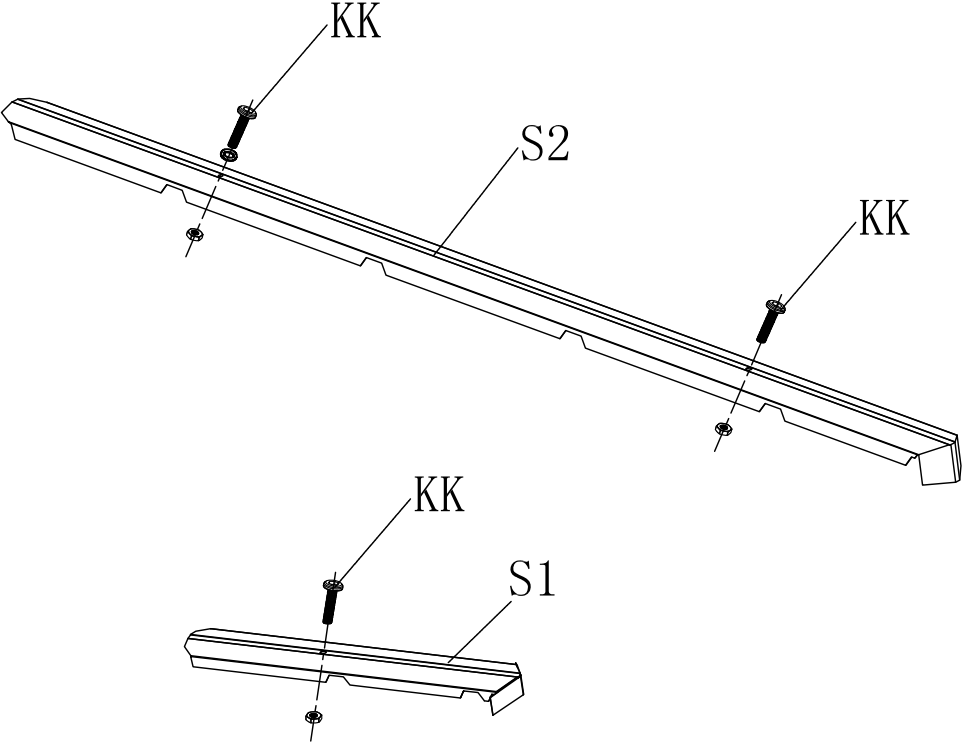


Fix **S1** and **S2** with Screws & Nuts **KK**.



Ⓢ1 4X




ⓀⓀ 12X M6*55



Ⓢ2 4X

STEP. 20

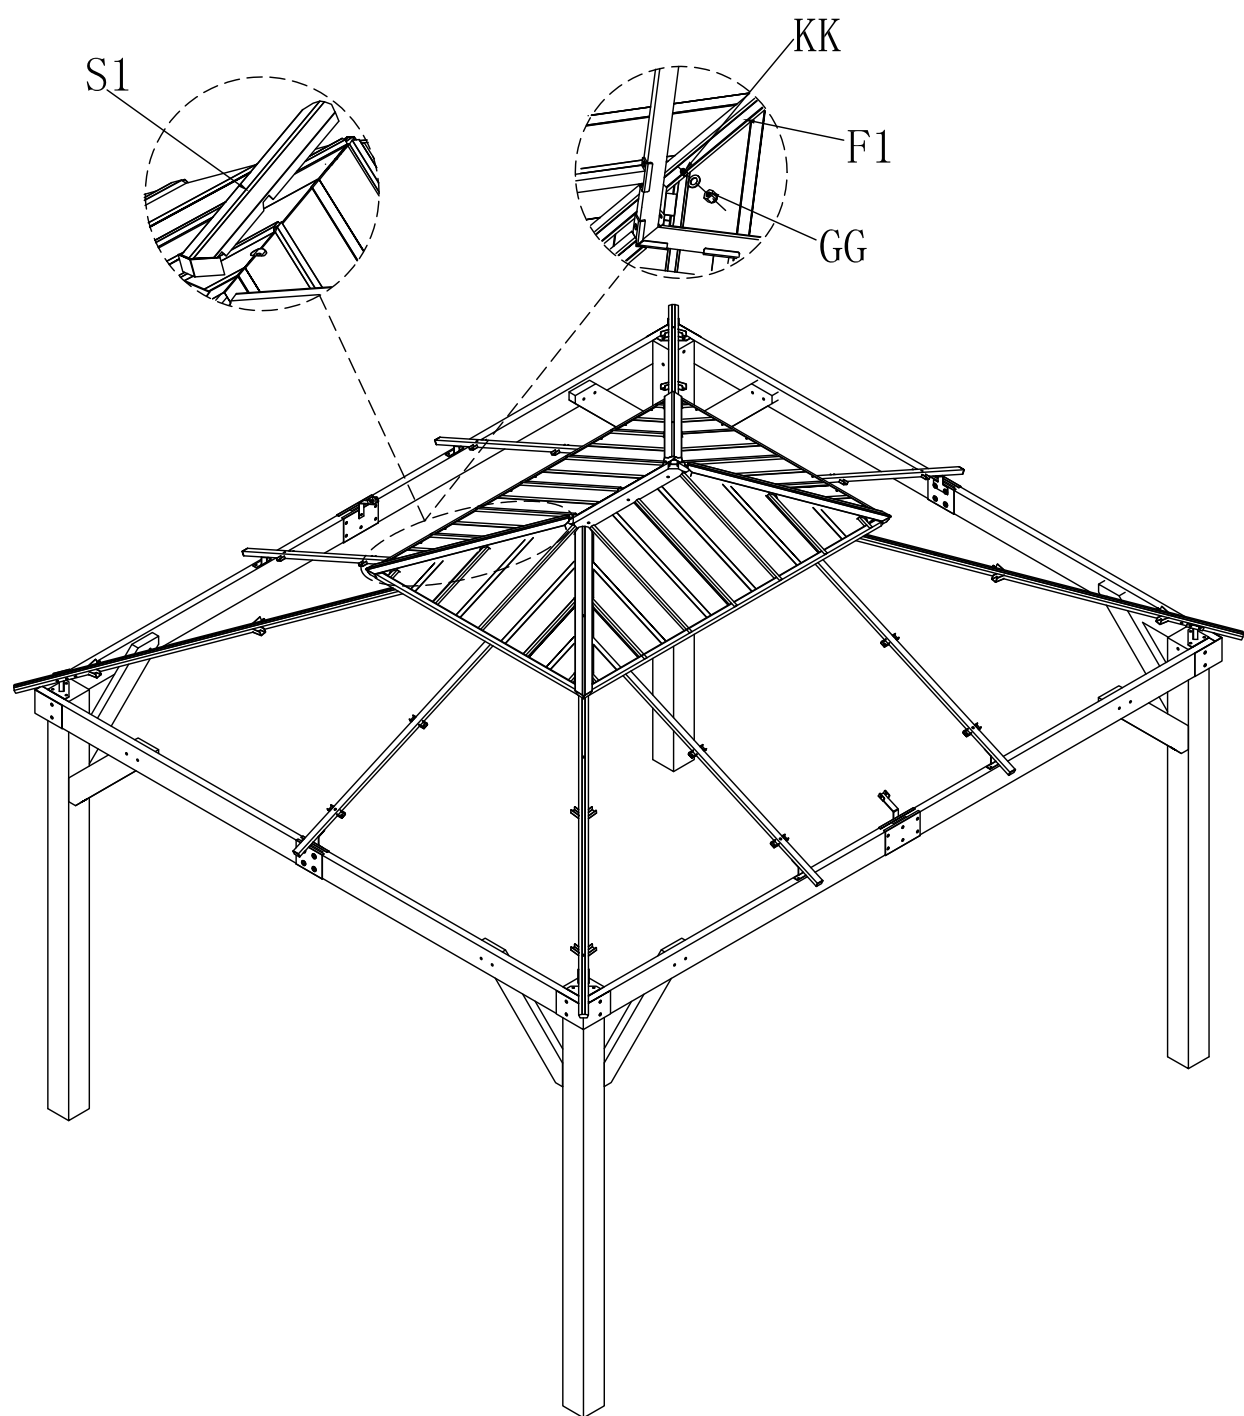


(S1) 4X




(GG) 4X


STEP. 21

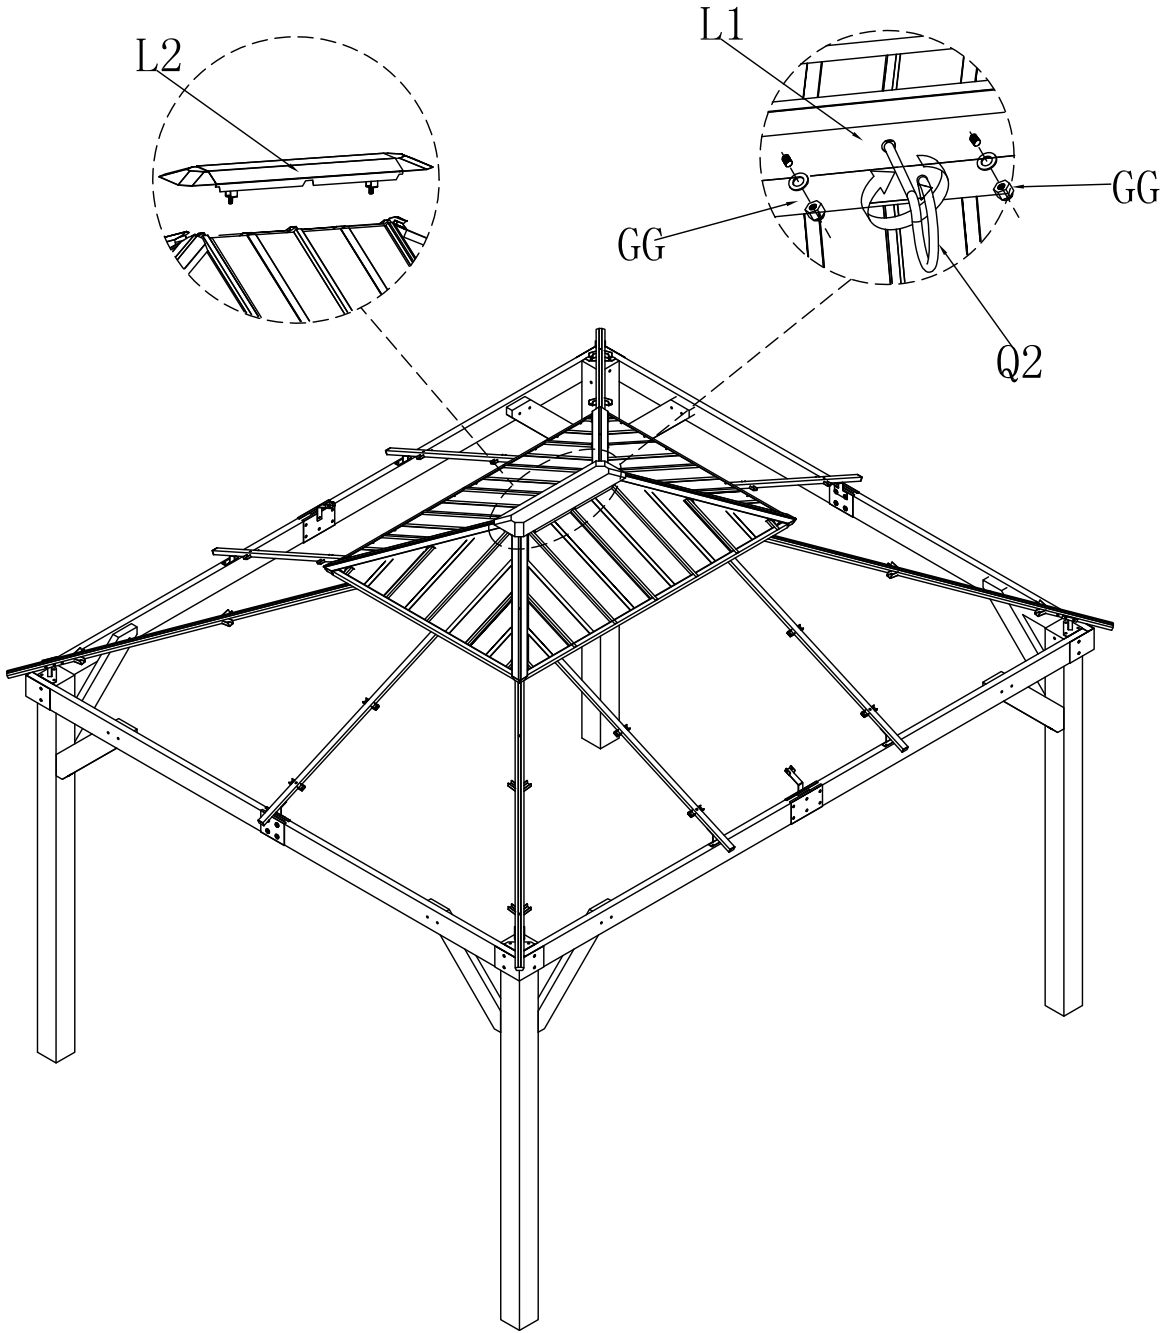

L2 1X






GG 2X




Q2 1X

STEP. 22

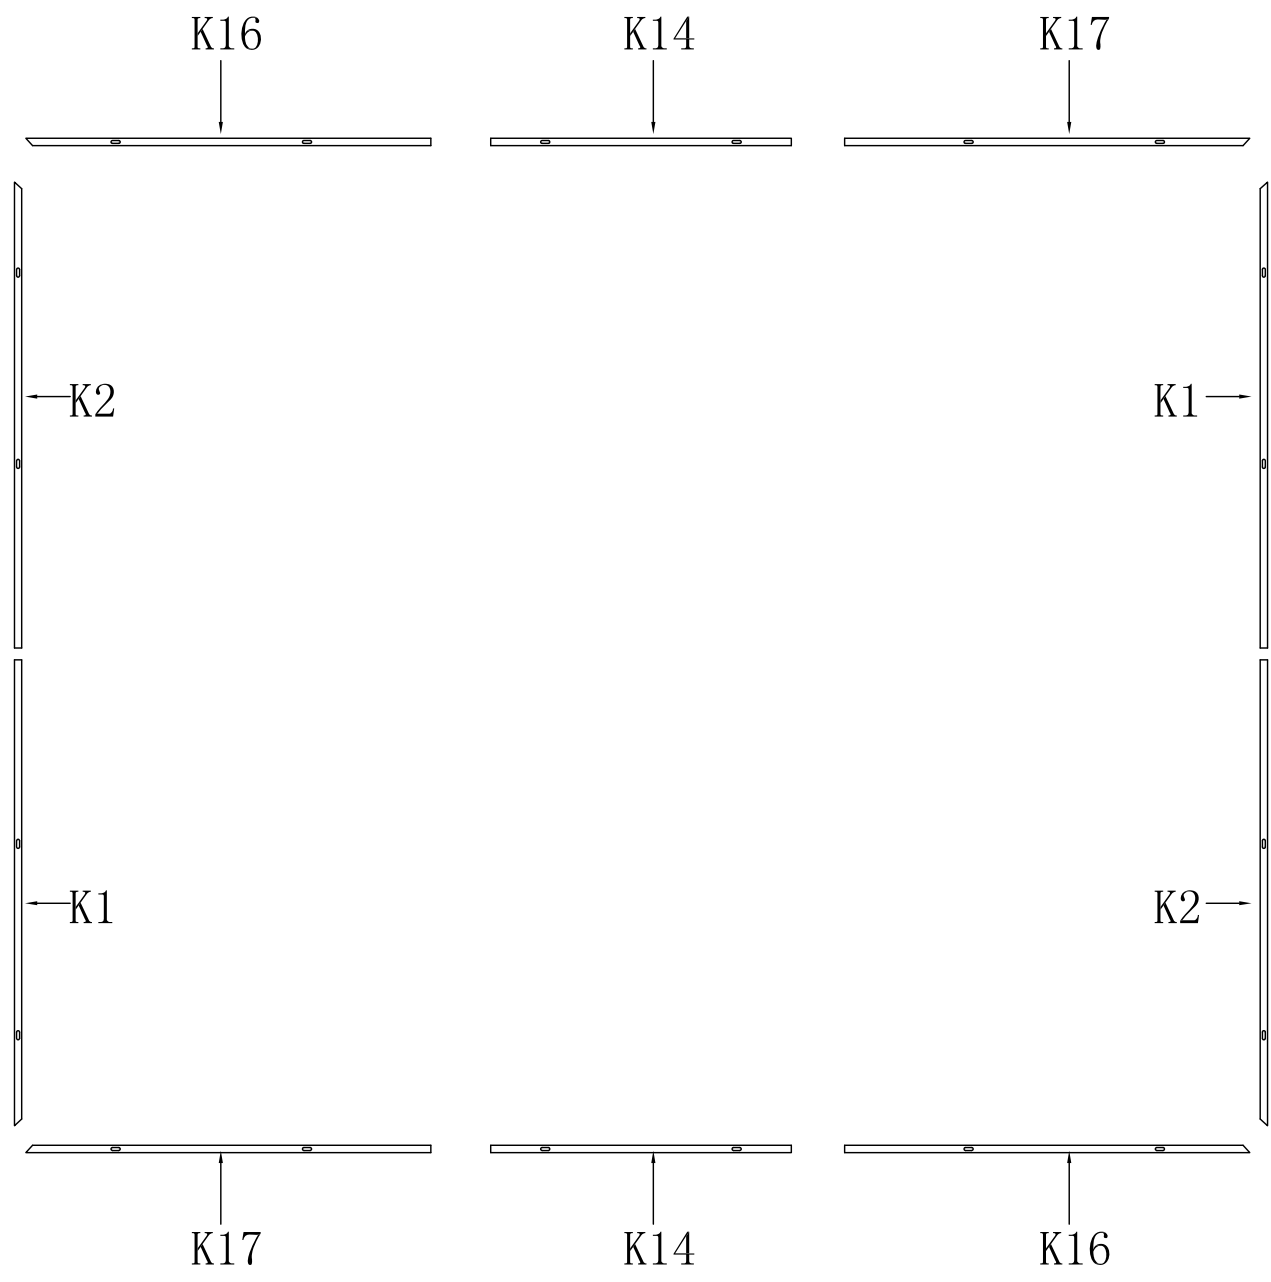


 (K16) 2X	 (K17) 2X
 (K14) 2X	 (K1) 2X
 (K2) 2X	


STEP. 23

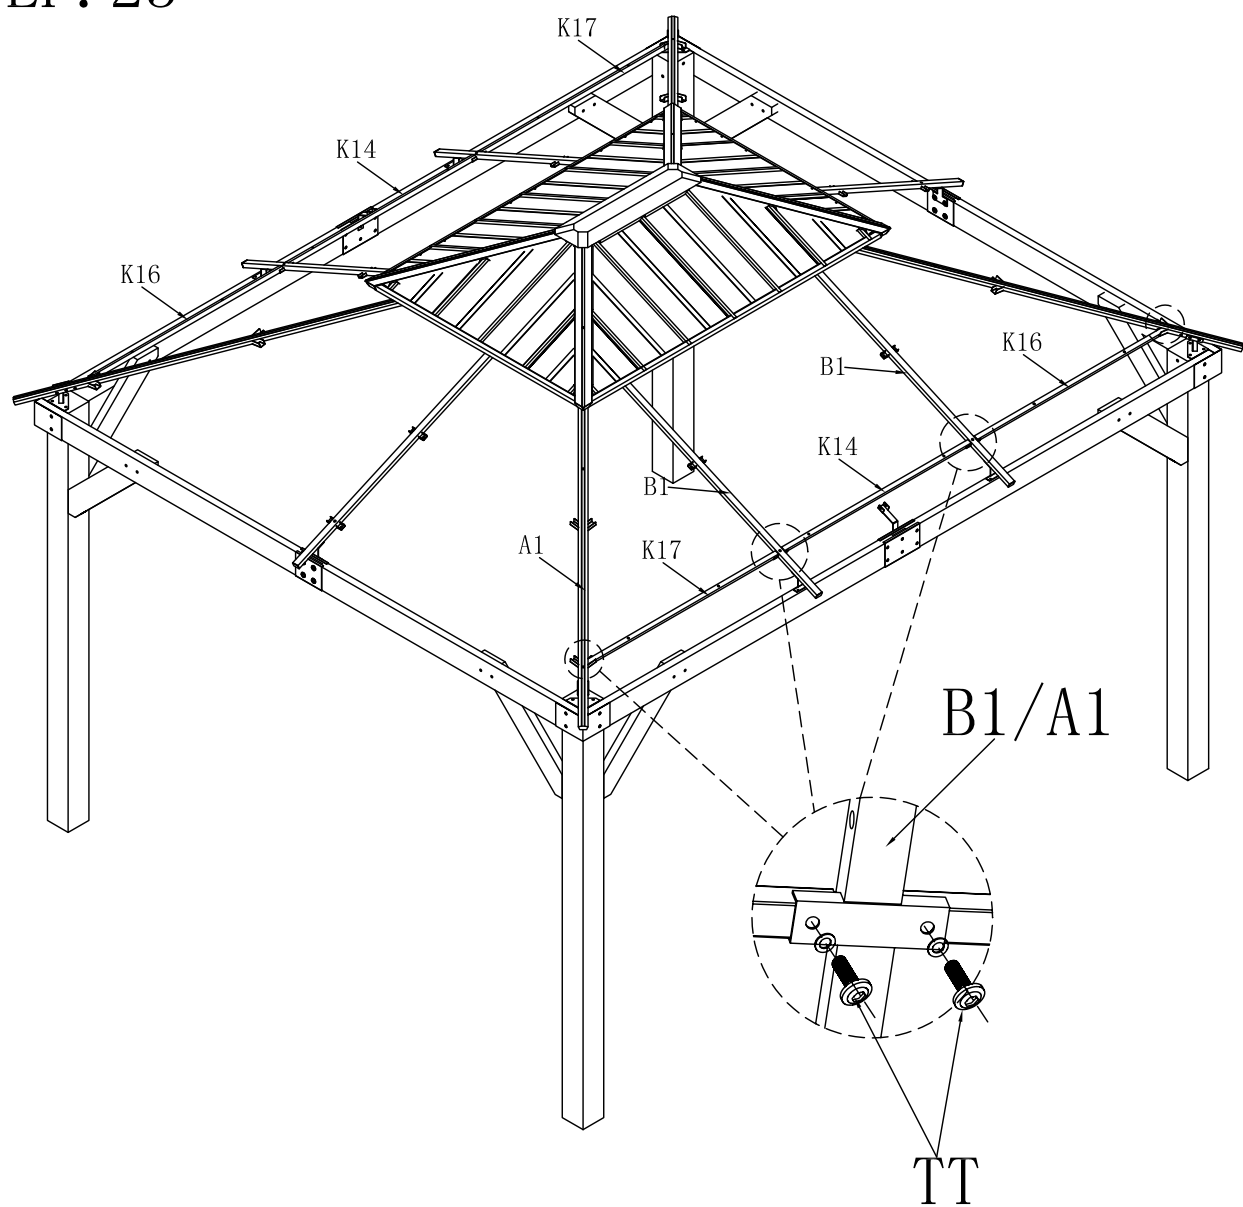

Note: Pre-assemble **Screw (TT)**, Do not tighten untill finished **Step 34**.



 (K16) 2X	 (K17) 2X
 (K14) 2X	 M6X15 (TT) 12X

STEP. 24

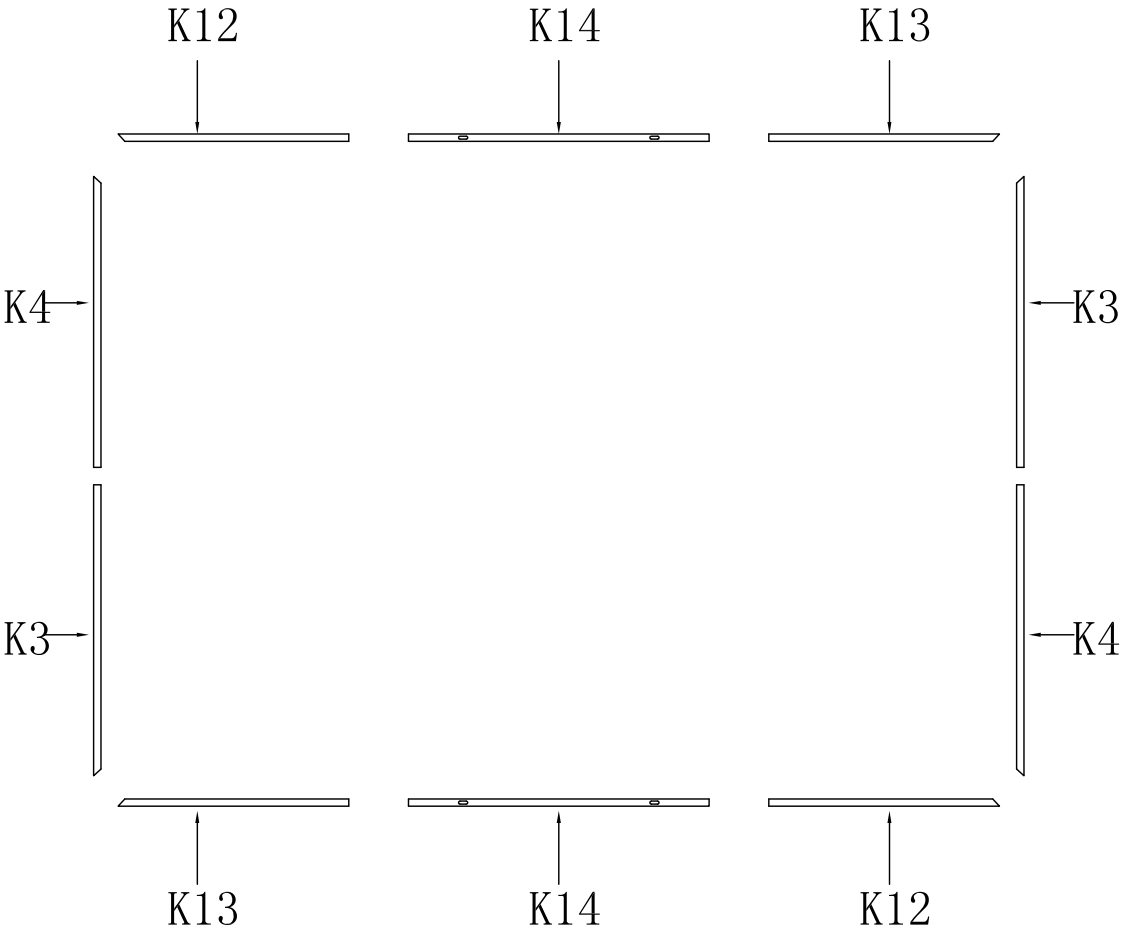


 K12 2X	 K13 2X
 K14 2X	 K3 2X
 K4 2X	

STEP. 25

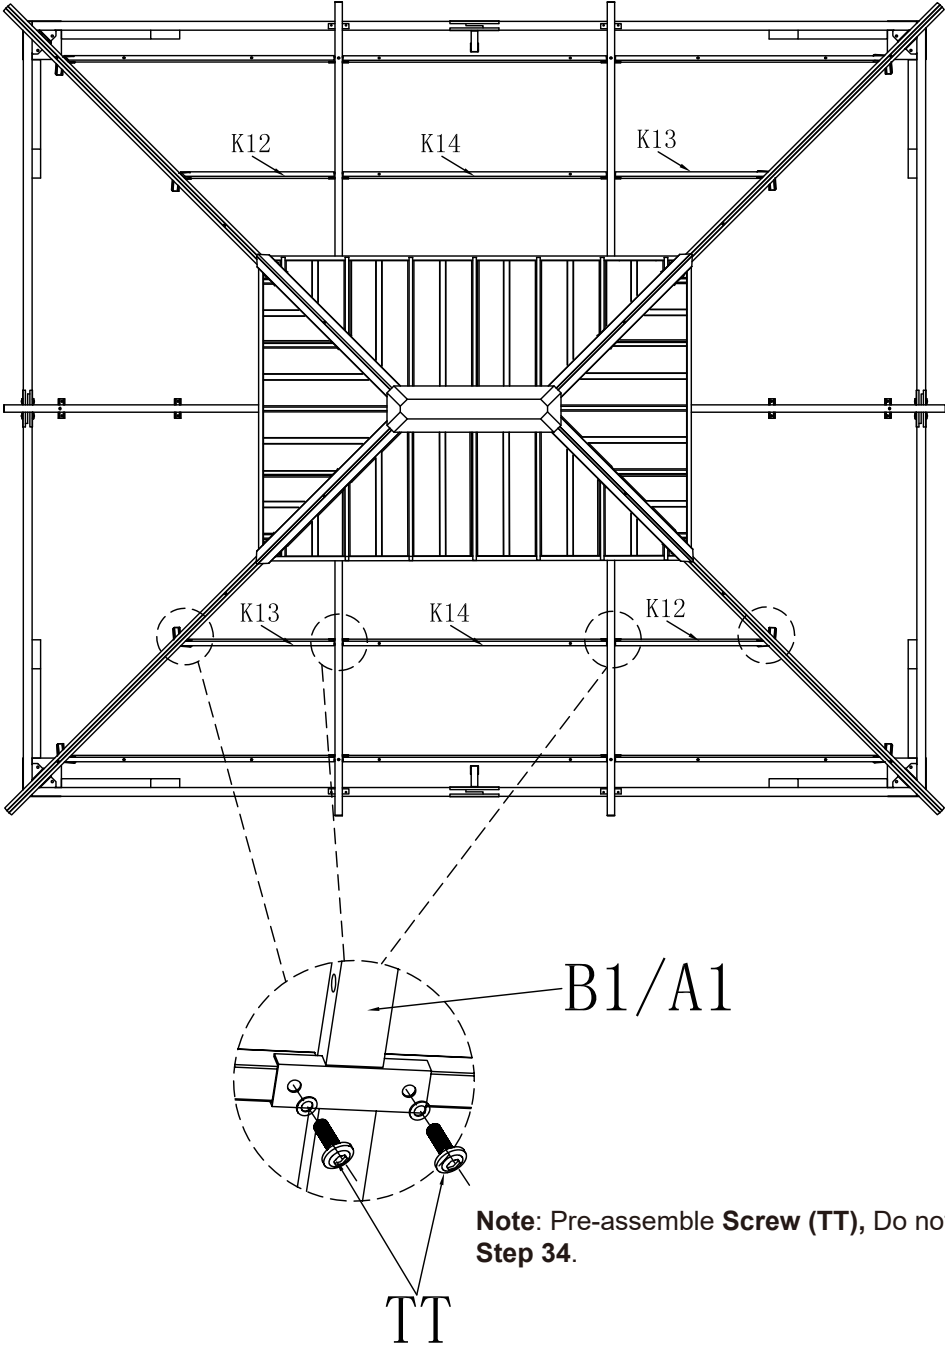

K12 2X



K13 2X




K14 2X




TT 12X

STEP. 26

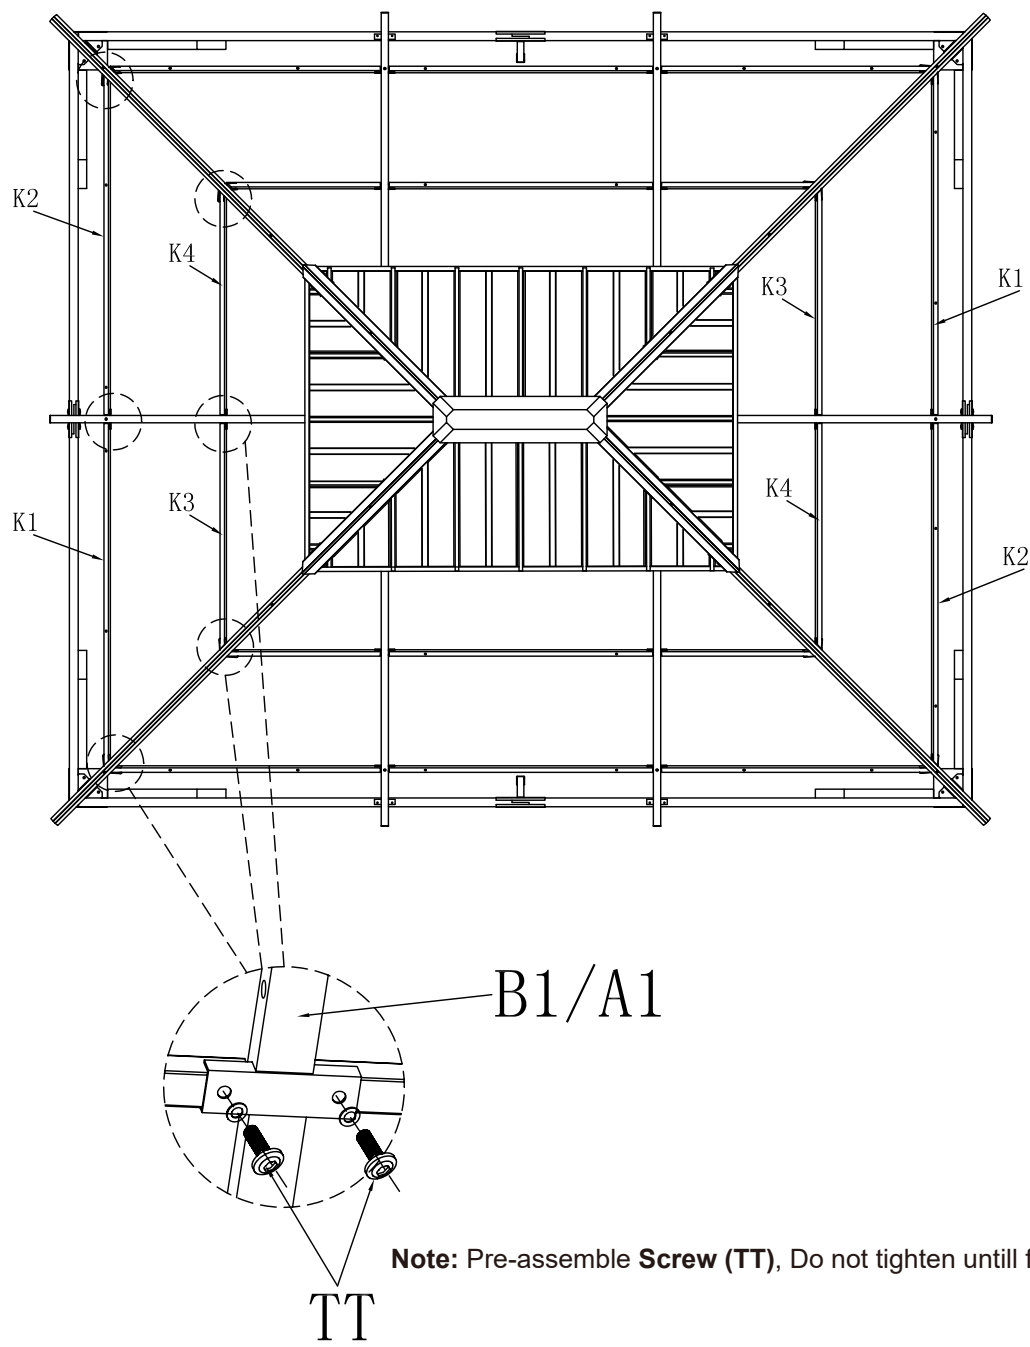


 (K1) 2X		 (K2) 2X	
 (K3) 2X	 (K4) 2X	 M6X15 (TT) 16X	

STEP. 27

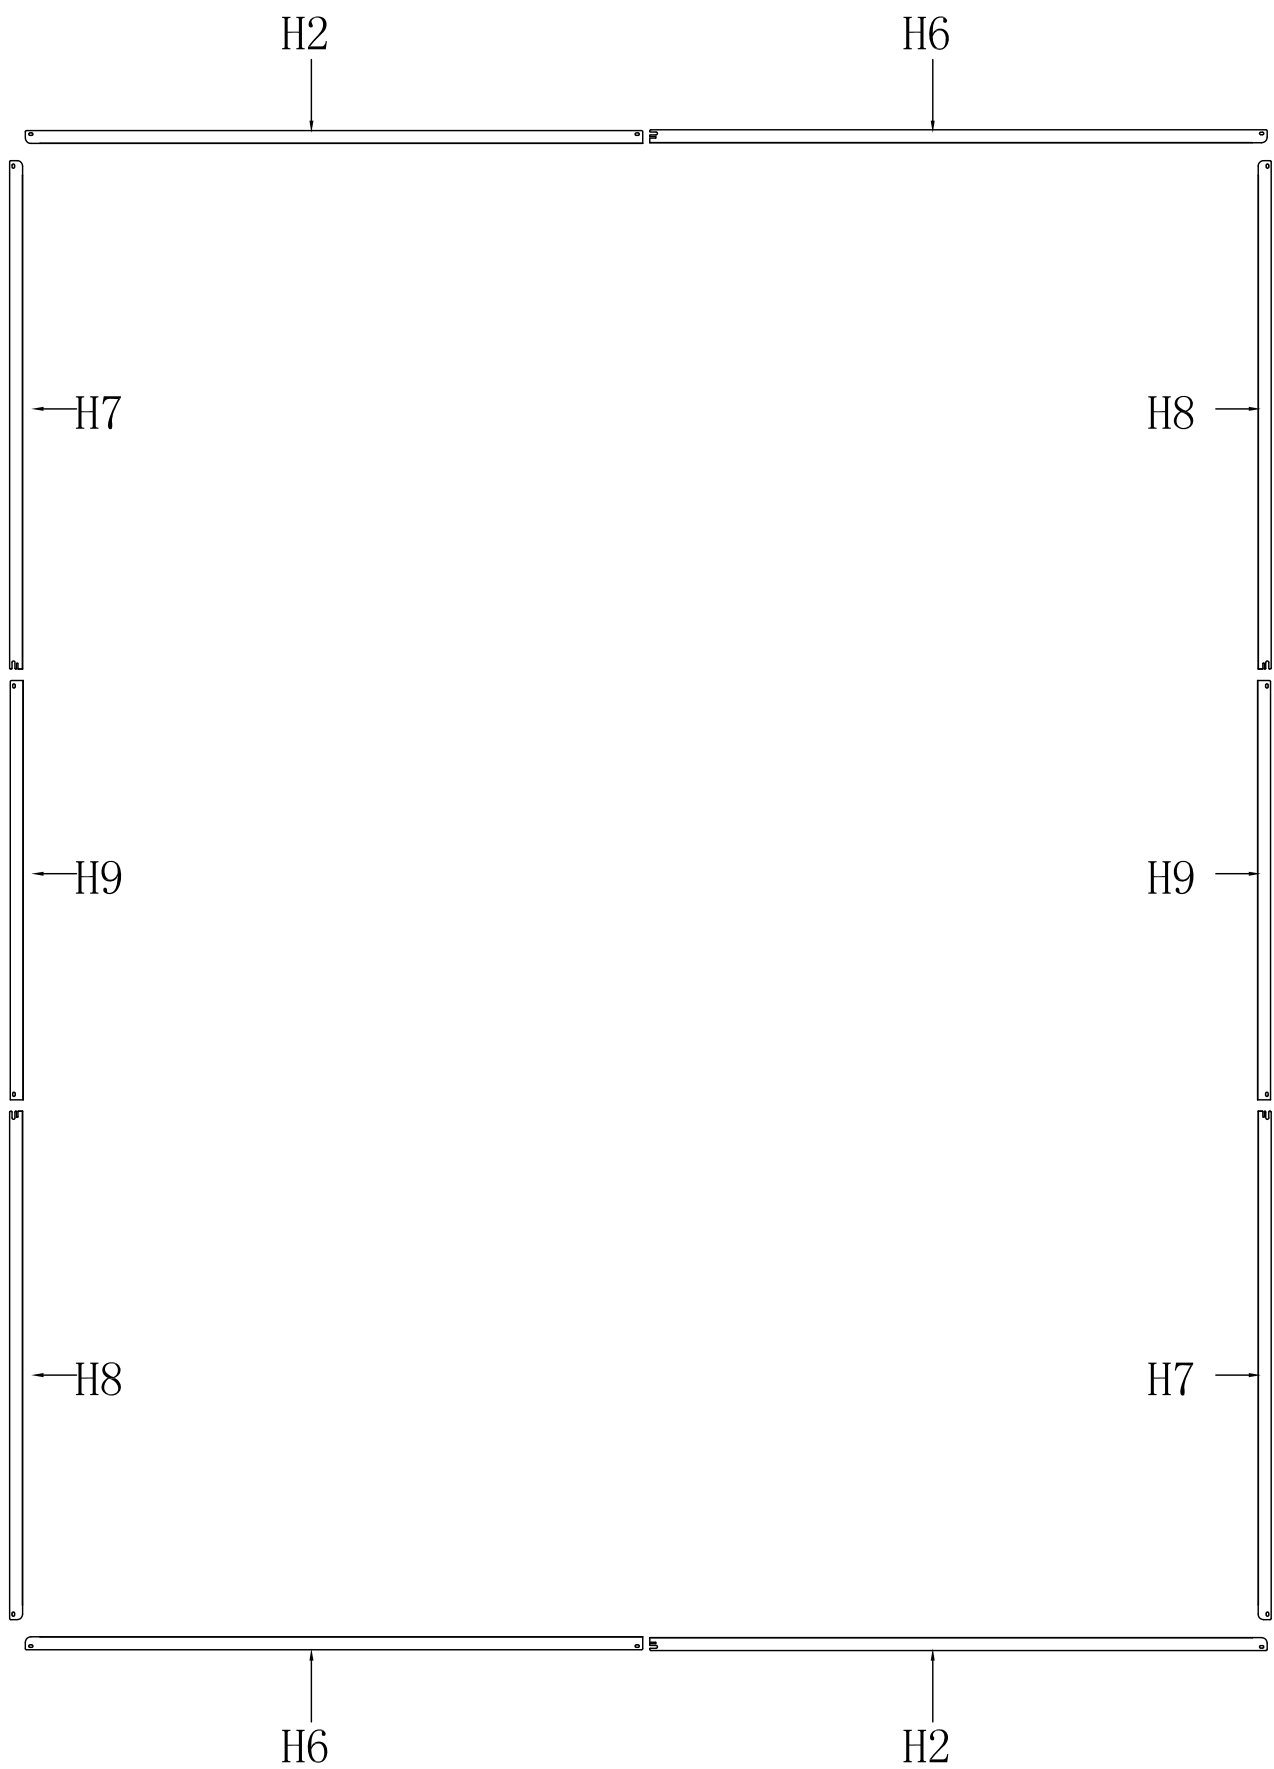

STEP. 28

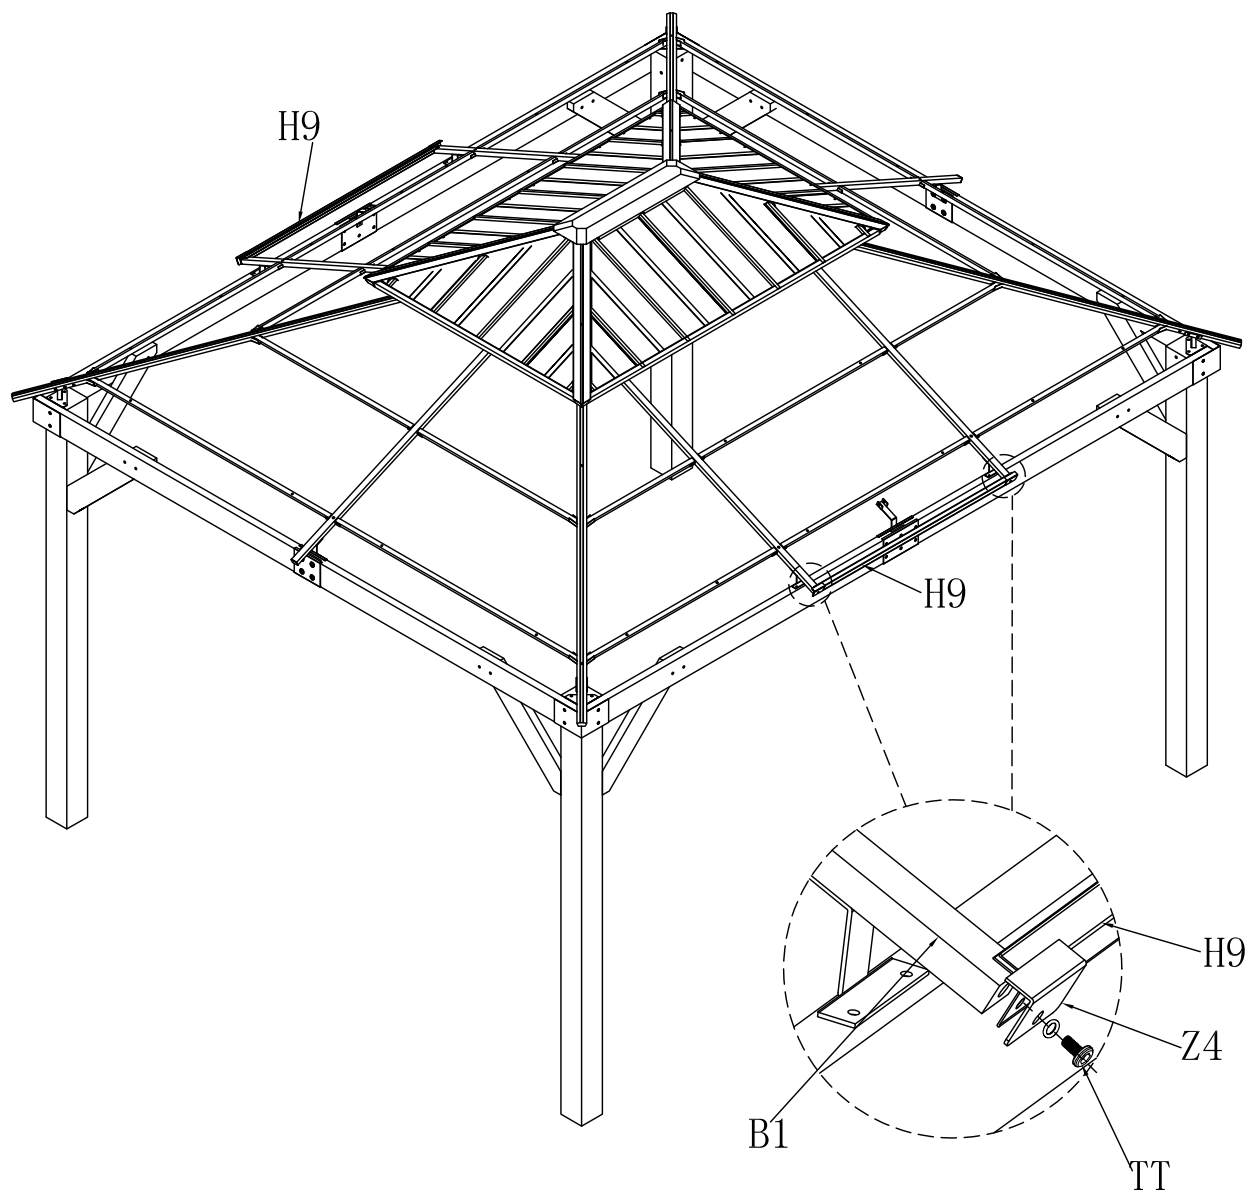

Note: Pre-assemble **Screw (TT)**, Do not tighten until finished **Step 34**.



H9 2X




Z4 4X



M6X15

TT 4X

STEP. 29

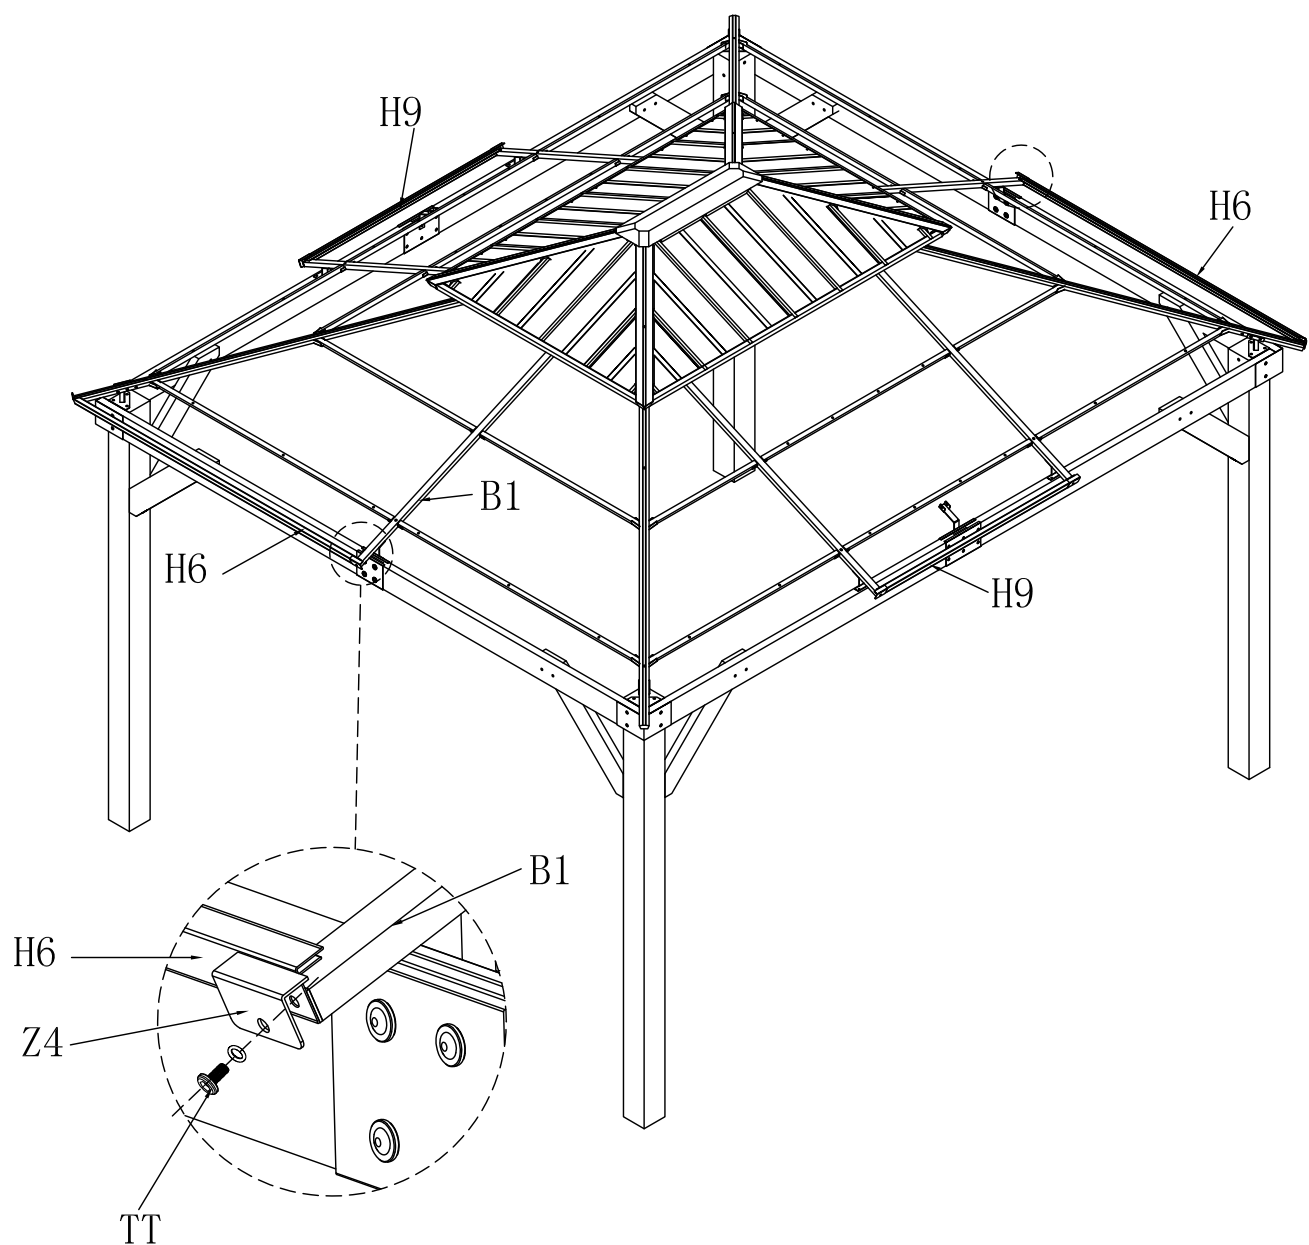

Note: Pre-assemble **Screw (TT)**, Do not tighten untill finished **Step 34**.



(H6) 2X





(Z4) 2X



M6X15

(TT) 2X

STEP. 30

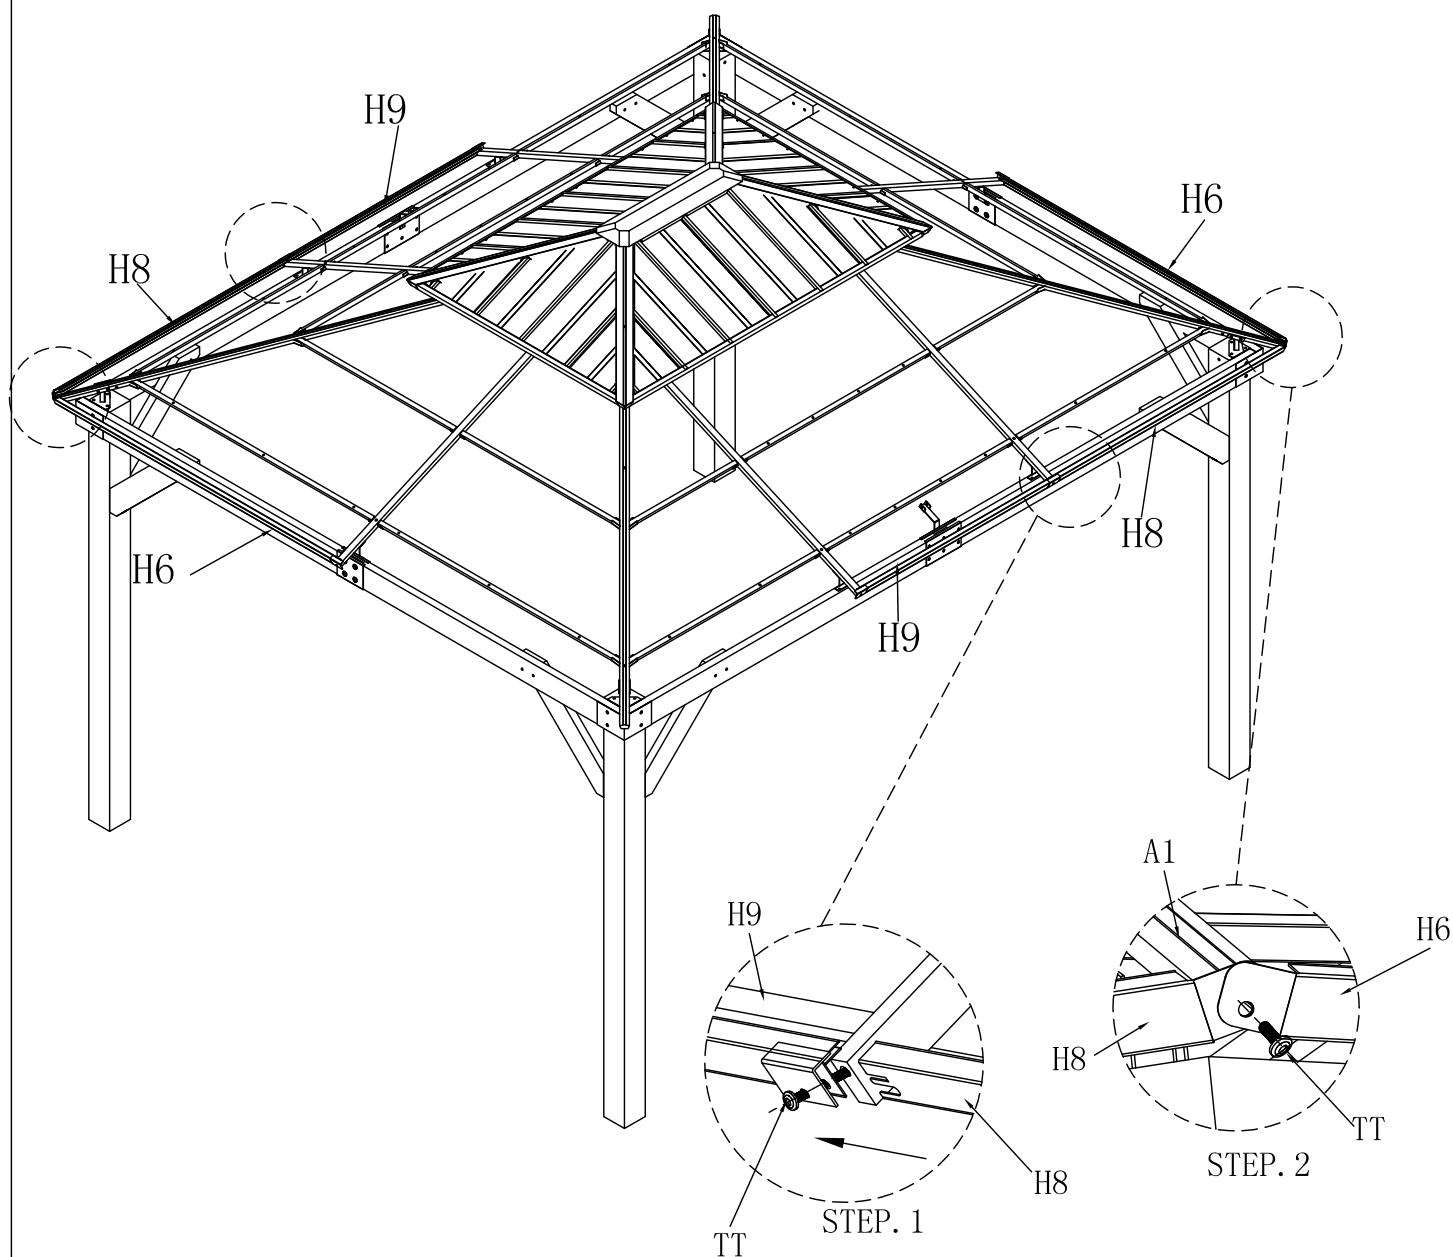


(H8) 2X



M6X15

(TT) 2X

STEP. 31

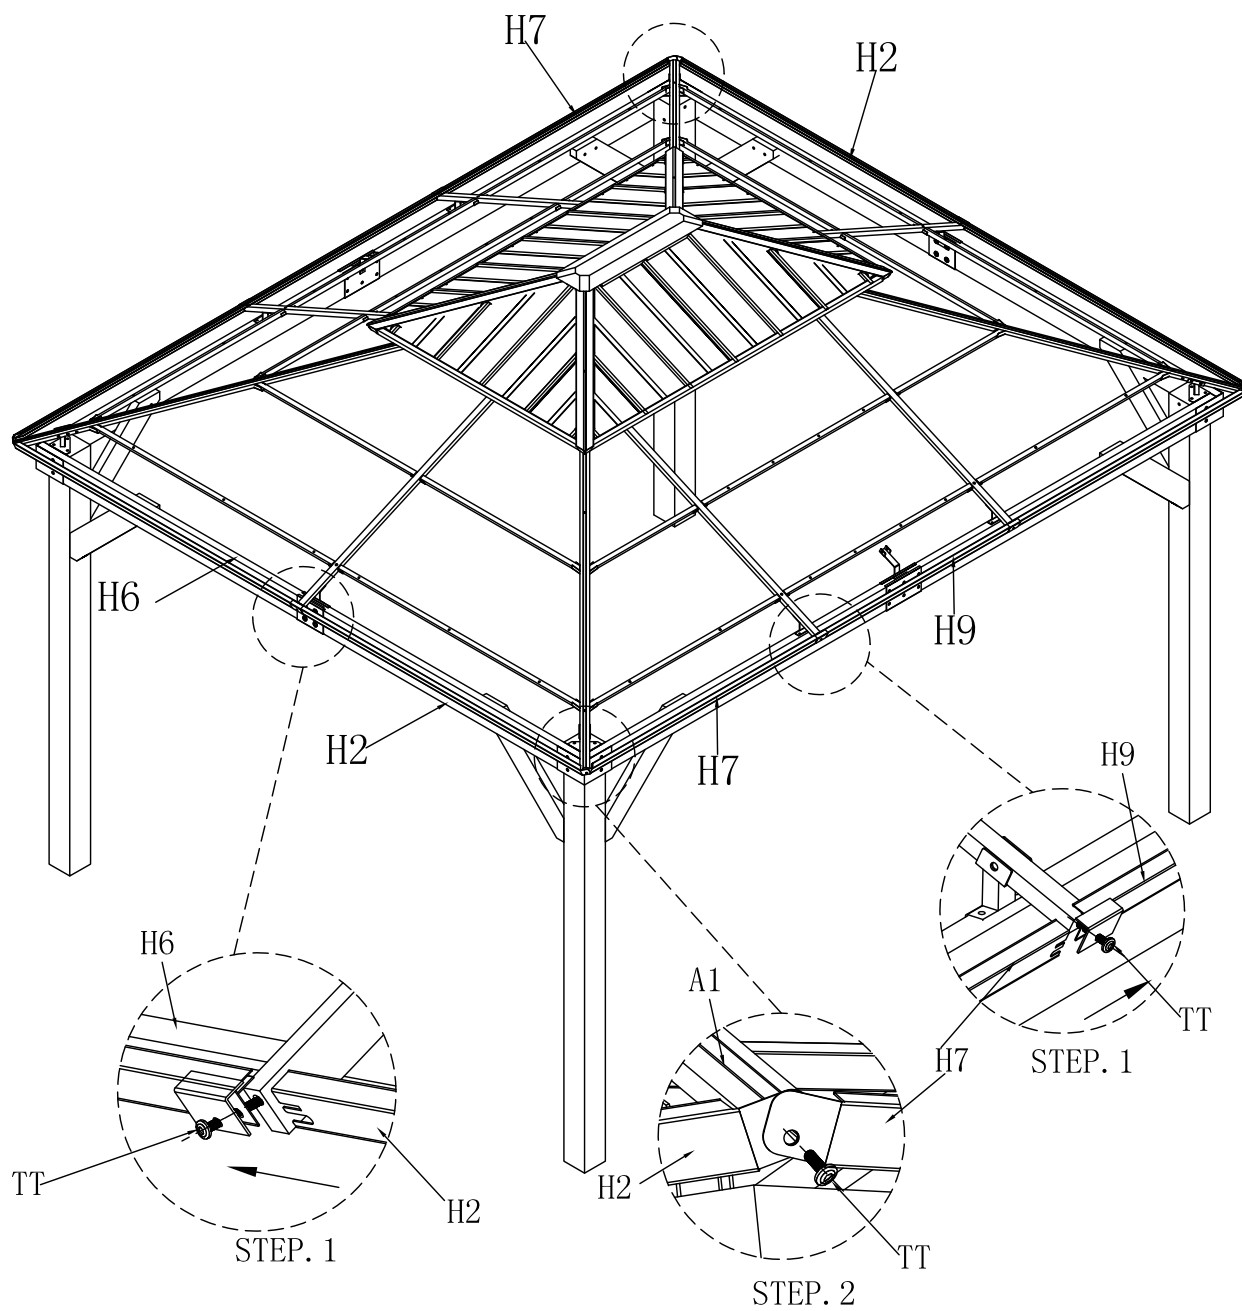

(H7) 2X




(H2) 2X



M6X15

(TT) 2X

STEP. 32

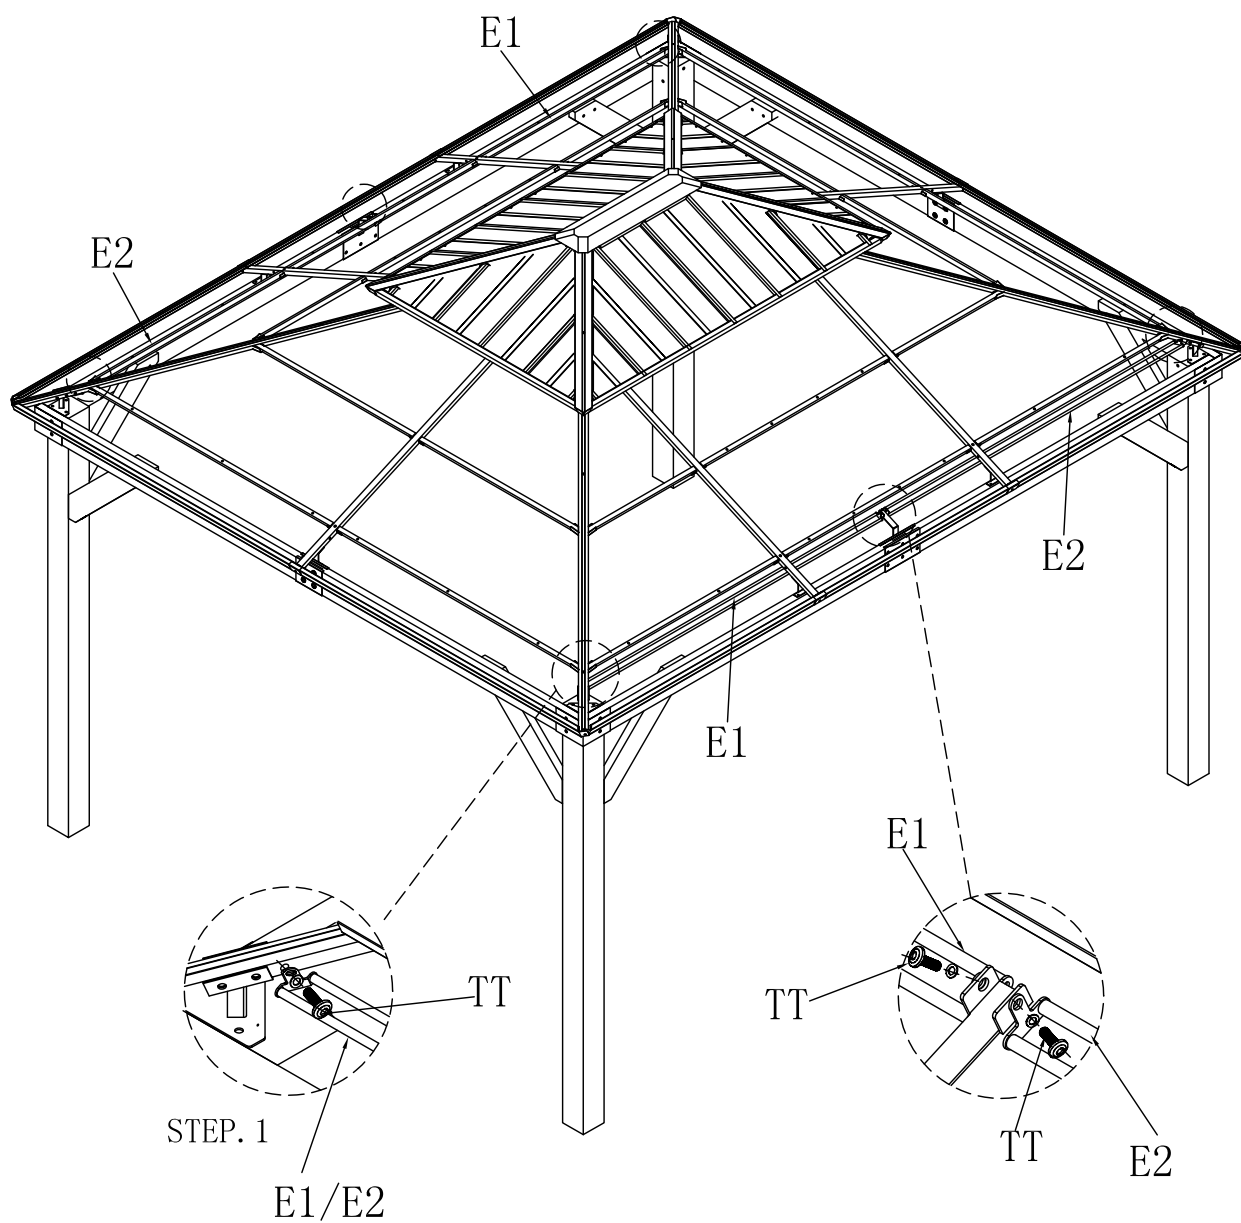

Ⓔ1 2X




Ⓔ2 2X



M6X15

Ⓙ1 8X

STEP. 33

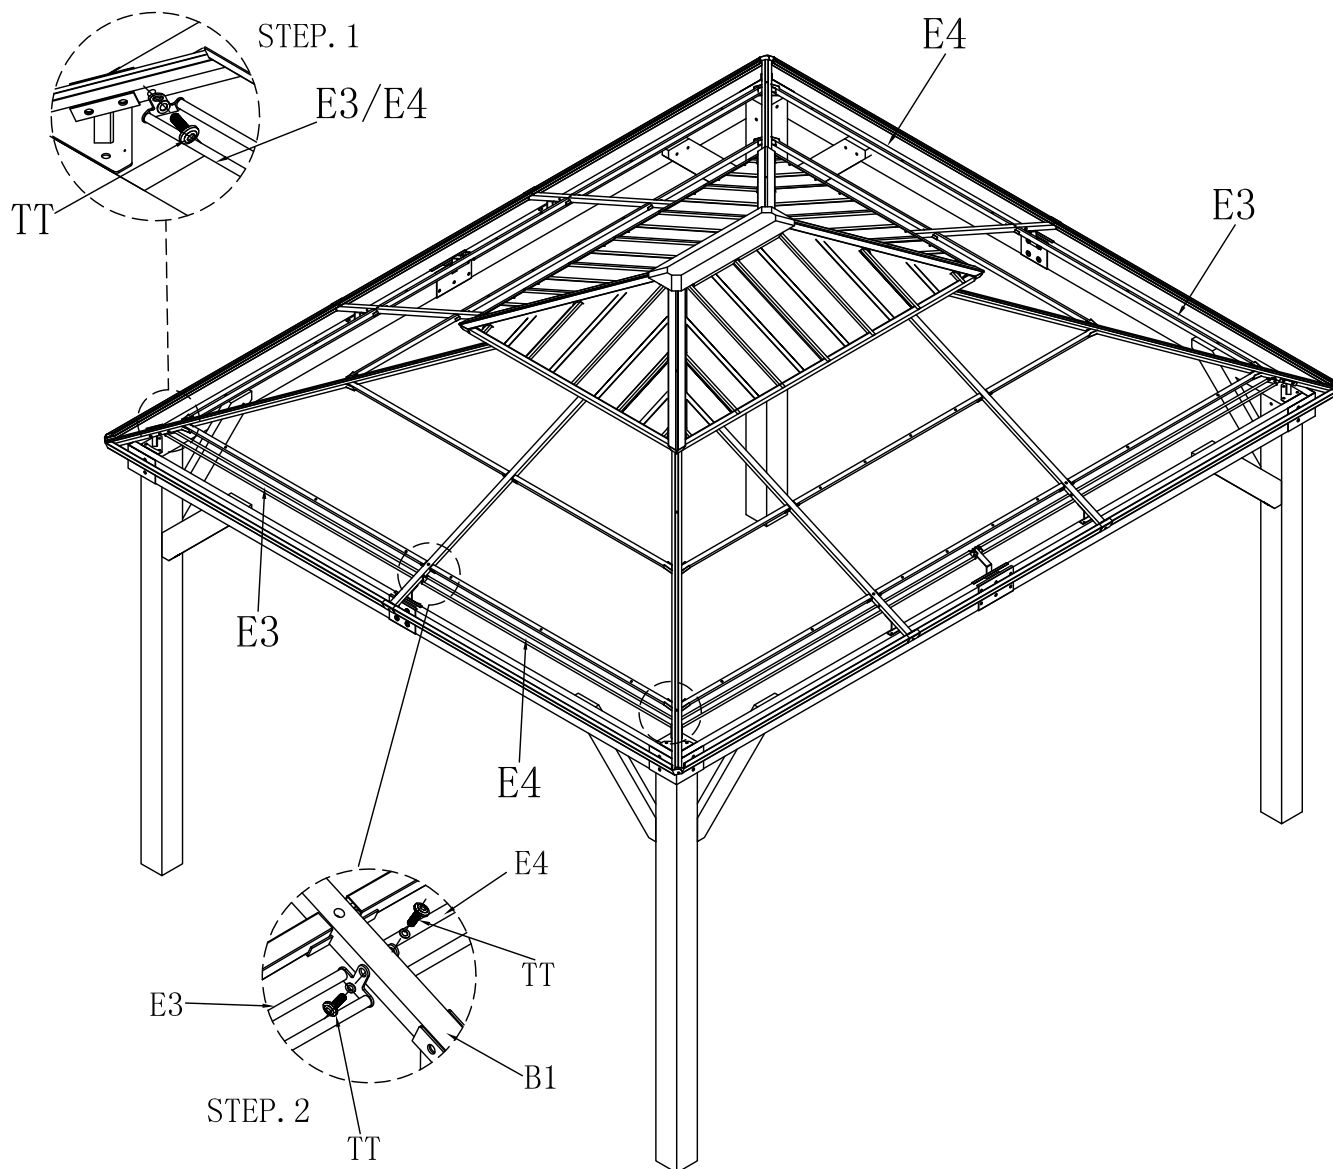

Ⓔ3 2X




Ⓔ4 2X



M6X15

Ⓙ 8X

STEP. 34

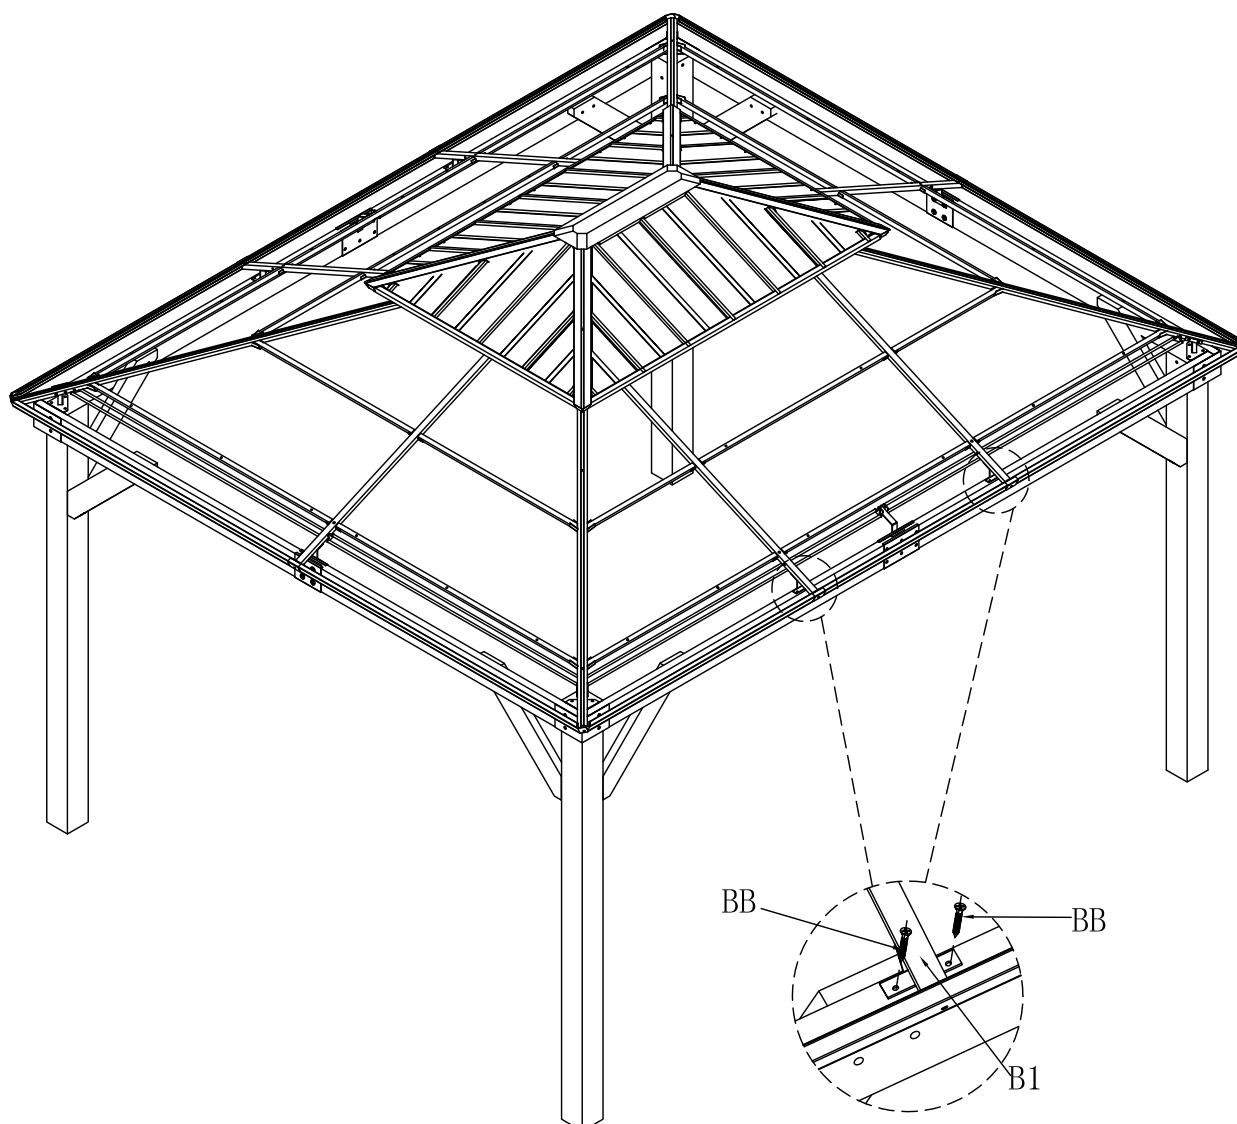


TIGHTEN ALL PRE-ASSEMBLED SCREWS ON BLOCKING BAR, FIX ALL **SLANT BAR (B1)** BY USING **SCREWS (BB)**.






Ⓟ 8X


STEP. 35

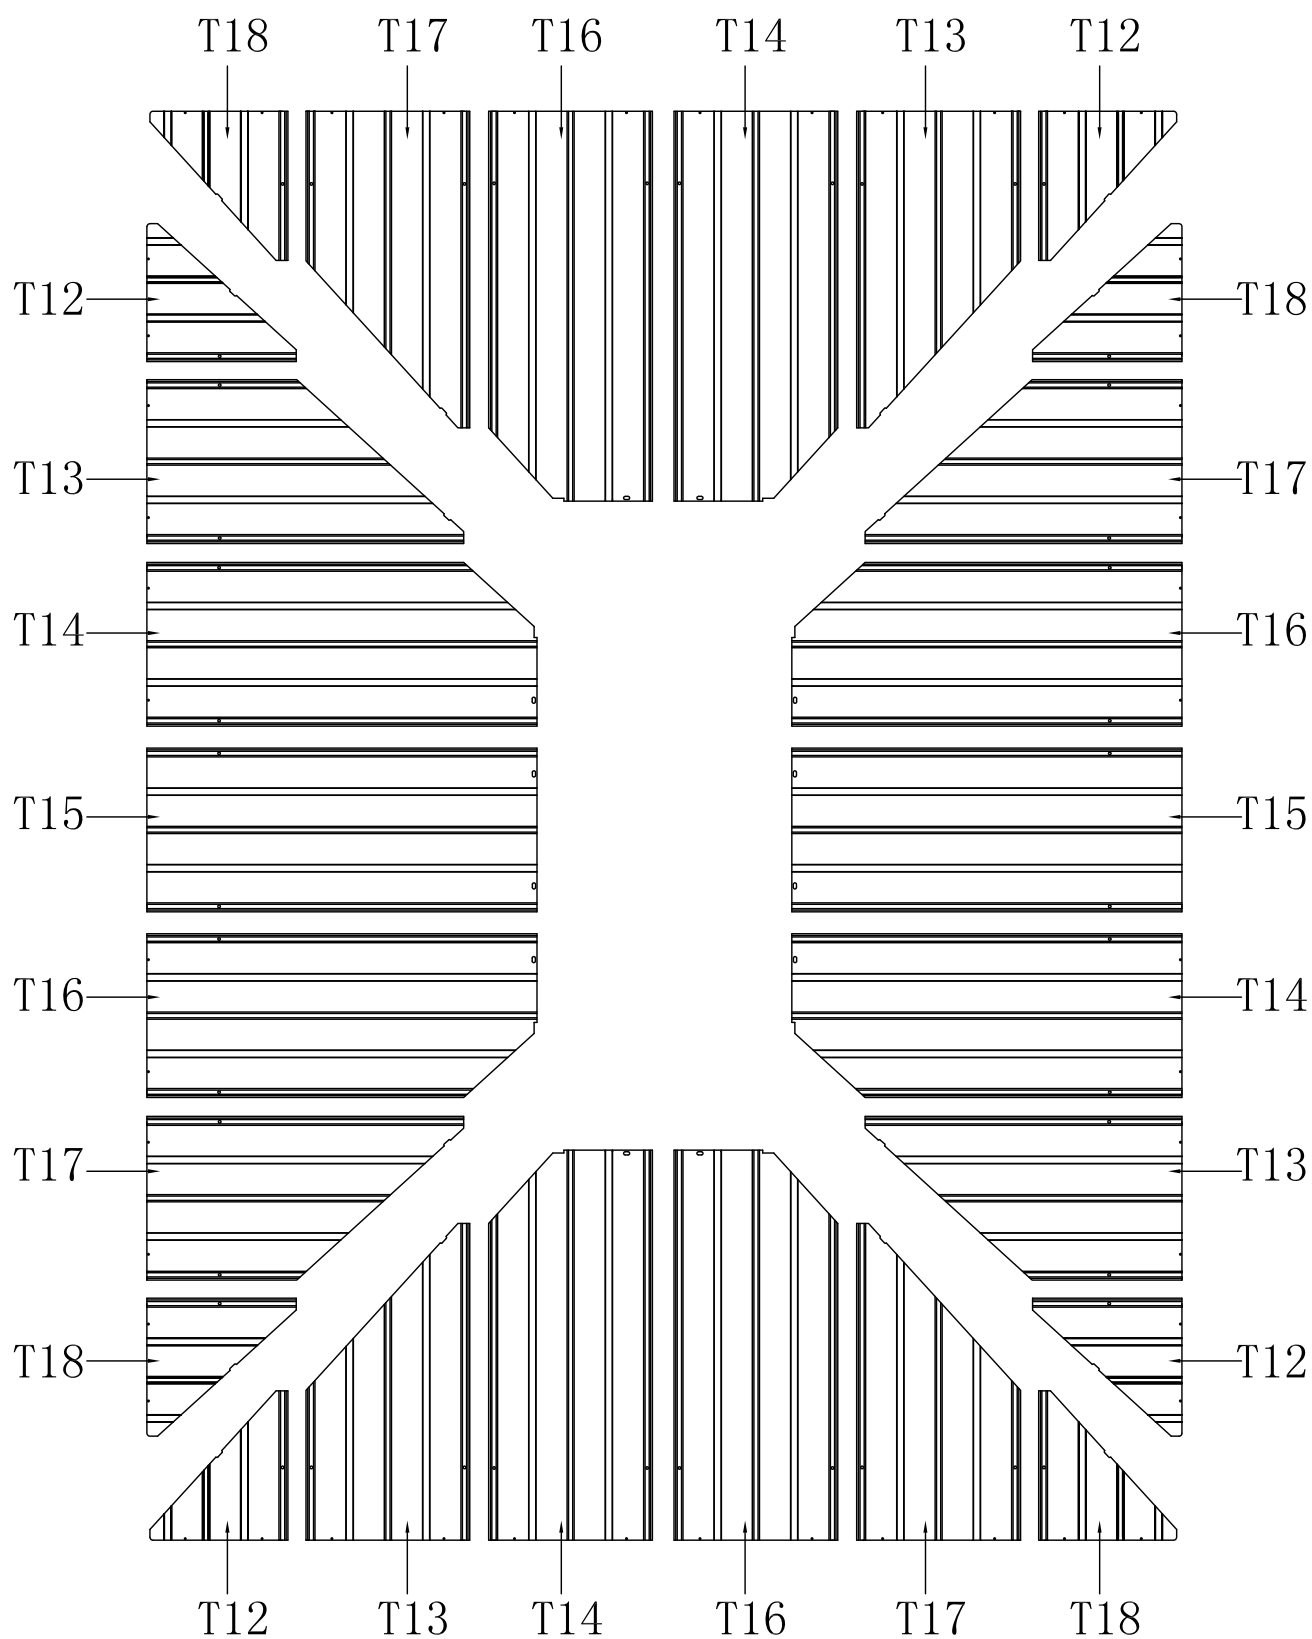


STEP. 36

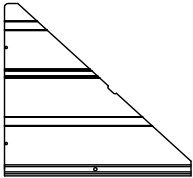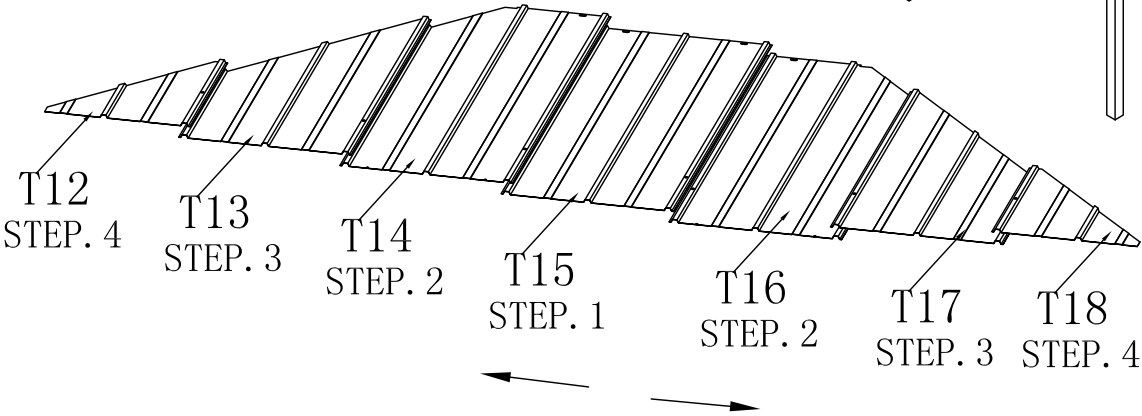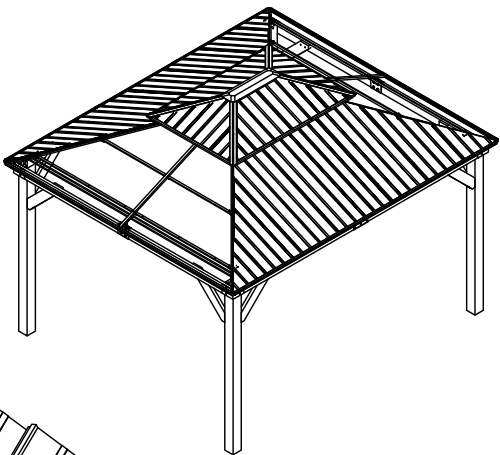


(T12) 2X

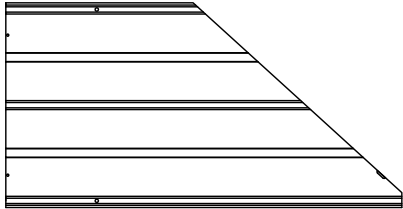


(T13) 2X

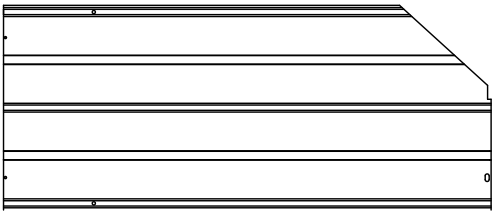


(T14) 2X

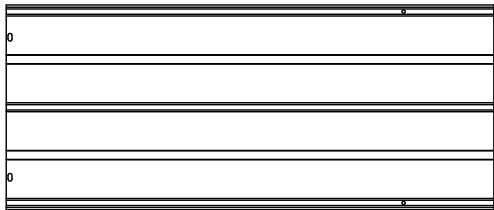


(T15) 2X

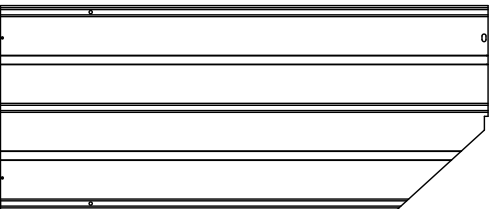

(T16) 2X

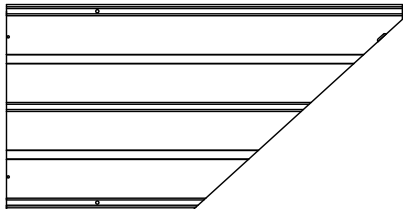


(T17) 2X

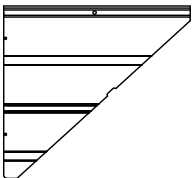


(T18) 2X



STEP. 37

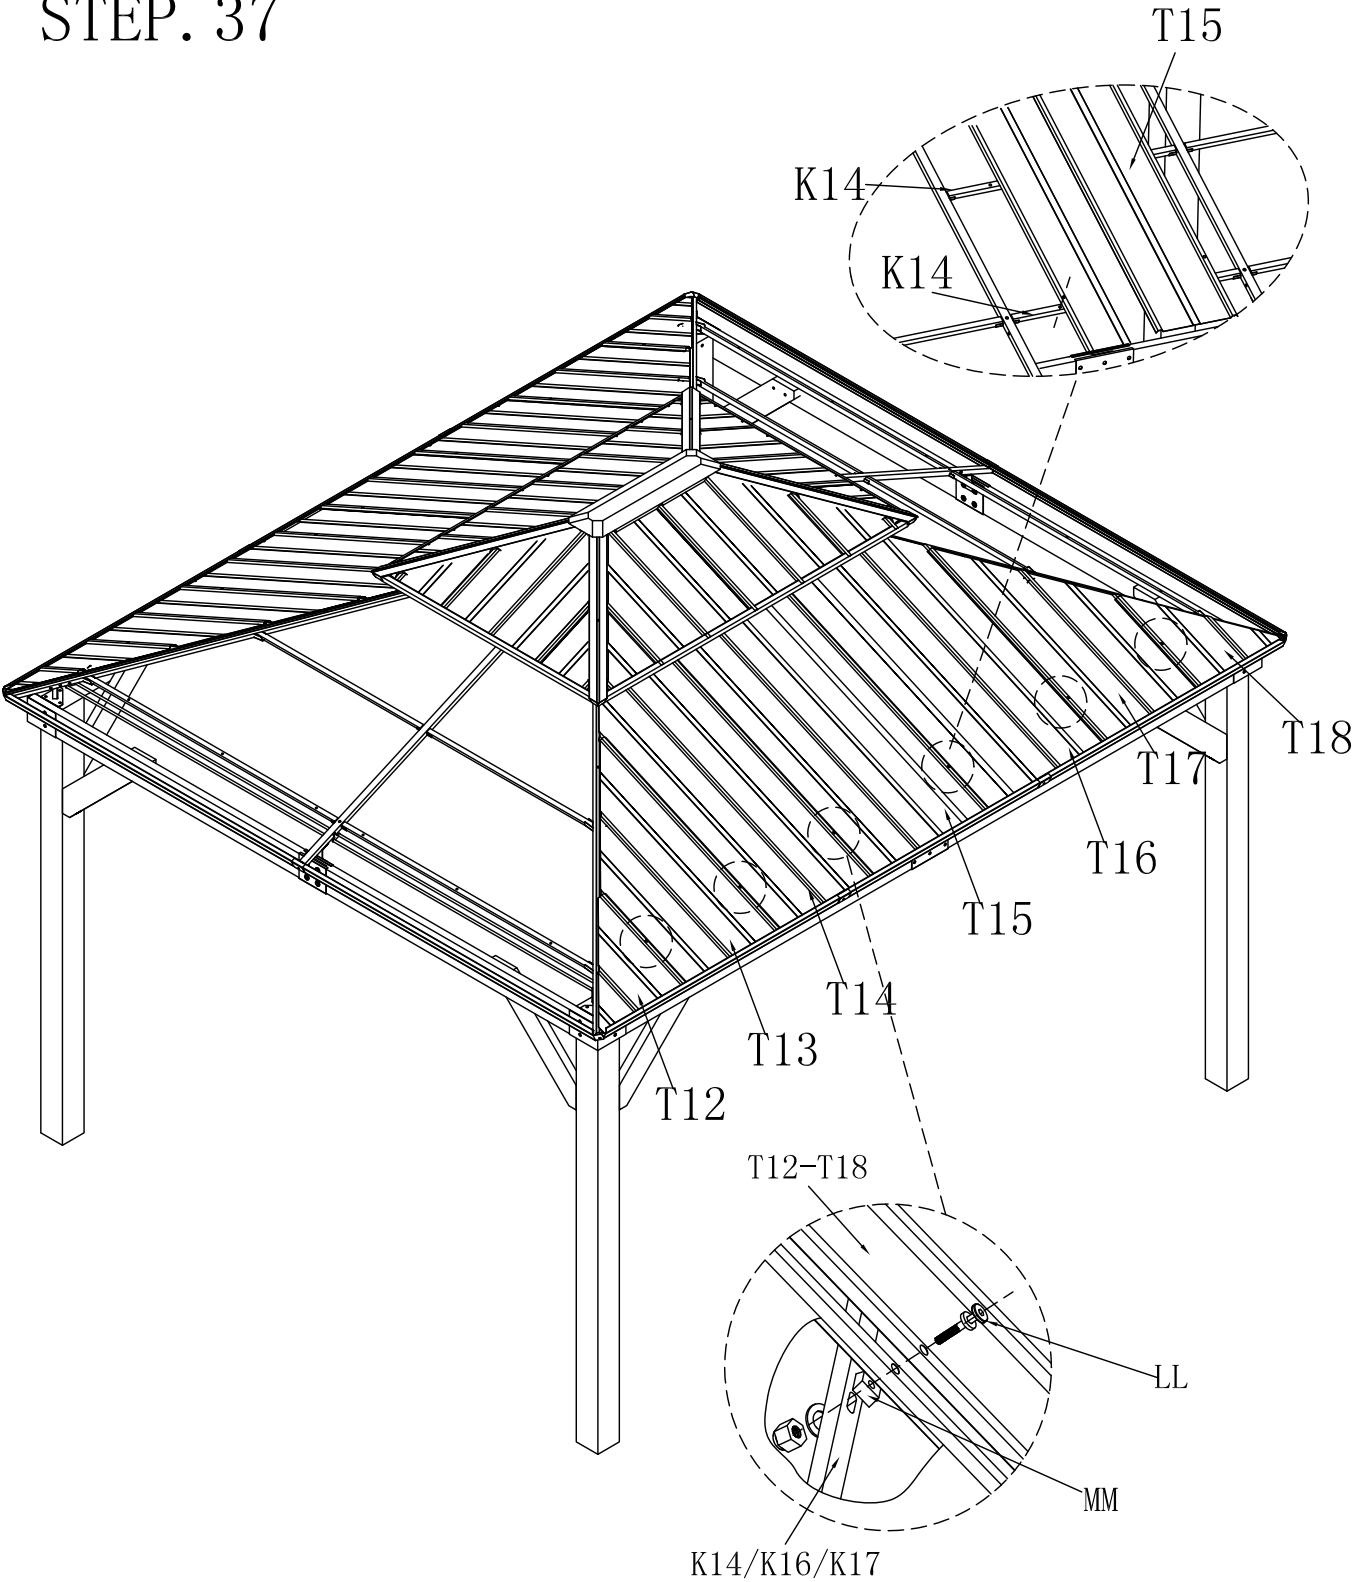


**NOTE: PRE-ASSEMBLE BOLT & WASHER (LL)/SPACER(MM),
DO NOT TIGHTEN THIS STEP.**




STEP. 38

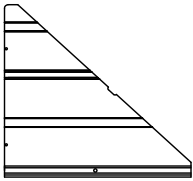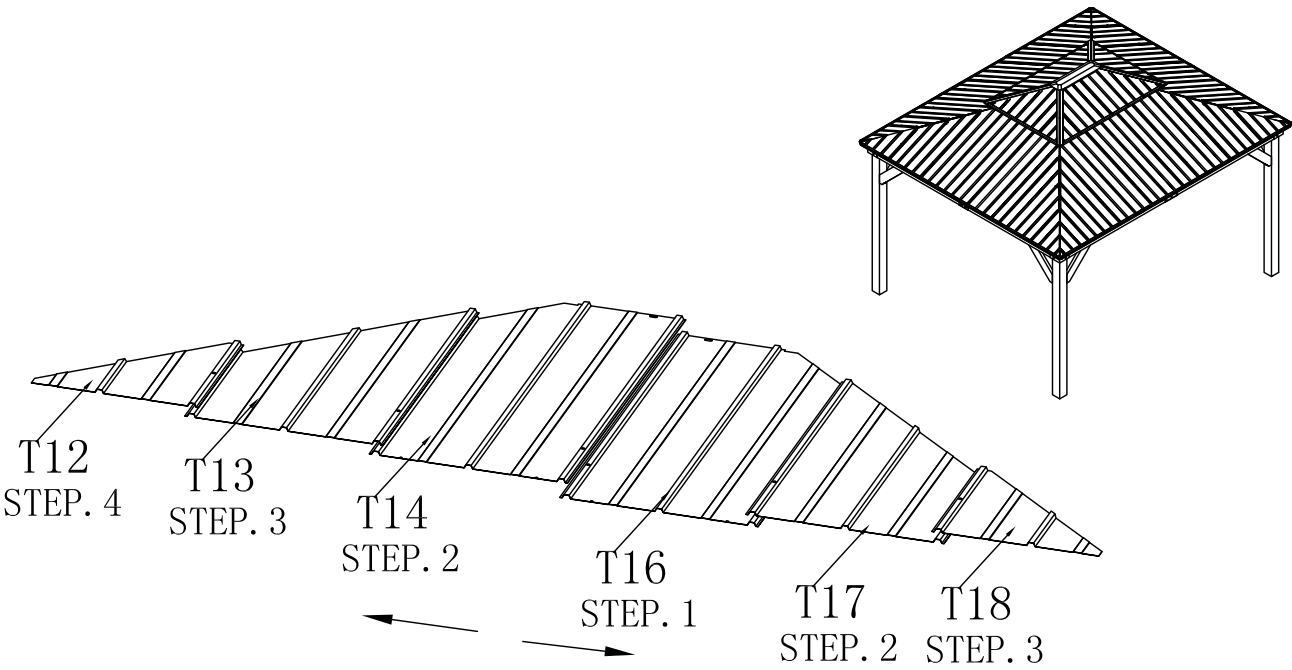


T12 2X

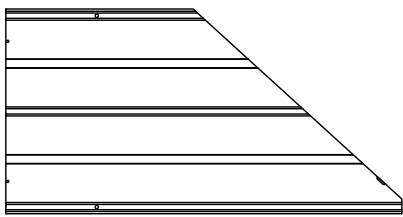


T13 2X

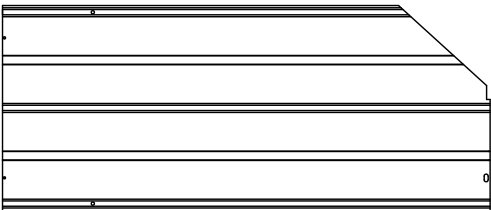


T14 2X

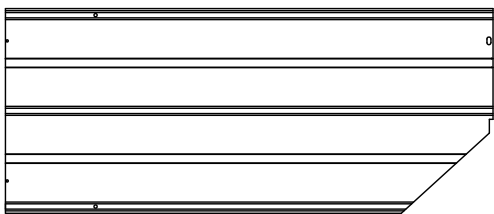

T16 2X

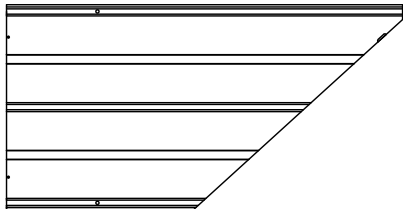


T17 2X

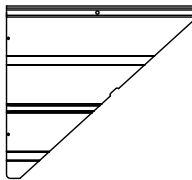

T18 2X

STEP. 39

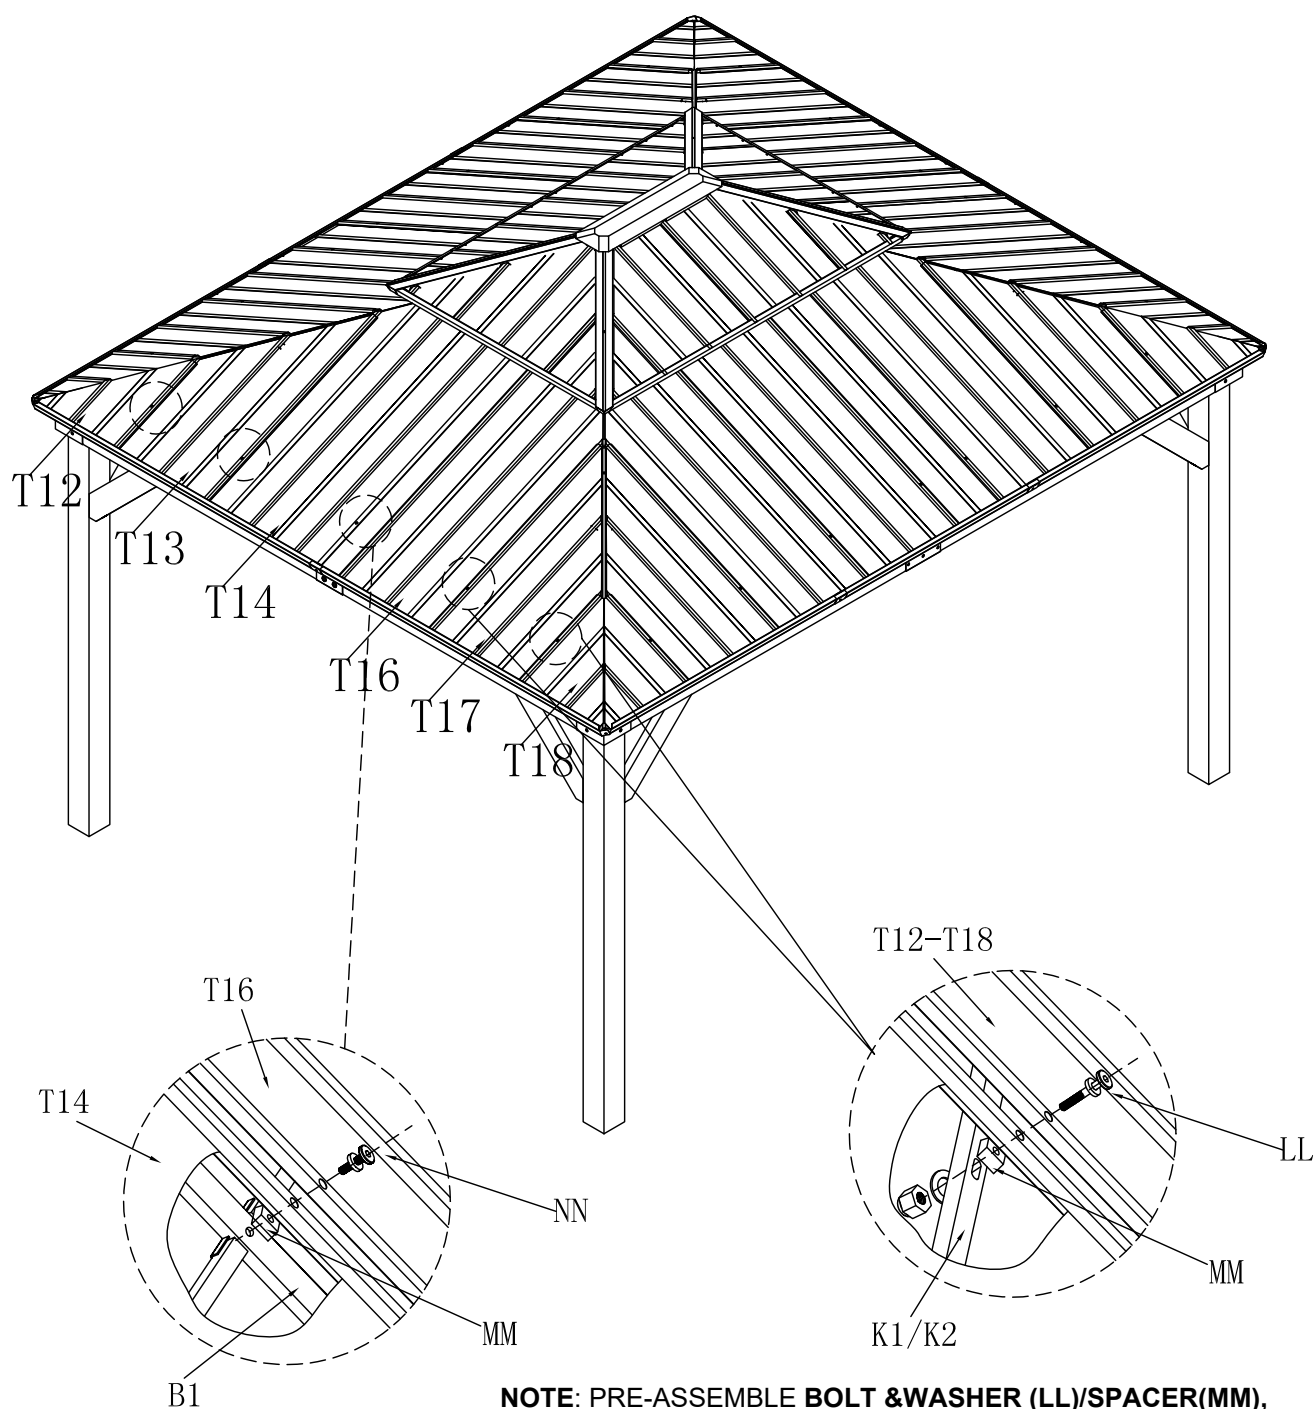



M6X25
⊙
⊙ NN 2X

M6X45
⊙
⊙ LL 8X

⊙ MM 10X

STEP. 40

NOTE: TIGHTEN ALL PRE-ASSEMBLED BOLTS ON BOTTOM OF PANELS.

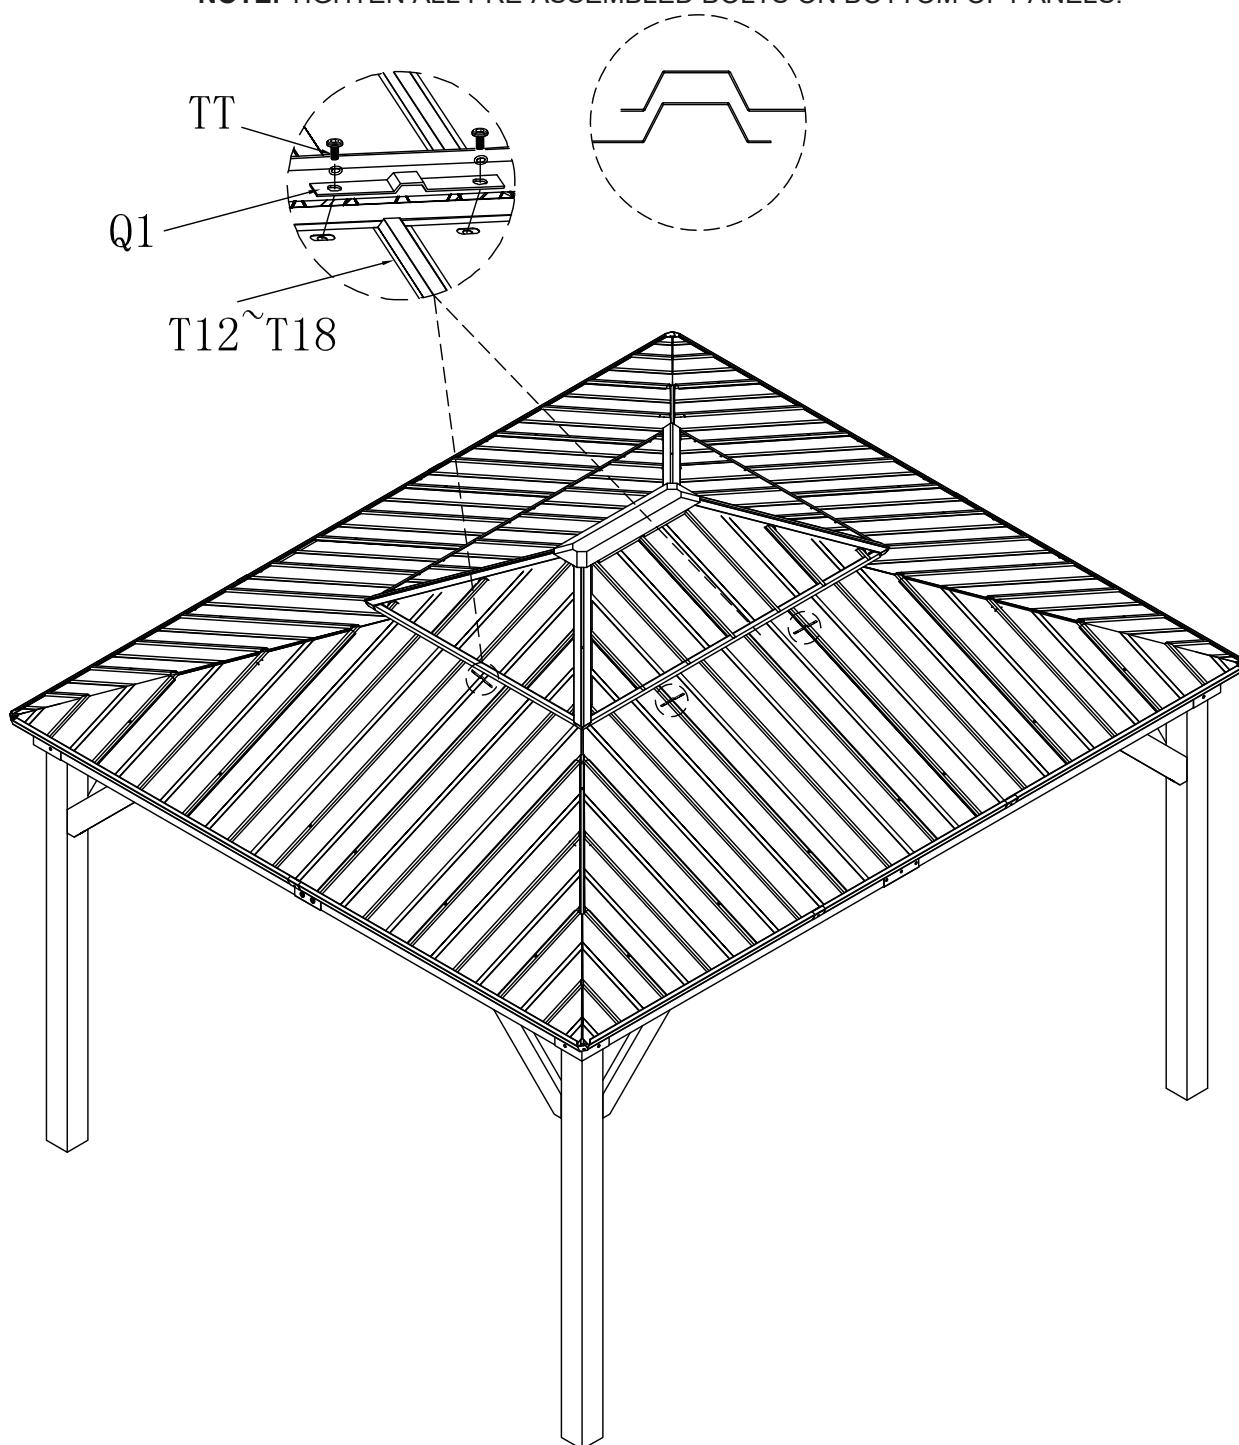



Q1 6X



M6X15

TT 12X


STEP. 41

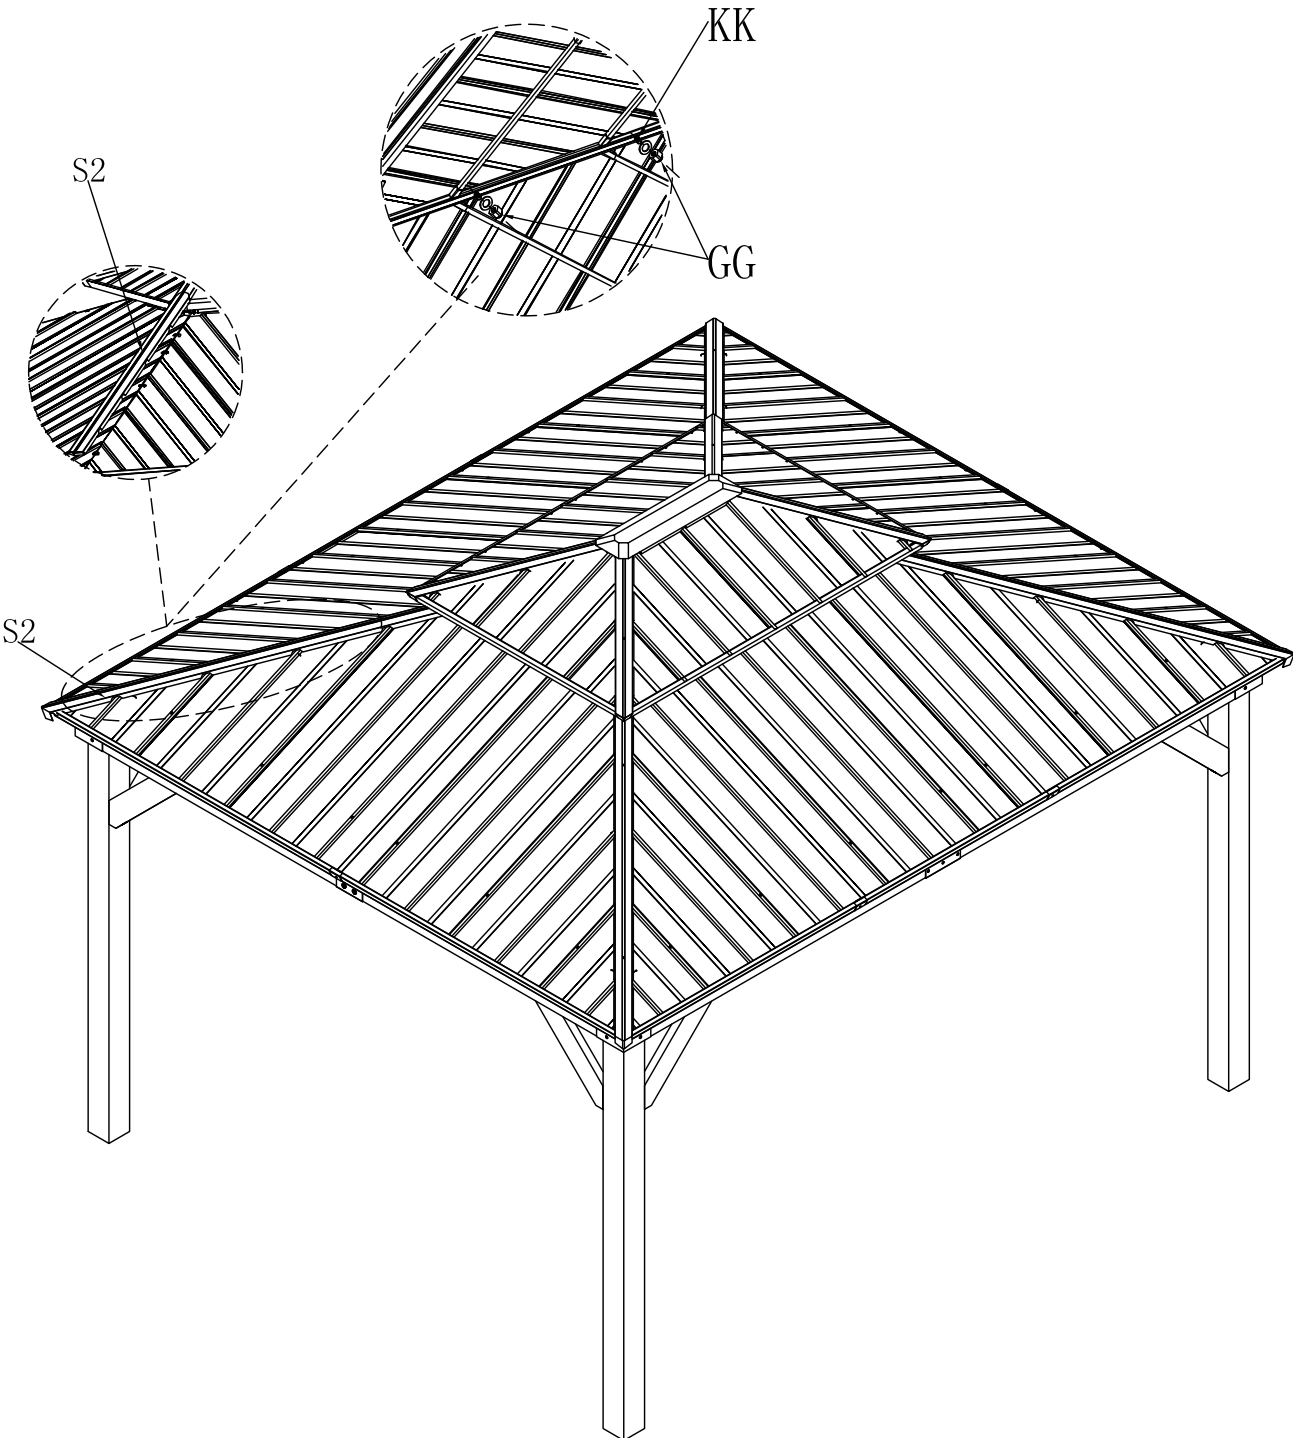

Ⓢ2 4X

⓪ Ⓜ ⓖⓖ 8X

STEP. 42

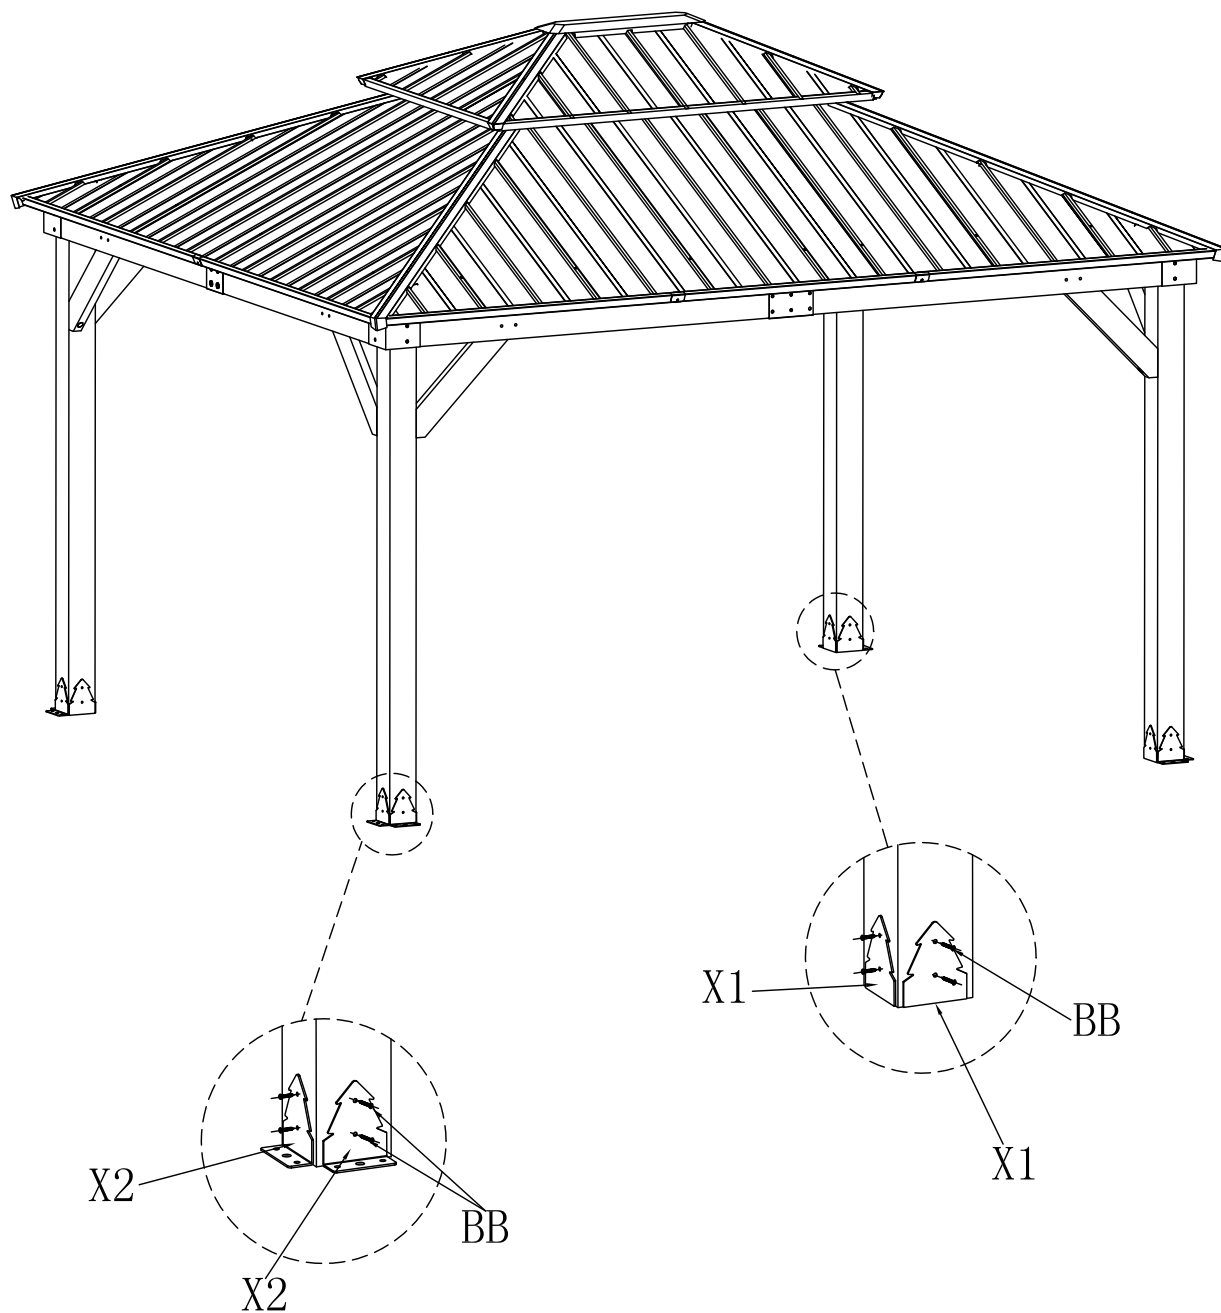

ⓧ1 8X





ⓧ2 8X



M5X30

ⓑⓑ 32X






STEP. 43

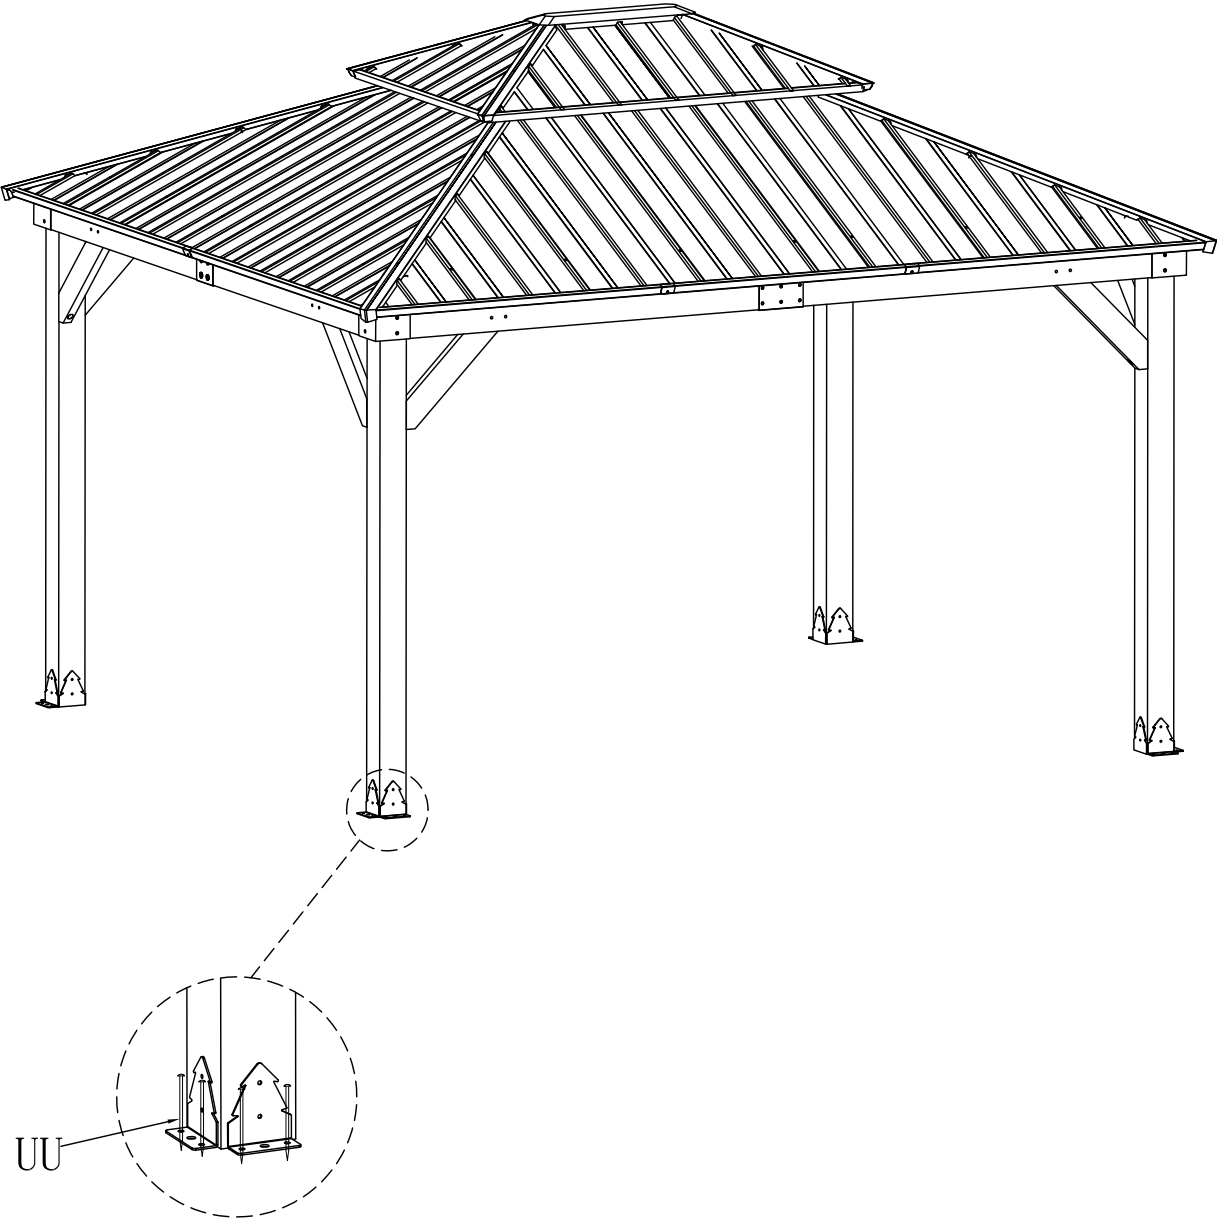


UU

16X

STEP. 44


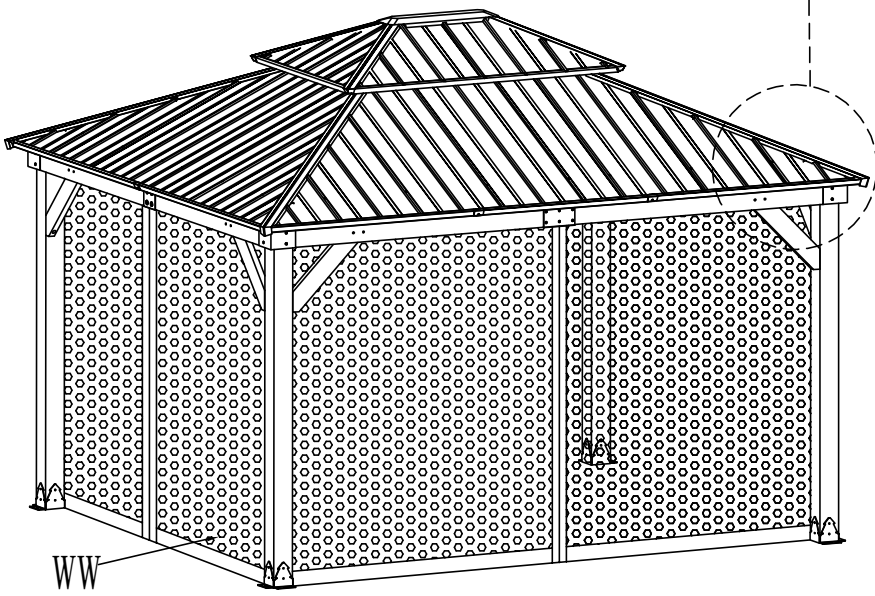
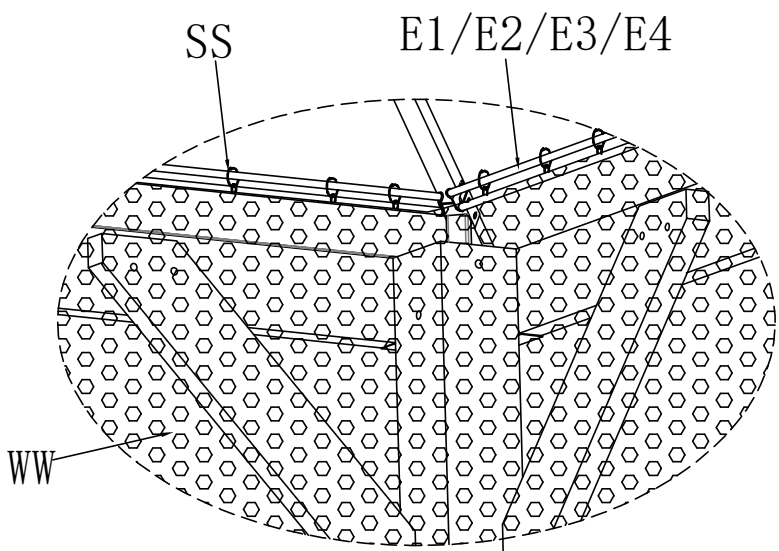
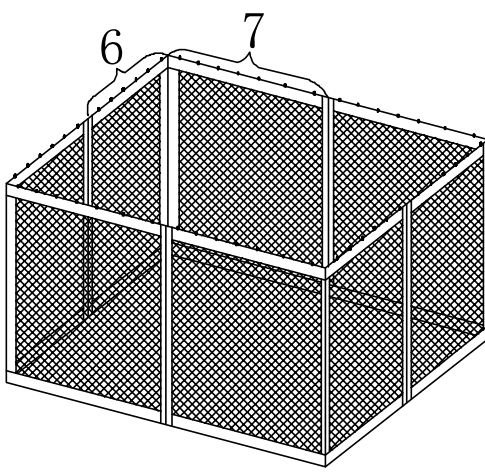
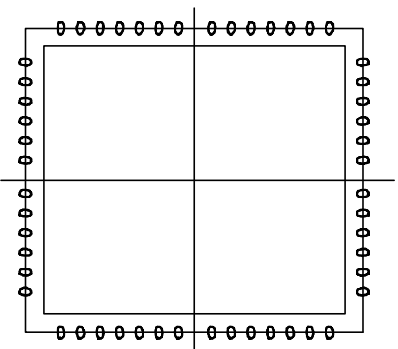


WW 1X

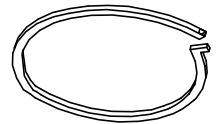


SS 52X

STEP. 45

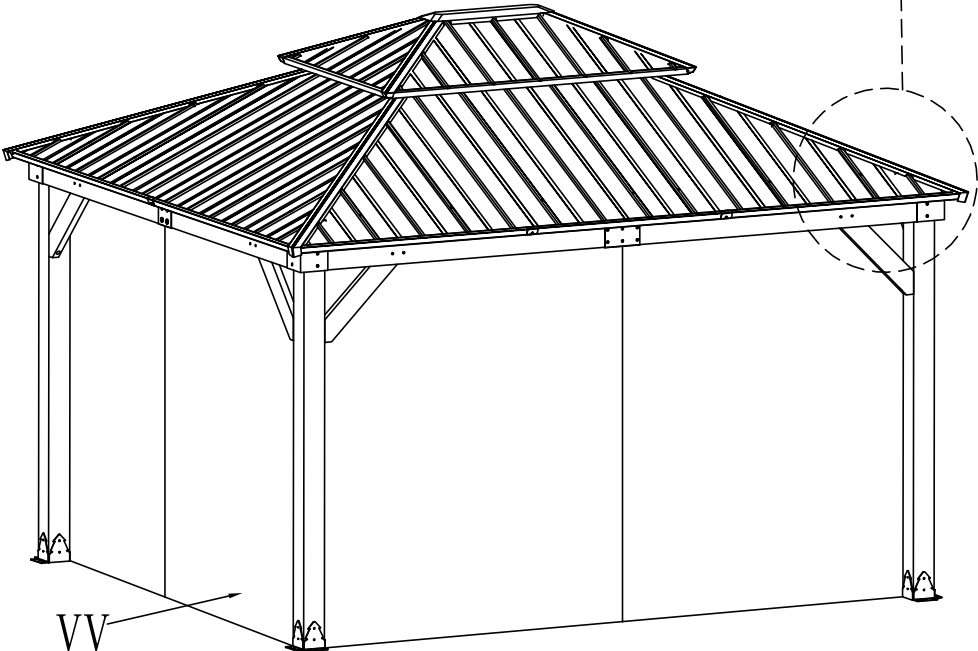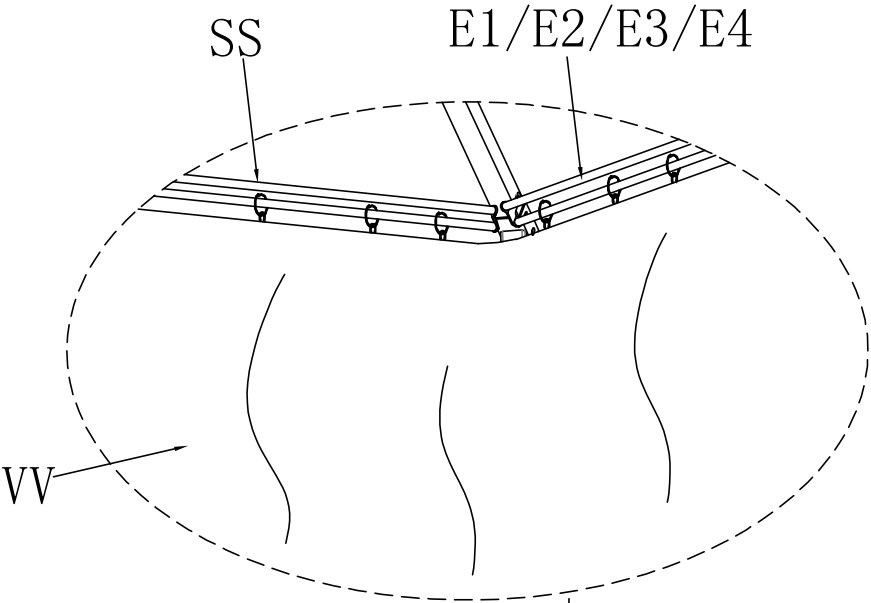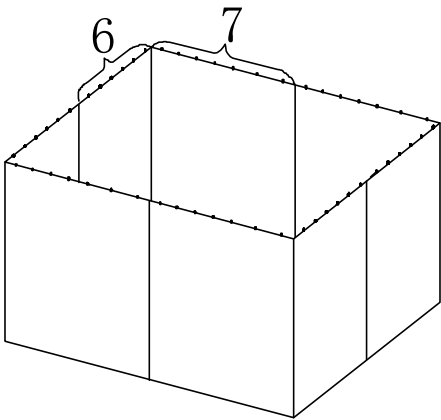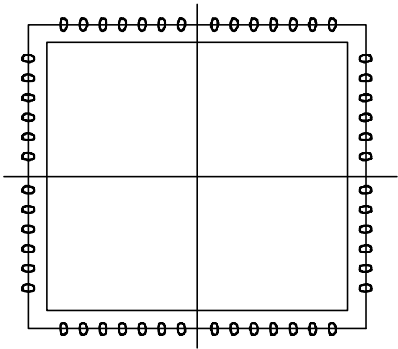

Ⓥ 1X

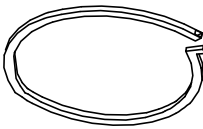

Ⓢ 52X