



BED FRAME

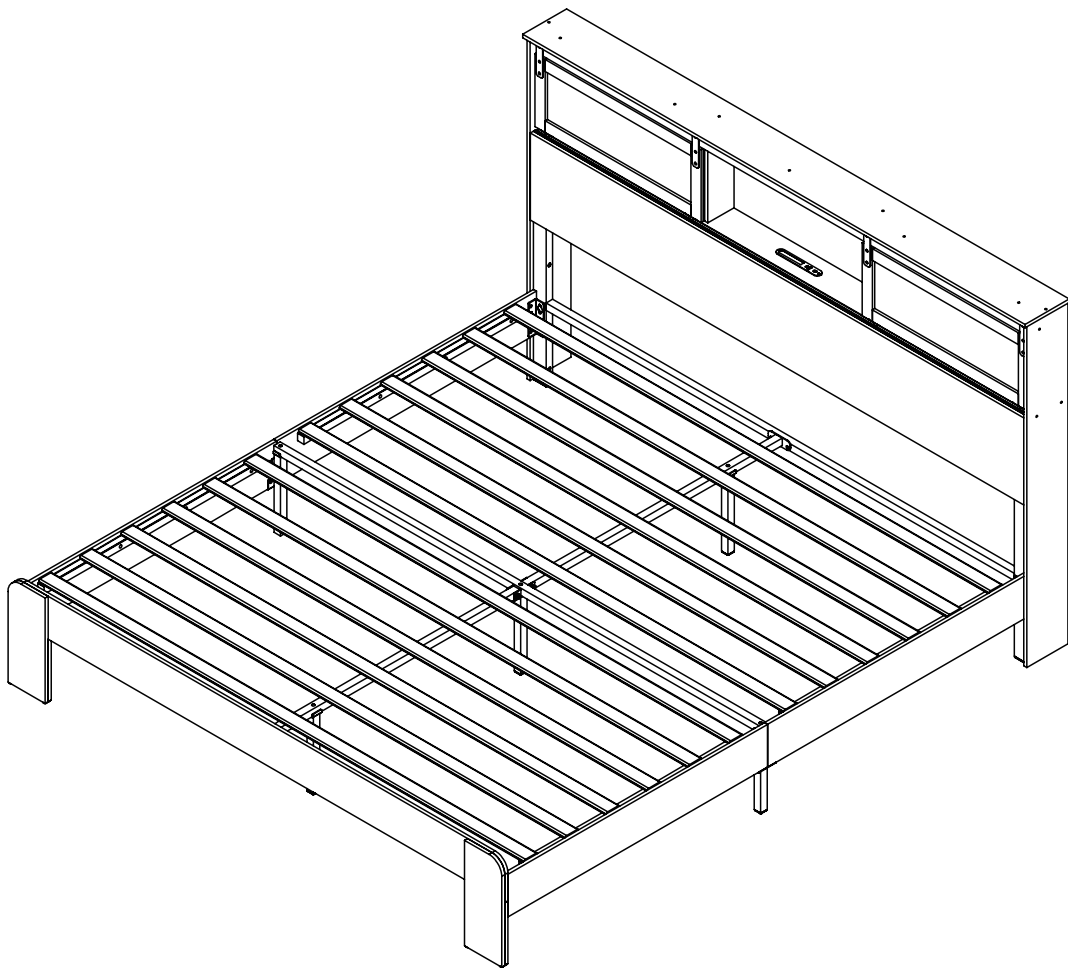

Thank you for choosing our products, please assemble and use it following the instructions.

Assembly Instruction




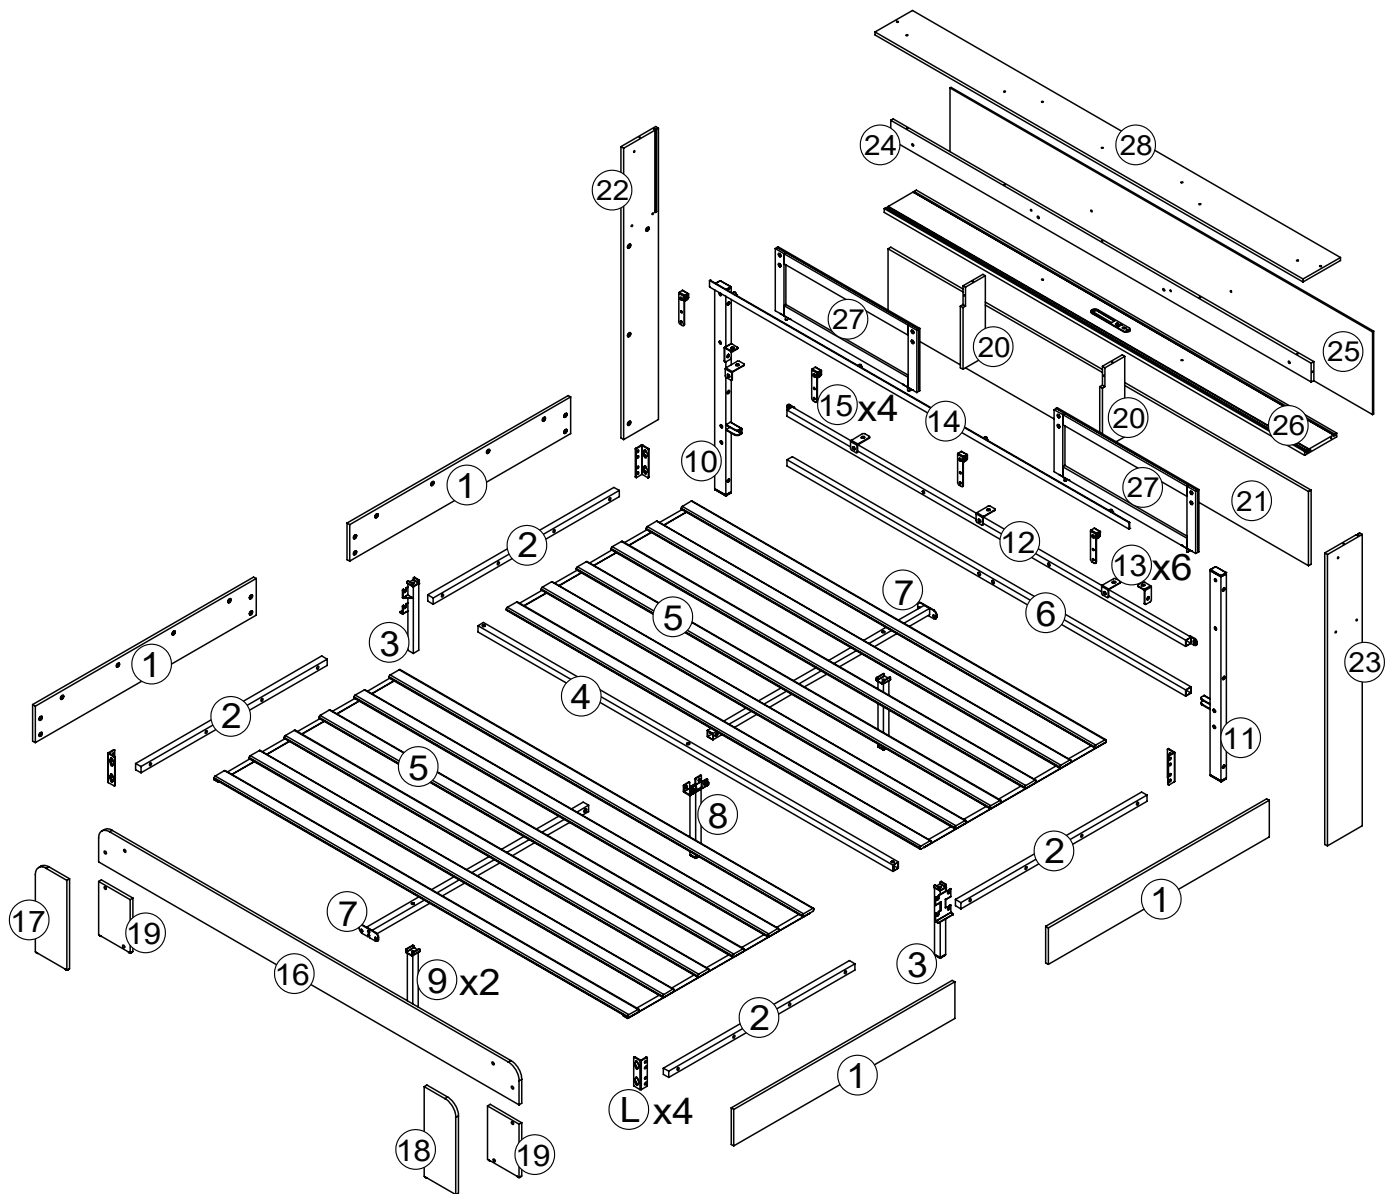


Important Note


HARDWARE NOTE :

1. Two or more people are required for assembly
2. Do not screw on the bolts too tight unless the installation is done. Make sure all bolts are tightly screwed before you use it.


Components

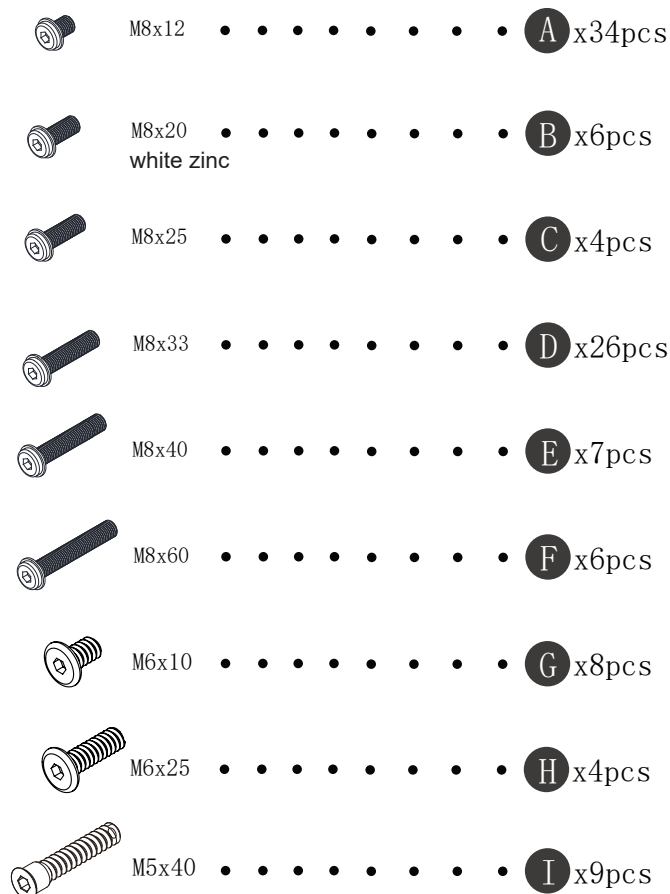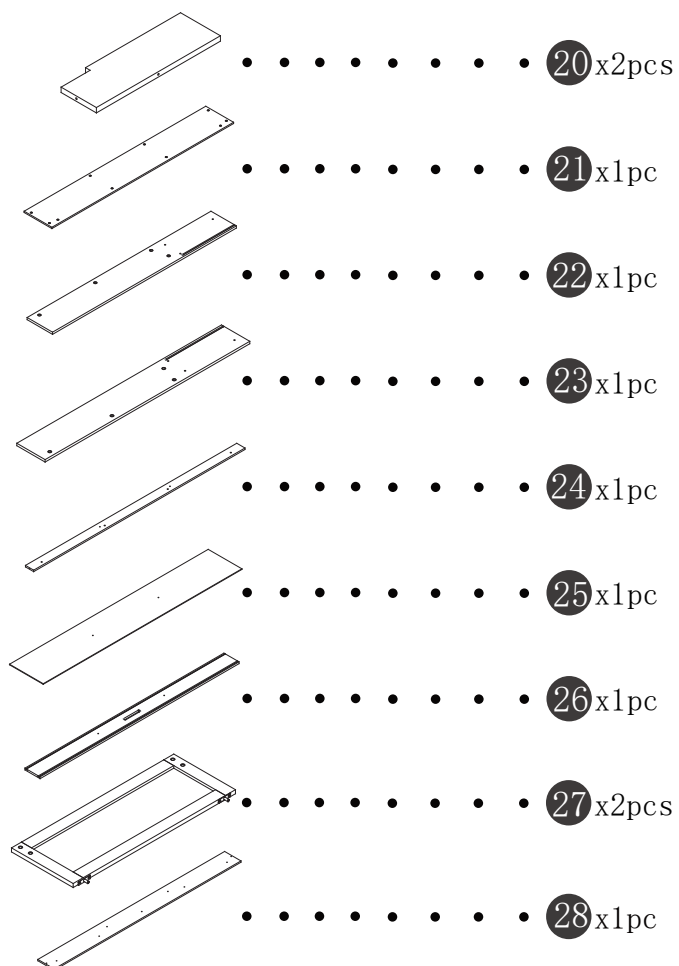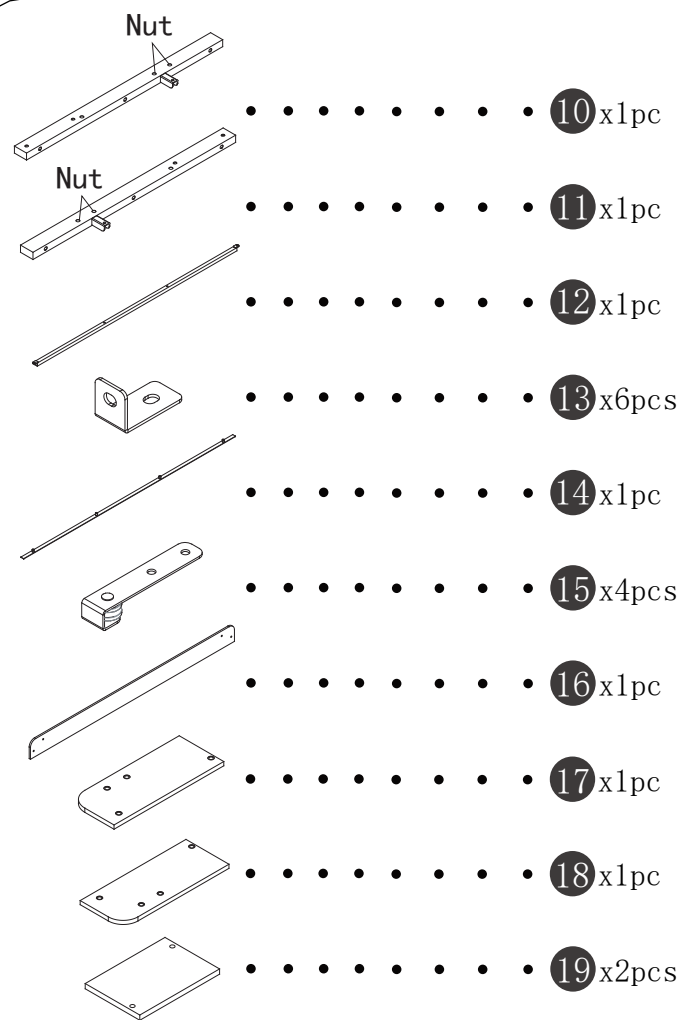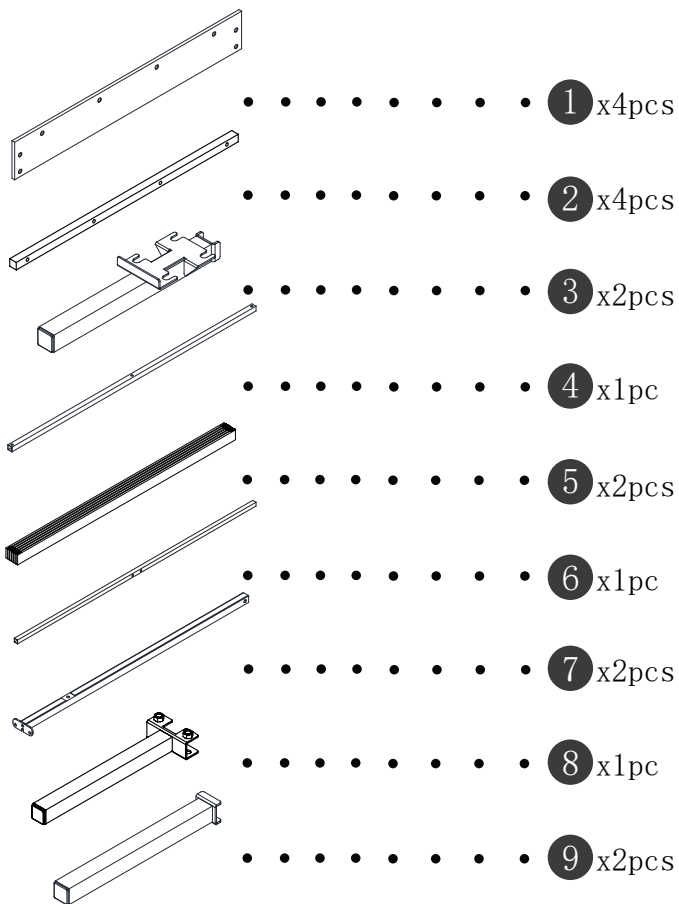

1




M5x30 • • • • • • • • • • **J** x2pcs
white zinc




M5x40 • • • • • • • • • • **K** x10pcs
white zinc




ST4x14 • • • • • • • • • • **M** x2pcs




M5 • • • • • • • • • • **N** x1pc



M8 • • • • • • • • • • **O** x1pc




• • • • • • • • • • **U** x1pc



• • • • • • • • • • **L** x4pcs

to Assemble first

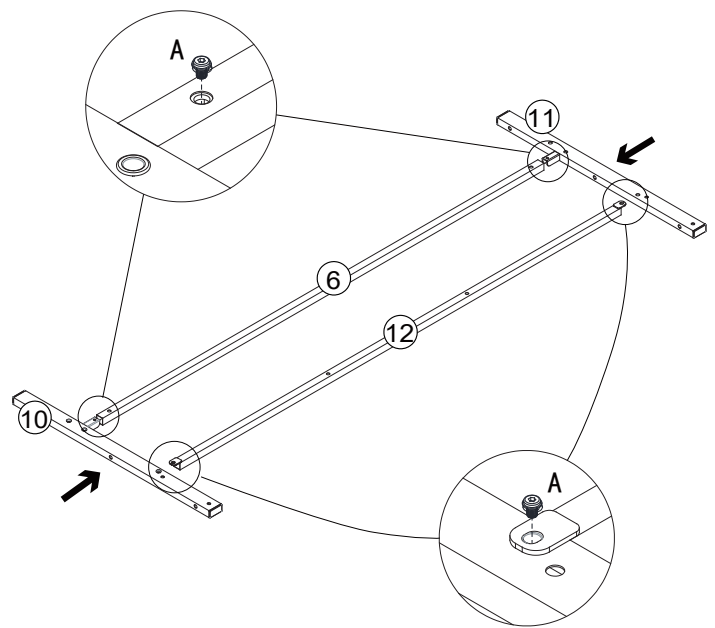

Assemble second


A



M8x12

4pcs

2

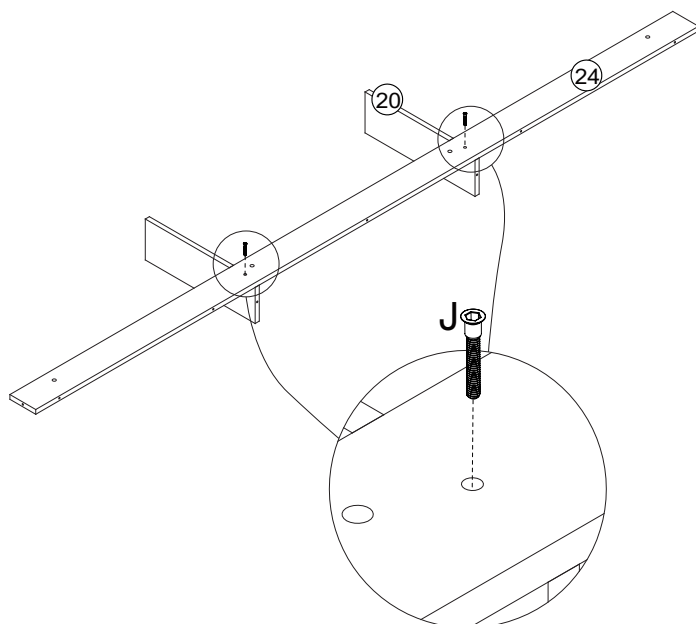


J



2pcs

white zinc

3

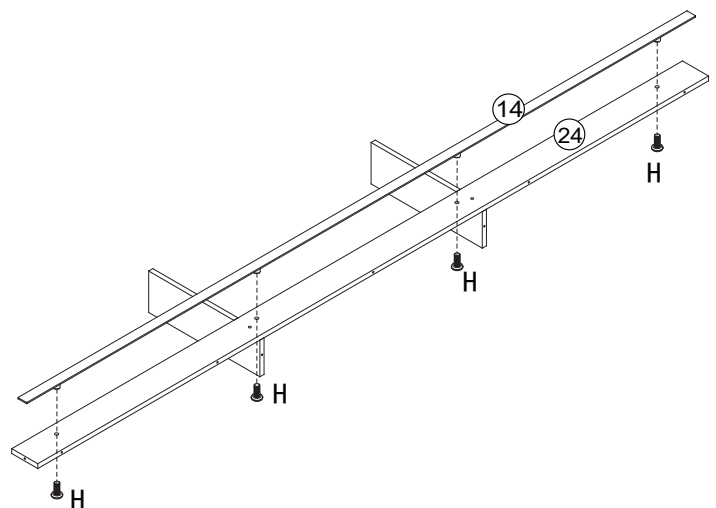



H




M6x25

4pcs


4

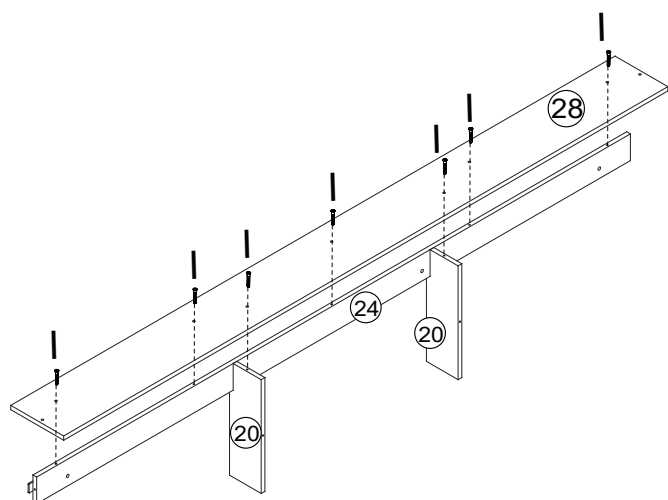


5

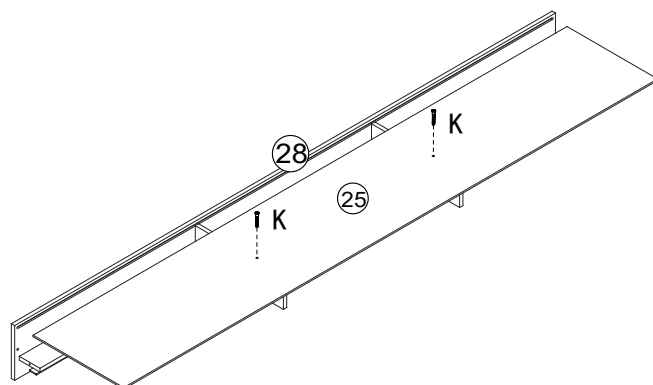


6

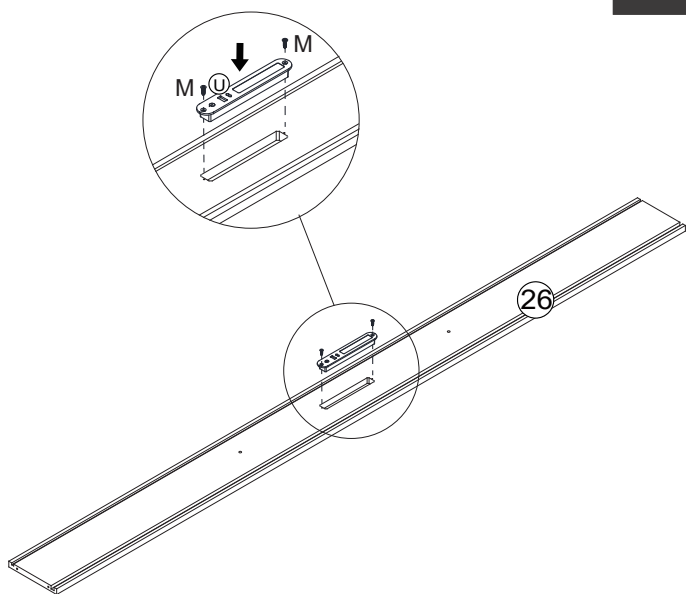

7

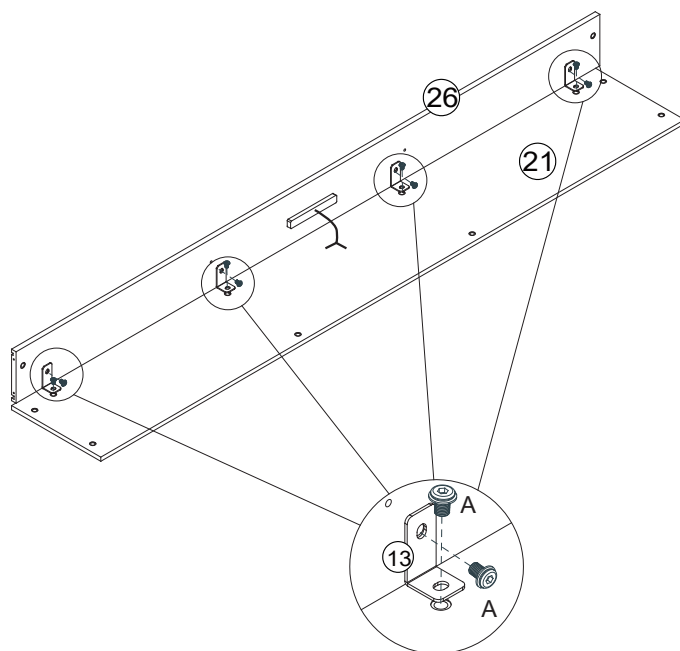


8

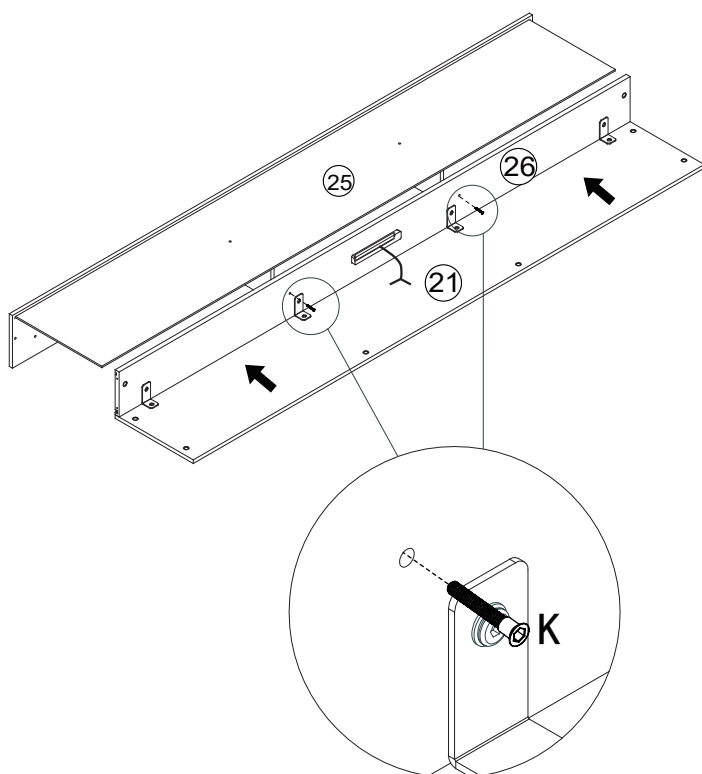


K		2 pcs	white zinc
---	--	-------	------------

9

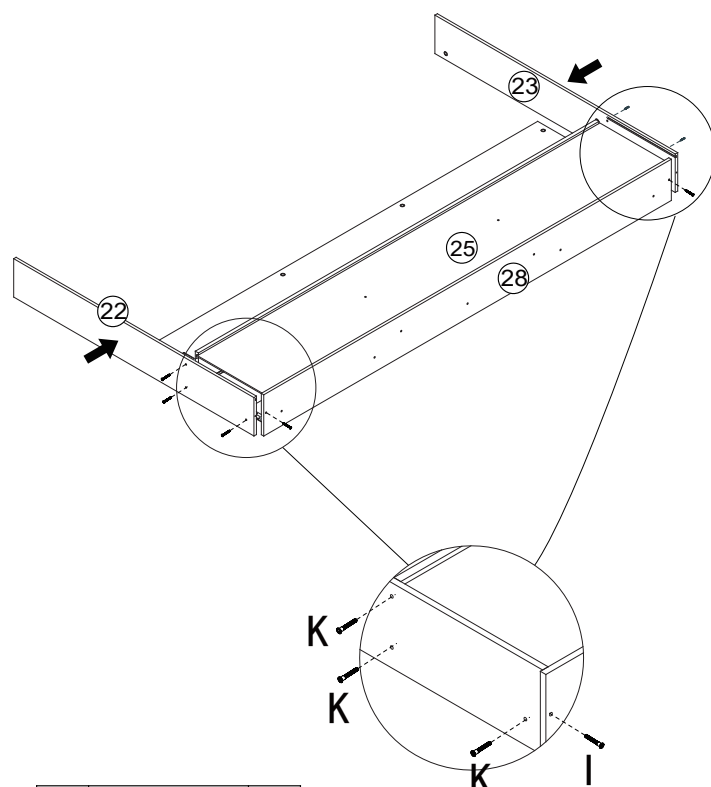

I		2 pcs	
K		6 pcs	white zinc


10

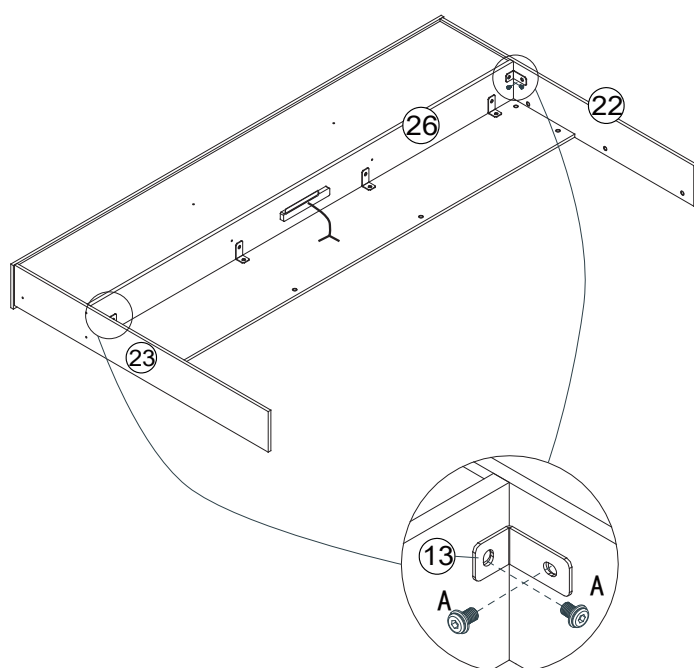

A		4 pcs	
---	---	-------	--


11

Assemble second

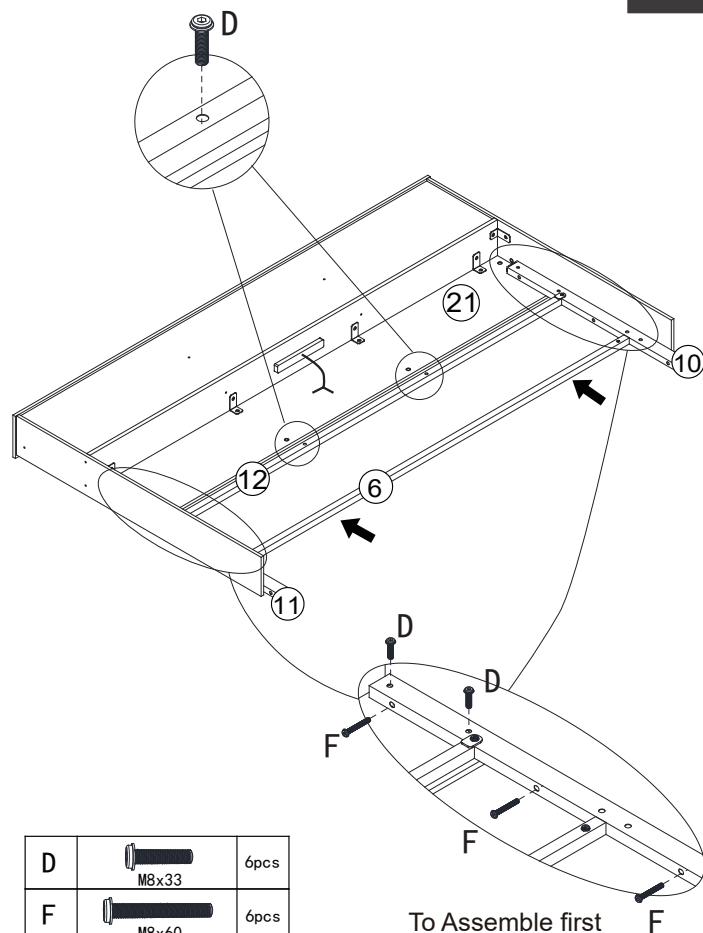


D		6 pcs	
F		6 pcs	

To Assemble first

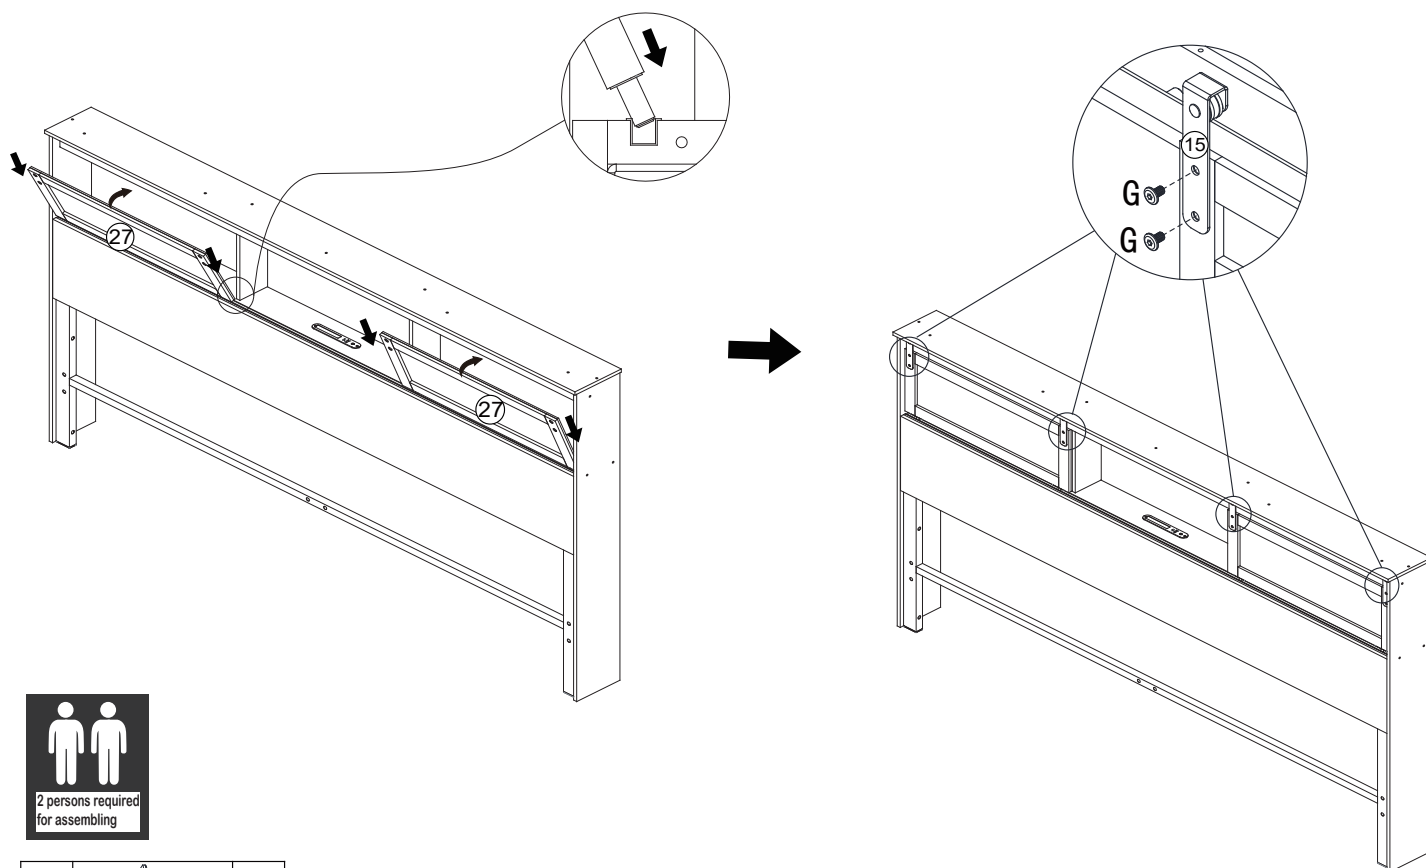


G		8pcs
---	--	------

M6x10

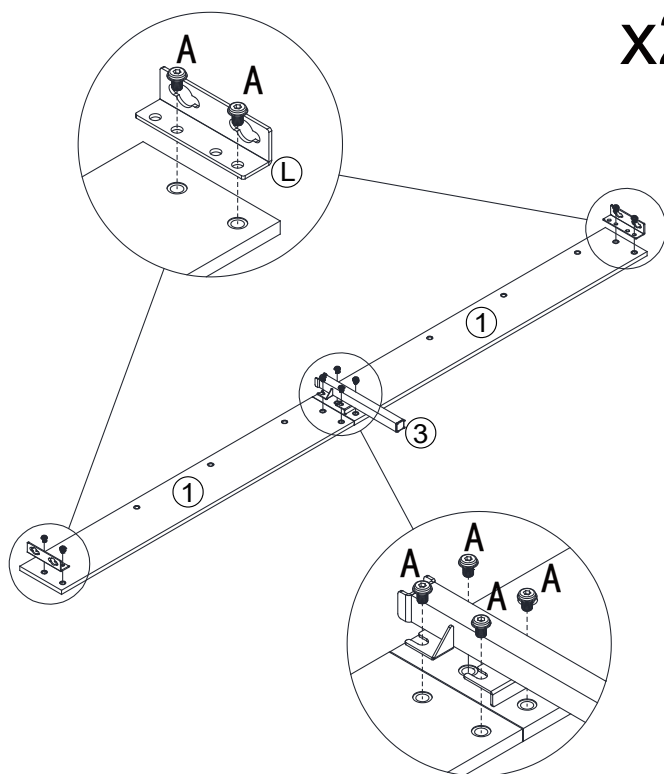13
x2

A		16pcs
---	---	-------


M8x12

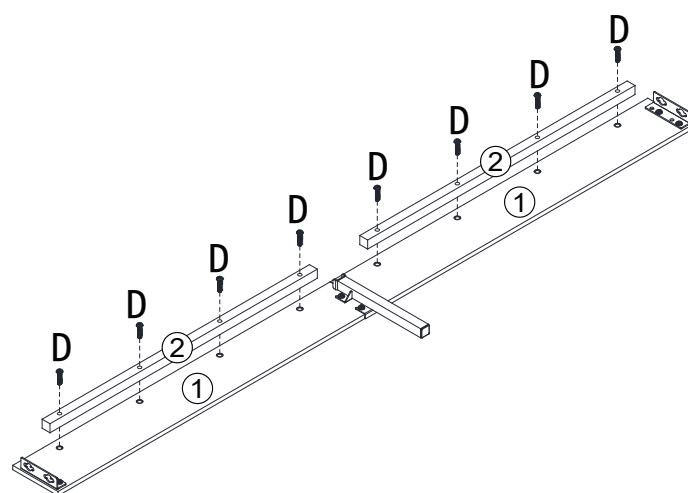14
x2

D		16pcs
---	---	-------

M8x33


15

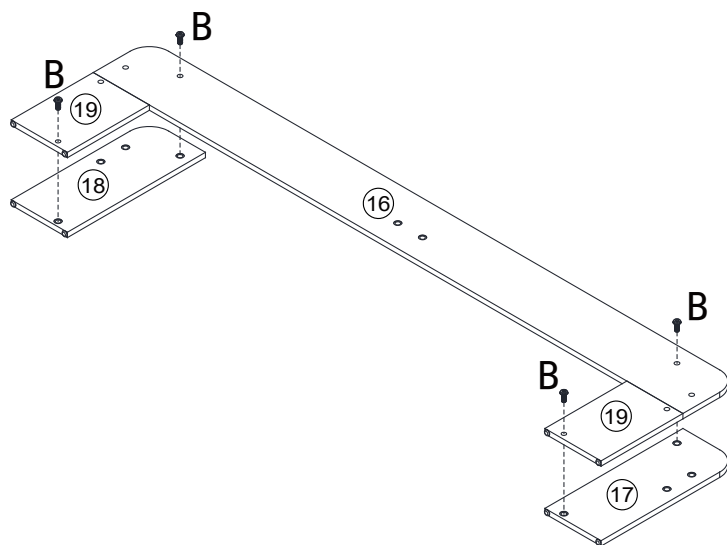

B		4pcs	white zinc
---	---	------	------------


16

Tighten screws

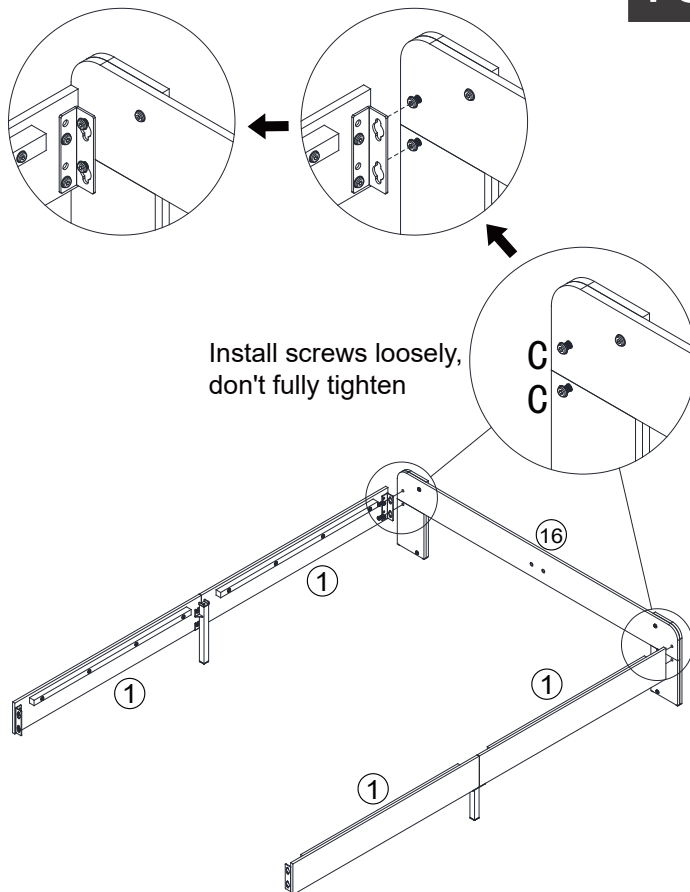Install screws loosely,
don't fully tighten

C		4pcs
---	---	------

17

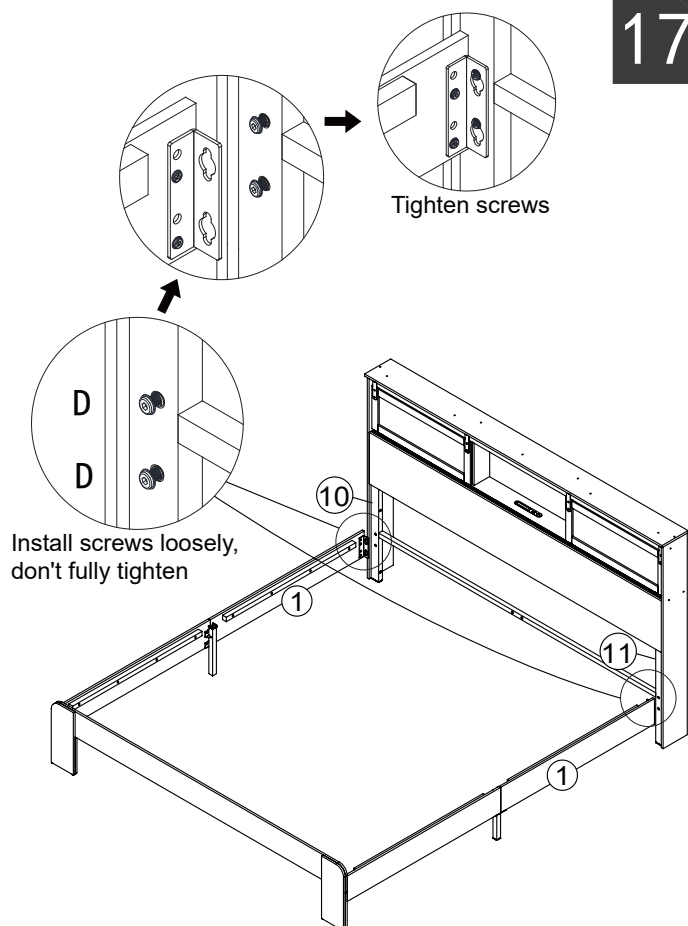


Tighten screws

Install screws loosely,
don't fully tighten

D		4pcs
---	---	------

18

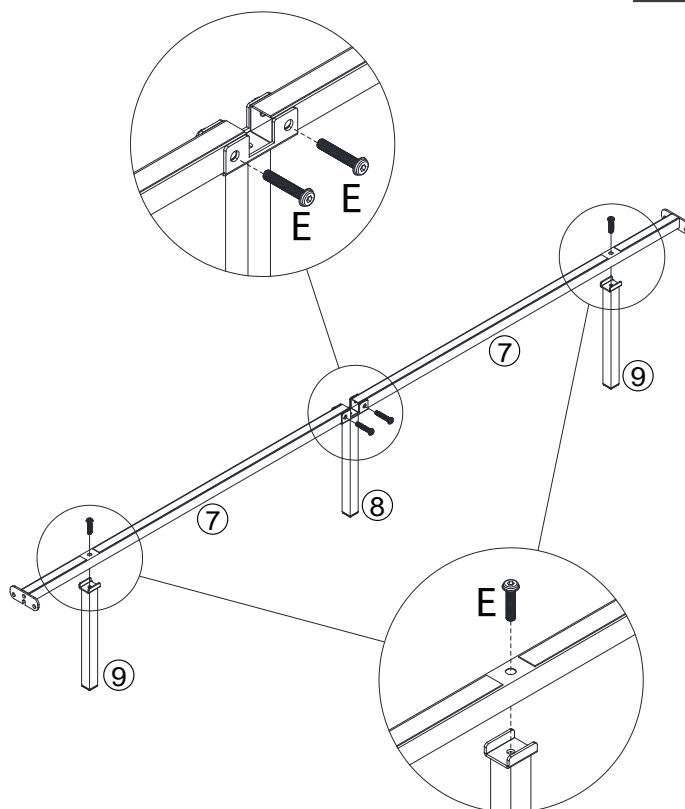


! Do not fully tighten
the screws yet.

E		4pcs
---	---	------

Assemble second

19

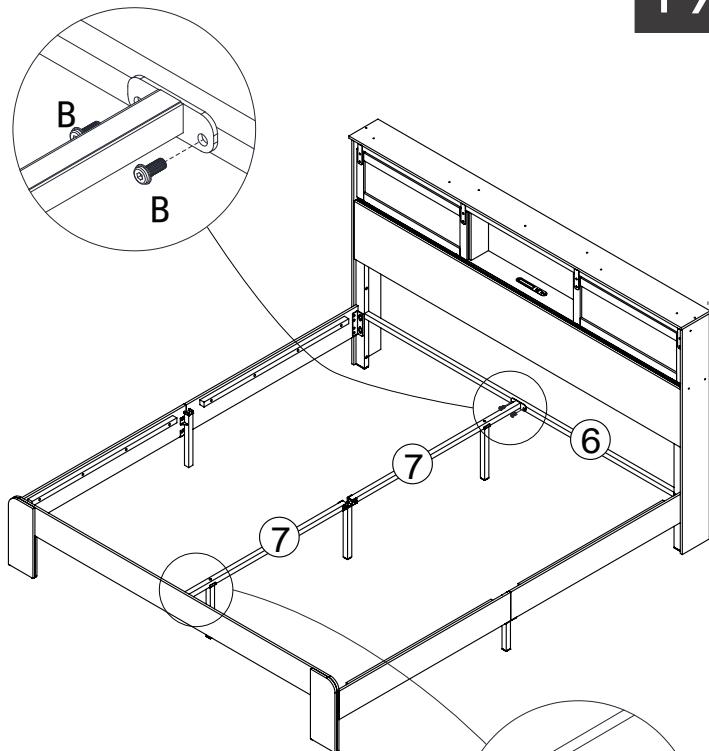


A	M8x12	2pcs
B	M8x20	2pcs

white zinc


To Assemble first

20

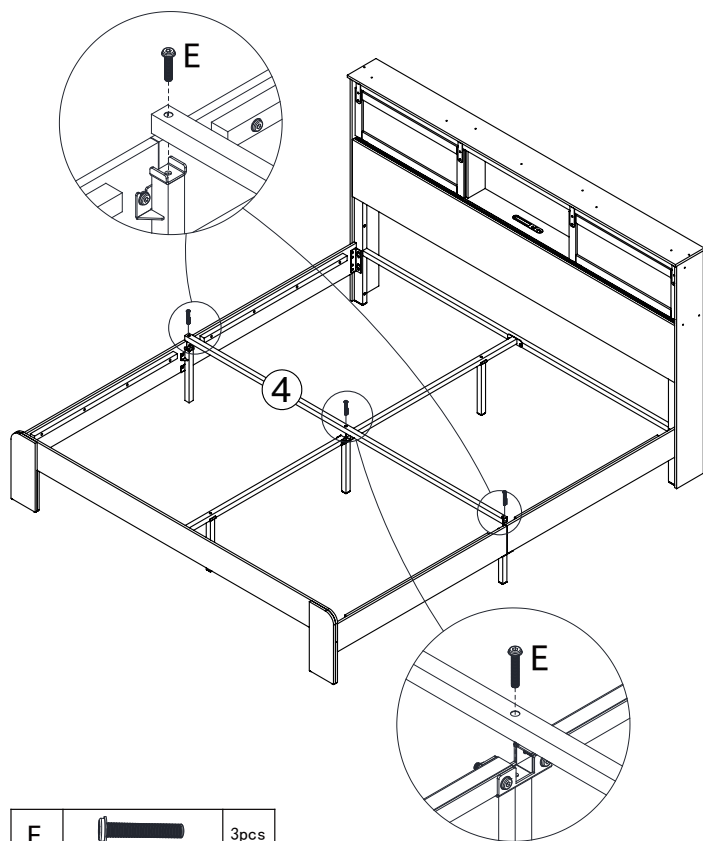


E	M8x40	3pcs
---	-------	------

21

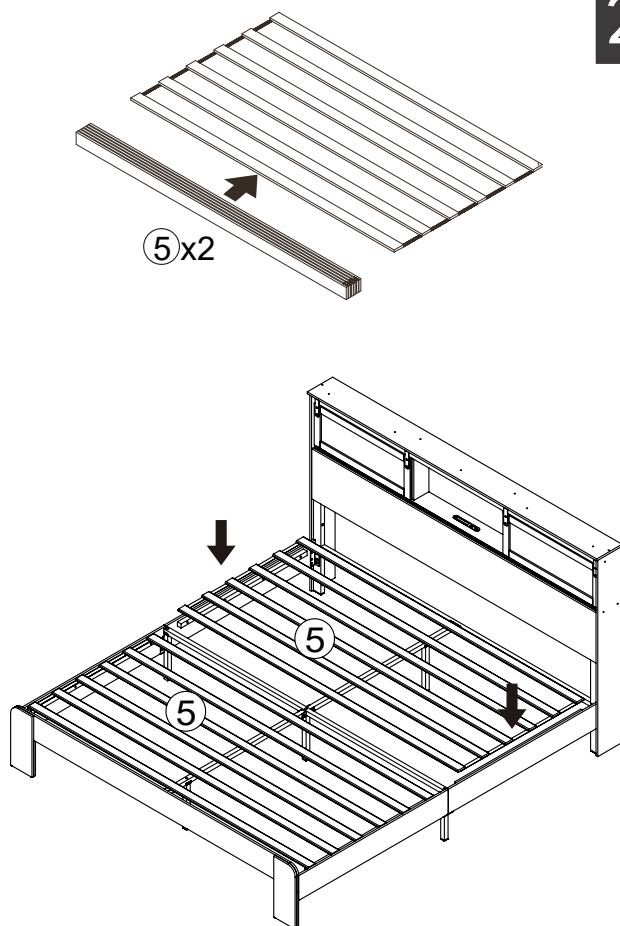

22

Finish

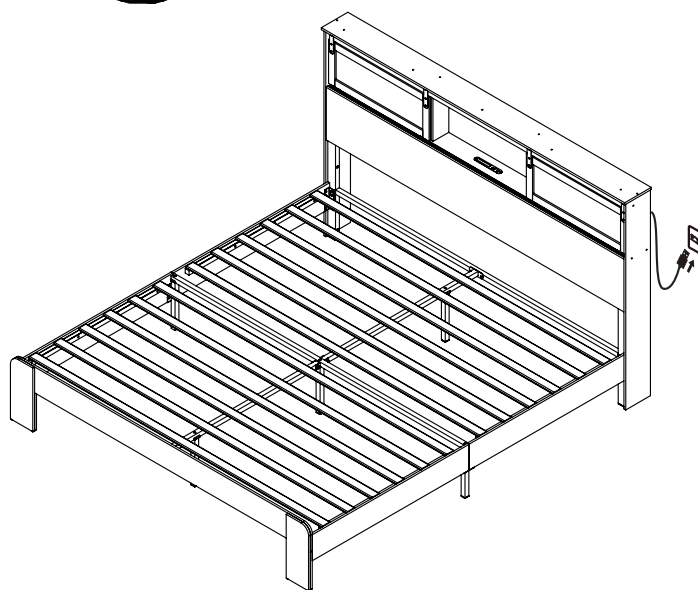

Note: Now you can tighten all the bolts.