



# Assembly Instruction

Assemble on the pad to prevent scratching the product.  
Do not tighten all screws before instructions prompt.

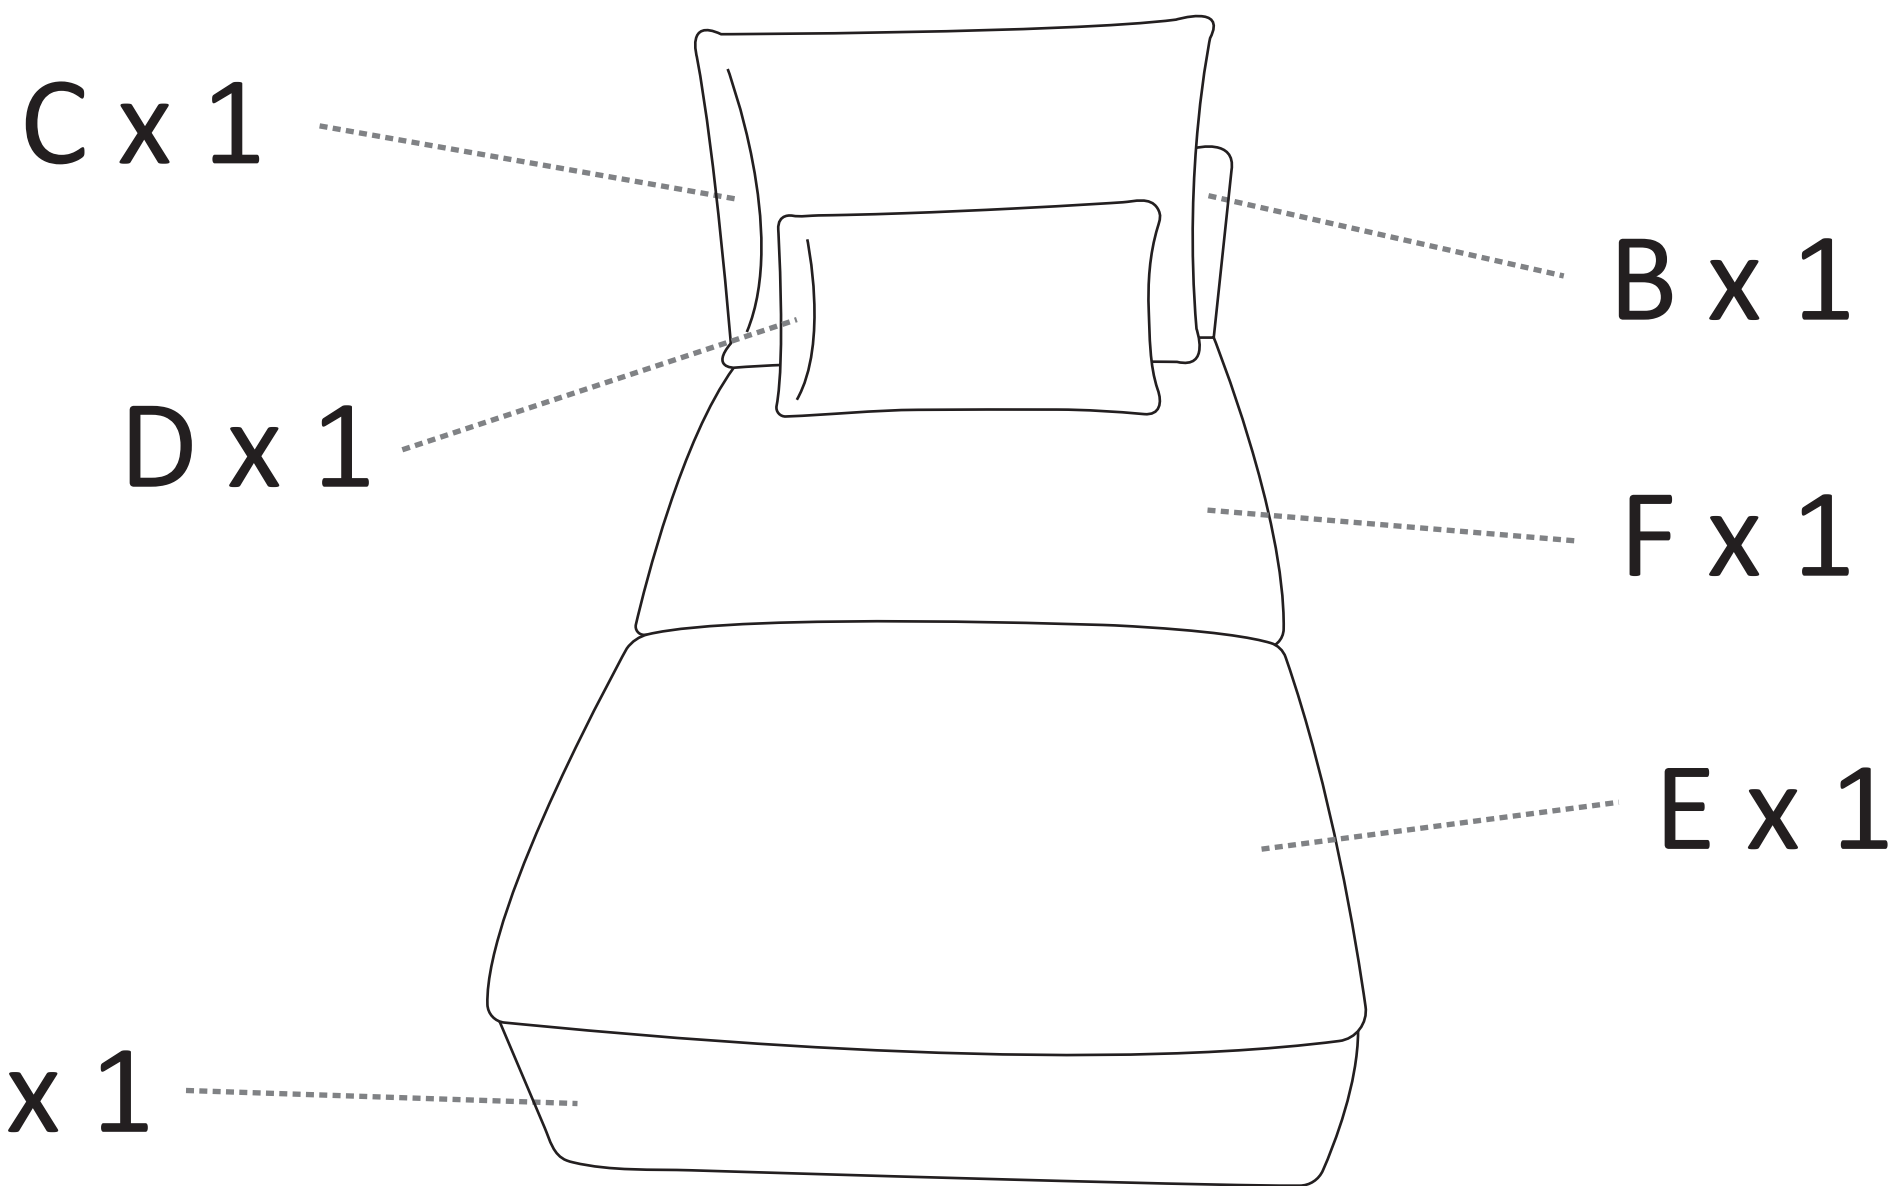

## Step 1

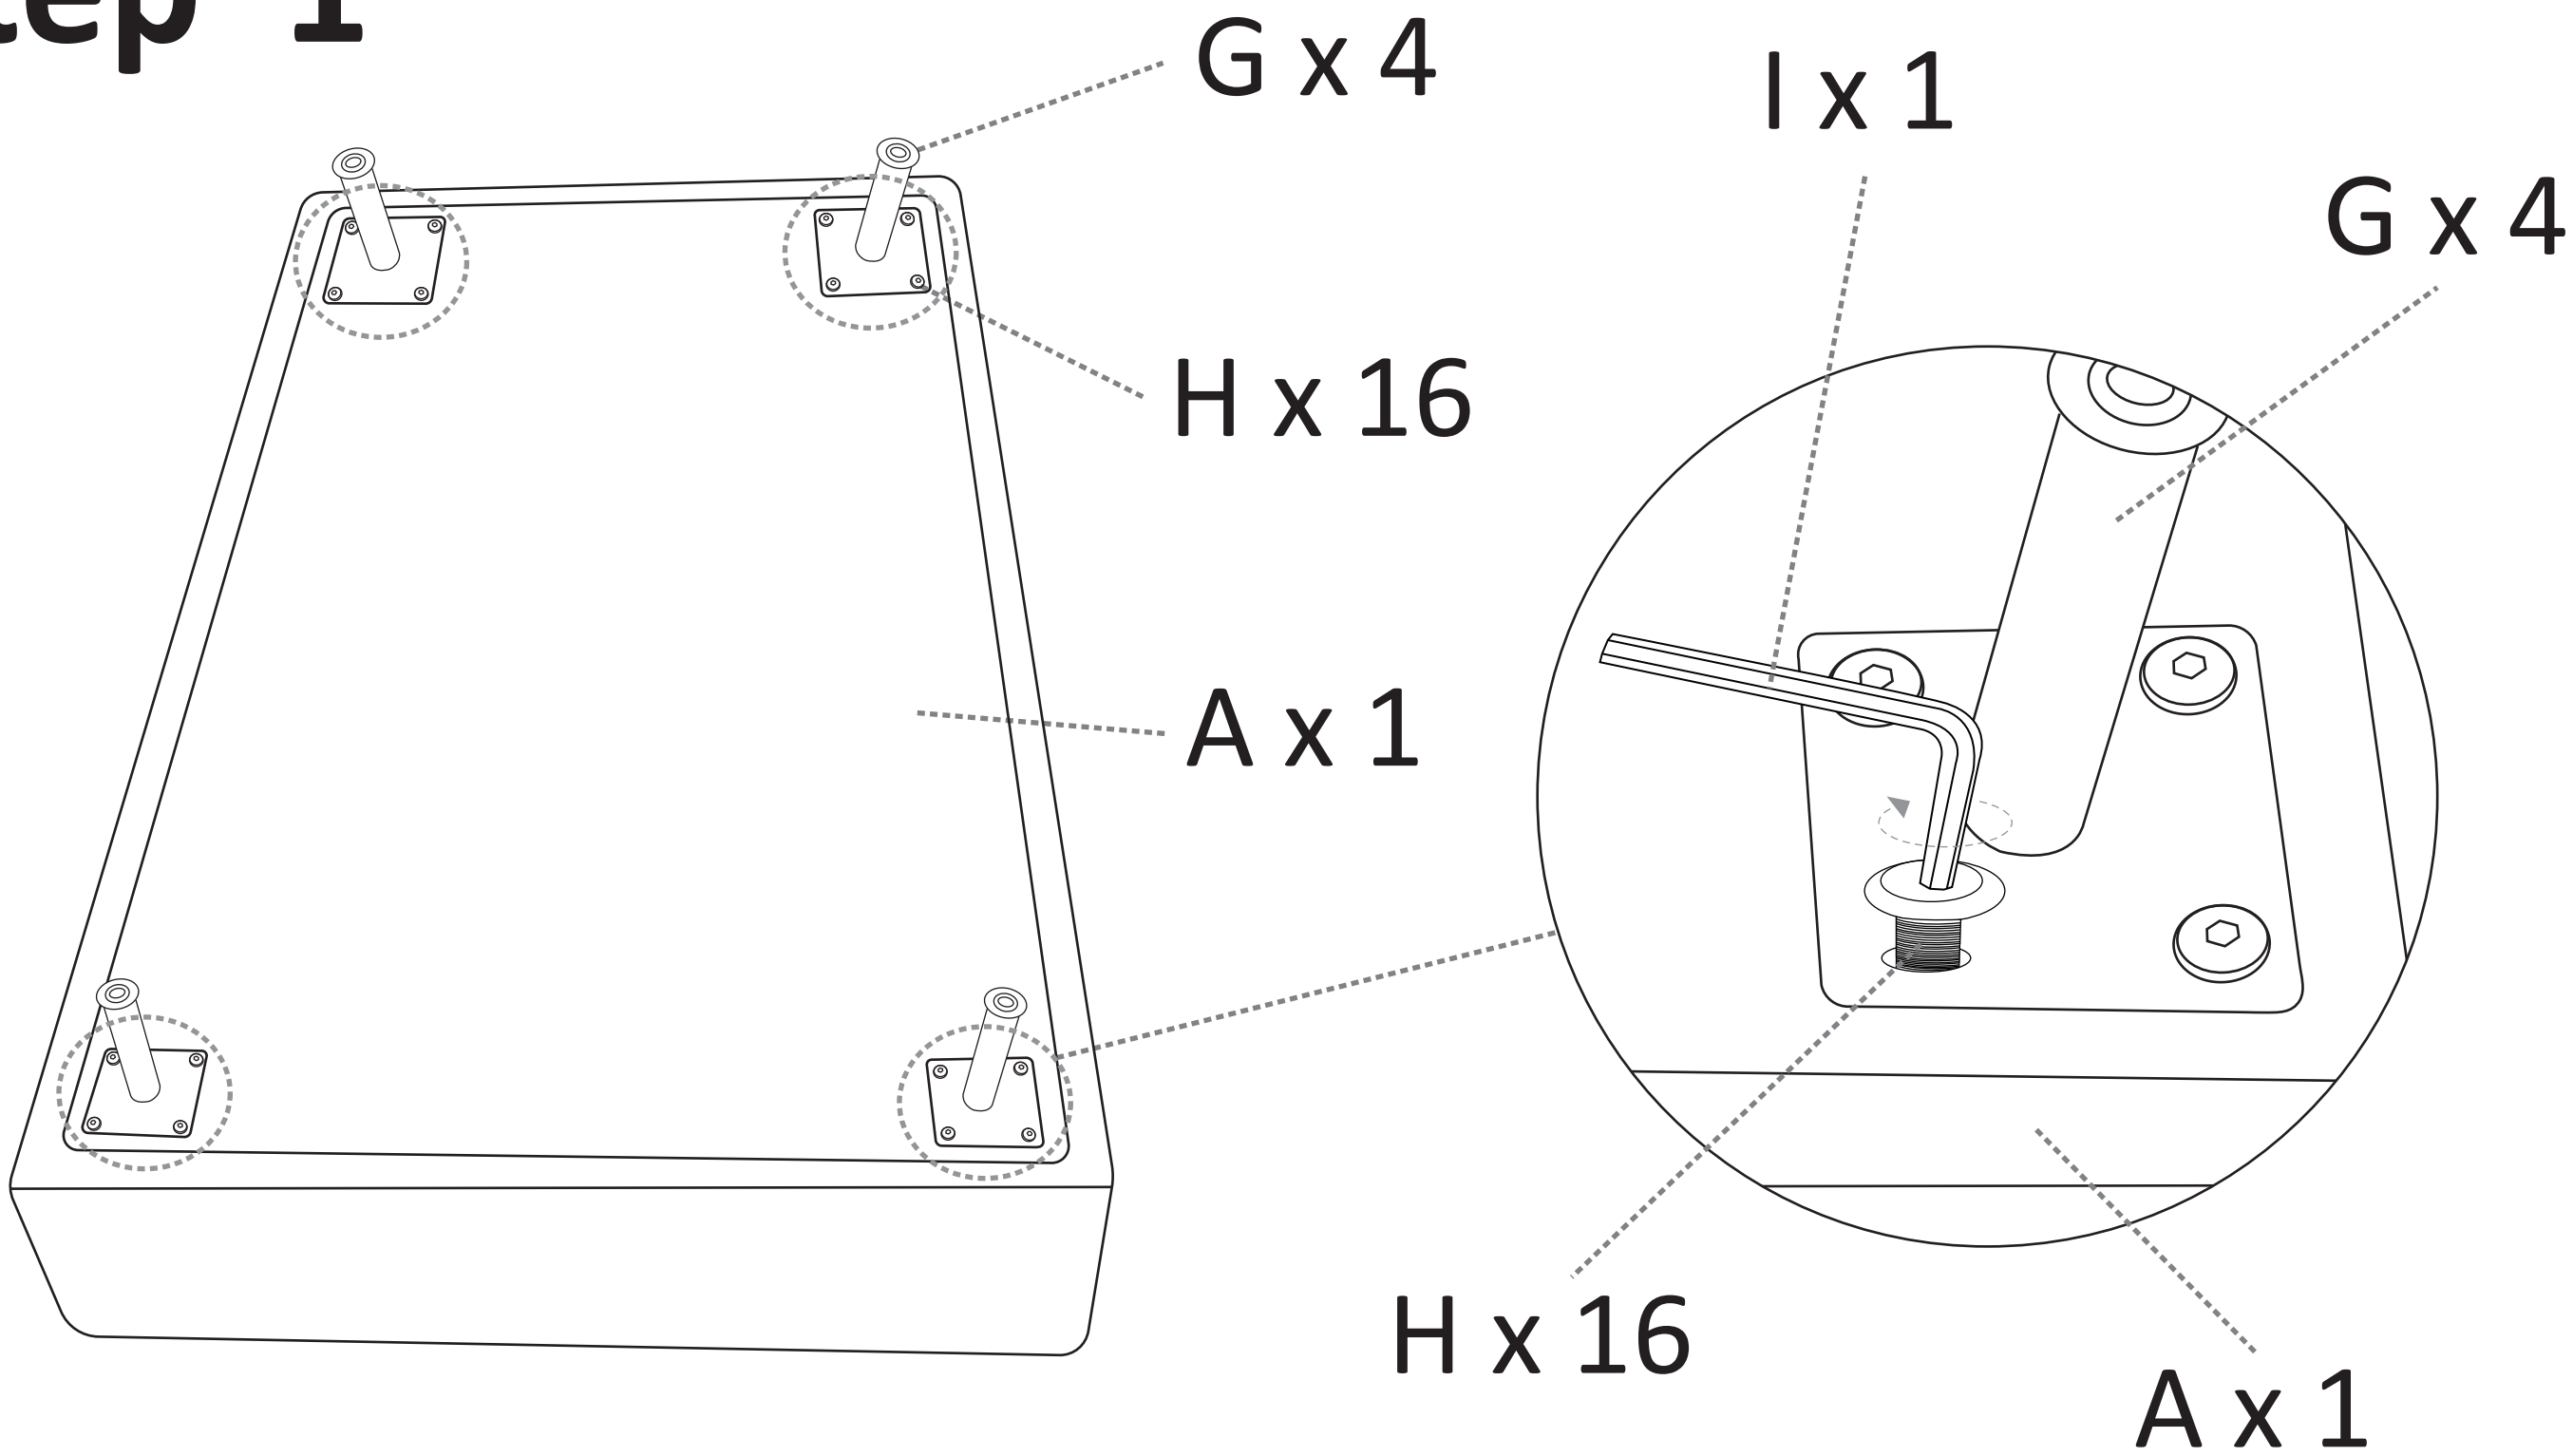


## Parts List


Open the hardware check all parts QTY, thanks




A x 1

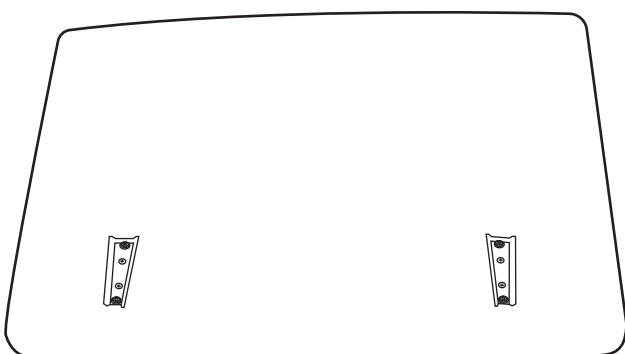


B x 1

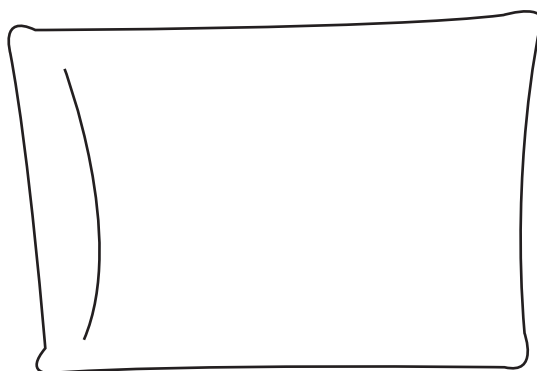


C x 1

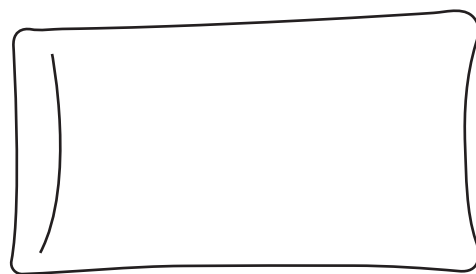


D x 1

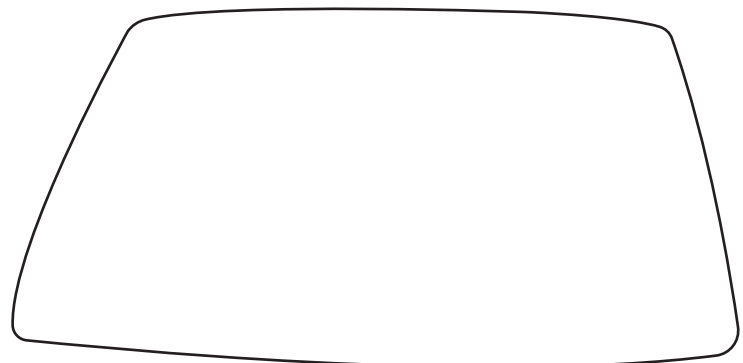


E x 1

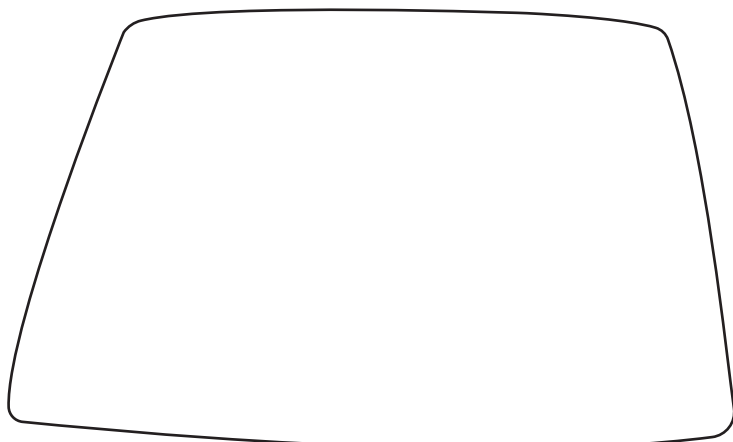

F x 1

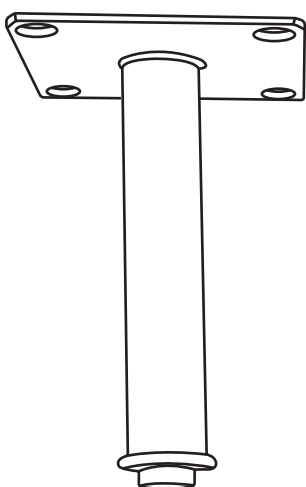

G x 4

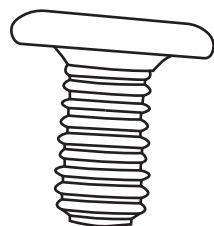


H x 16




I x 1

## Step 2

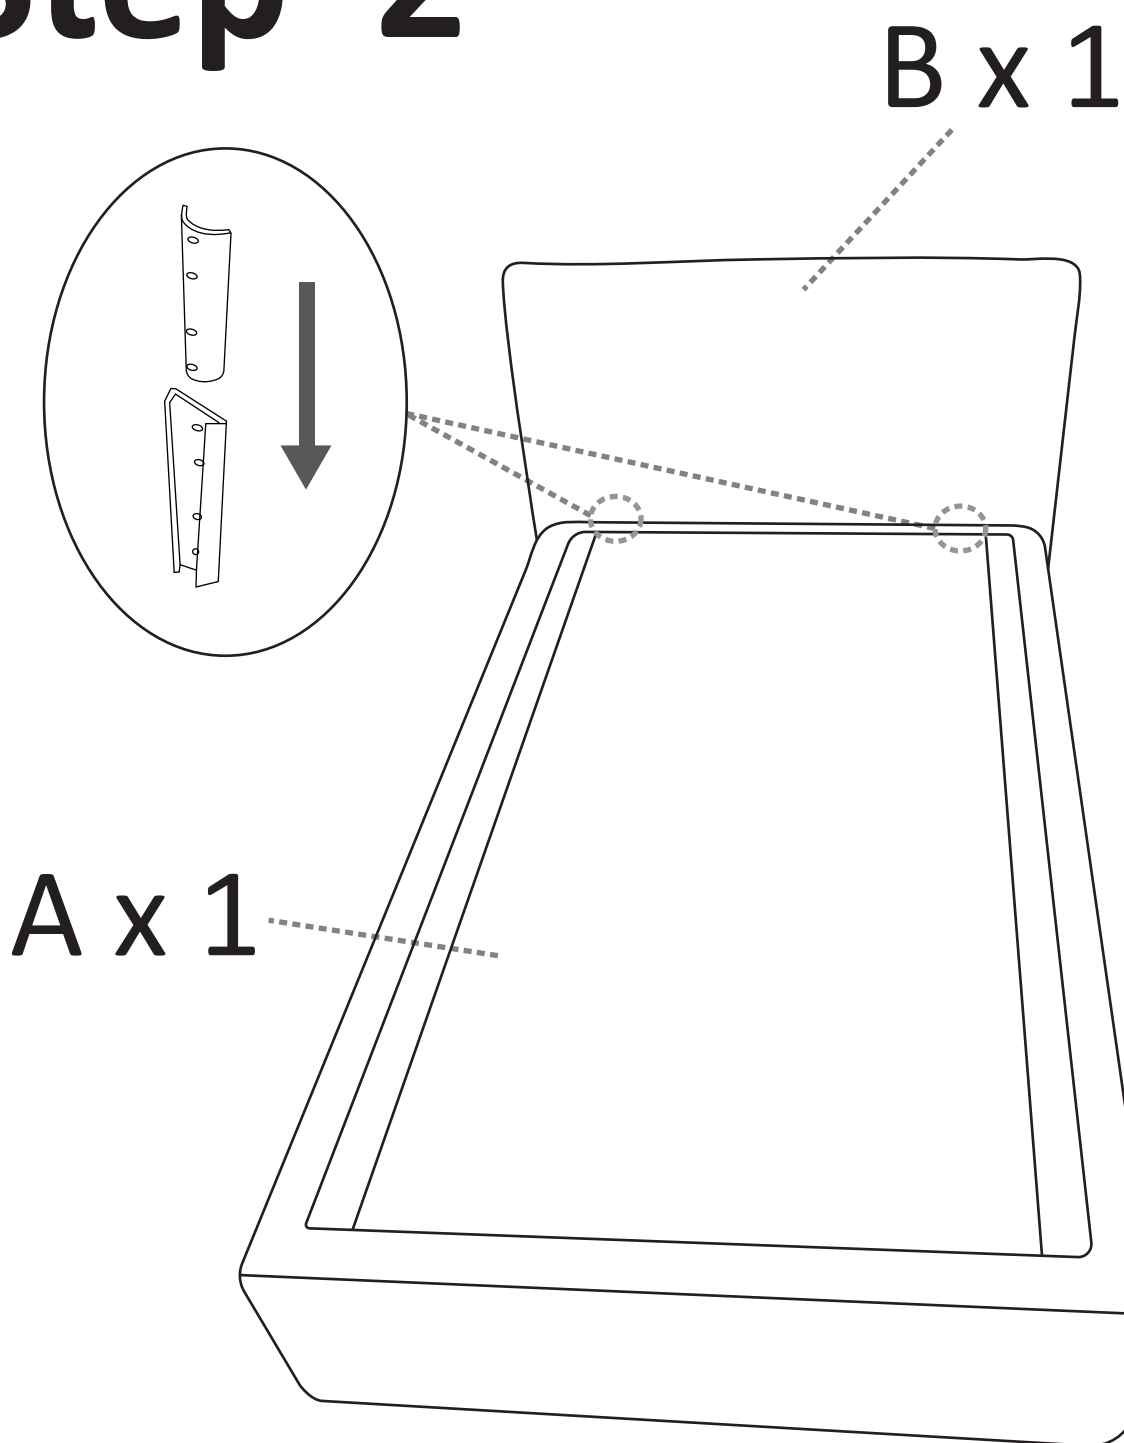

## Step 3

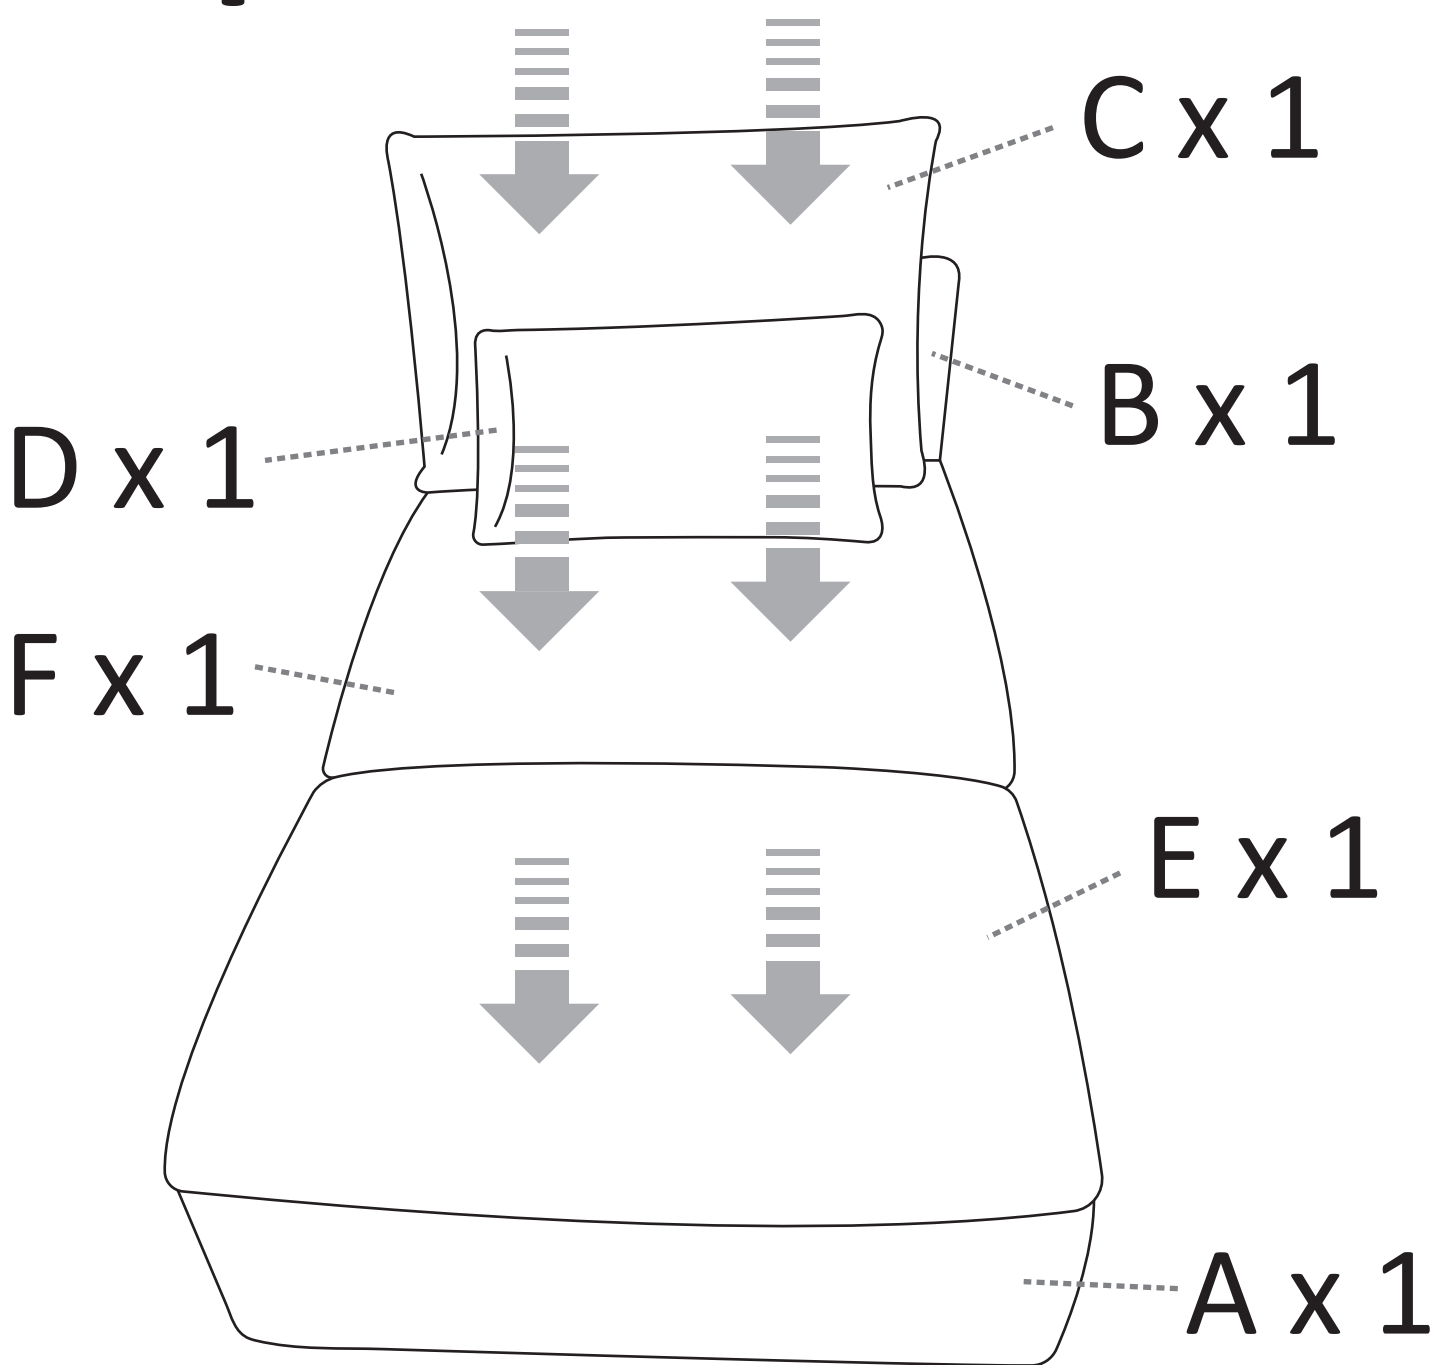

Please refer to this tag to install the bottom frame(A). The direction of the tag is the same as the direction of the opening of the bottom frame(B).  
Incorrect installation will make the frame to deform.