


MANUAL INSTRUCTION

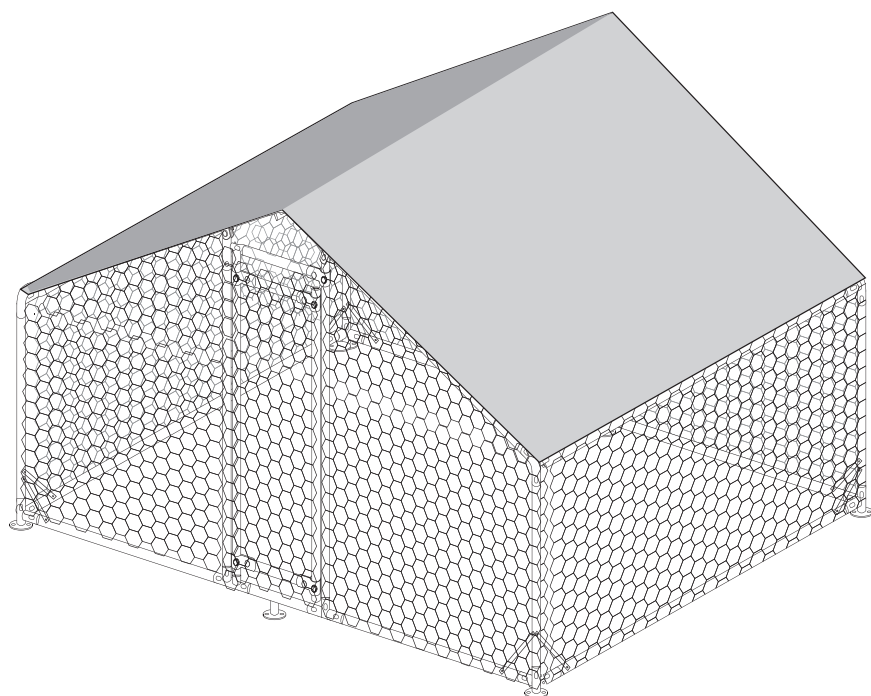

We offer a diverse range of products
to meet the needs of customers.

Reach us at
✉ service@kmcglobe-us.com
☎ (only us) +1 213-816-4788



1 x 4
1420



2 x 3
1925



2A x 2
1925



3A x 4
970



4 x 4
1540



5 x 1
1687



5A x 1
1687



6 x 1
605



7 x 1
1850



10 x 8
395

Φ16 395mm







A x 1
1580



1A x 1
1580



C x 2
564

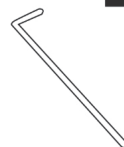D x5**E1** x2**E2** x2**F** x1**G** x1**V** x1**I** x8**J** x2**J1** x2**K** x30
M6
+1(spare)**L** x 2
M8
+1(spare)**M** x1**O** x1**P** x1**Q** x1**R** x12**S** x1**T** x2**W** x6



ATTENTION: E1 & E2 shall be placed in strict order, otherwise they cannot be installed


DIFFERENT HOLES SITUATIONS IN E1&E2



E1




E2

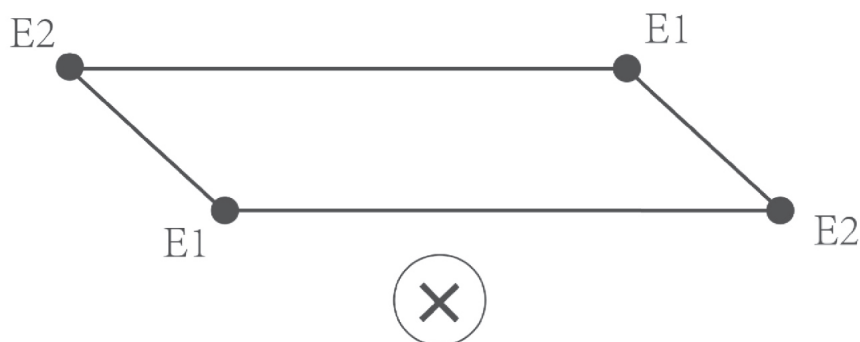


STEP1

Required Tools	 ①*4PCS	 ②A*2PCS	 E1*2PCS
 E2*2PCS	 G*1PCS	 F*1PCS	

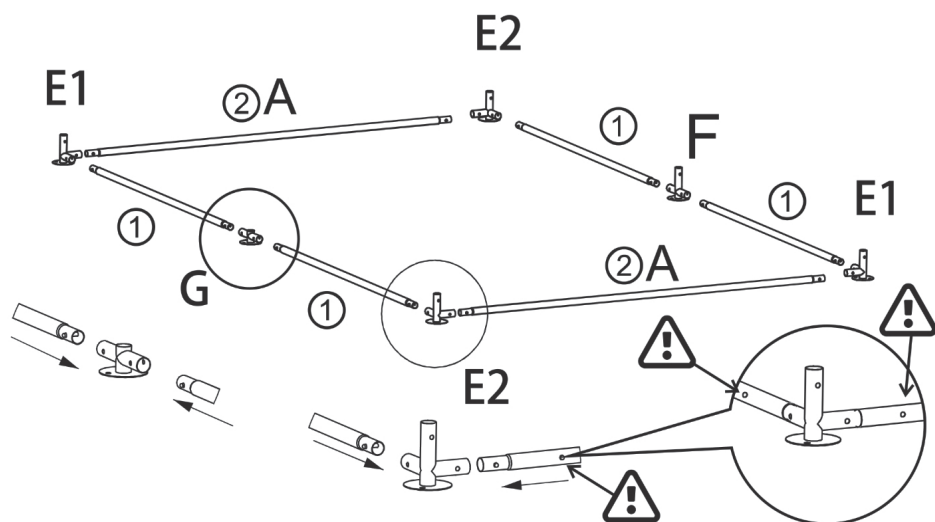



STEP2

Required
Tools

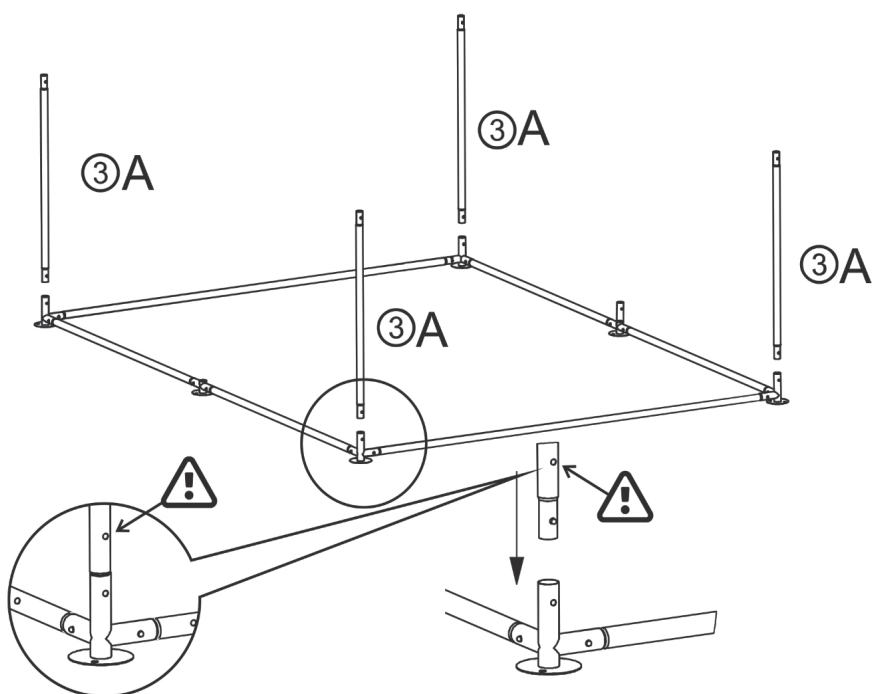


STEP3

Required Tools	 ④*4PCS	 ⑩*8PCS	 D*5PCS	 V*1PCS	 K*16PCS
-------------------	---	---	---	---	--

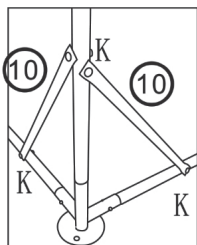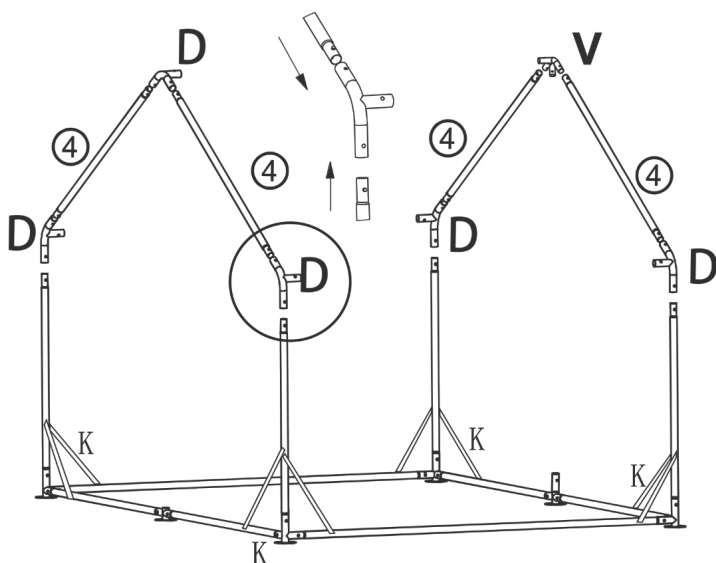


STEP4

Required Tools	 ②*3PCS	 ⑦*1PCS
-------------------	---	---

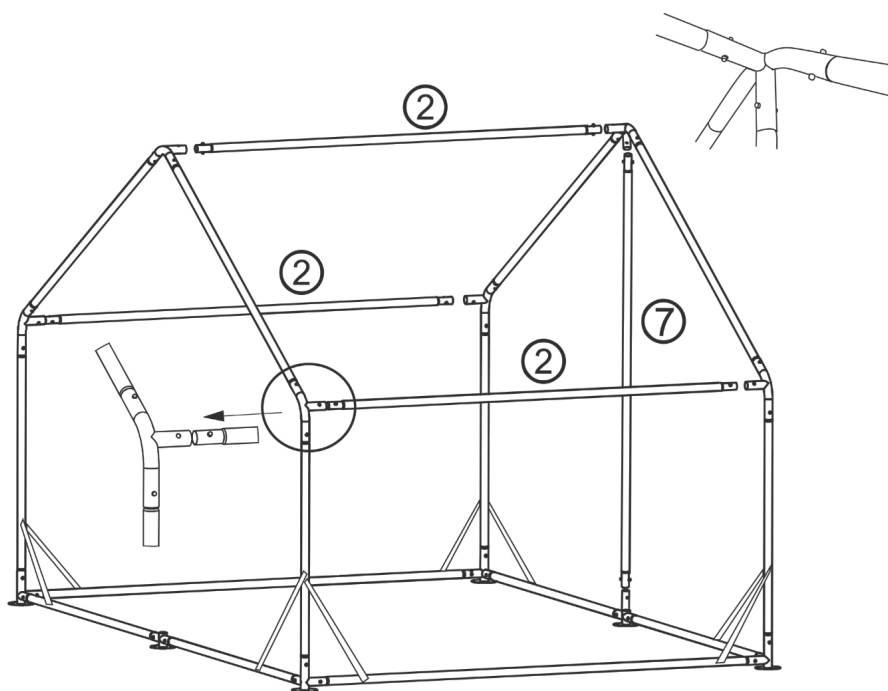


STEP5

Required Tools	 ⑤*1PCS	 ⑤A*1PCS	 ⑥*1PCS	 T*2PCS
 J*2PCS	 I*8PCS	 L*2PCS	 K*6PCS	

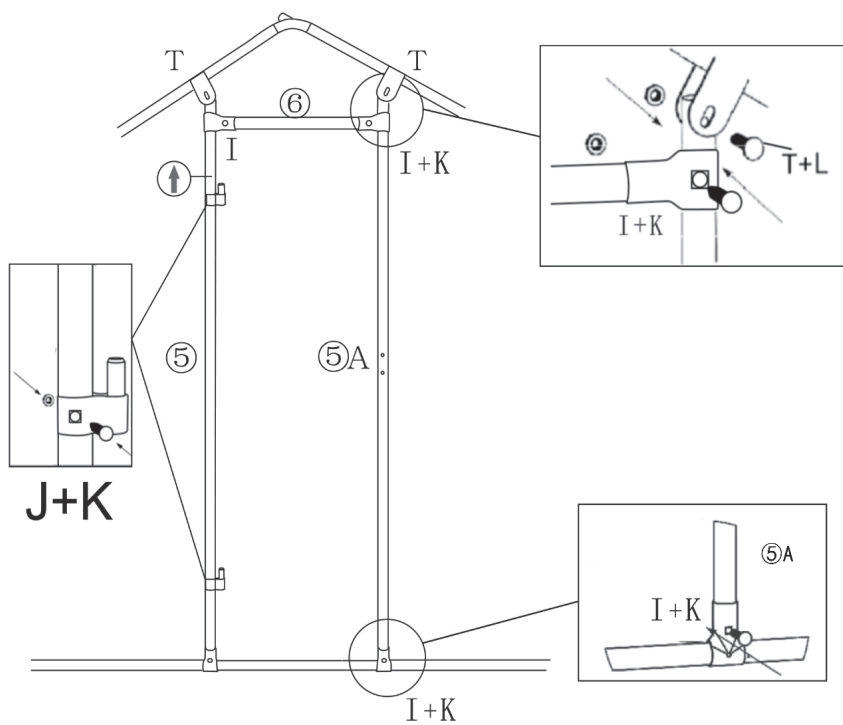


STEP6

Required Tools	 1A*1PCS	 A*1PCS	 C*2PCS	 J1*2PCS	 K*6PCS
-------------------	---	--	--	---	--

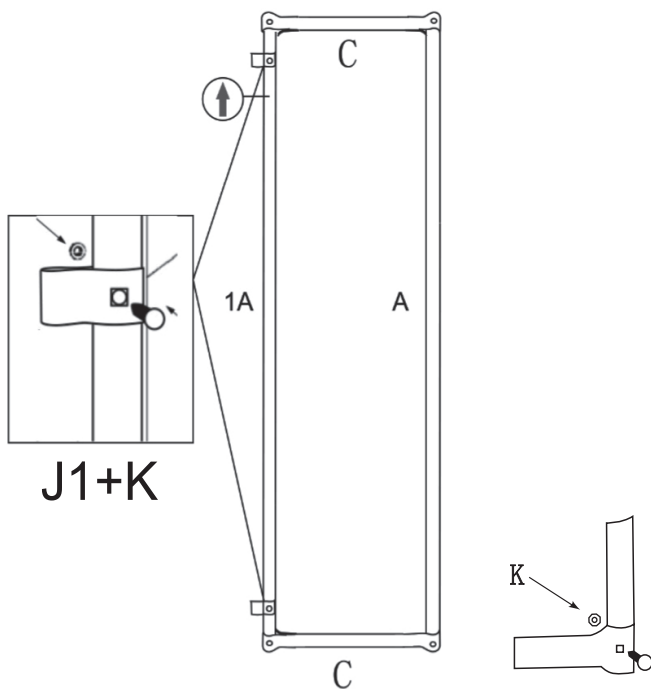


STEP7

Required Tools	 M*1PCS	 K*2PCS
-------------------	---	---

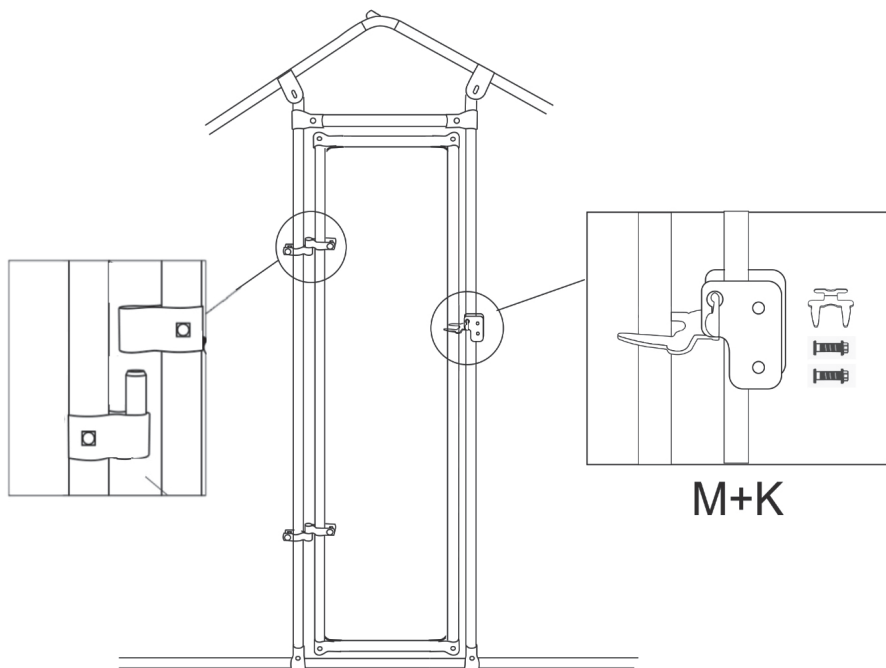

STEP8




Required
Tools



Q*1PCS




0*1SET

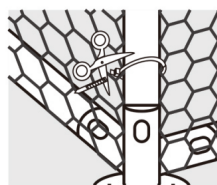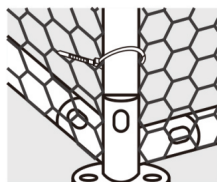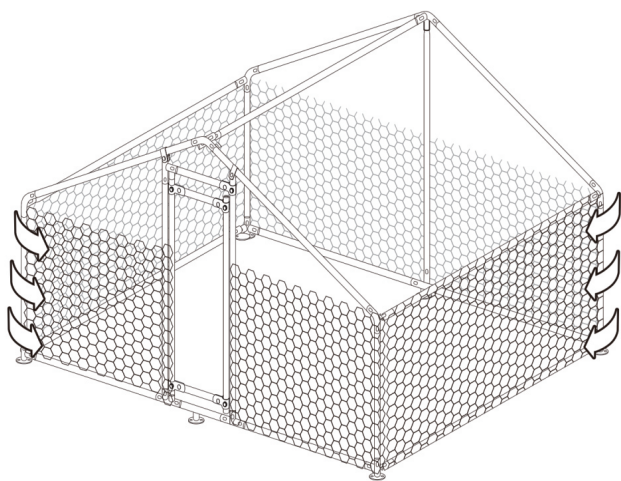

STEP9







Required
Tools



Q*1PCS






0*1SET

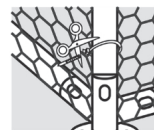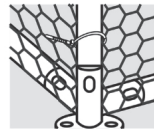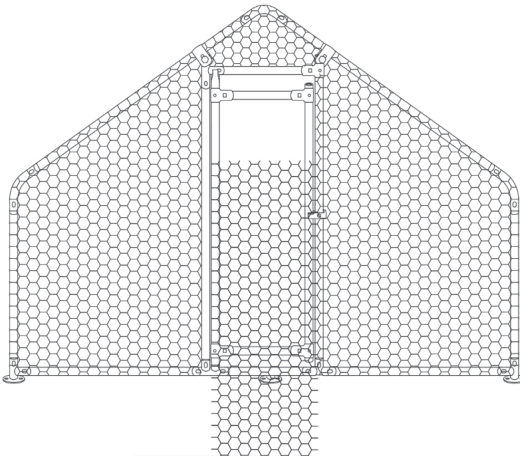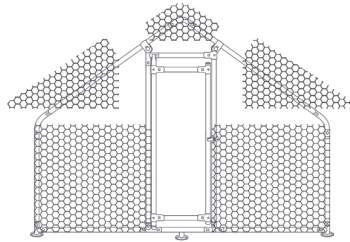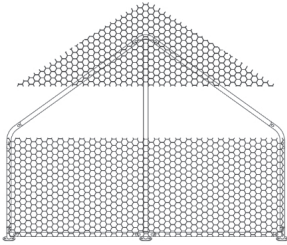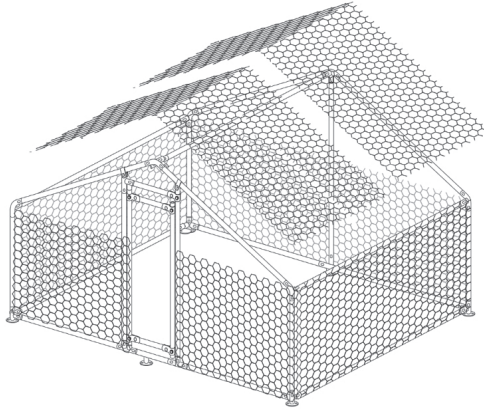

STEP10

Required Tools	 P*1PCS	 R*12PCS	 W*6PCS
-------------------	---	--	---

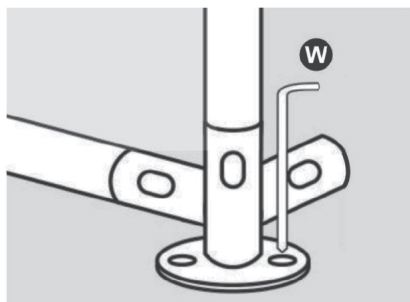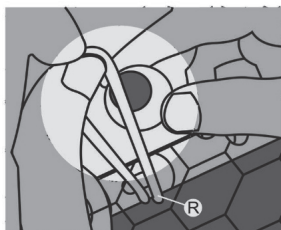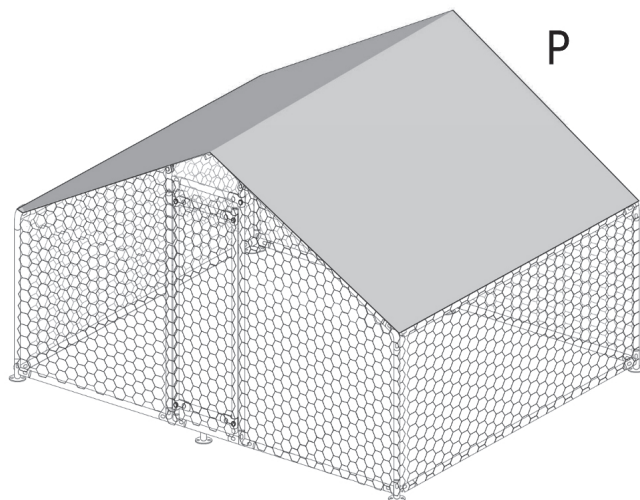

WARNING:

REMOVE THE COVER DURING HEAVY
SNOW OR RAINSTORMS TO PREVENT THE CHICKEN
COOP FROM COLLAPSING UNDER PRESSURE.