



STEP 6

- 6.1 Attach Panel (E) to Panel (C), as shown in Picture 1.
- 6.2 Attach Panel (G) to Panel (E), as shown in Picture 2.

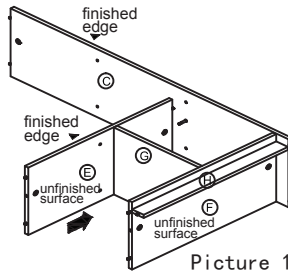


Picture 1

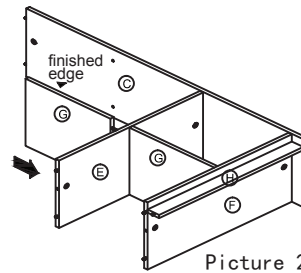


Picture 2

STEP 7

- 7.1 Attach Panel (E) to Panel (C), as shown in Picture 1.
- 7.2 Attach Panel (G) to Panel (D), as shown in Picture 2.

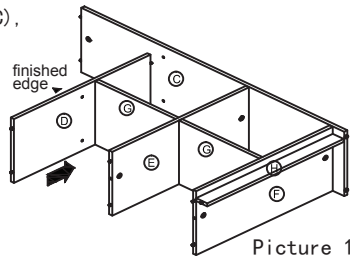


Picture 1

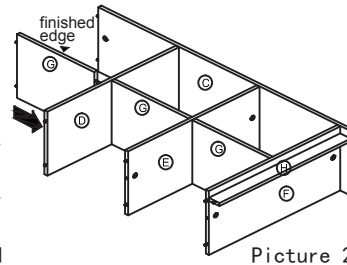

Picture 2


STEP 8

- 8.1 Attach Panel (B) to the unit, as shown.
- 8.2 Attach Panel (A) and lock all Cam-Lock Nut (2) using screwdriver.

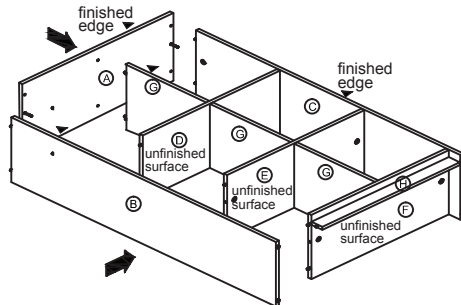


STEP 9

- Attach Panel (H) to the back side using Power Pin(6) and Hammer.

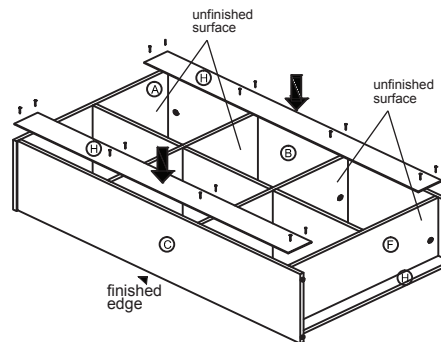

Recommended Maximum Weight

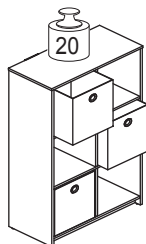

*Unit in Pound(lbs)

WARNING:

>This unit has been designed to support the maximum loads shown. Exceeding these load limits could cause sagging, instability, product collapse, and/or serious injury.

>DO NOT allow children to climb on unit.

>Put heavier items on lower shelves.

Assembly Instruction

Storage Organizer
Bookcase w/Bins


DIMENSION : 19.8"(W) x 36.5"(H) x 9.5"(D)

00:30


Approx. 30 minutes









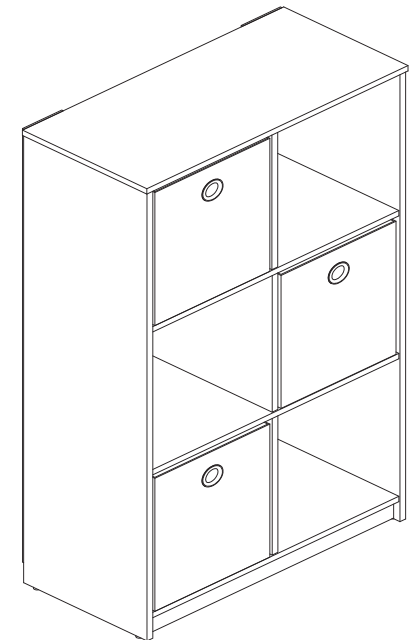








Recomm. 1 Person




Tool Required



No	Hardware List	Qty
1	Cam-Lock Screw 	6pcs
2	Cam-Lock Nut 	6pcs
3	Nail Leg 	4pcs
4	Short Dowel 	24pcs
5	Long Dowel 	4pcs
6	Power Pin 	16pcs

No	Parts List	Qty
A	Top Panel 	1pcs
B	Left Side Panel 	1pcs
C	Right Side Panel 	1pcs
D	Top Shelf Panel 	1pcs
E	Center Shelf Panel 	1pcs
F	Bottom Panel 	1pcs
G	Center Panel 	3pcs
H	Bottom Bar 	1pcs
I	Back Panel 	2pcs

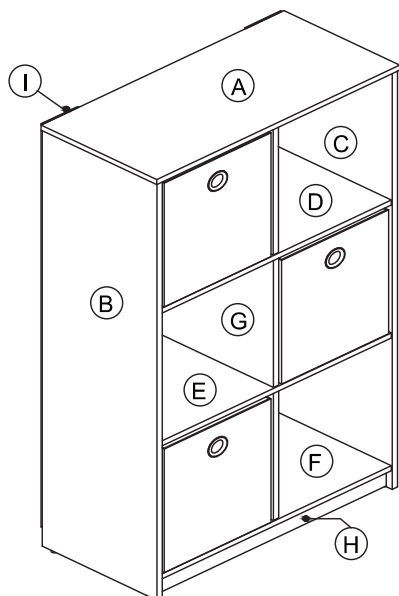


USEFUL HINTS BEFORE YOU START:

1. Read each step carefully before starting.
2. It is important that each step is performed in correct order to avoid difficulties.
3. Identify, sort and count the parts before assembly.
4. Assemble your furniture on packaging cardboard to prevent scratch or damage.
5. Clean the product with mild cleanser using soft damped cloth. Do not use harsh or abrasive cleanser.
6. Using incompatible hardware might cause damage to product.

STEP 1


- 1.1 Install Cam-Lock Screw(1) to pre-drilled holes on Panel (A), (B) & (C) using screwdriver.
- 1.2 Install Cam-Lock Nut (2), Short Dowel (4) and Nail Leg (3) on Panel (B) & (C).

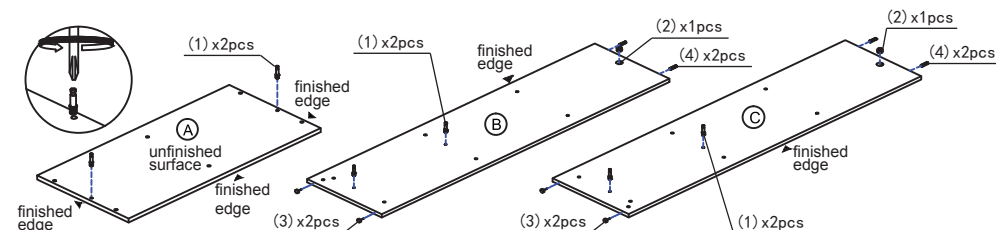

STEP 2


- 2.1 Install Short Dowel (4) to Panel (D), (H), (E), (F) & (G).
- 2.2 Install Cam-Lock Nut (2) on Panel (E) & (F).
- 2.3 Install Long Dowel (5) to all Panel (G).

Note: Arrow on Cam-Lock Nut (2) should be pointing outward.

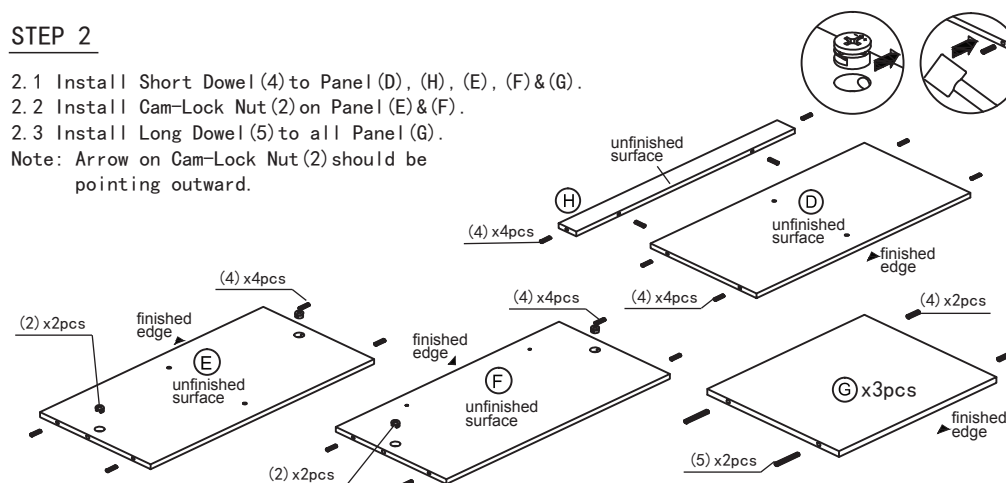


STEP 3

Attach Panel (H) to Panel (F), as shown.

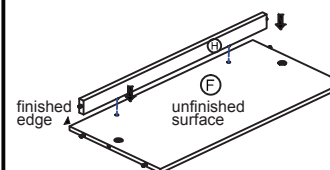

STEP 4

Attach Panel (C) to completed unit in Step 3 and lock Cam-Lock Nut (2) using screwdriver.

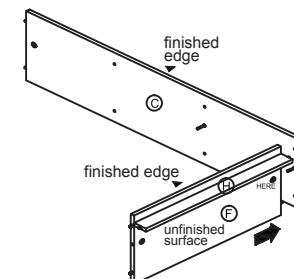

STEP 5

Attach Panel (G) to Panel (F), as shown.

