

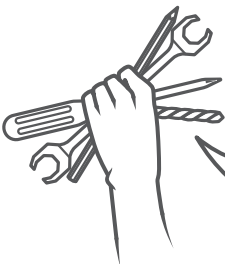
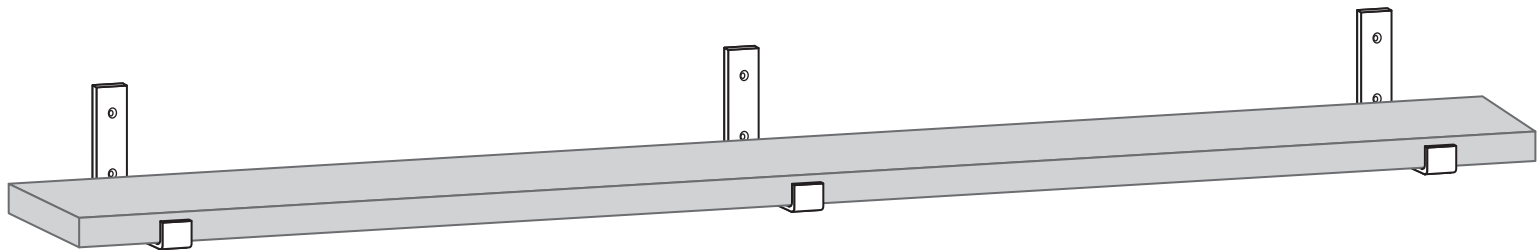


Assembly Instructions

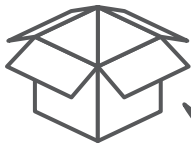

TOOLS REQUIRED

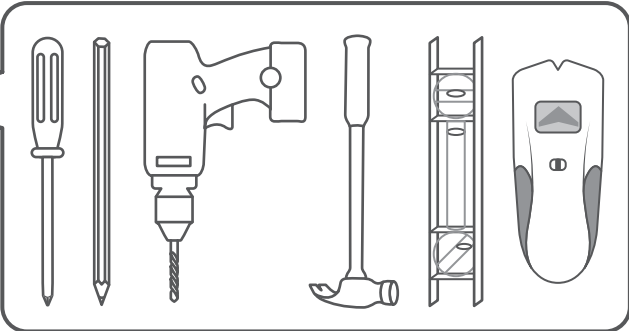


EACH BRACKET BAG CONTENT

Zinc anchor [×2]

Long screw [×2]


Short screw [×2]

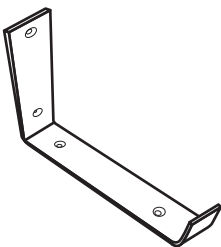

Bracket [×1]


Stud-wall Mounting

STEP 1:

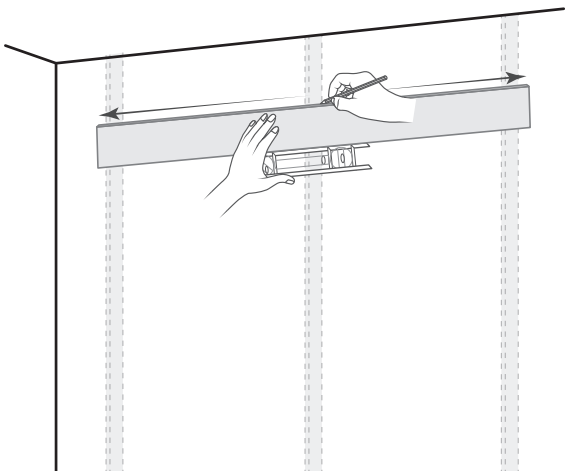


Place the wooden board against the wall, level it and mark a straight line as shown.

STEP 2:

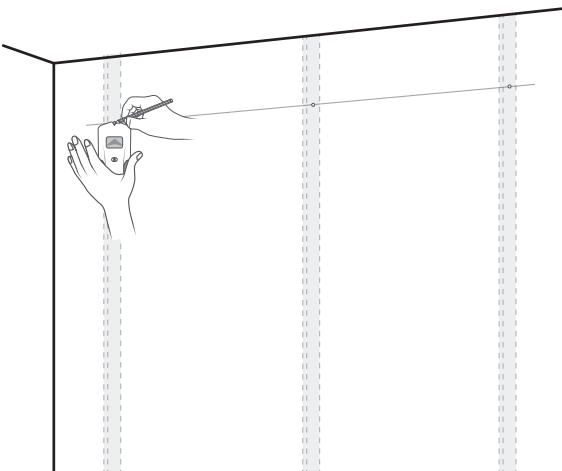


Use the stud locator, mark the top screw hole on the straight line as shown.

STEP 3:

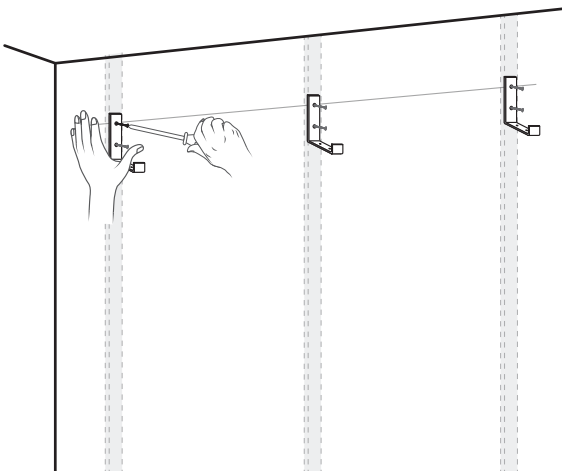


Place the bracket by matching the top screw, insert the long screws and tighten them.

STEP 4:

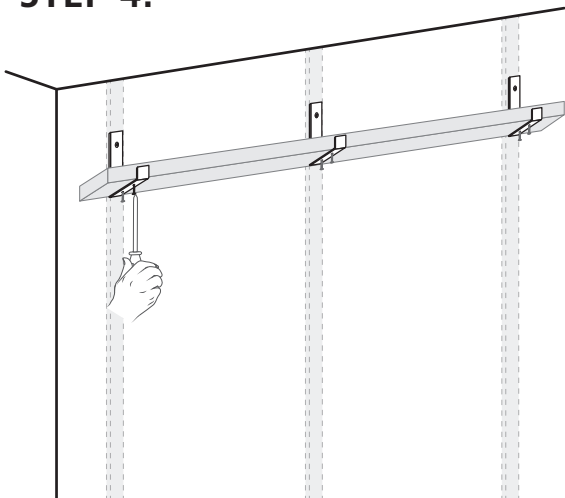


Place the wooden board on the bracket, insert the short screws and tighten them.

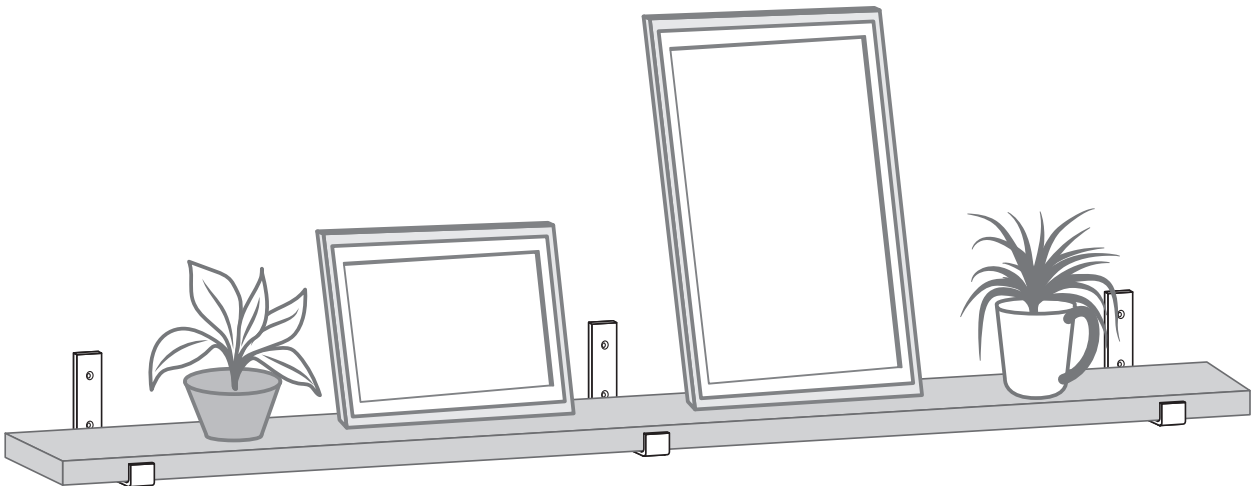


Dry-wall Mounting

STEP 1:

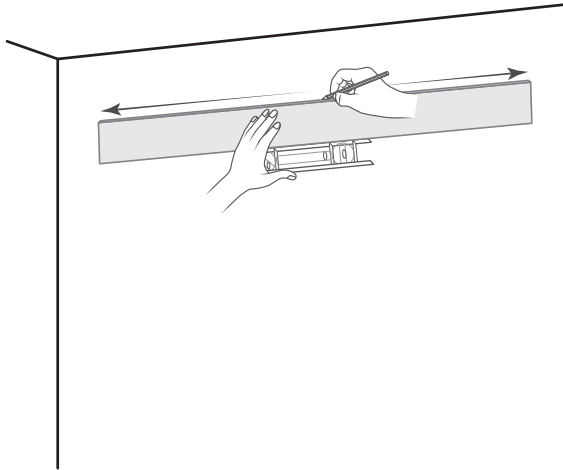


Place the wooden board against the wall, level it and mark a straight line as shown.

STEP 2:

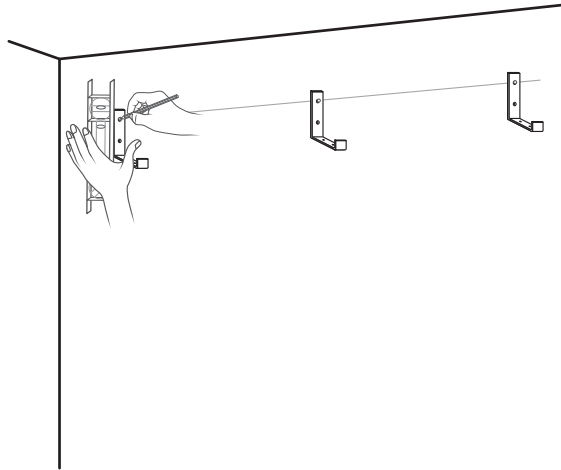


Place the bracket on the line and mark the screw holes on the straight line as shown.

STEP 3:

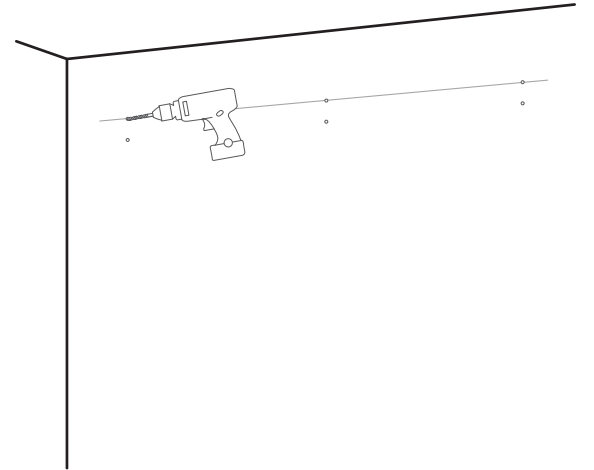


Drill holes in the marked points (use a 14-size drill bit or a drill bit with a thickness of 6–6.5 mm).

STEP 4:

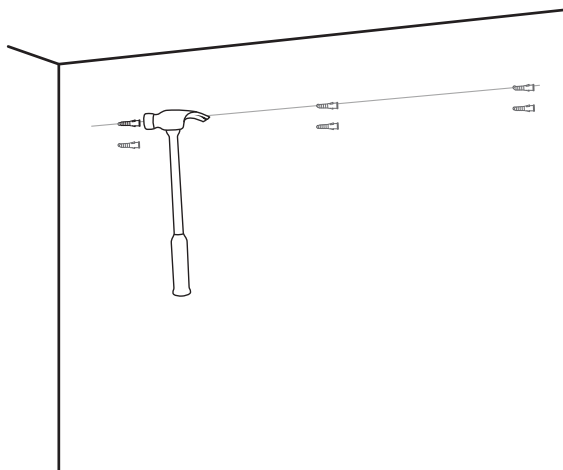


Insert the anchors into the holes and gently tap with the hammer (hitting harder may cause the anchor to be damaged or bent).

STEP 5:

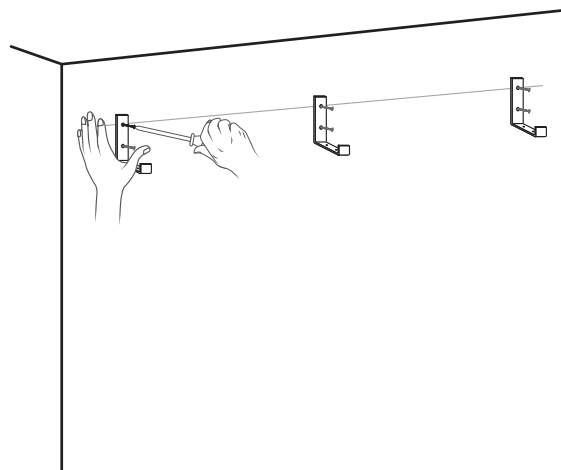

Place the bracket by matching the top screw with anchors, insert the long screws and tighten them.

STEP 6:

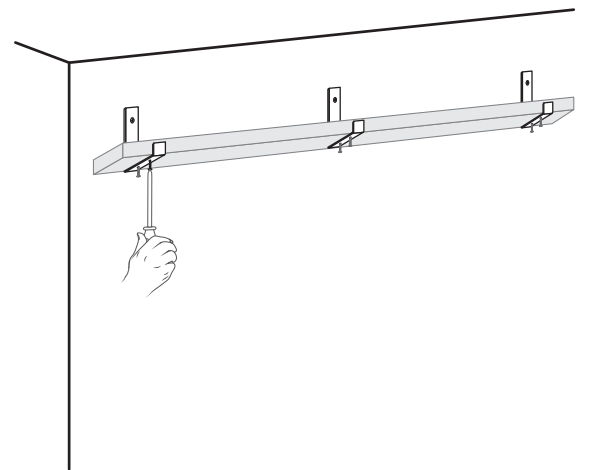

Place the wooden board on the bracket, insert the short screws and tighten them.