




ASSEMBLY INSTRUCTION

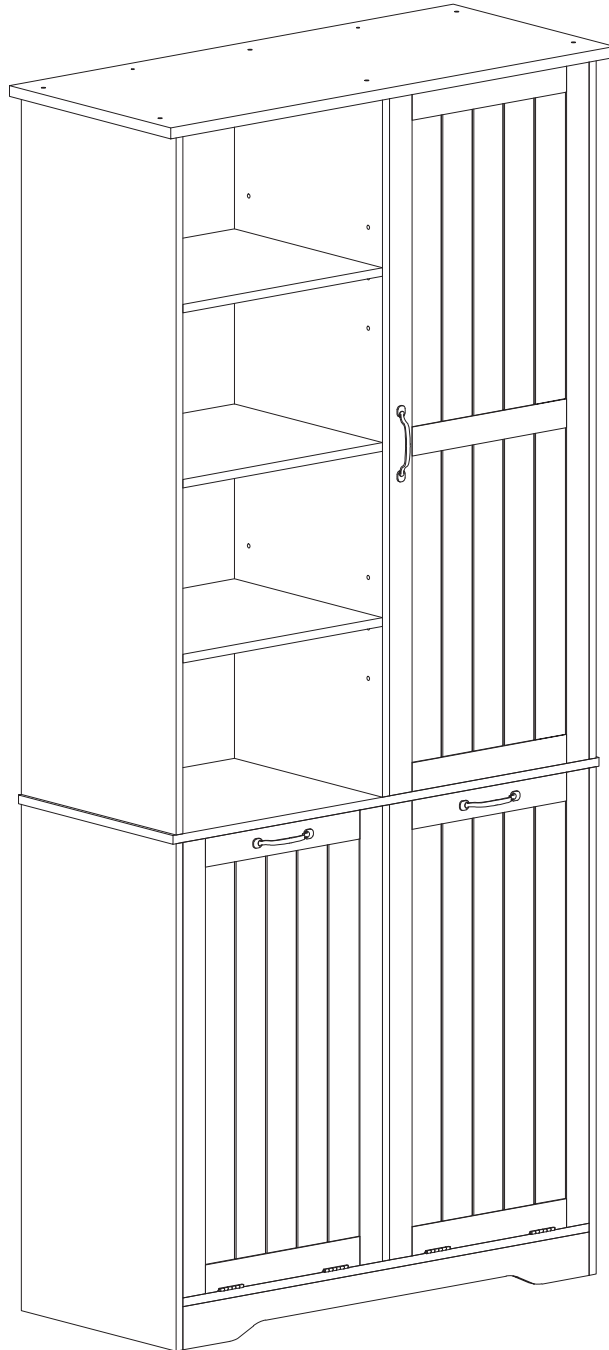


2 PERS.



SLOTTED SCREWDRIVER(Not Provided)




POZI SCREWDRIVER(Not Provided)

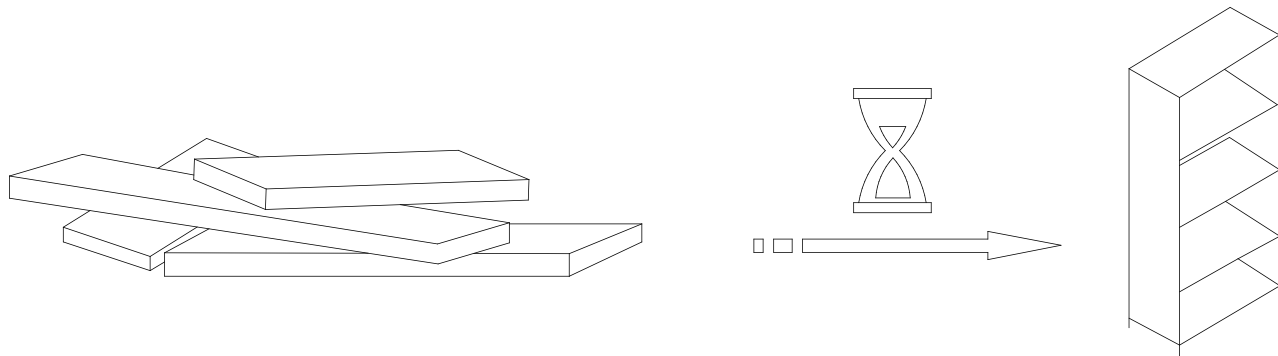









Do Not Dispose of any packaging or contents of the shipping carton until assembly is completed to avoid accidentally discarding small parts or hardware




Care Instructions:

- Dust often using a clean, soft, dry and lint-free cloth.
- When blot spills, wipe with a clean, damp cloth immediately.
- We do not recommend the use of chemical cleansers, abrasives or furniture polish on our lacquered finish
- Hardware may loosen over time. Periodically check to make sure all connections are tight. Re-tighten if necessary.

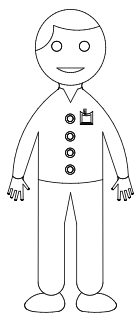












X2

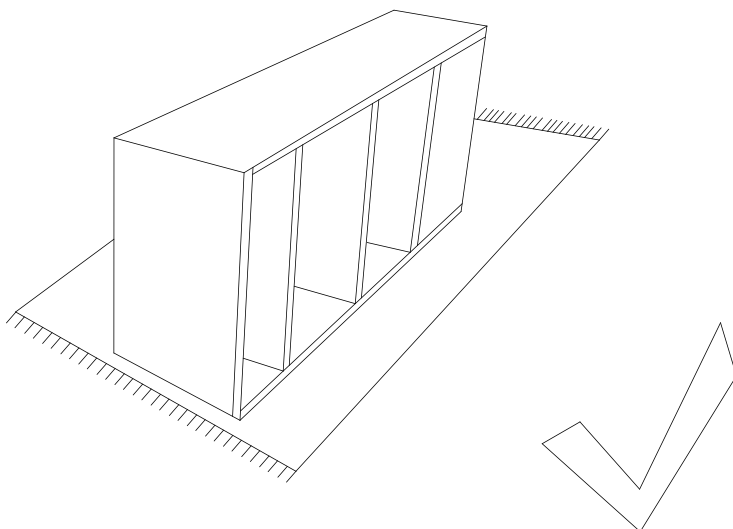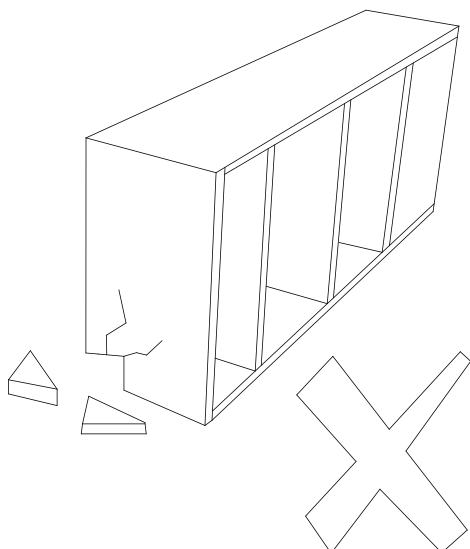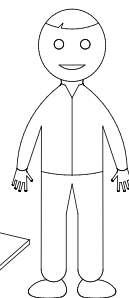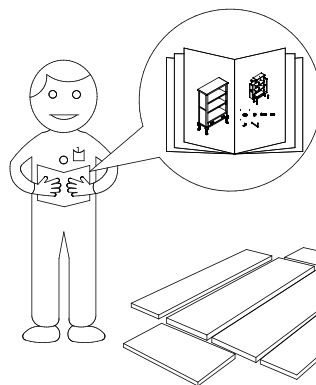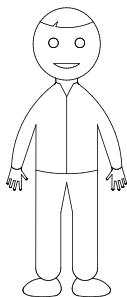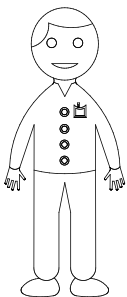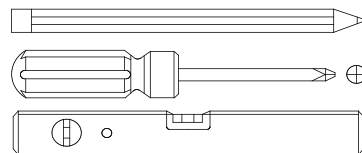

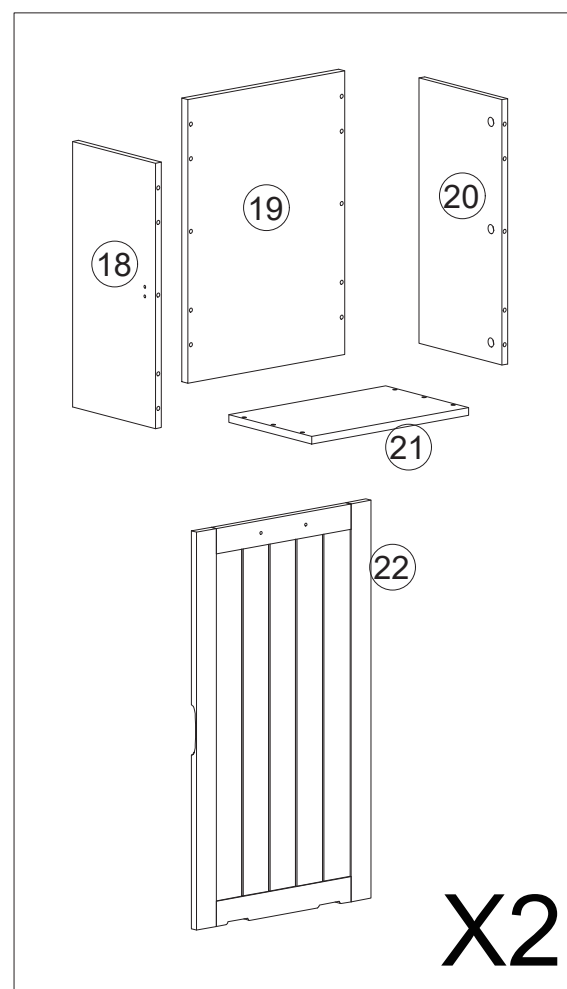
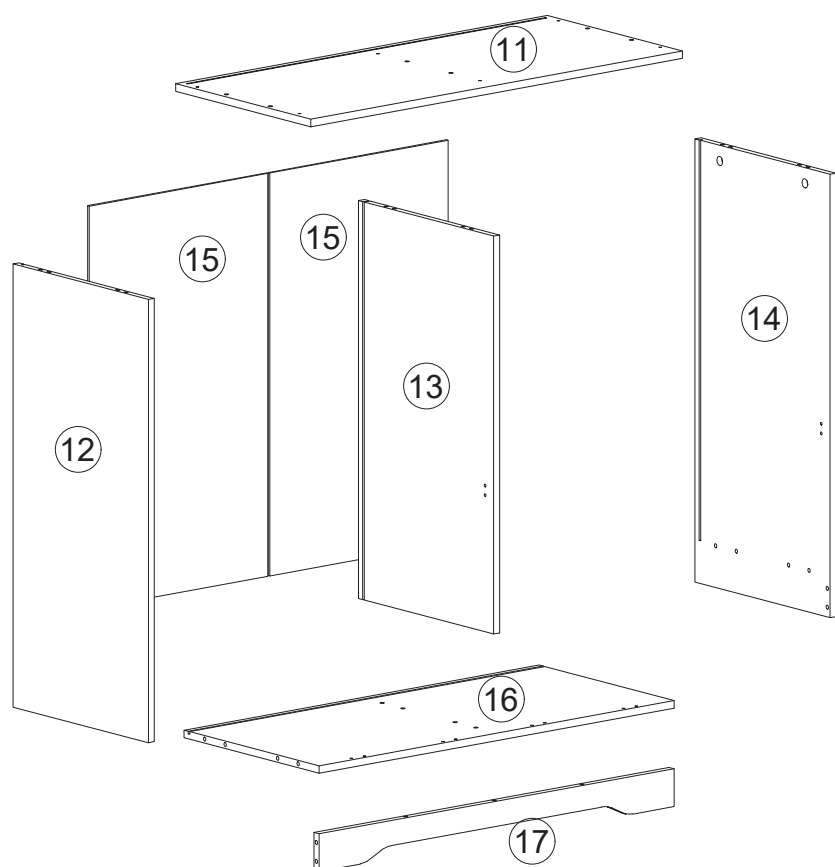
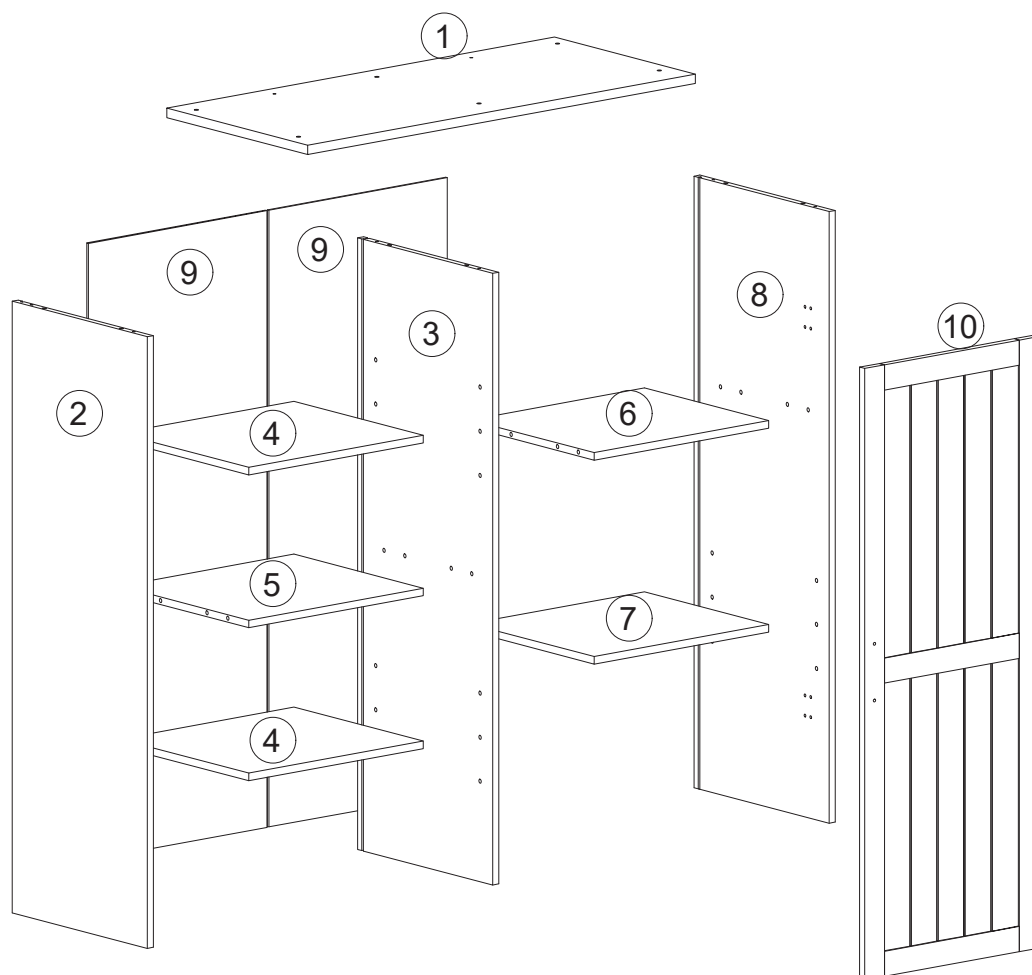


X2

Hardware

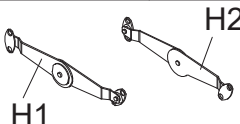





A	x32	B	x34	C	x52	D	x34	E	x38
									
3x12mm								4x30mm	
F	x1	G	x2	H	x2	I	x4	J	x3
									
K	x8	L	x12	M	x2	N	x2	O	x2
									
P	x1	Q	x12						
									
		4x12mm							

General instructions to assemble connecting pieces

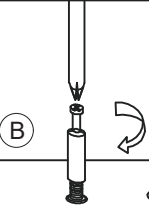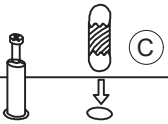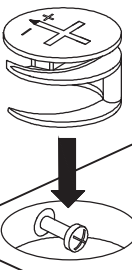		Arrow must face hole 	
Gently screw cam bolt into the threaded anchor.	Insert the wood dowel halfway into hole.		Screw the camlock firmly into locked position.


Troubleshooting

1. Upon receiving your product, you might find that the door doesn't align well. Please note that it's not a product flaw and can be adjusted following the instructions below.

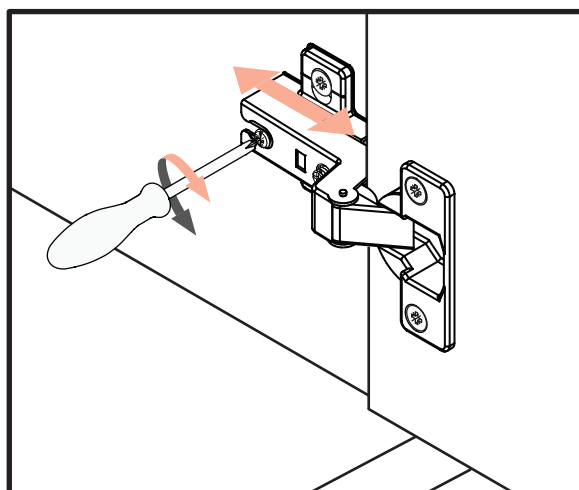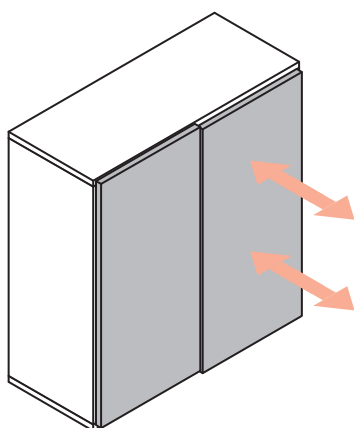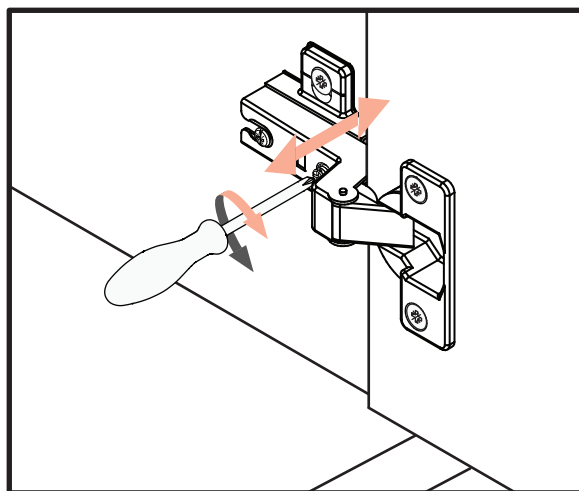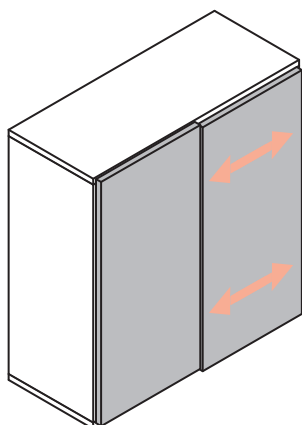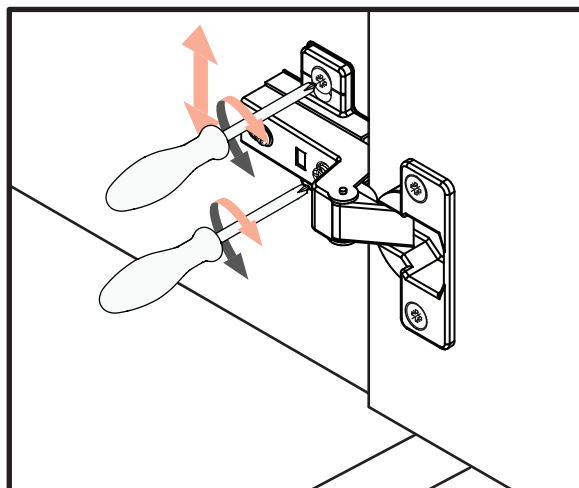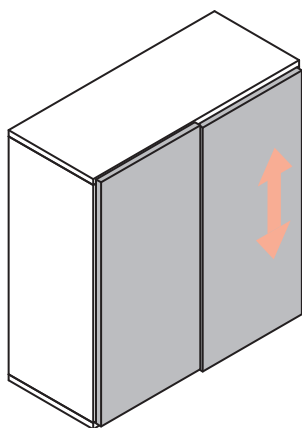


2. Follow the steps below to disassemble your doors when needed.

Step 1 Loosen the screw at the end of the hinge arm.

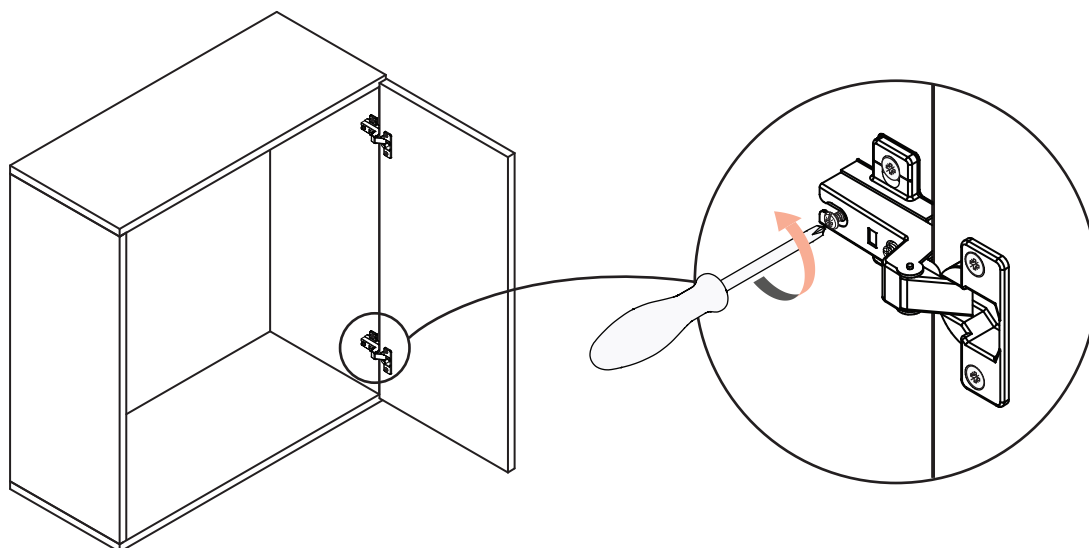

Step 2 Gently pull the door so that it is separated from the body.

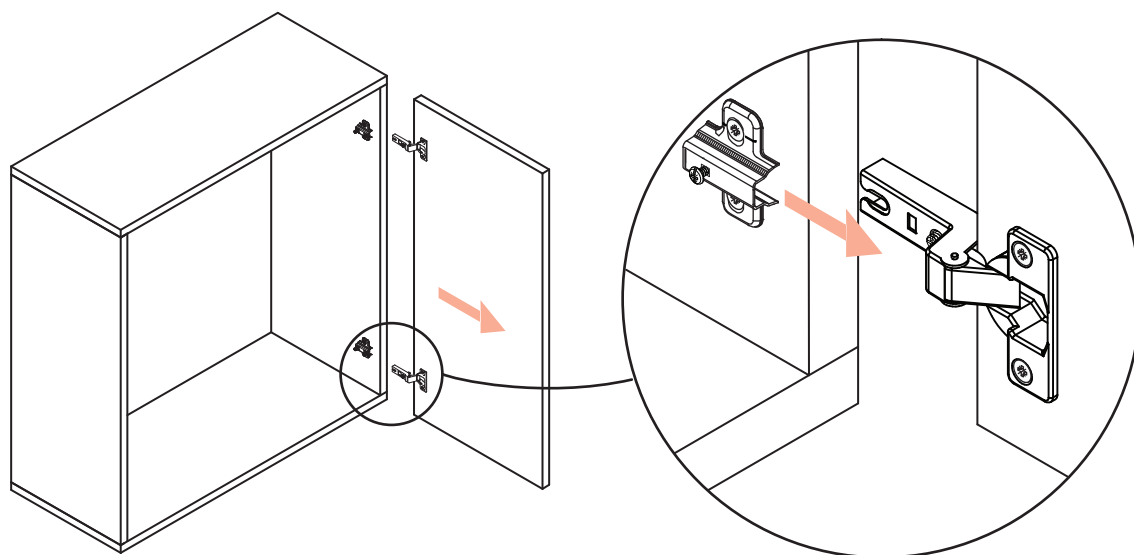


Reverse the steps above to get the doors attached again.

1

B


x2

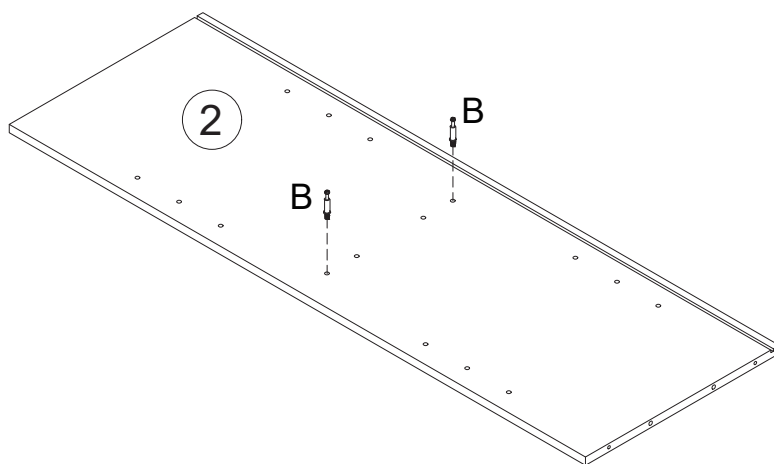


2

B

x4

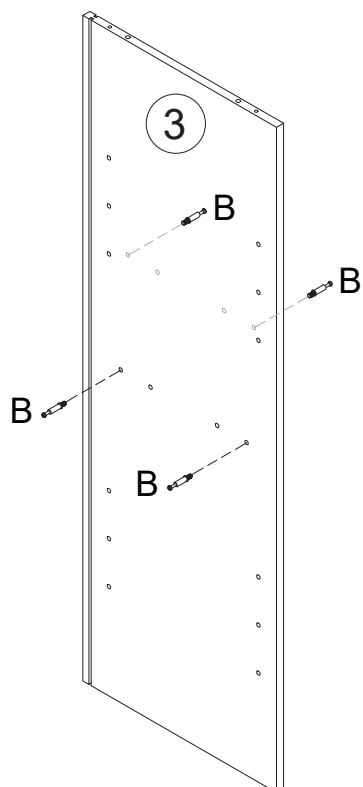


3

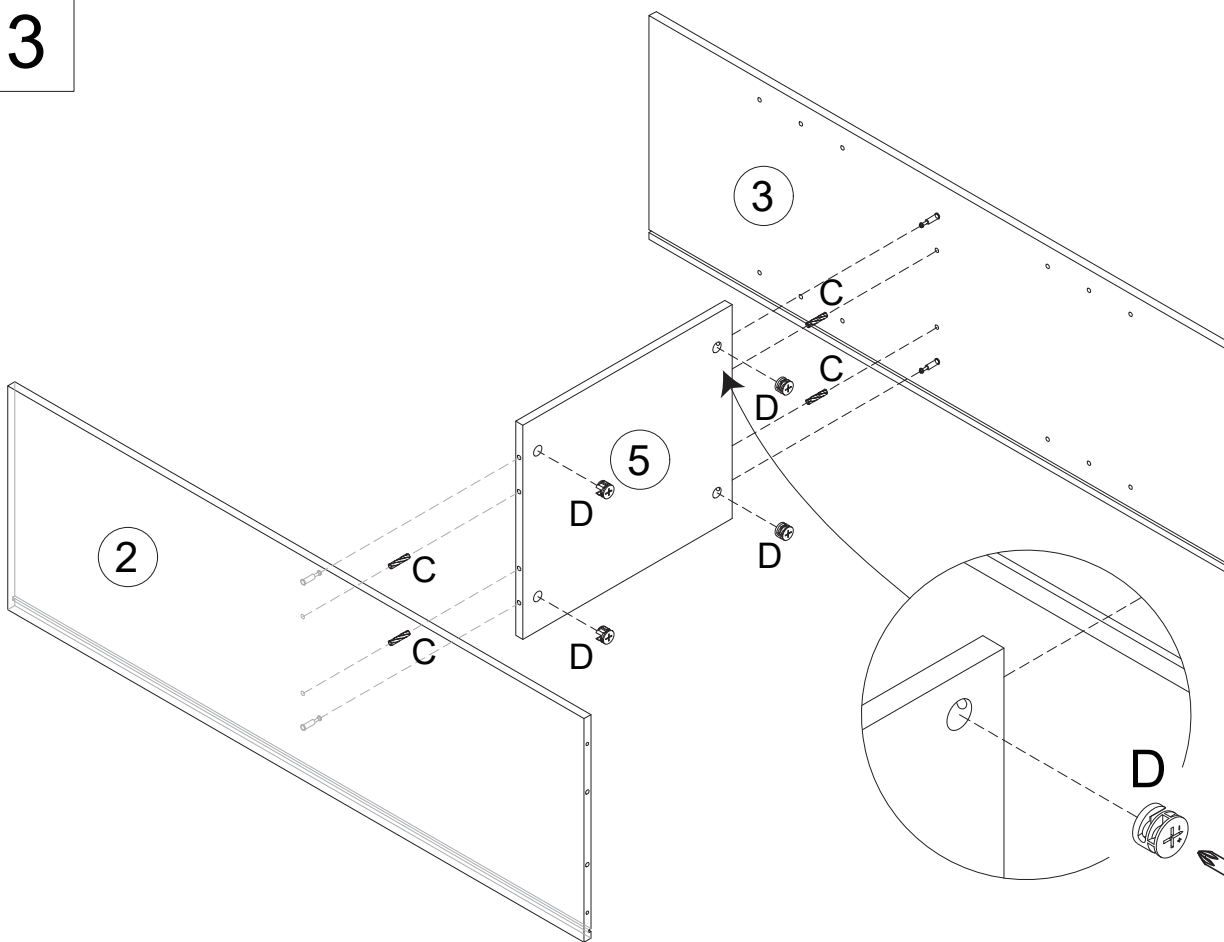


C x4



D x4

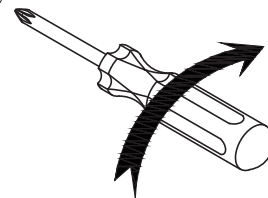

4

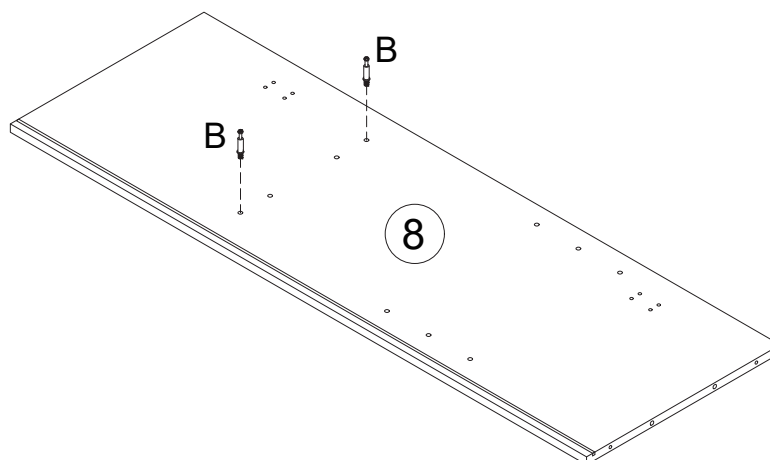

B x2




5

C x4






D x4

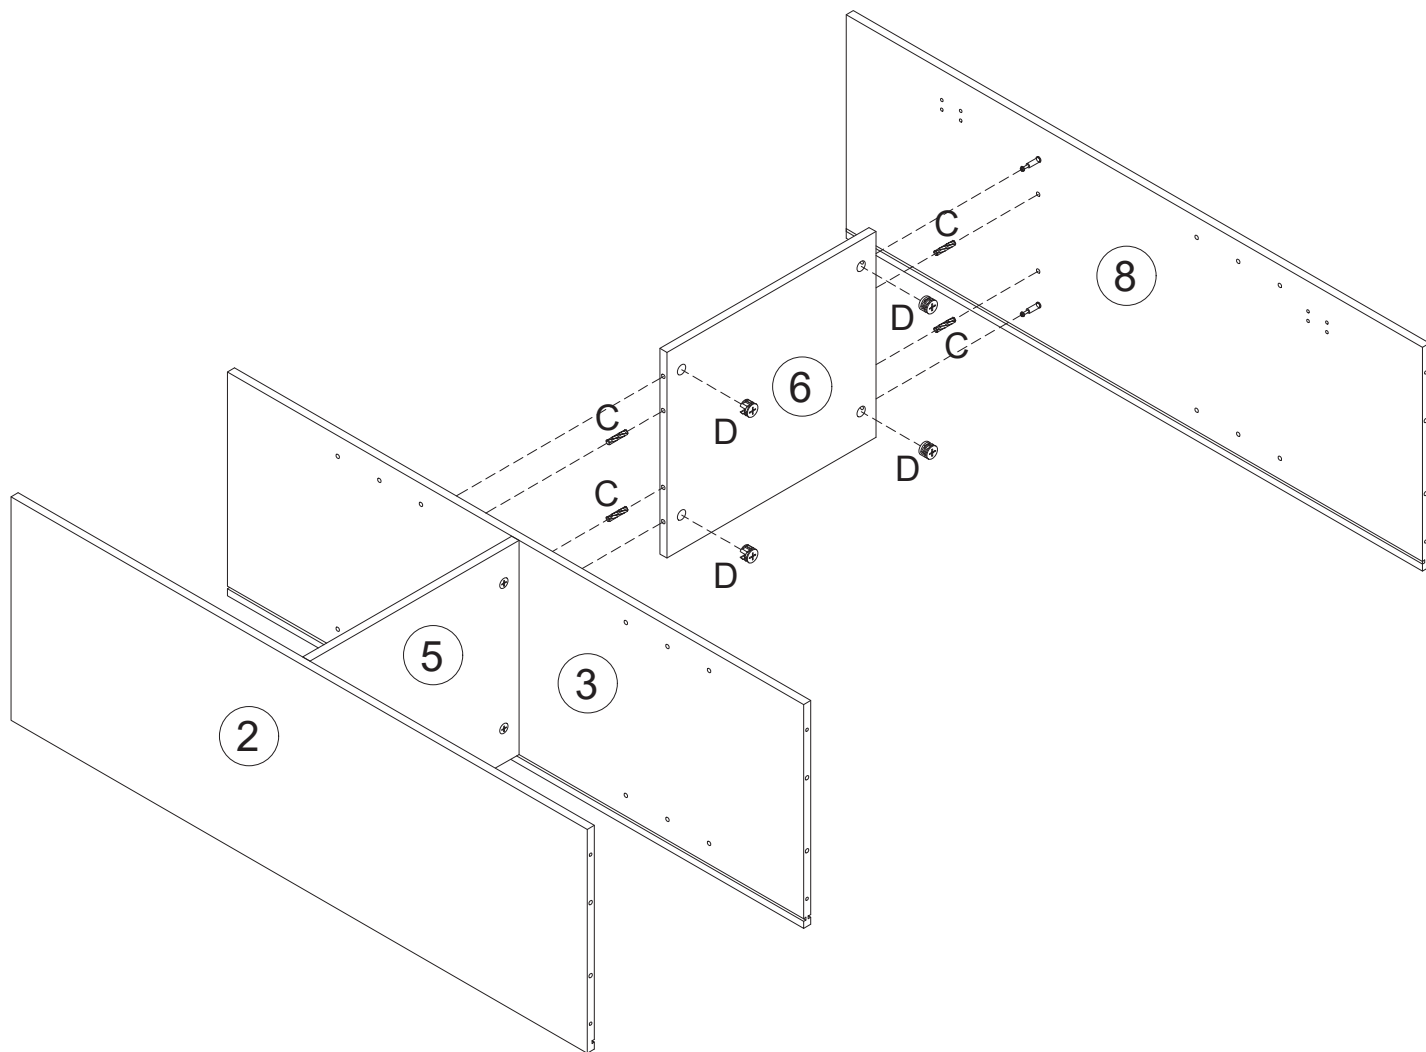


6

C	x6
	
E	x6
	
4x30mm	
F	x1
	

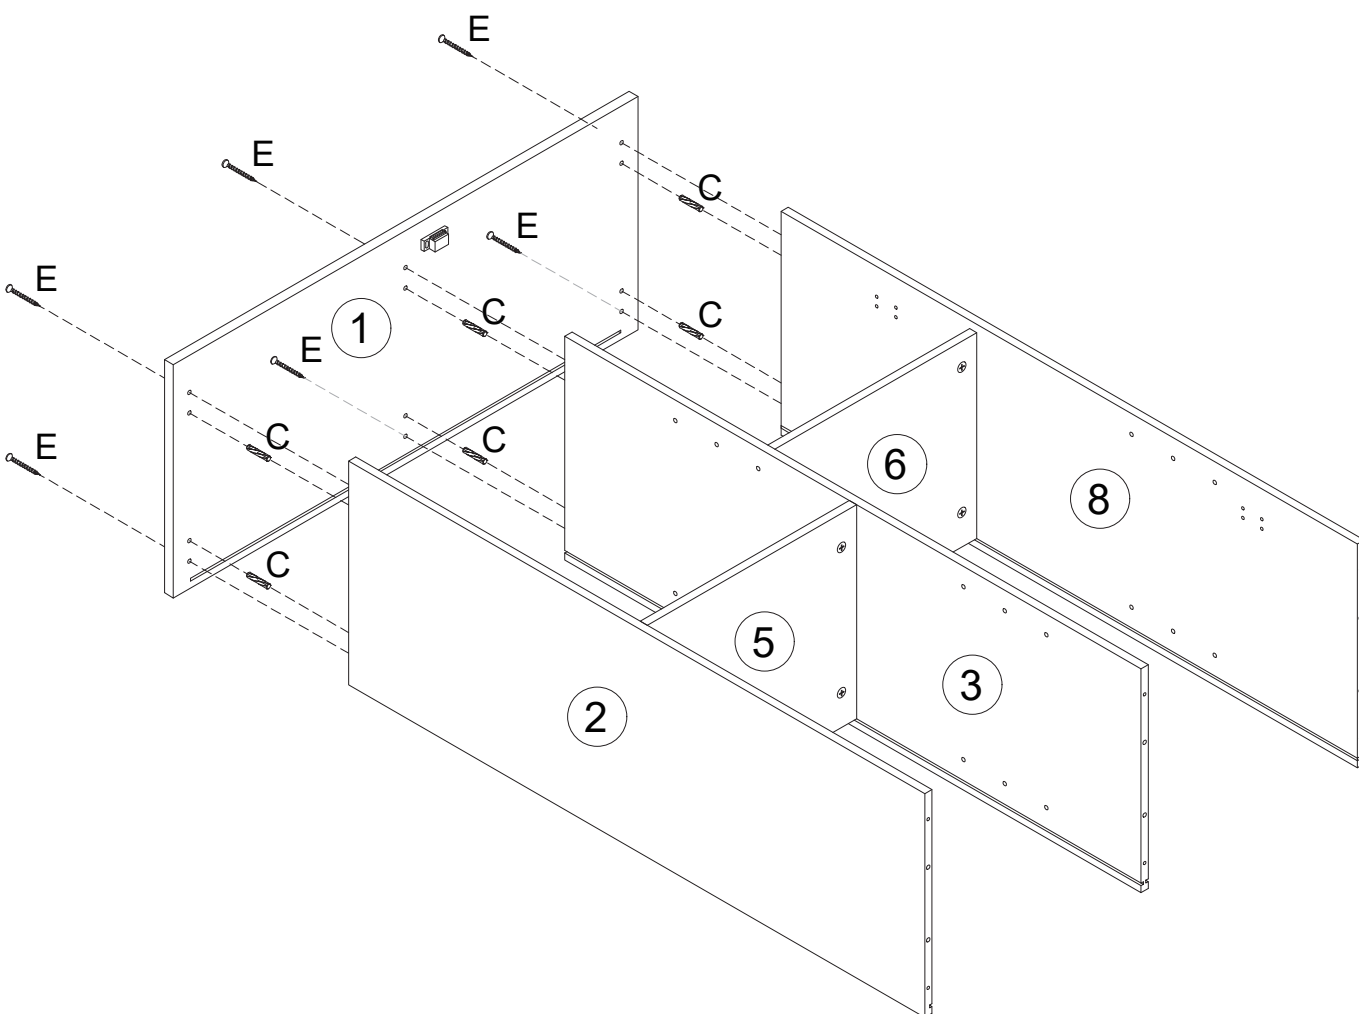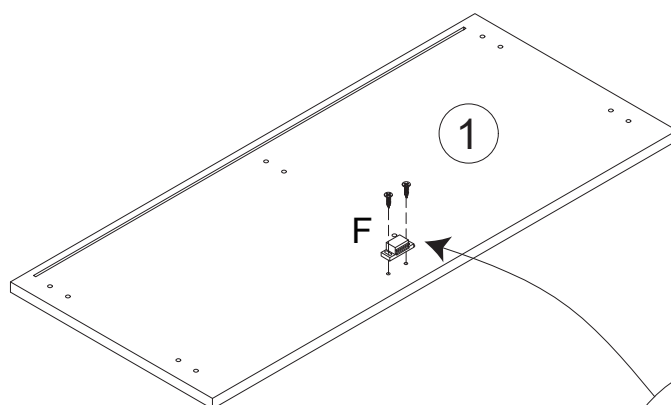


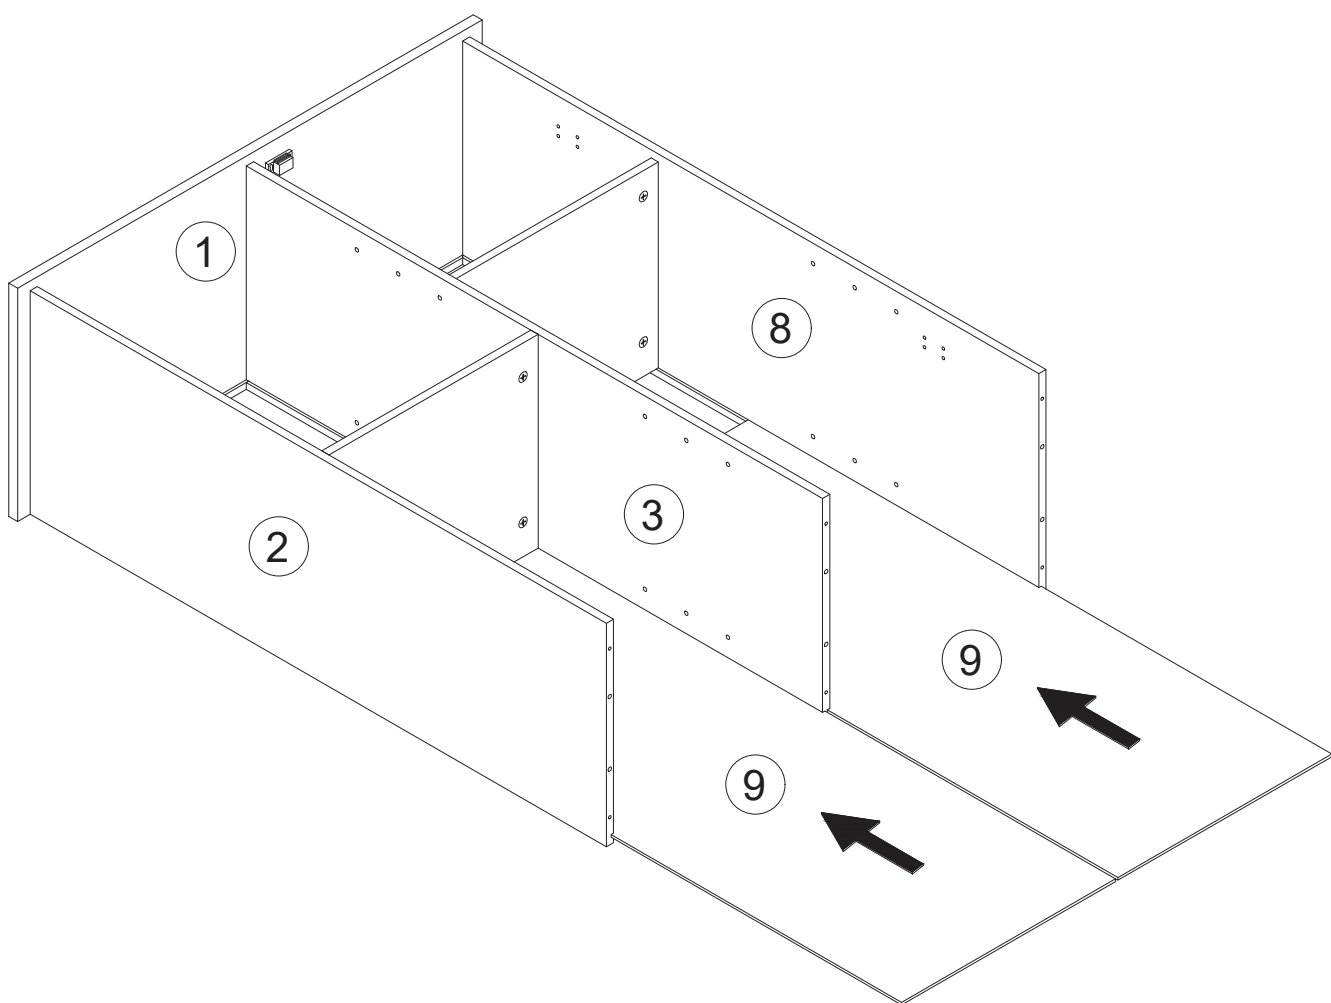


8

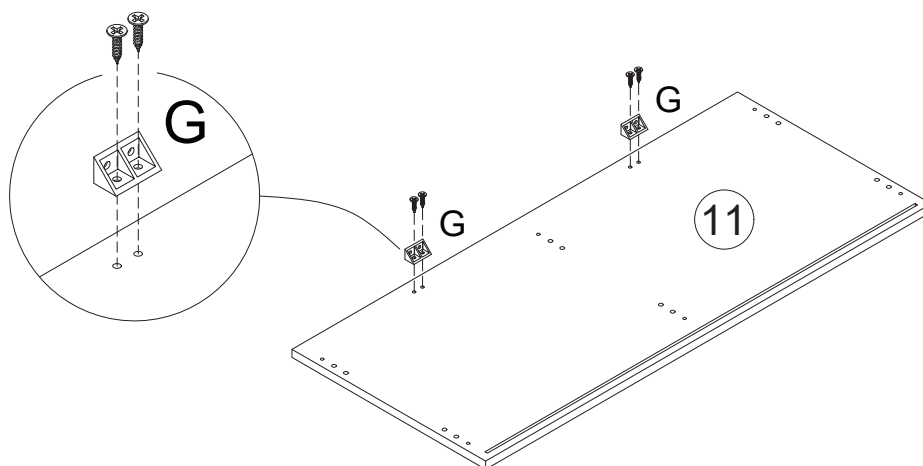


C	x6
E	x6
4x30mm	
G	x2

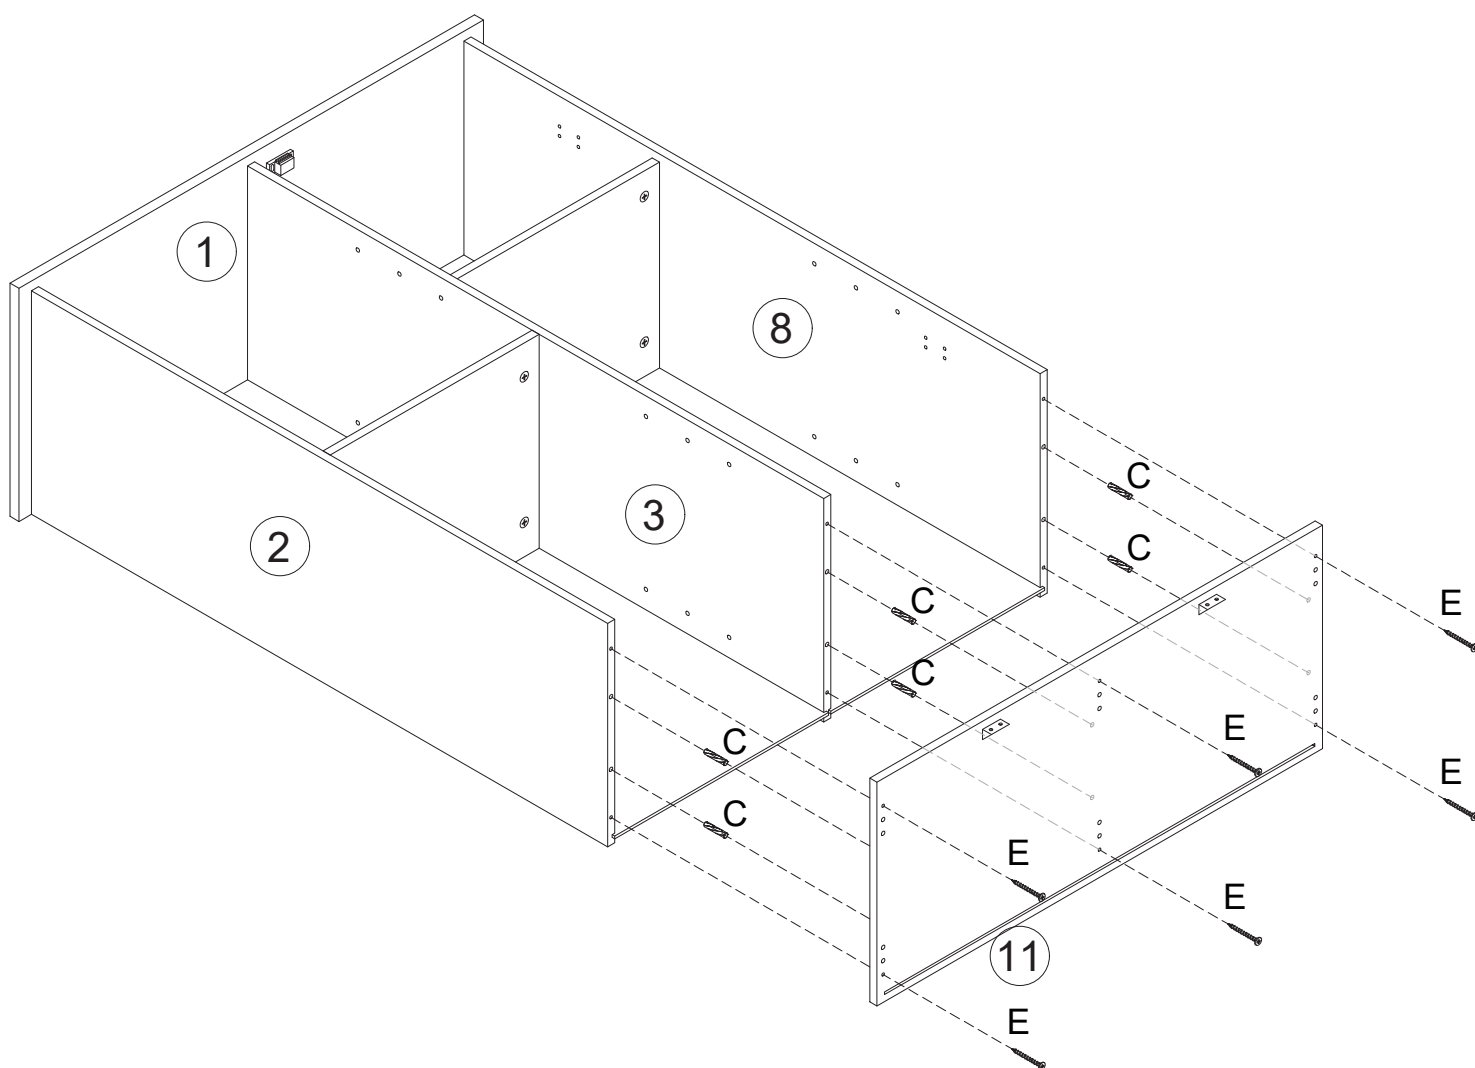

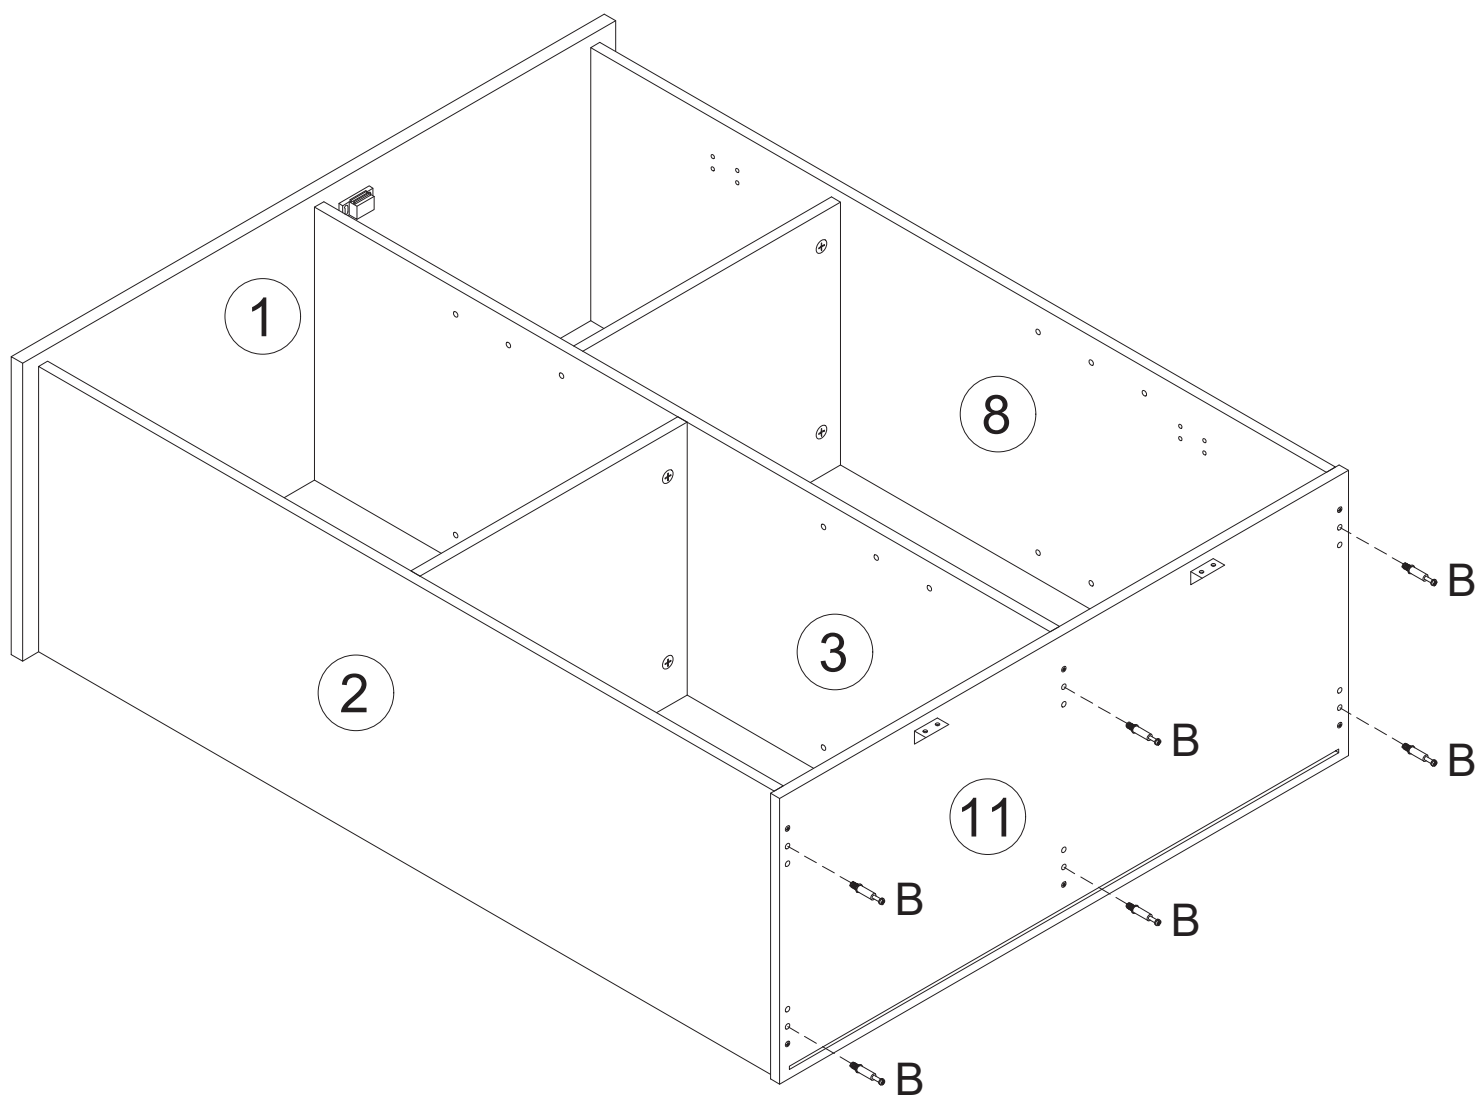

10

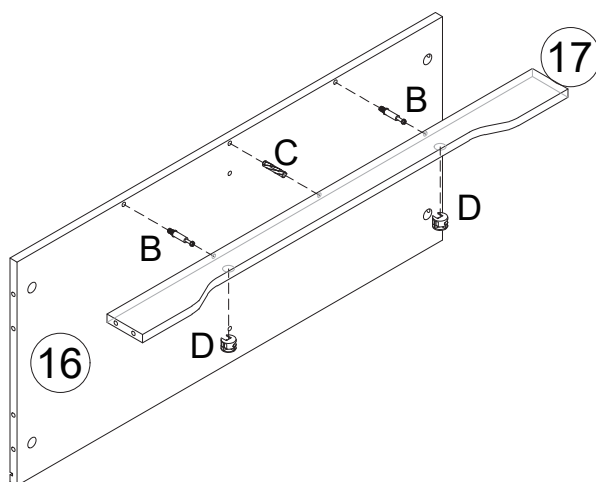

B x2




C x1



D x2



11

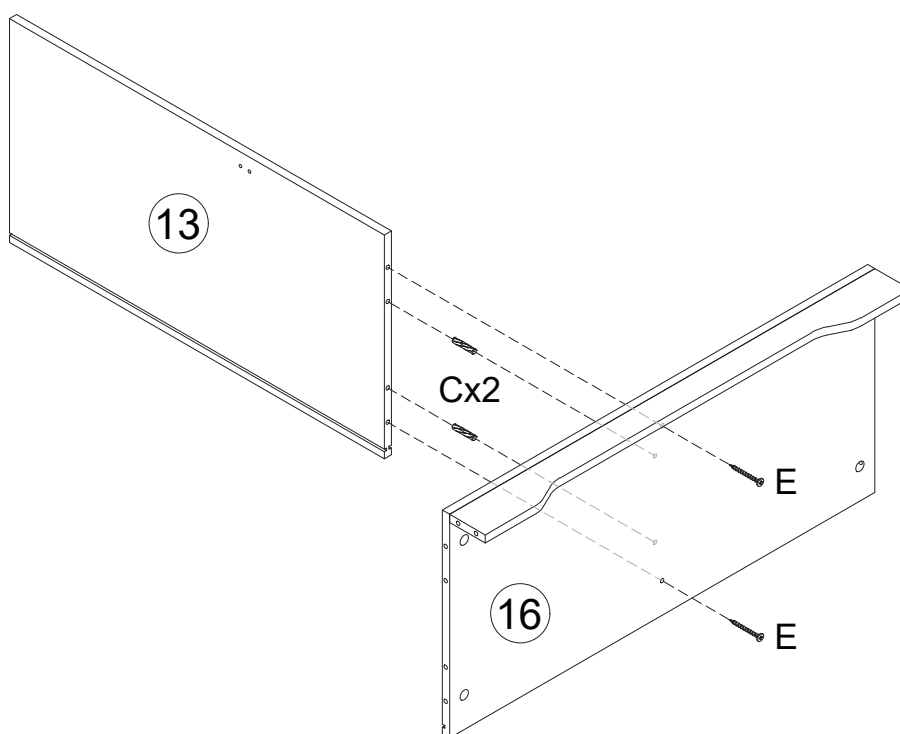

C x2





E x2



4x30mm

12

B x6

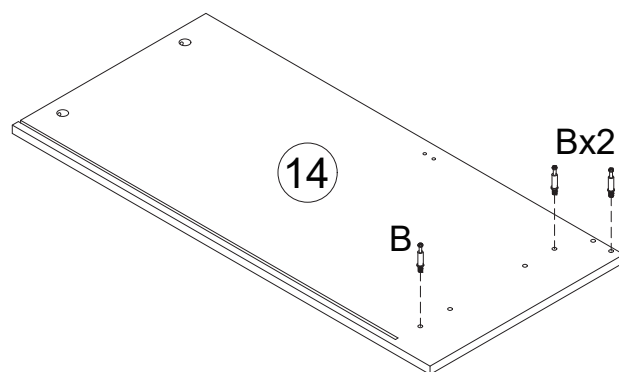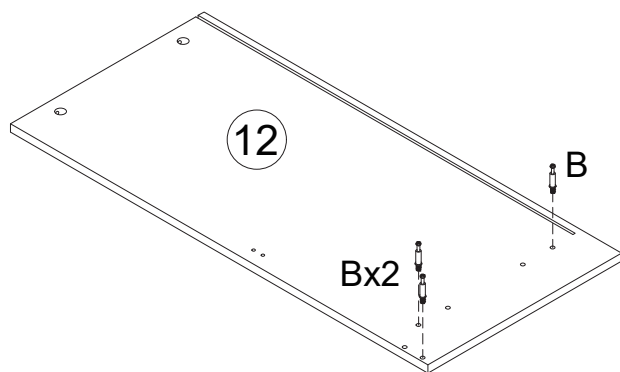


13


C x6



D x6

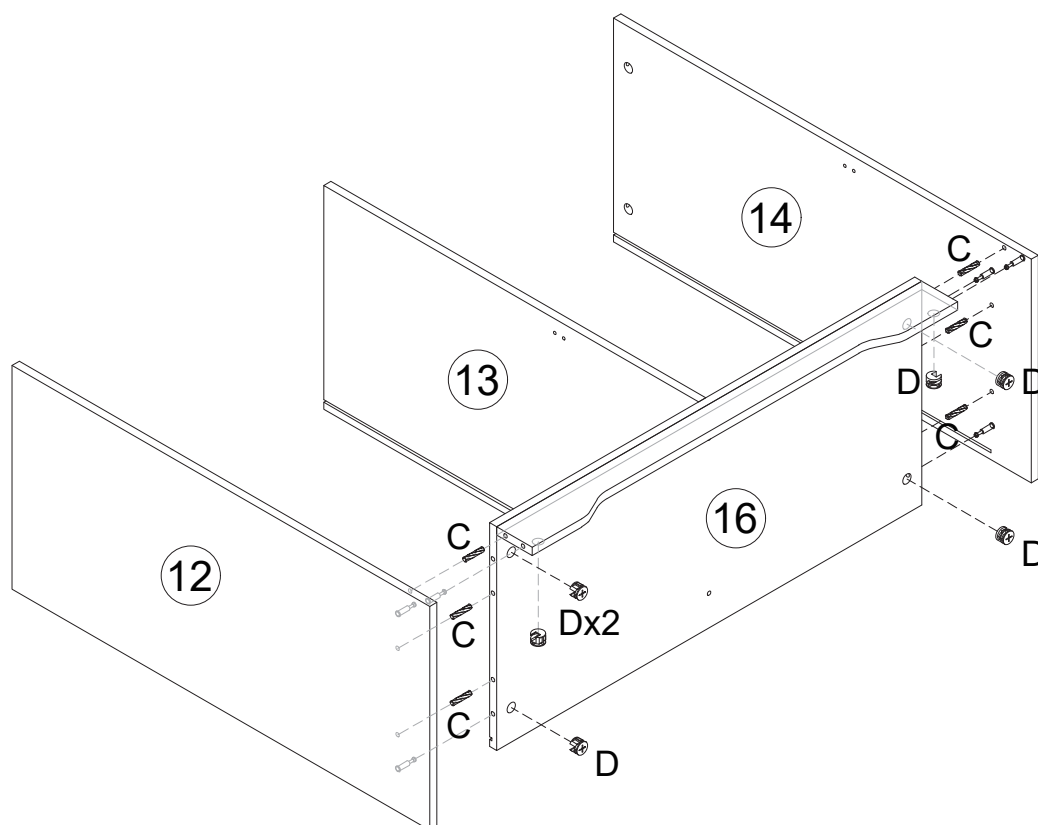



14

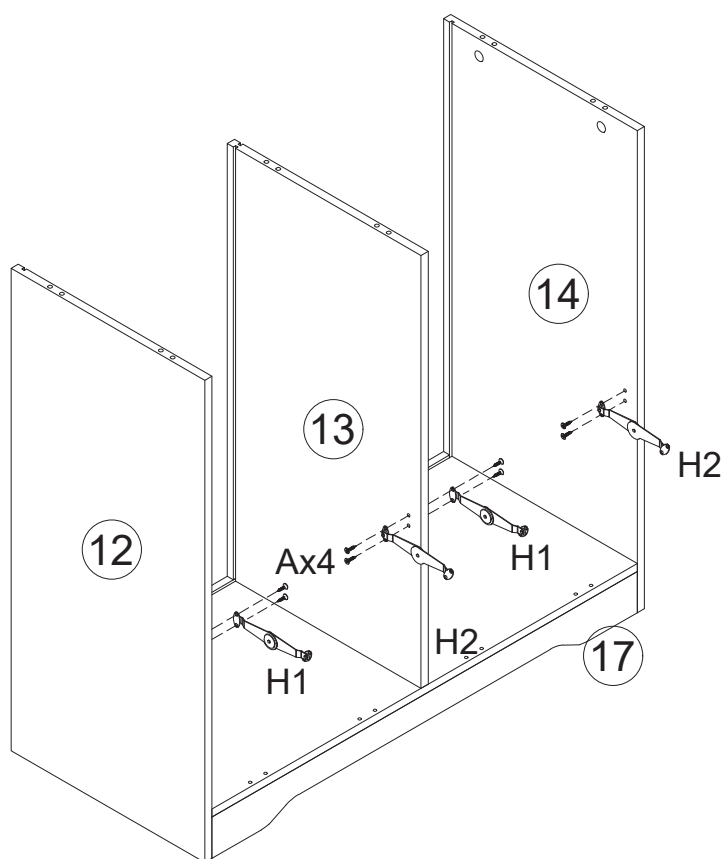


A	x8
	
3x12mm	
H	x2
 	
	
	
4x12mm	

15

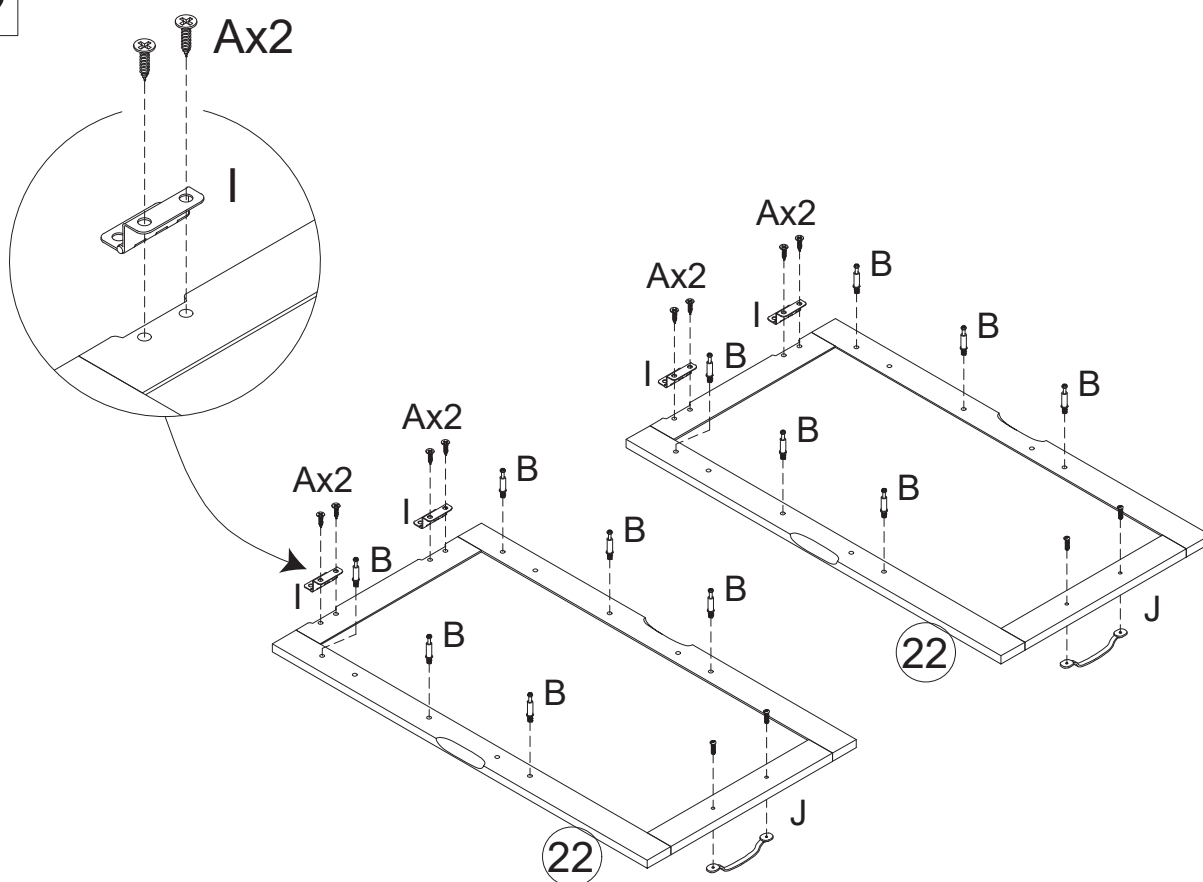


A	x8
	
3x12mm	
B	x12
	
	
I	x4
	
J	x2
	
	
4x12mm	

16

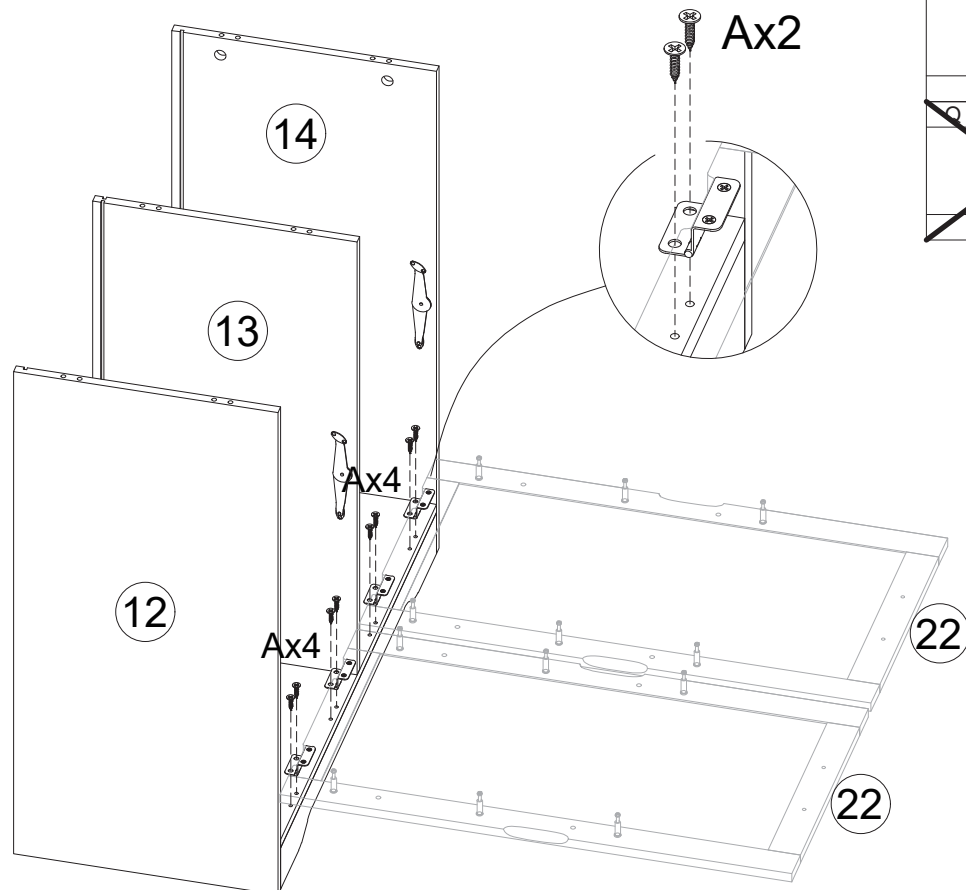


17

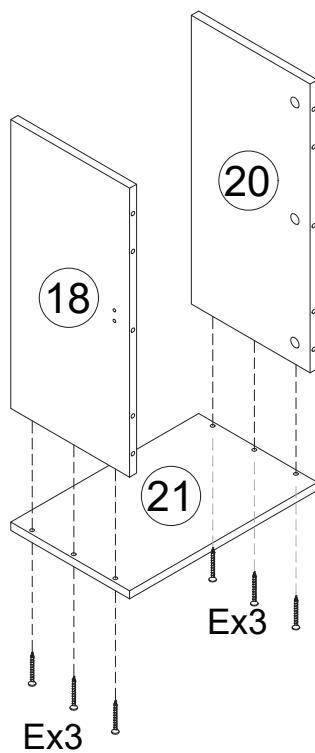

X2

E	x12
	
4x30mm	


18

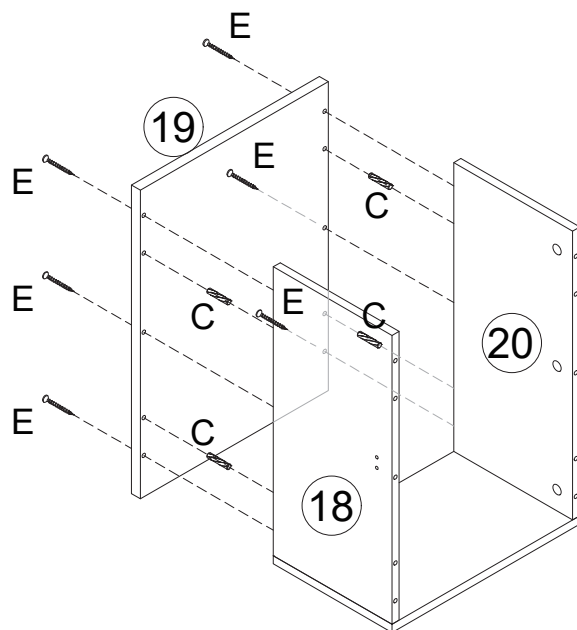

X2



C	x8
	
E	x12
	
4x30mm	

19

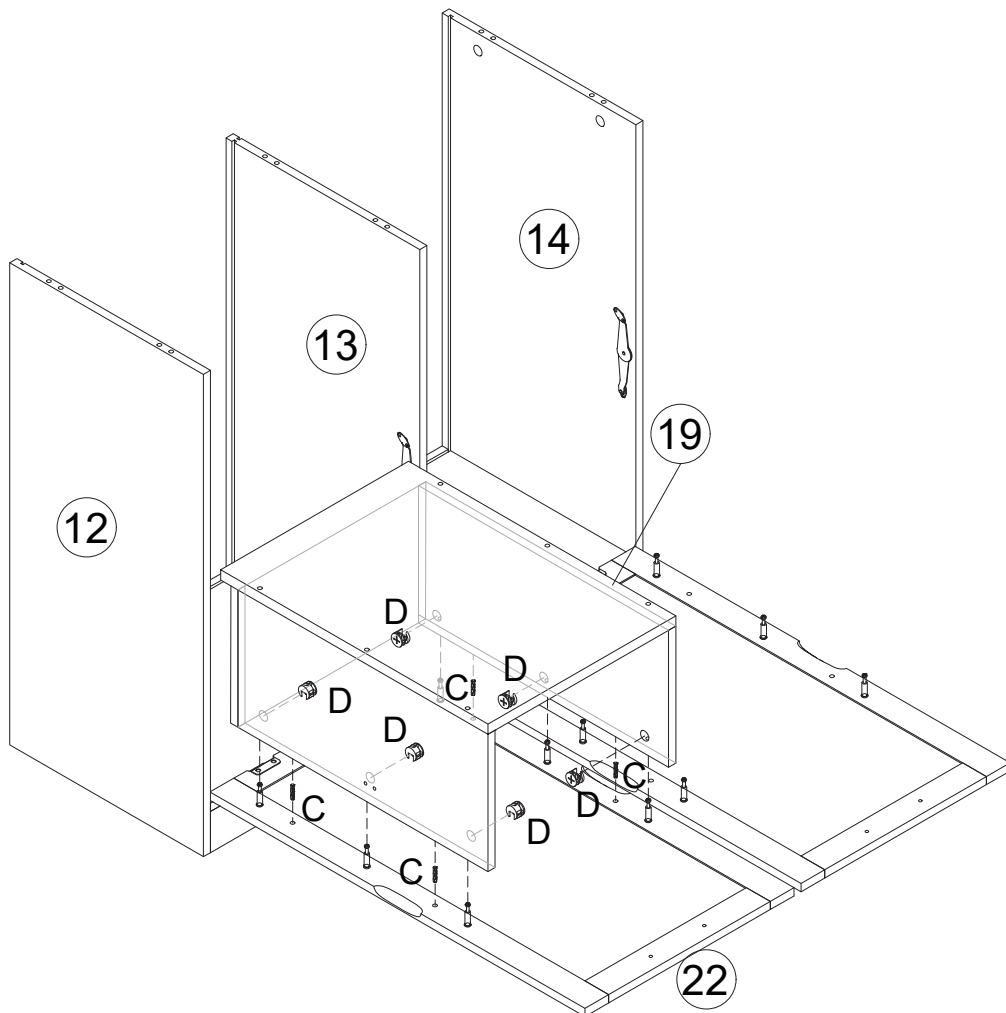


C	x4
	
D	x6
	

20

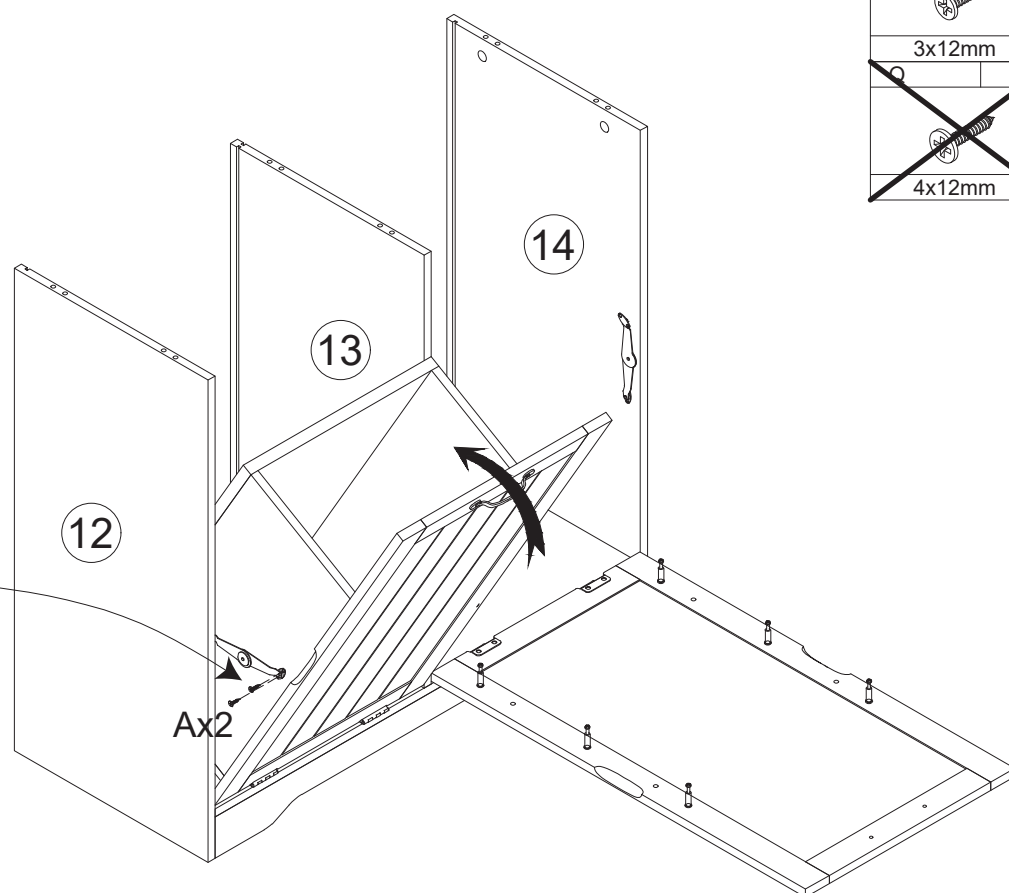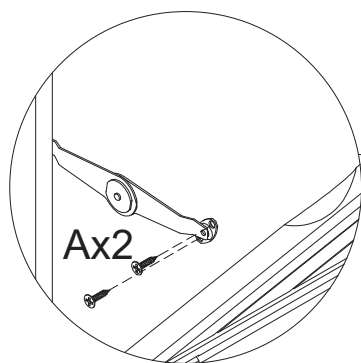


A	x2
3x12mm	
4x12mm	

21

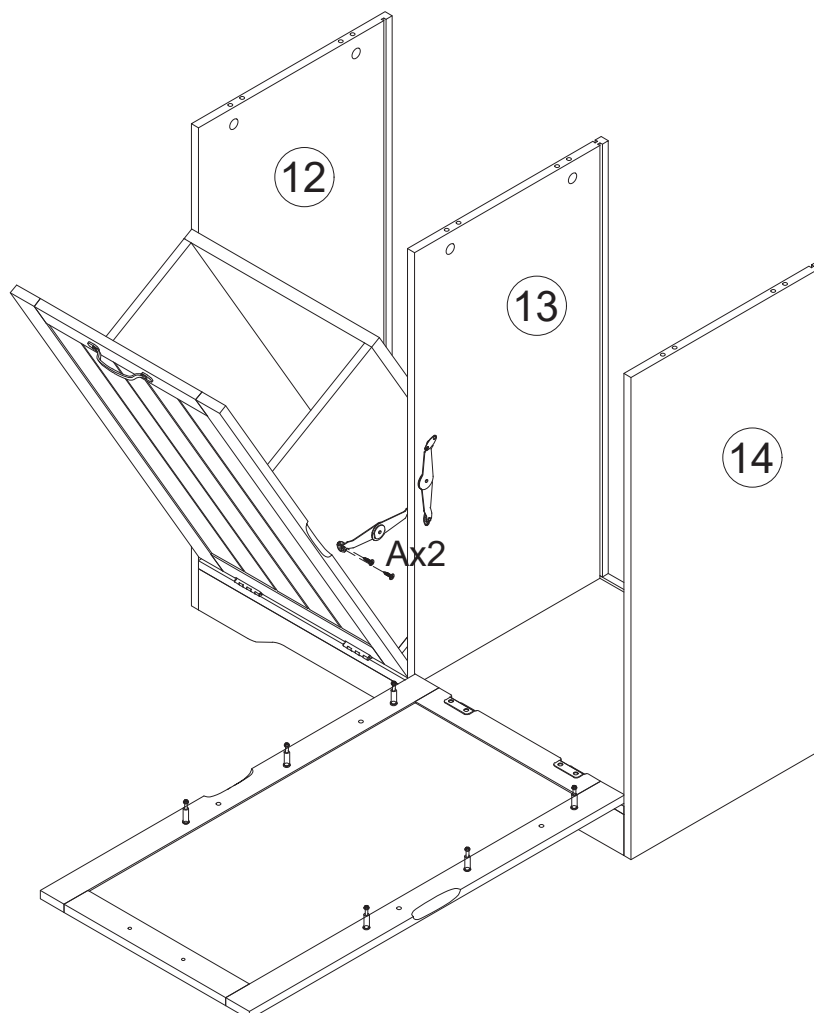


A	x2
3x12mm	
4x12mm	

22

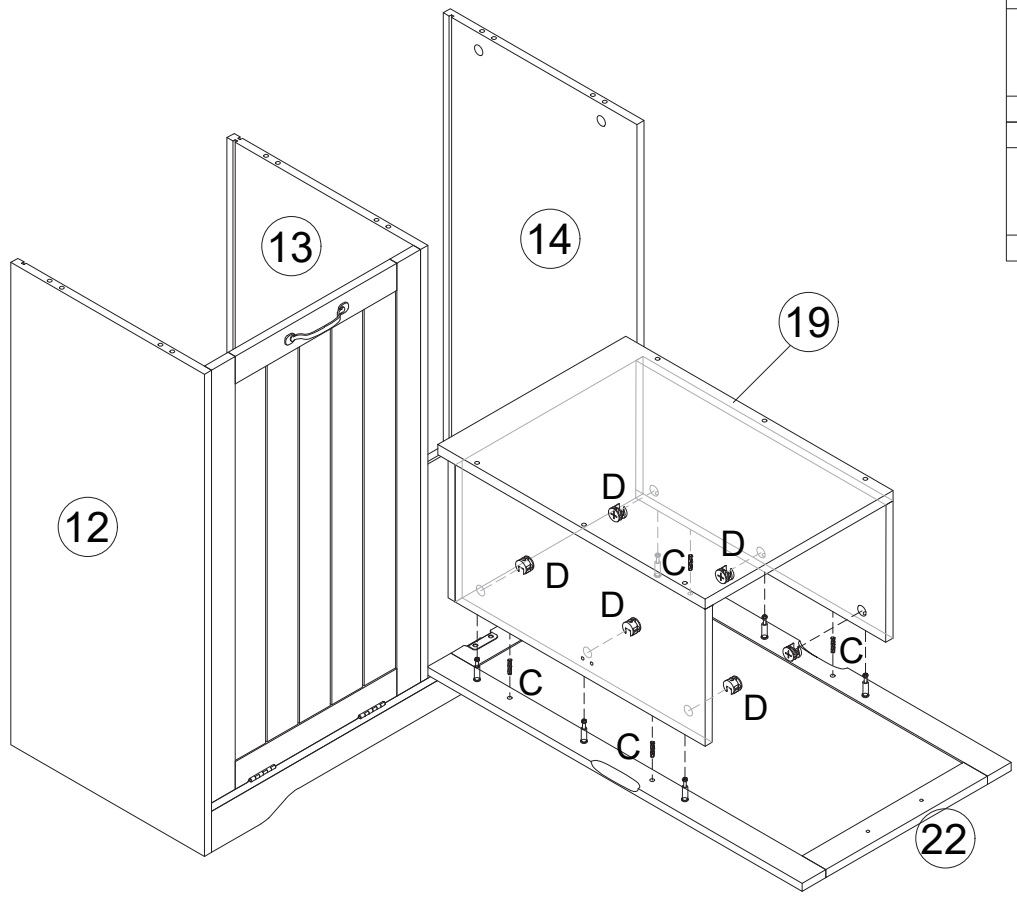


C	x4
	
D	x6
	

23

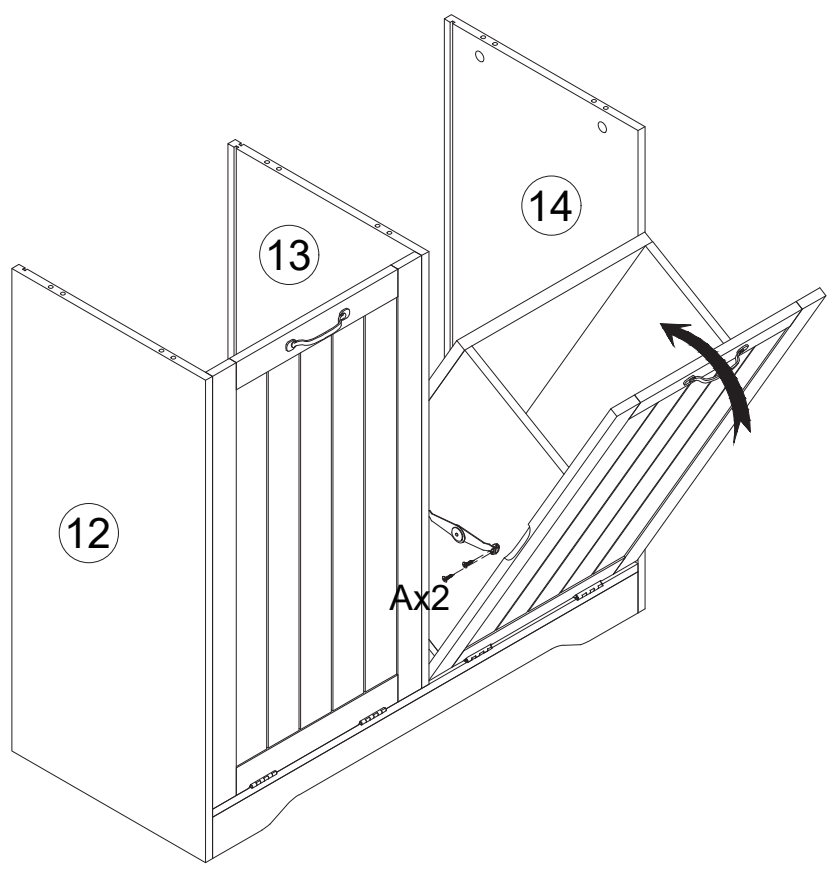


A	x2
	
3x12mm	
	
4x12mm	

24

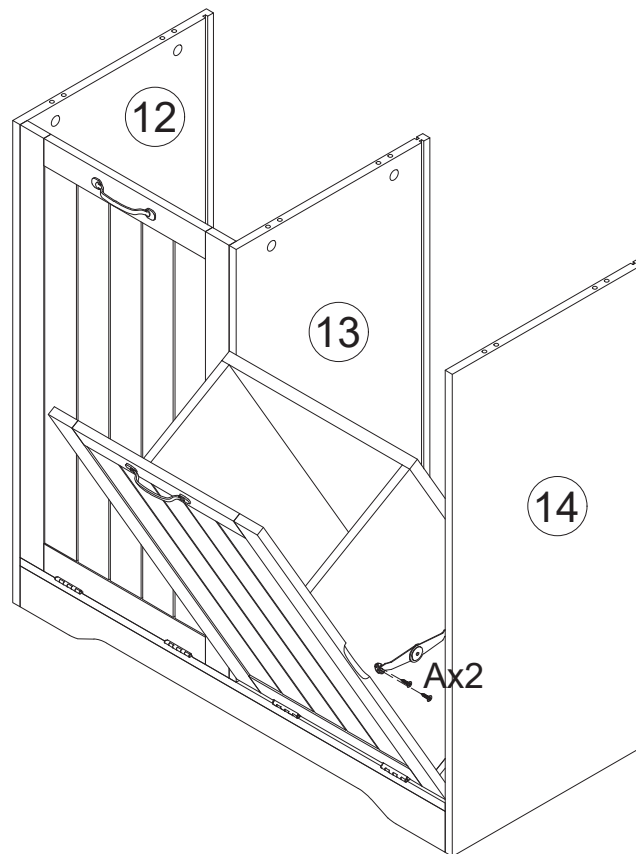



A	x2
	
3x12mm	
	
4x12mm	


25

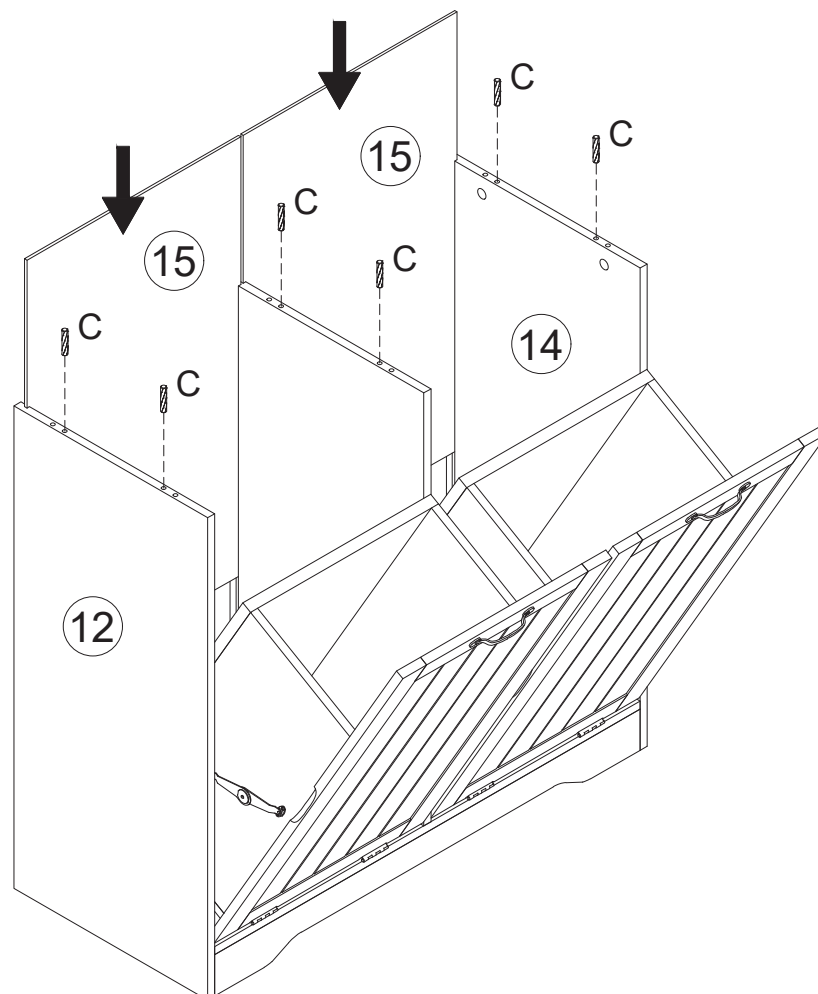



C	x6
	

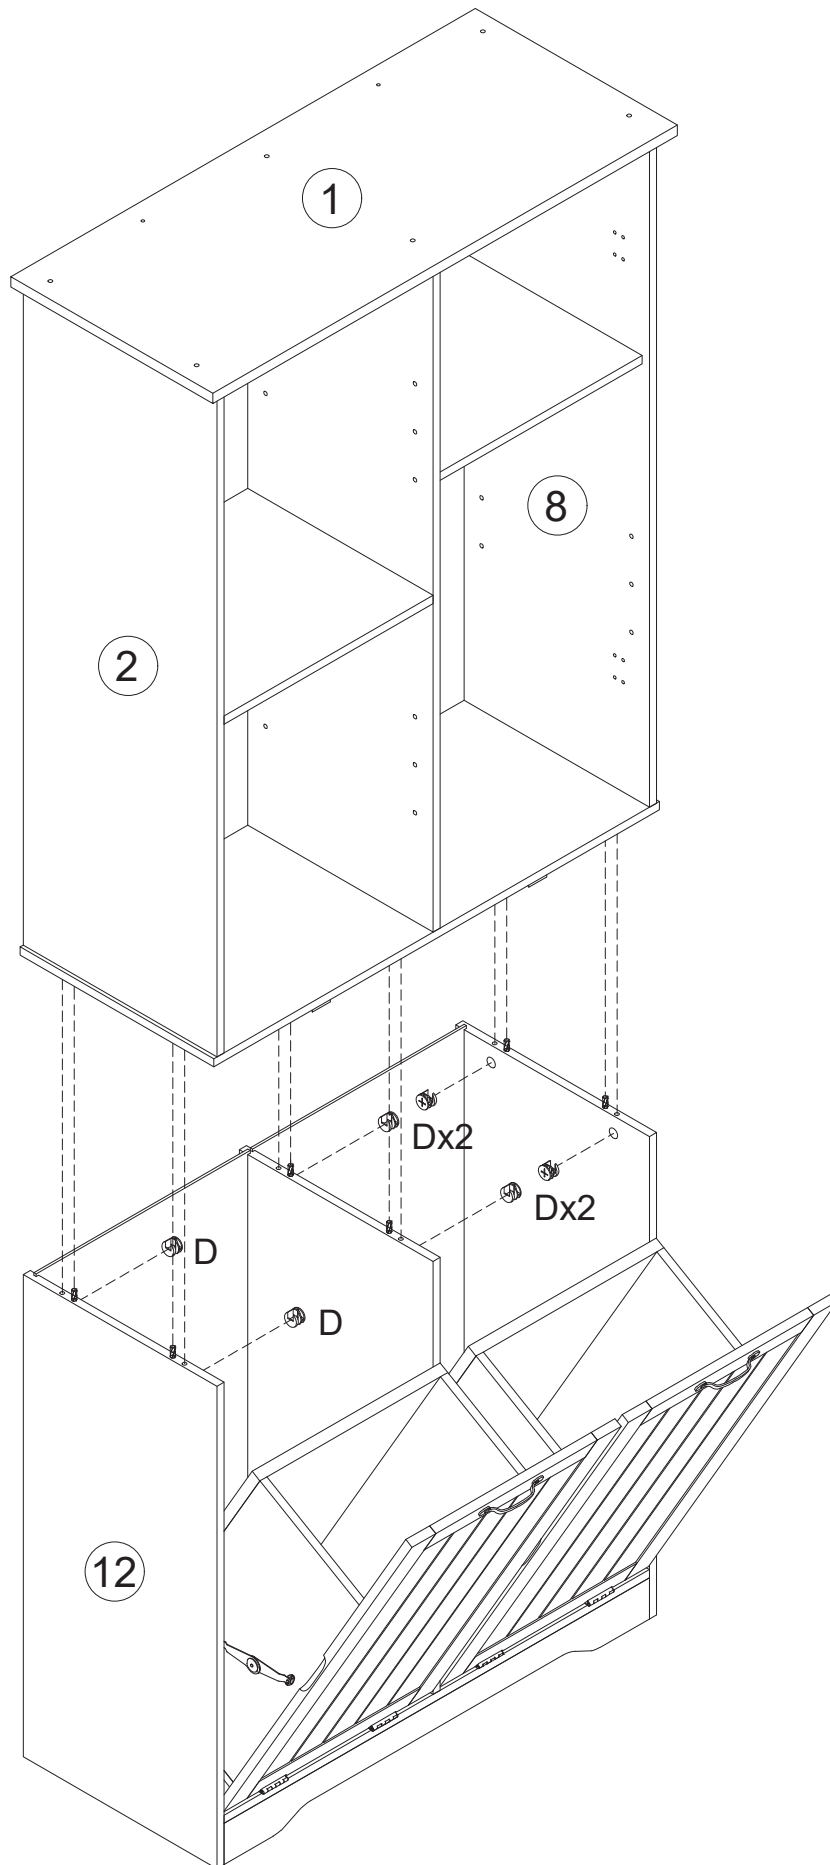

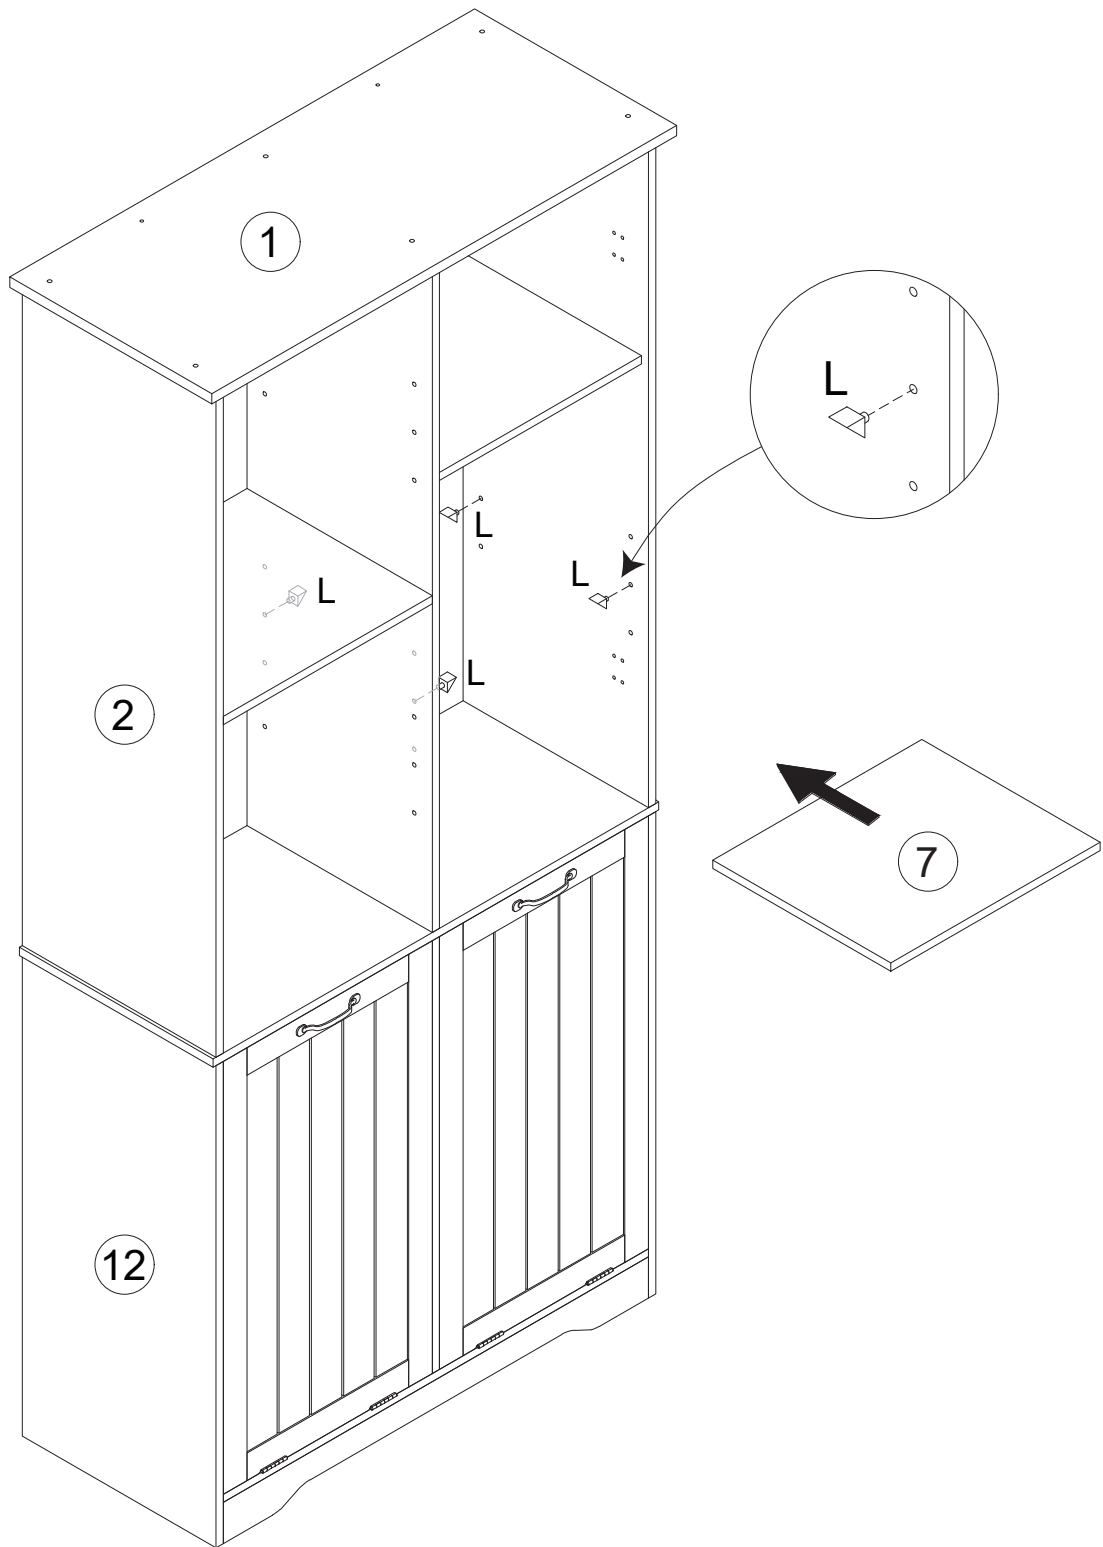

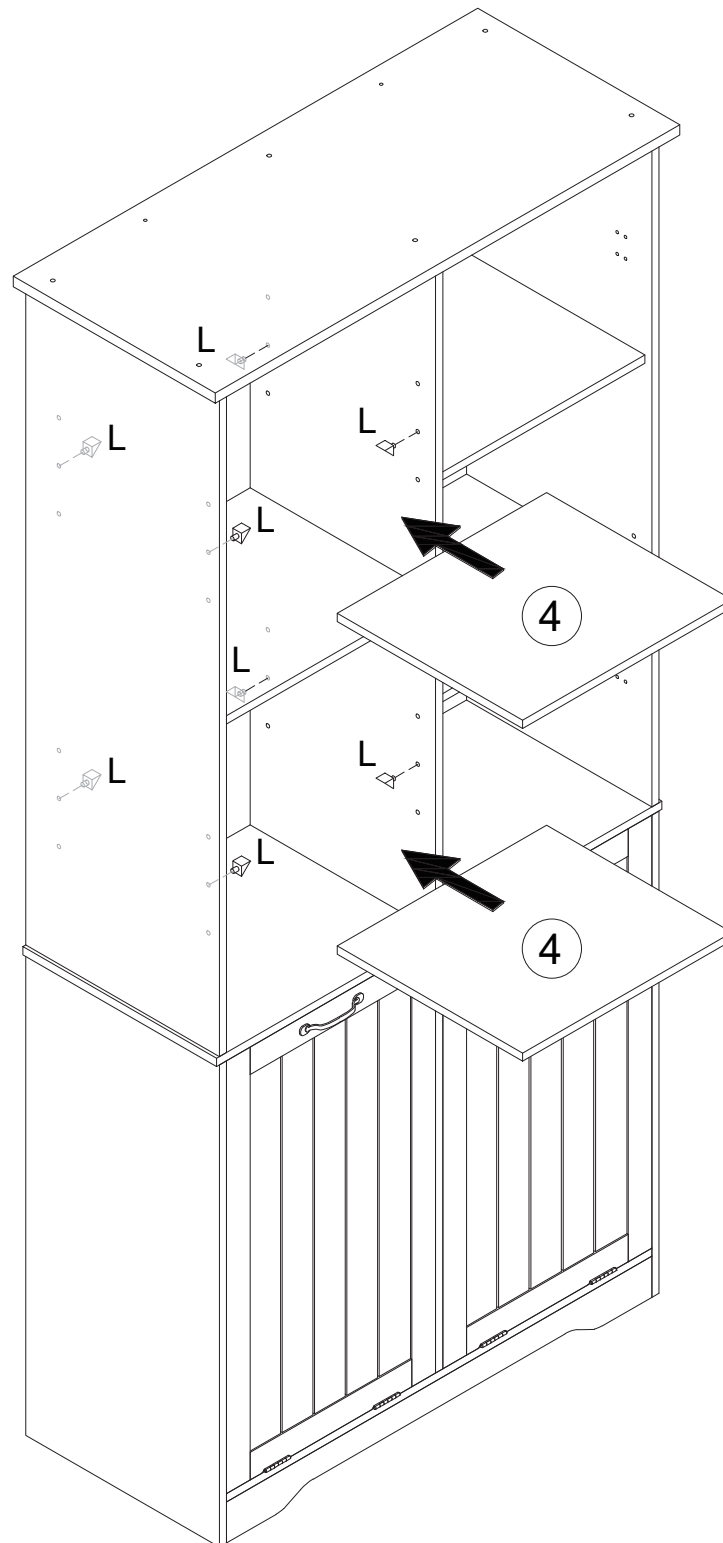

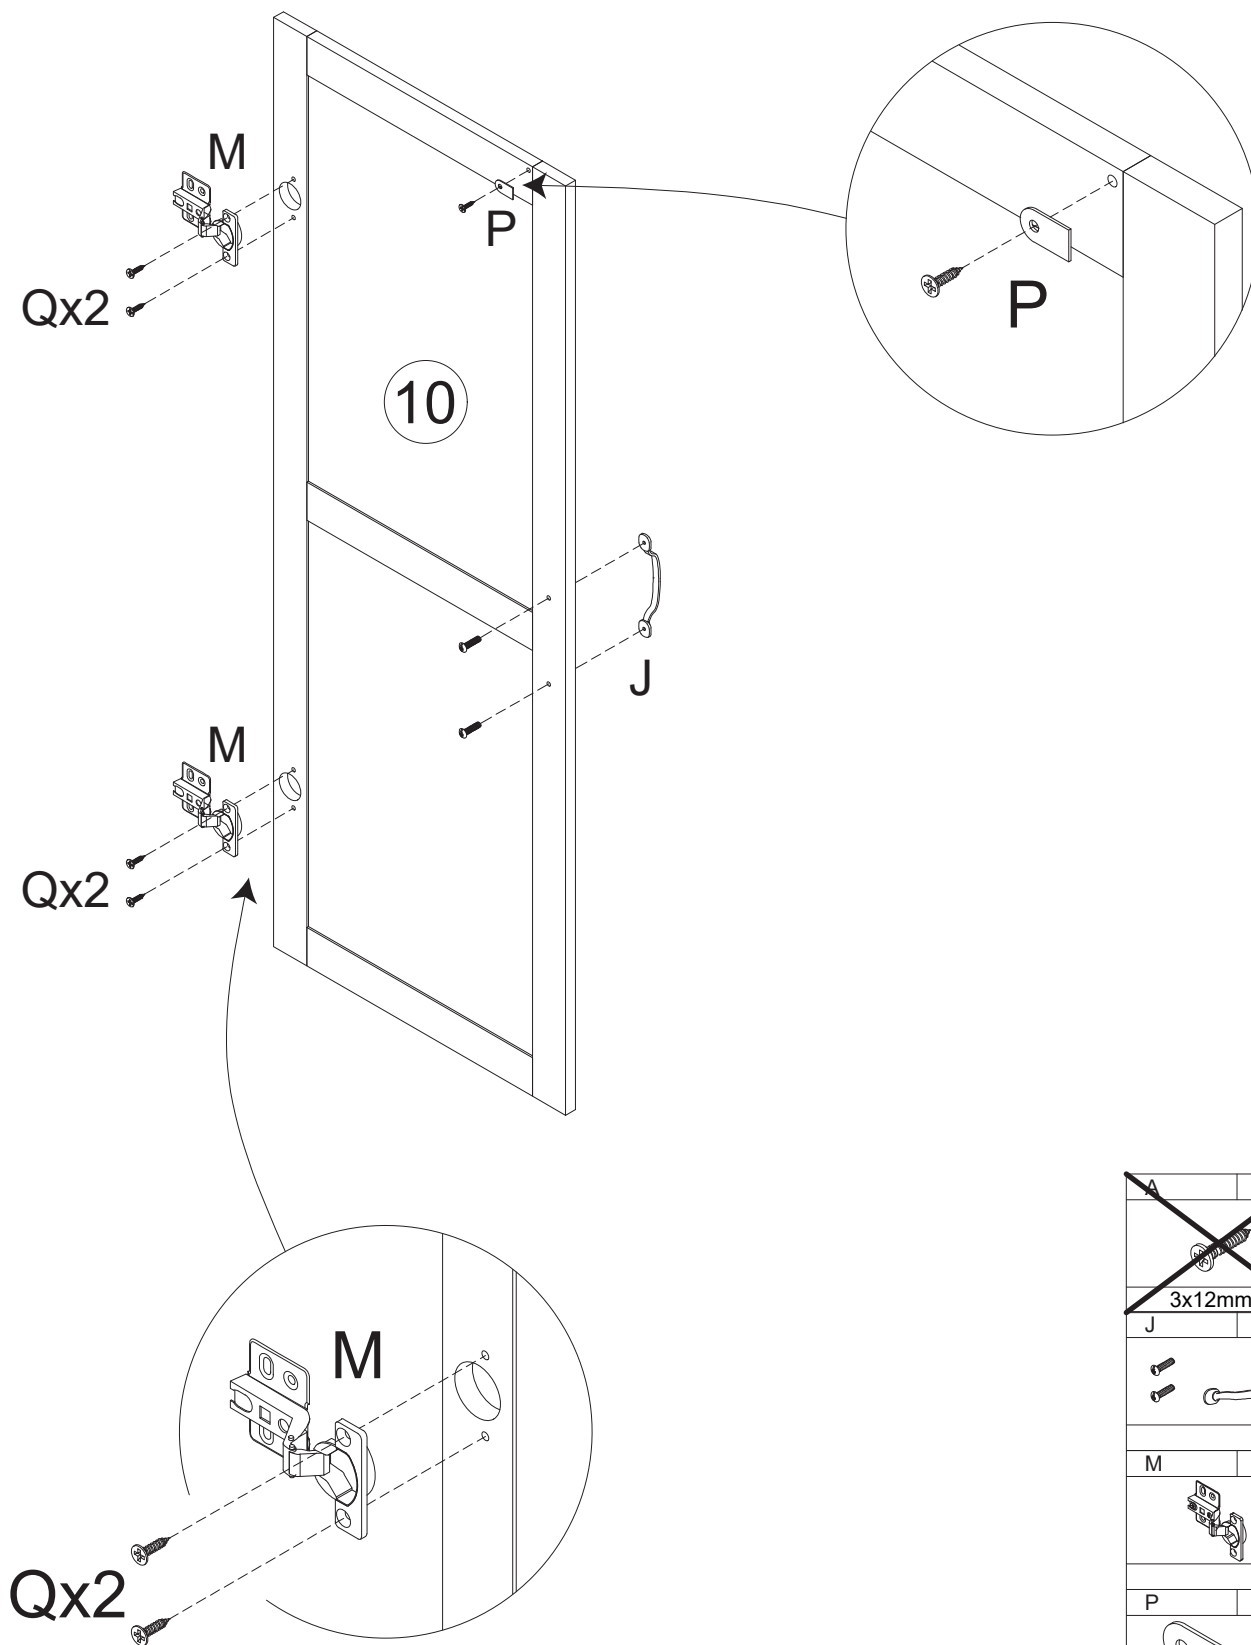

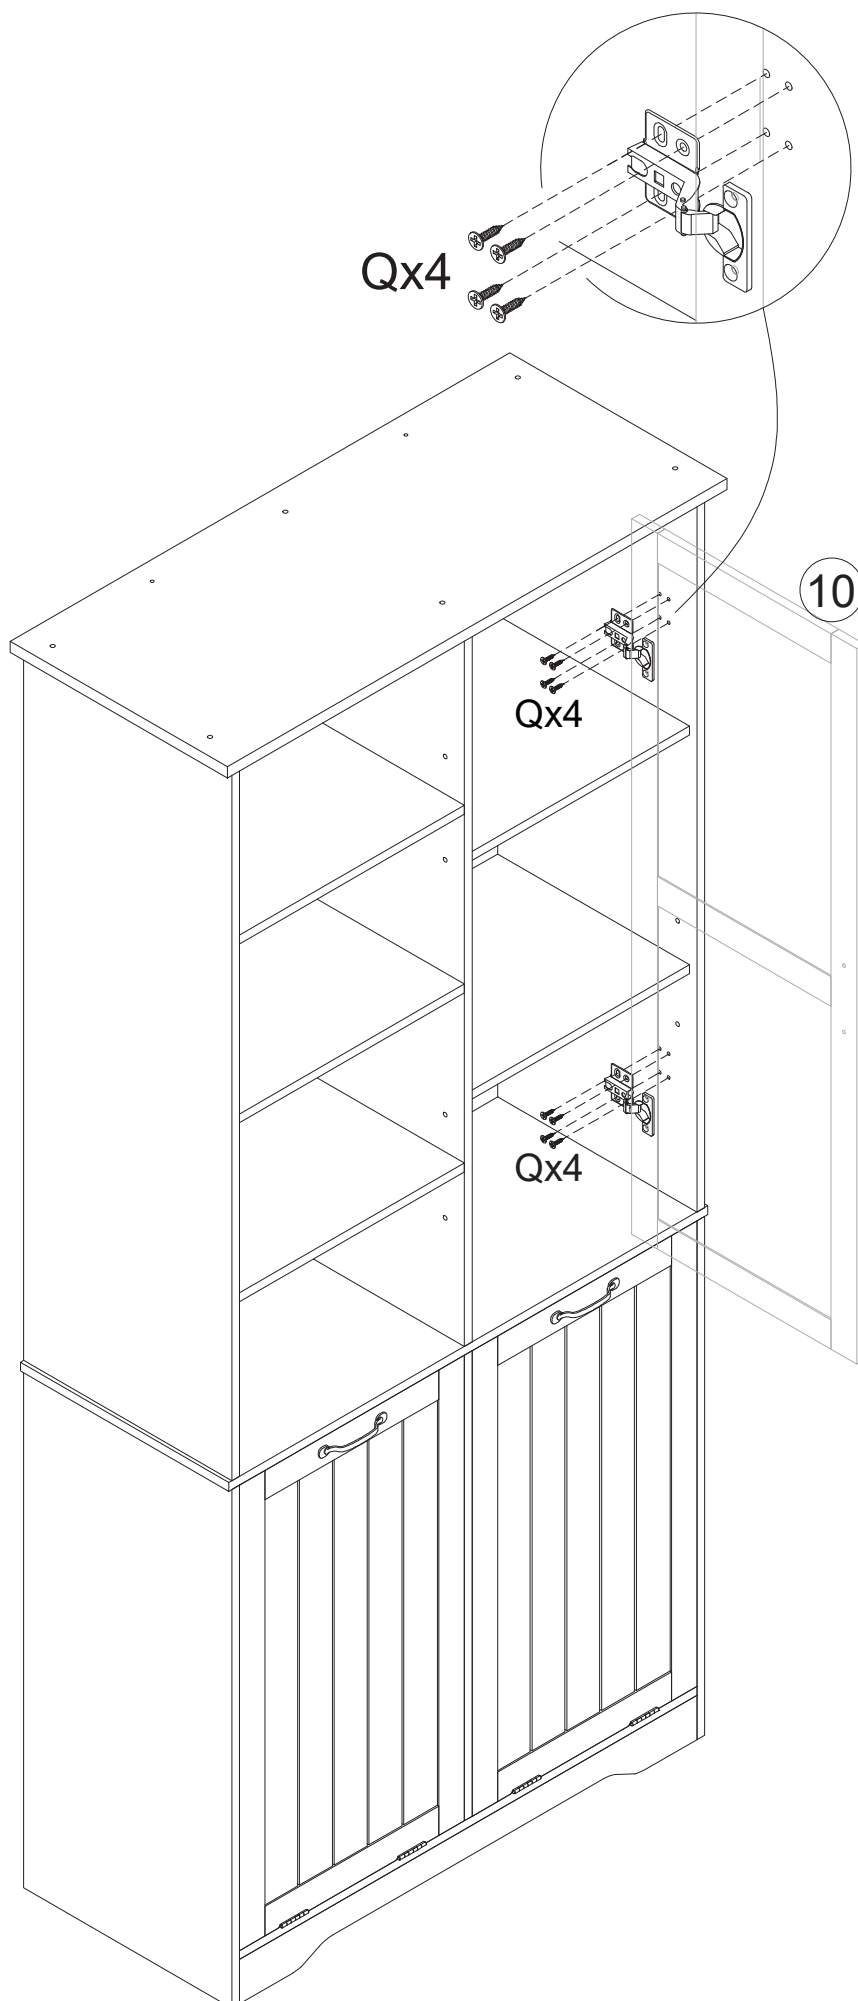

Q	x8
	
4x12mm	
	
3x12mm	

