

Installation Guide

Shoe Cabinet with Door

Bamboo and Wood/Original Life/Small Furniture

配件清单以11层为例

Take the 11-Tier as an example of **the Accessory List**



侧边支架左 ×1

Left Side Bracket ×1

侧边支架右 ×1

Right Side Bracket ×1



门板 ×5

Door Panels ×5



背板 ×5

Backboards ×5



门吸层板 ×6 (双面带凹槽)

Door Suction Layer Boards ×6 (double-sided with grooves)



门内层板 ×5 (比门吸层板小)

Door Inner Layer Boards ×5 (smaller than door suction layer board)



门吸 ×5

Door Suction ×5



门拉环×5
Door Pull Ring ×5



金属卡条
Metal Strips



门垫片
Door Gasket



小号螺丝
Small Screws



中号螺丝
Medium Screw



大号螺丝 Large Screws

安装工具 Installation Tools

开始组装

Start Assembly



门吸带铁片的一面记得朝前

1. 取出门吸层板以及门吸用小号螺丝安装

Remember to place the door with the iron plate facing forward

1. Take out the door suction layer board and the door suction, install them with small

screws.



2.然后把装好门吸层板与侧边支架用大号螺丝固定

2. Then fix the installed door suction layer board and side bracket with large screws.



3. 取出背板沿支架凹槽插入
3. Take out the backboards and insert it along the bracket grooves.



4. 依次取出装好门吸层板和背板安装
4. Take out and install the door suction layer board and backboards in sequence.



门吸层板

前面螺丝先不要拧

5. 取出门吸层板（没有装门吸的）和门内层板用大号螺丝安装

Door Suction Layer Boards

Do not tighten the front screws yet

5. Take out the door suction layer boards (without door suction installed) and the inner door panels, install them with large screws.




金属条记得卡
入孔洞中并非
凹槽中

金属条记得卡入孔洞中并非凹槽中

Remember that the metal strips need to fit into the hole, not into the groove.

6.取出金属条依次插入侧边支架

6. Take out the metal strips and insert them into the side brackets in turn.

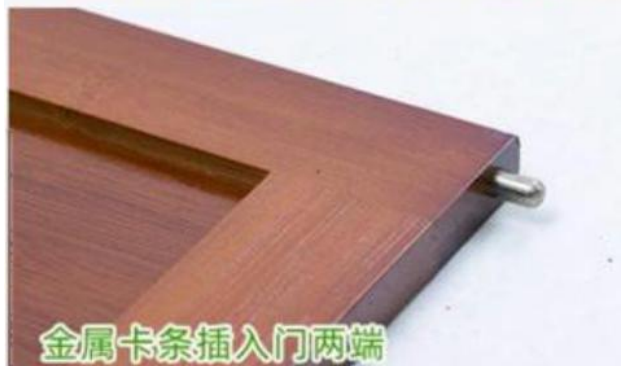

门拉环，门垫片用中号螺丝安装

金属卡条插入门两端

Install door pull rings, door gasket with medium screws

Insert the metal strips into both ends of the door

7.取出门板，门垫片，门拉环，金属卡条如图所示安装

7. Take out the door panel, door gasket, door pull ring, and metal strip and install them as shown in the picture.



金属卡条卡入支架凹槽

因第五步螺丝未
拧,可轻轻掰开侧
边支架

金属卡条卡入支架凹槽

Insert the metal strips into the grooves of the bracket.

因第五步螺丝未拧，可以轻轻掰开侧边支架

Because the screws are not screwed in the fifth step, you can gently pull apart the side bracket

8. 掰开侧边支架右，然后把门板卡入支架

8. Pull apart the right side bracket and then snap the door panel into the bracket.



9.依次安装剩余门板，拧紧螺丝即可

9. Install the remaining door panels in turn and tighten the screws.

Installation Guide

Shoe Cabinet with Door

Bamboo and Wood/Original Life/Small Furniture

Take the 11-Tier as an example of **the Accessory List**

 <p>Left Side Bracket×1</p>	 <p>Right Side Bracket×1</p>	 <p>Door Panels ×5</p>	 <p>Door Suction ×5</p>
		 <p>Backboards ×5</p>	 <p>Door Pull Ring × 5</p>
		 <p>Door Suction Layer Boards ×6 (double-sided with grooves)</p>	 <p>Metal Strips</p>
		 <p>Door Inner Layer Boards ×5 (smaller than door suction layer board)</p>	 <p>Door Gasket</p>
			 <p>Small Screws</p>
		 <p>Medium Screw</p>	
		 <p>Large Screws</p>	
		 <p>Installation Tools</p>	

Start Assembly



Remember to place the door with the iron plate facing forward

1. Take out the door suction layer board and the door suction, install them with small screws.



2. Then fix the installed door suction layer board and side bracket with large screws.



3. Take out the backboards and insert it along the bracket grooves.



4. Take out and install the door suction layer board and backboards in sequence.

Door Suction Layer Boards



Do not tighten the front screws yet

5. Take out the door suction layer boards (without door suction installed) and the inner door panels, install them with large screws.




Remember that the metal strips need to fit into the hole, not into the groove.

6. Take out the metal strips and insert them into the side brackets in turn.



Install door pull rings, door gasket with medium screws

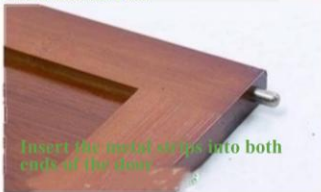

Insert the metal strips into both ends of the door

7. Take out the door panel, door gasket, door pull ring, and metal strip and install them as shown in the picture.



Insert the metal strips into the grooves of the bracket.

Because the screws are not screwed in the fifth step, you can gently pull apart the side bracket

8. Pull apart the right side bracket and then snap the door panel into the bracket.



9. Install the remaining door panels in turn and tighten the screws.