FULL SIZE BED

ASSEMBLY INSTRUCTIONS



PAGE 1 OF 4

ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS

- 1. Remove hardware from box and sort by size.
- 2. Please check to see that all hardware and parts are present prior start of assembly.
- 3. Please follow attached instruction in the same sequence as numbered to assure fast & easy assembly.



Warning!


- 1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2. This product is for home use only and not intended for commercial establishment.

PARTS IDENTIFICATION **B1 (BOX 1) B2 (BOX 2) HEADBOARD PANEL** 1PC **BED SLAT** 4PCS LEFT HEADBOARD LEG 1PC BED SLAT SUPPORT 4PCS WITH LEVELER C RIGHT HEADBOARD LEG 1PC 2PCS **BED RAIL** FOOTBOARD PANEL 1PC D 203961F (B1) HB 1PC * FROM BOX 1 **HEADBOARD** LEFT FOOTBOARD LEG 1PC **COMPLETE** 203961F (B1) FB 1PC RIGHT FOOTBOARD LEG 1PC * FROM BOX 1 **FOOTBOARD COMPLETE** HARDWARE IDENTIFICATION Z - B2 (BOX 2) **Z - B1 (BOX 1)** 12PCS **BOLT** FLAT HEAD SCREW 8PCS LOCK WASHER 12PCS PHILIPS HEAD 1PC SCREW DRIVER 12PCS 3 FLAT WASHER WOOD PLUG 4PCS 5 ALLEN WRENCH 1PC **NOTE: MANUFACTURER DOES NOT PROVIDE ITEM 7**

BOX1


STEP 1


Align and fasten headboard legs to headboard panel using bolt, lock washer and flat washer and tighten with Allen wrench. Insert wood plug into the legs.

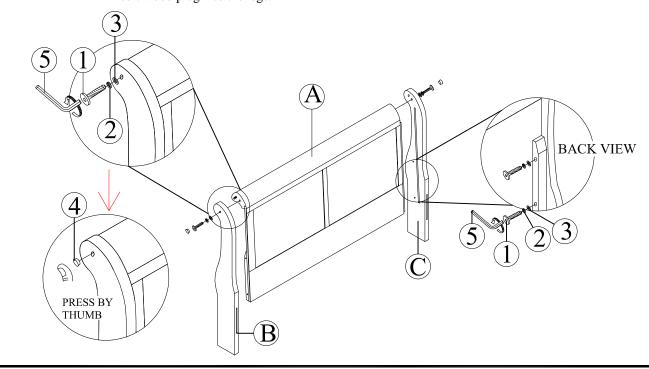

STEP 2


Align and fasten footboard legs to footboard panel using bolt, lock washer and flat washer and tighten with Allen wrench. Insert wood plug into the legs.

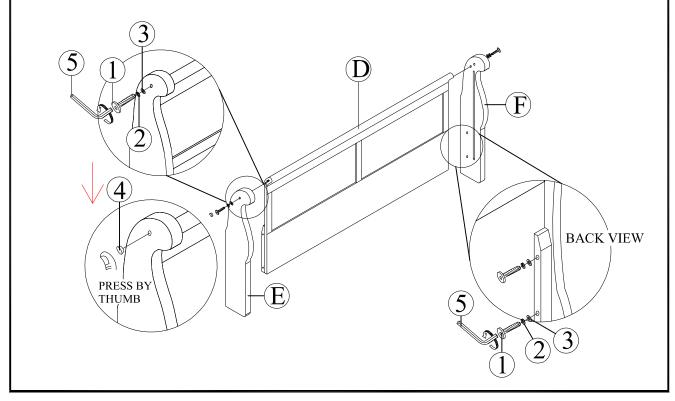

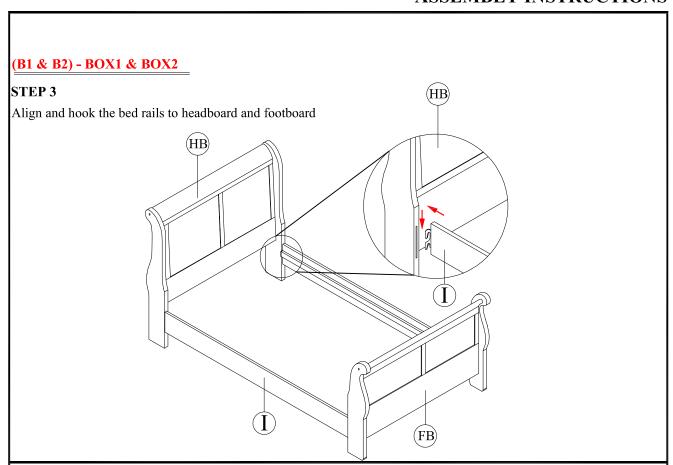

STEP 4

Align and fasten bed slats support to bed slat by turning the bed slat support counter clockwise until tight. Align and fasten bed slat to bed rails using screws and tighten with screw driver (not included).

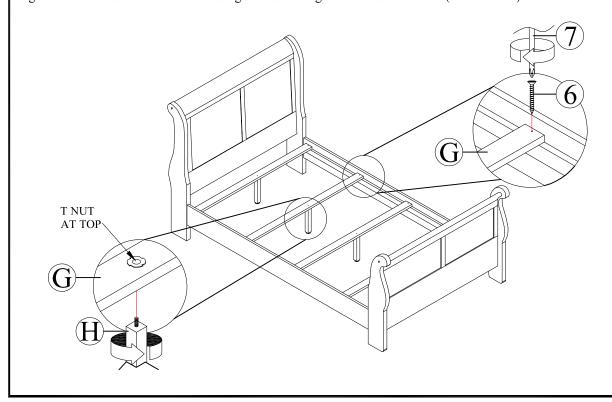

PAGE 4 OF 4