

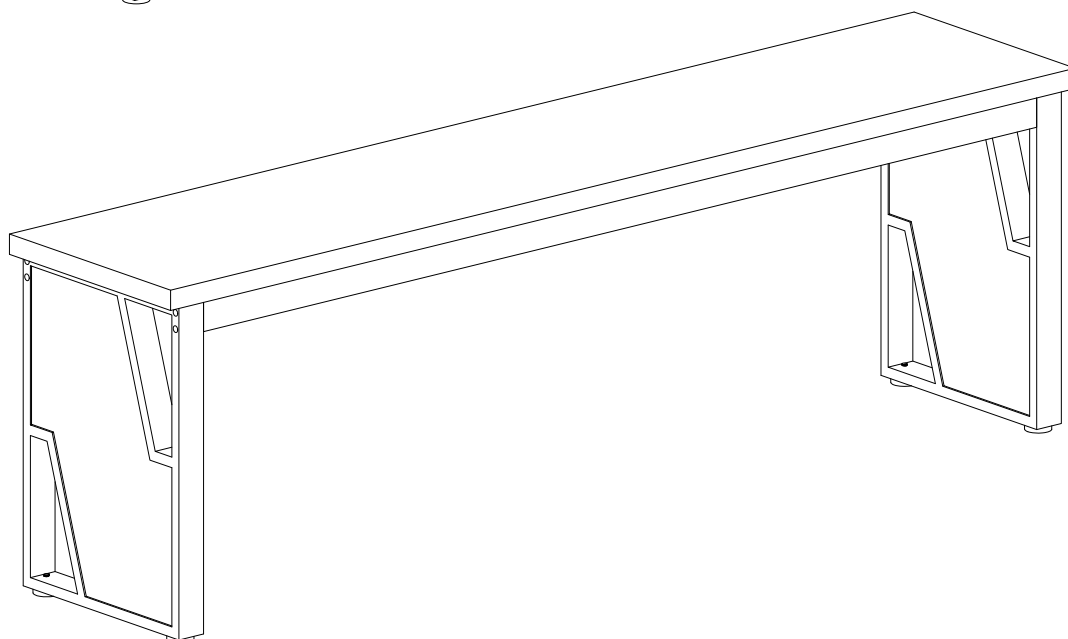
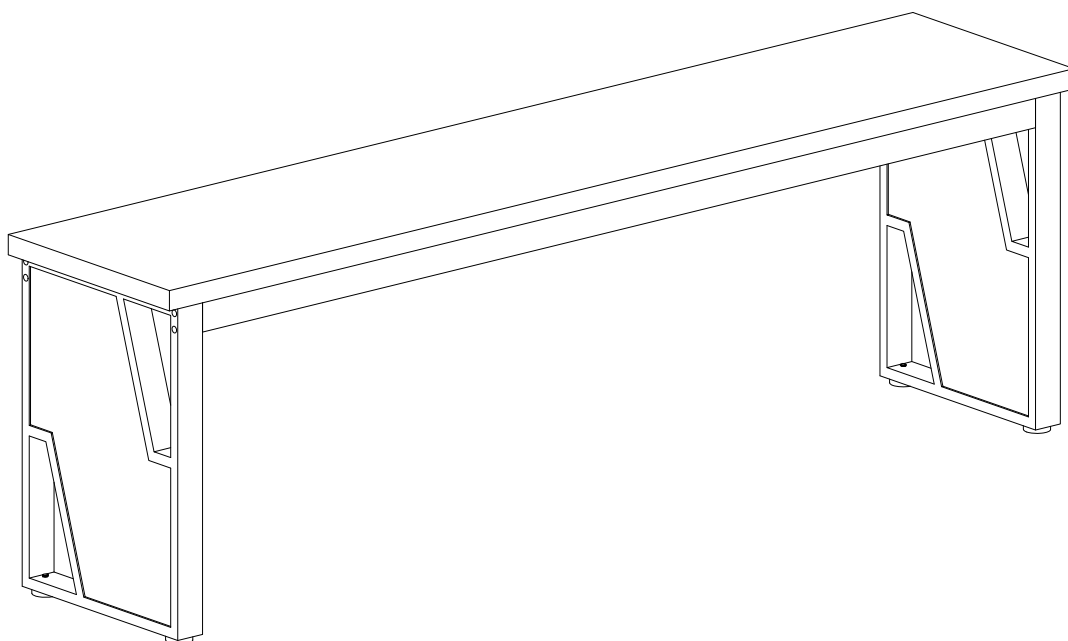




ASSEMBLY INSTRUCTION

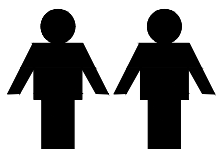


Notes: Don't fully tighten screws until all parts are confirmed in place to avoid misalignment.

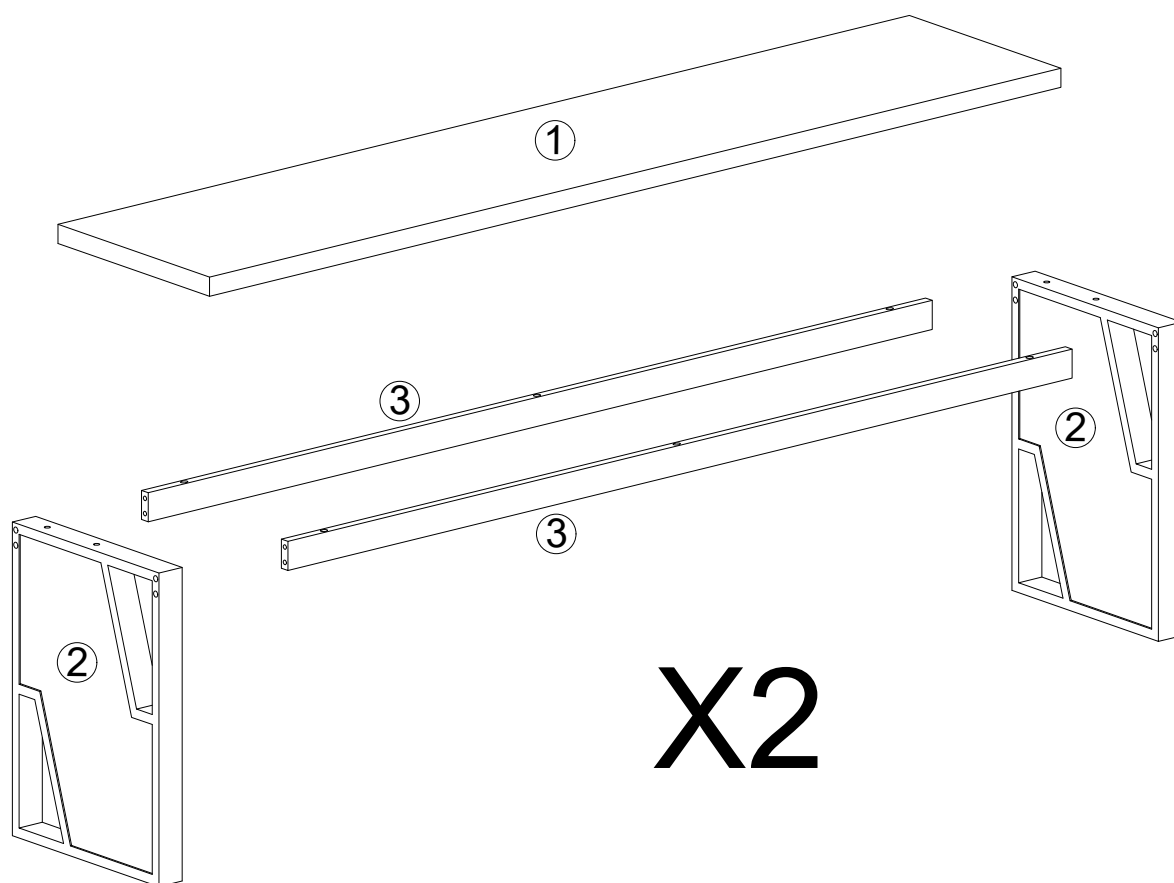

X2


A	X12	B	X16	C	X1	D	X8
							
M6X52mm		M6X60mm		M4X55mm		M6XØ30mm	

STEP 1

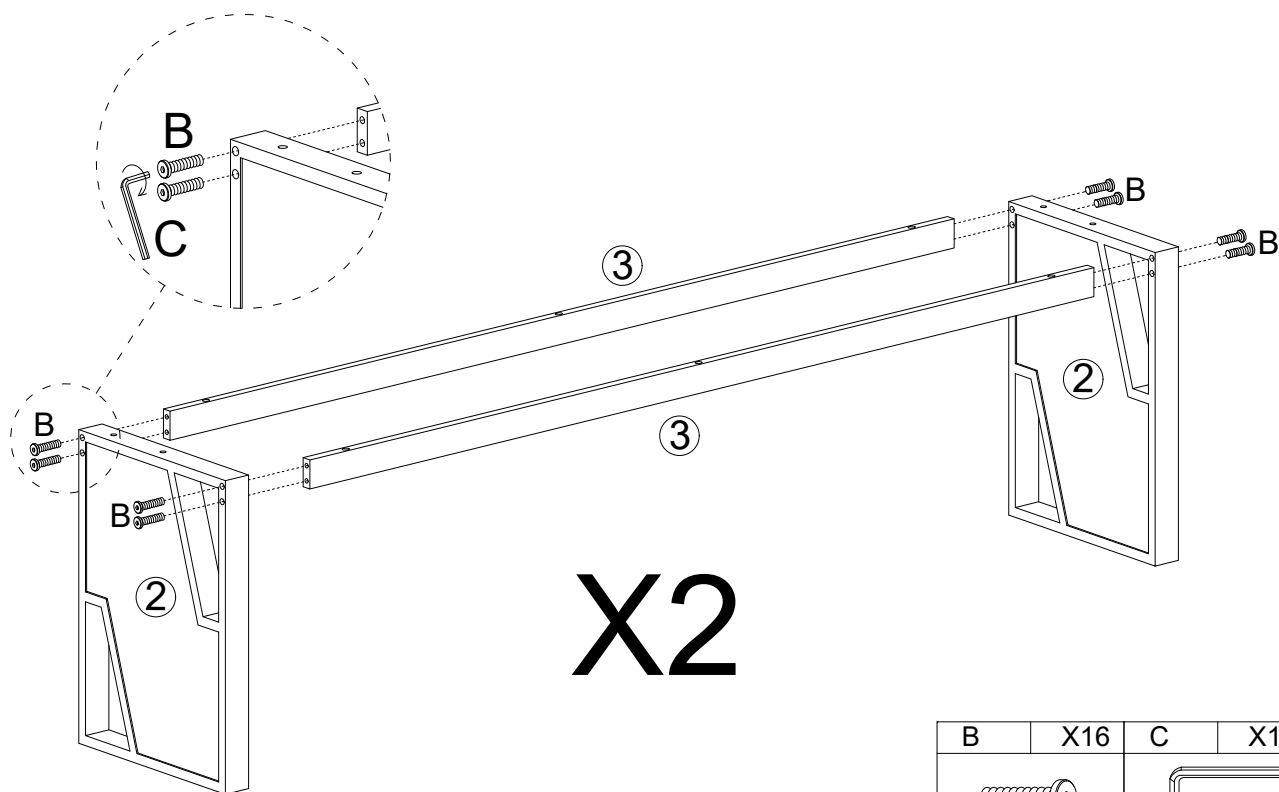


B	X16	C	X1
			
M6X60mm		M4X55mm	

STEP 2

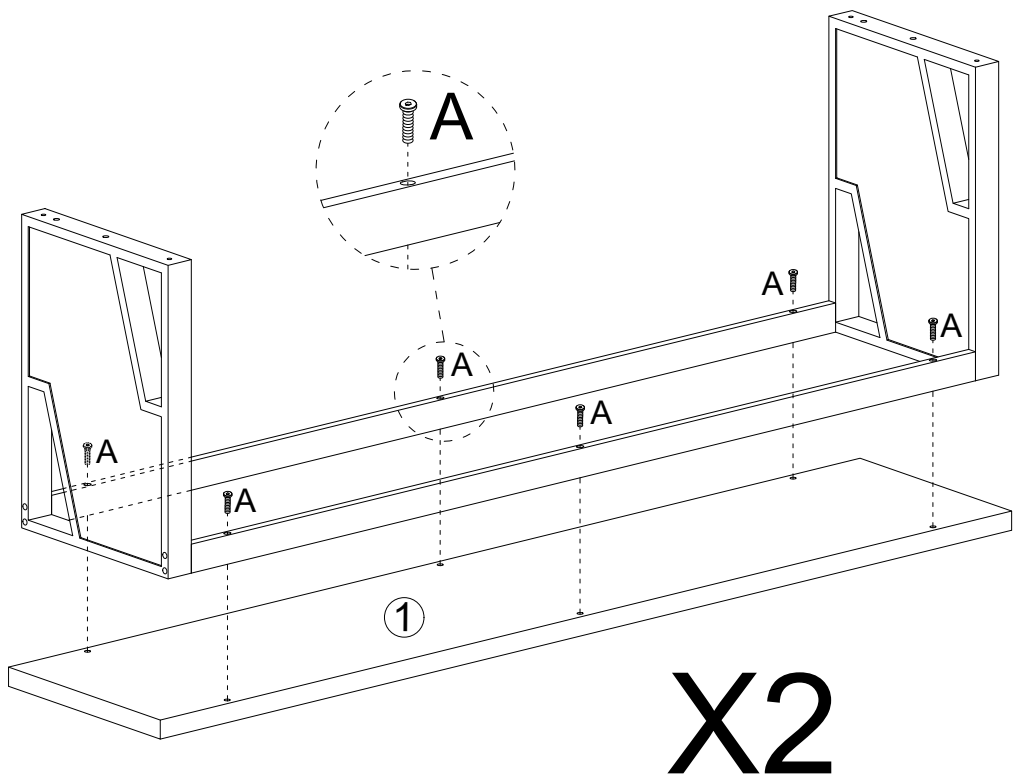

A	X12
	
M6X52mm	

STEP 3

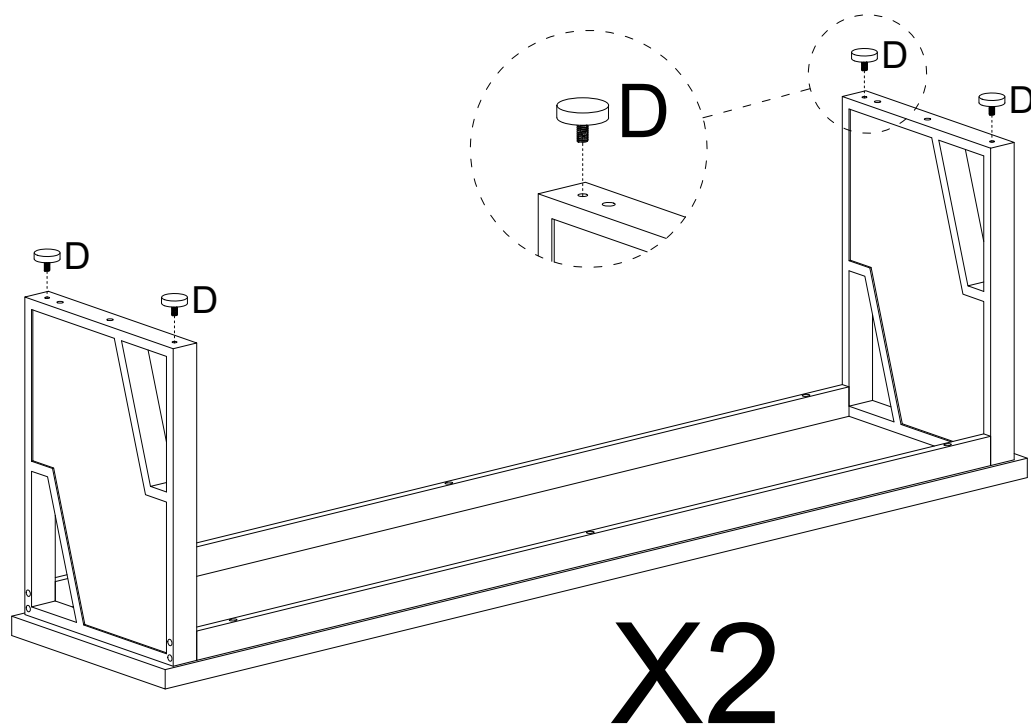

D	X8
M6XØ30mm	

STEP 4

