

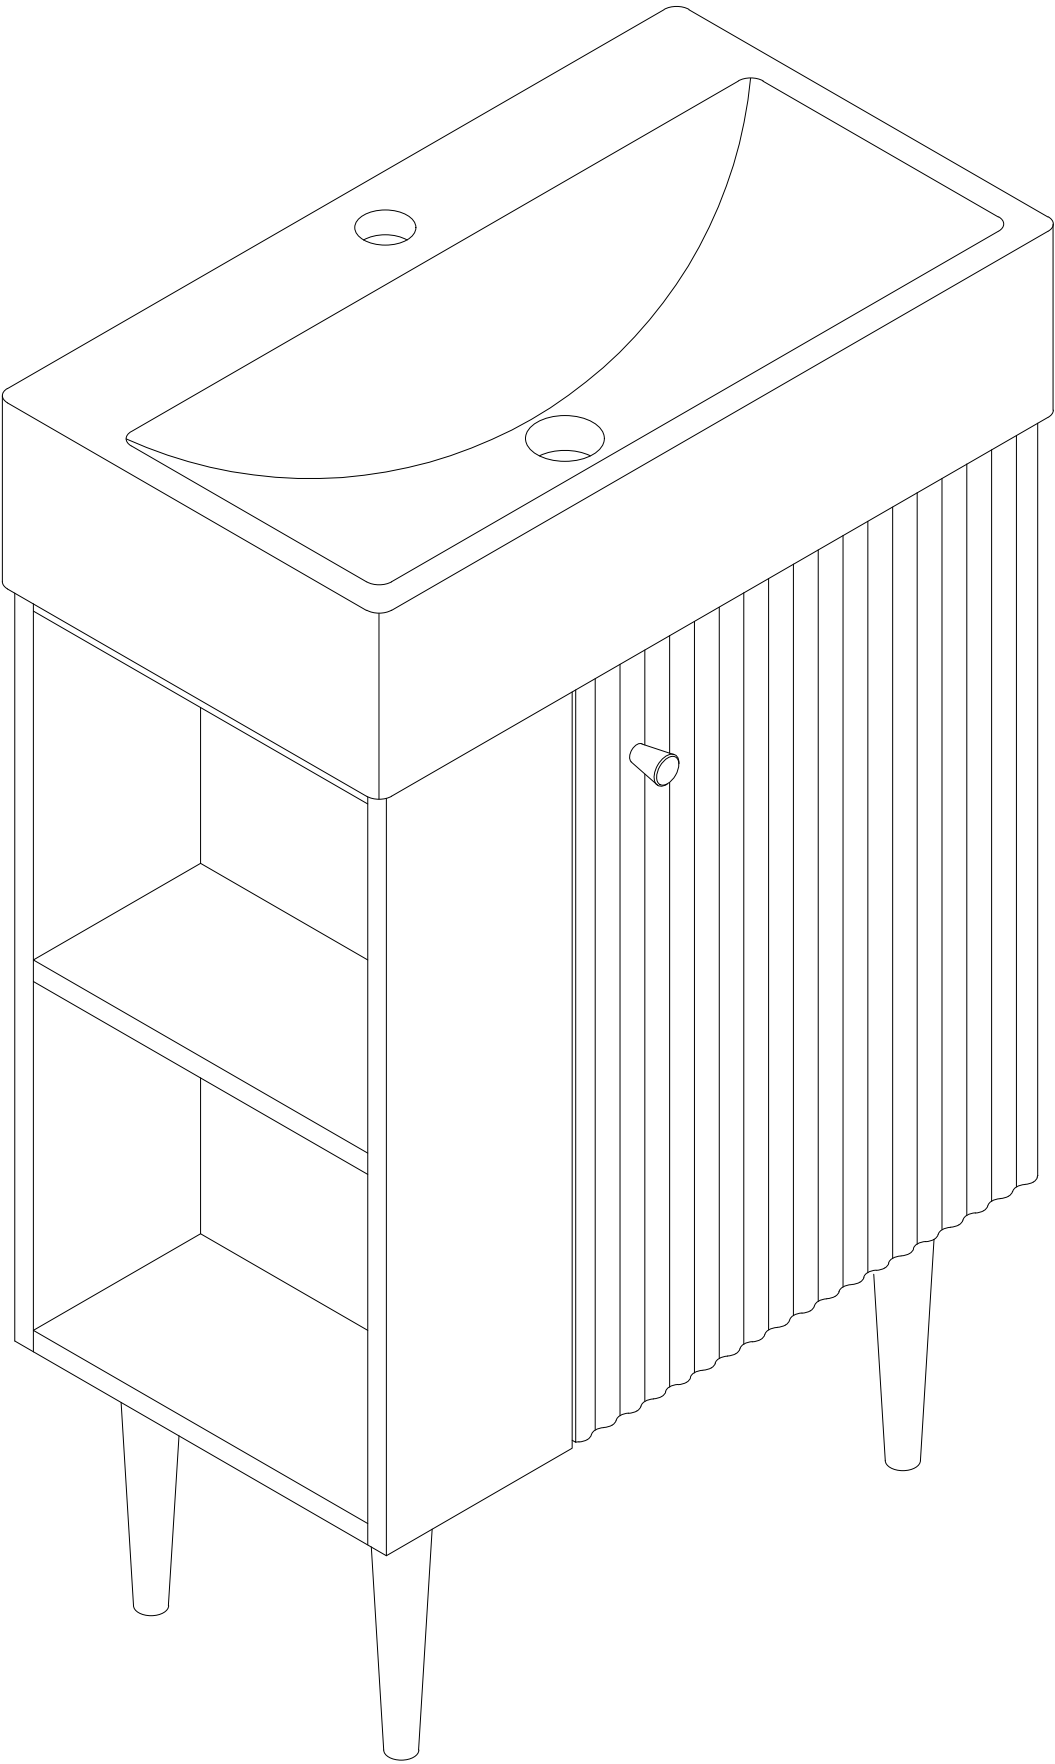
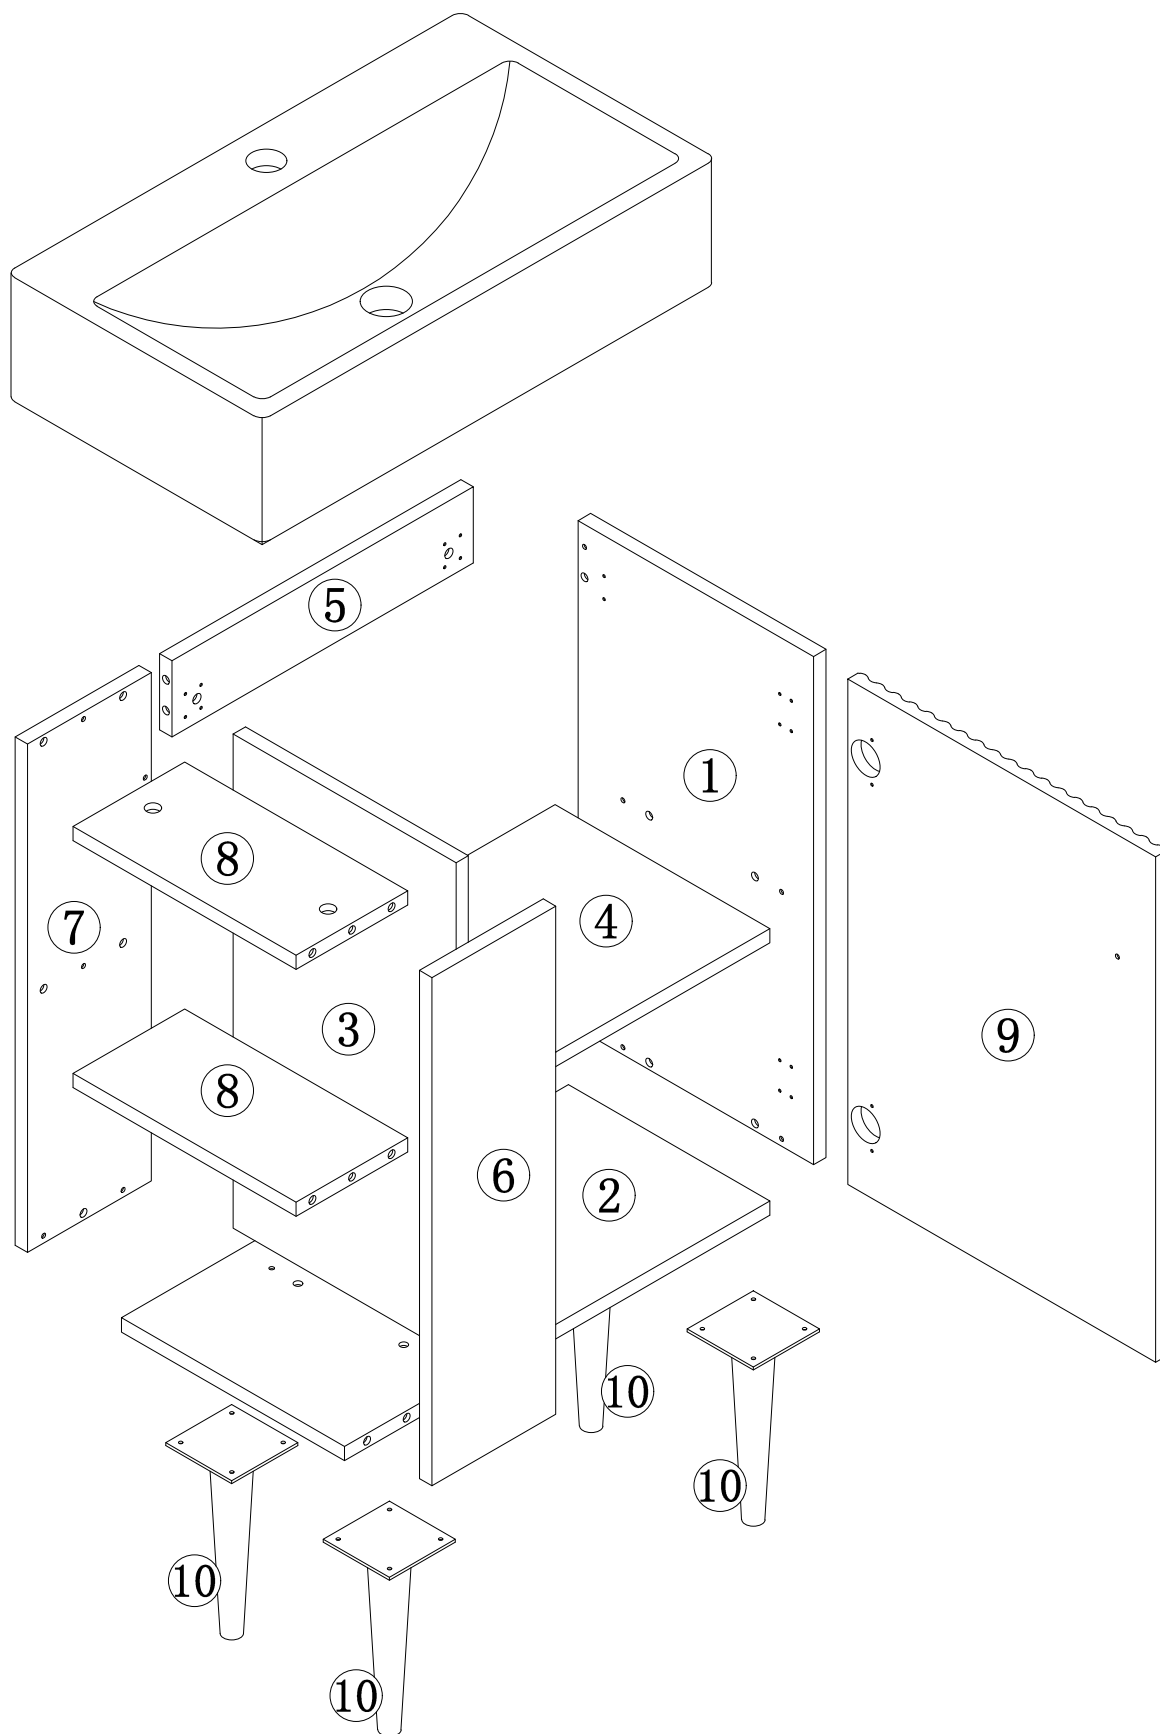
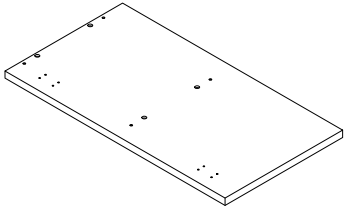
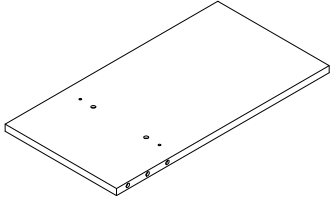
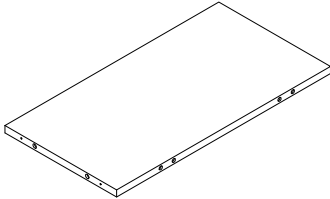
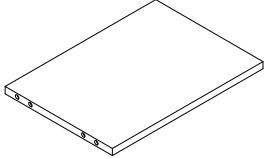
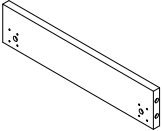
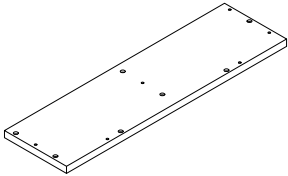
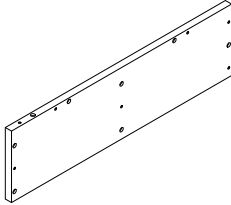




ASSEMBLY INSTRUCTION






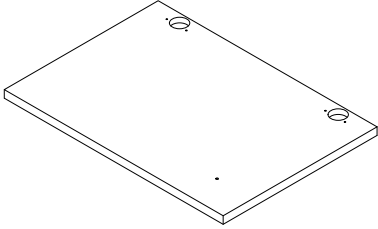






			
① x1	② x1	③ x1	④ x1
			
⑤ x1	⑥ x1	⑦ x1	⑧ x2
			
⑨ x1	⑩ x4		









TOOLS

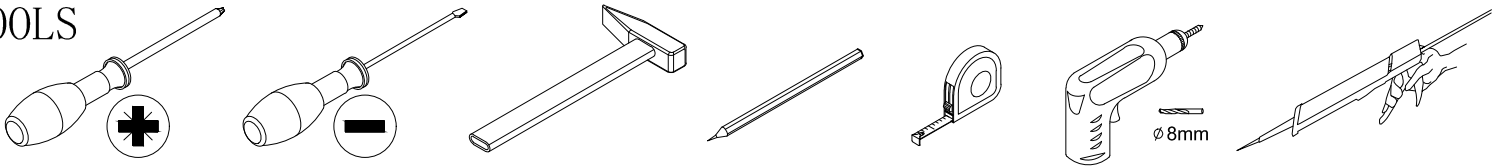

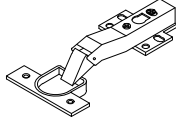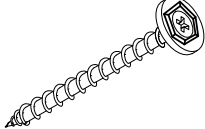
A * 16	B * 16	C * 24	D * 12	E * 28
 M6 X 35mm	 Ø15 x 12mm	 Ø8 x 30mm	 M4 x 14mm	 M4 x 14mm
F * 6	G * 1	H * 1	I * 2	J * 2
 M5 x 40mm	 M4 x 20mm			 Ø35
K * 2	L * 2	M * 2		
 Ø8 x 40mm	 Ø20	 M6 x 60mm		




Setp 1



A * 16	E * 4	J * 2
		
M6 X 35mm	M4 x 14mm	Ø35

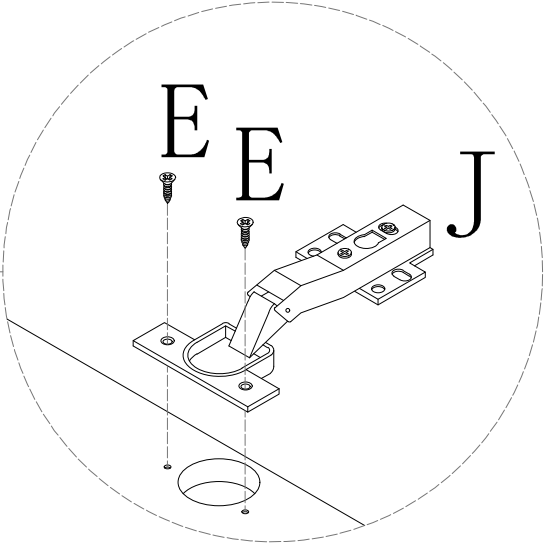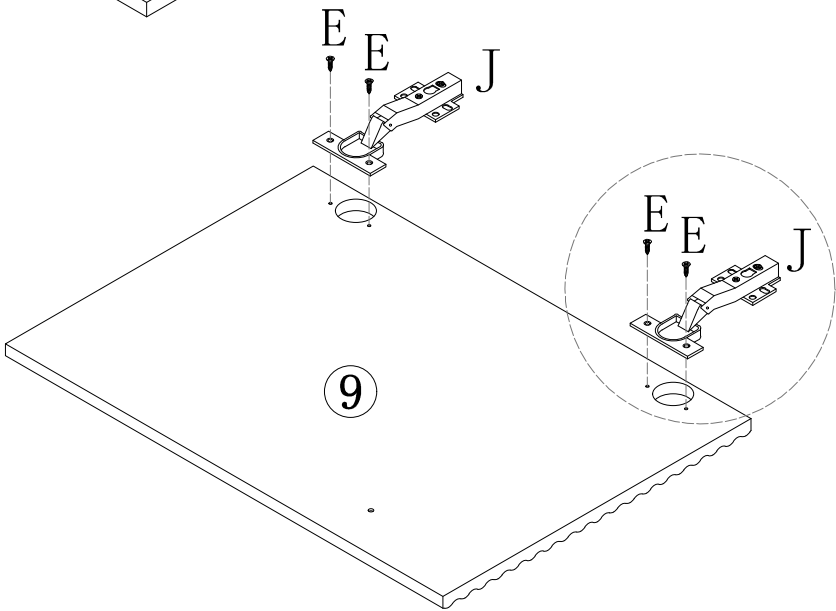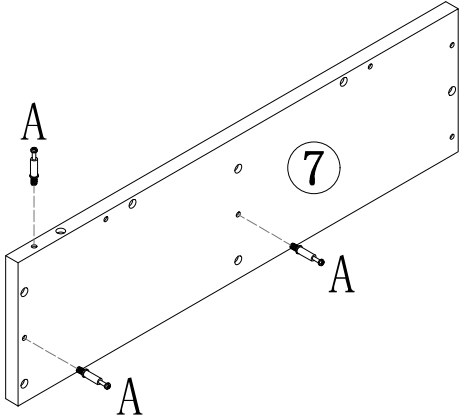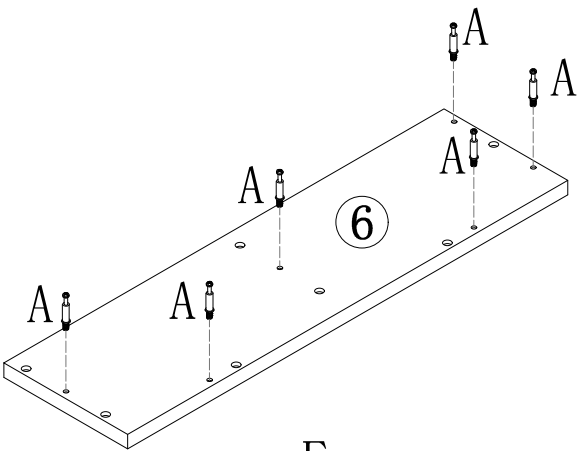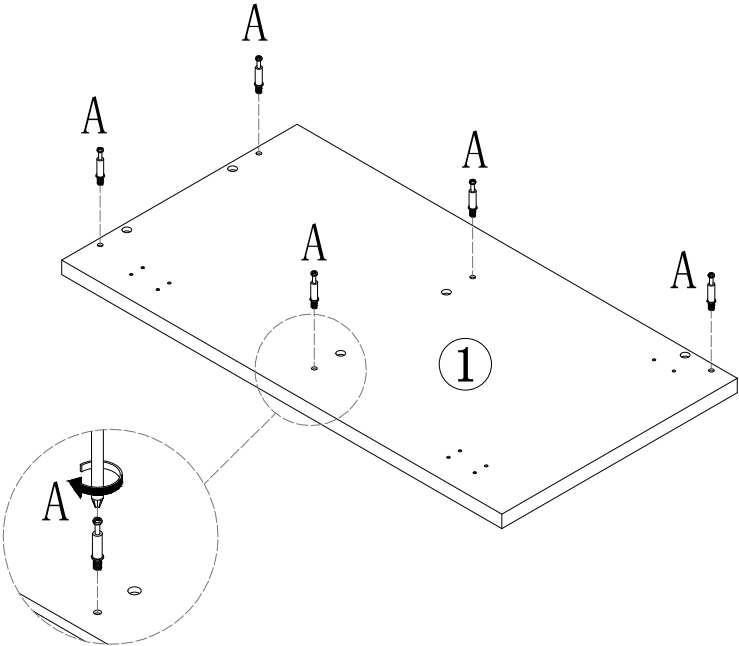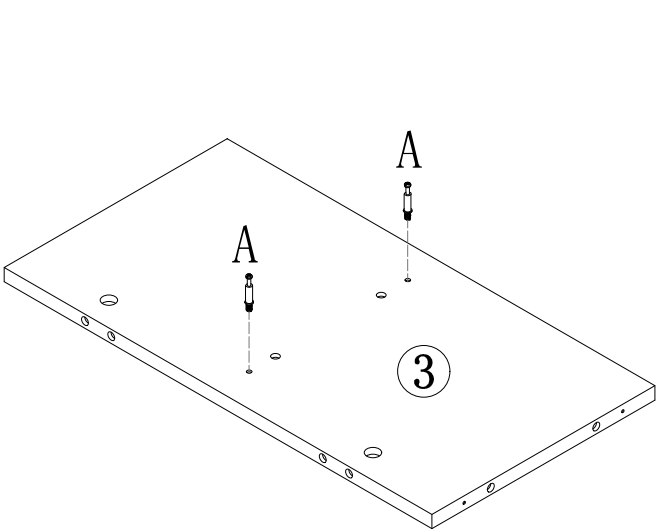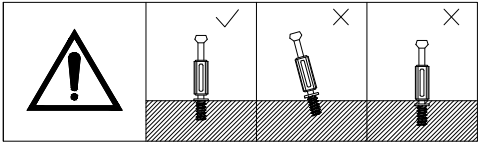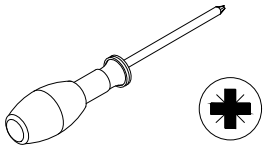

Setp 2








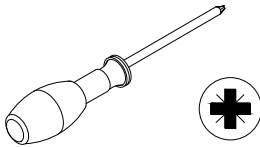
C * 5	F * 6	
 Ø8 X 30mm	 M5 X 40mm	



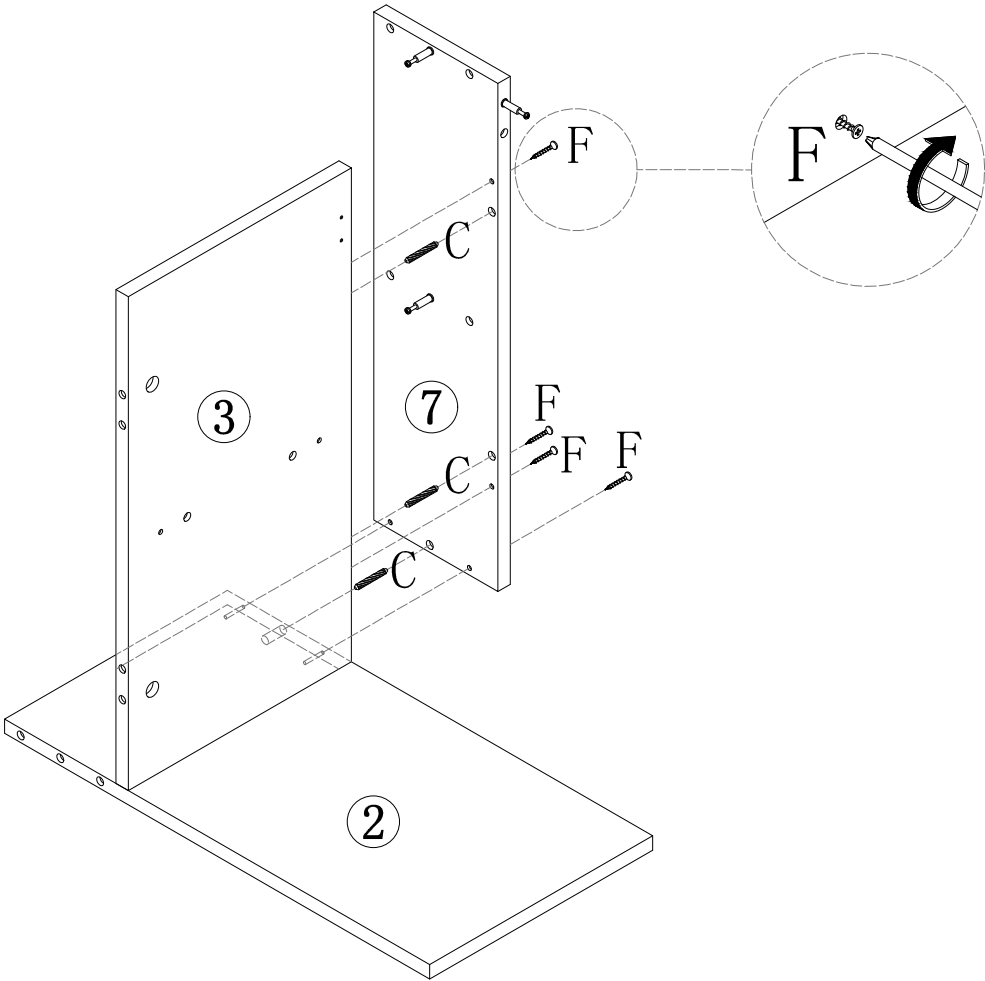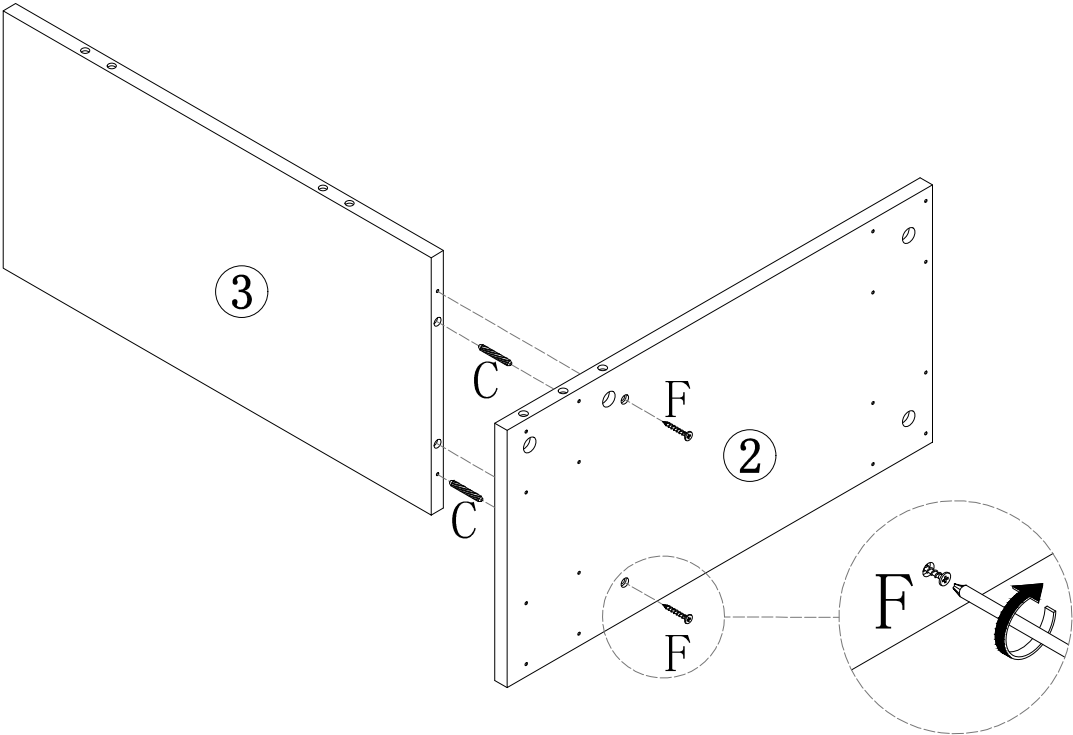







Setp 3




B * 11	C * 14
	
Ø15 x 12mm	Ø8 x 30mm

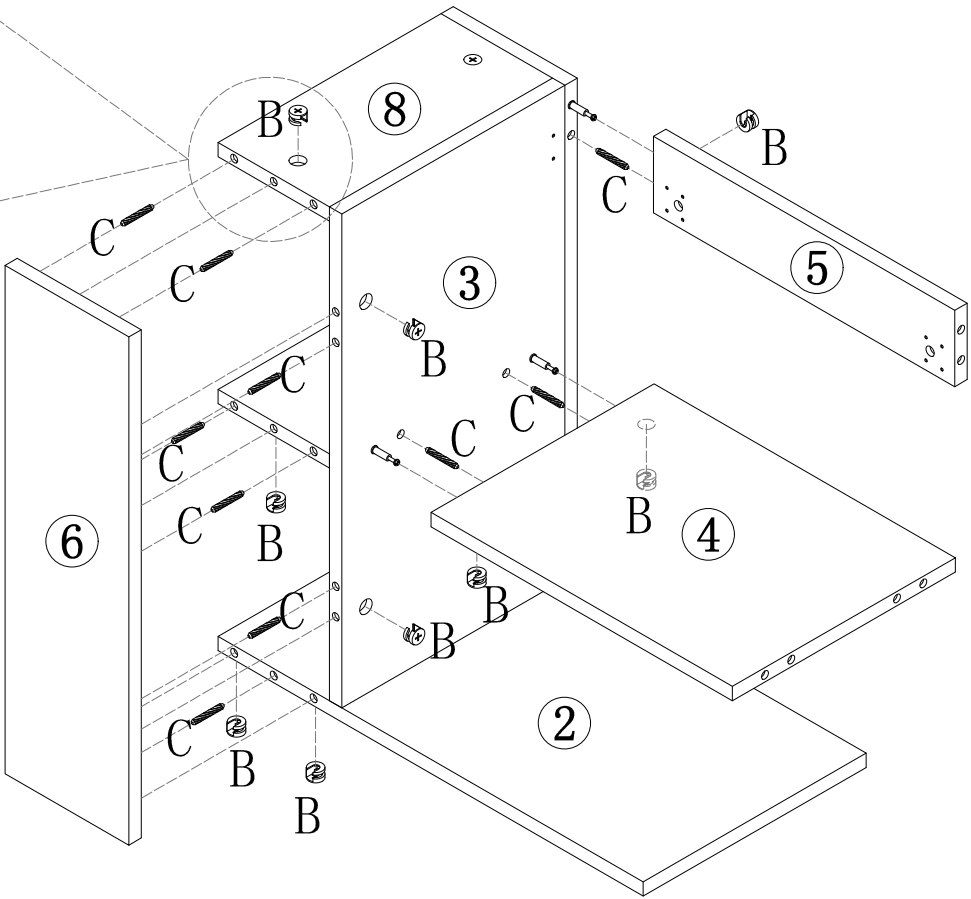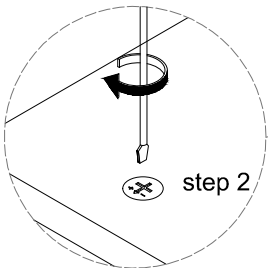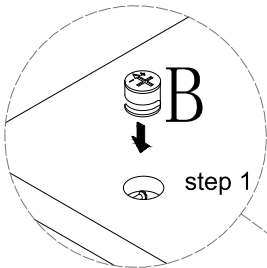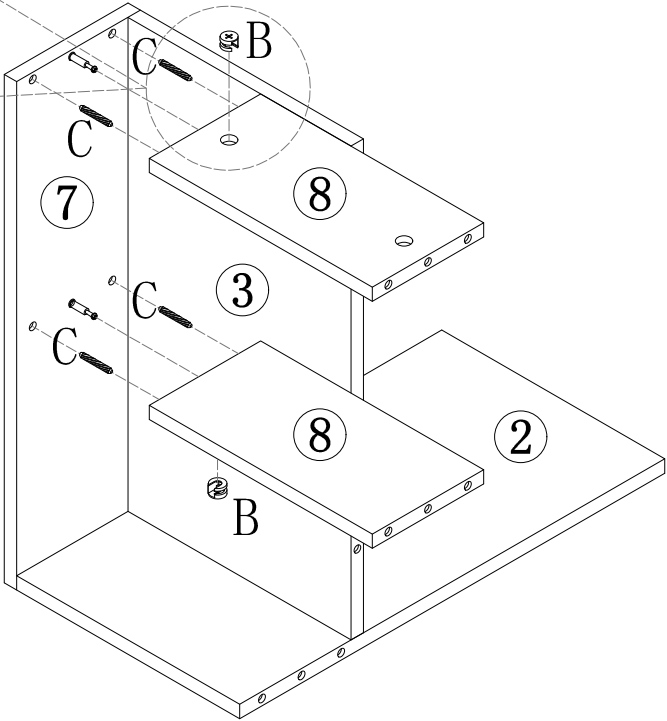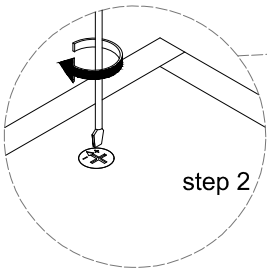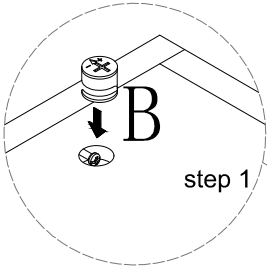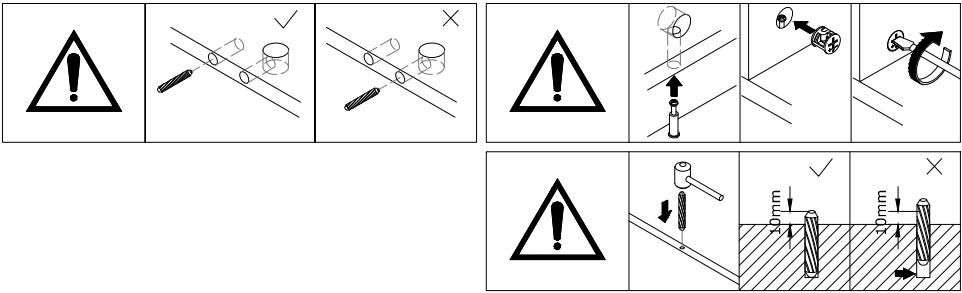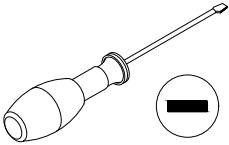


Setp 4

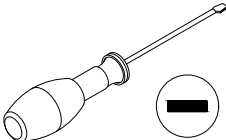B * 5	C * 5	
 Ø15 x 12mm	 Ø8 x 30mm	

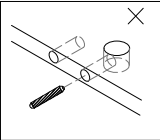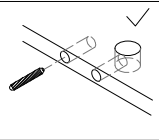




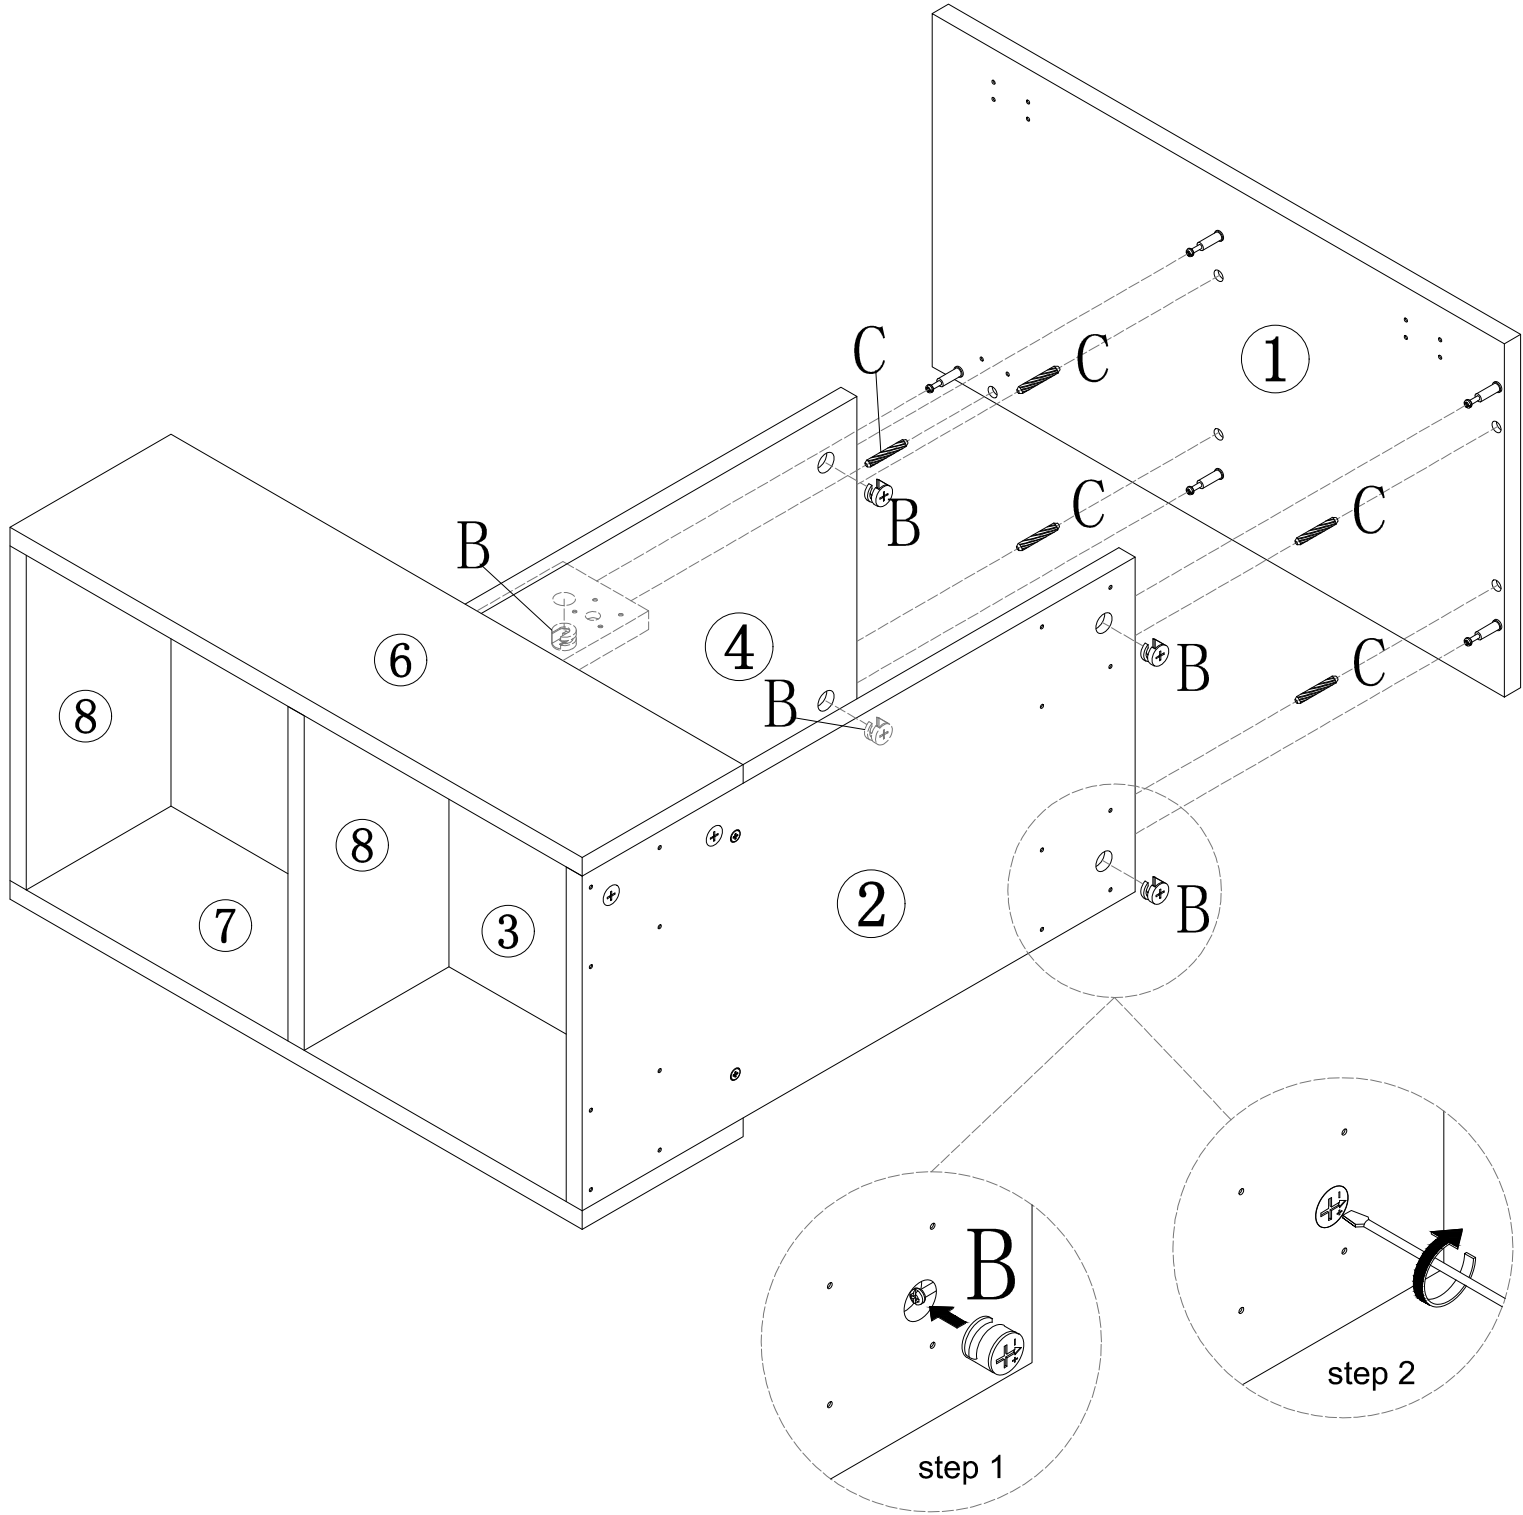


Setp 5


E * 16




M4 x 14mm

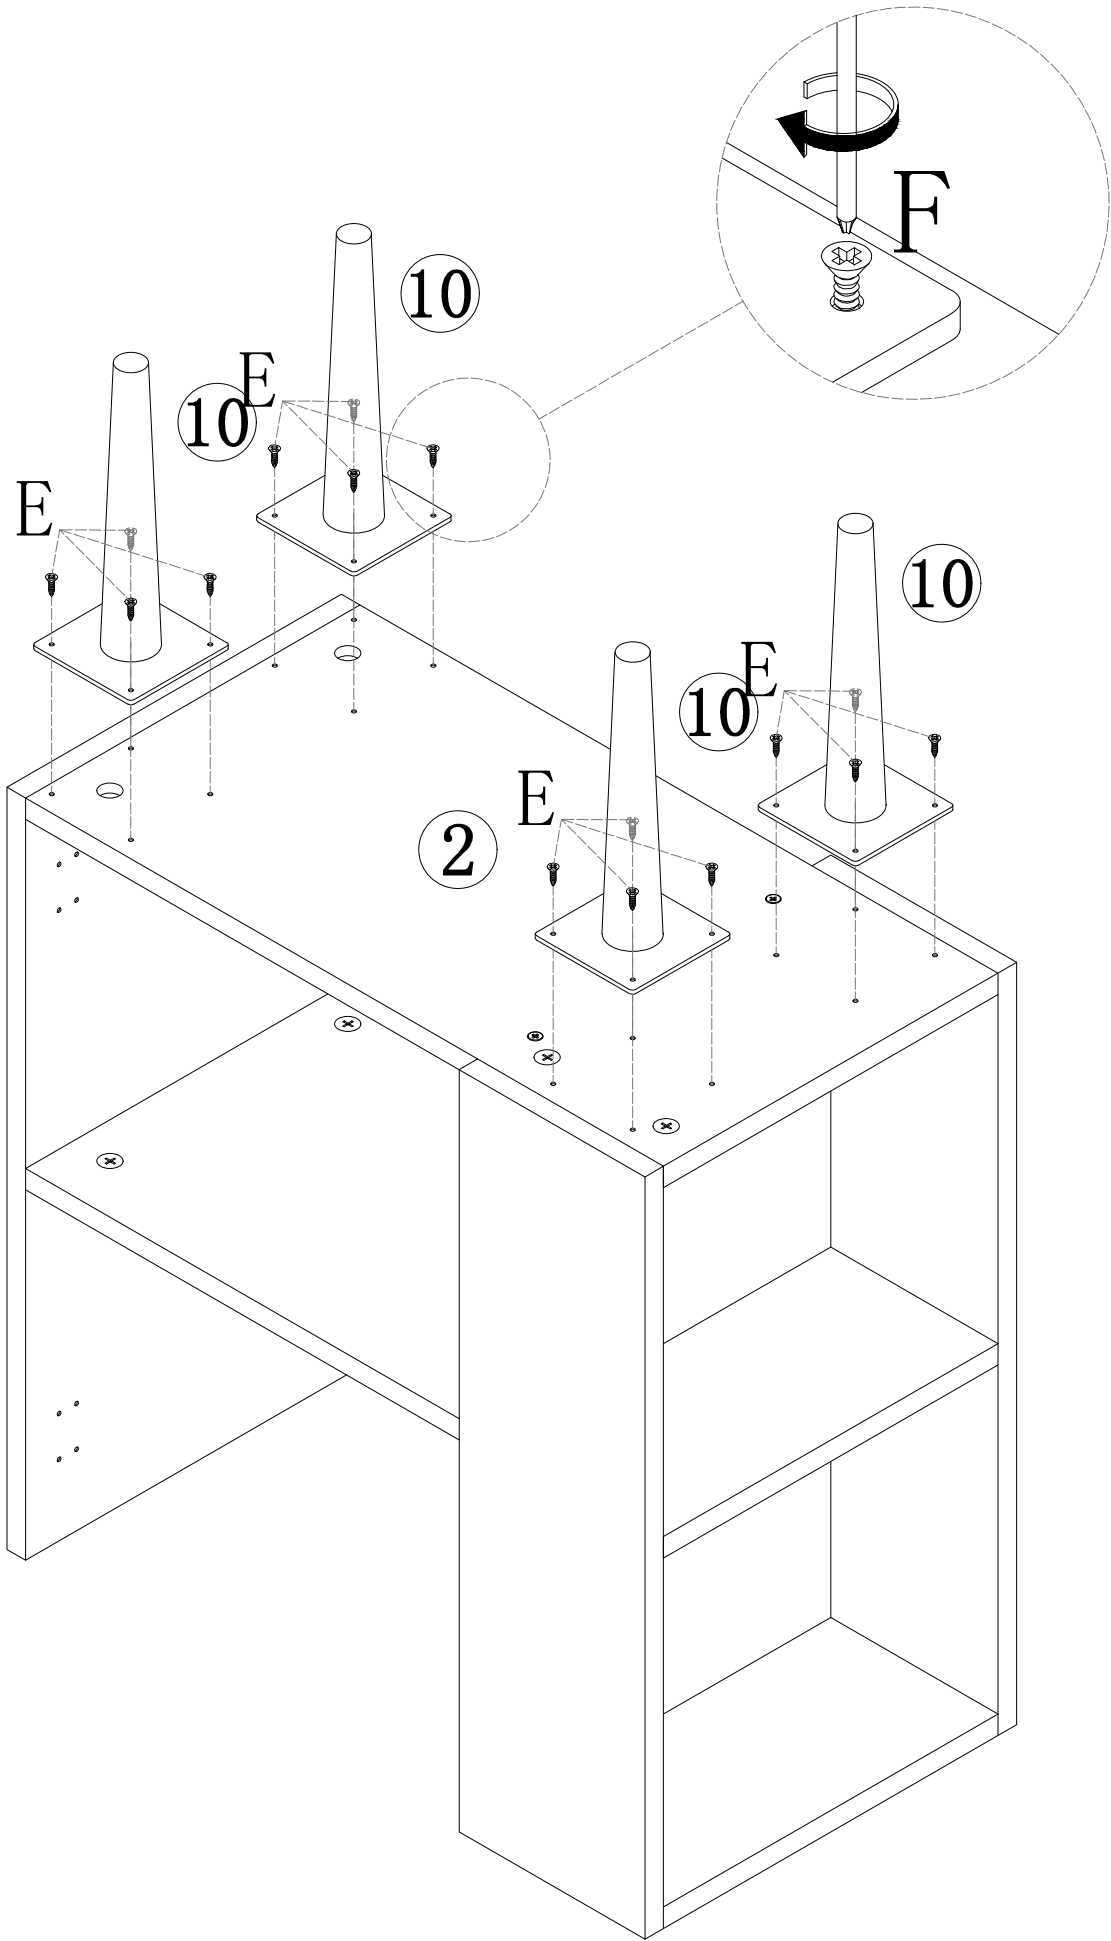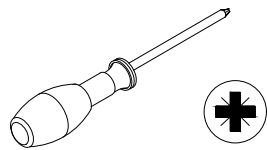


Setp 6

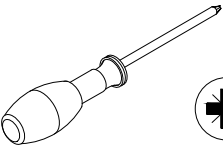
D * 12	I * 2	 
 M4 x 14mm		

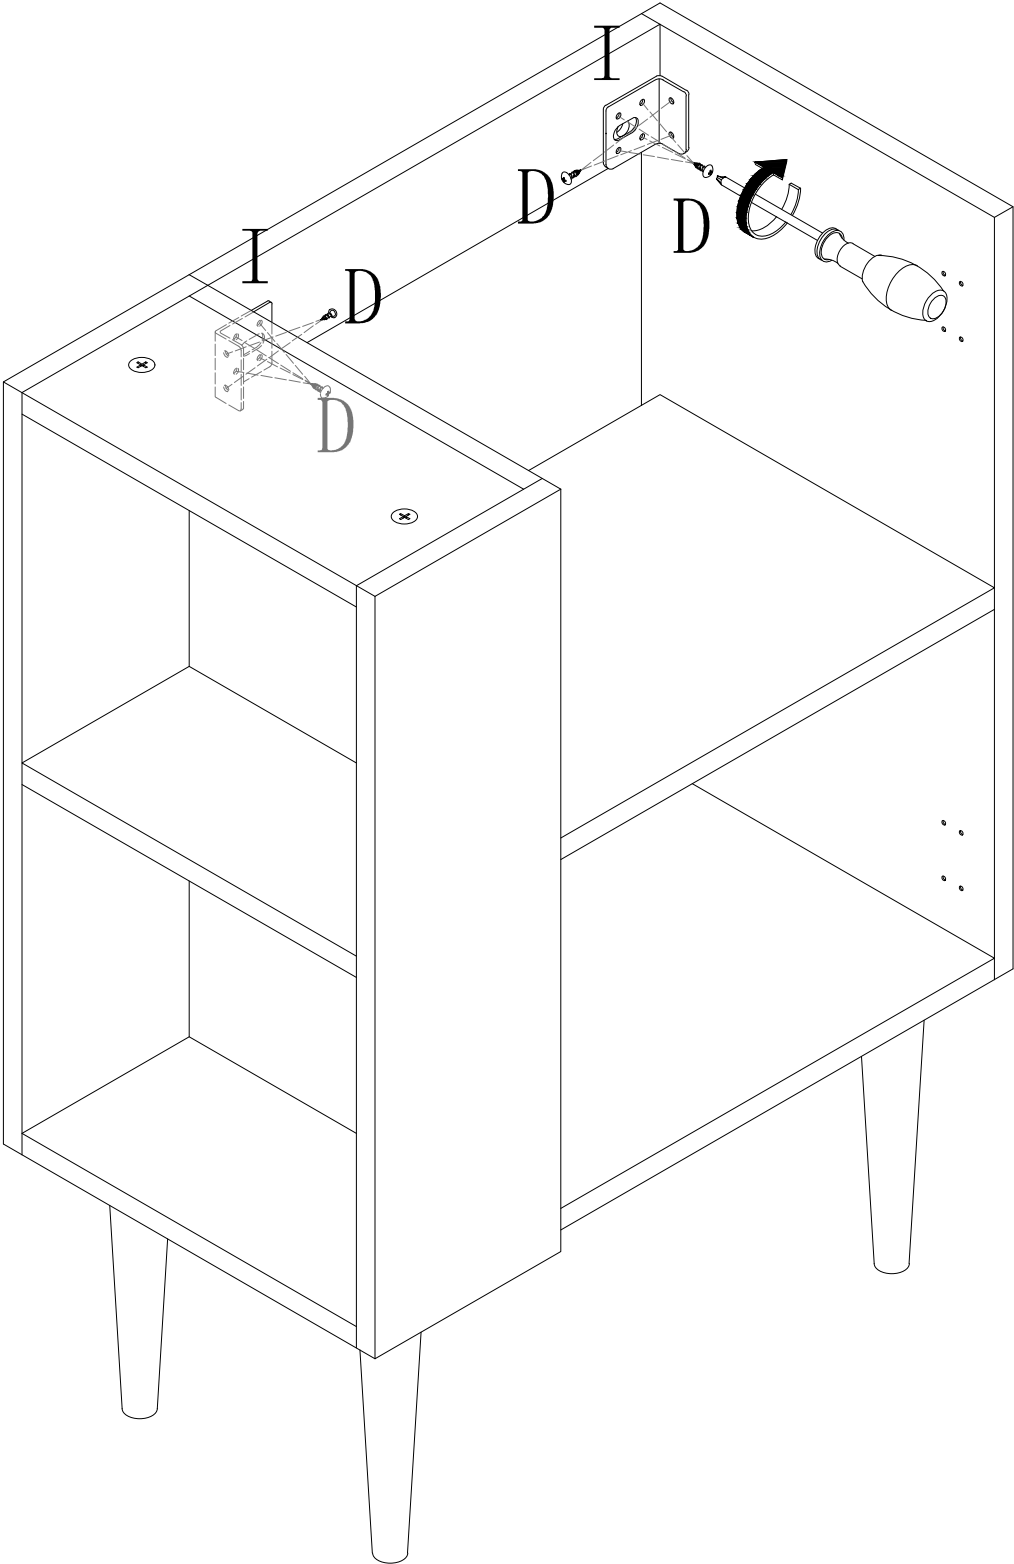

Setp 7


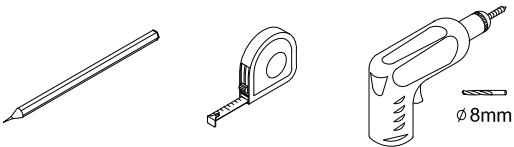


Wall

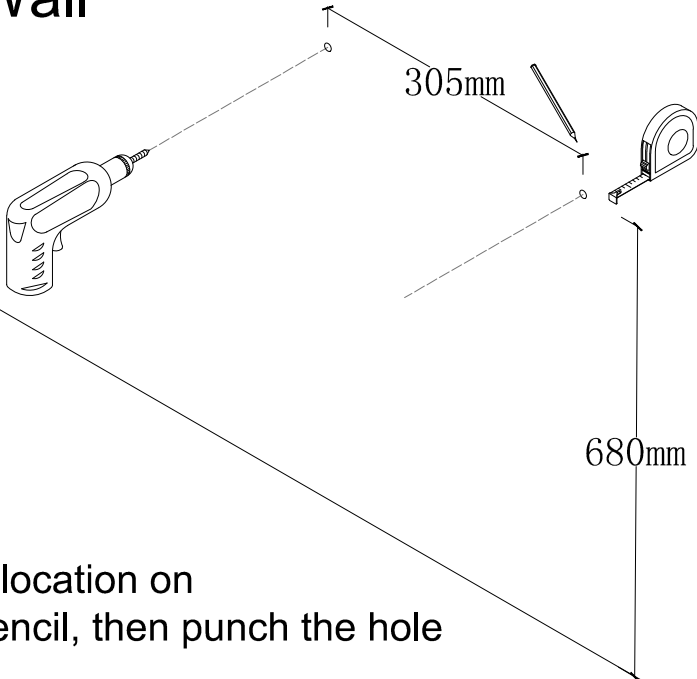


Please mark the location on the wall with a pencil, then punch the hole


Setp 8

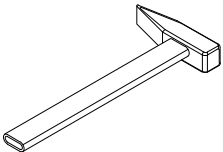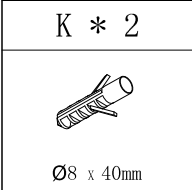



Wall

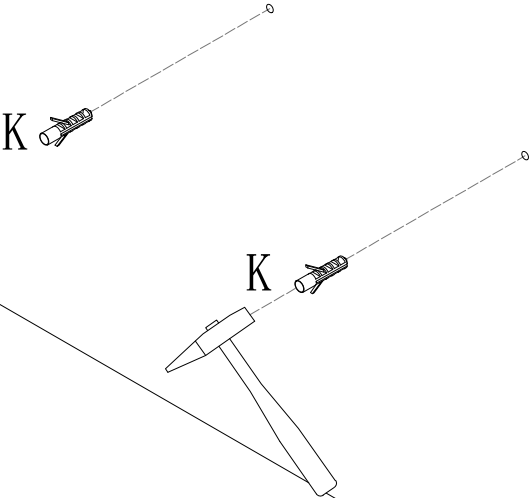


Setp 9

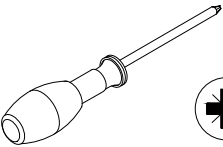
L * 2	M * 2	 
 Ø16	 M6 x 60mm	

Wall

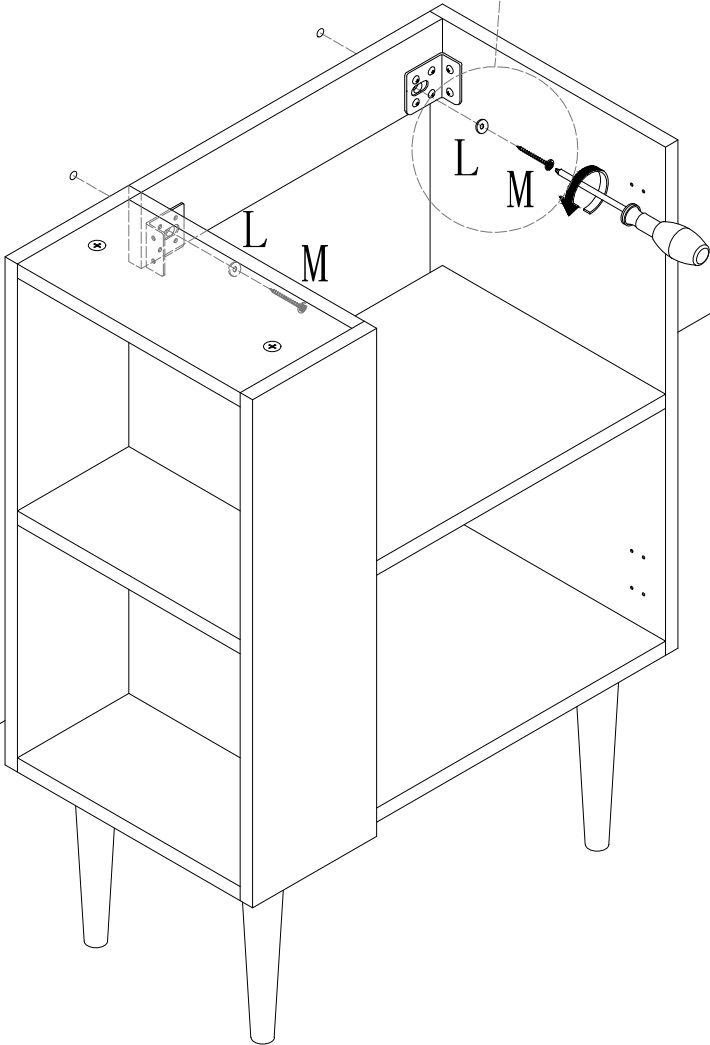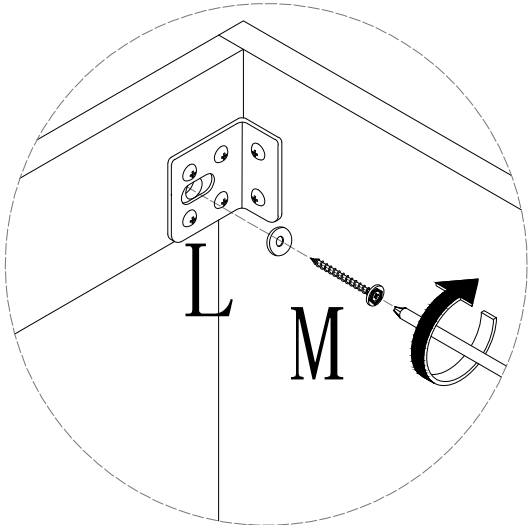


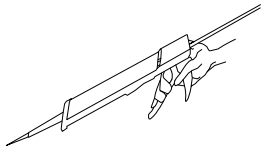


Wall

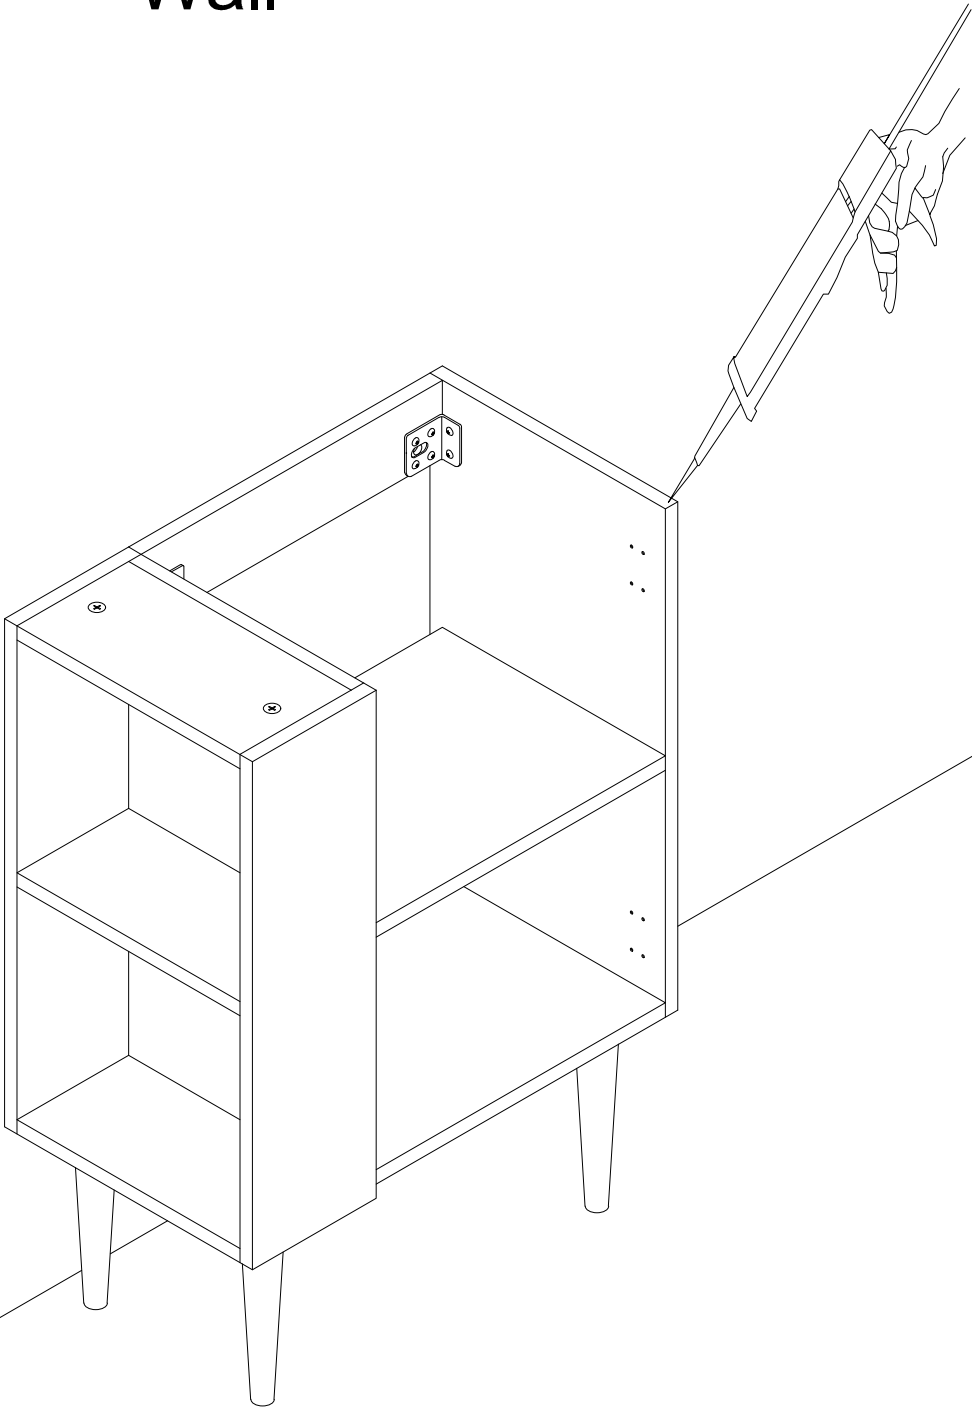




Setp 11

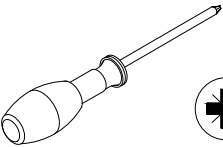E * 8	G * 1	H * 1	 
 M4 x 14mm	 M4 x 20mm		

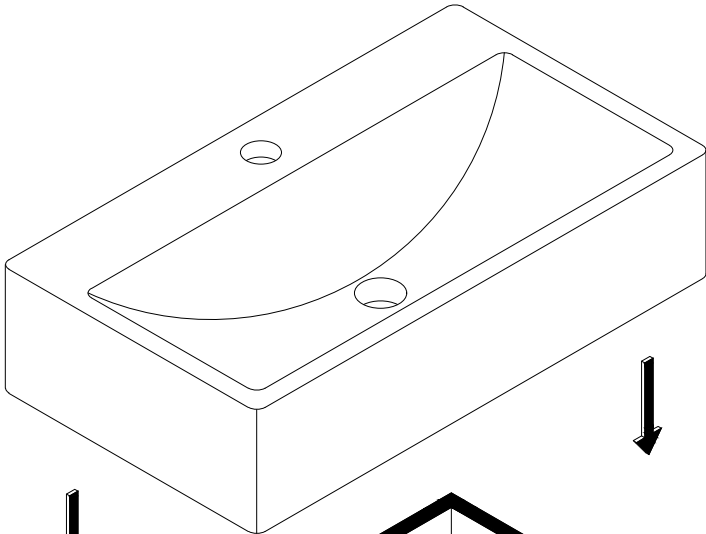


Wall

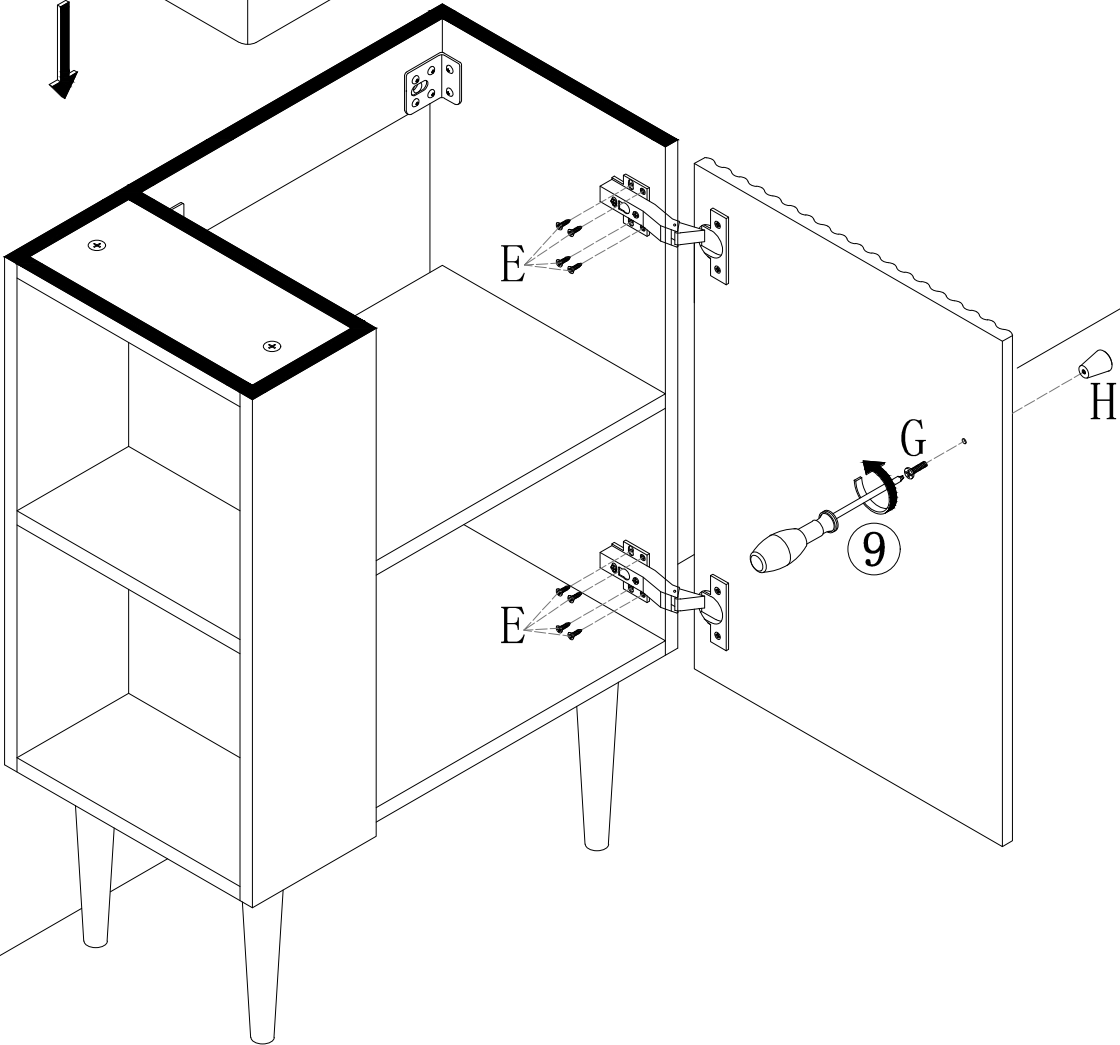

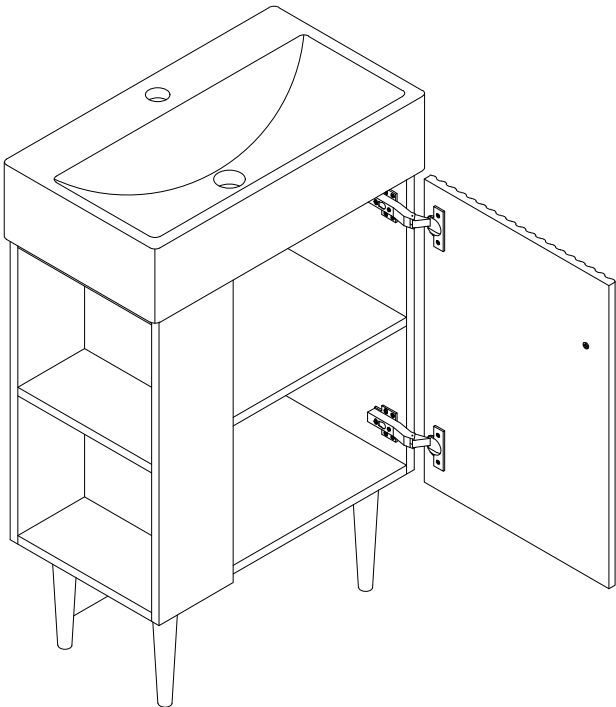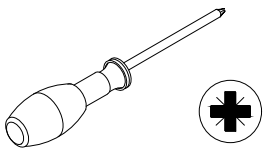


Adjust door following the direction.


Adjust the door up and down to match the cabinet.

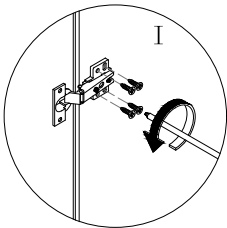

I:loosen the screw.

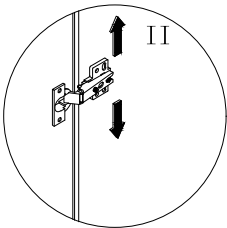

II:Adjust the upper and lower position.

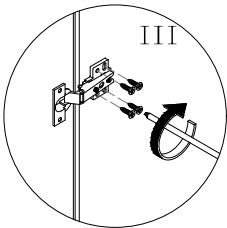


II:tighten the screw.




When the door position is not standard,please adjust the door according to the right picture.

Adjust the door left and right to match the cabinet for suitable crack of the door

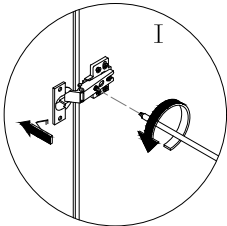

I:loosen the screw to keep hinge apply force toward the direction of arrow.

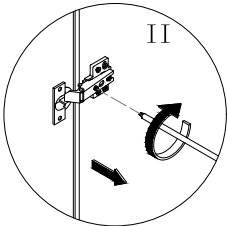


II:tighten the screw to keep hinge apply force toward the direction of arrow.




Please place the cabinet on the flat floor before adjustment.

Adjust the door backwards and forwards to match the cabinet.

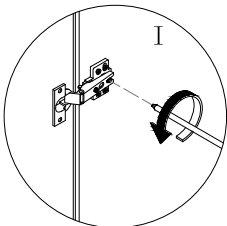

I:loosen the screw.

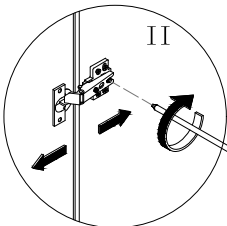

II:Adjust the distance between front and back.

Setp 13

