


Bathroom cabinet

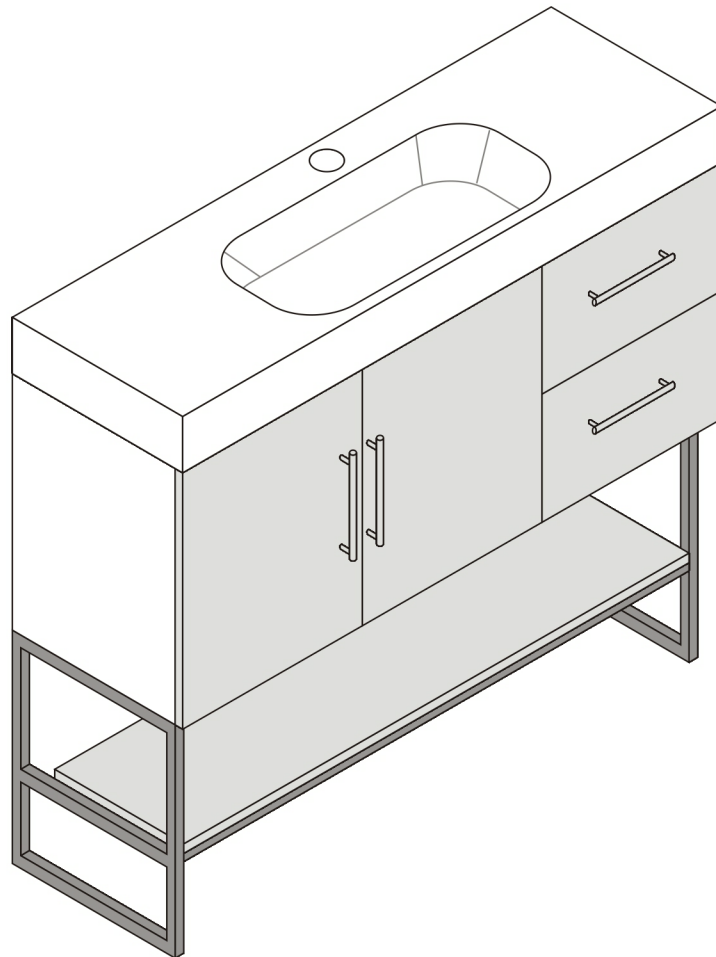


2 Persons


L876*W440*H738MM

Installation Instructions


Notes: Don't tighten screws completely at first, just in case parts were assembled wrongly and need disassemble. Tighten screws at last when all parts are put together.

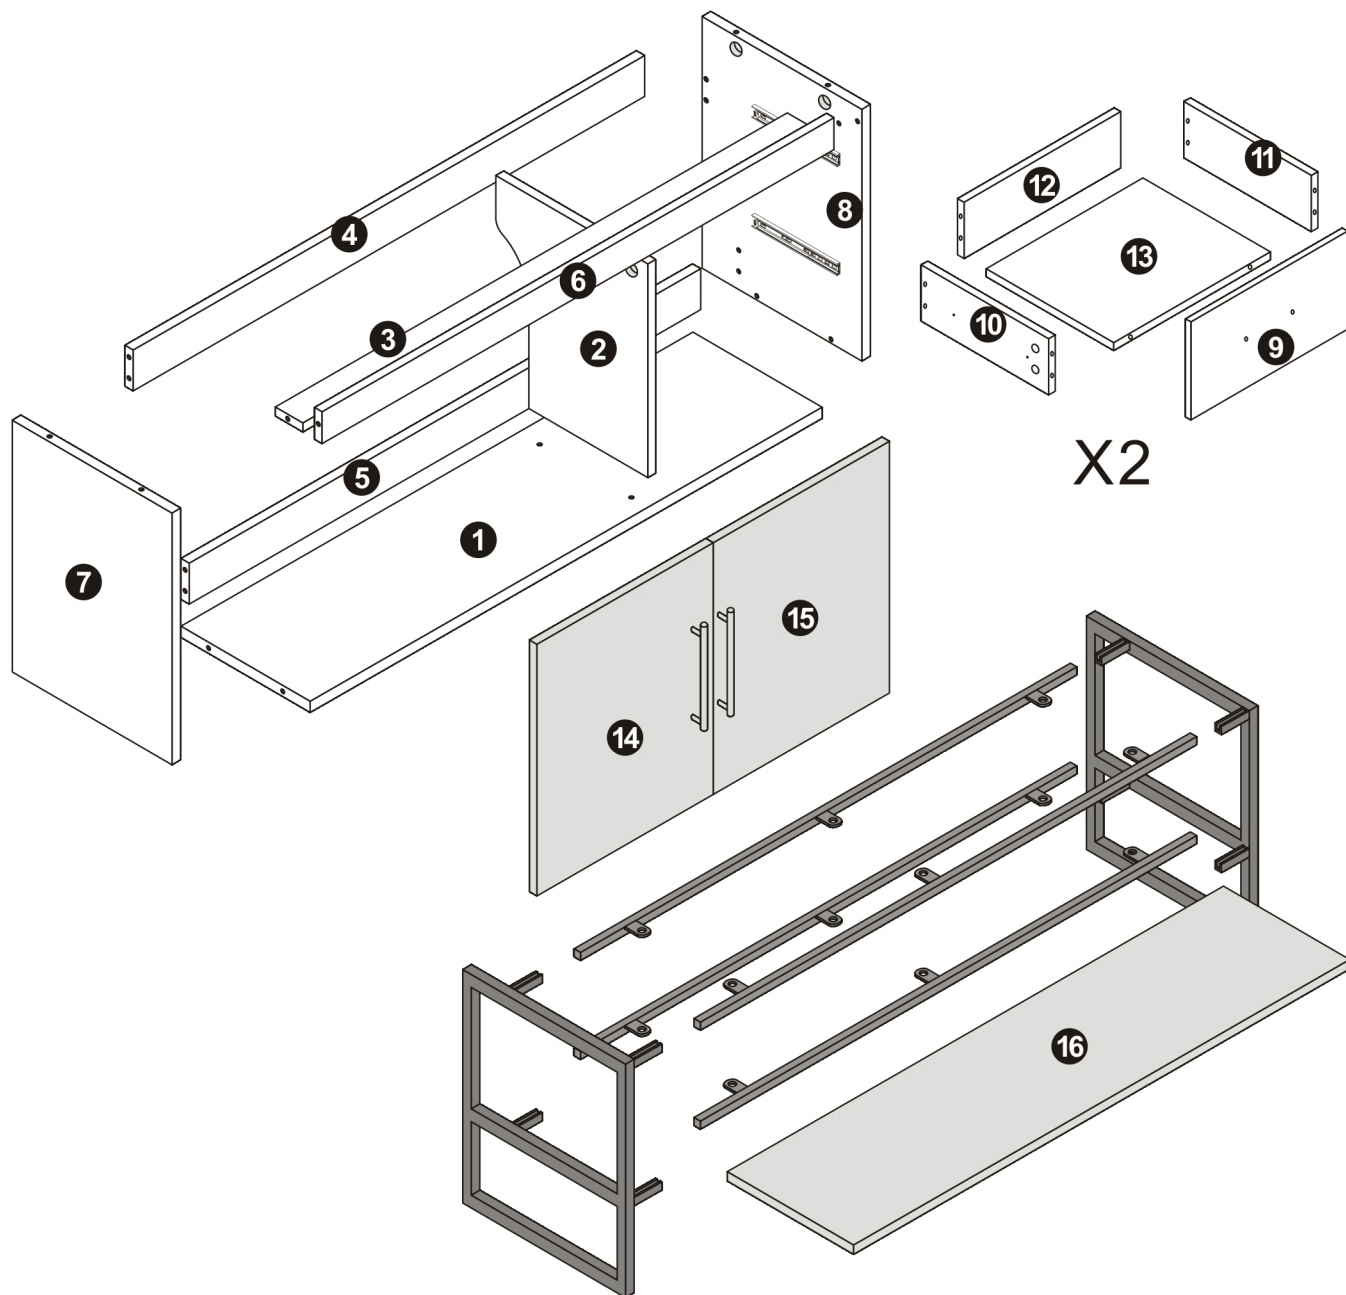


Disassembly and installation of accessories

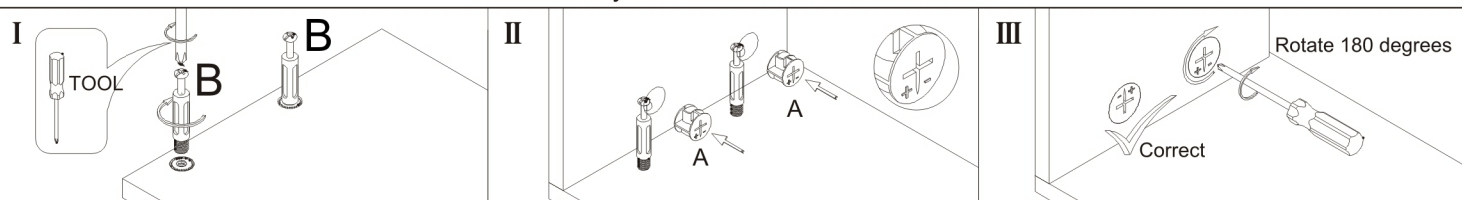

A 37PCS  15*10mm	B 37PCS  6*28mm	C 52PCS  3.5*14mm	D 20PCS  3.5*35mm	E 8PCS  4*20	F 4PCS  6mm	G 16PCS  6*15mm	H 4PCS  128 handles
I 2PCS  Three-section Rail	J 2PCS  Straight bend	L 2PCS  Mid bend					

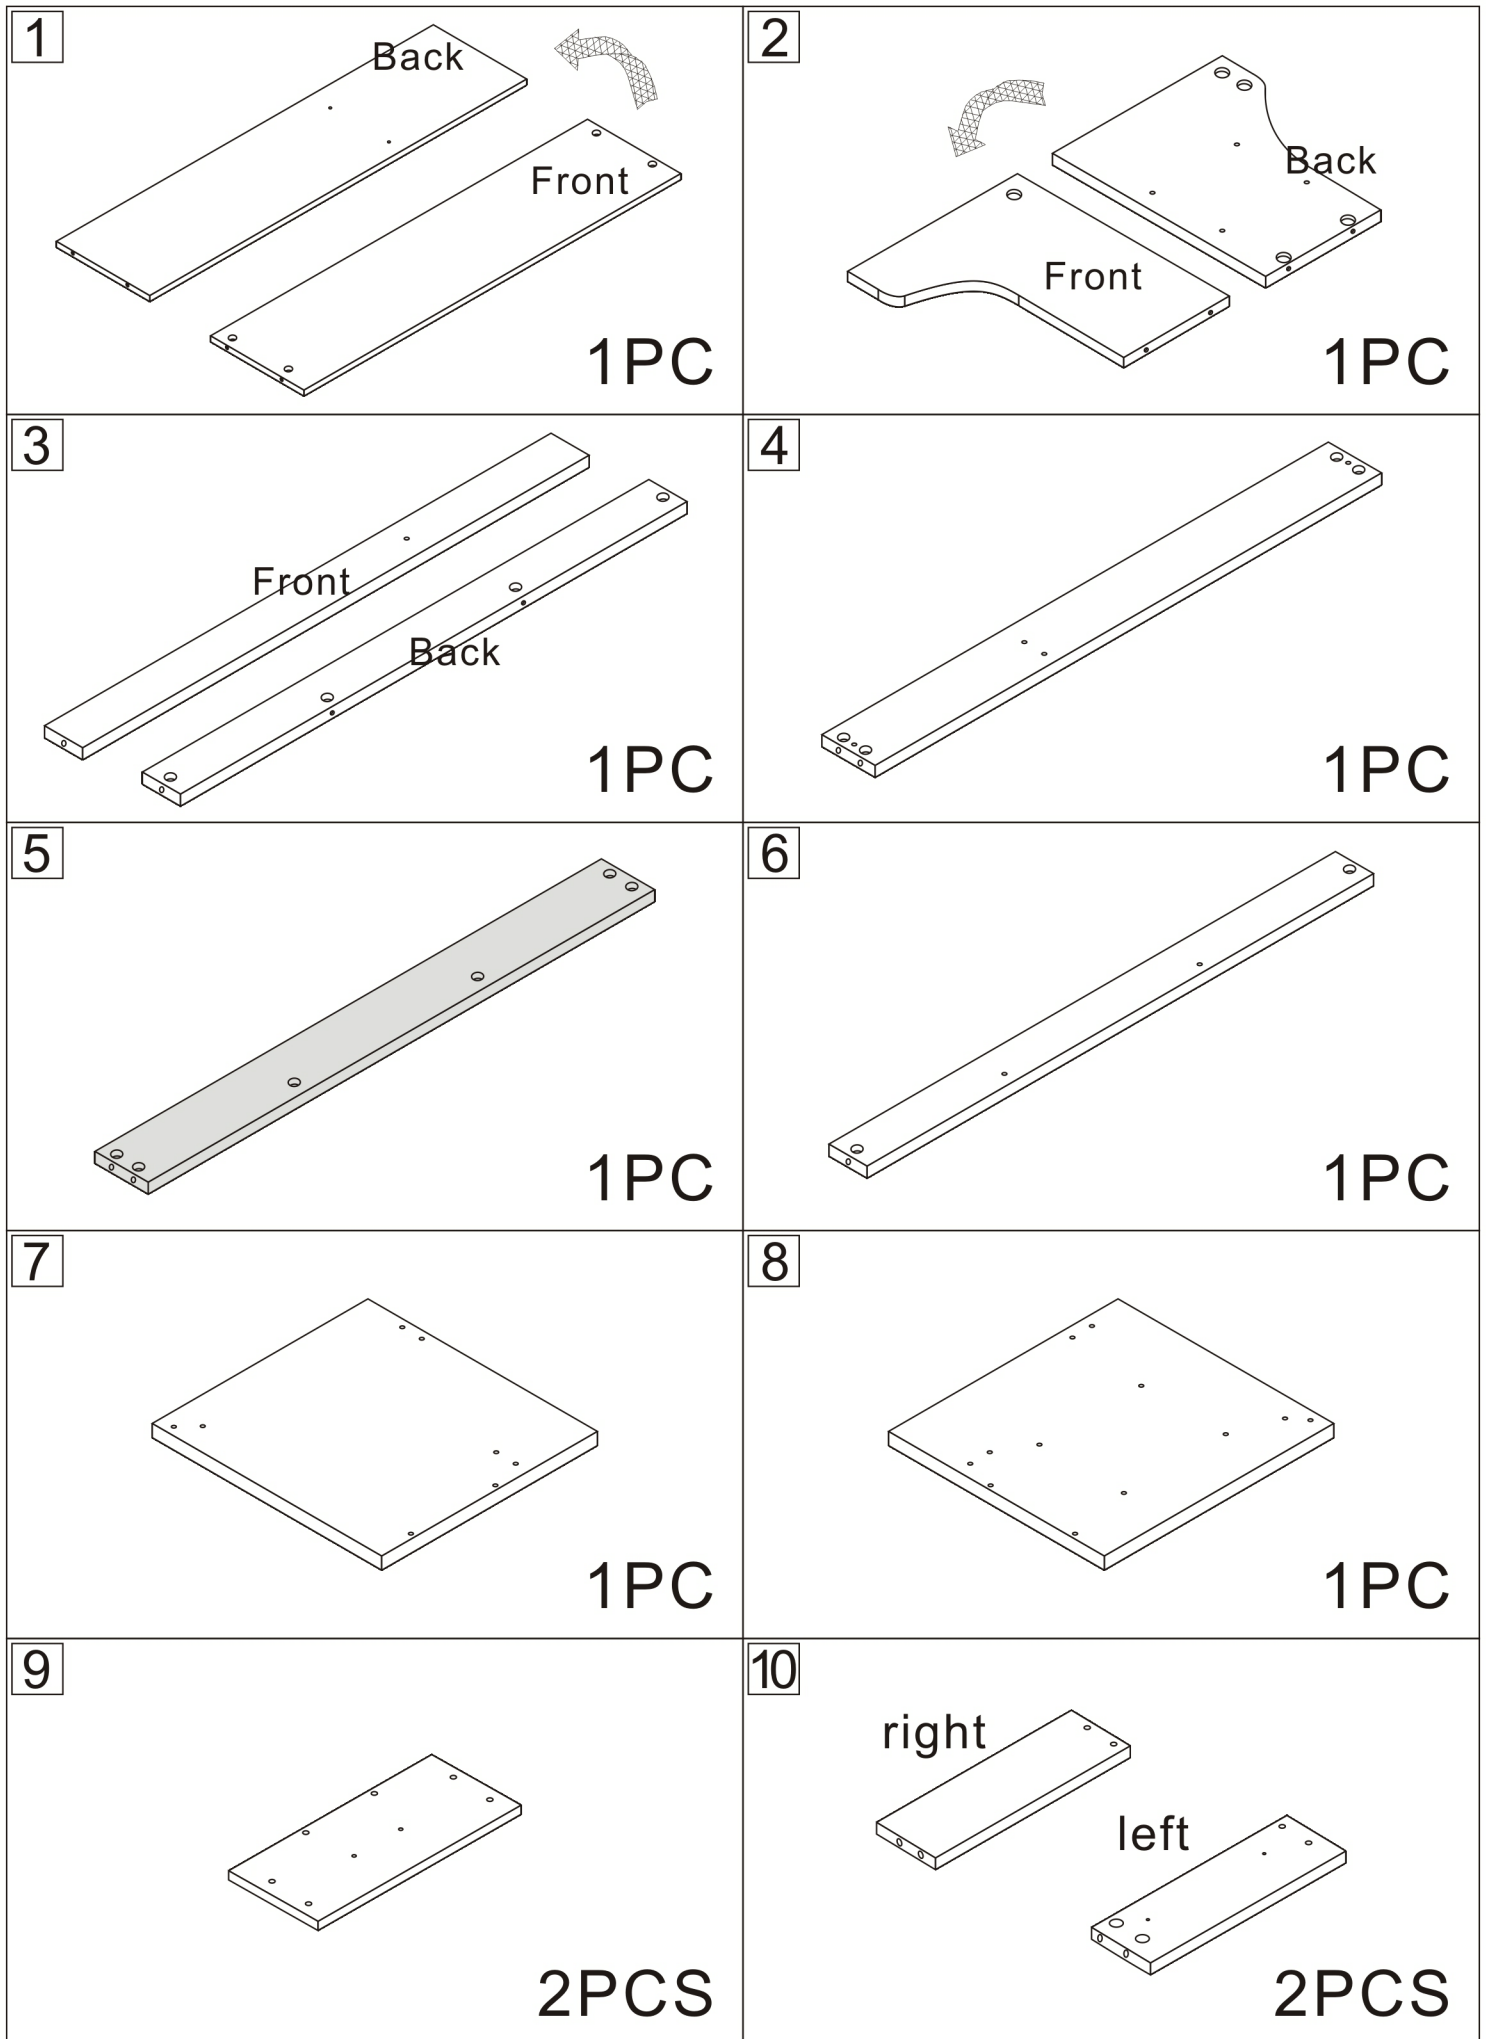


11

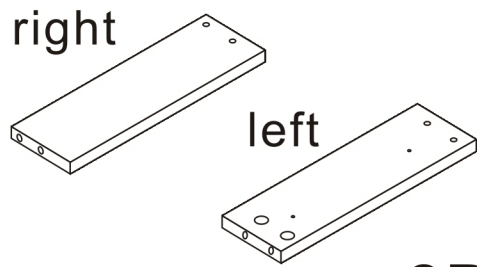


2PCS

12

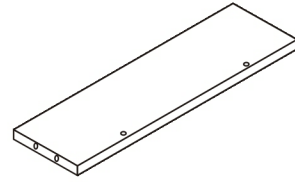


2PCS

13

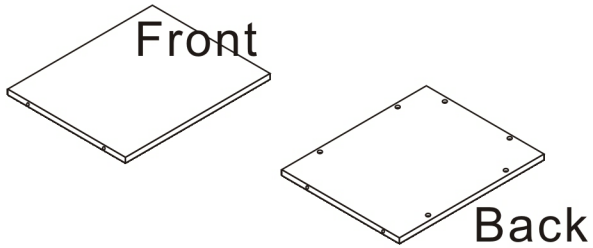


2PCS

14

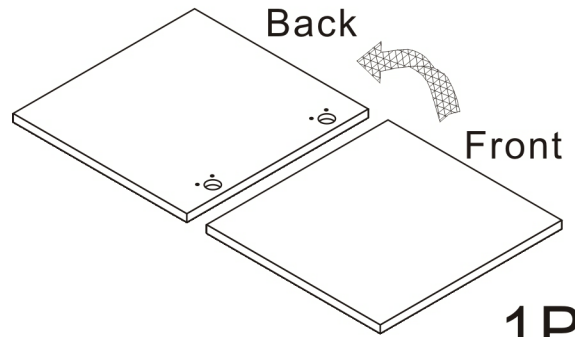


1PC

15

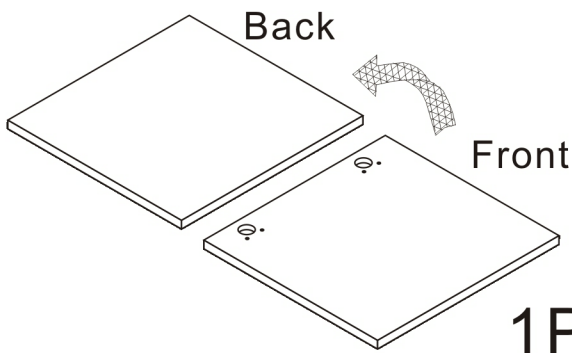








1PC

16

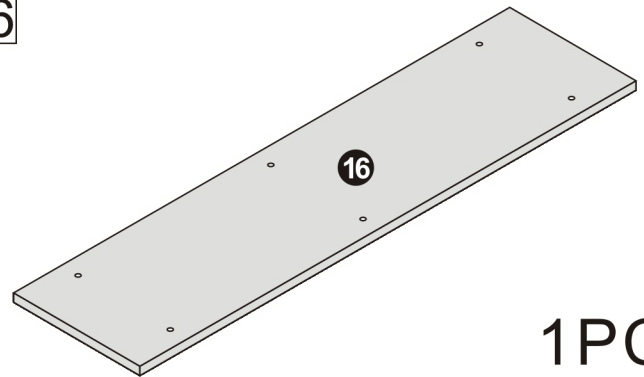

1PC


1

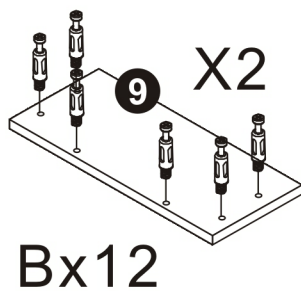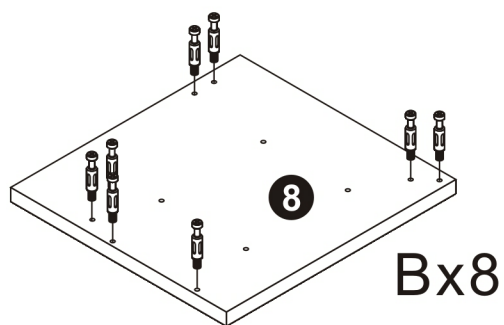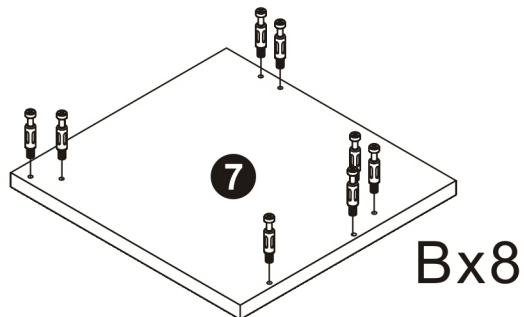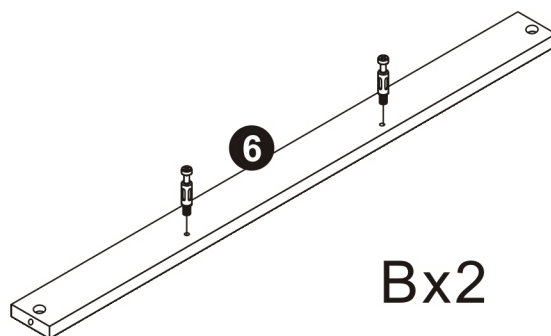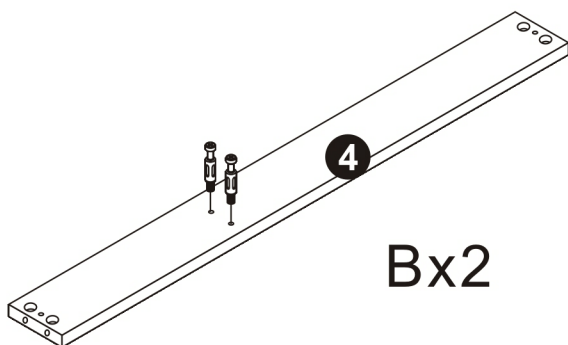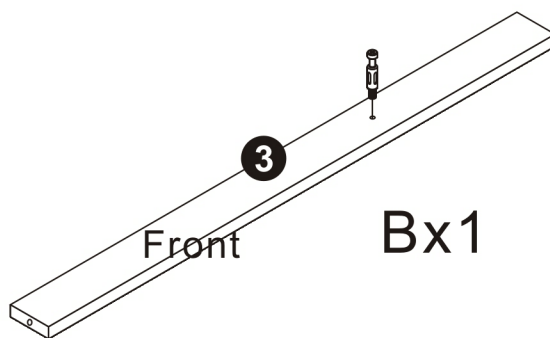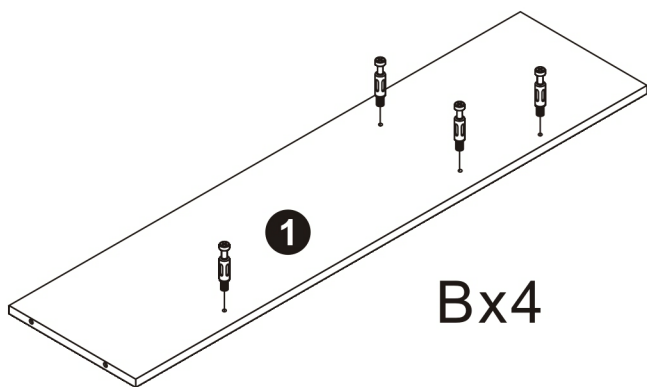

B	37PCS
	
6*28mm	




2

Ix4

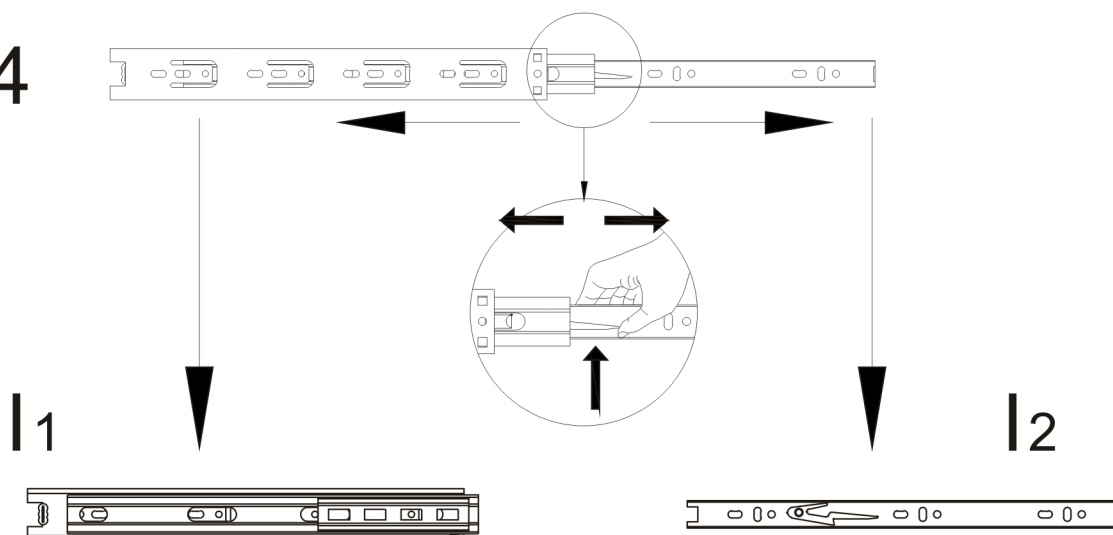

I ₁	4PCS
Three-section Rail	


3

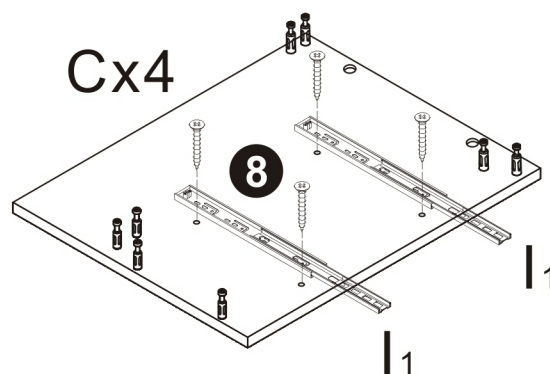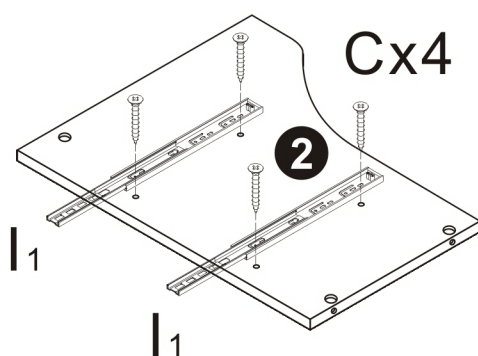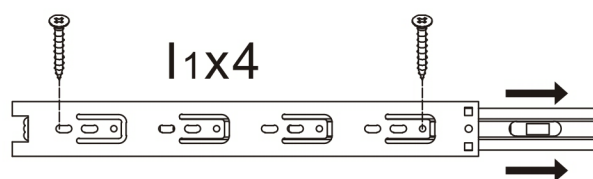

C	8PCS
3.5*14mm	

I ₁	4PCS
12 inch Three-section Rail	

4

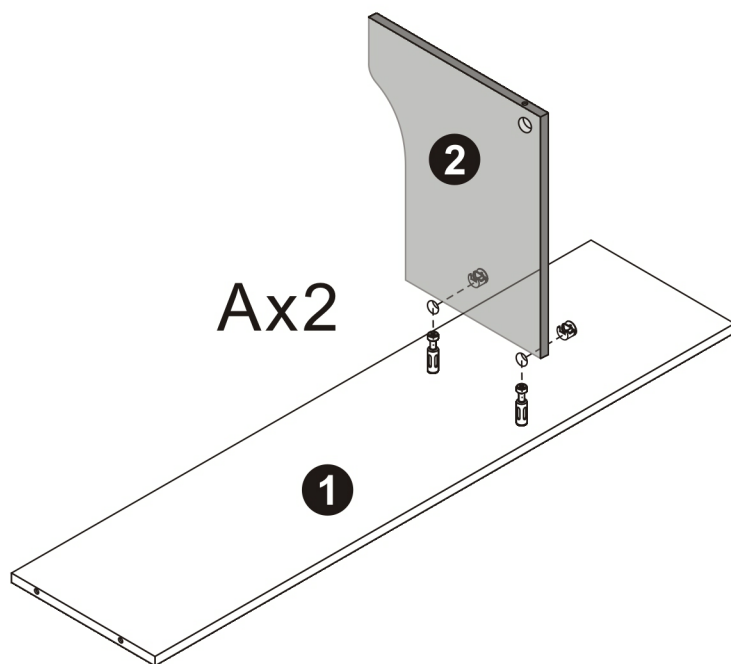


A 2PCS



15*10mm

5

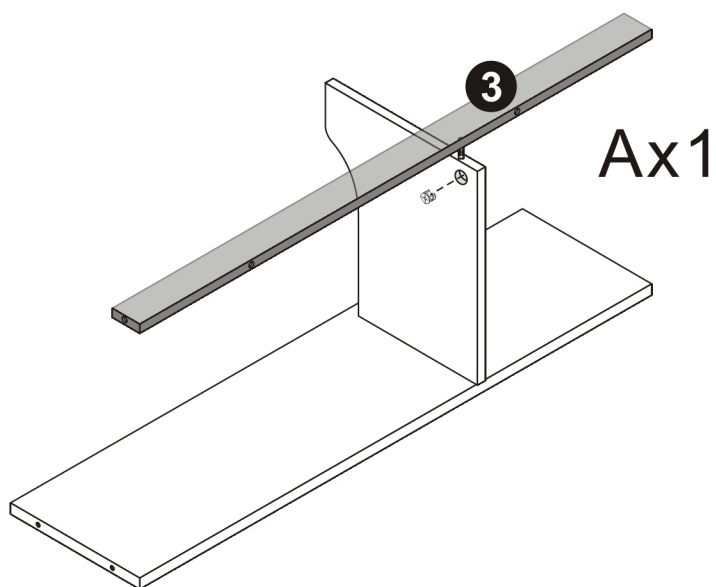


A 1PCS




15*10mm

6

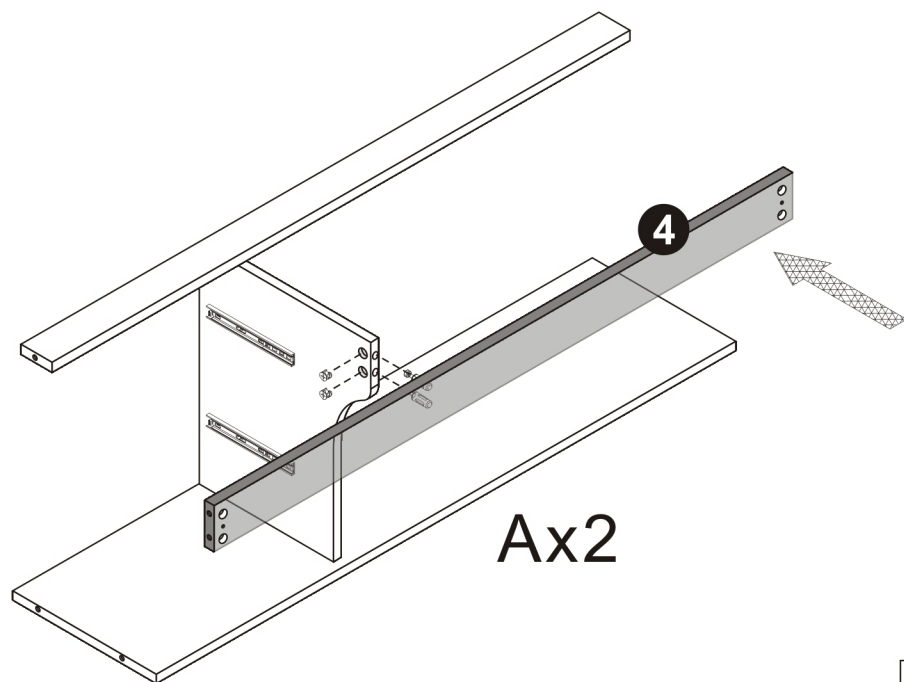


A	2PCS
	
15*10mm	

7

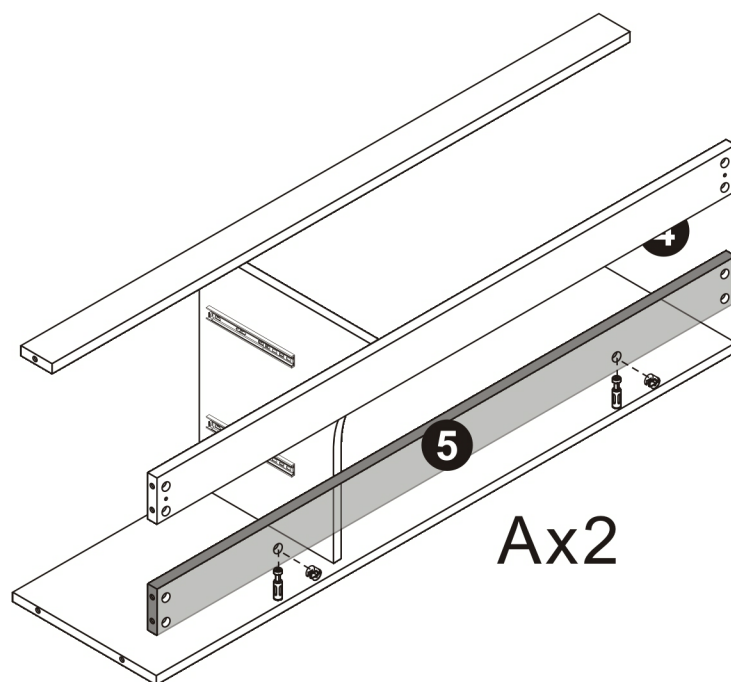

A	2PCS
	
15*10mm	

8

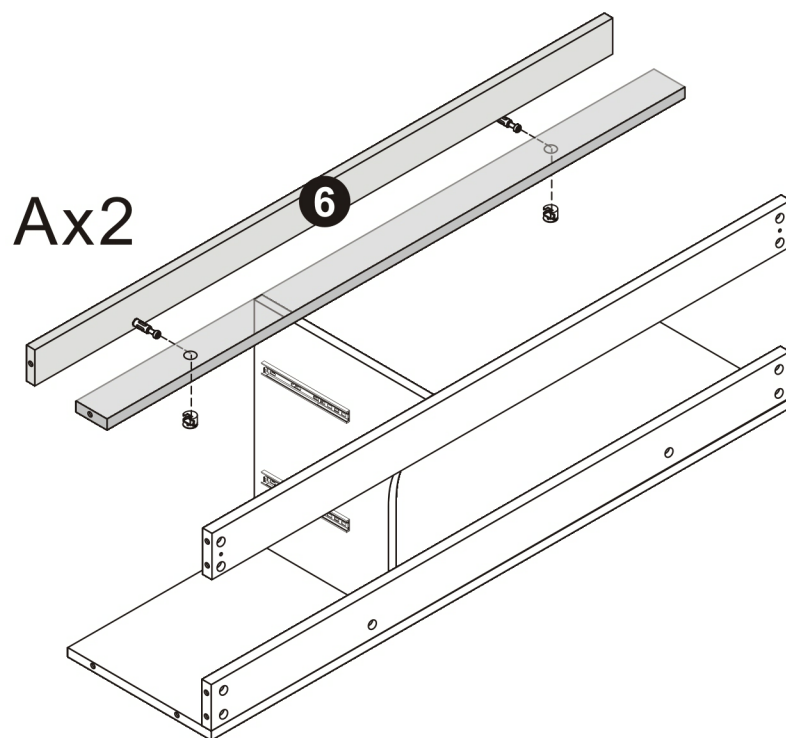


A 2PCS



15*10mm

9

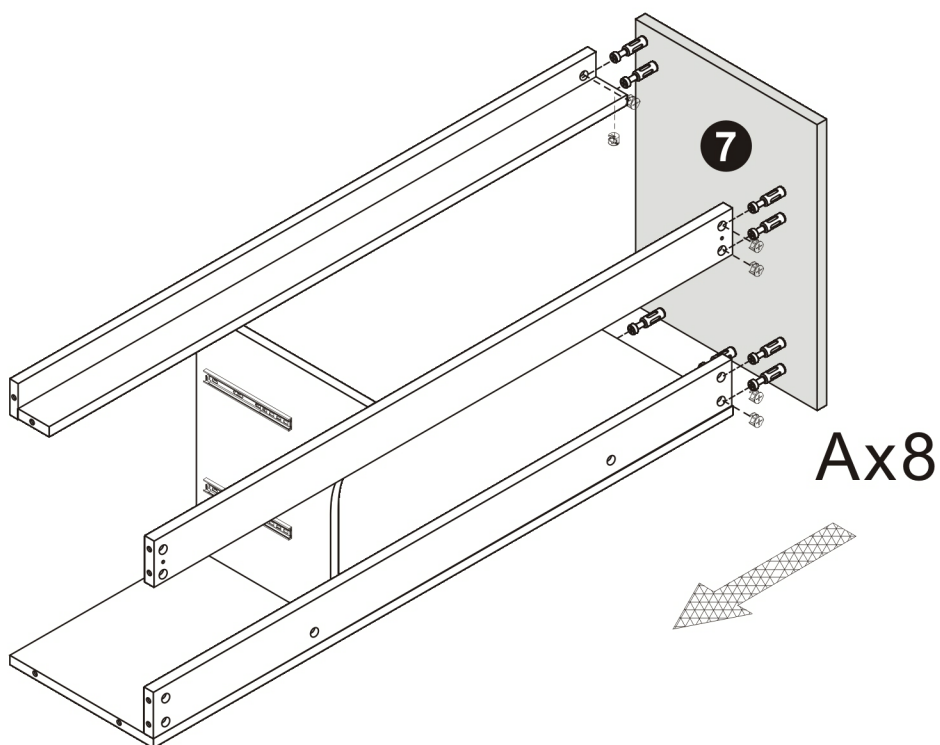


A 8PCS



15*10mm

10


Ax8

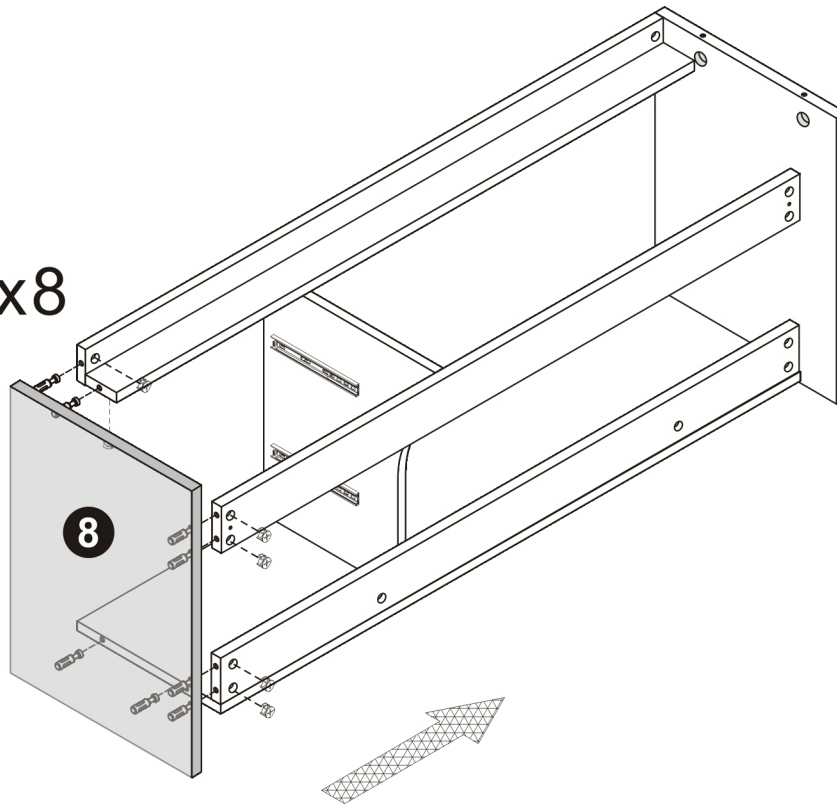


A	8PCS
	
15*10mm	


11

Jx2
Cx4


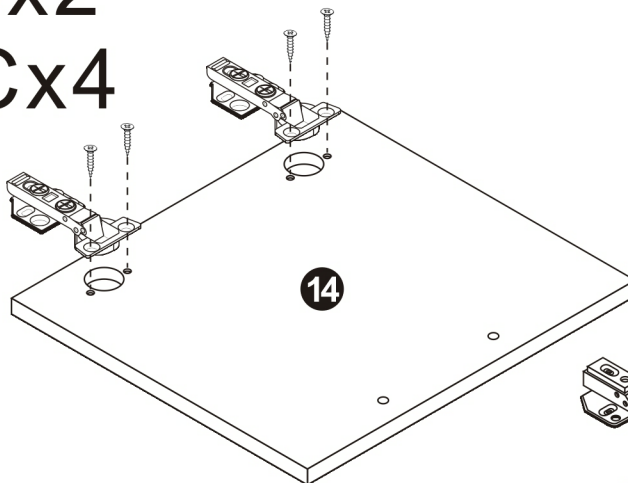


Lx2
Cx4

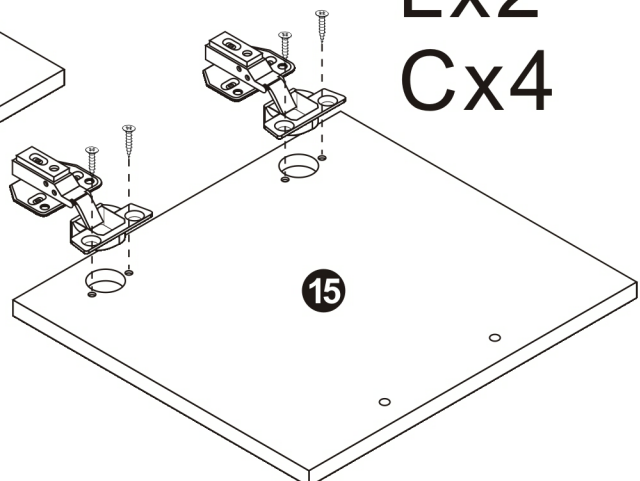


C	8PCS	J	2PCS	L	2PCS
					
3.5*14mm		Straight bend		Mid bend	

12

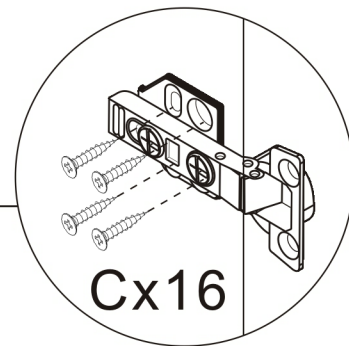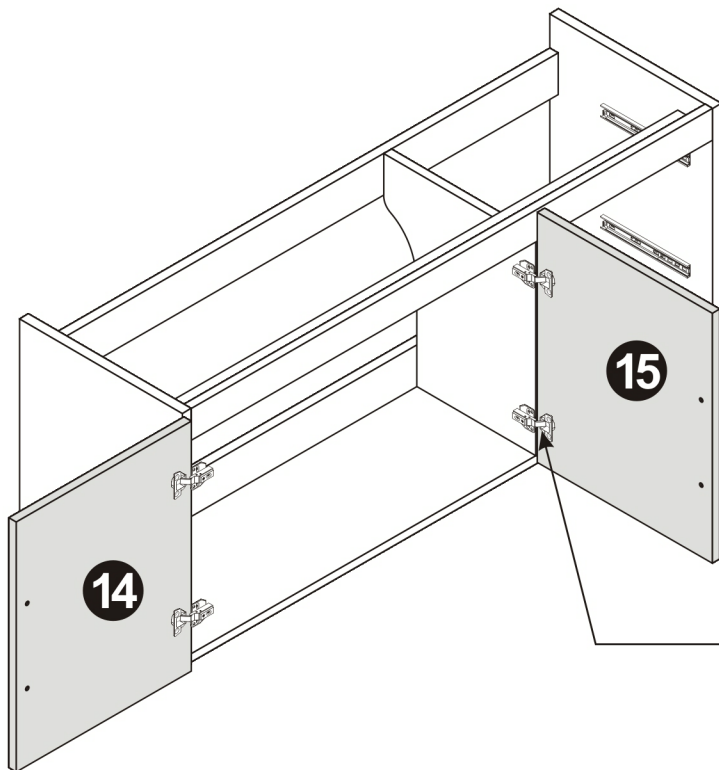

C	16PCS
3.5*35mm	

13

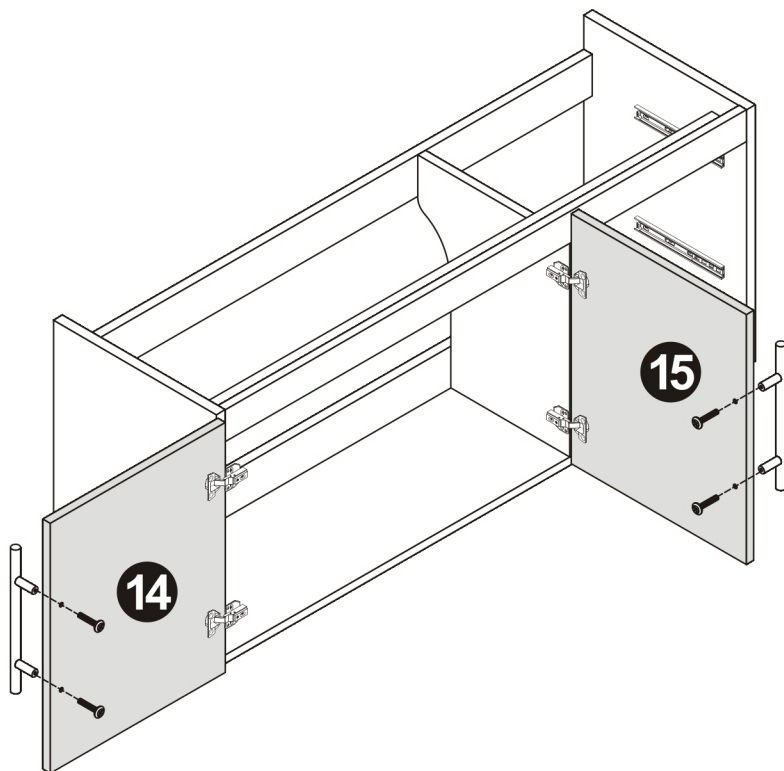

Hx2
Ex4


E	4PCS	H	2PCS
4*20		128 handles	

SPECIAL TIPS FOR DOOR ALIGNMENT


CONSEJOS ESPECIALES PARA LA ALINEACIÓN DE PUERTAS

CONSEILS SPÉCIAUX POUR L'ALIGNEMENT DES PORTES


- A. Lateral adjustment (Moving door left-right) by screw adjusting
 Ajuste lateral (Puerta móvil de izquierda a derecha) mediante tornillo de ajuste
 Réglage latéral (porte mobile gauche-droite) par réglage à vis

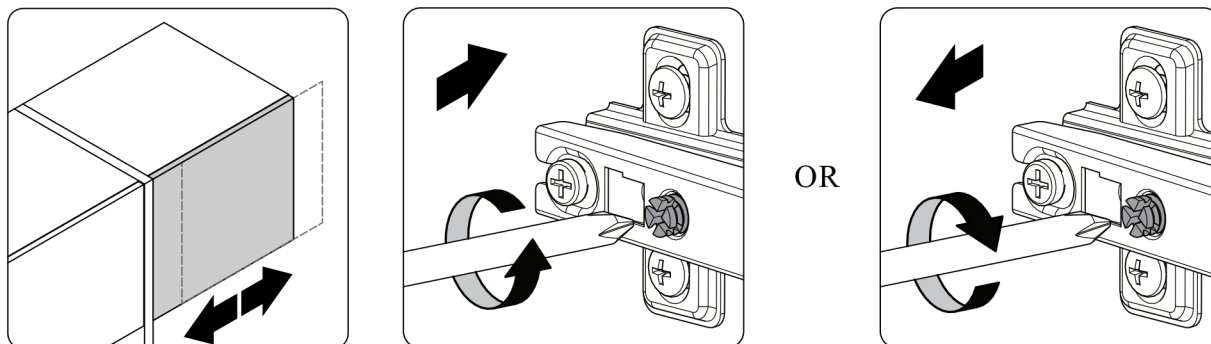


- B. Vertical adjustment (Moving door up-down) via the slot on the mounting plate
 Ajuste vertical (Puerta móvil arriba-abajo) a través de la ranura en la placa de montaje
 Réglage vertical (porte mobile de haut en bas) via la fente sur la plaque de montage

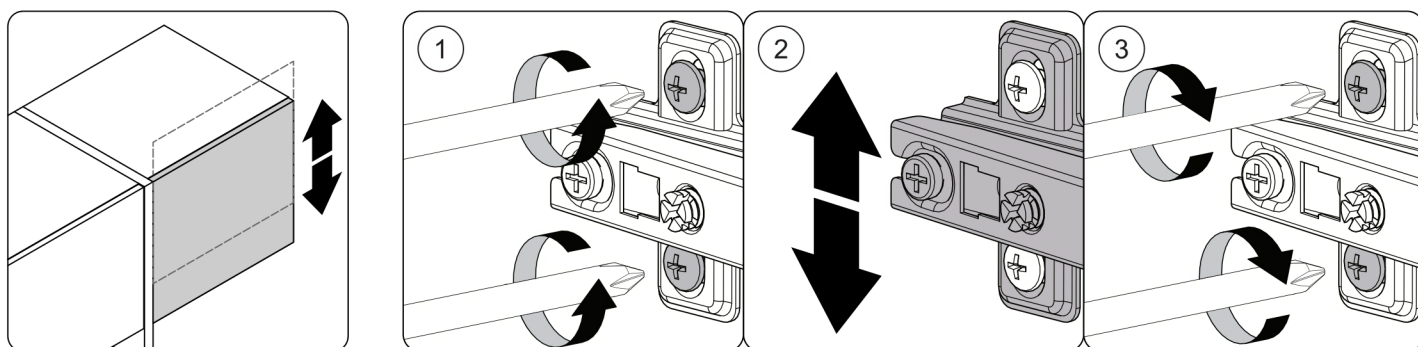

- C. Front-to-back adjustment (Spacing Door Off Cabinet) by slacking the hinge arm mounting screw
 Ajuste de adelante hacia atrás (espaciado entre la puerta y el gabinete) aflojando el tornillo de montaje del brazo de la bisagra
 Ajustement d'avant en arrière (espacement de la porte hors de l'armoire) en desserrant la vis de montage du bras de charnière

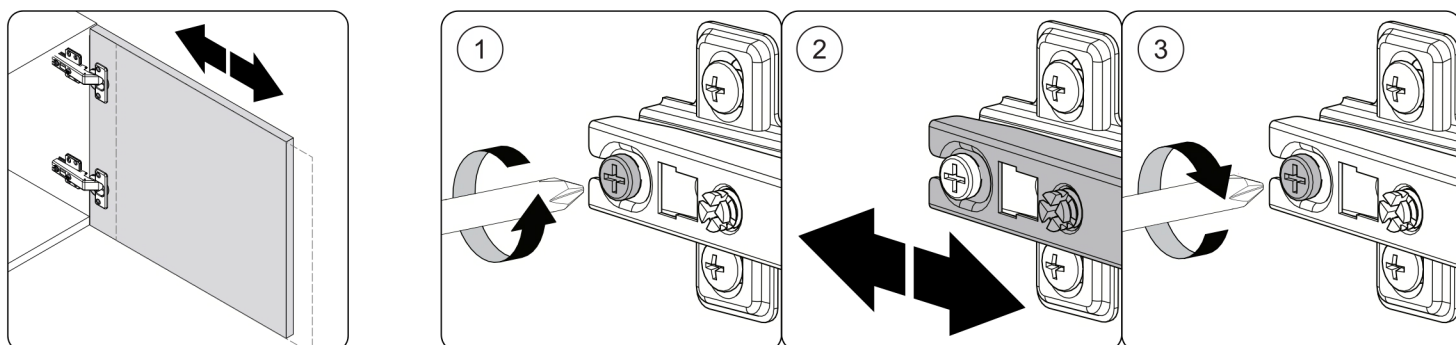


14

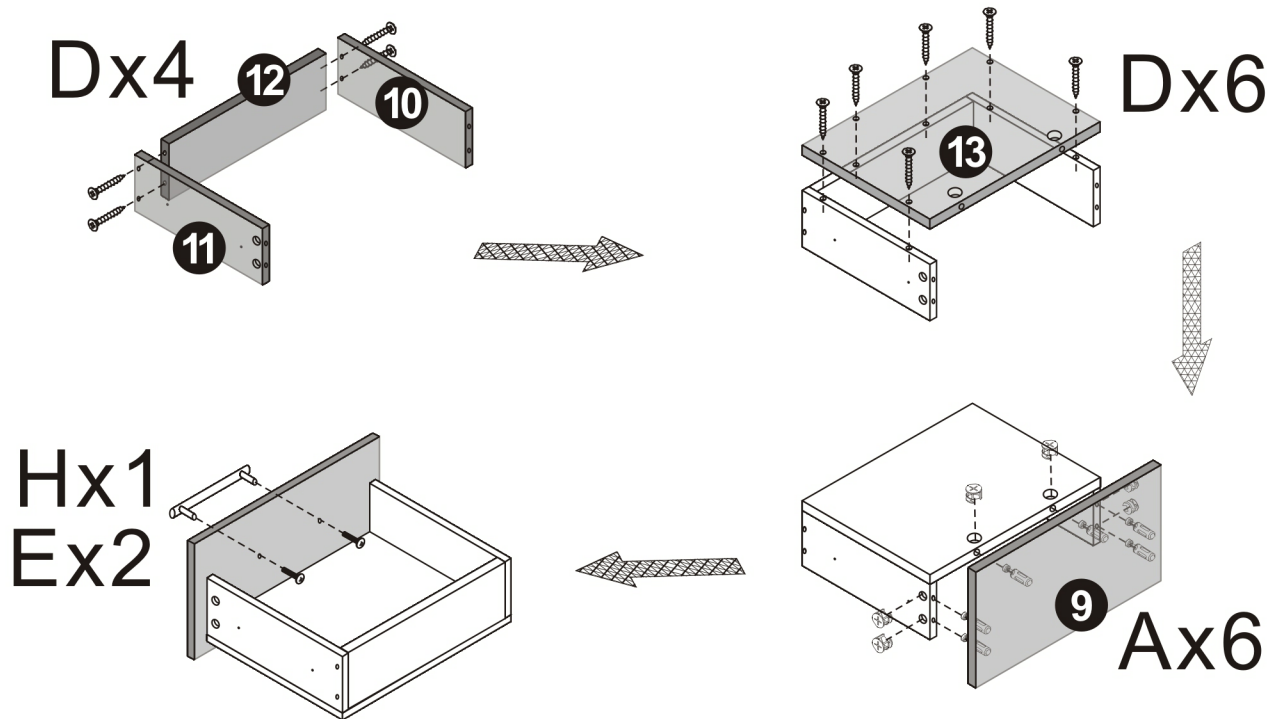


X2

A	12PCS	D	20PCS	E	4PCS	H	2PCS
							
15*10mm		3.5*35mm		4*20		128 handles	


15

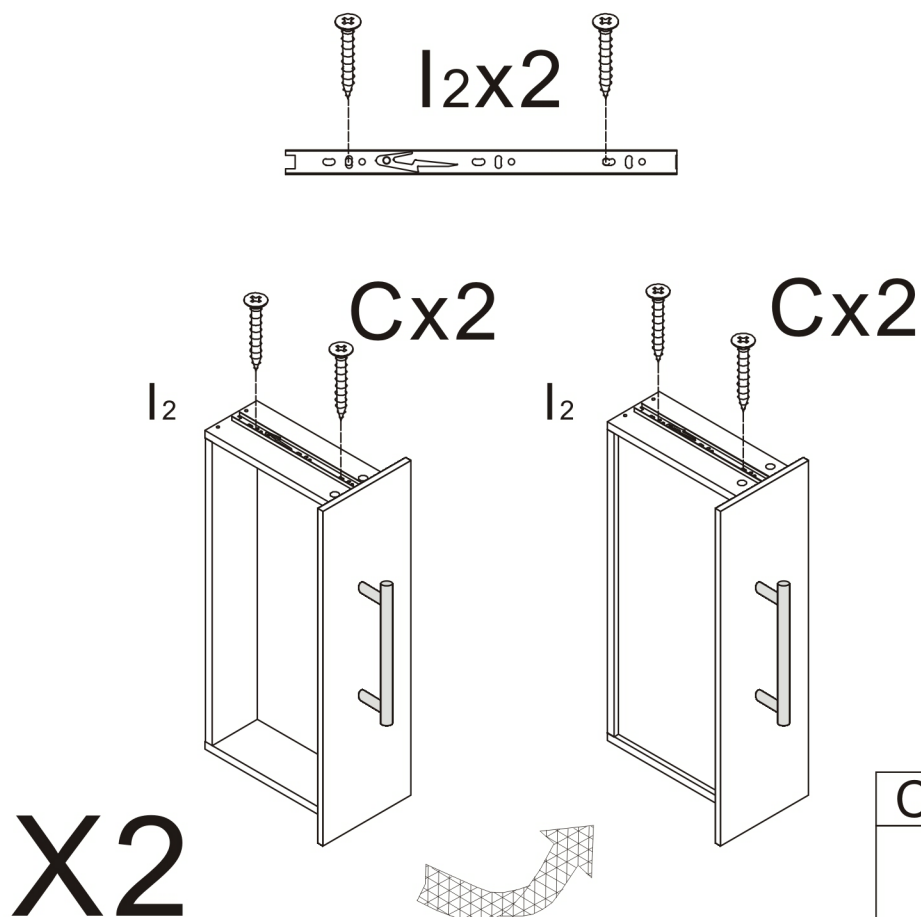


C	8PCS	I	2PCS
			
3.5*14mm		Three-section Rail	

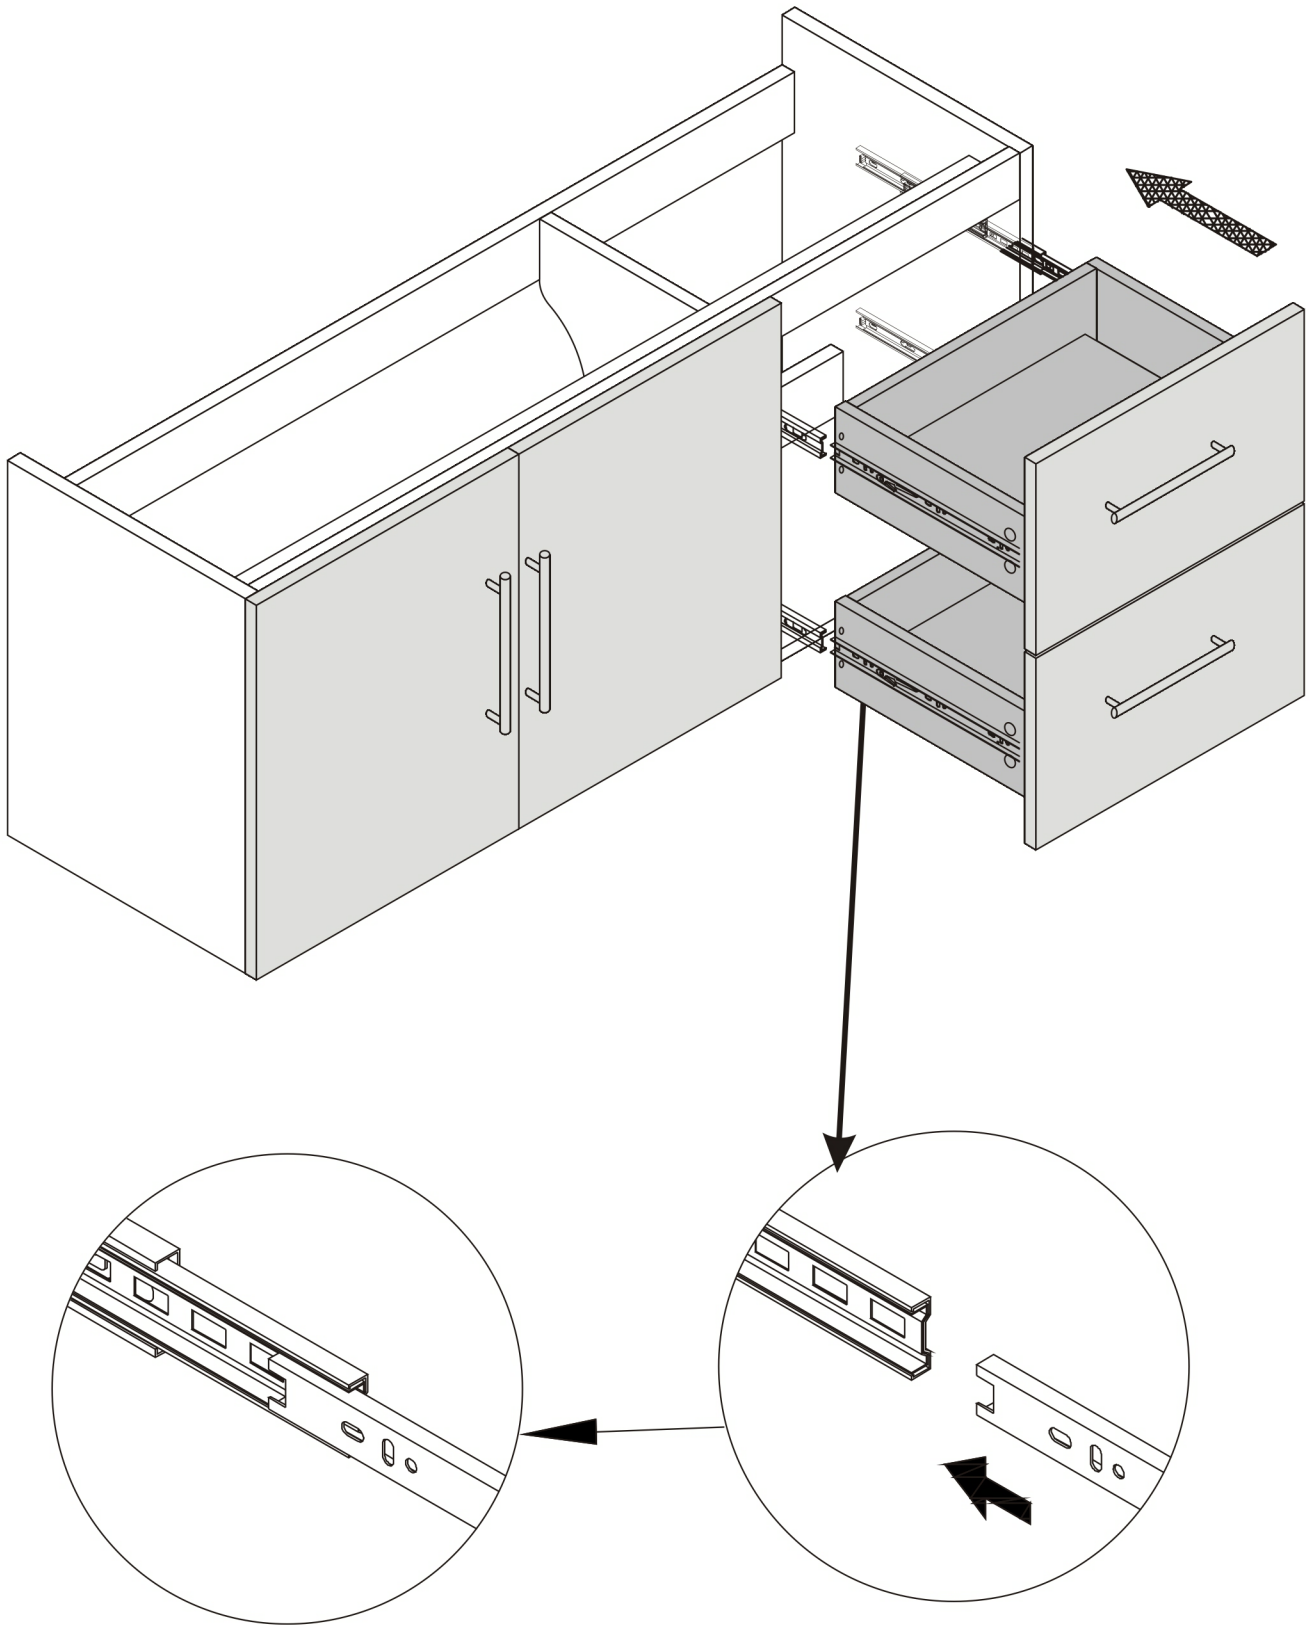

17

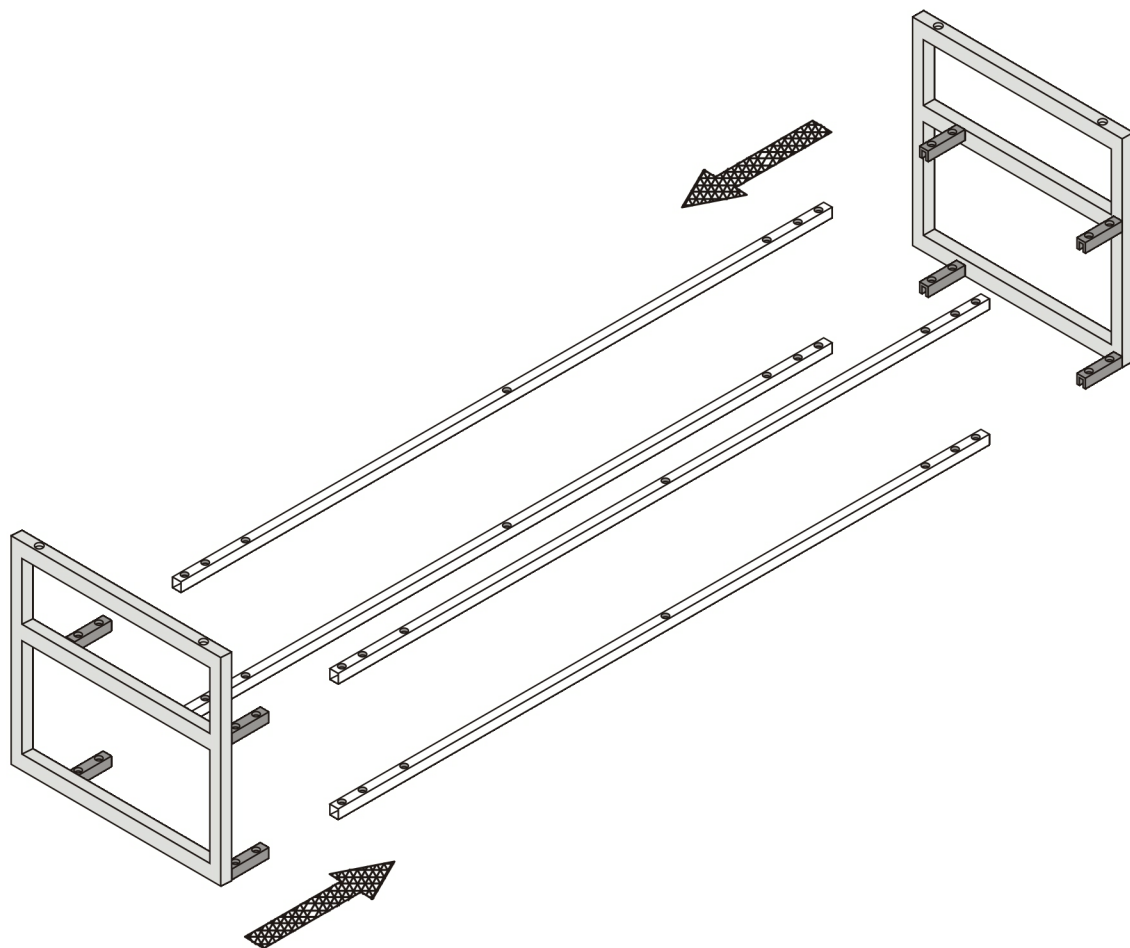

18

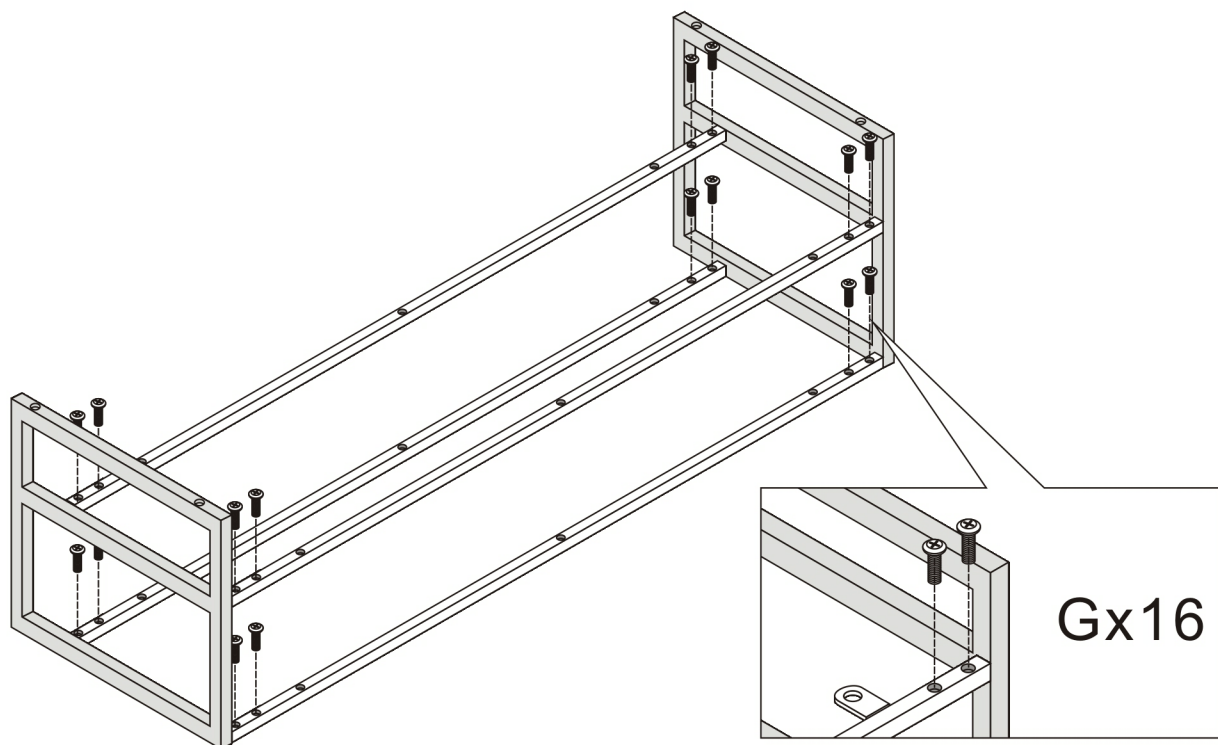


Gx16

G 16PCS




6*15mm

19

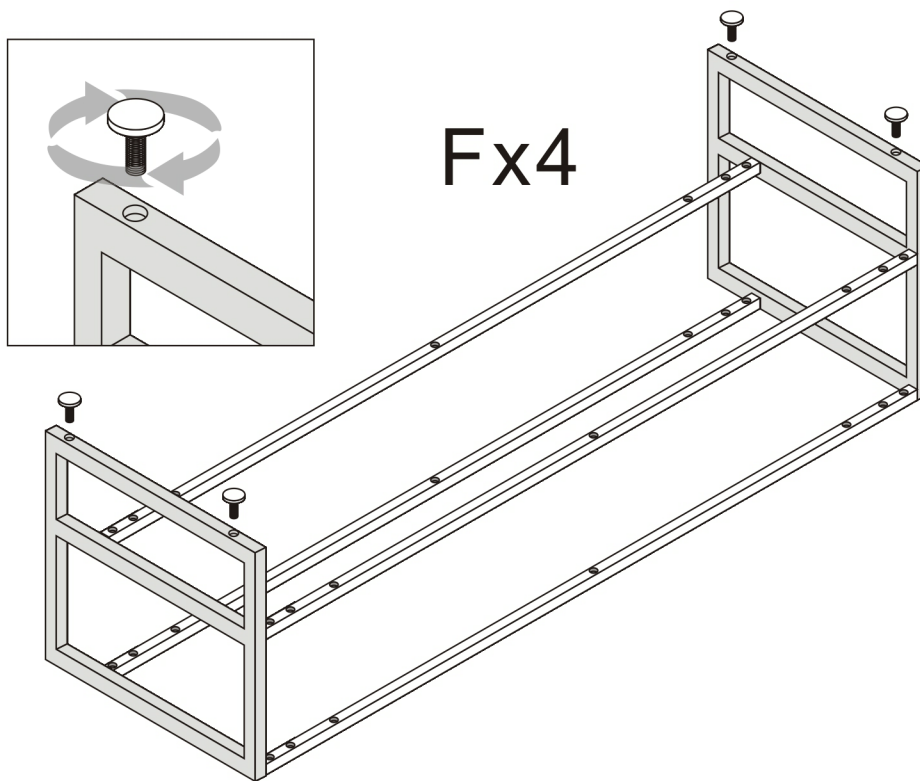


F	4PCS
6mm	

20

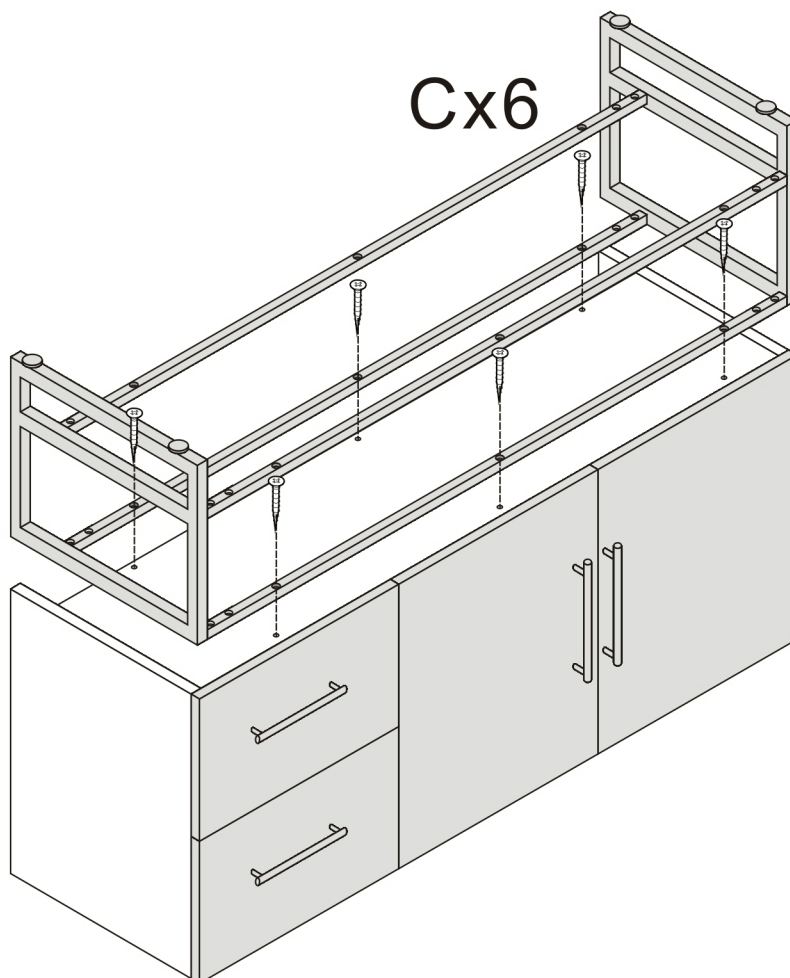


C	6PCS
3.5*14mm	

21

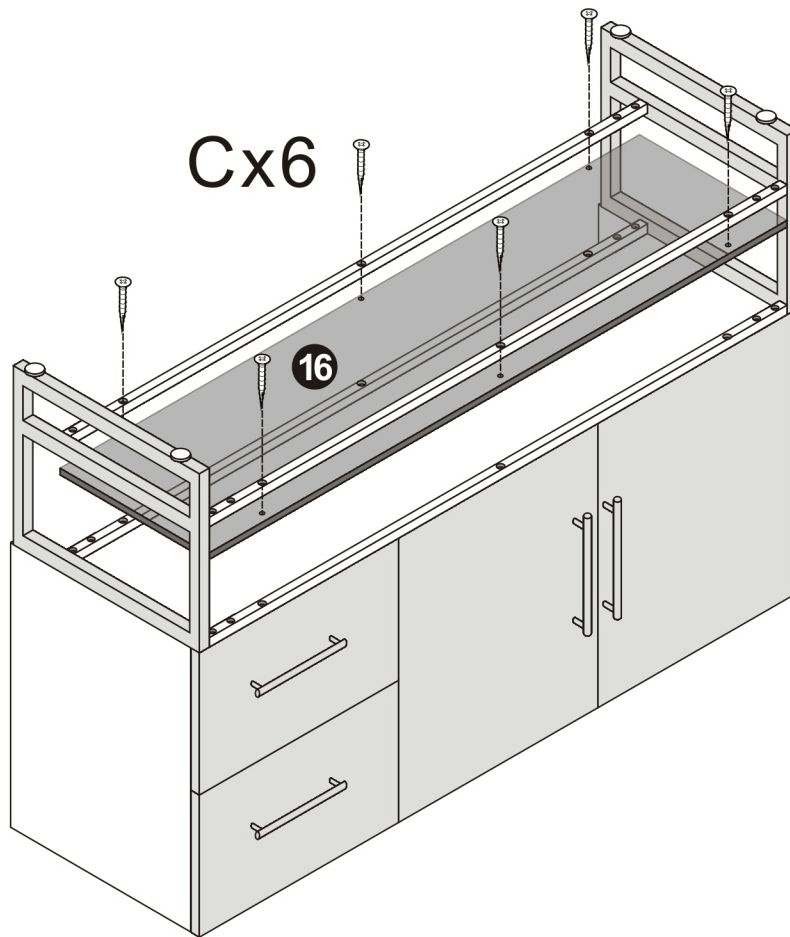

C	6PCS
	
3.5*14mm	

22

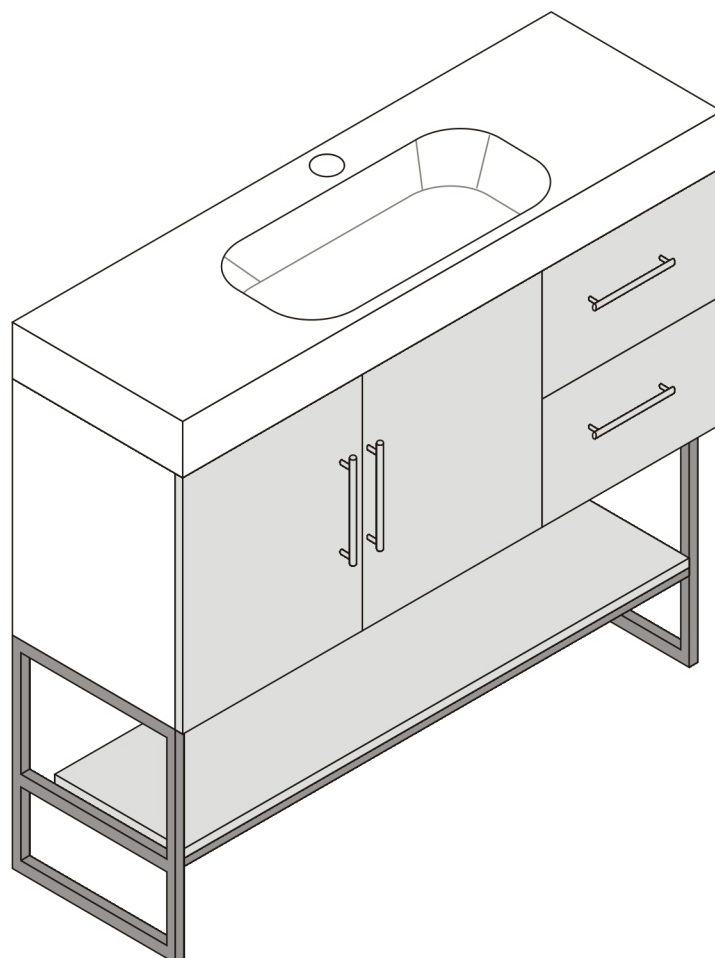

OK