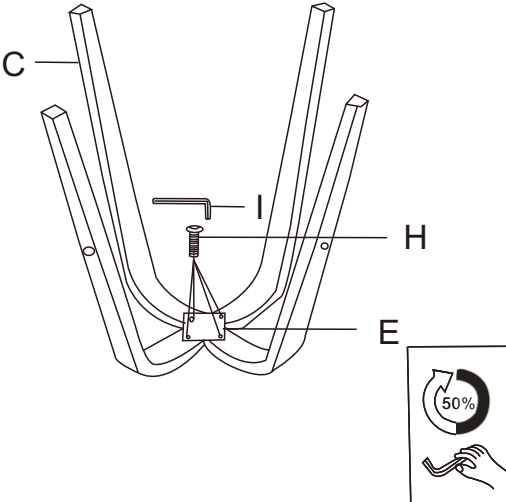
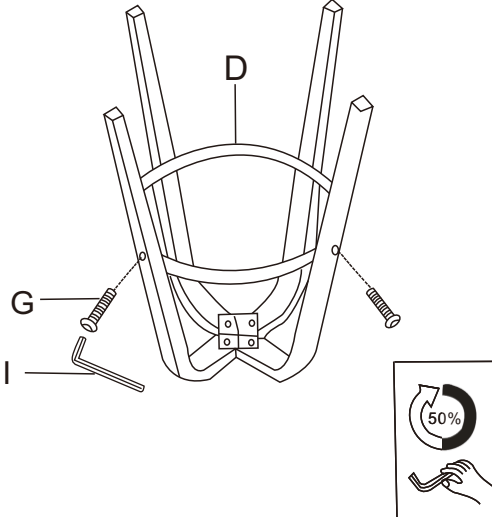
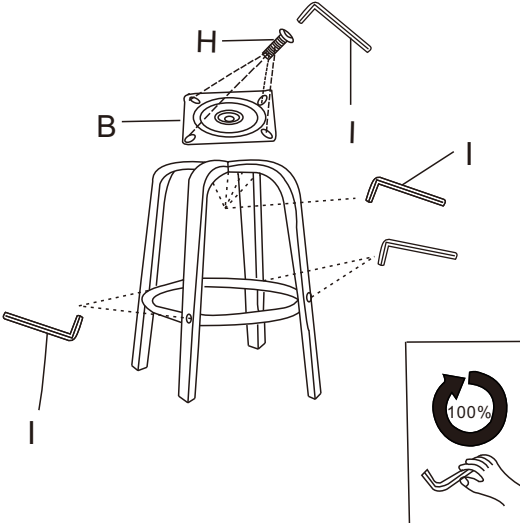
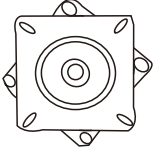

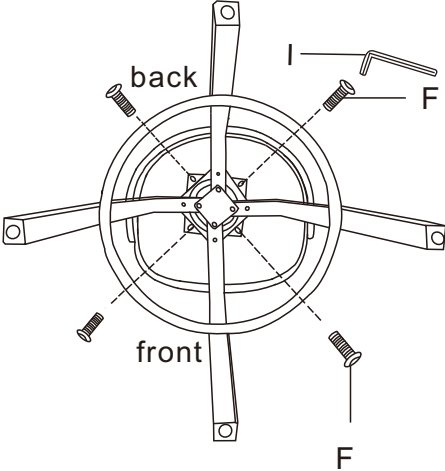
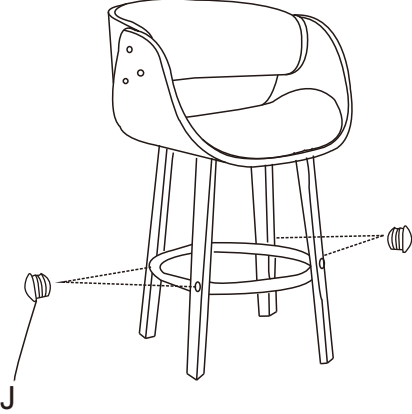
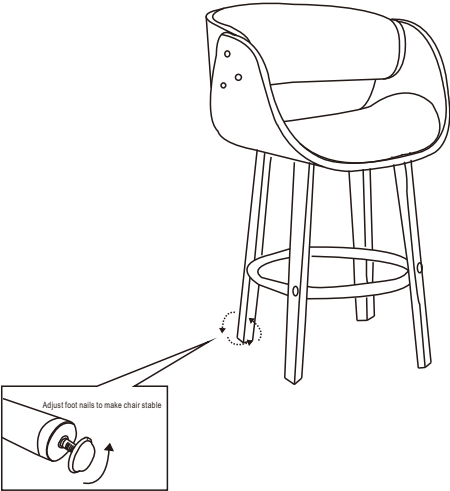



Please check that all fittings are available and in good condition before assembly
If you have any questions,please contact us,we will solve your problem in the first time.

EMAIL:longebe@163.com

A*1 	G*4  M6*30MM	1 Tighten the screws to 50% 	2 Tighten the screws to 50% 	3 Tighten the screws to 100% 
B*1 	H*8  M6*25MM			
C*4 	I*1  M6			
D*1 	J*4 	4 	5 	6 
E*1 				
F*4  M6*20MM				