


Assembly Instructions

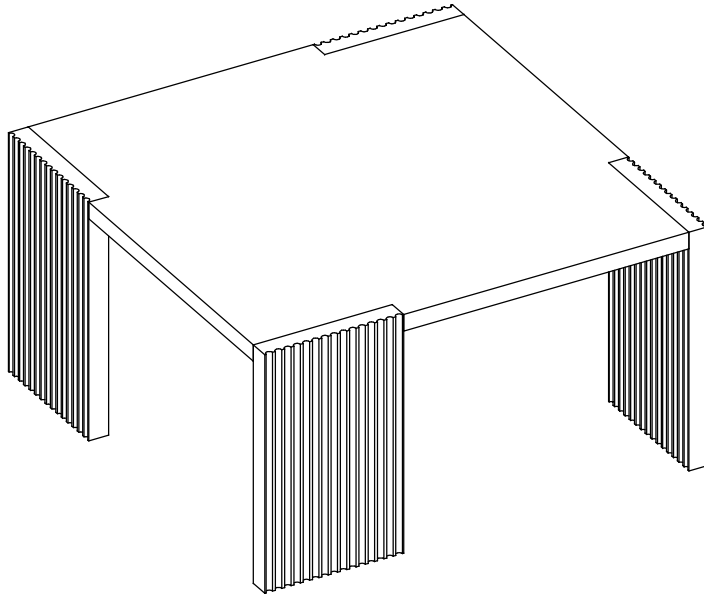




Please do not discard packing materials and cartons until you have finished installing the product.




Care Instructions:

Avoid direct exposure to sunlight. Do not place over heat/Air conditioning vents. Blot spills do not rub, with a clean white cloth. Do not use harsh chemicals.

HARDWARE LIST

(A) M8: 1 pcs 	(B) M8: 8 pcs 	(C) M10X30(mm): 8 pcs 	(D) M8X70(mm): 8 pcs 	(E) M8: 8 pc 
---	---	---	--	--

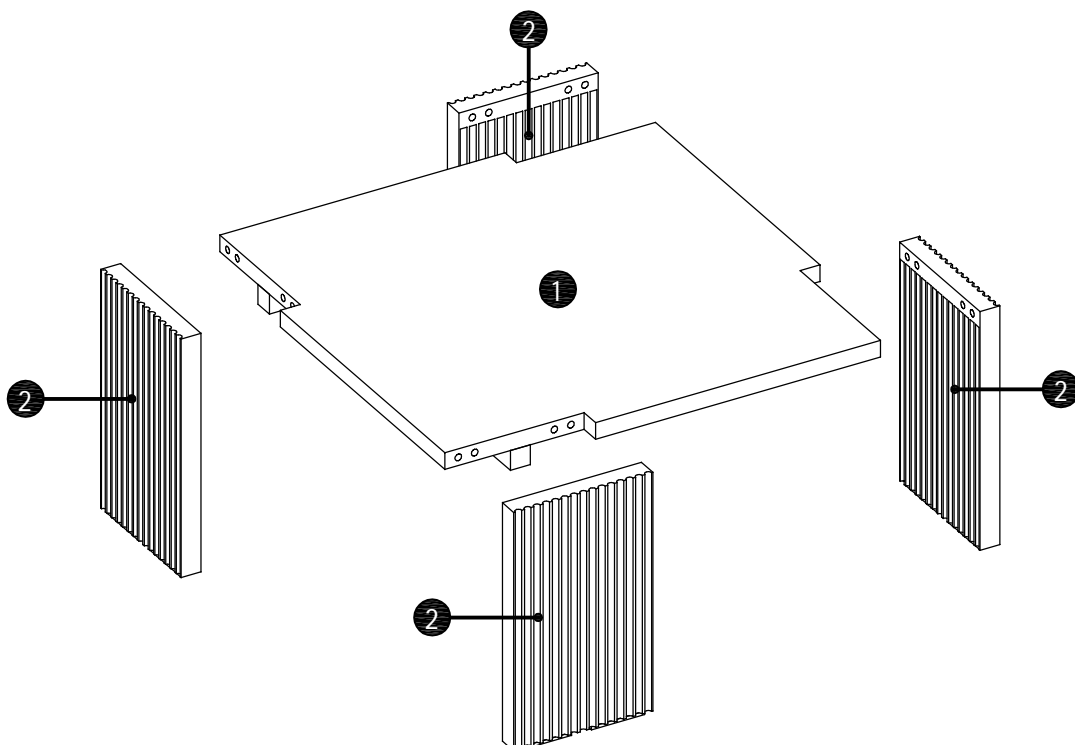

Installation Steps

