

PLEASE DO NOT RETURN TO STORE




Please do not return this product to the retailer!
We are able to assist you in ANY way!

If you find that you have any trouble with assembly or
missing or damaged parts please contact the seller.

User Manual ASSEMBLY INSTRUCTION

JDT-2216

Left corner from inside
70.8L*23.6W*39.4H Inch

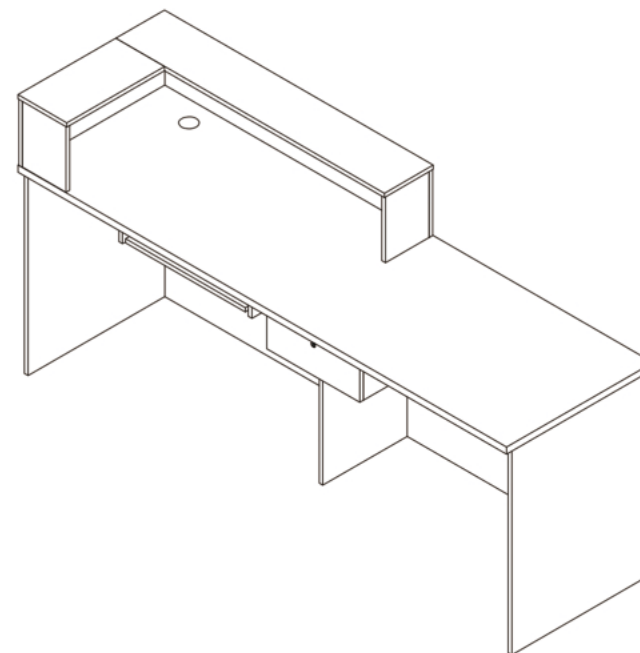

Parts List


NO.	Drawing	Dimension	QTY
1		1000*200*15mm	*1
2		400*200*15mm	*1
3		998*235*15mm	*1
4		583*235*15mm	*1
5		235*178*15mm	*2
6		1800*600*25mm	*1
7		1798*725*15mm	*1
8		725*560*15mm	*1
9		725*544*15mm	*1
10		725*560*15mm	*1
11		350*385*15mm	*1

NO.	Drawing	Dimension	QTY
12		350*142*15mm	*1
13		400*142*15mm	*1
14		490*350*15mm	*1
15		400*80*15mm	*1
16		400*80*15mm	*1
17		515*80*15mm	*1
18		380*140*15mm	*1
19		350*86*15mm	*1
20		350*86*15mm	*1
21		295*86*15mm	*1
22		305*344*4mm	*1

Scan the QR code to watch the product
installation video






Hardware Fitting

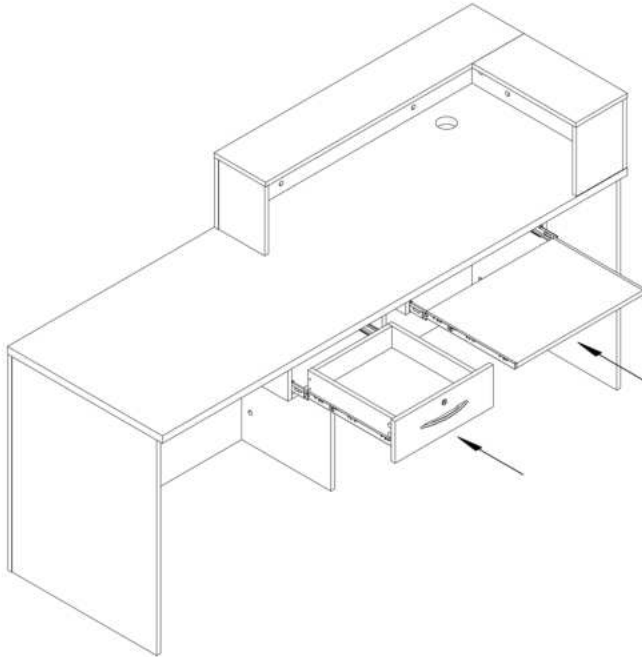

NO.	Drawing	QTY
A		*65
B		*65
C	 8*60mm	*2
D		*2
E	 3.5*35mm	*4


NO.	Drawing	QTY
F	 3.5*14mm	*16
G		*1
H	 4*18mm	*2
I	 4mm	*1
J		*1

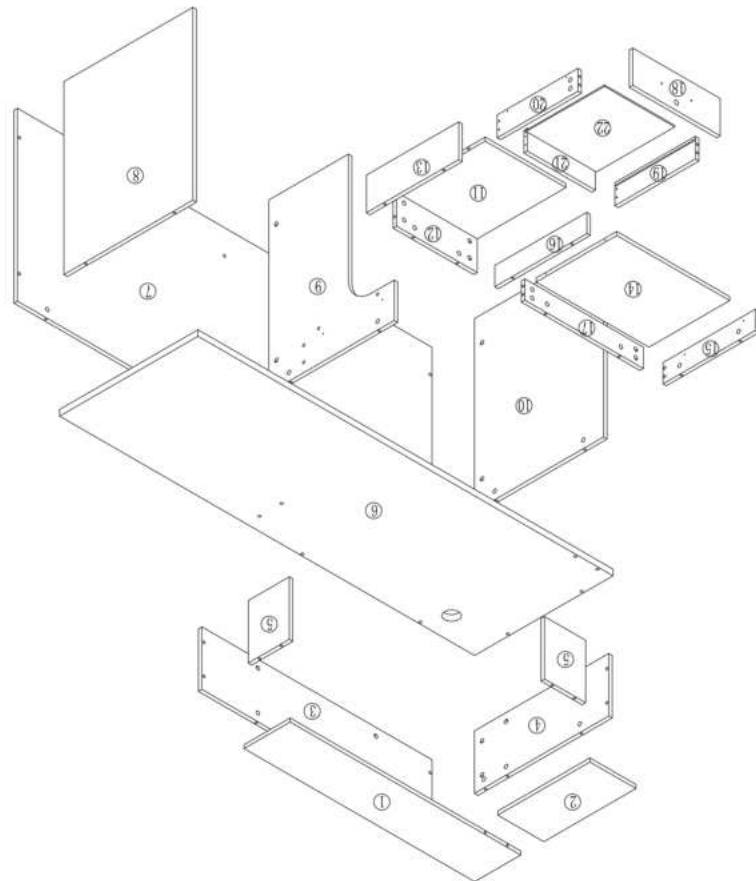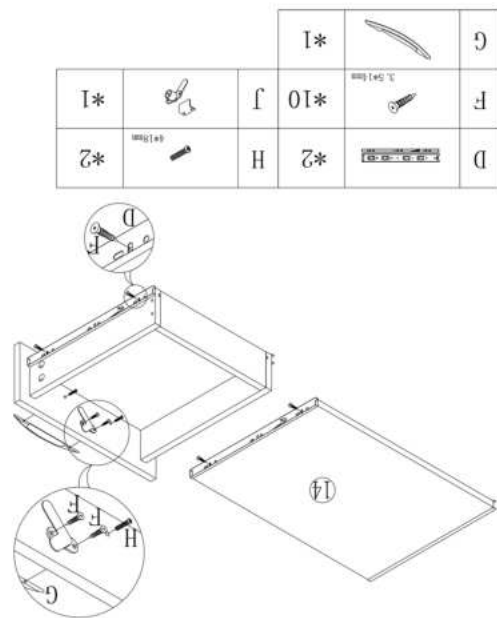

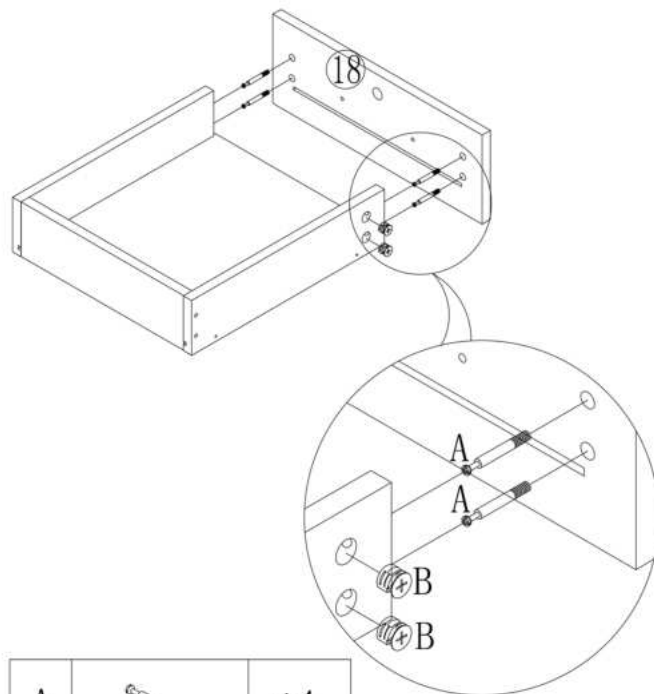


A		*4
B		*4


Cam Coupling Using Methods




Step1.
Connect the cam coupling A as directed in the assembly instructions using hand.



Step2.
Screw the cam coupling A as directed in the assembly instructions.



Step3.
Push the cam coupling A into the entry hole.



Step4.
Insert the cam coupling B as shown in the instructions.



Step5.
Turn the cam coupling B clockwise with a screwdriver



Step6.
Put on Beautycam.



Step7.
Finished.

You should feel a click when the camlock is locked in place.
The joint is now secure.

