

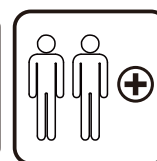
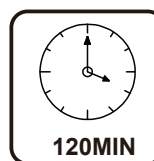
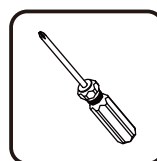
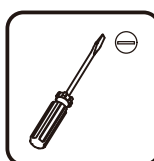



Installation & Assembly

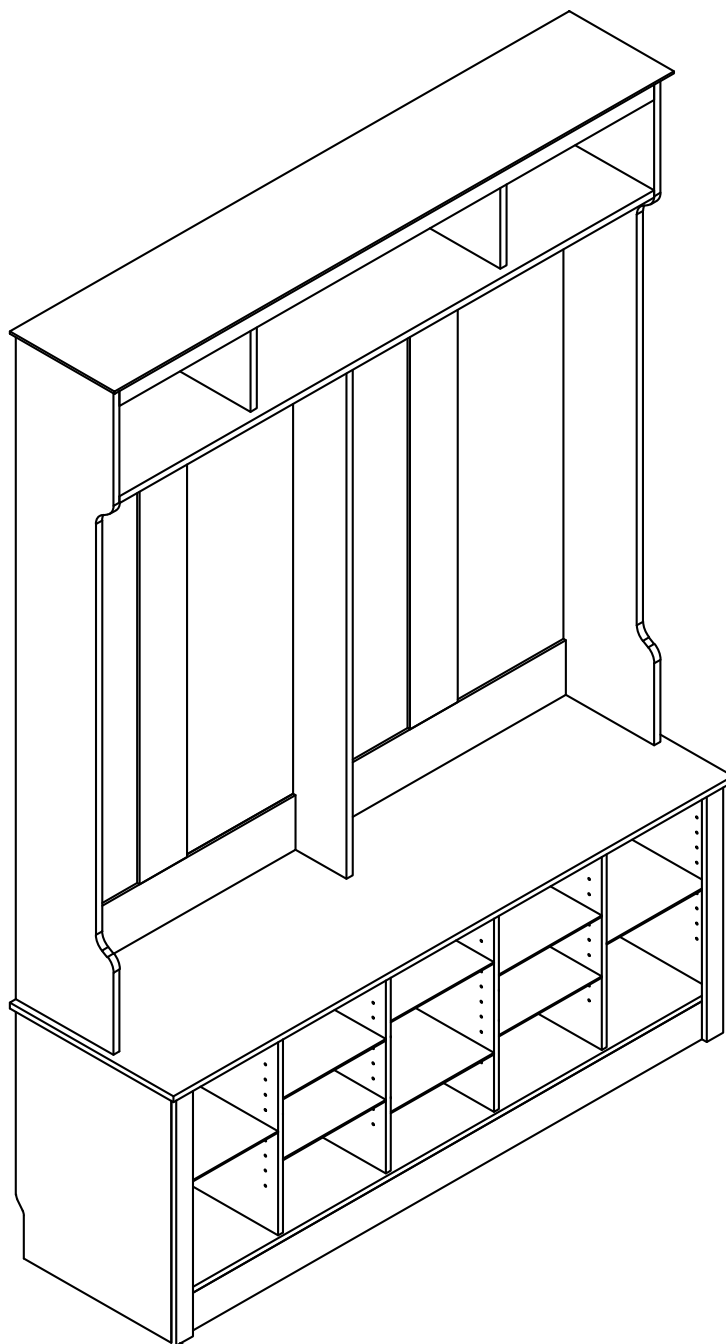


EN_IMPORTANT, RETAIN FOR FUTURE REFERENCE: READ CAREFULLY.

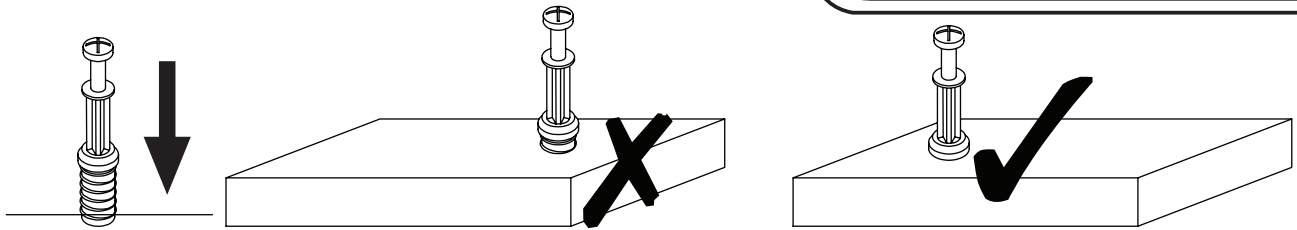


EN_QUICKFIT: Tighten quickfit until shoulder is flush with panel. Do not overtighten or undertighten.

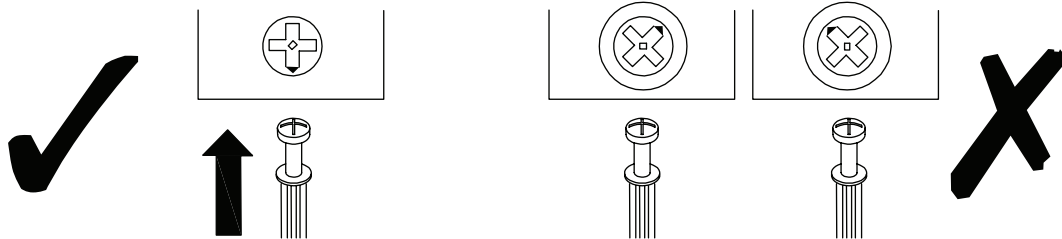







EN_CAM LOCK: When fitting cam lock, ensure starting position is correct before you insert connecting quickfit.








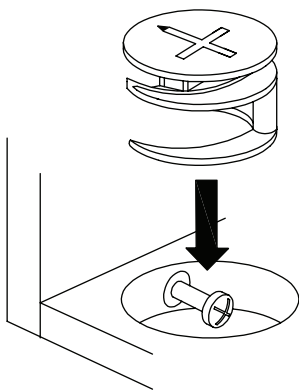







EN_Quickfit head should be in the centre of the cam lock when the two panels are joined.
Cam lock should be inserted before quickfit.

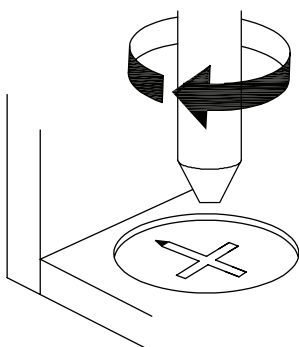


EN_Turn cam lock clockwise to tighten.

NO.	PARTS	QTY	SPARE
①		x1	
②		x2	
③		x1	
④		x1	
⑤		x2	
⑥		x1	
⑦		x1	
⑧		x1	
⑨		x1	
⑩		x1	



NO.	PARTS	QTY	SPARE
⑪		x1	
⑫		x1	
⑬		x4	
⑭		x2	
⑮		x1	
⑯		x1	
⑰		x1	
⑱		x1	
⑲		x1	
⑳		x1	

NO.	PARTS	QTY	SPARE
②1		x4	
②2		x1	
②3		x2	
②4		x1	
②5		x1	
②6		x8	
	 Hardware Kit	x1	

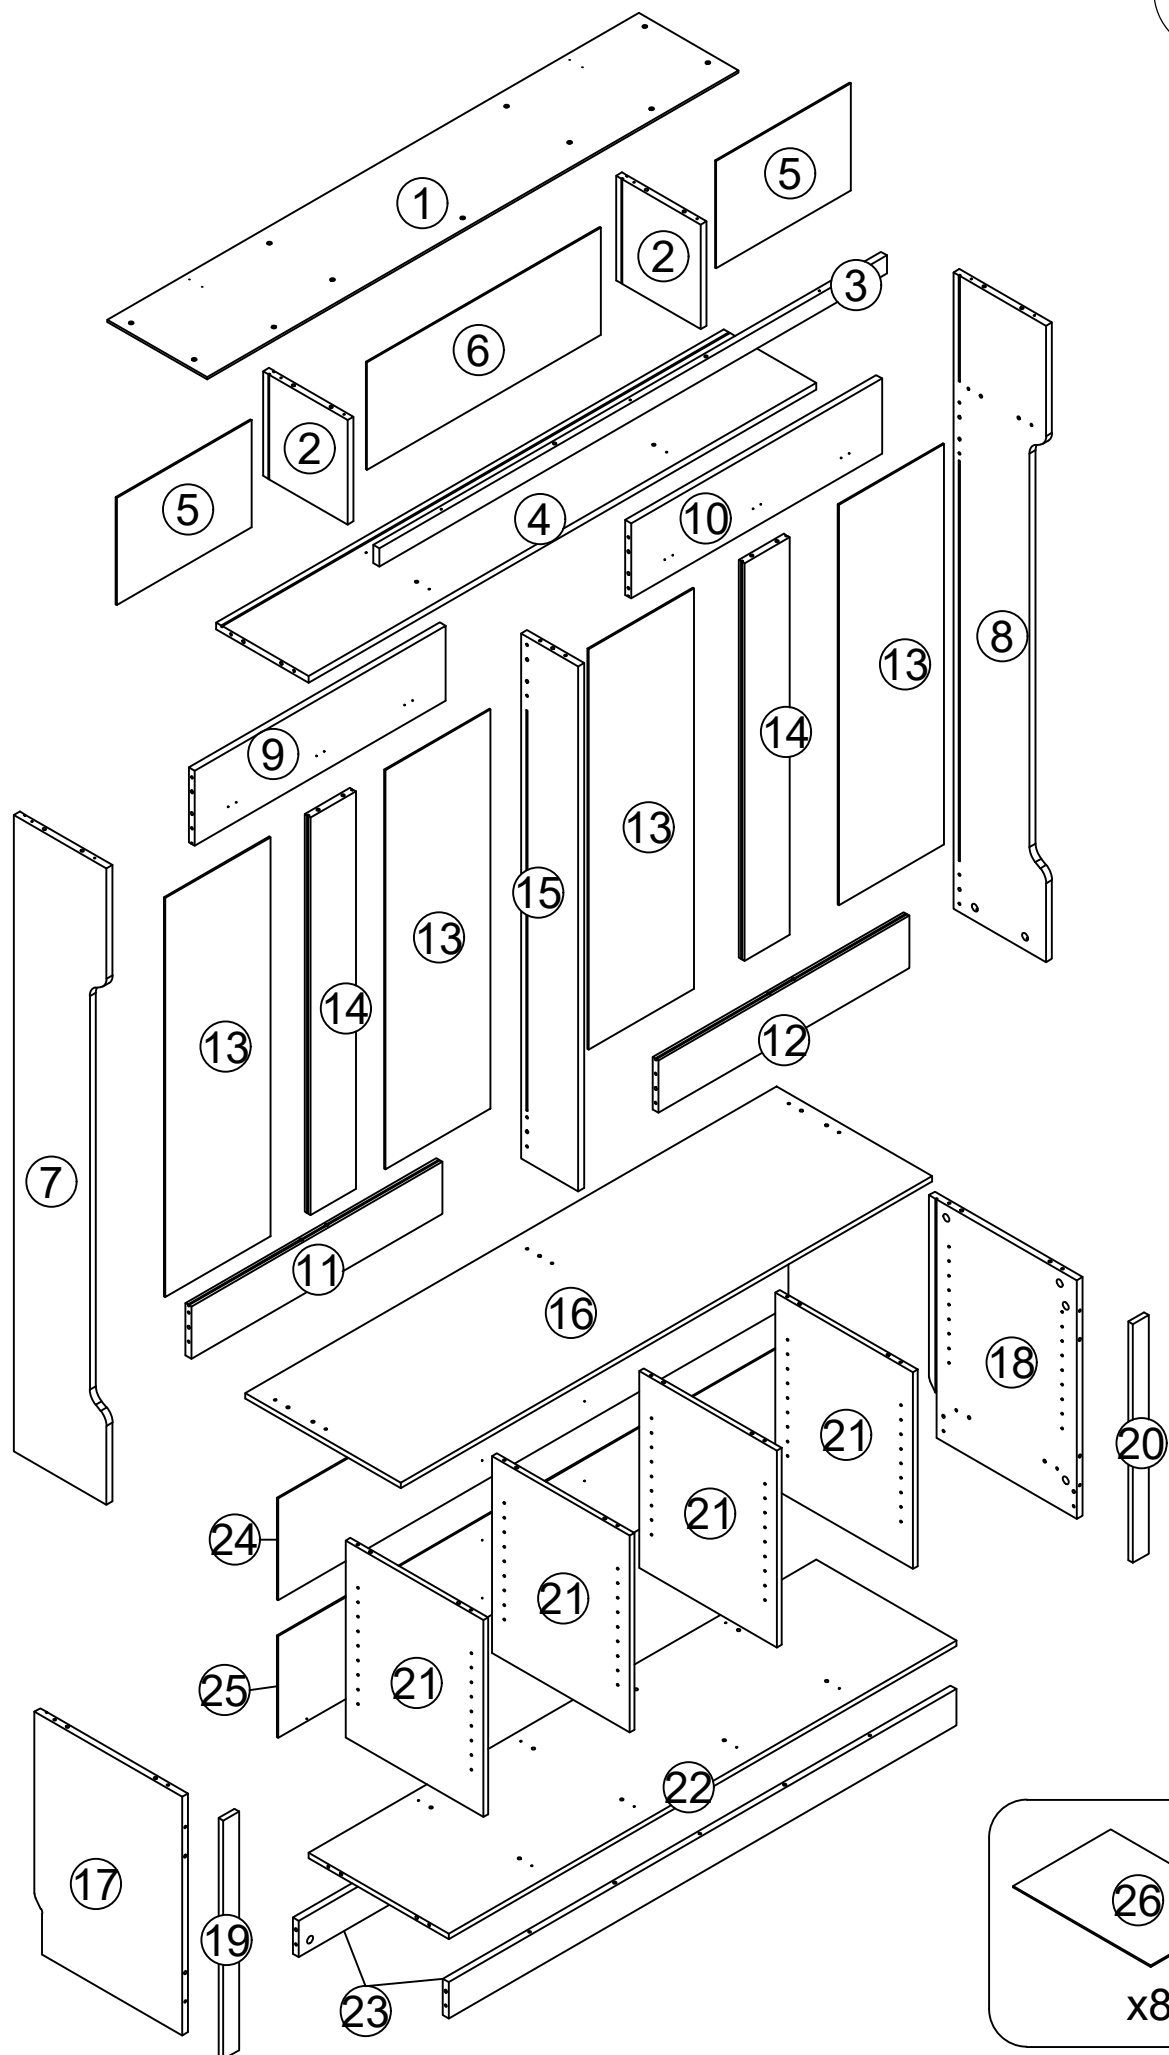



A x58 Ø6x35mm +3(spare)	B x58 Ø15x10mm +3(spare)	C x80 Ø6x30mm +3(spare)	D x25 Ø4x35mm +3(spare)	E x12 Ø3x12mm +2(spare)	F x6
G x2	H x4 Ø4x12mm	I x32	J x15 Ø3x12mm +1(spare)	K x32 Ø3x16mm +3(spare)	L x2 Ø6x30mm
M x15 Ø15mm +2(spare)	N x14 Ø20mm +2(spare)	O x4 Ø3x12mm	K-1 K-2		

A x2 Ø6x35mm	4 x1
------------------------	-------------

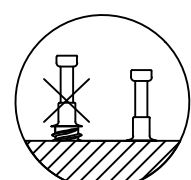
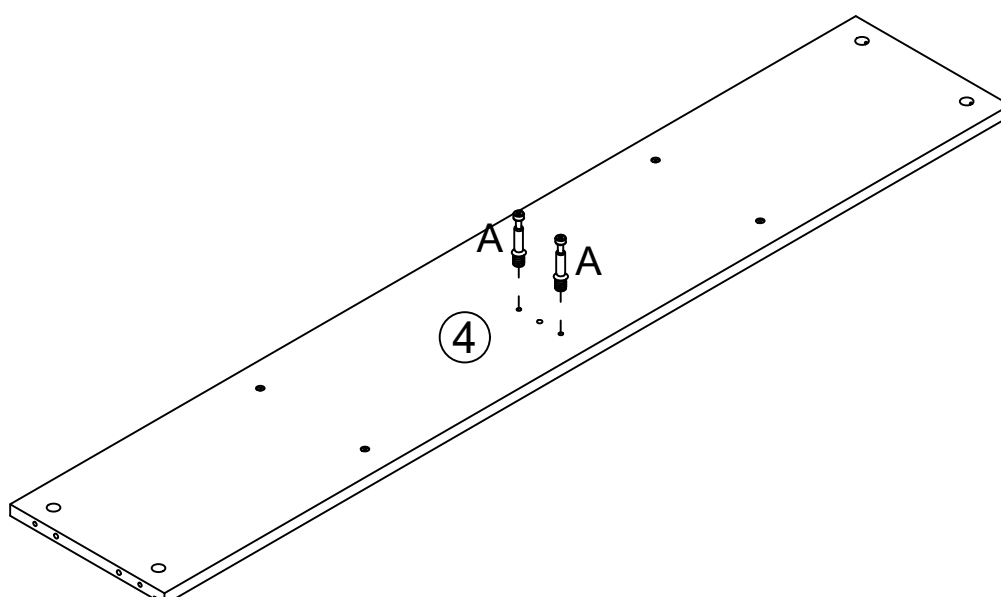




C x4
Ø6x30mmD x4
Ø4x35mm

② x1

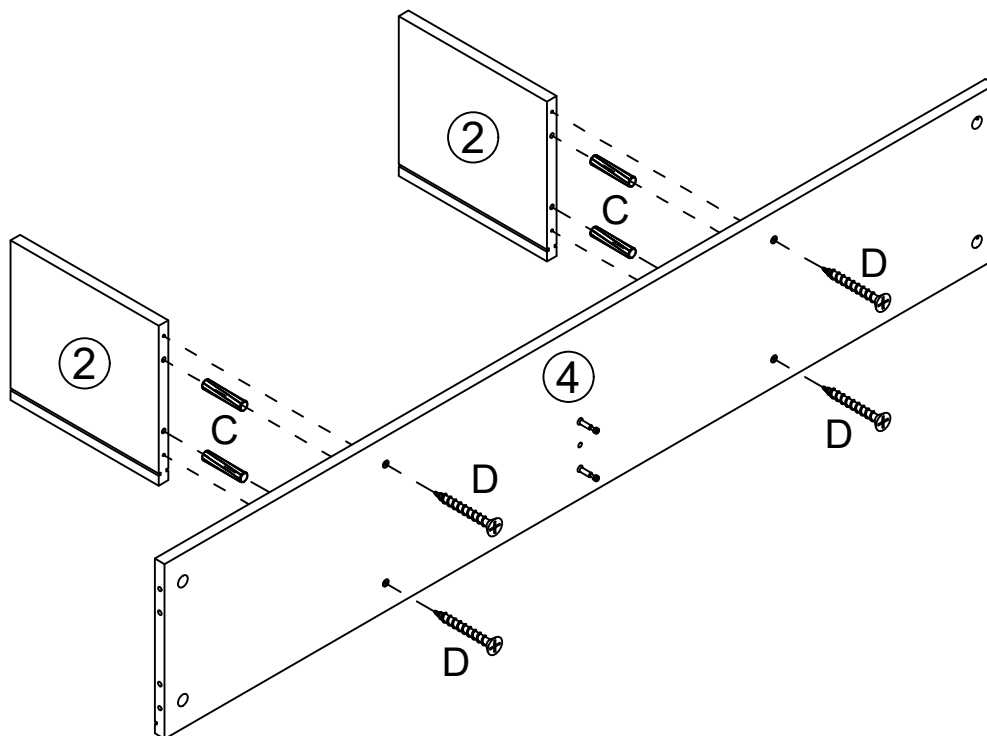
A x8
Ø6x35mm

15 x1

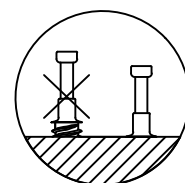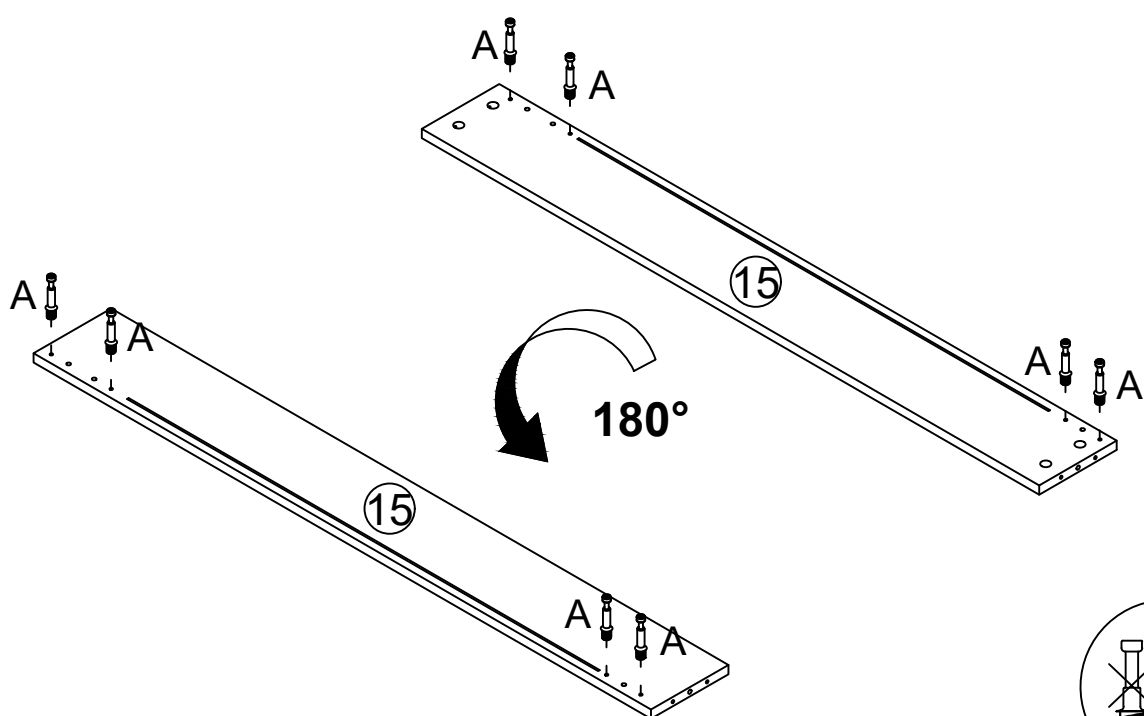

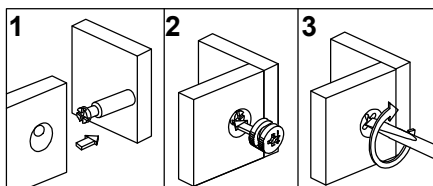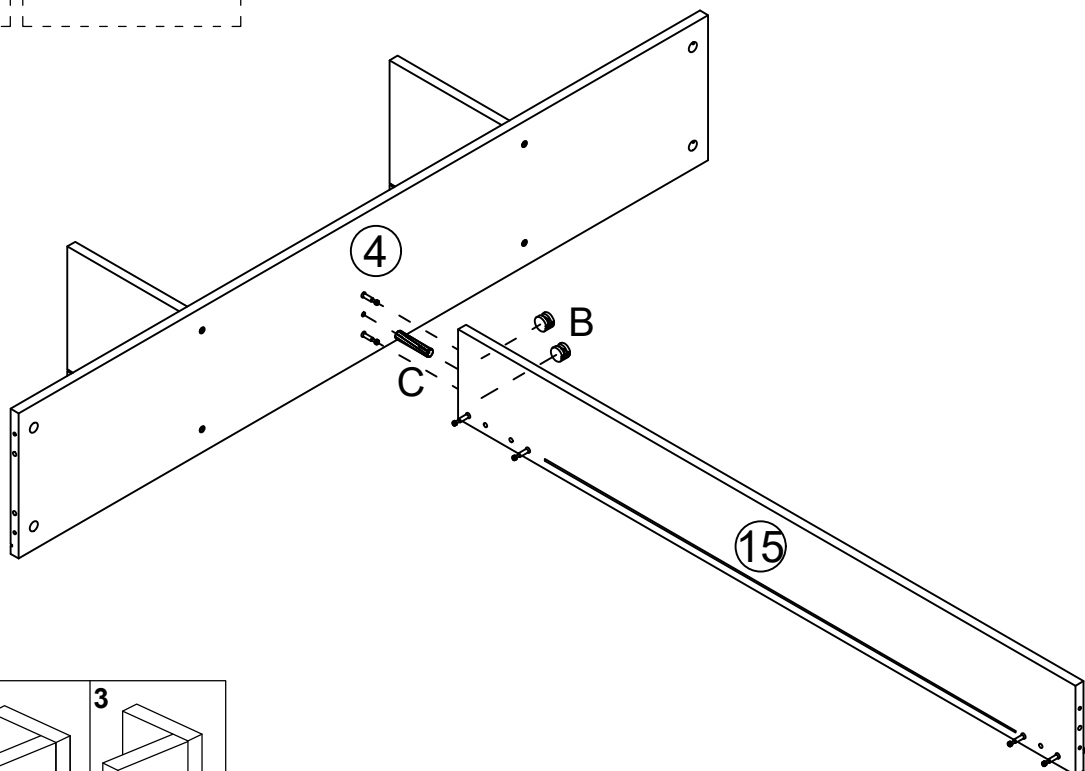B x2
Ø15x10mmC x1
Ø6x30mmC x4
Ø6x30mm




9 x1










11 x1






14 x1

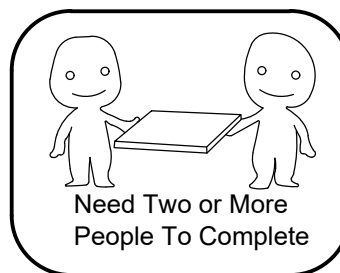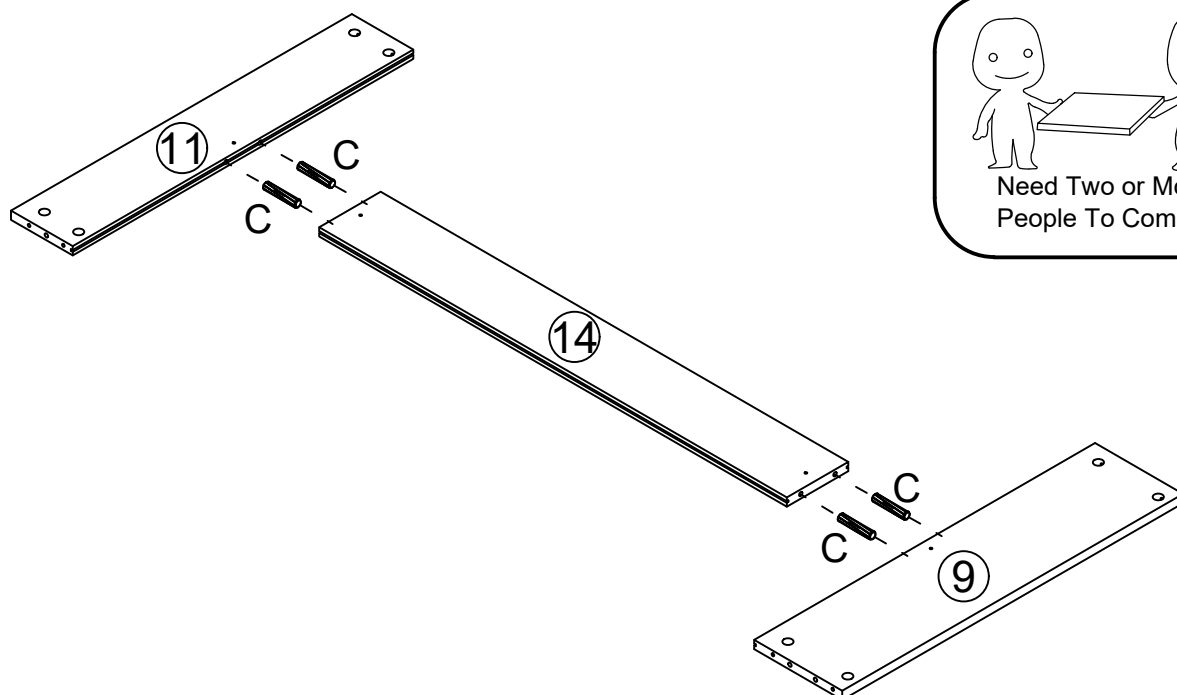



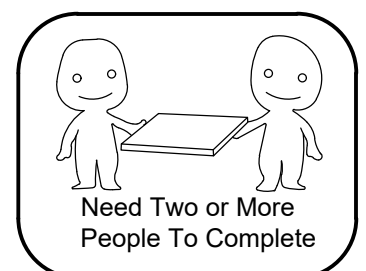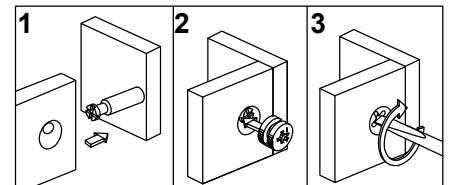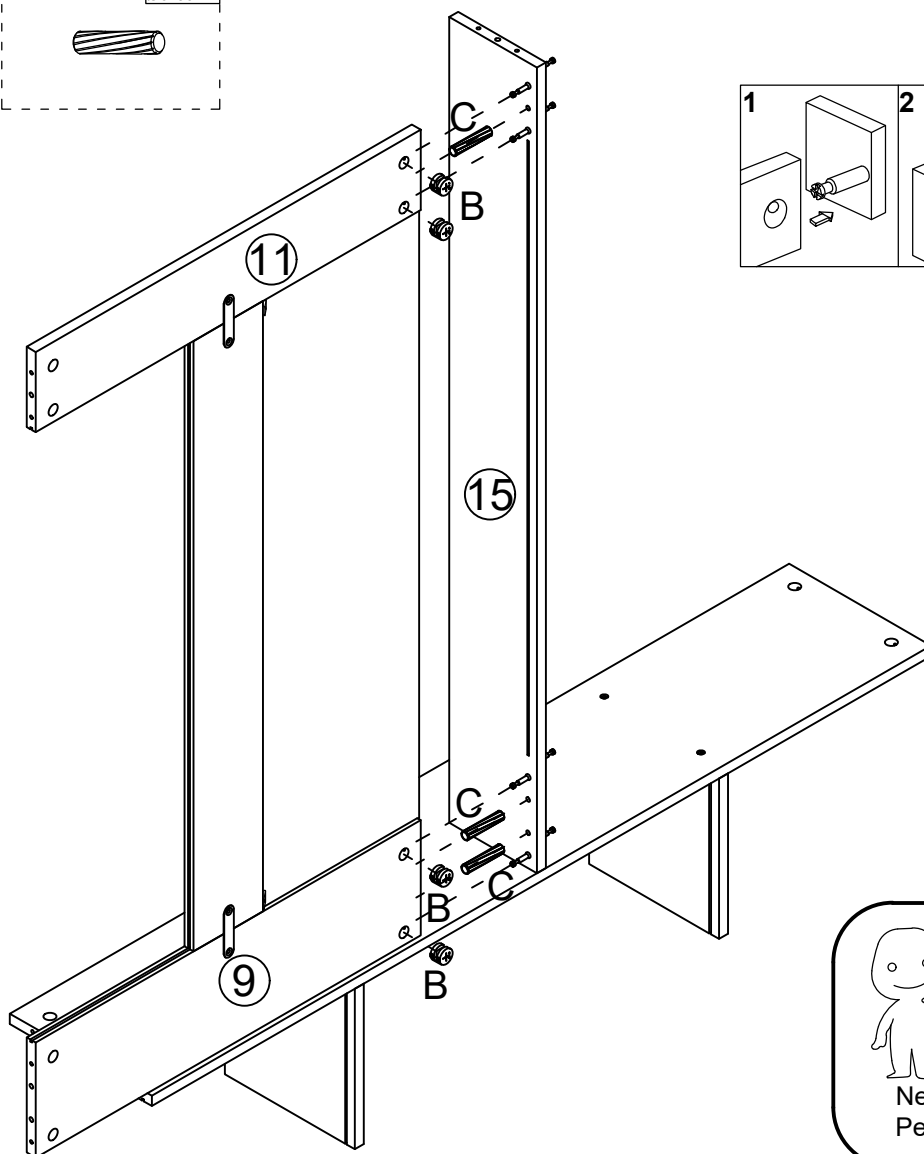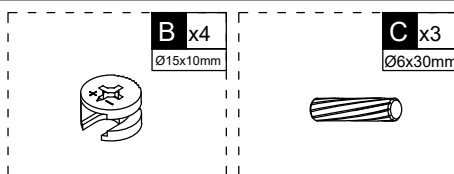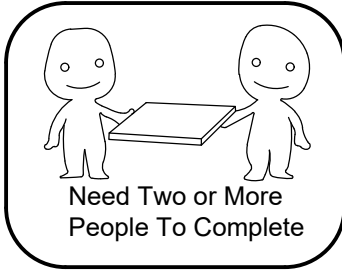
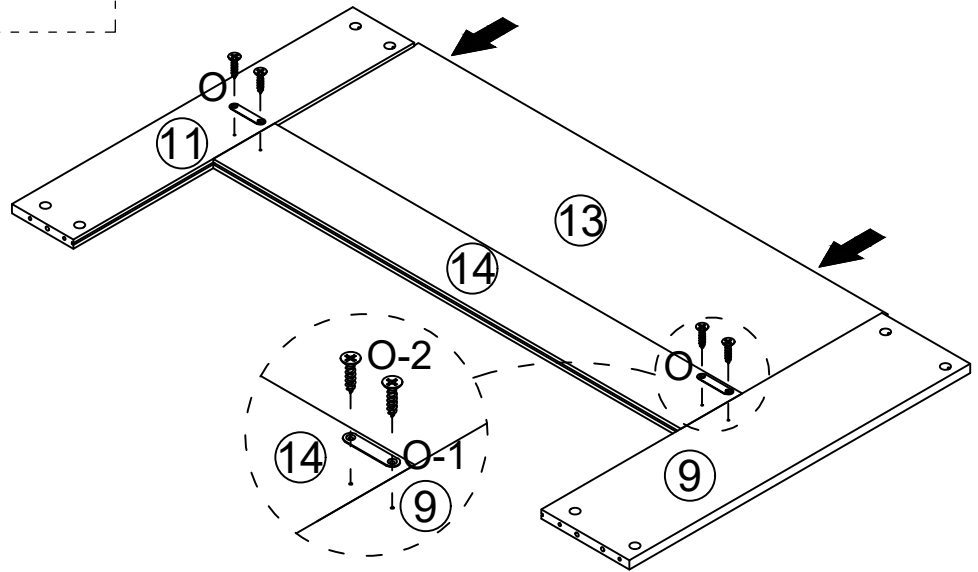
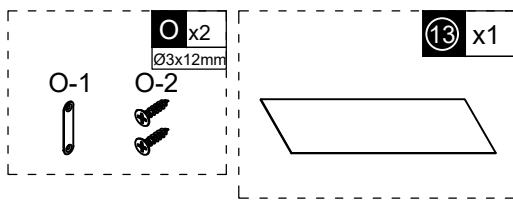


13 x1

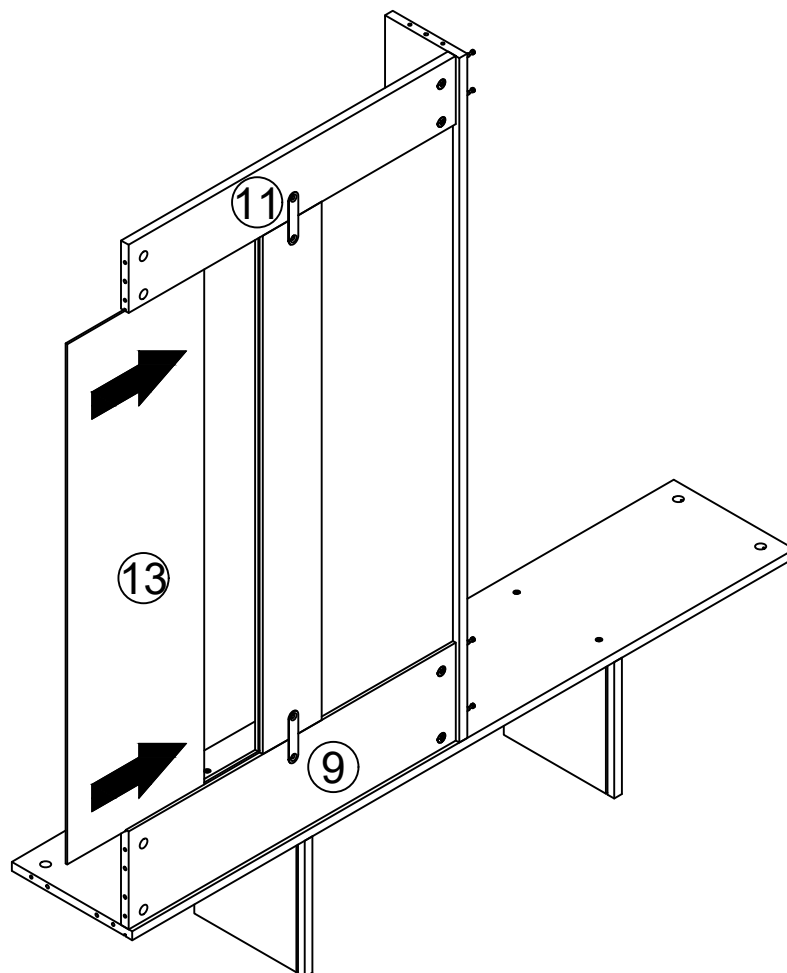A x6
Ø6x35mm

7 x1

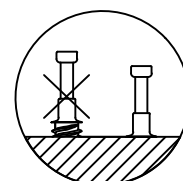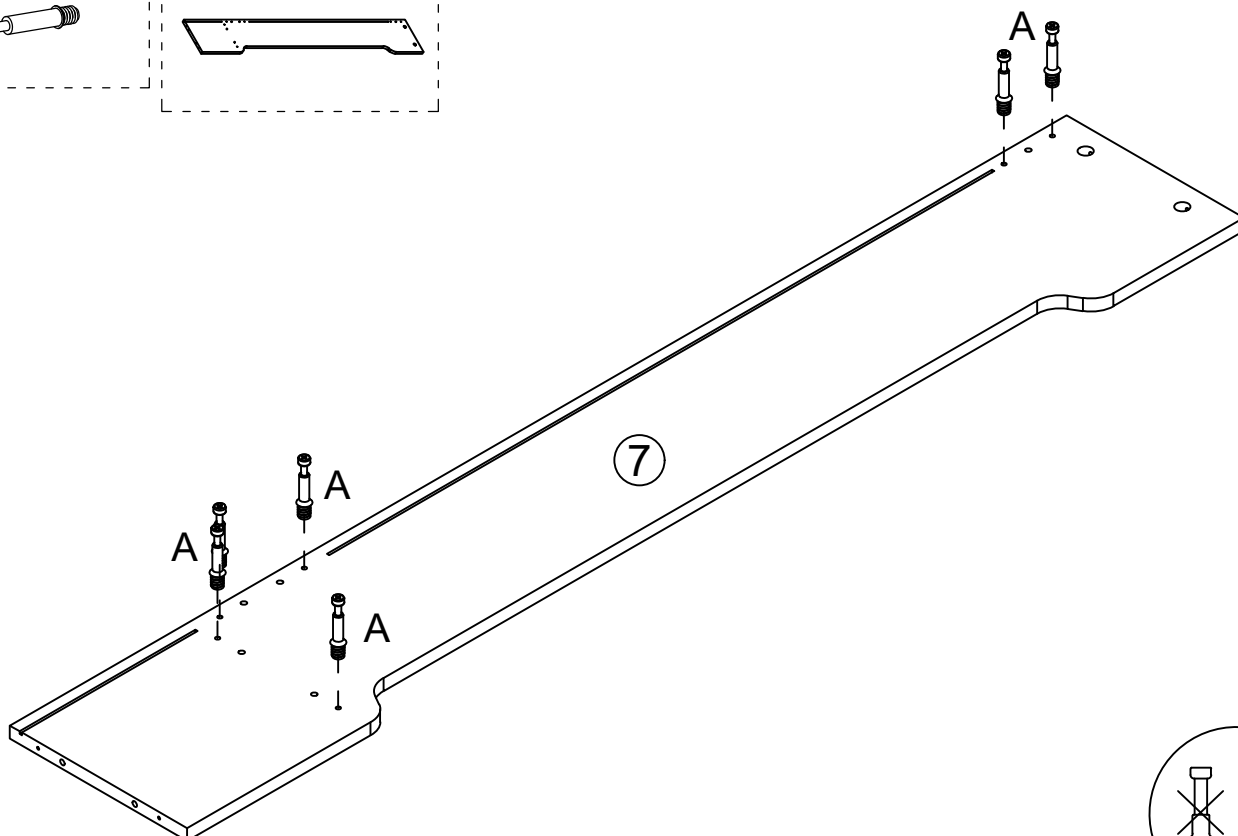


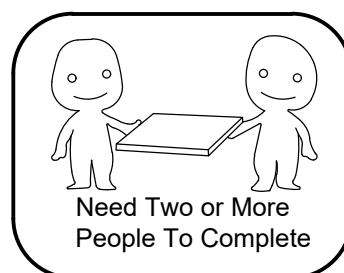
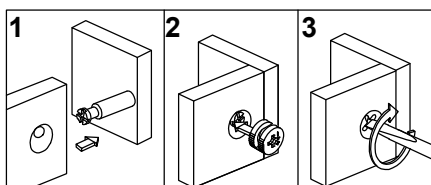
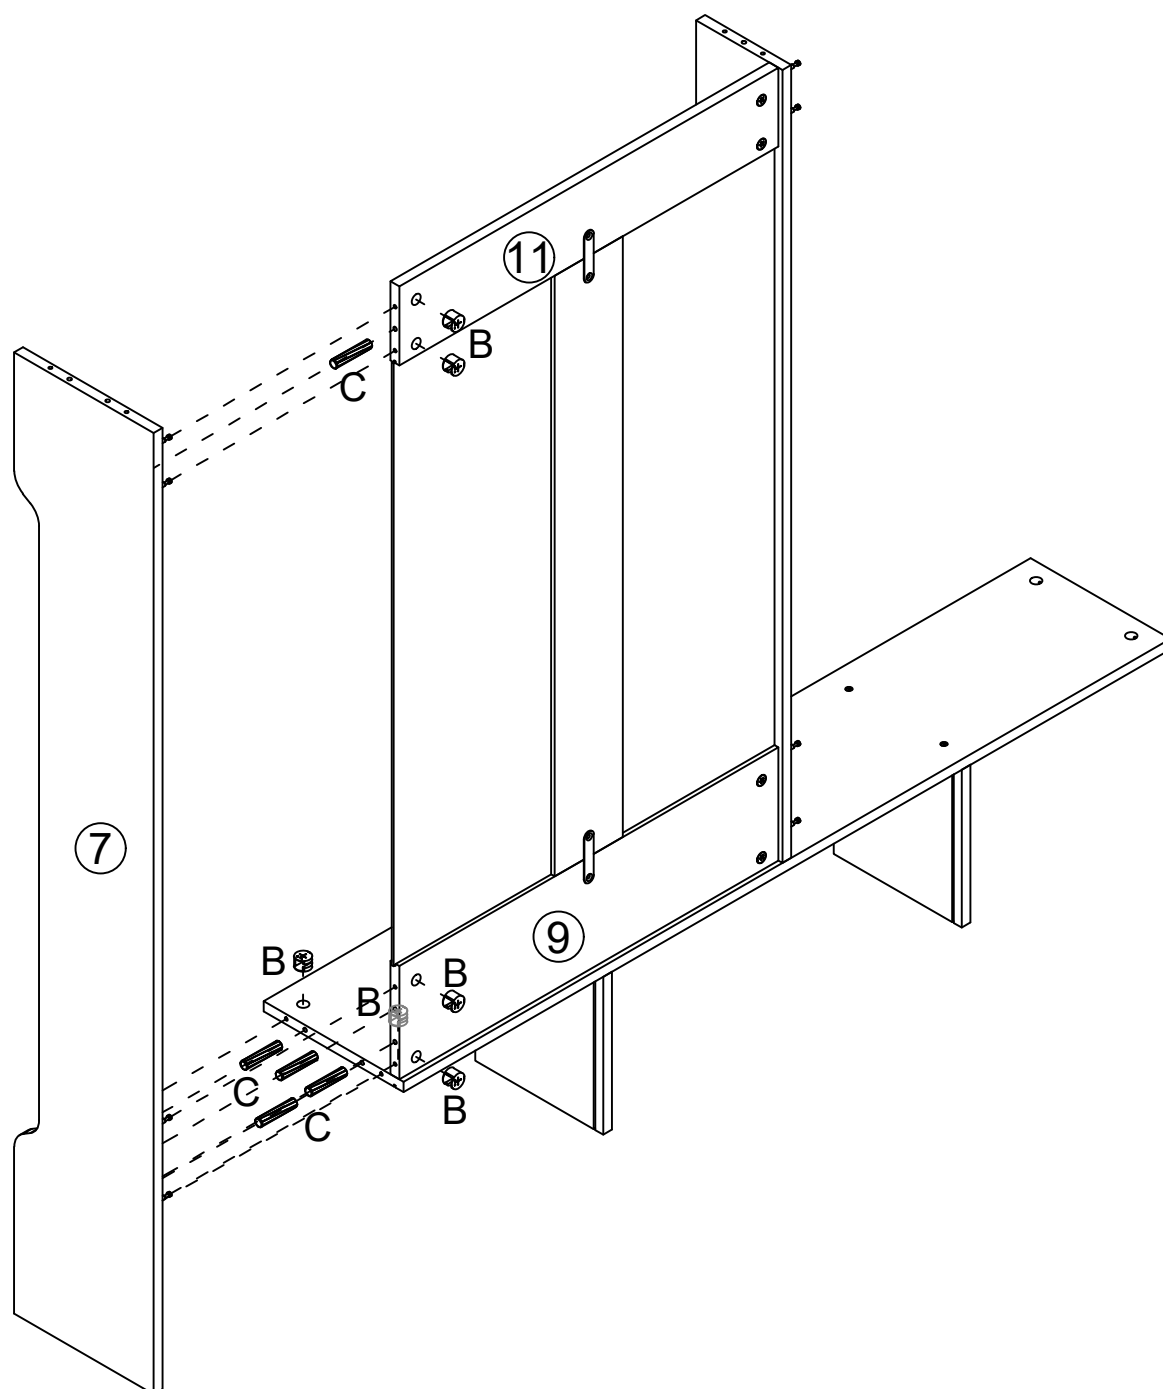
B x6
Ø15x10mmC x5
Ø6x30mm

C x4
Ø6x30mm

10 x1

12 x1


14 x1

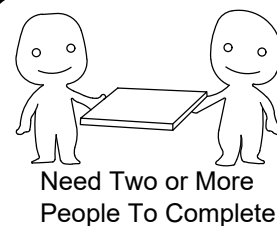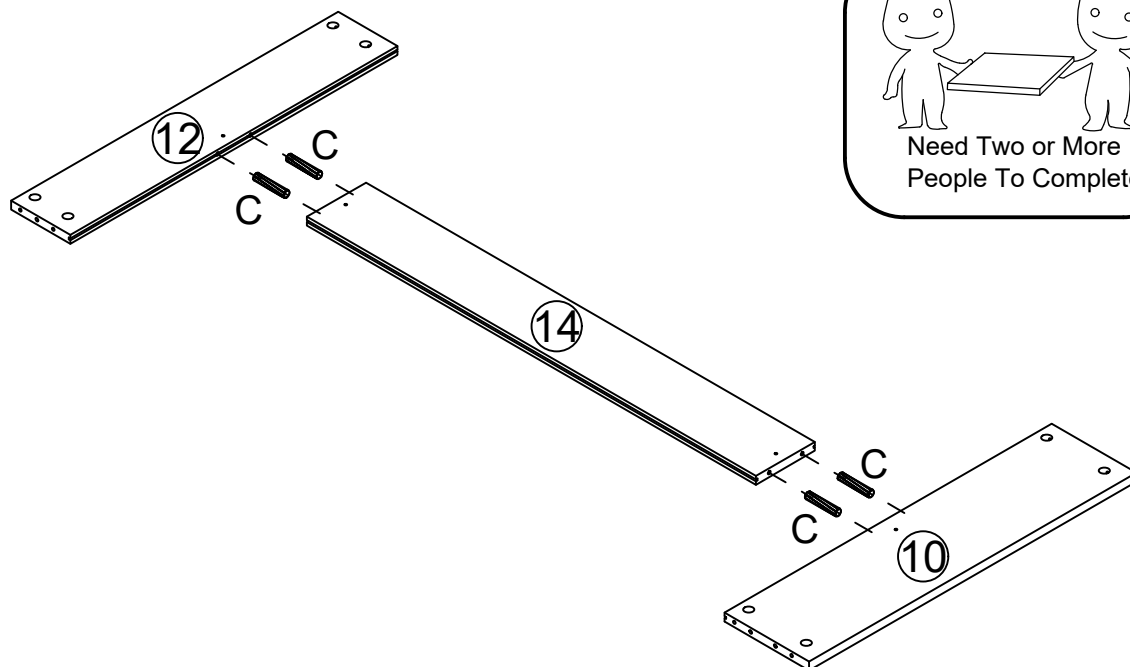

O x2
Ø3x12mm

13 x1



O-1






O-2

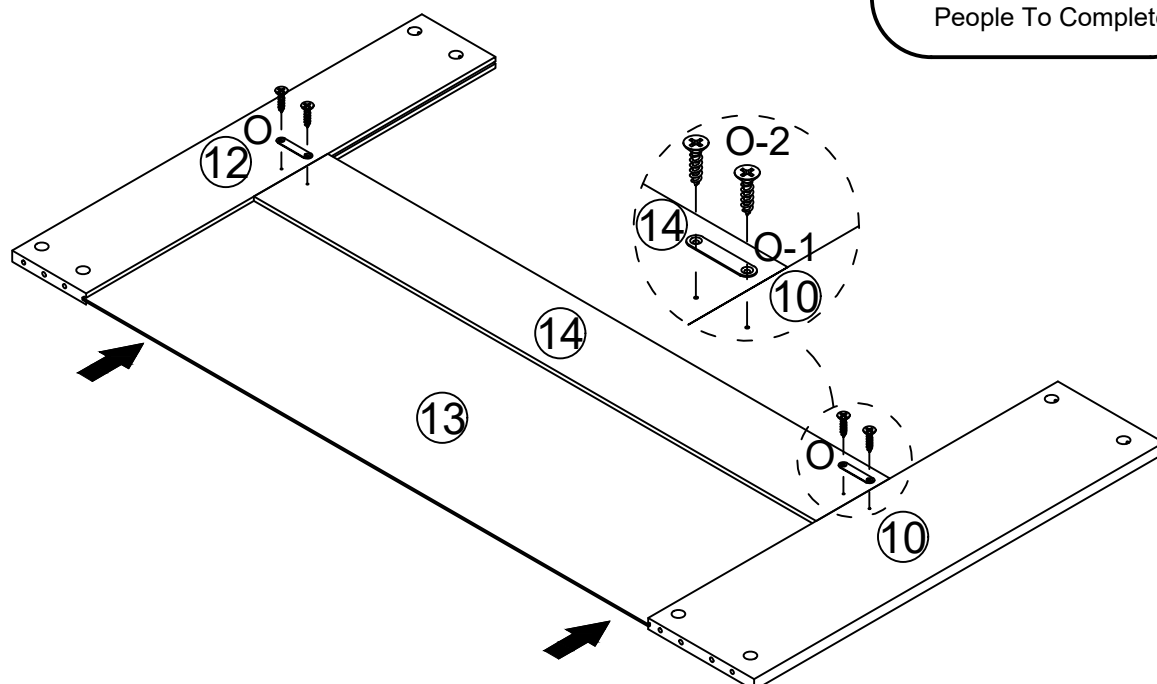

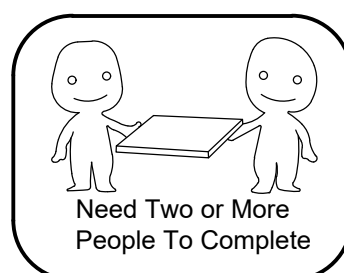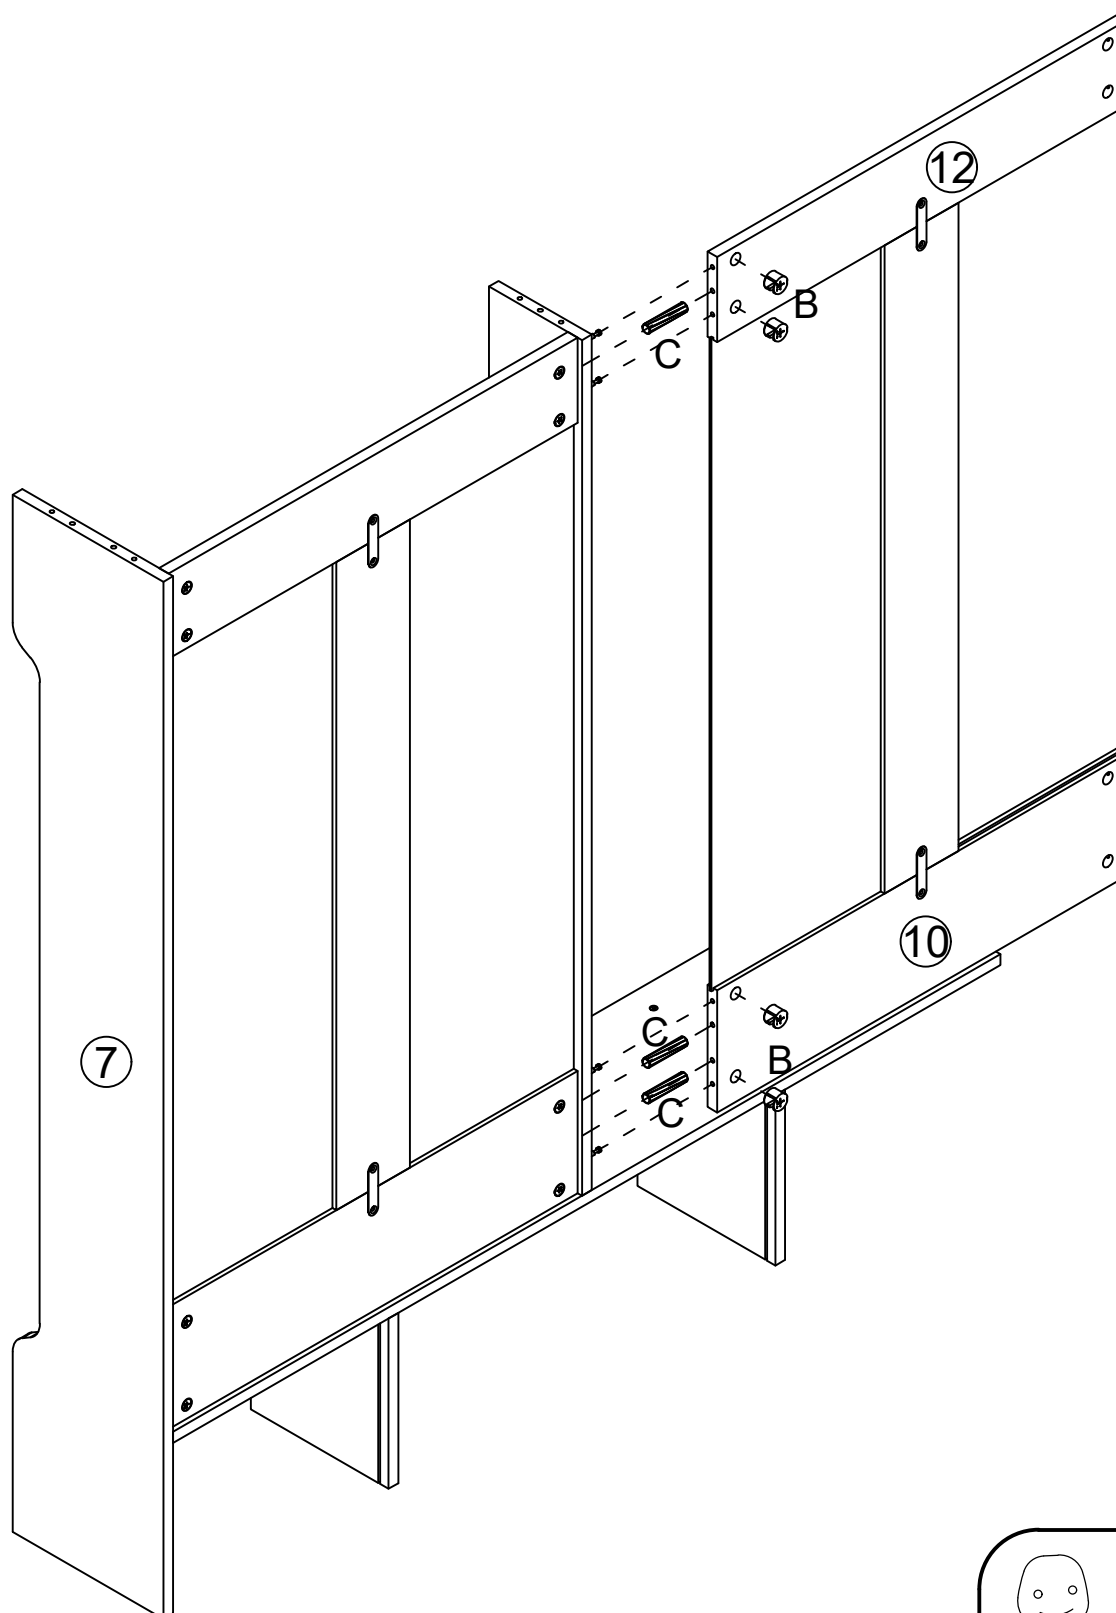B x4
Ø15x10mm**C** x3
Ø6x30mm

⑬ x1

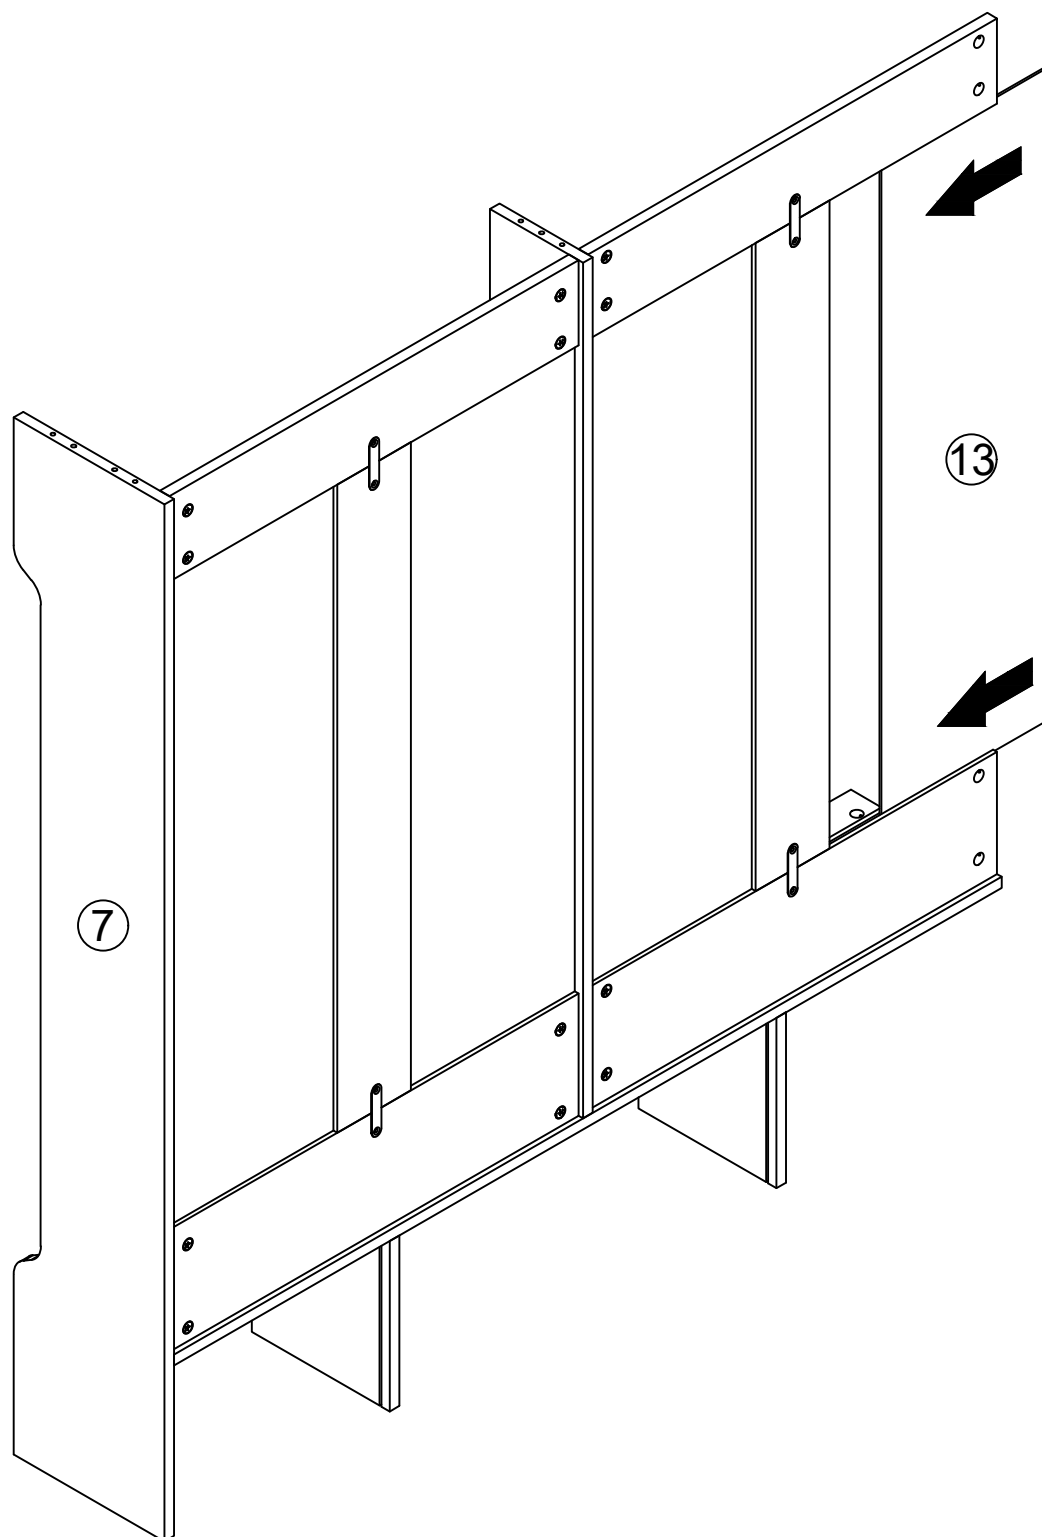



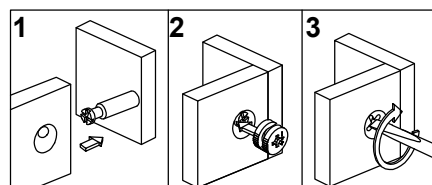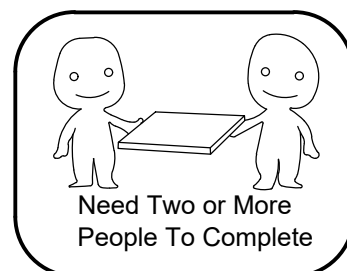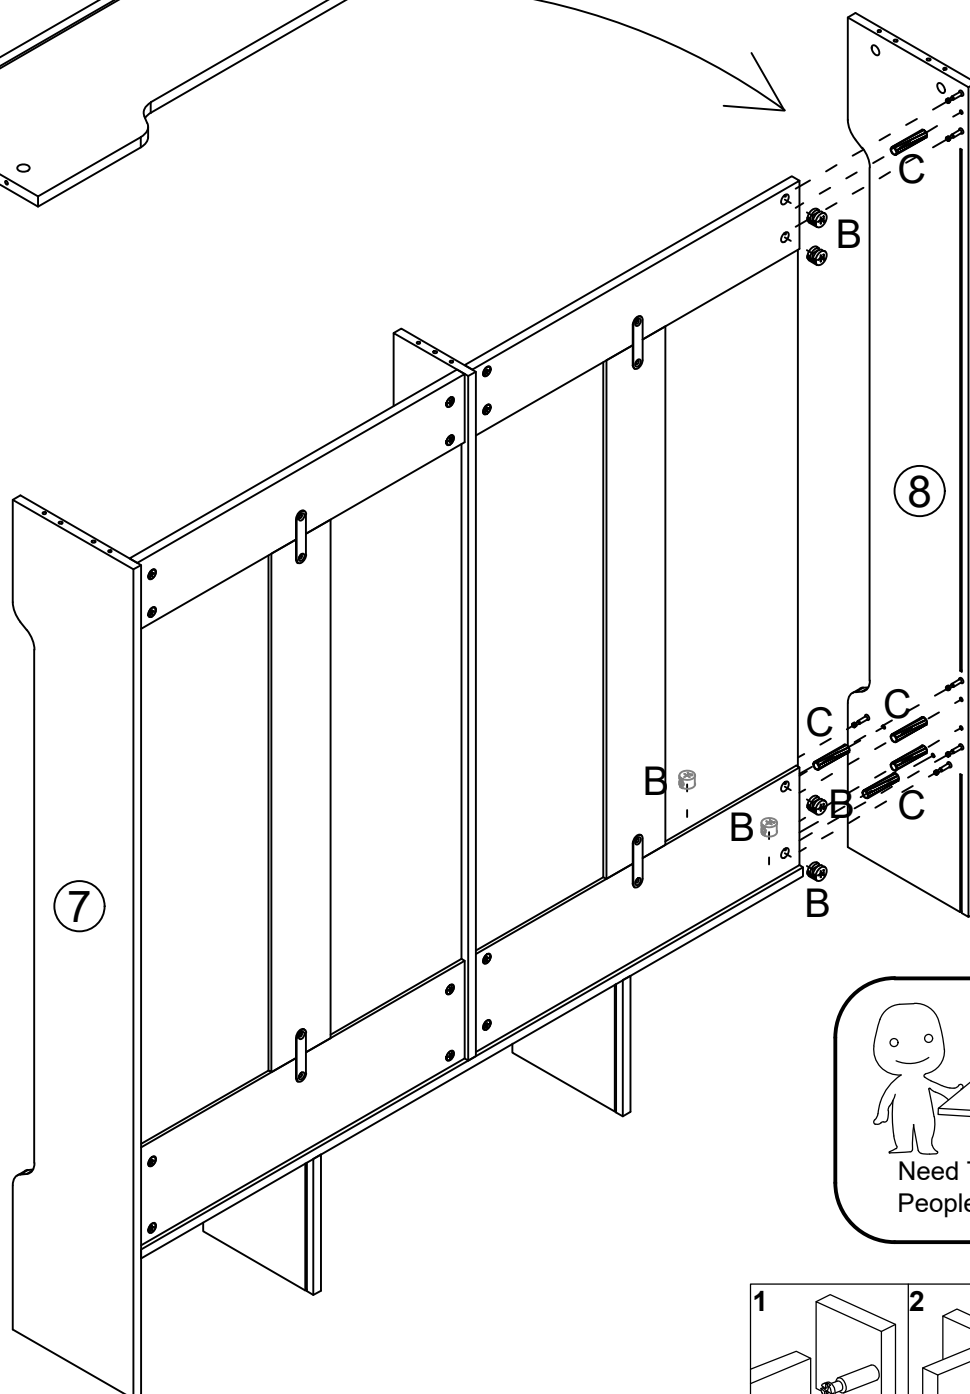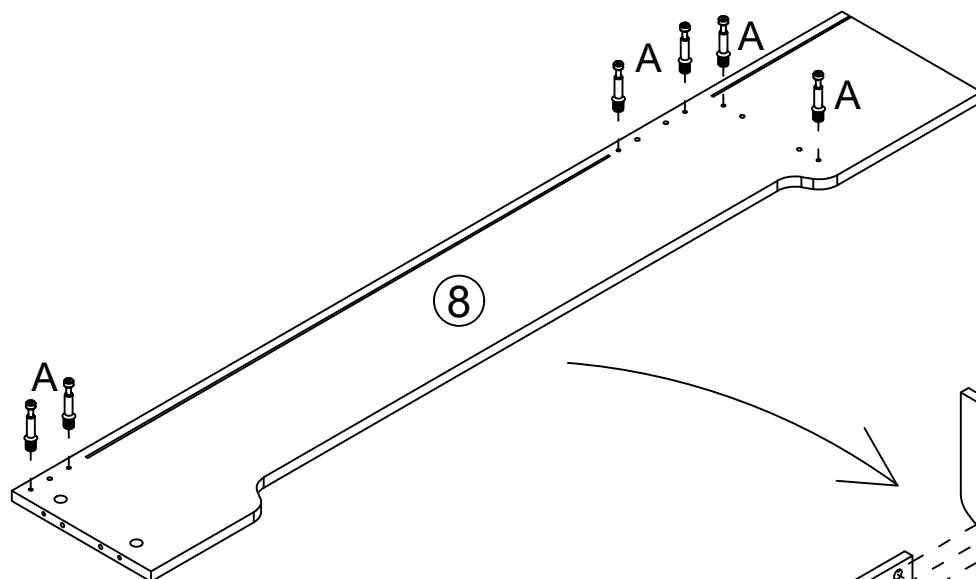A x6
Ø6x35mmB x6
Ø15x10mmC x5
Ø6x30mm

⑤ x2



⑥ x1

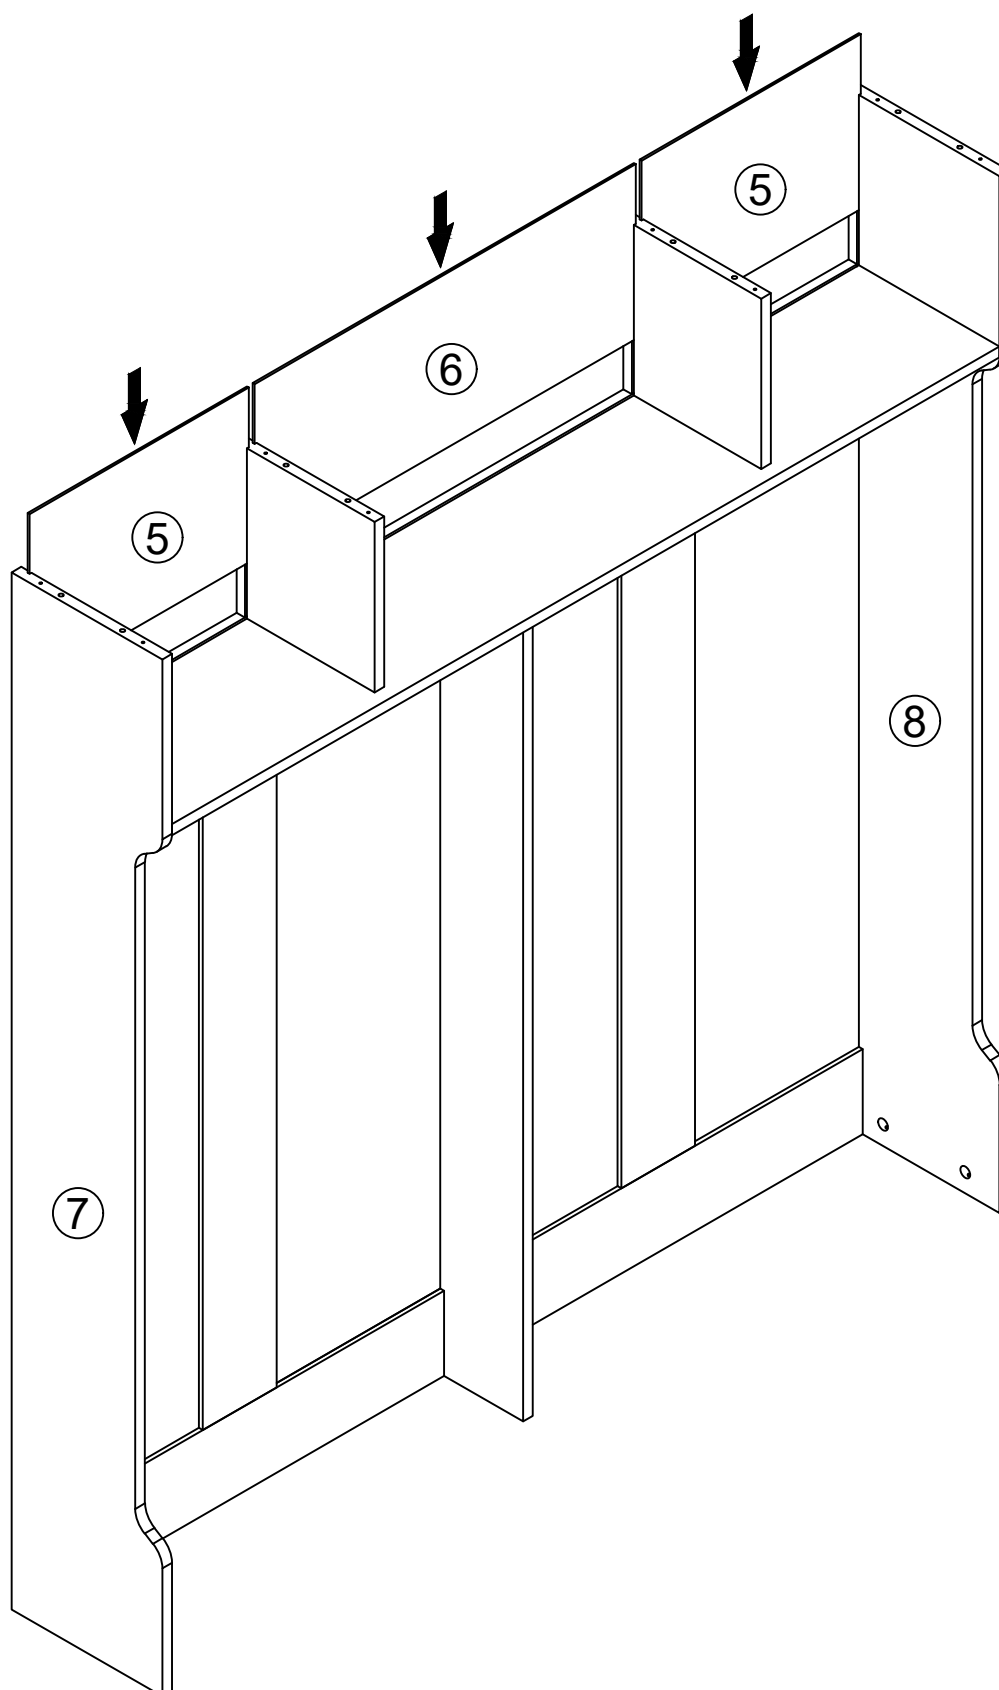




C x8
Ø6x30mmD x8
Ø4x35mm

G x2


H x4
Ø3x12mm

① x1


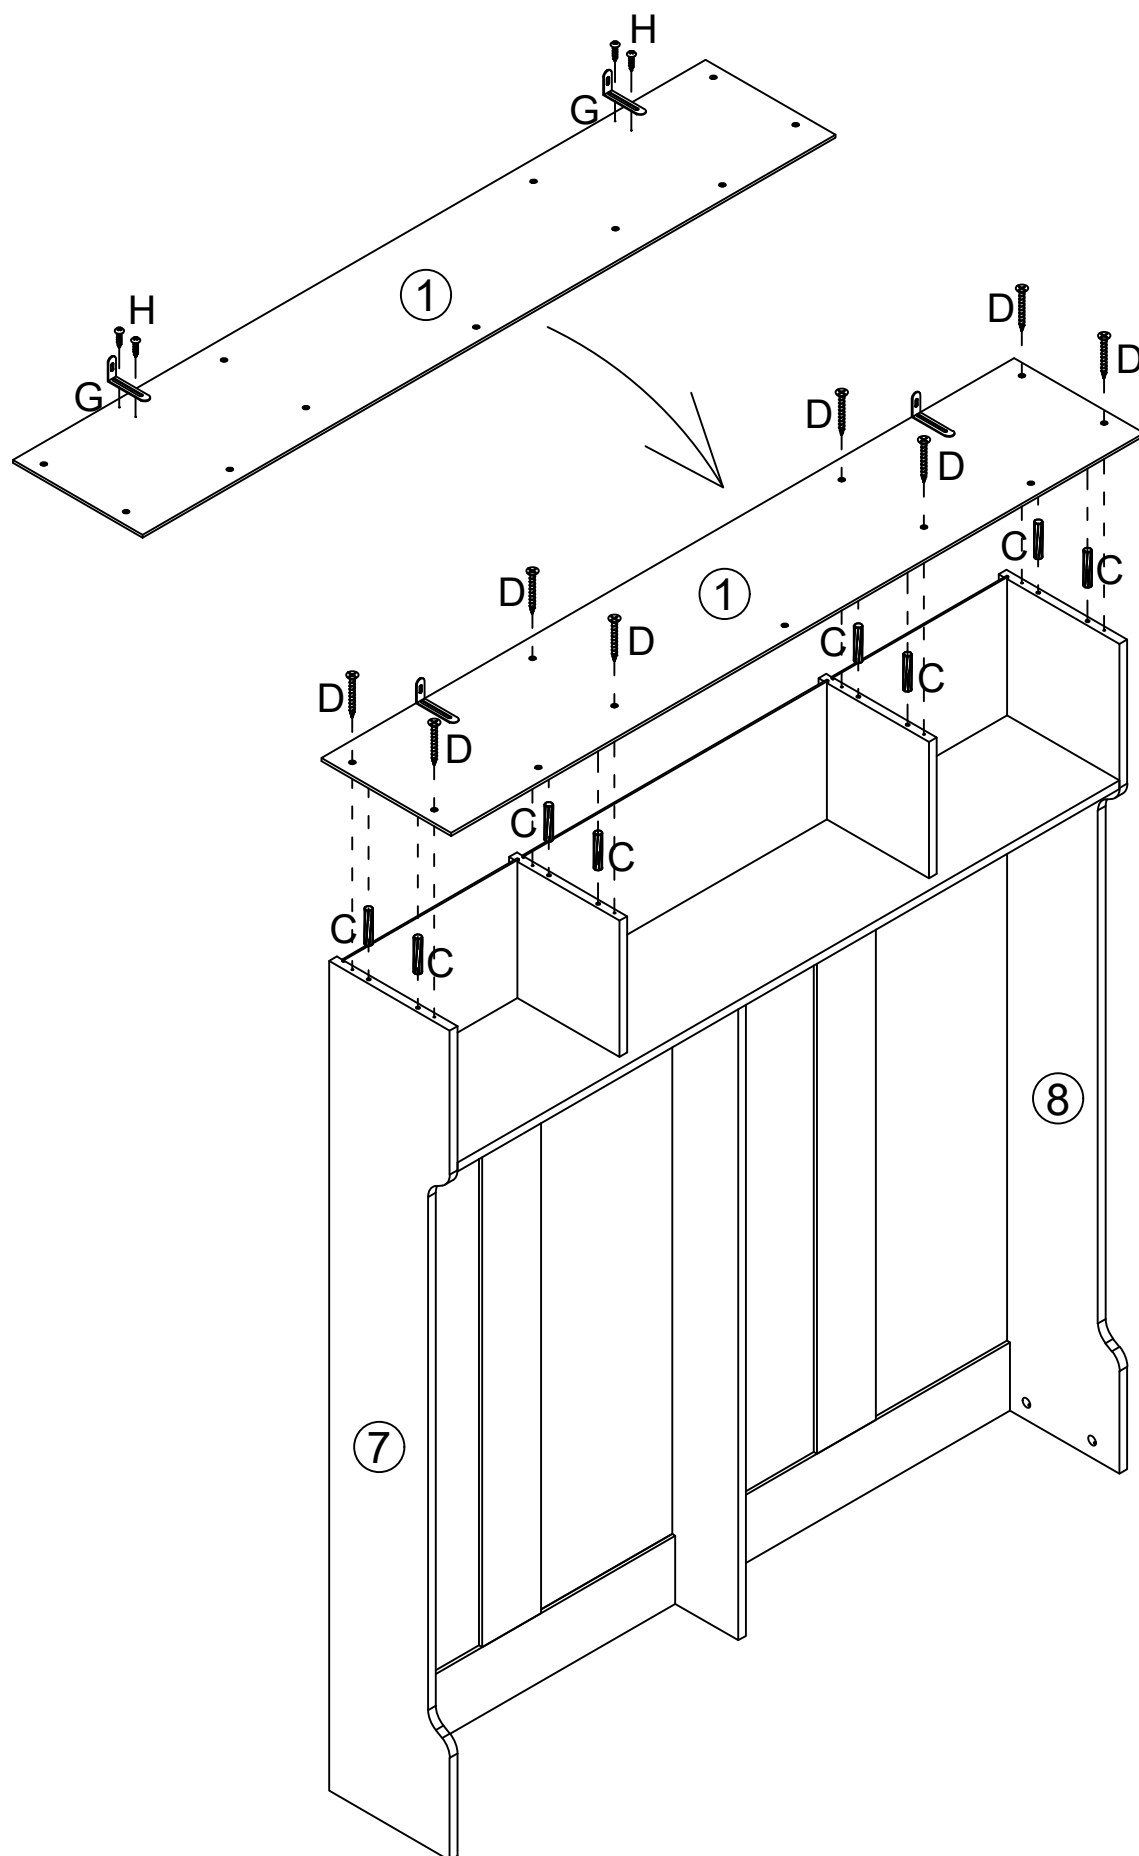



C x2
Ø6x30mmD x3
Ø4x35mm

③ x1

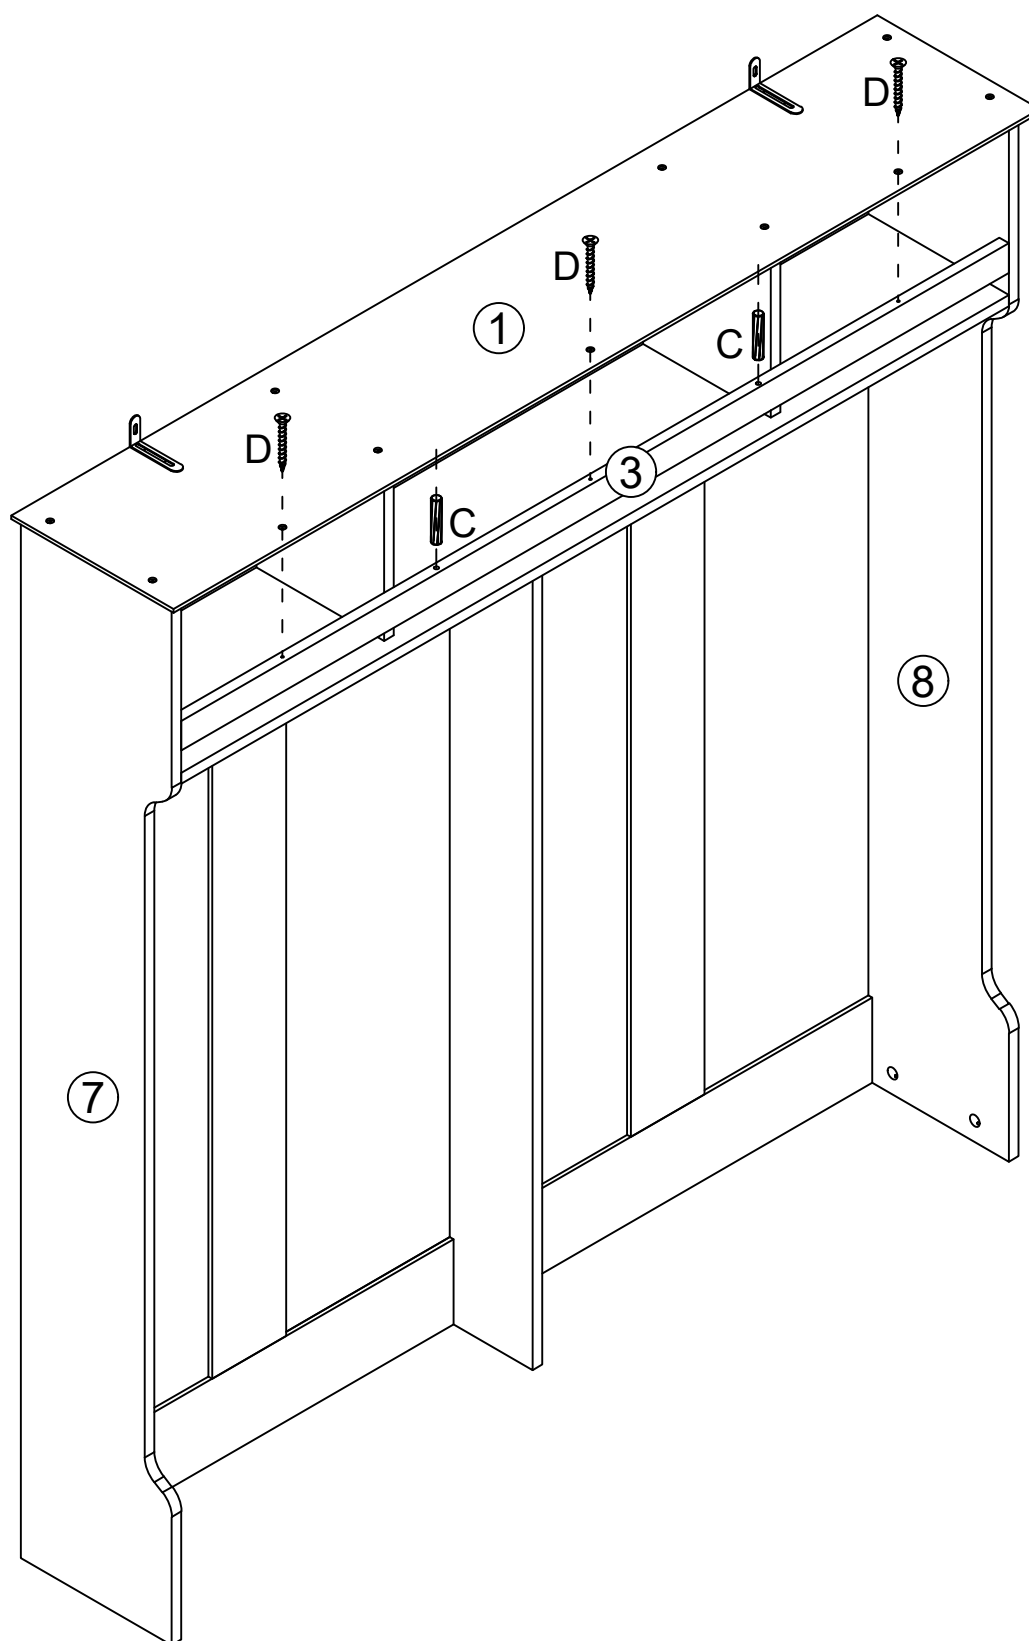

A x6
Ø6x35mm

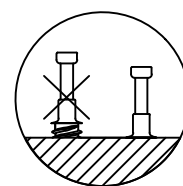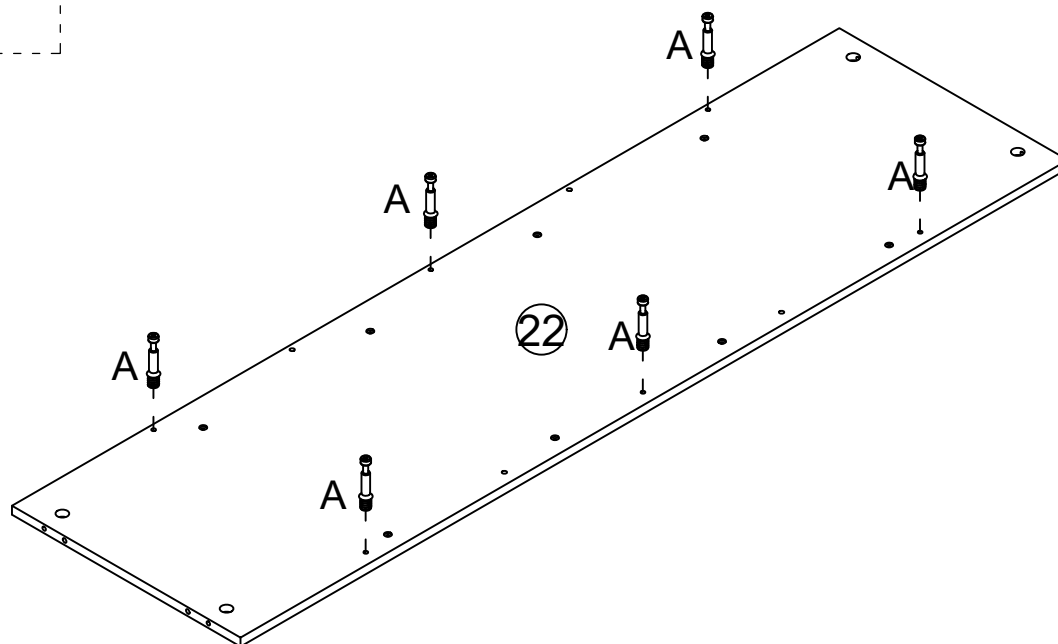



C x8
Ø6x30mm



D x8
Ø4x35mm





21 x4

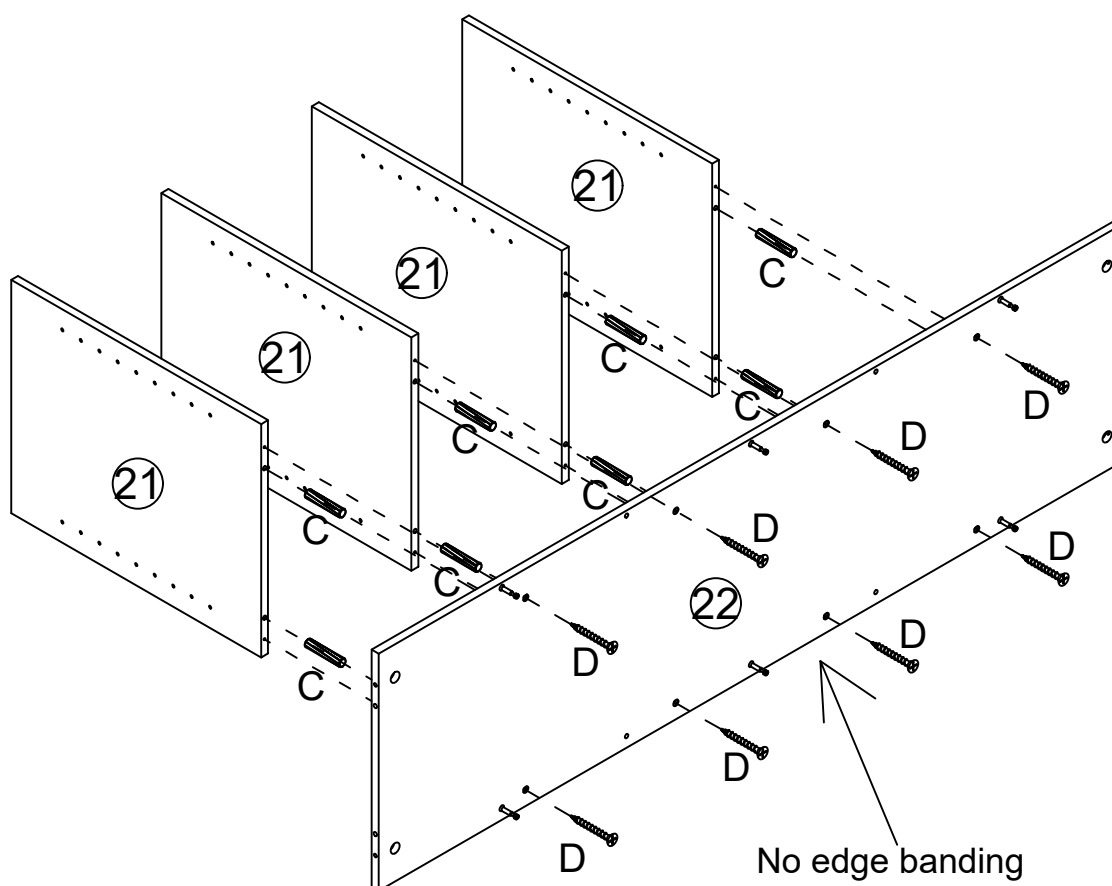


B x6
Ø15x10mmC x4
Ø6x30mm



23 x2

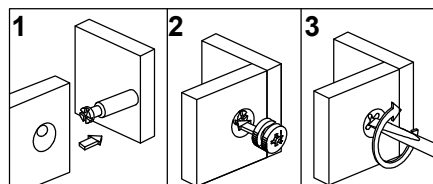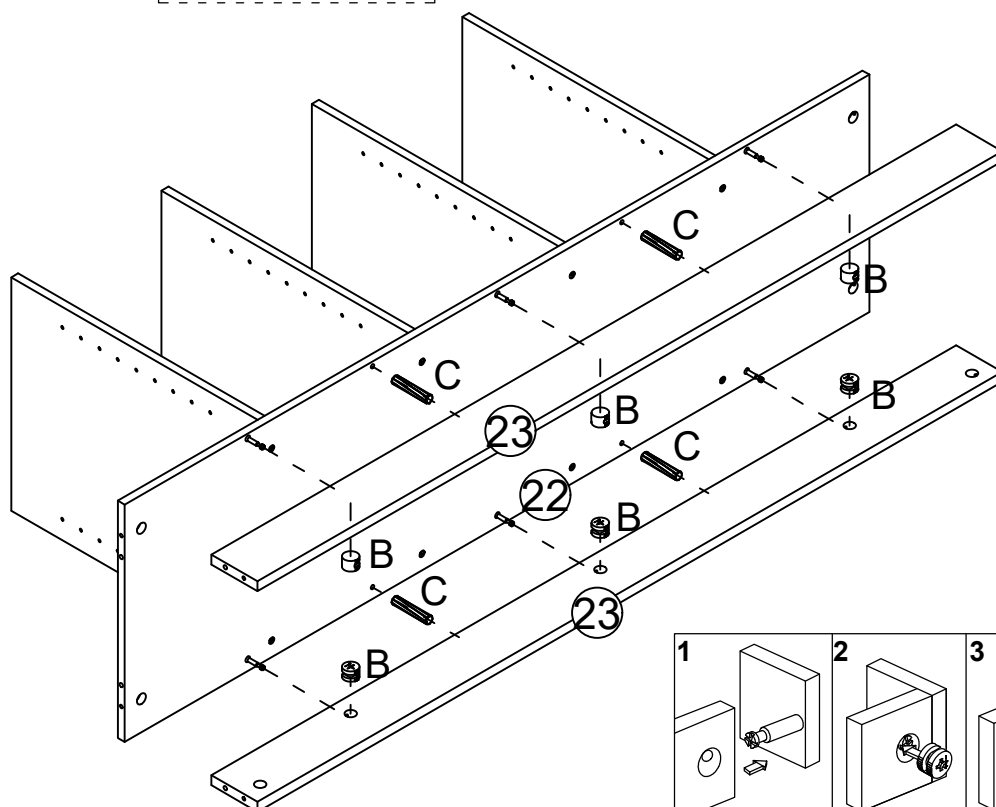A x8
Ø6x35mm

17 x1



18 x1

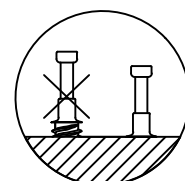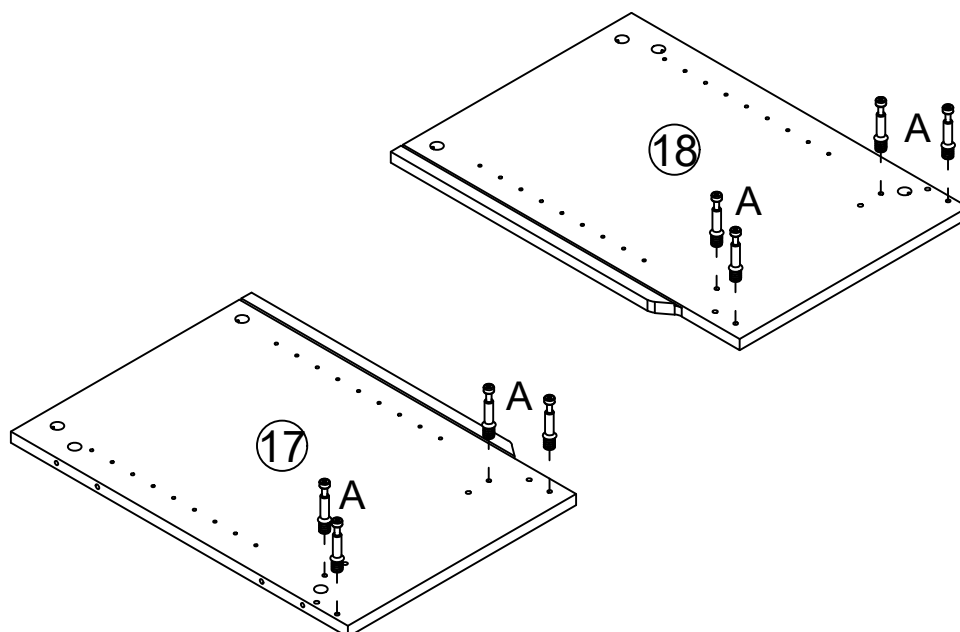





B	x8
Ø15x10mm	



C x8
Ø6x30mm

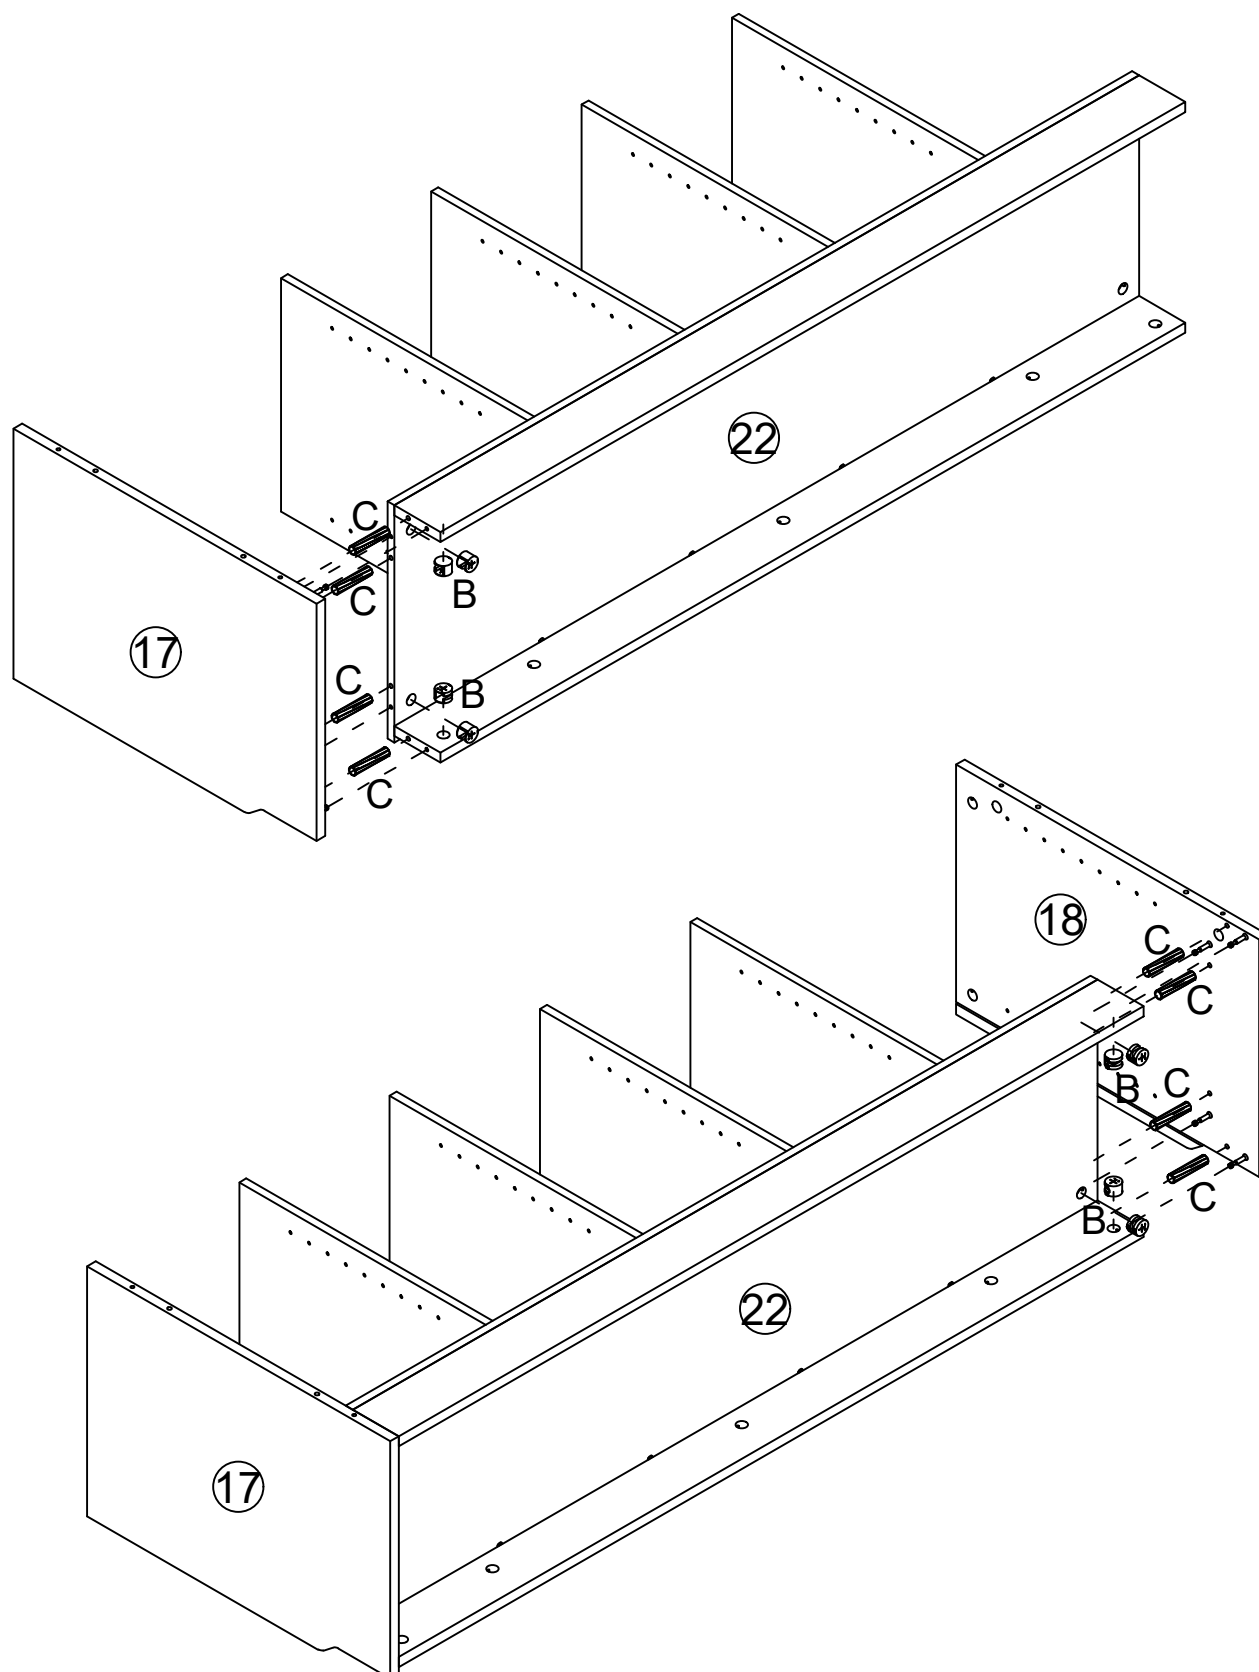

A x4
Ø6x35mm




B x4
Ø15x10mm








C x4
Ø6x30mm




19 x1






20 x1

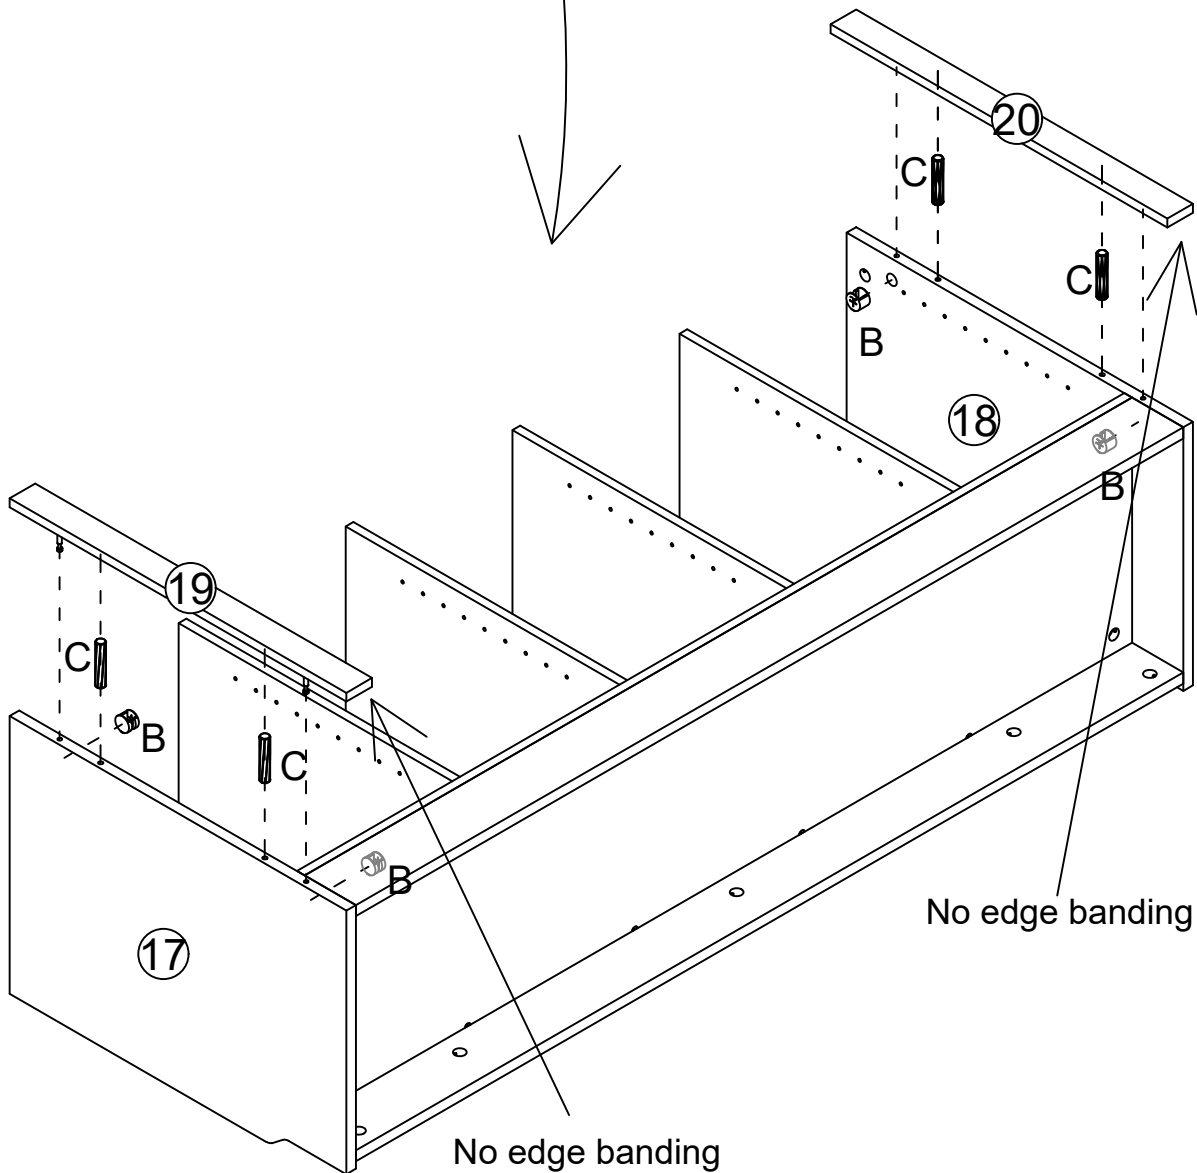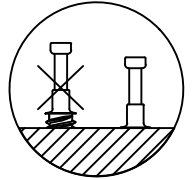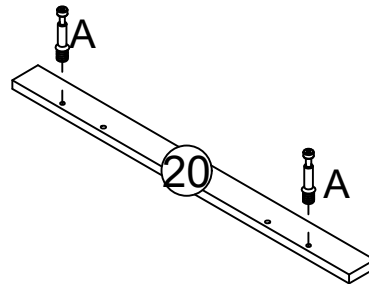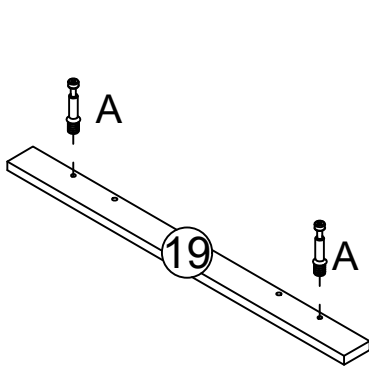


A x12
Ø6x35mmB x12
Ø15x10mmC x12
Ø6x30mm

16 x1

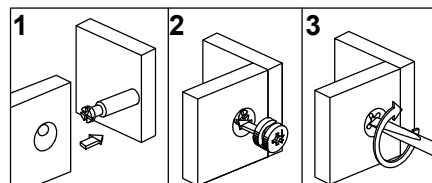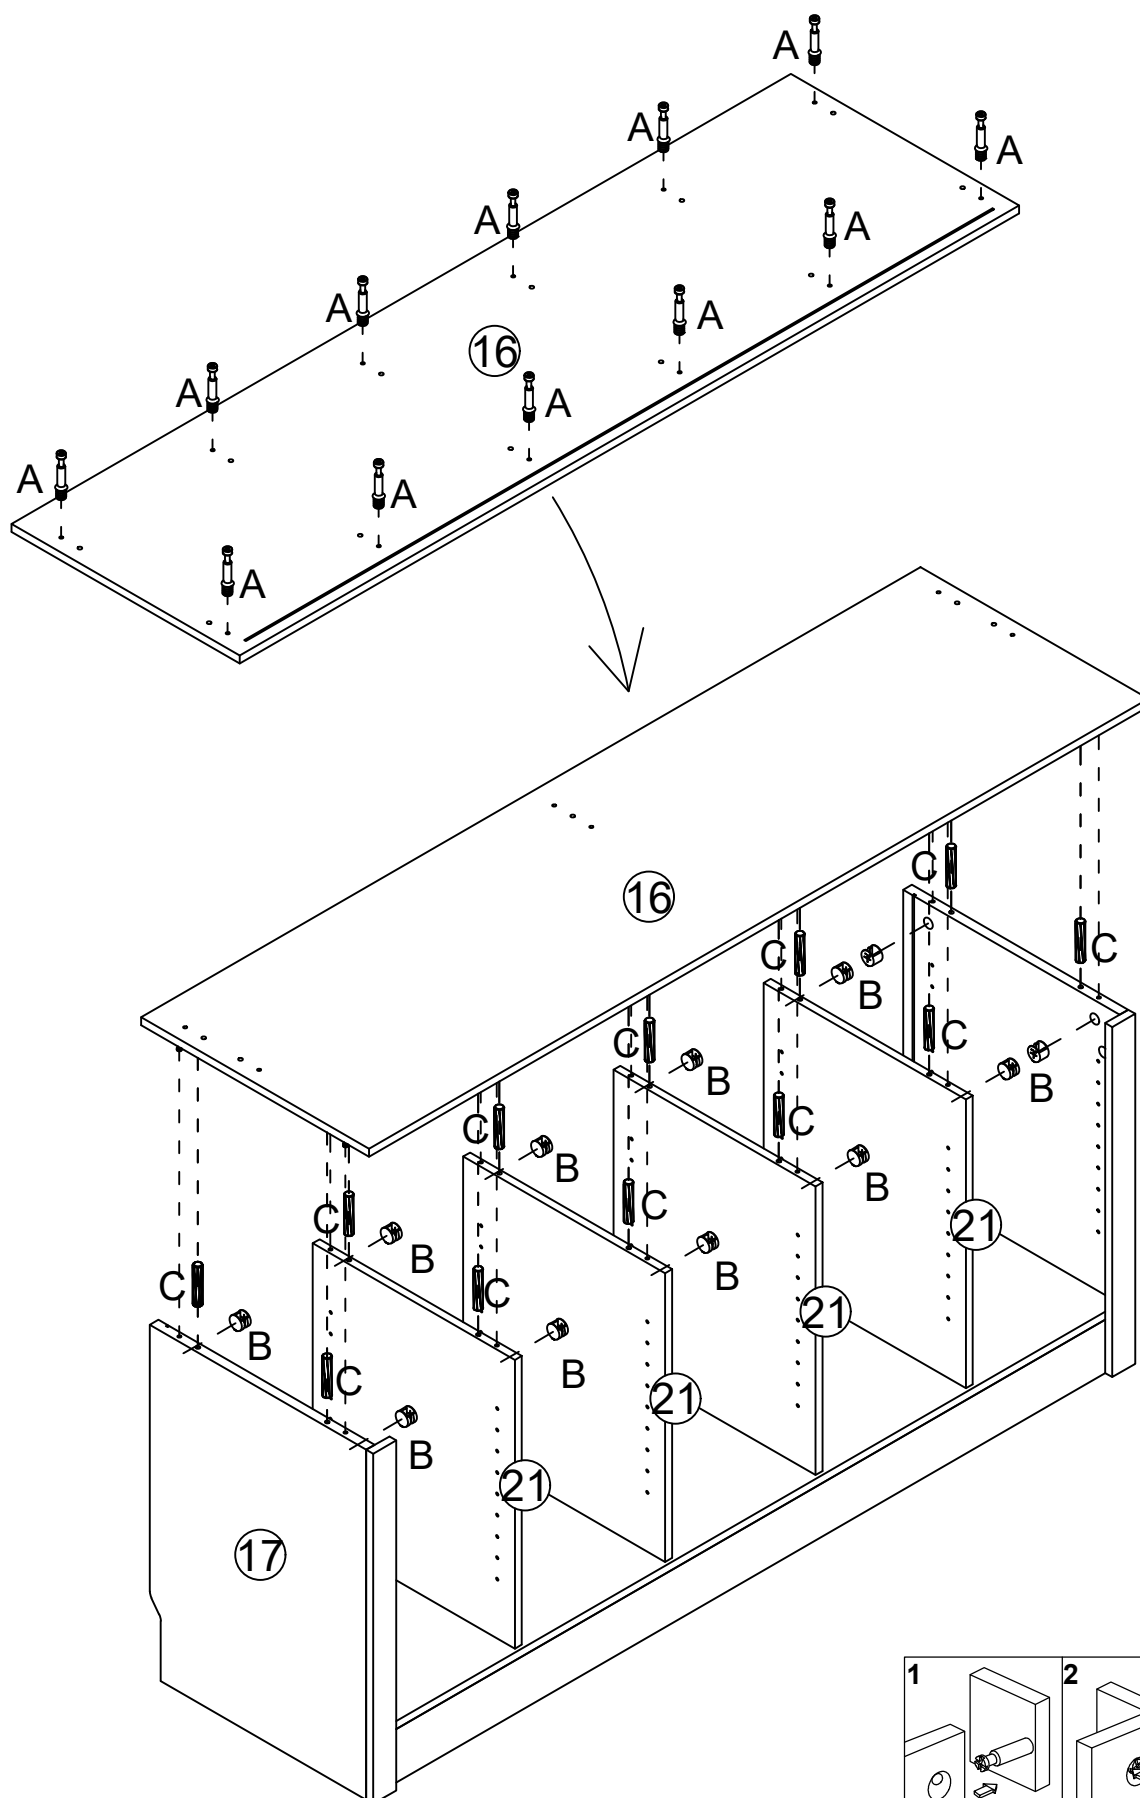



J x15
Ø3x12mm




24 x1






25 x1

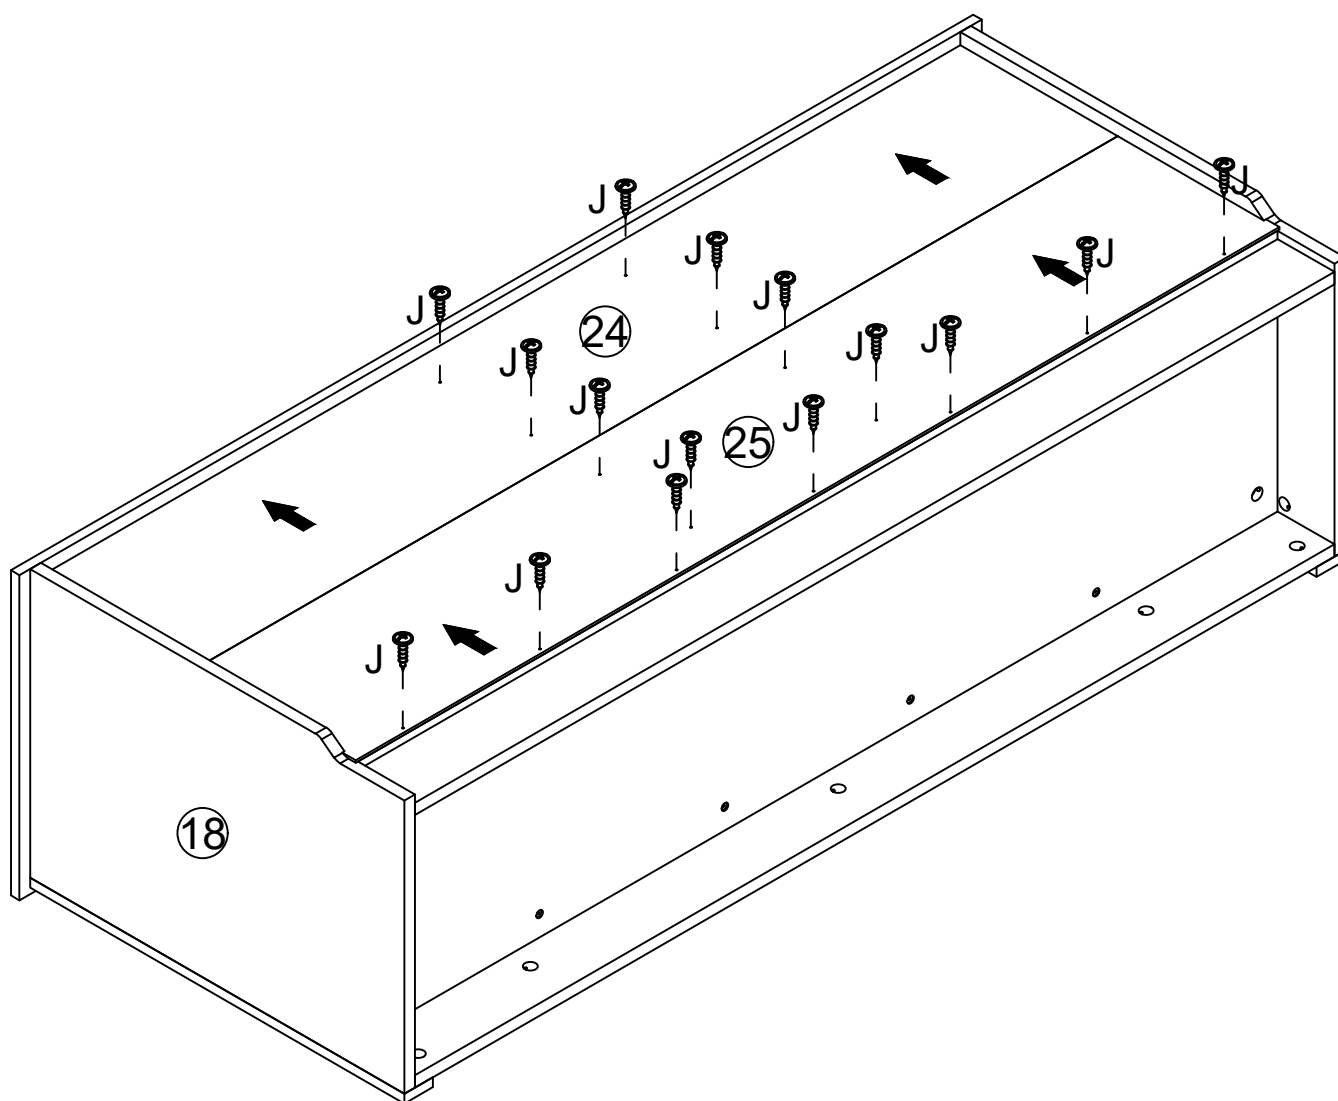

A x6
Ø6x35mm

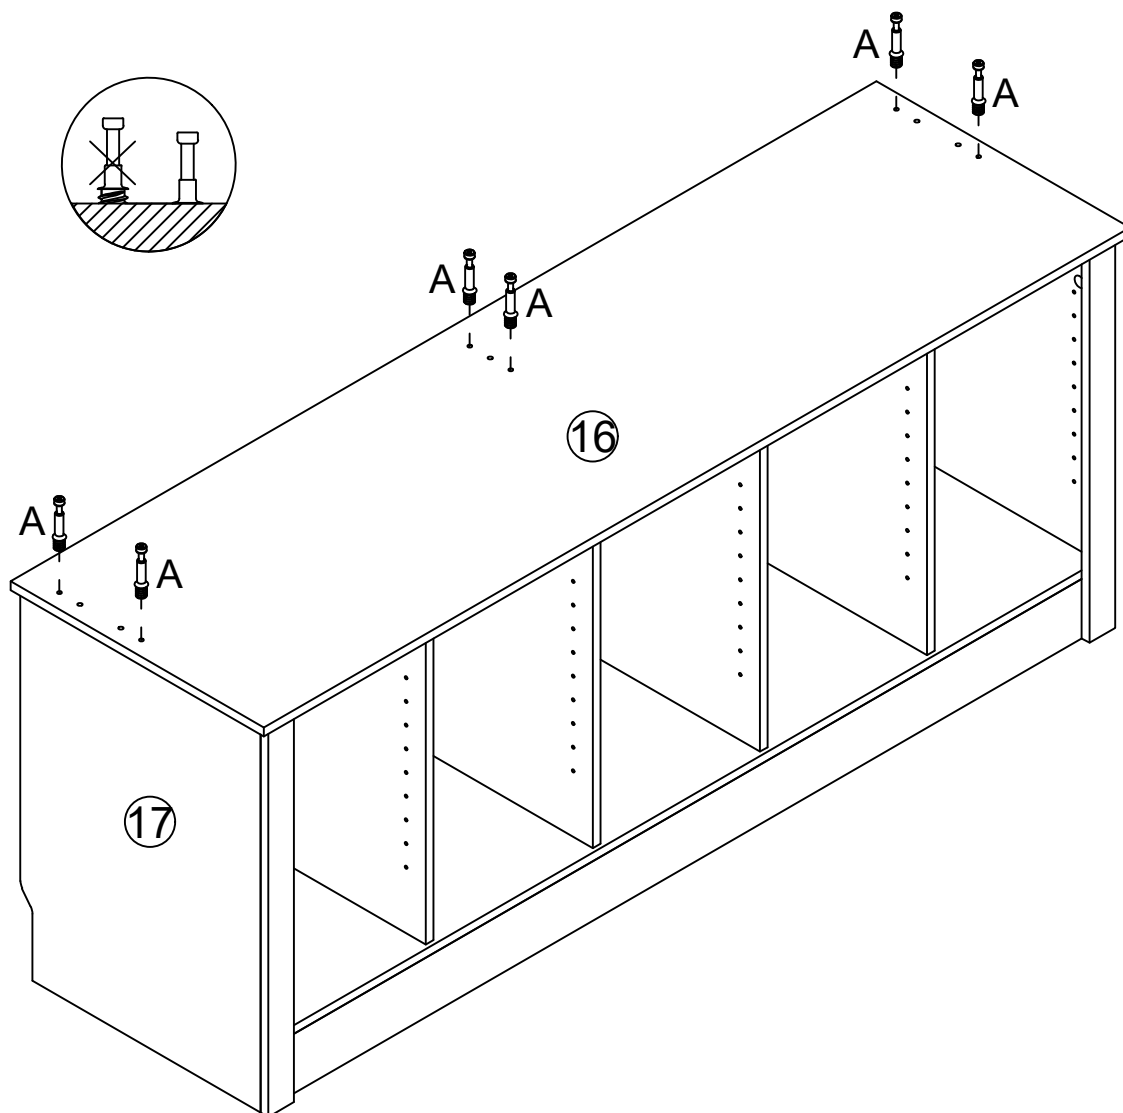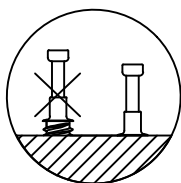


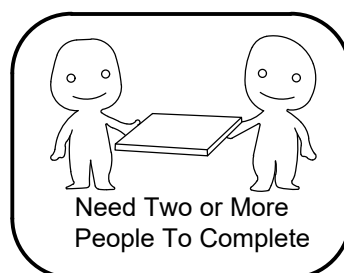
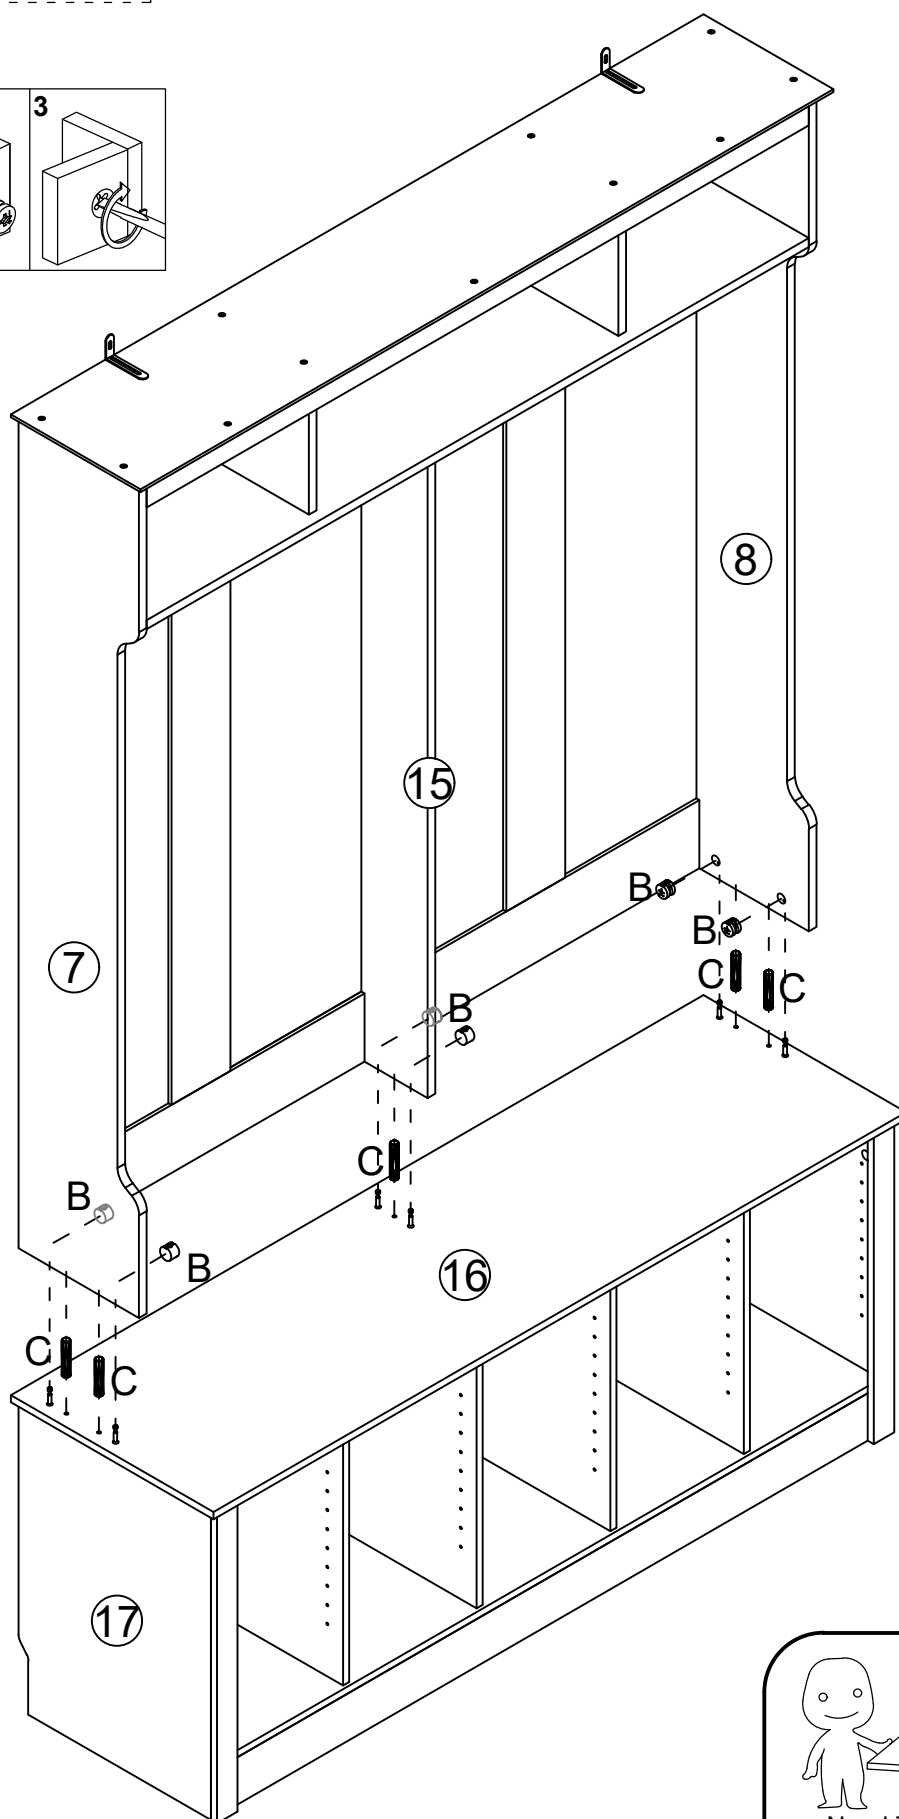
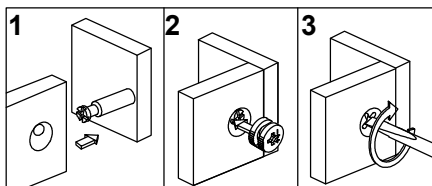
B x6
Ø15x10mmC x5
Ø6x30mm

1 x32




26 x8

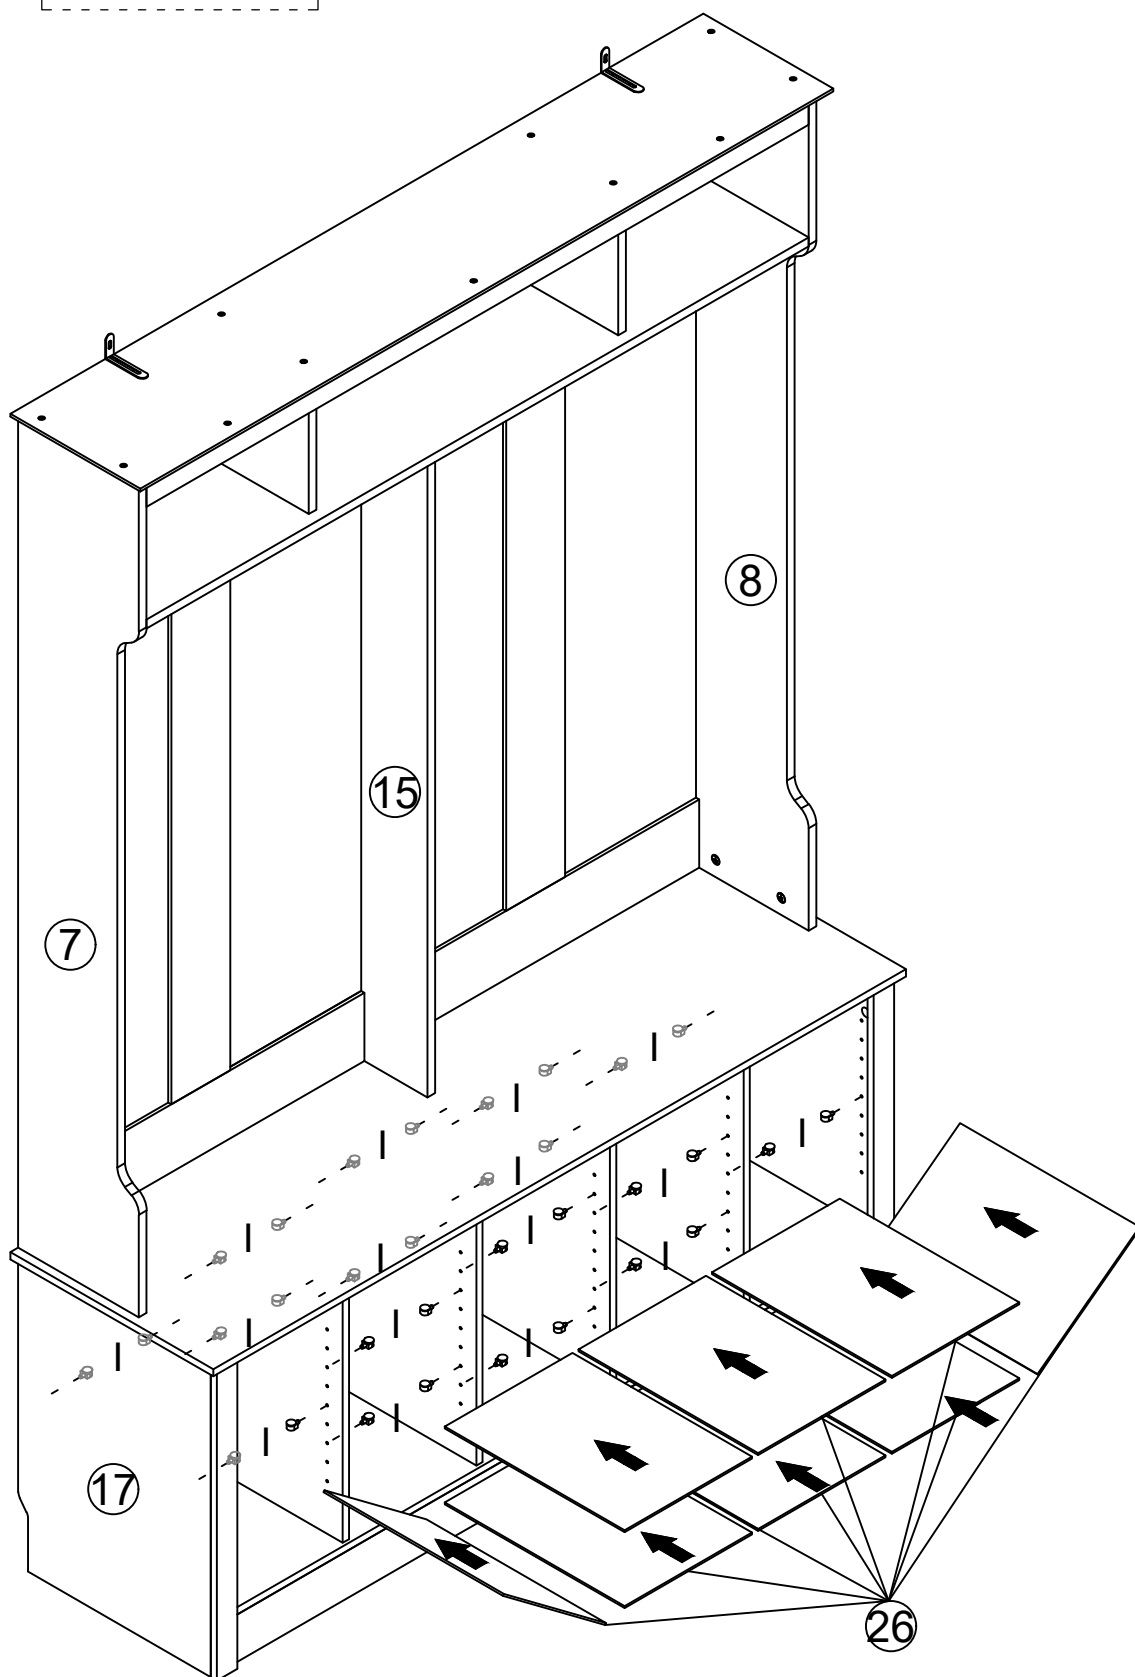


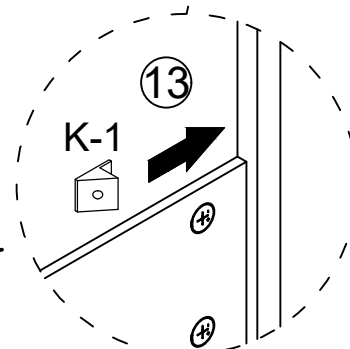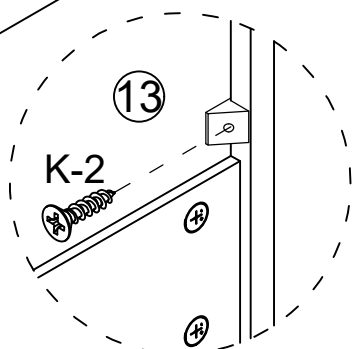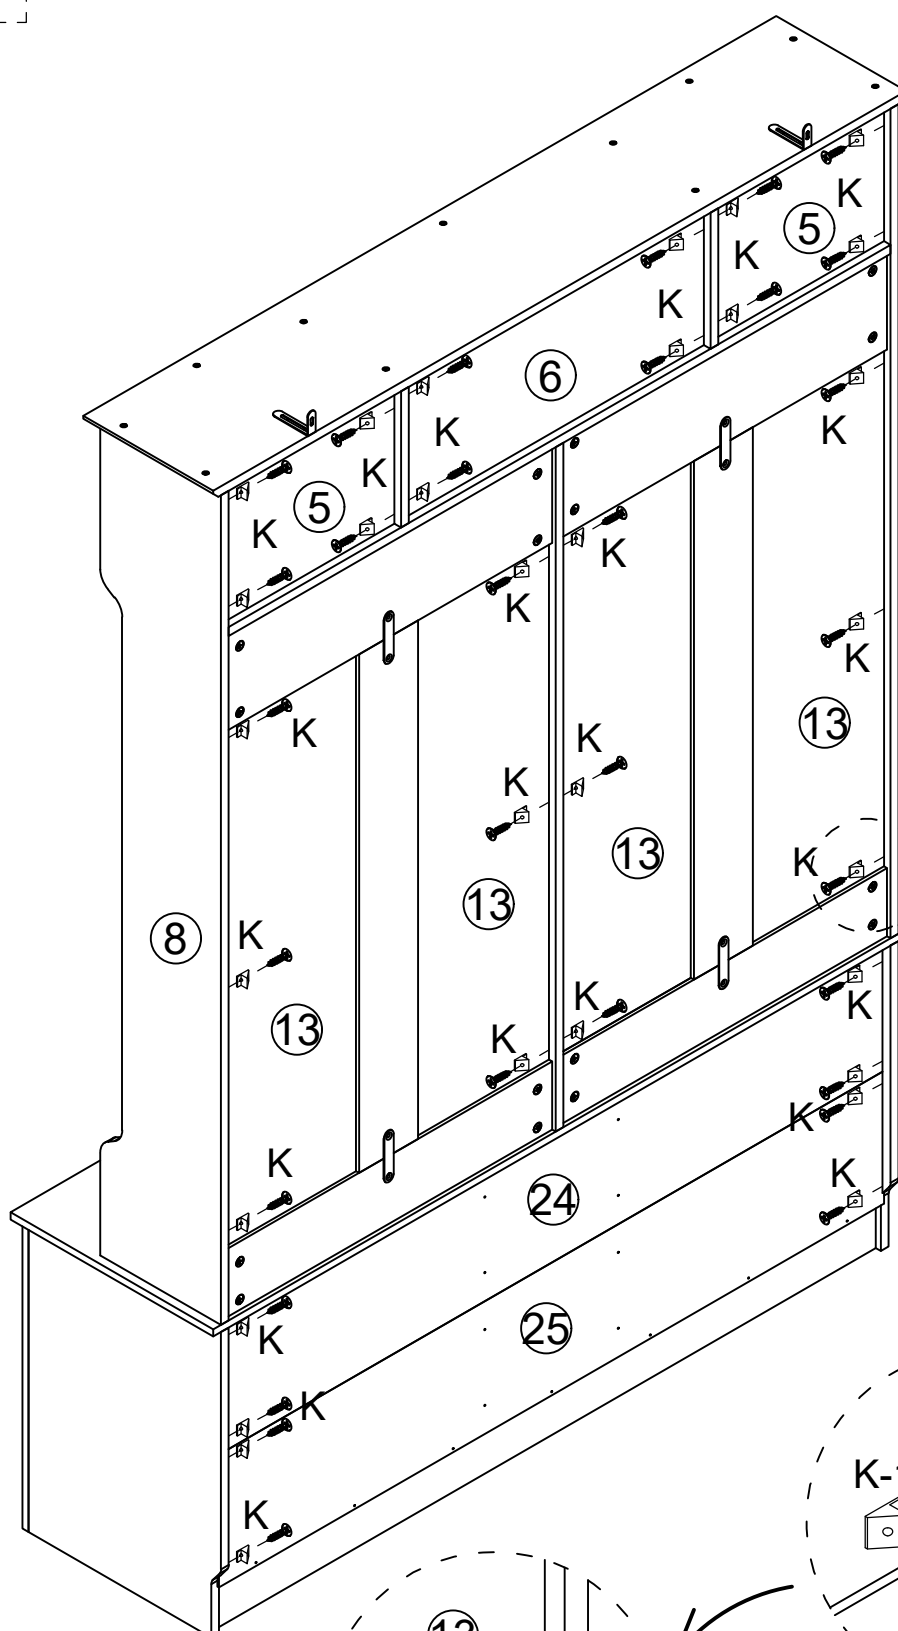K x32
Ø3x16mm

E x12
Ø3x12mm

F x6

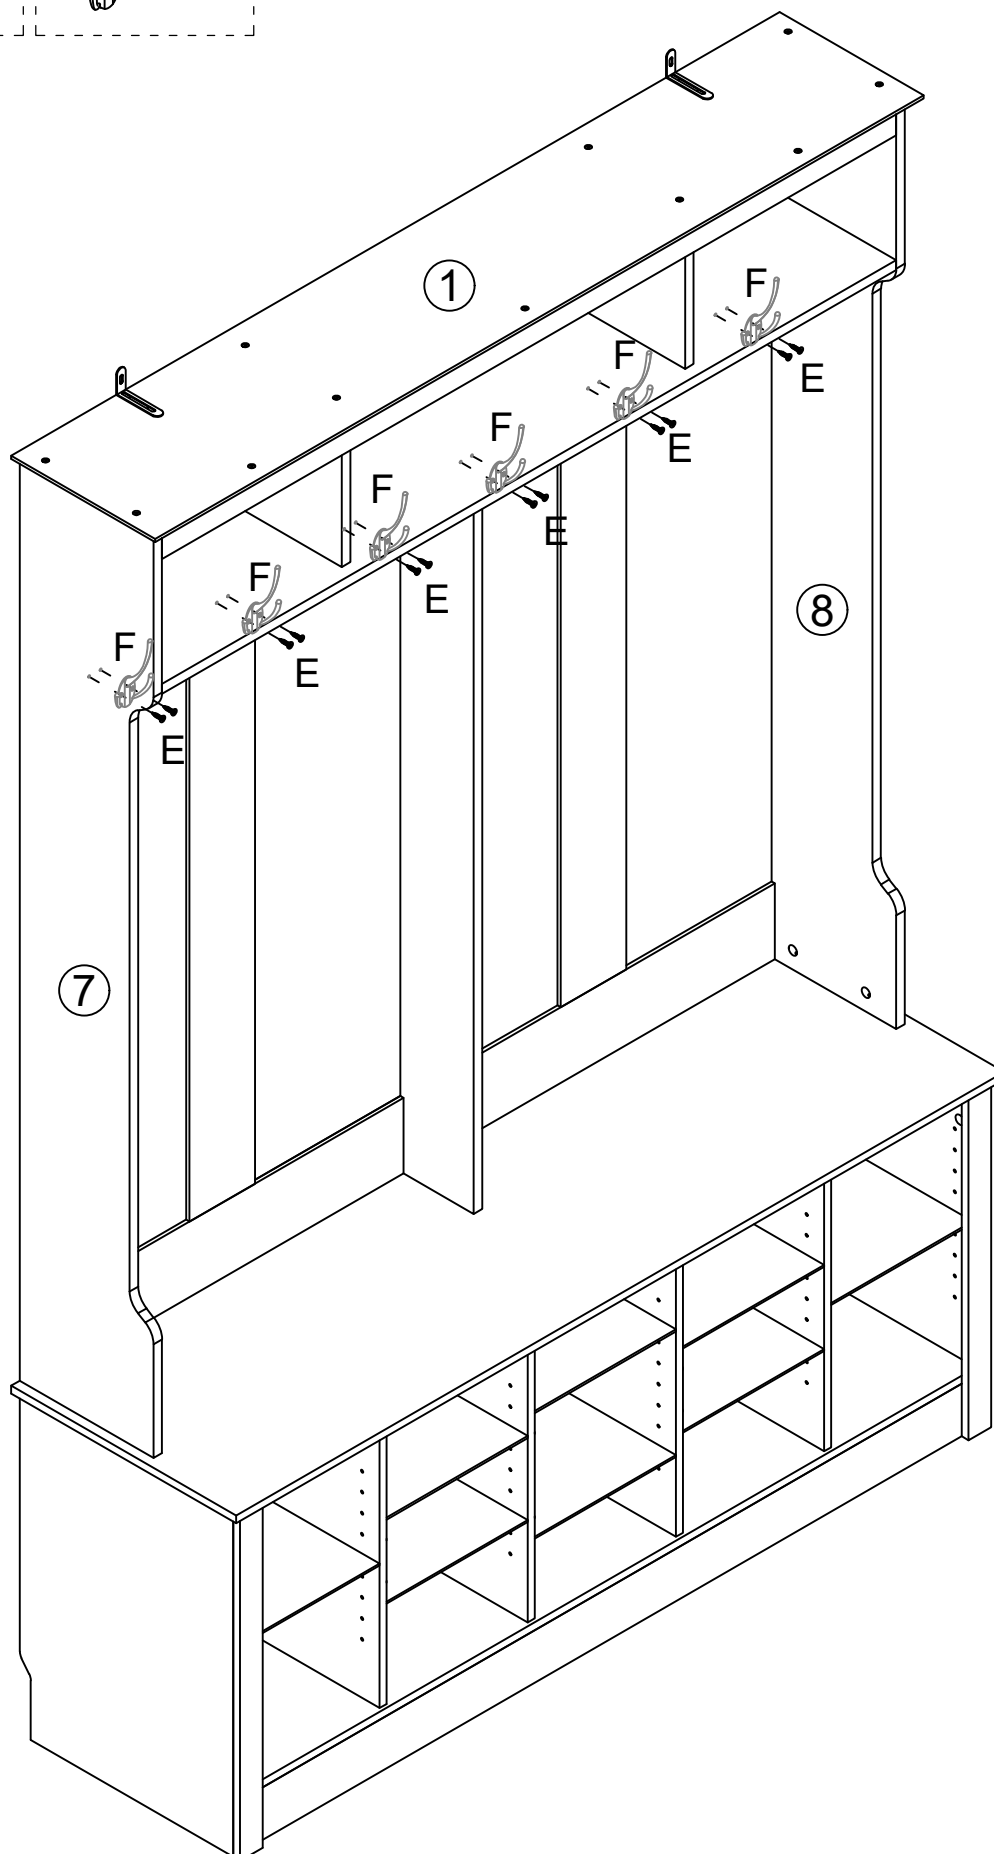

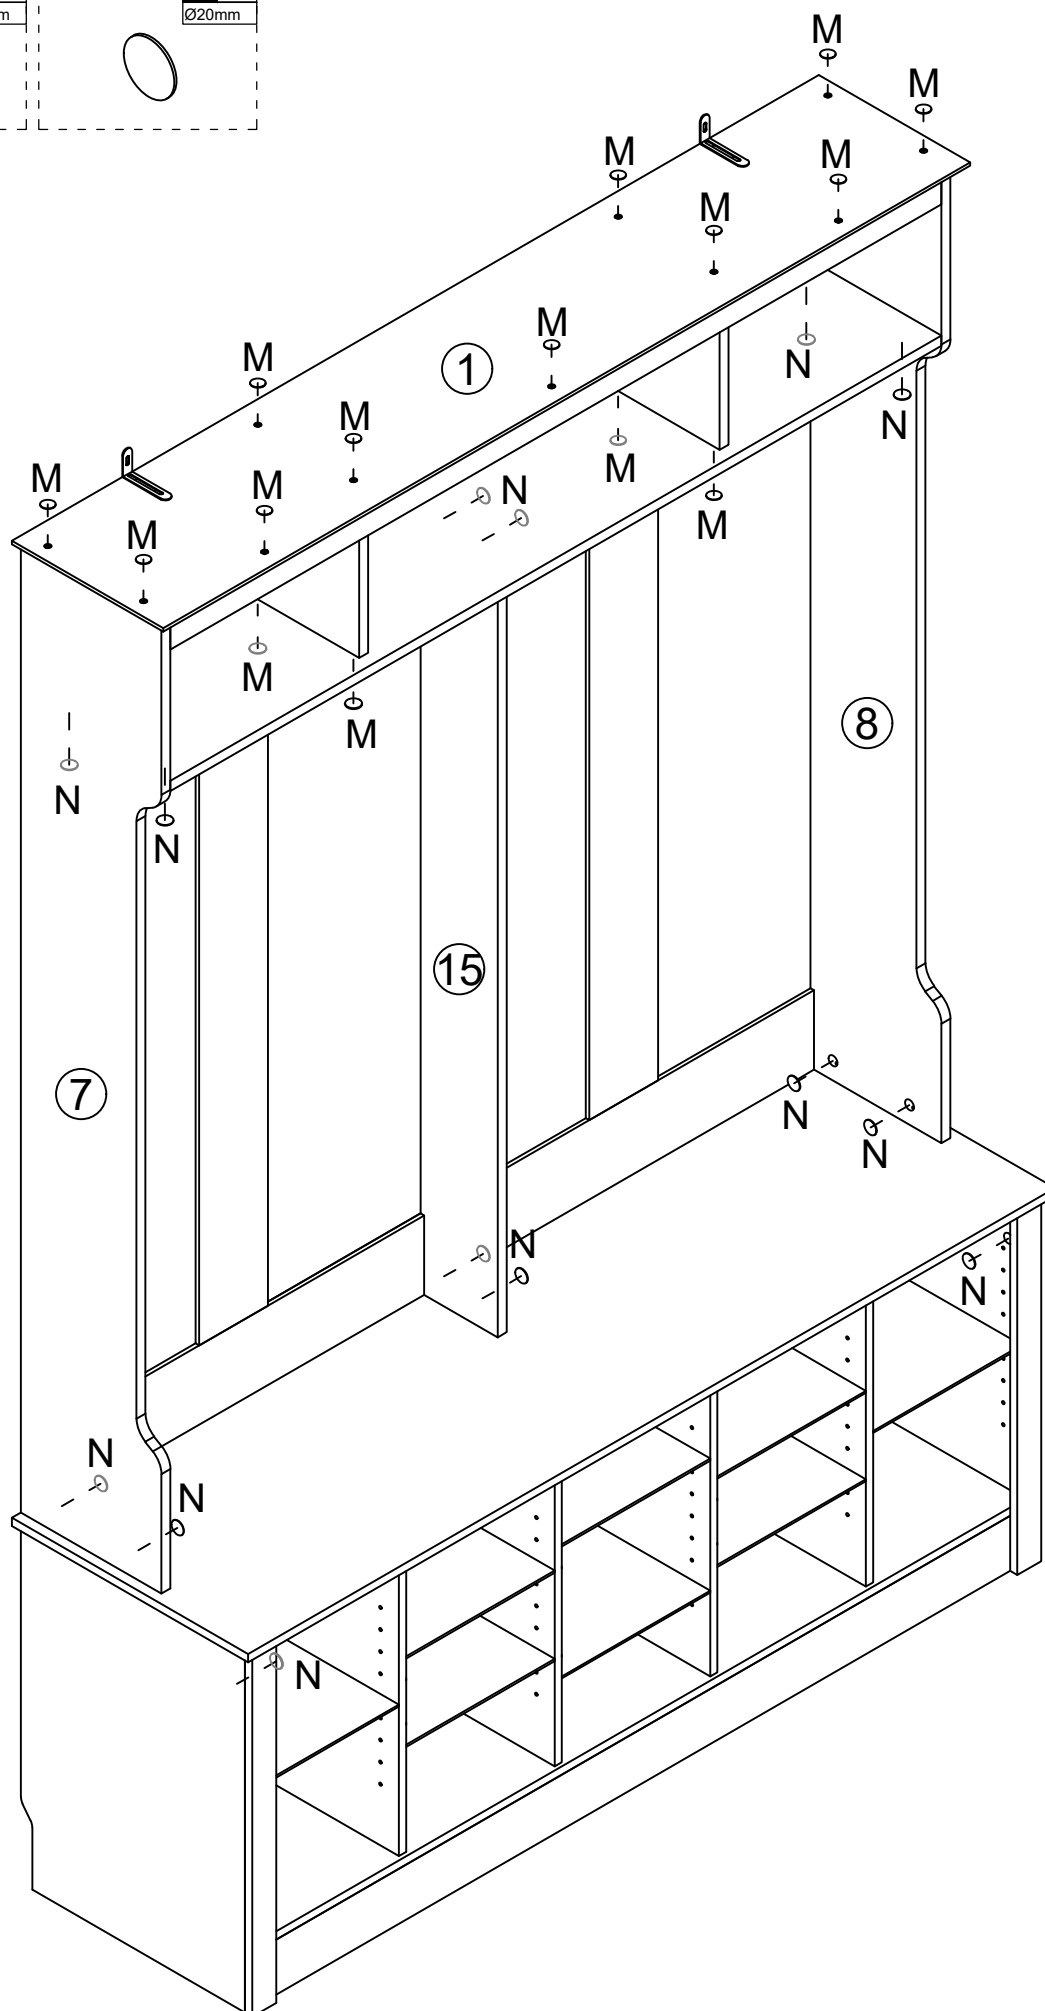M x15
Ø15mmN x14
Ø20mm

Done


D x2
Ø4x35mm



L x2
Ø6x30mm




WALL

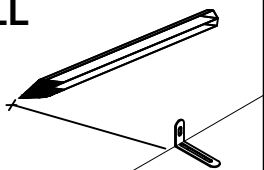

I x2


WALL +

drilling hole
Ø6x30mm

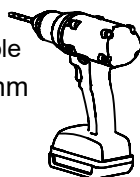

II x2

WALL

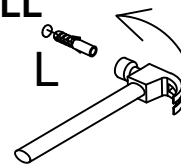

III x2

WALL

