
ASSEMBLY INSTRUCTION


Step 1

Insert bolts D in the holes, then tighten them to 90%.

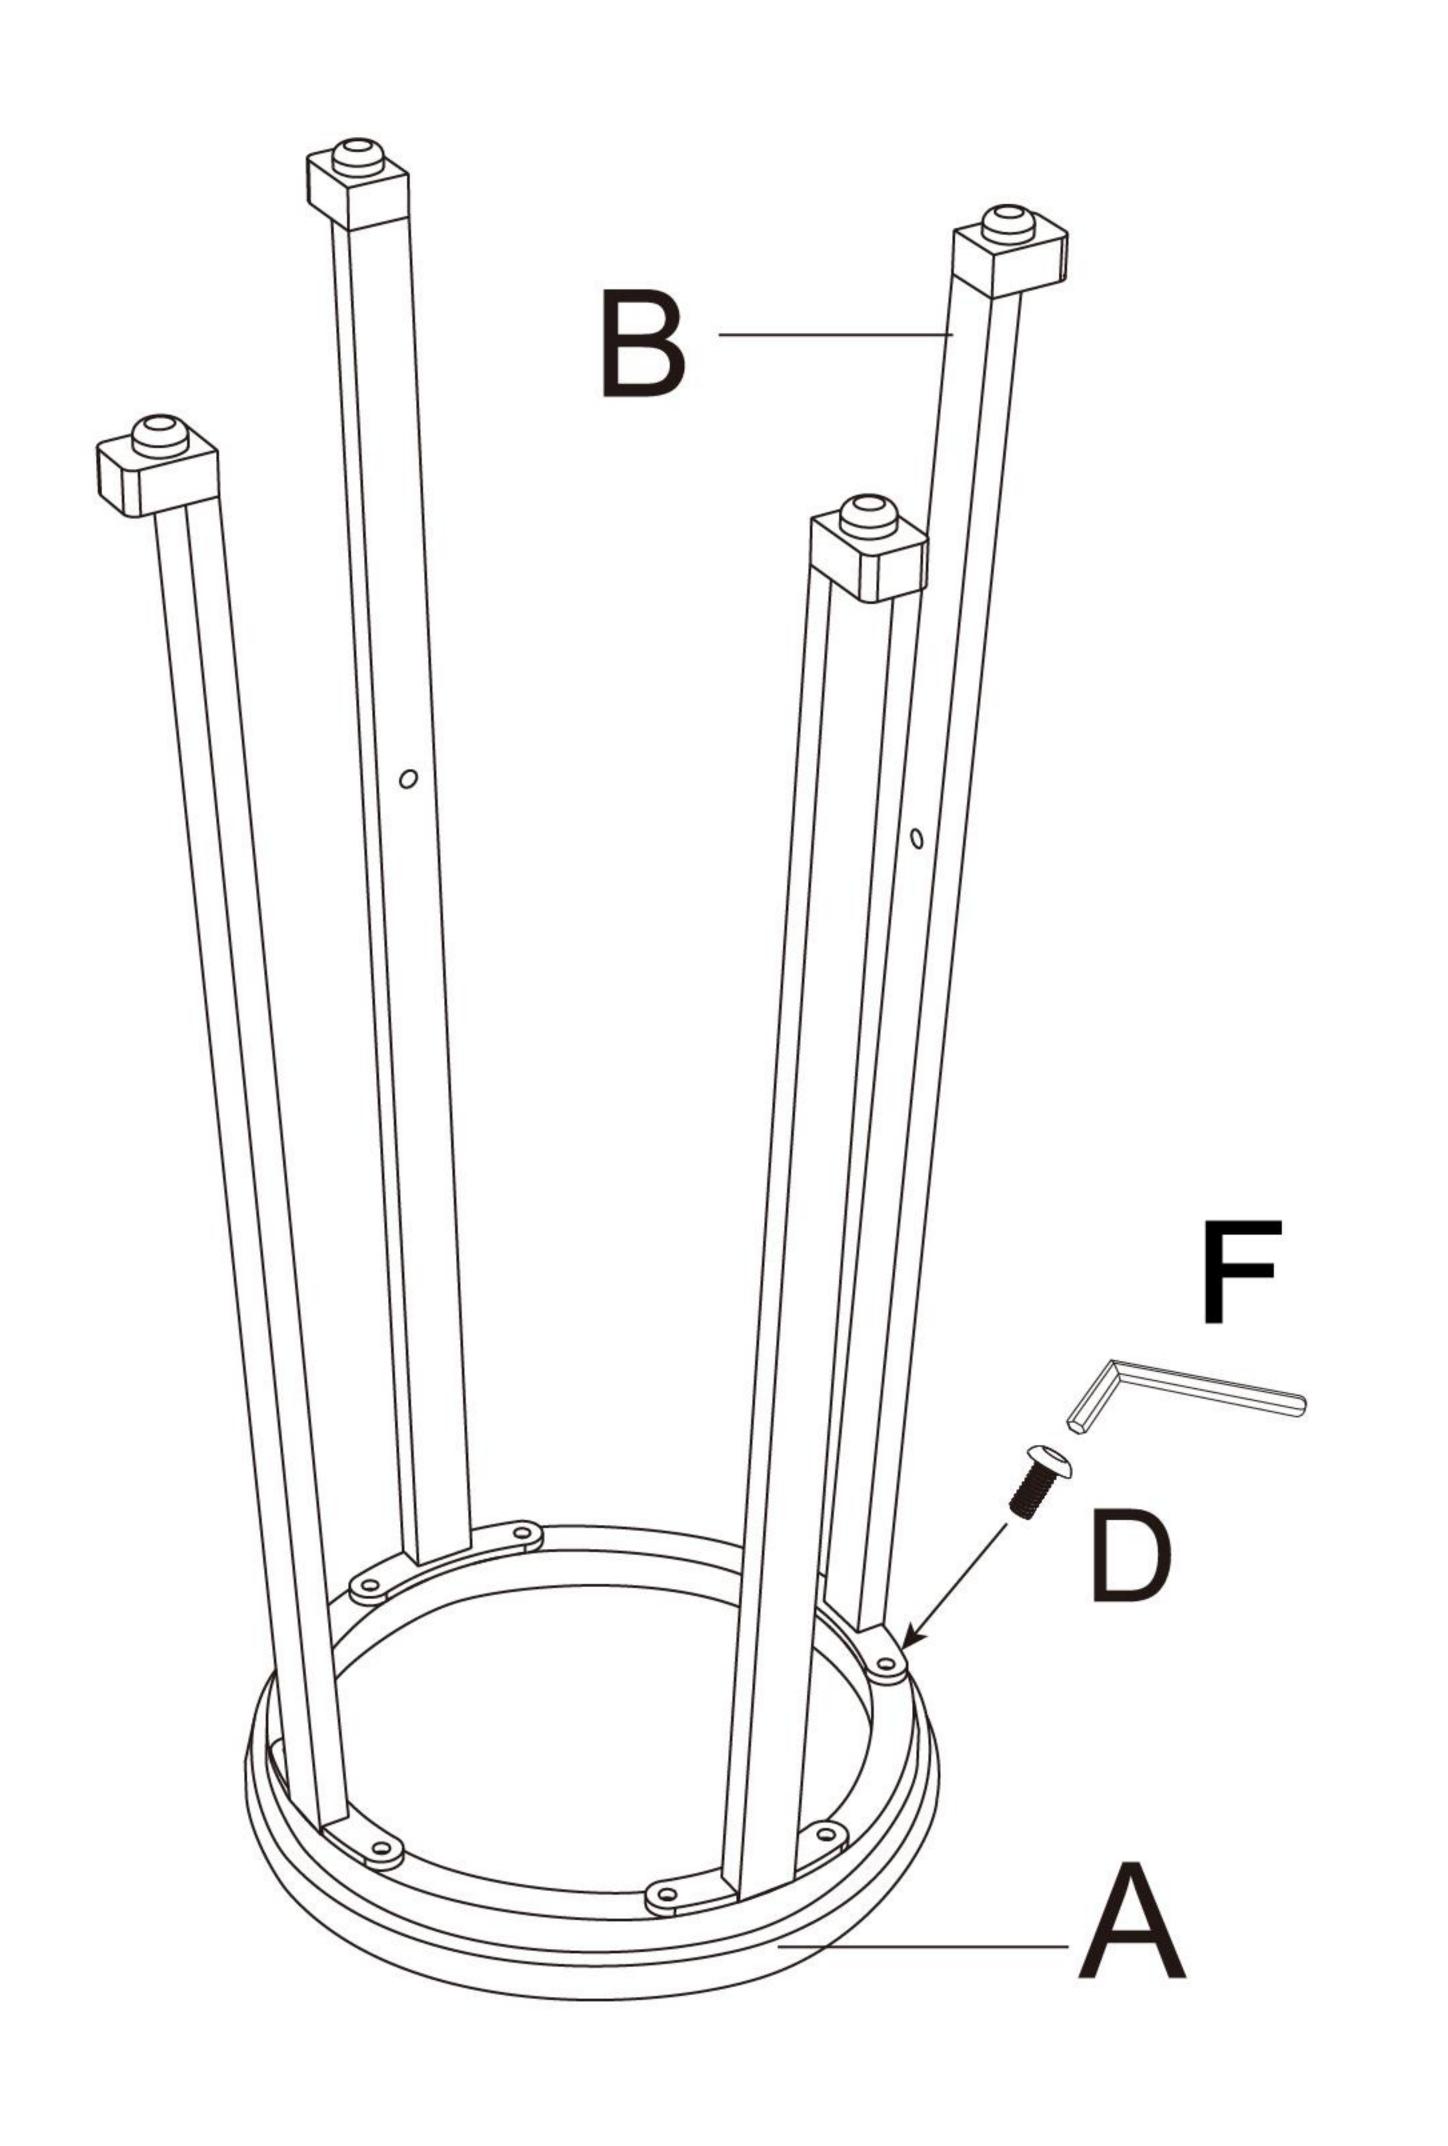

Step 2

Insert bolts E in the holes, then tighten them to 90%.

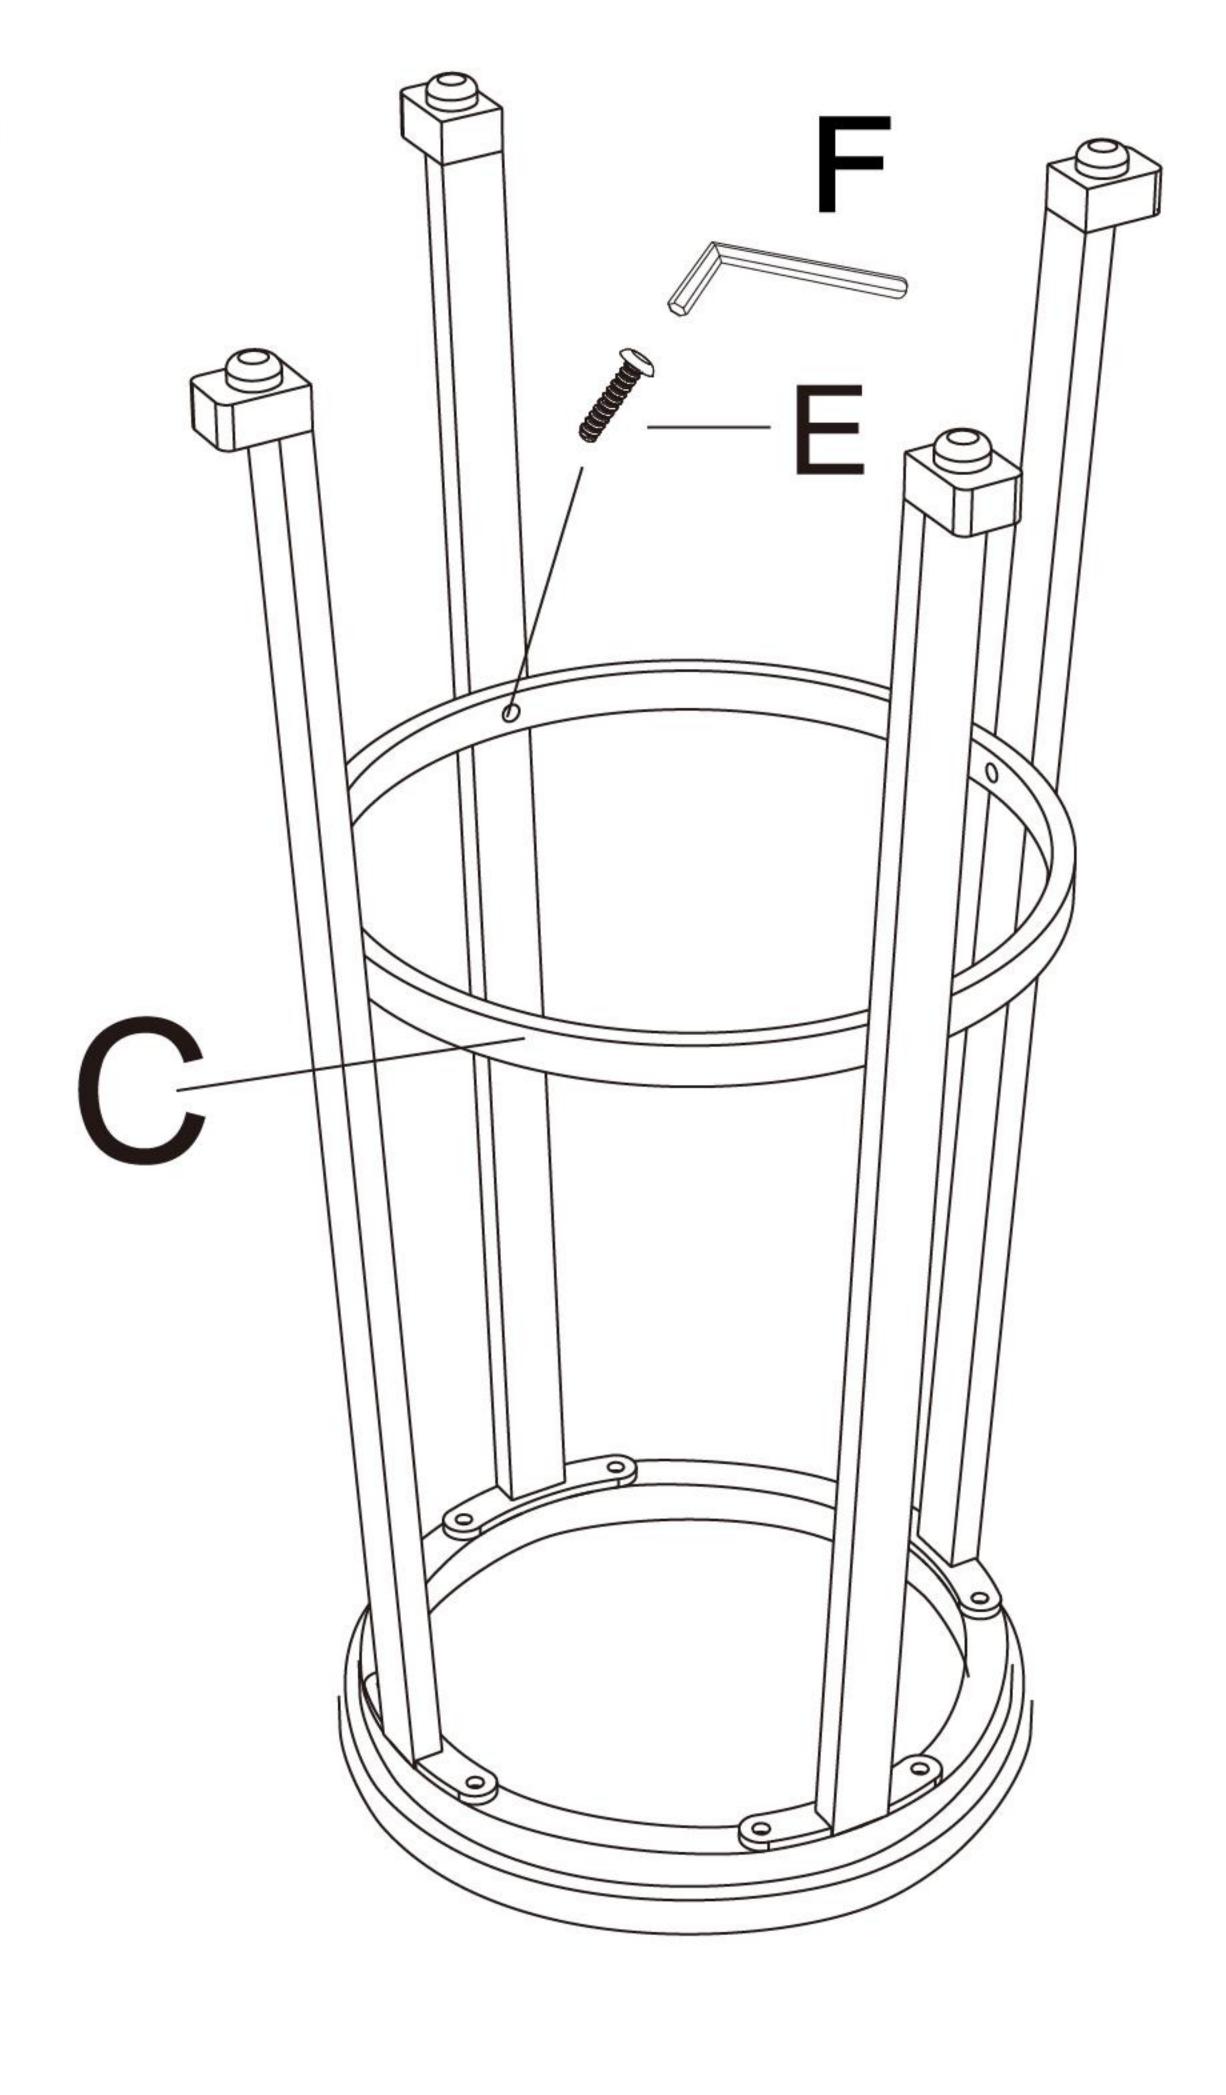

Step 3


Please tighten all bolts D and E to 100%.

A few days after initial assembly, the product may acclimate

to its new environment.

Please ensure all bolts

are still securely tightened.

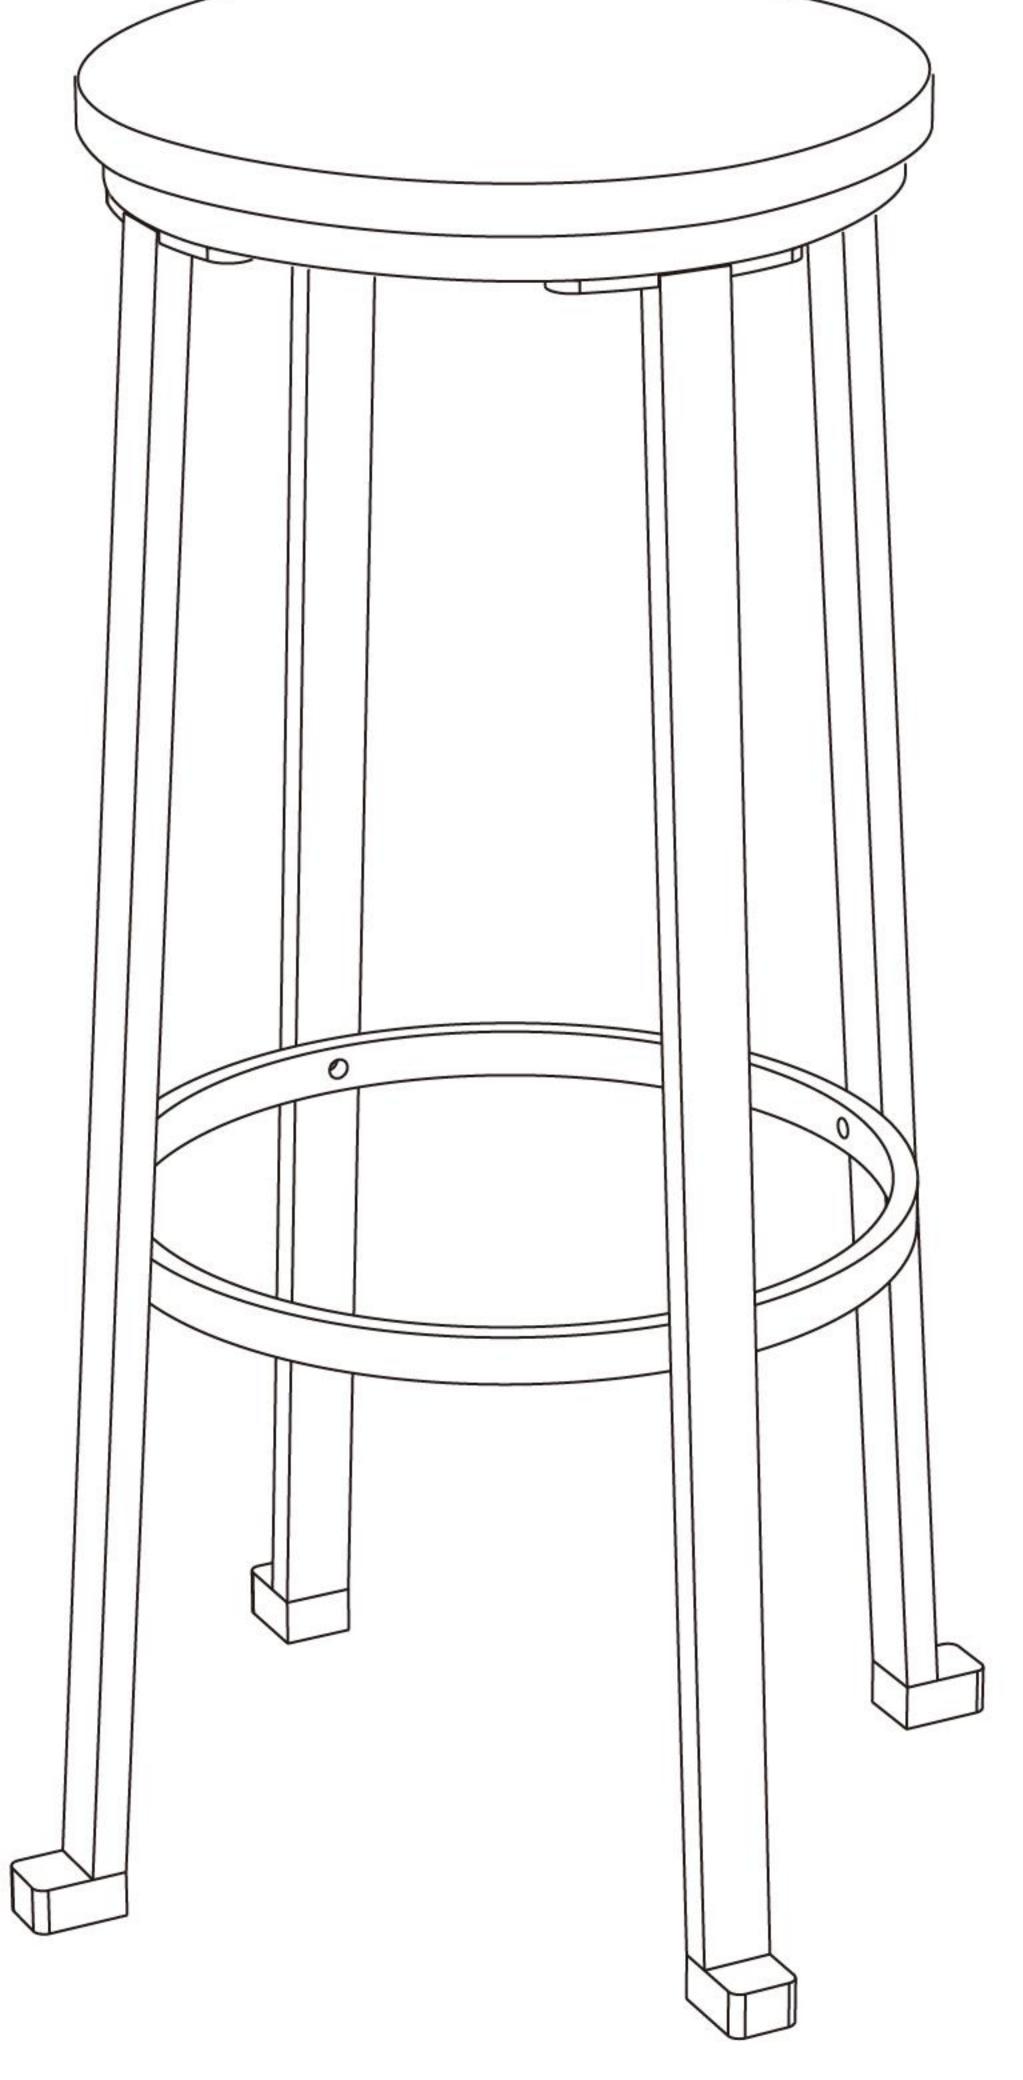

	CODE	PARTS	QTY.
HARDWARE LIST	A		1
	В		4
	C		1
	D)))))))))))) M6 X 16MM	8
		M6 X 20MM	4
	F	ALLEN KEY	1

Get social with us and discover more about our products, tips and exclusive discounts!









