






# ASSEMBLY INSTRUCTIONS


## TEAKWOOD ADIRONDACK (ATF09, ATF09-C)

| NO | PARTS                                                                                                 | QTY |
|----|-------------------------------------------------------------------------------------------------------|-----|
| A  | FRONT LEGS          | 1   |
| B  | ARMREST             | 1   |
| C  | BACKREST            | 1   |
| D  | SEAT                | 1   |
| E  | LEFT LEG SET        | 1   |
| F  | LONG SCREW          | 1   |
| G  | SHORT SCREW        | 2   |
| H  | LONG DOWEL        | 4+1 |
| I  | SHAFT             | 8   |
| J  | STUD              | 8   |
| K  | FIBER RING         | 16  |
| L  | LEGS OF FOOTREST  | 2   |
| M  | SEAT OF FOOTREST  | 1   |
| N  | SHORT DOWEL        | 4+2 |
| O  | SANDPAPER          | 1   |
| P  | HEXAGONAL WRENCH   | 1   |
| Q  | GLUE             | 1   |


# ASSEMBLY INSTRUCTIONS TEAKWOOD

## ADIRONDACK (ATF09, ATF09-C)


### STEP 1

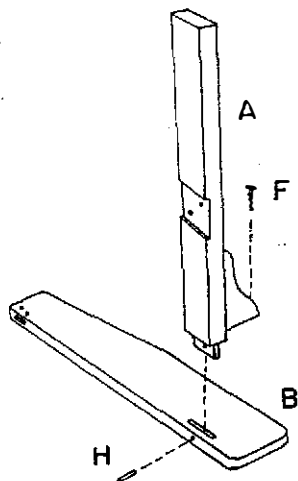


### STEP 2

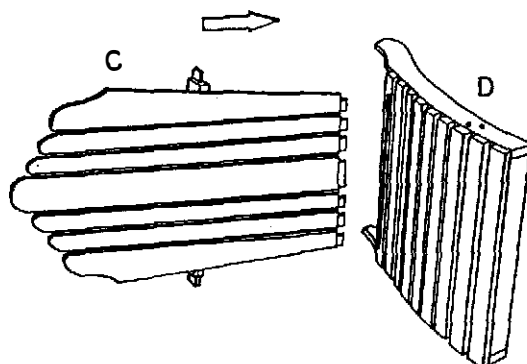


### STEP 3

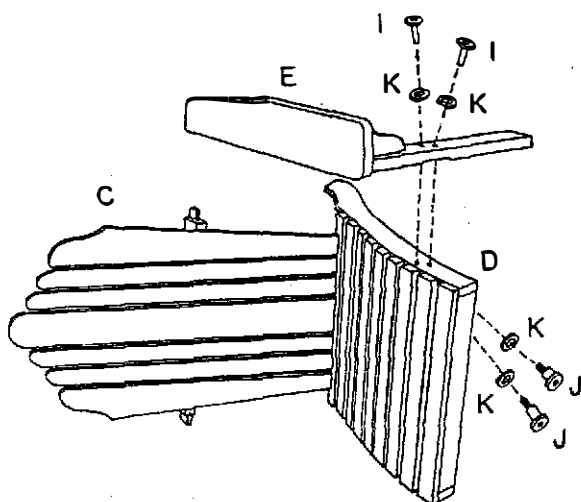


### STEP 4

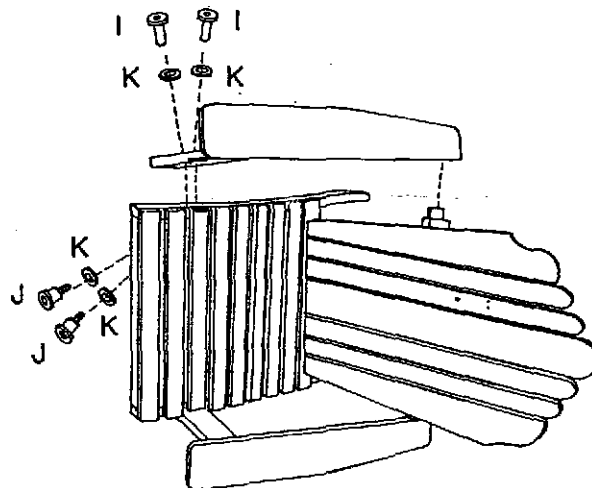

### STEP 5

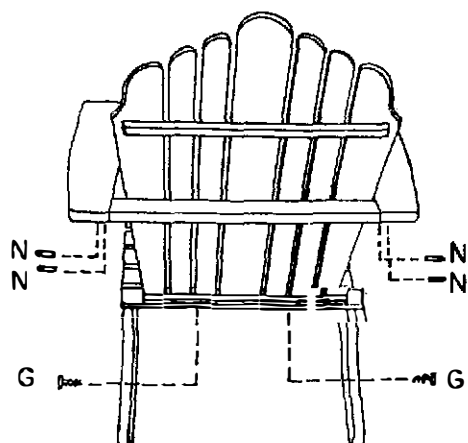


### STEP 6

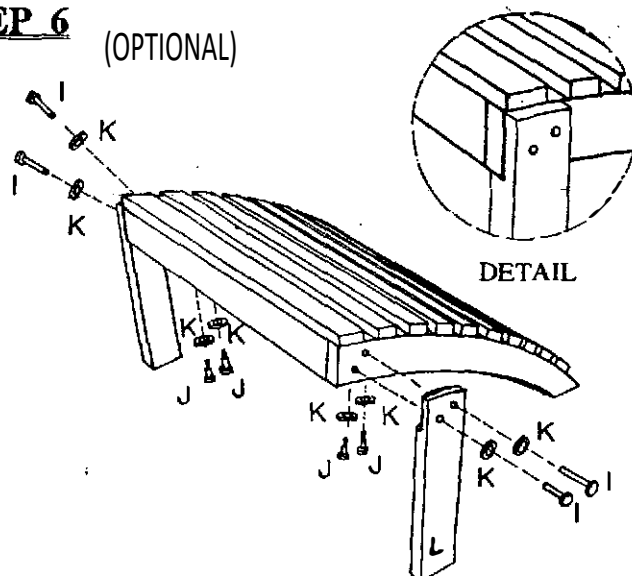

# ASSEMBLY INSTRUCTIONS

## TEAKWOOD ADIRONDACK (ATE09, ATE09-C)

### STEP 7.

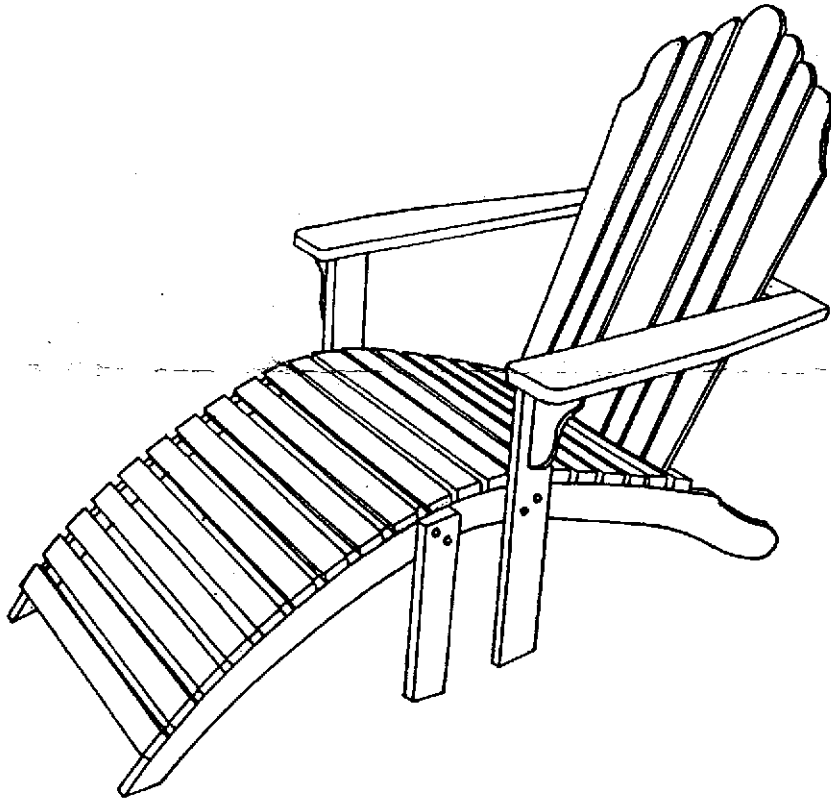

### Assembly instructions :

- Step 1** Assemble the front leg (A) to the armrest (B). Tighten up the long screw (F) as shown in step 1. Insert bevel side of the long dowel (H) into the hole as shown in step 1.
- Step 2** Put the backrest (C) in the provided groove of seat (D) as shown in step 2.
- Step 3** Put the left leg set (E) to the left side of the assemble part (from step 2) as shown in step 3. Please make sure that the tenon go into the mortise correctly. Put shaft (I) with fiber ring (K) into both holes of the front leg (E). Put stud (J) with fiber ring (K) into both holes inside the seat (D) then tighten up the stud by hexagonal wrench (P).
- Step 4** Turn the assembled chair as shown in step 4. Put right arm set (from step 1) to the right side of the assembled chair. Then put shaft (I) with fiber ring (K) into both holes of the front leg. Put stud (J) with fiber ring (K) into both holes inside the seat (D) then tighten up the stud by hexagonal wrench (P).
- Step 5** Insert the bevel side of the short dowel (N) in the 4 holes under the arm as shown in step 5. Tighten up short screw (G) under the seat to connect with the backrest.
- Step 6** Assemble leg of footrest (L) into both side of the footrest.
- If you put the leg correctly it will not have gap between the seat frame and legs.
- Put shaft (I) with fiber ring (K) into both side holes of the leg of footrest (L). Put stud (J) with fiber ring (K) into both side holes inside the seat of footrest (M) then tighten up the stud (J) by hexagonal wrench (P).