


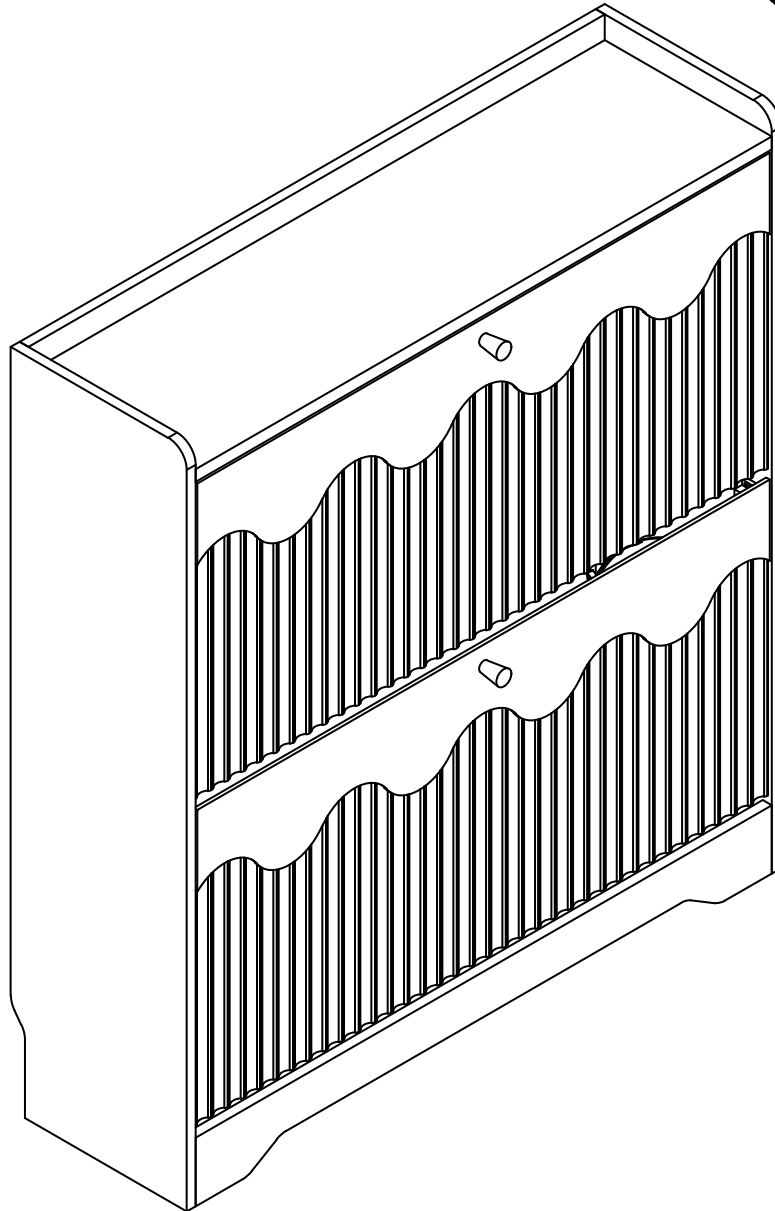




Please note: Items cannot be returned once assembled.

HLG272


Version:1.0




IT IS RECOMMENDED
TO USE POWER TOOLS

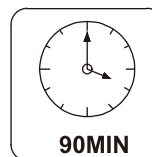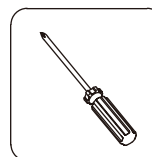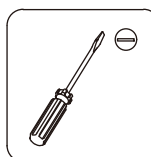


90MIN

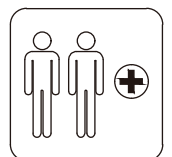


EN_IMPORTANT, RETAIN FOR FUTURE REFERENCE: READ CAREFULLY.

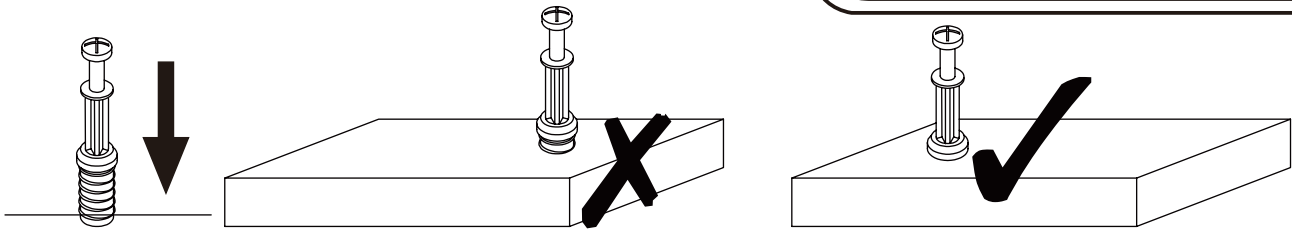


EN_QUICKFIT: Tighten quickfit until shoulder is flush with panel. Do not overtighten or undertighten.

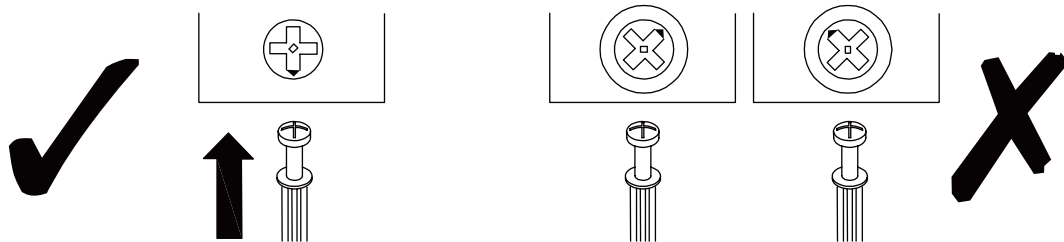










EN_CAM LOCK: When fitting cam lock, ensure starting position is correct before you insert connecting quickfit.


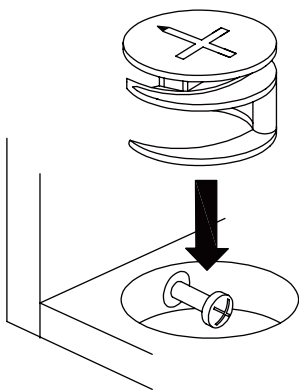






EN_Quickfit head should be in the centre of the cam lock when the two panels are joined.
Cam lock should be inserted before quickfit.

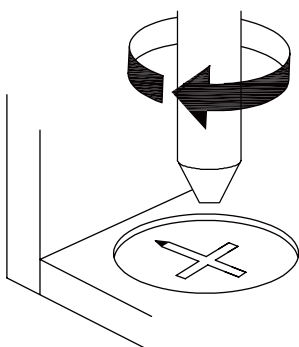

EN_Turn cam lock clockwise to tighten.

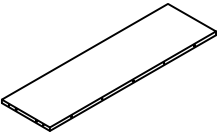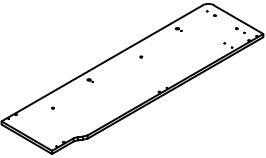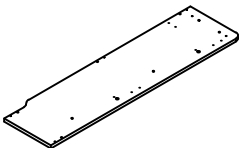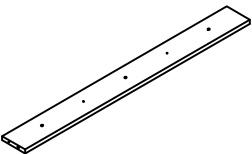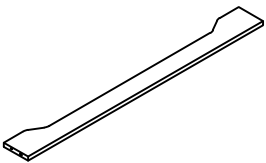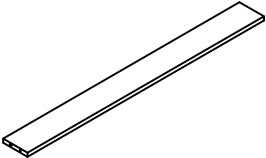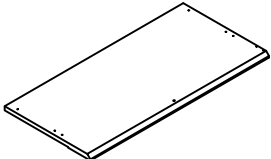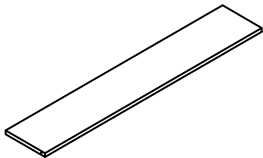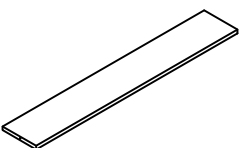
NO.	PARTS	QTY	SPARE
①		x1	
②		x1	
③		x1	
④		x1	
⑤		x1	
⑥		x2	
⑦		x2	
⑧		x4	
⑨		x2	
	 Hardware Kit	x1	



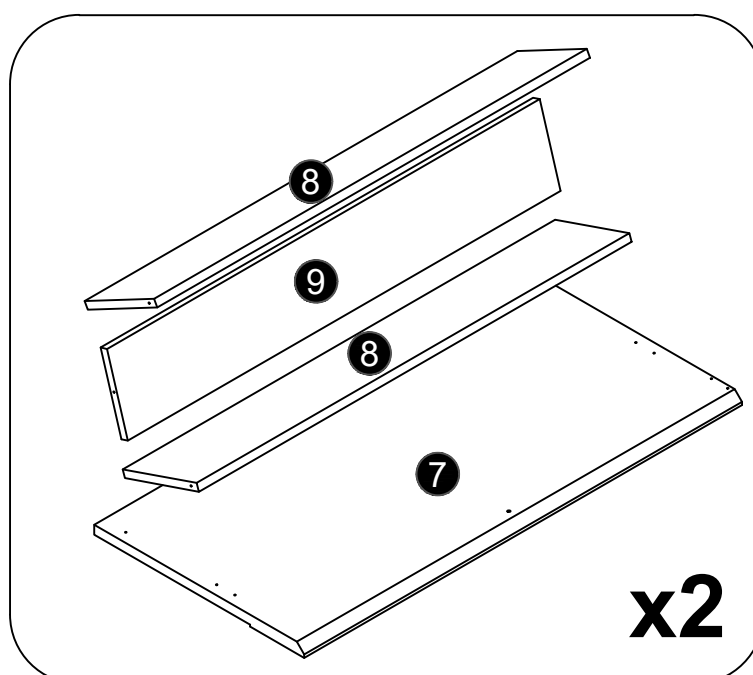
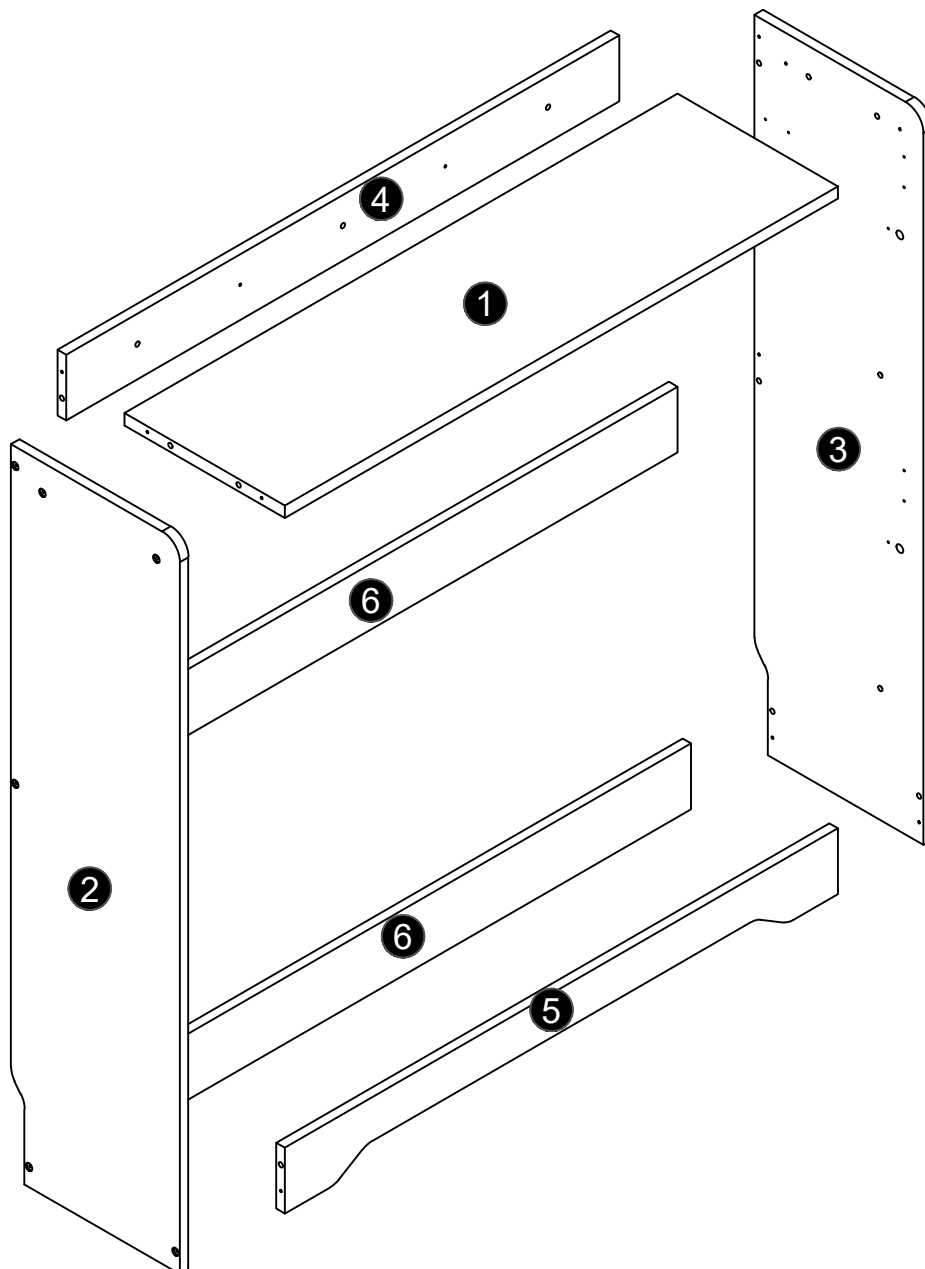




 A-1	 A-2	 B-1	 B-2	 C x15 Ø6x30mm +1(spare)	 D x16 Ø4x35mm +1(spare)	 E x28 Ø3.5x12mm +2(spare)	 F x4 +1(spare)
 G x4 +1(spare)	 H x4 +1(spare)	 I x1	 J-1	 J-2	 K-1	 K-2	 L x2
 M x12 +2(spare)	 N x2 Ø6x30mm				 R x2		

 B-1	 B-2	 E x2	 F x2
---	--	---	---


01

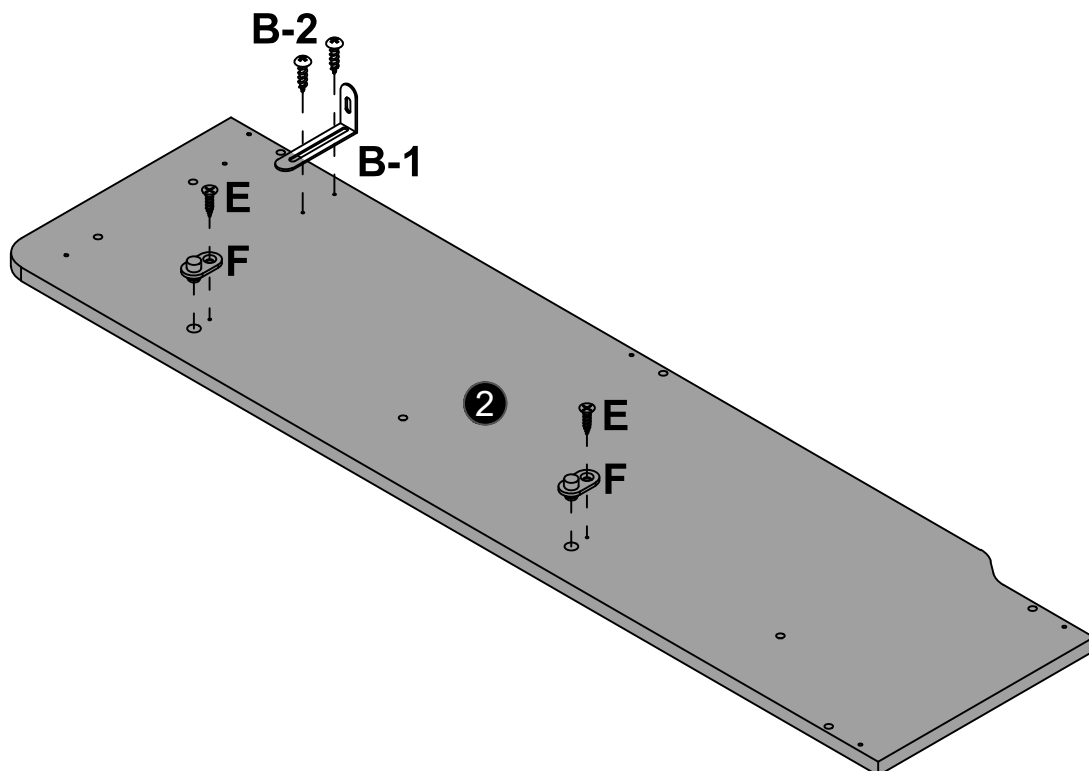

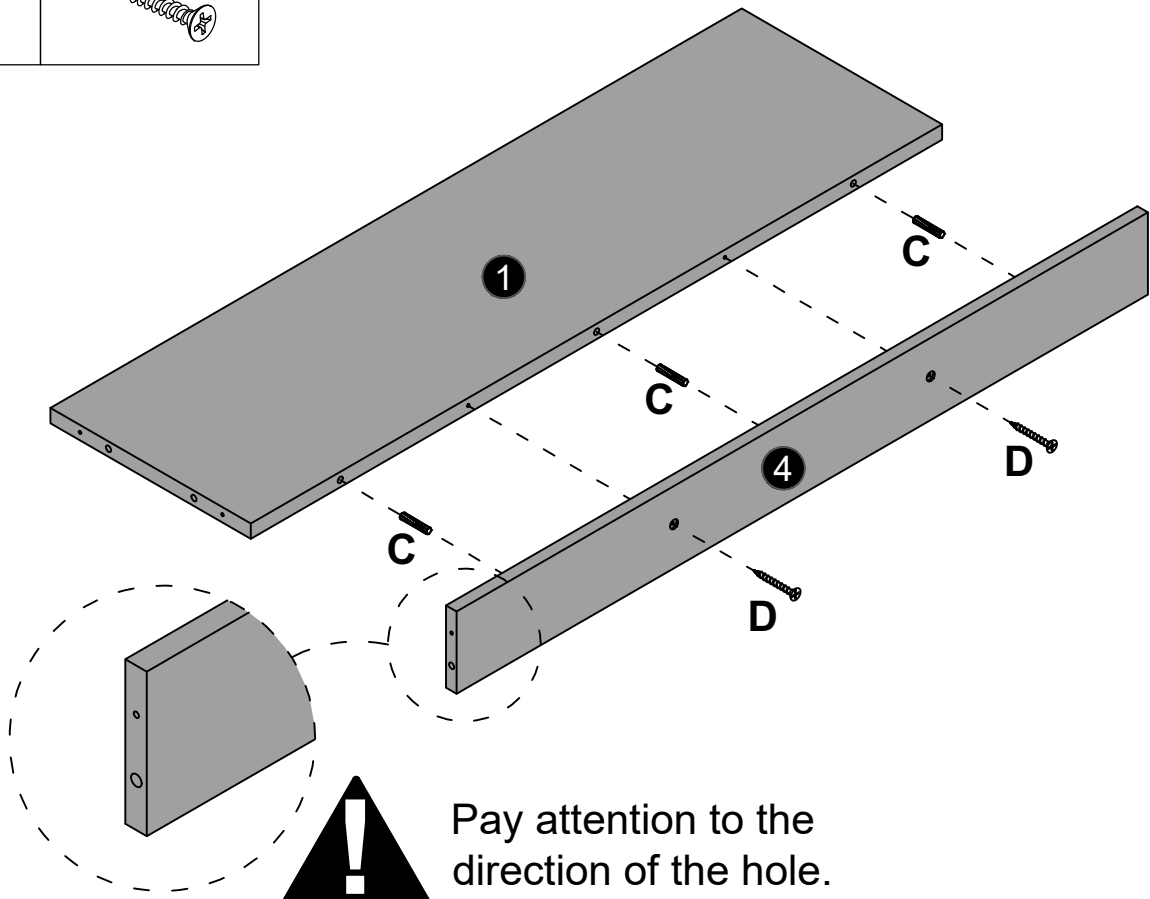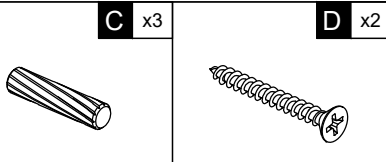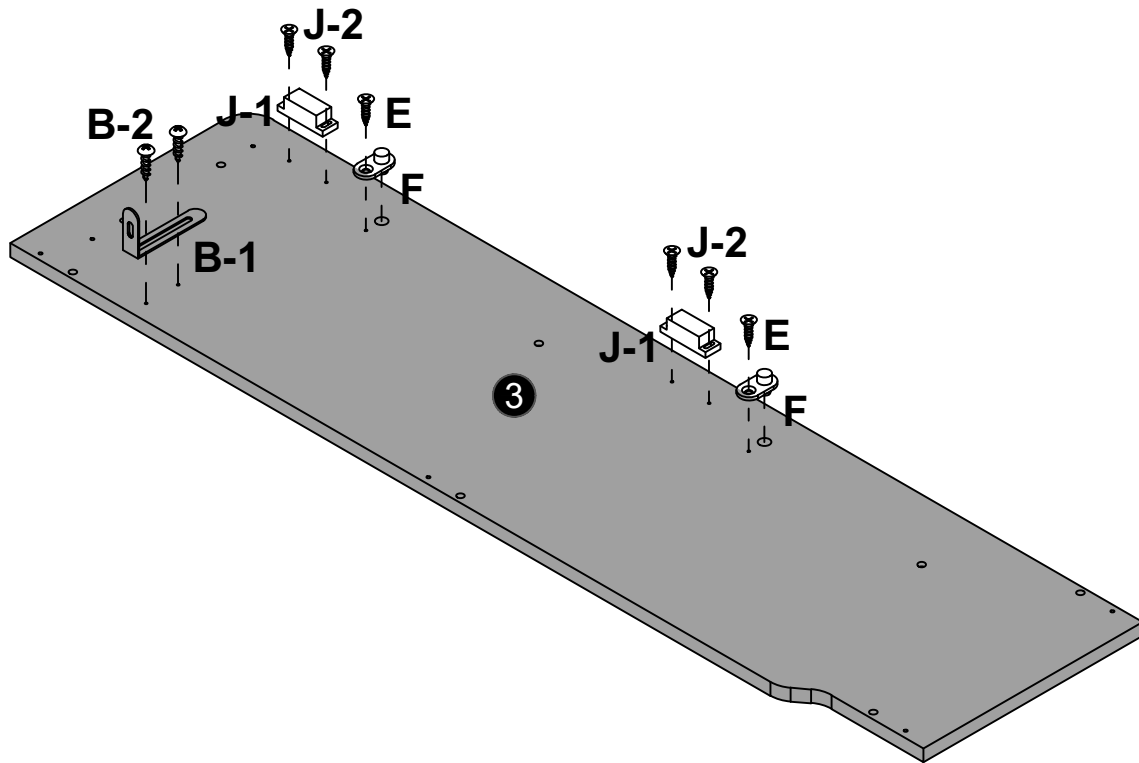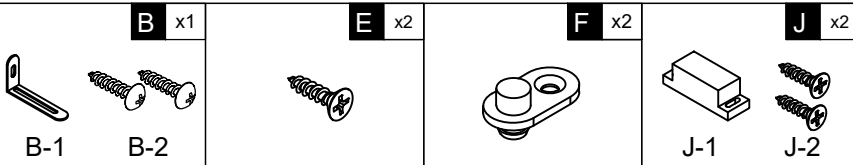


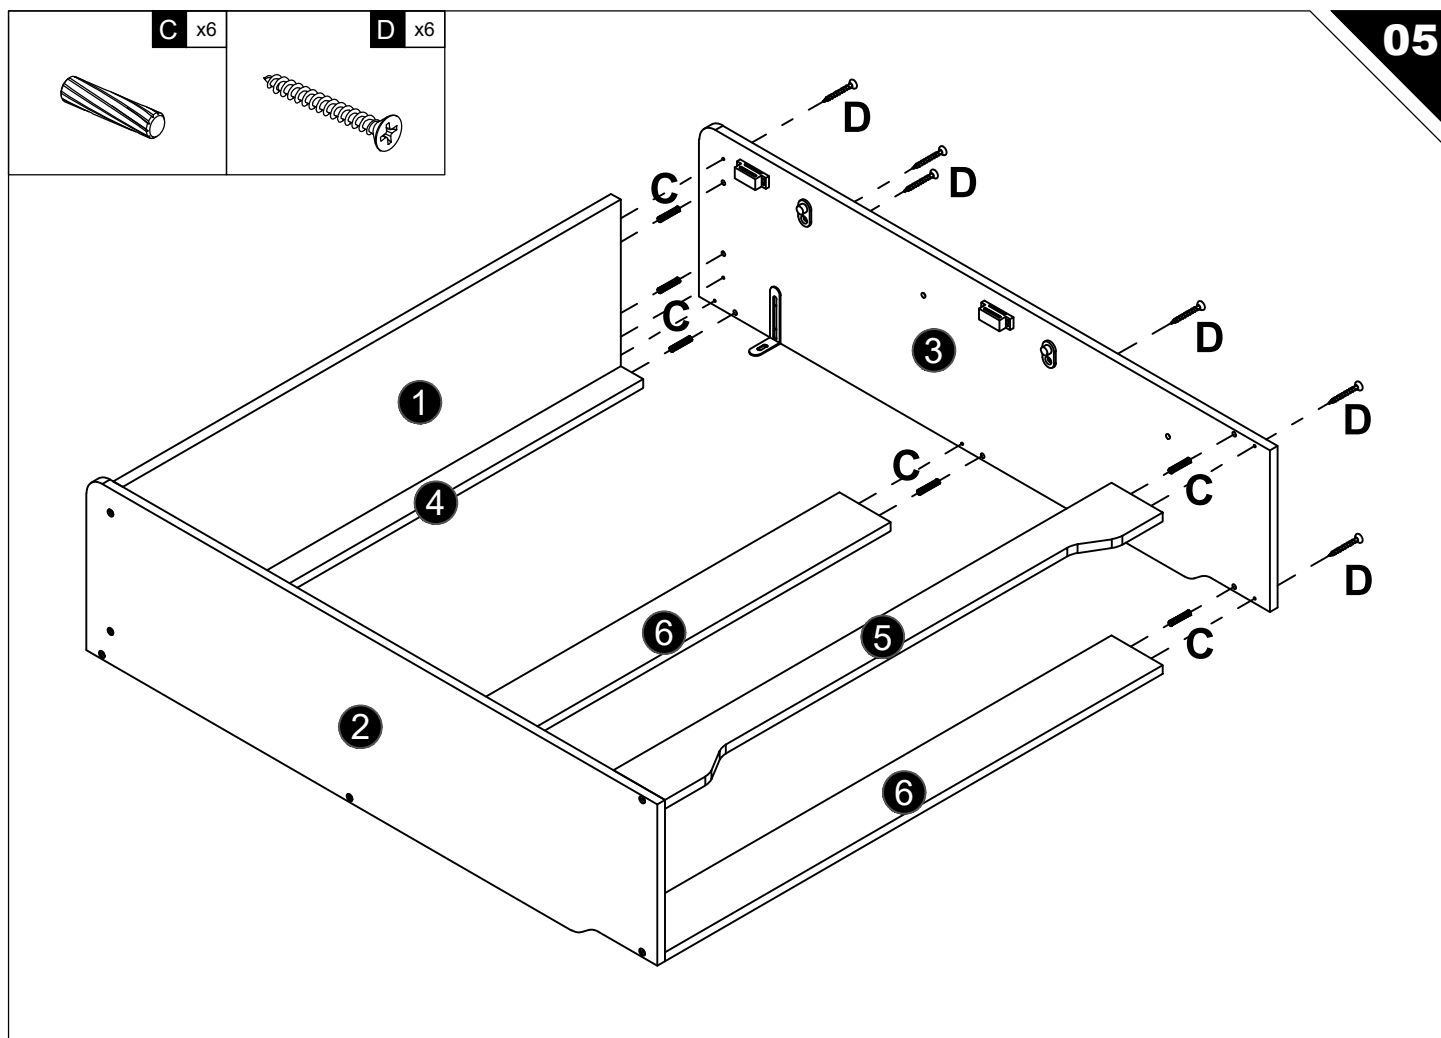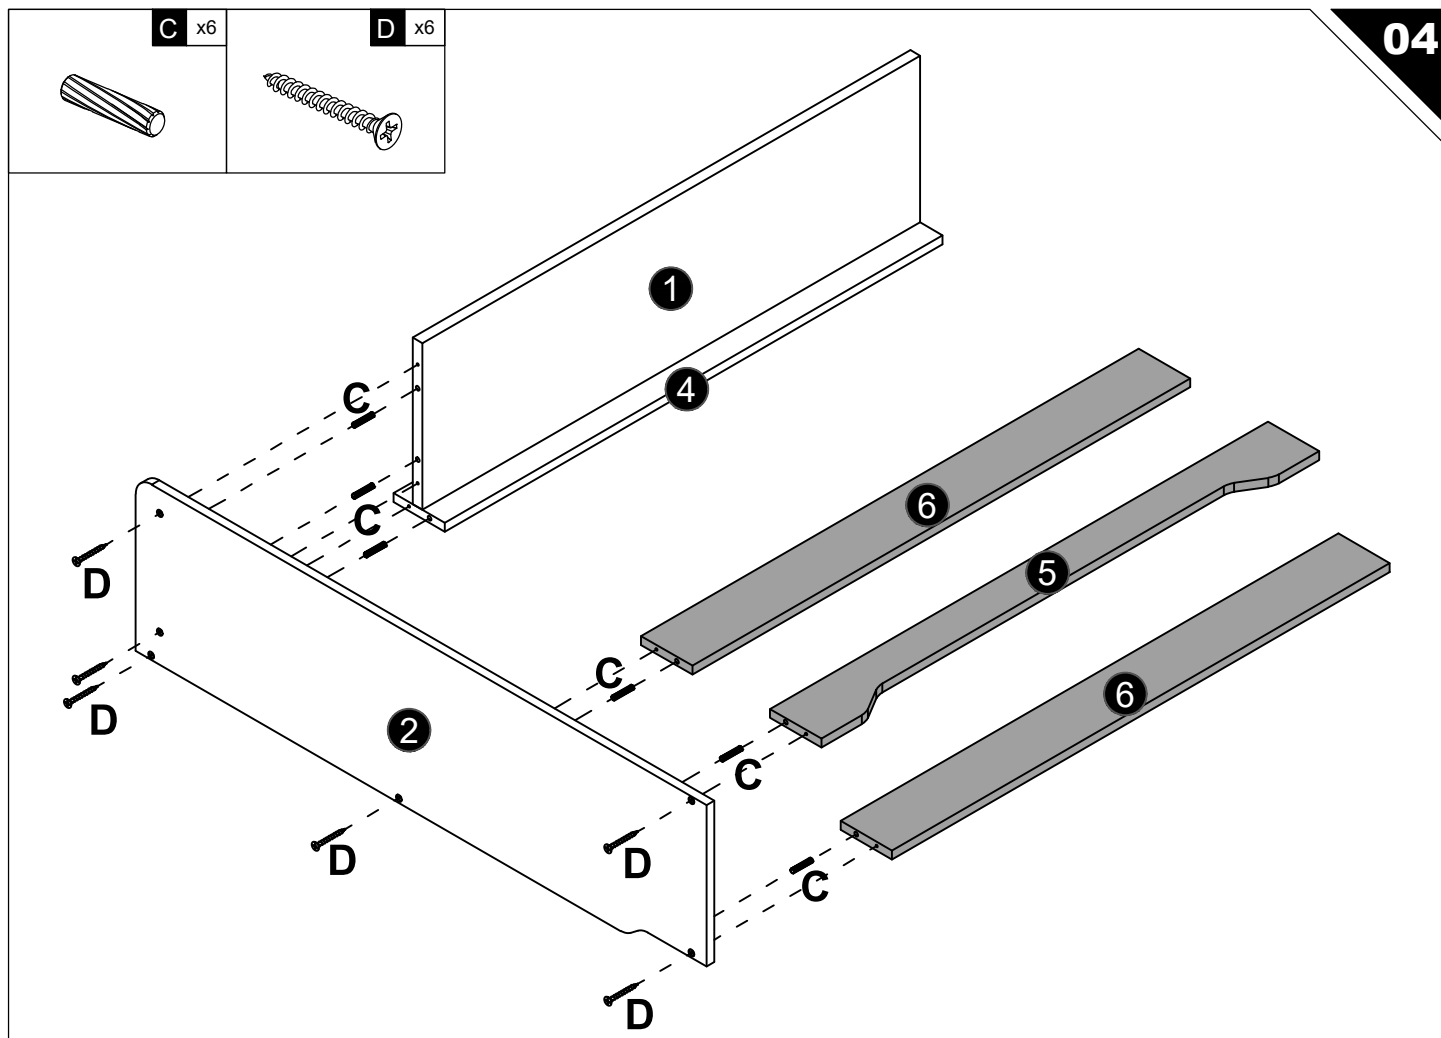


D x2



N x2

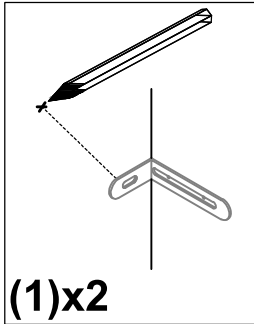


First fix the anti-rewind screw in the reserved hole of the product.

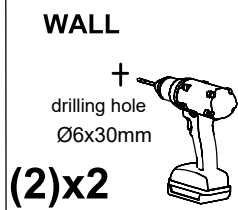


Then use a tape drill to make holes in the wall that are suitable for the product screws.

WALL

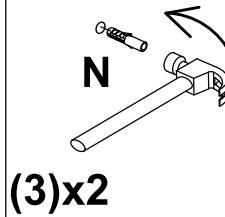




Then, put the expansion bolt into the hole

WALL

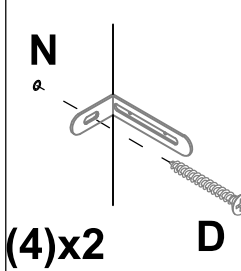

Finally, pass the matching screws through the "anti-rewind" and tighten them to fix them on the wall.

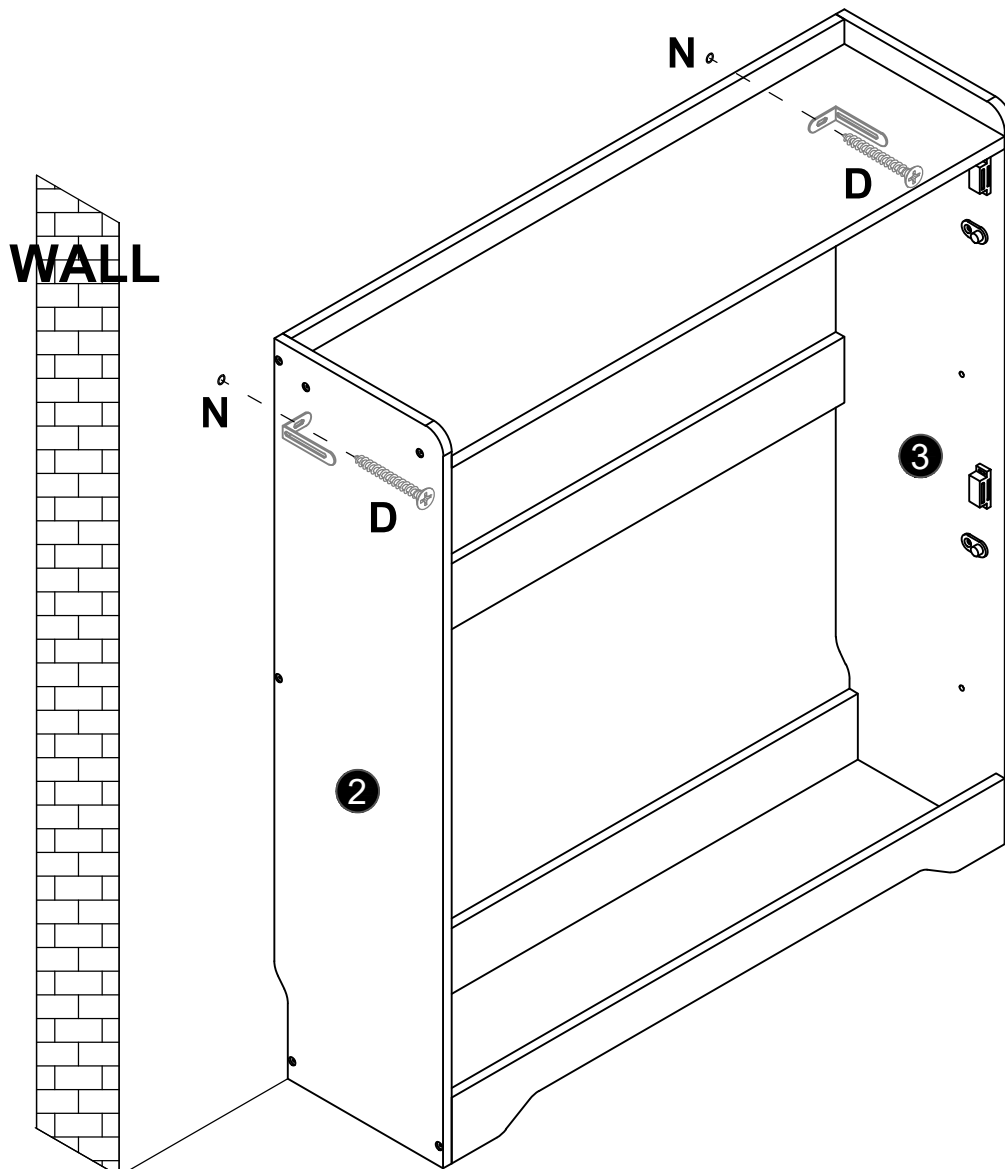


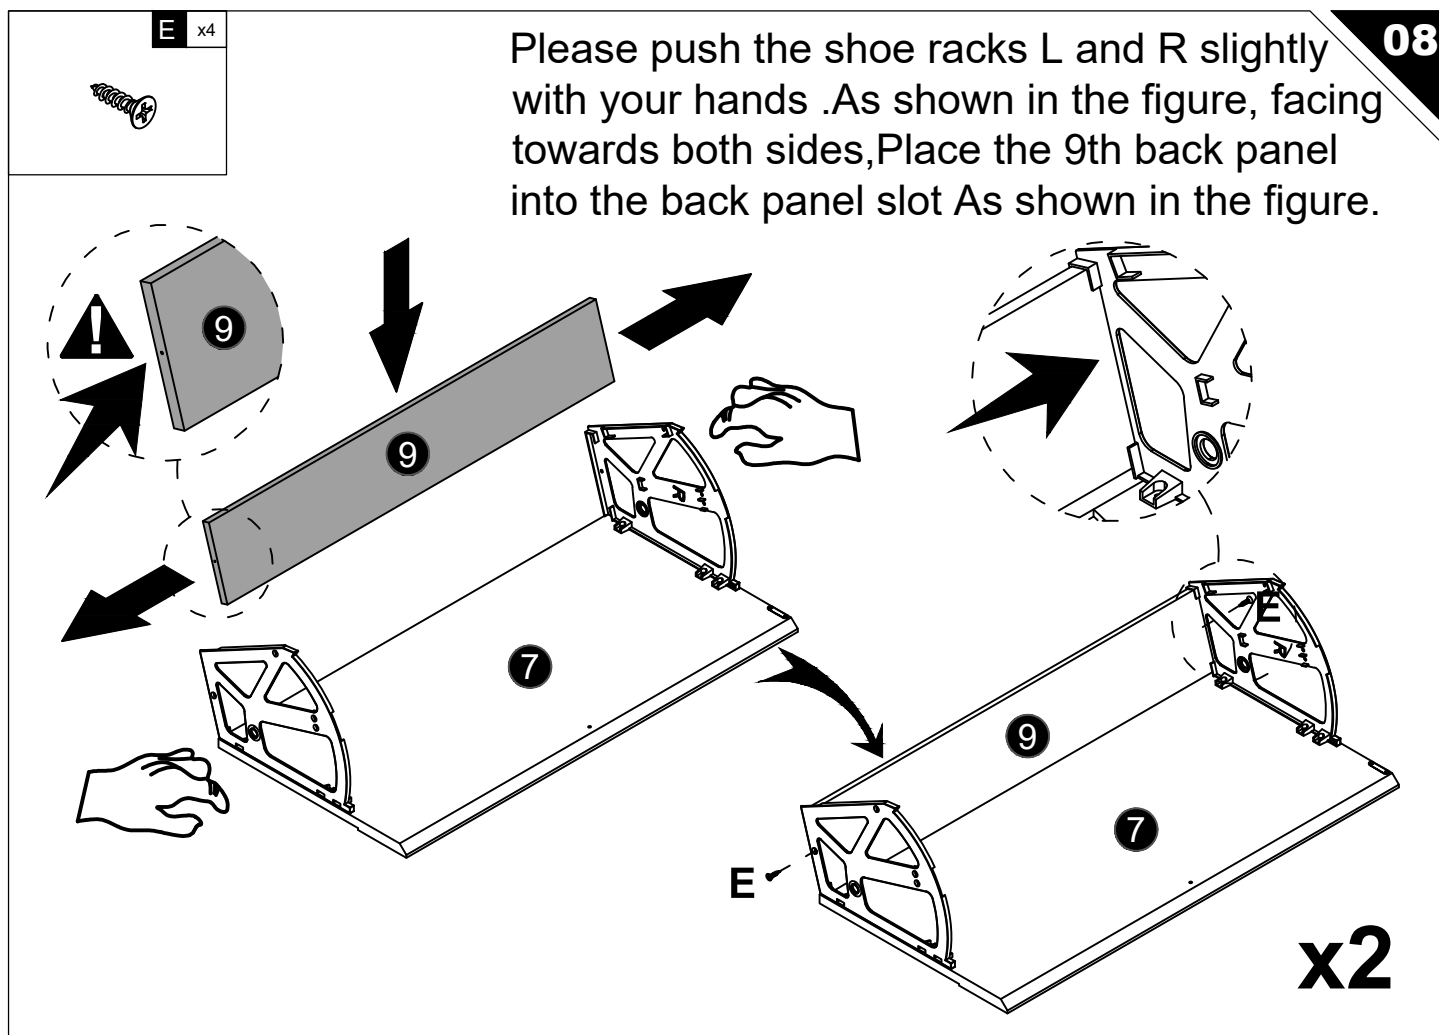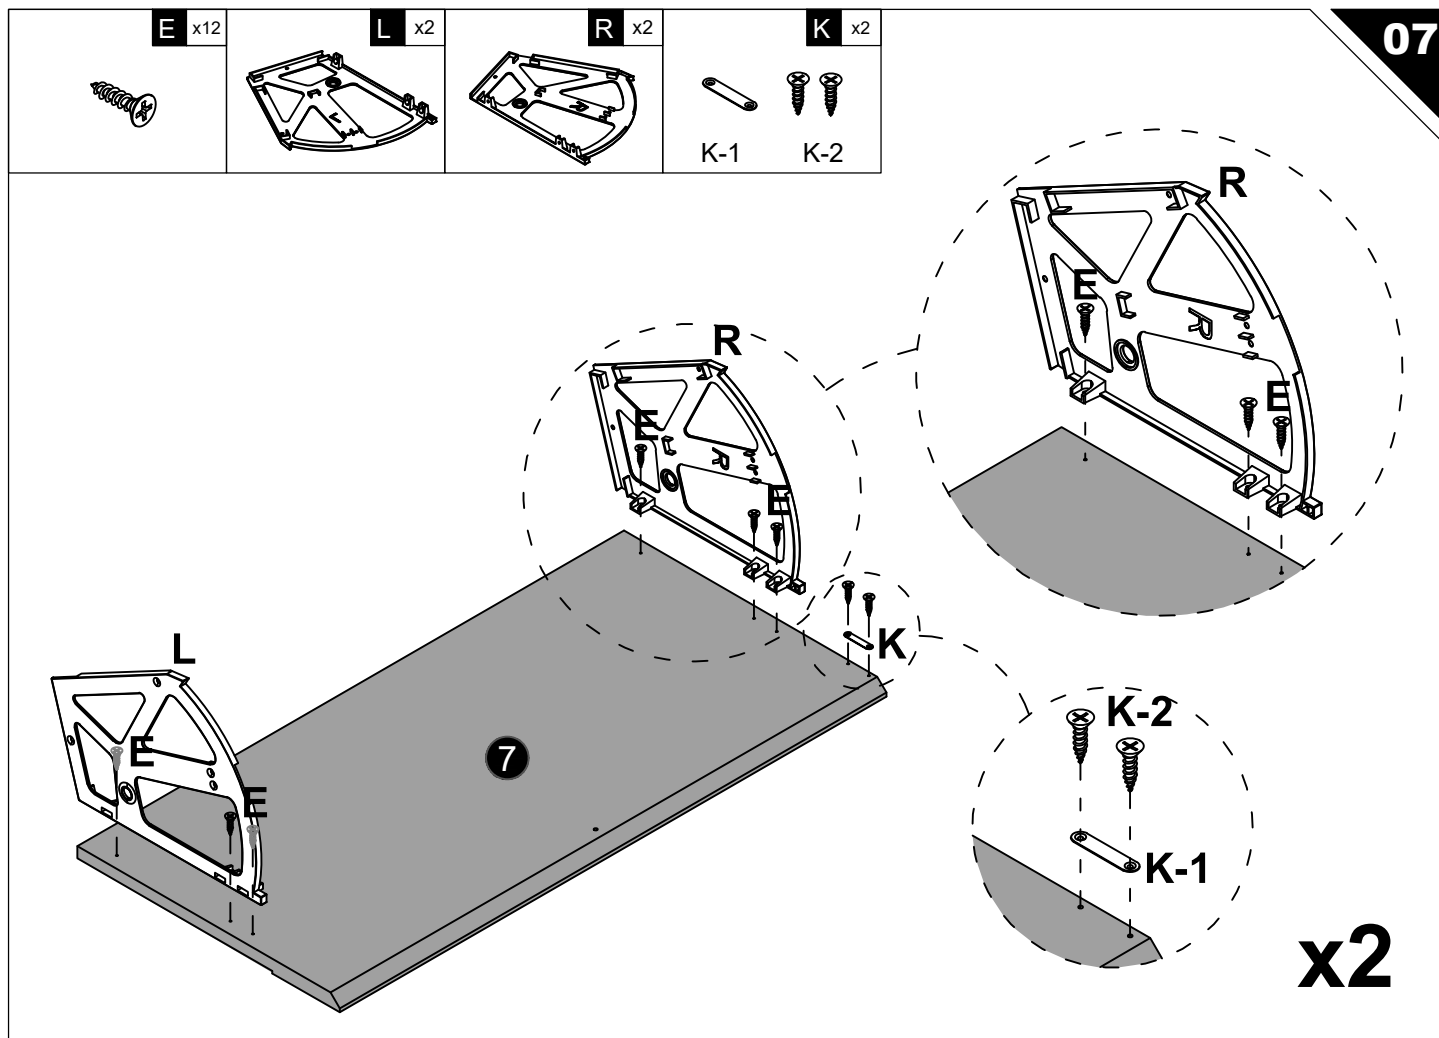

E x4

09

Please push the shoe racks L and R slightly with your hands .As shown in the figure, facing towards both sides,Place the 8th back panel into the back panel slot As shown in the figure.

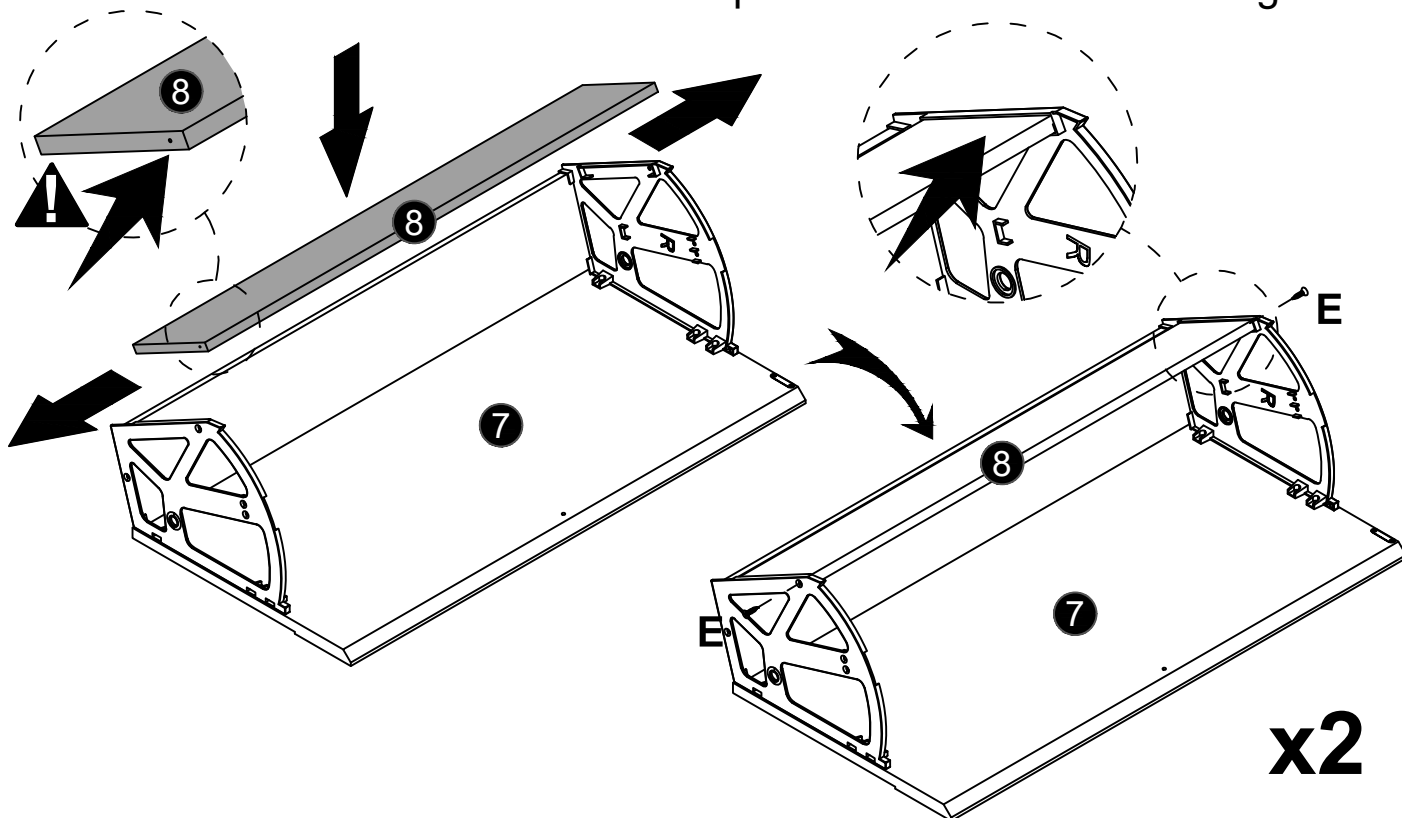

A x2


10






A-1




A-2

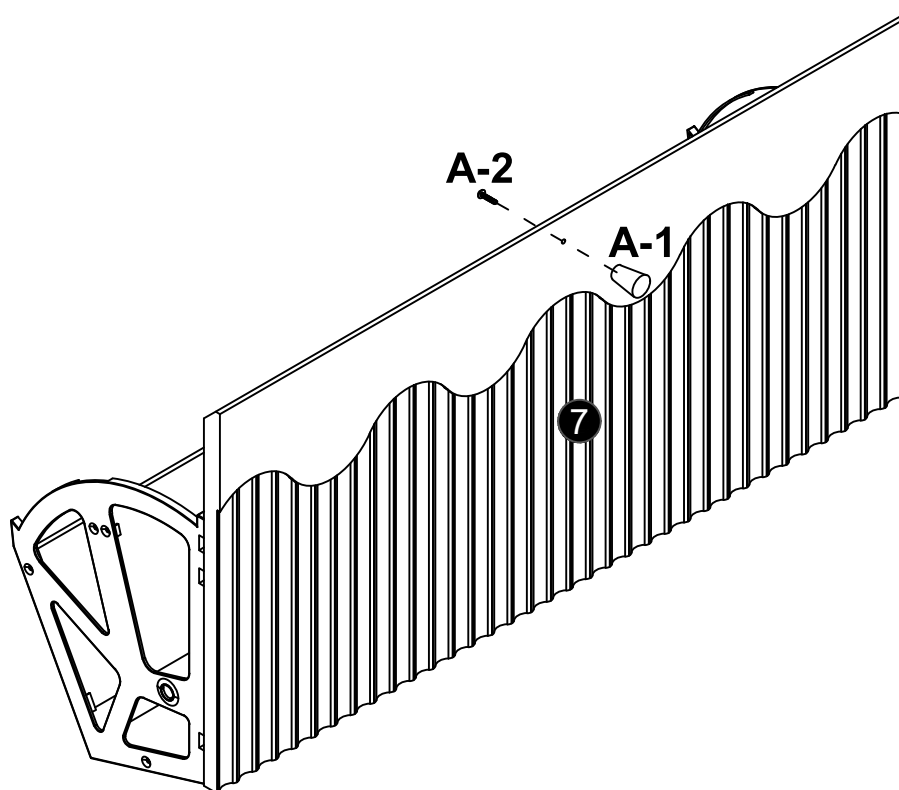


x2

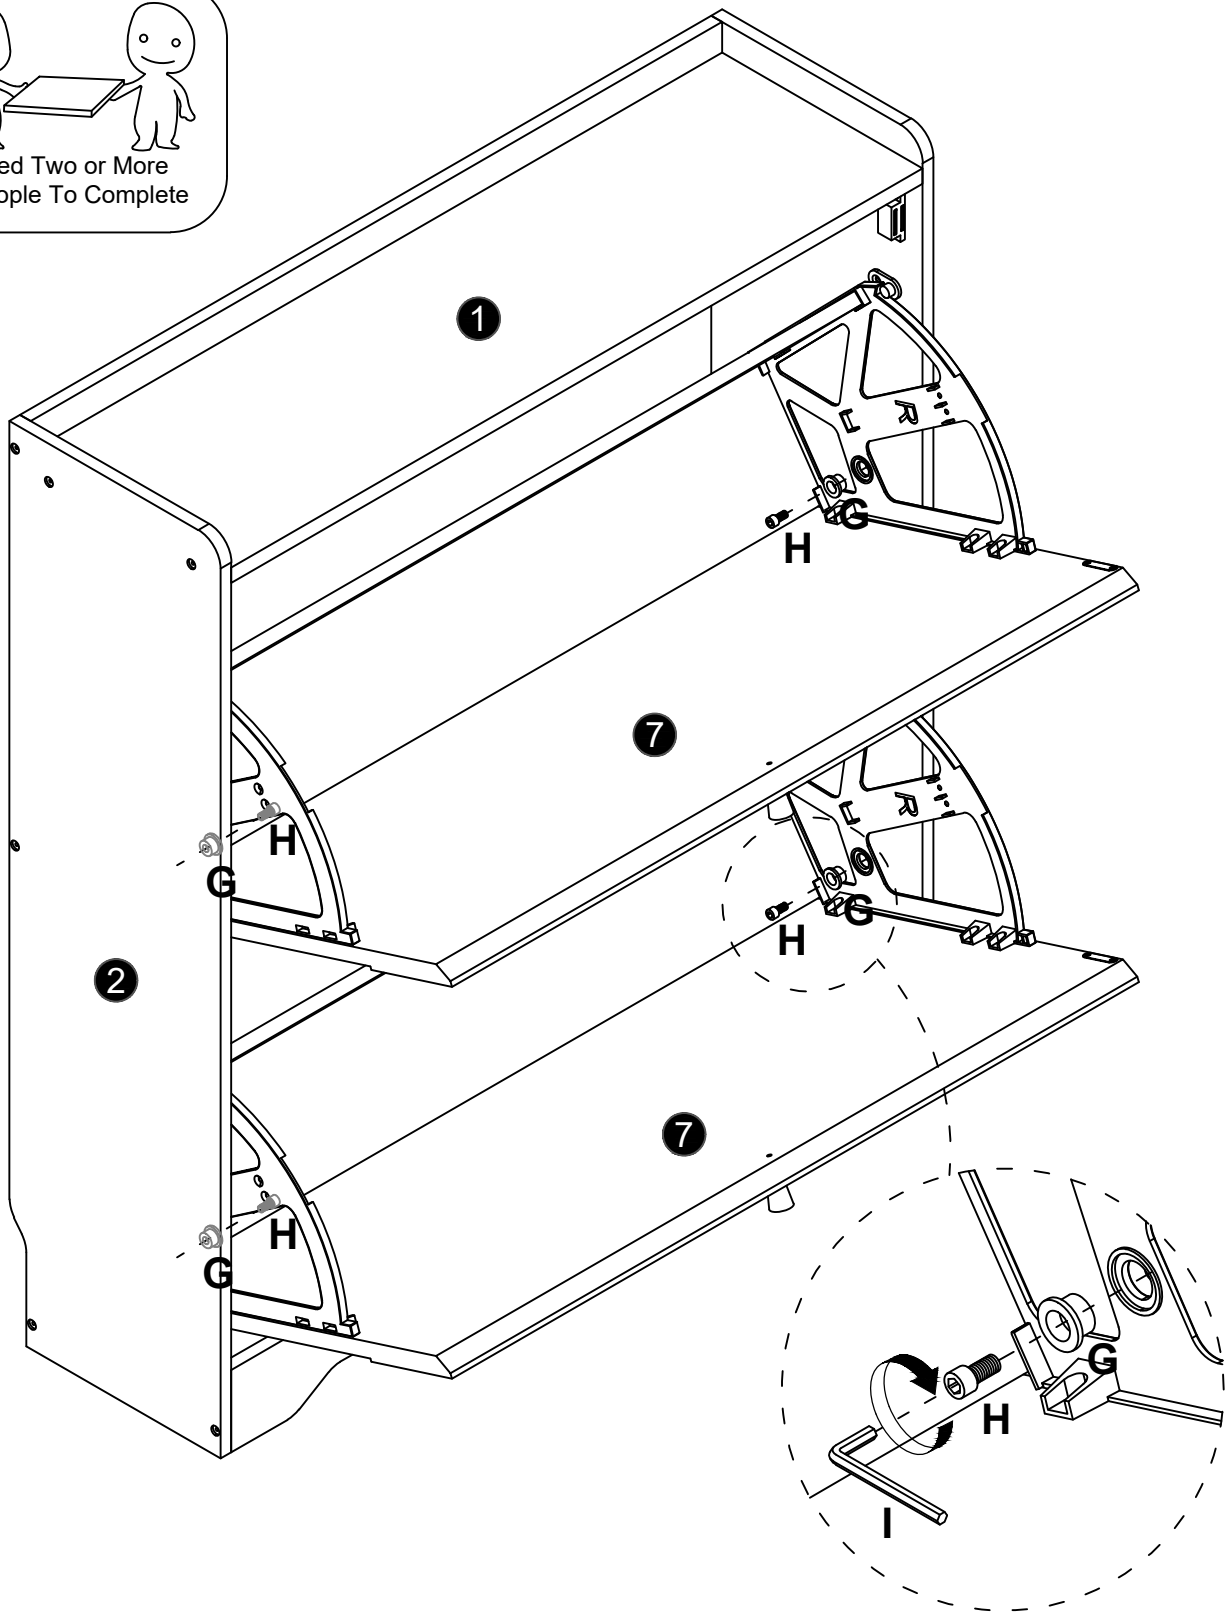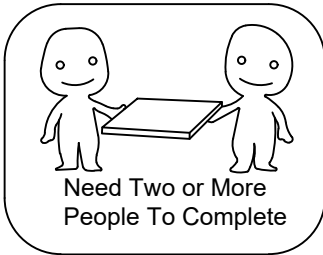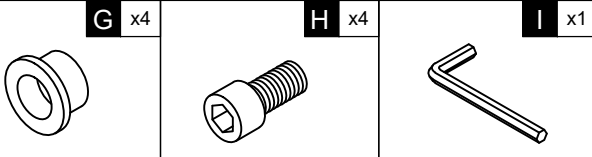


Note: When installing H, it is sufficient to reach 90% progress. Installing 100% may cause damage to G.

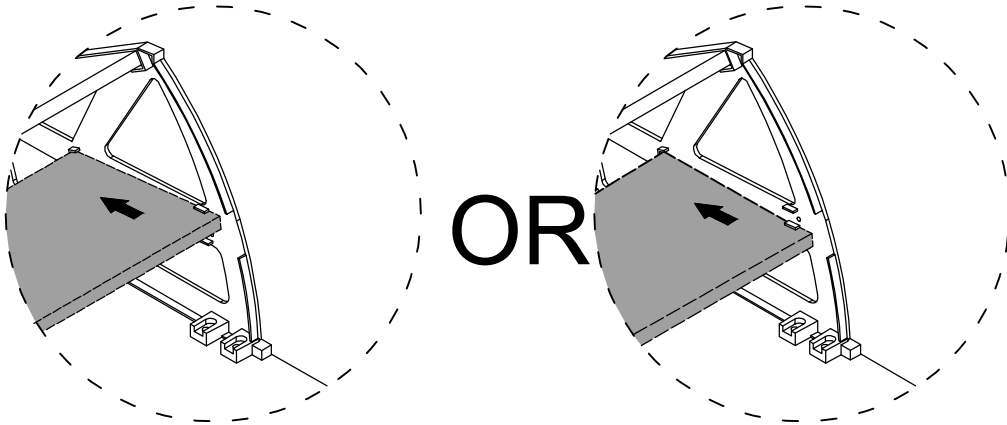

Adjustments can be made
according to your own needs.

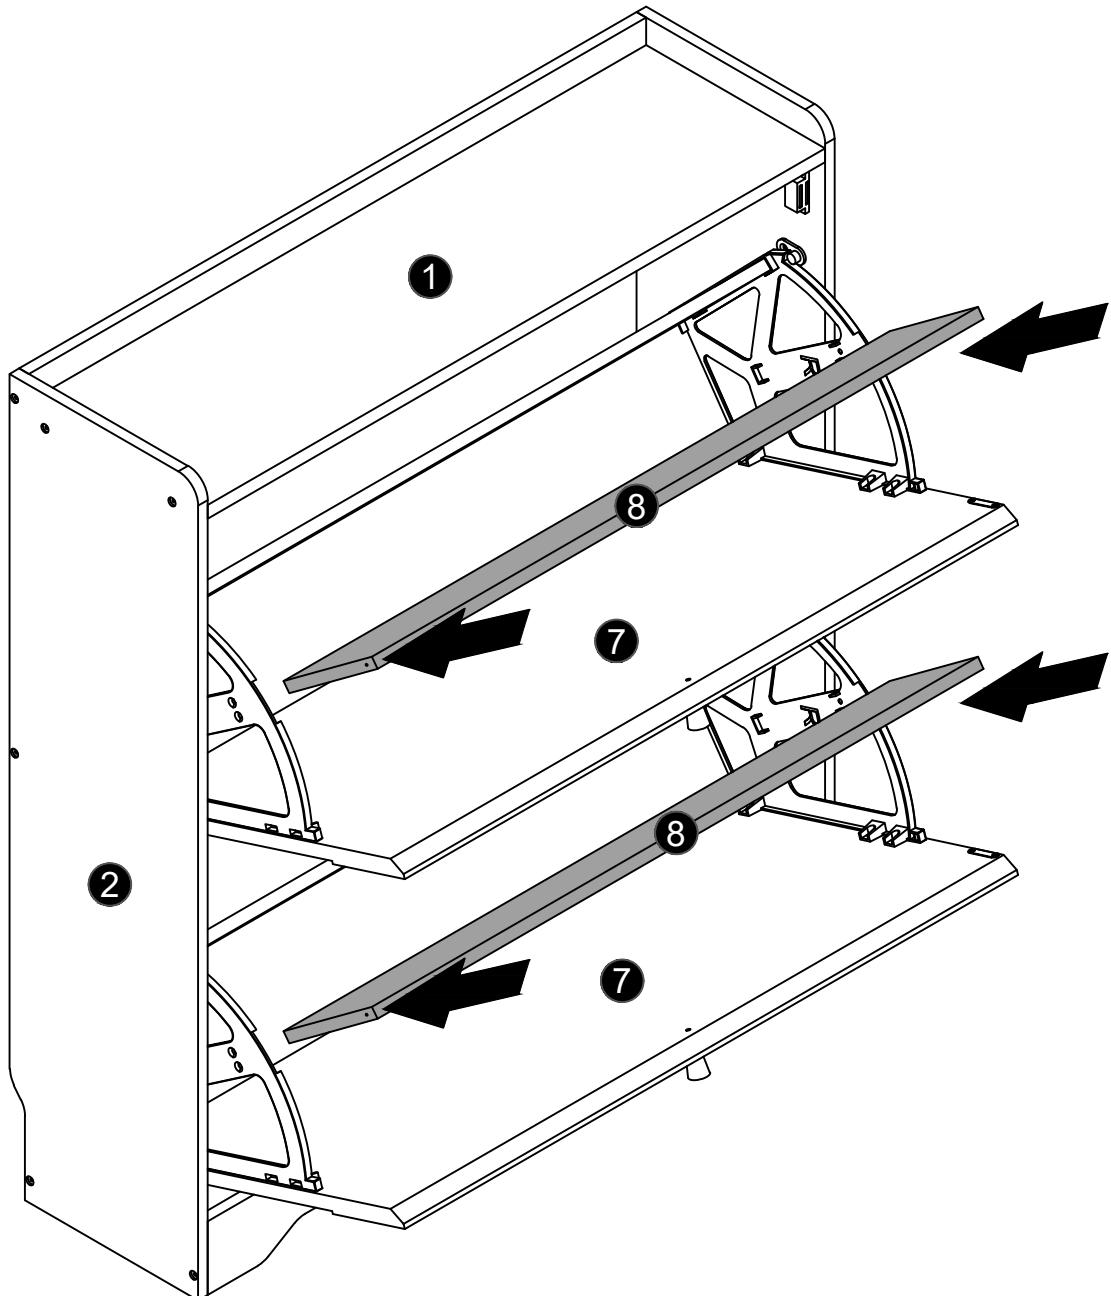

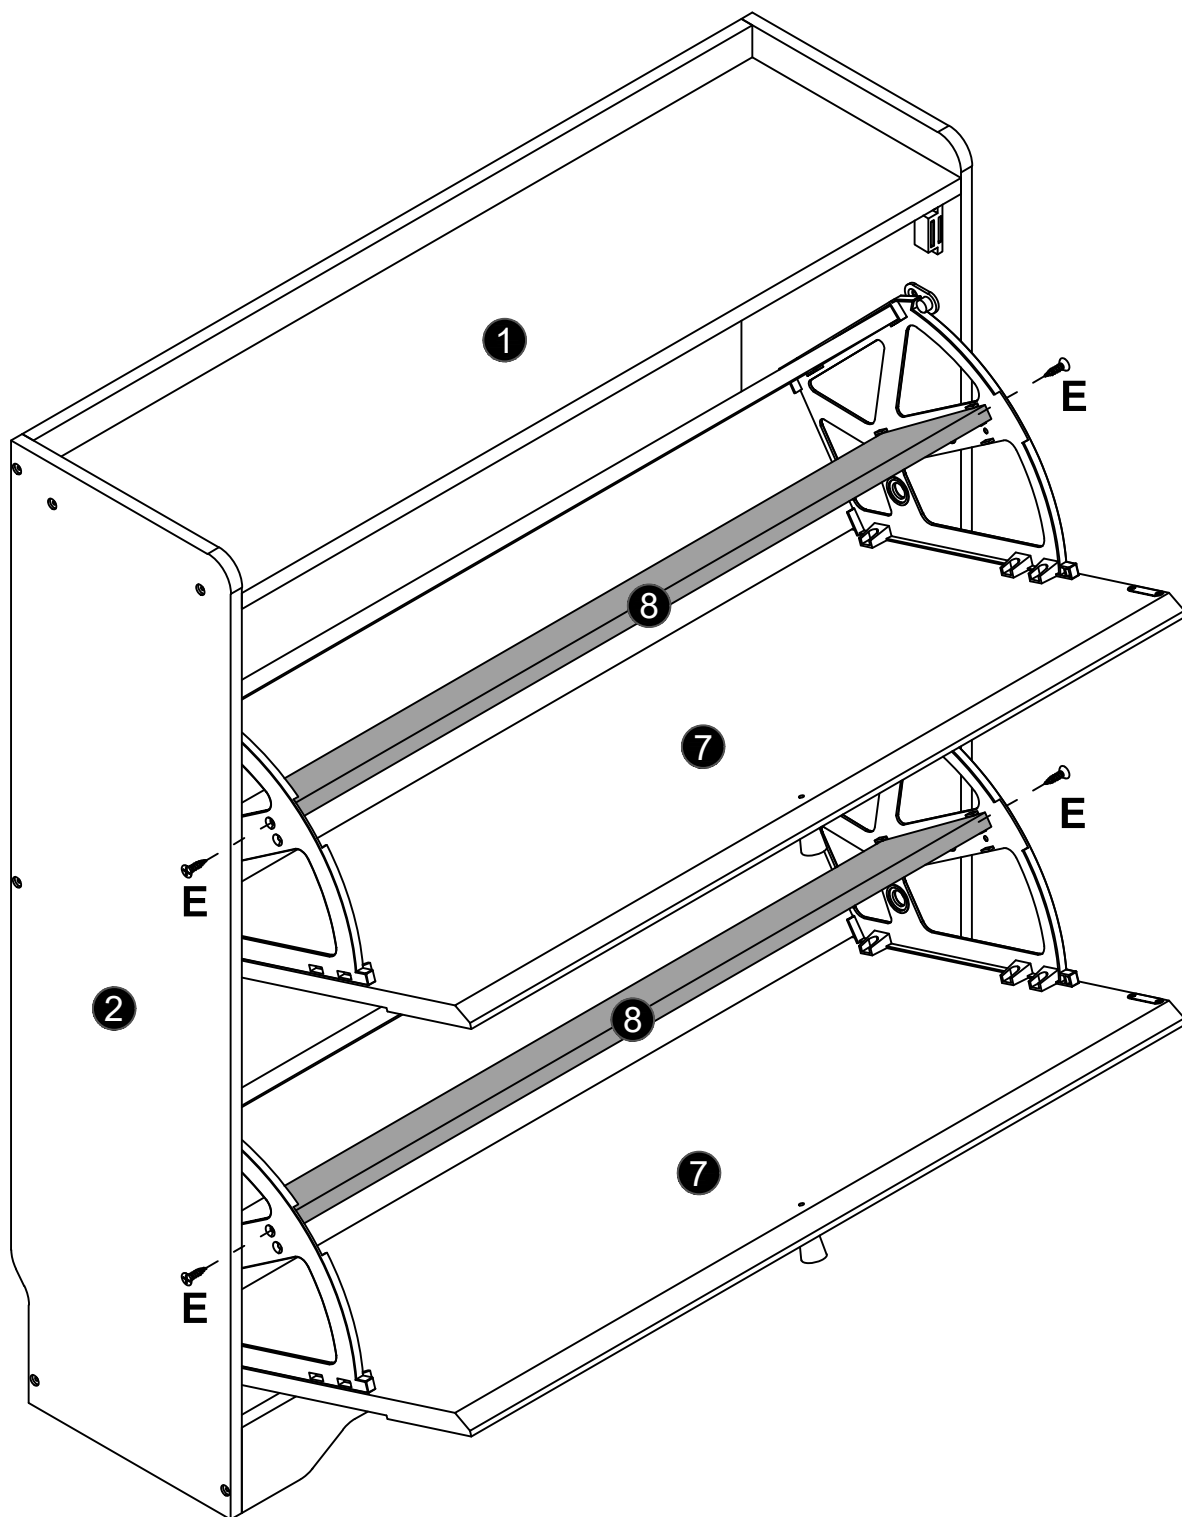

M x12

Done

