

Important

For your safety, please ensure the product is securely fastened. In windy areas, be sure to anchor your Flower Supports firmly to the ground.

Maintenance and Care

- Clean with a soft cloth , use mild soap and water if needed.
- Do not use abrasive cleaners or harsh chemicals.
- Avoid prolonged contact with standing water or constantly wet soil.
- If the surface coating is scratched, touch up promptly with rust-resistant outdoor metal paint.
- Periodically check and retighten fasteners as needed.

Warranty

Warranty: 3 Years Structural Guarantee

Exclusions: Damage caused by misuse, improper installation, or modifications is not covered.



Contact Us

 +1 (866) 597-1888

 Vego Garden Academy

 hello@vegogarden.com

 vegogarden.com

 vego_garden

 Houston, TX




Copyright @ 2026 Vego

User Manual for Bird Cage Trellis-2-Pack (M)

Models: VPSSPTMDG-2


Gardening Made Easier. Anytime, Anywhere.

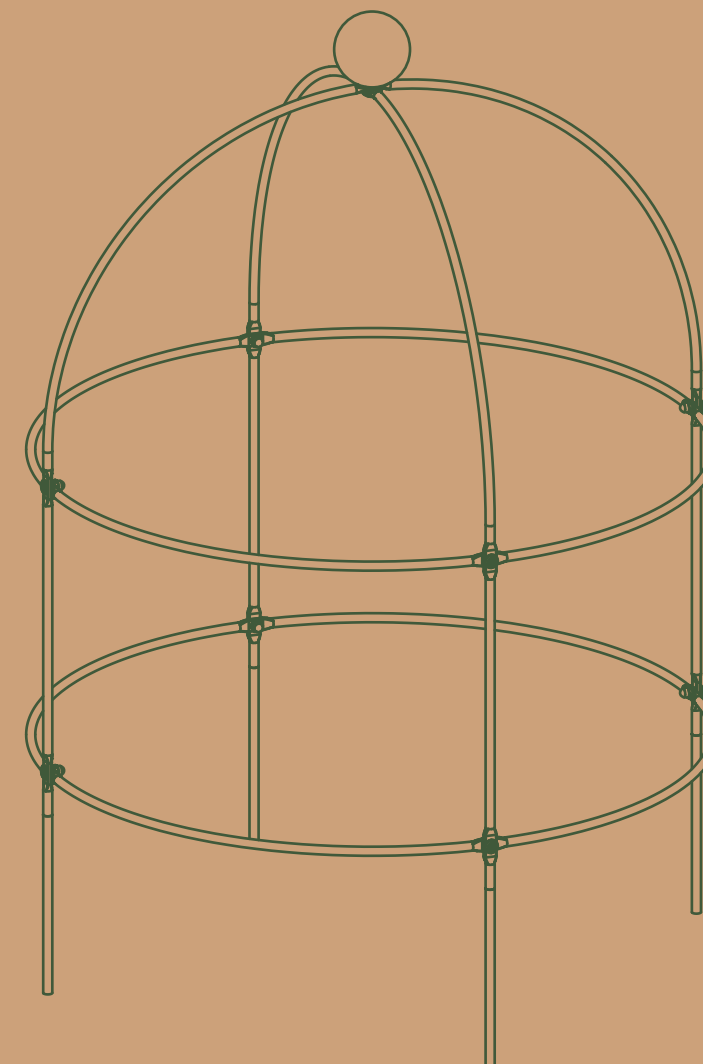

VEGOGARDEN.COM

V1.0 03/16/2026

Parts List

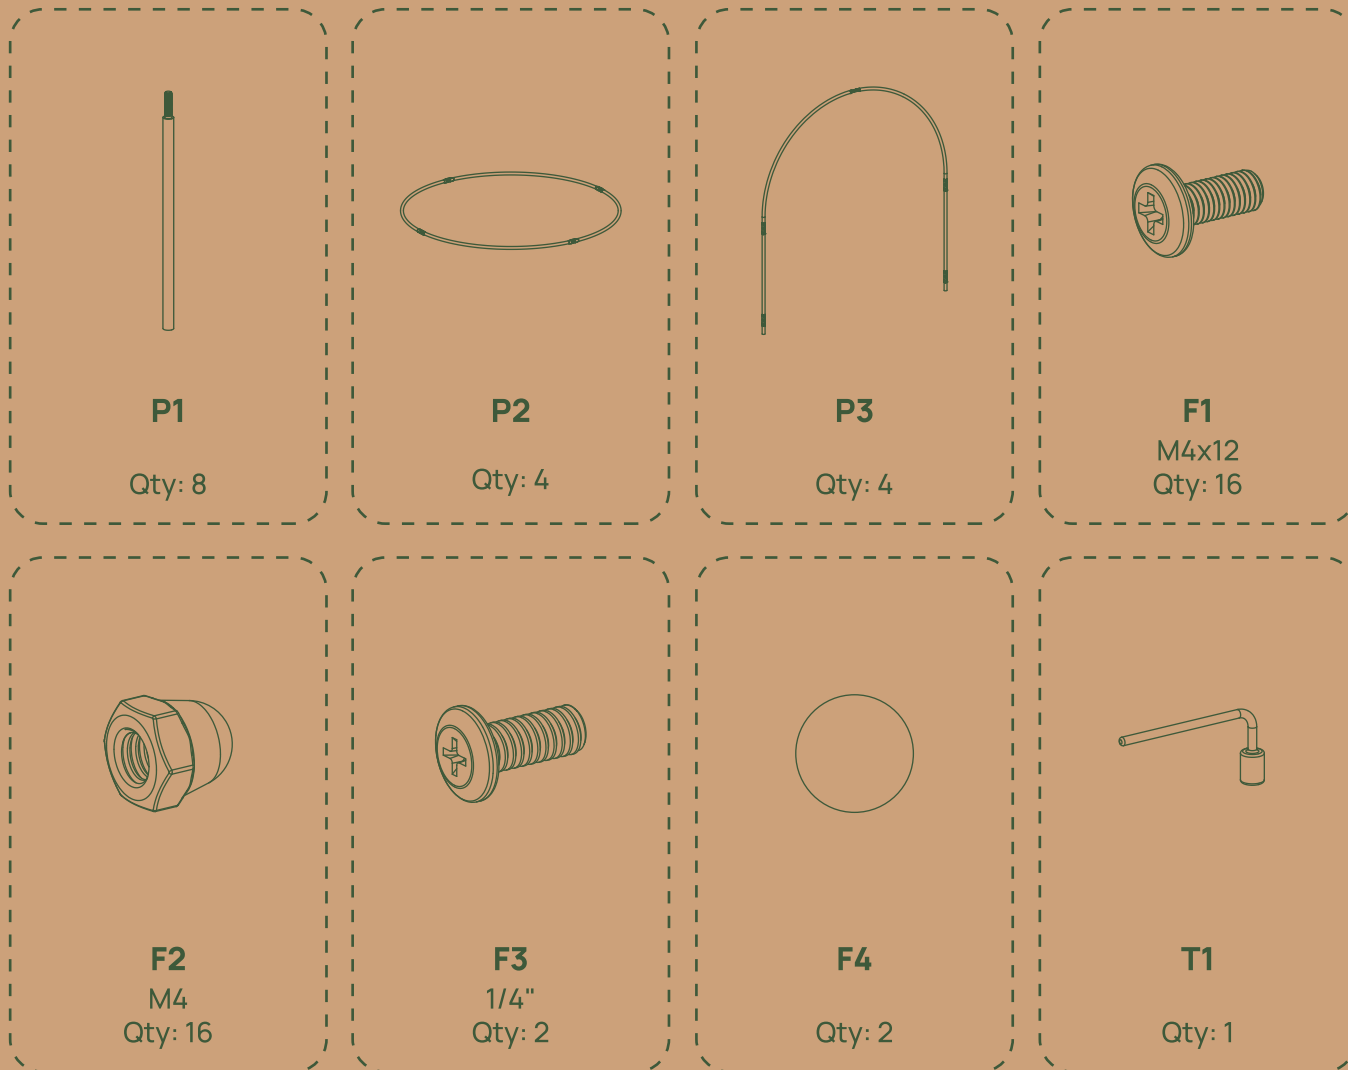

Safety Precautions

This product may contain sharp metal corners and edges. To prevent injury:

- Handle with care at all times
- Wear gloves, closed-toe shoes & long pants when handling
- Work on a stable, clean surface away from children and pets
- Follow all instructions carefully and use tools only as directed

If you are unsure about any step, pause and seek assistance.





Assembly Guide

1 Assemble the Arched Support Rods

Cross and assemble the P3 together. Secure them using F3 and F4 as shown in the diagram.



⚠ Important:

Do not fully tighten at this stage, leaving the connection slightly loose allows for easier alignment and adjustment in later steps.

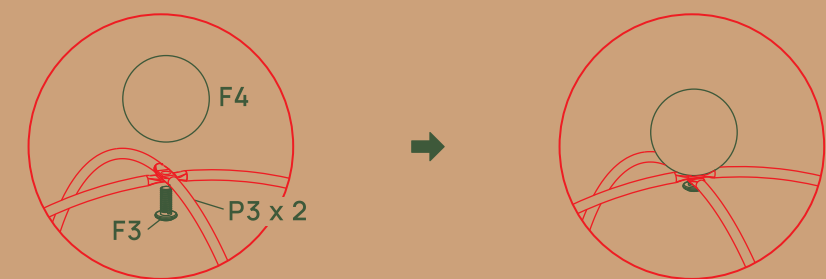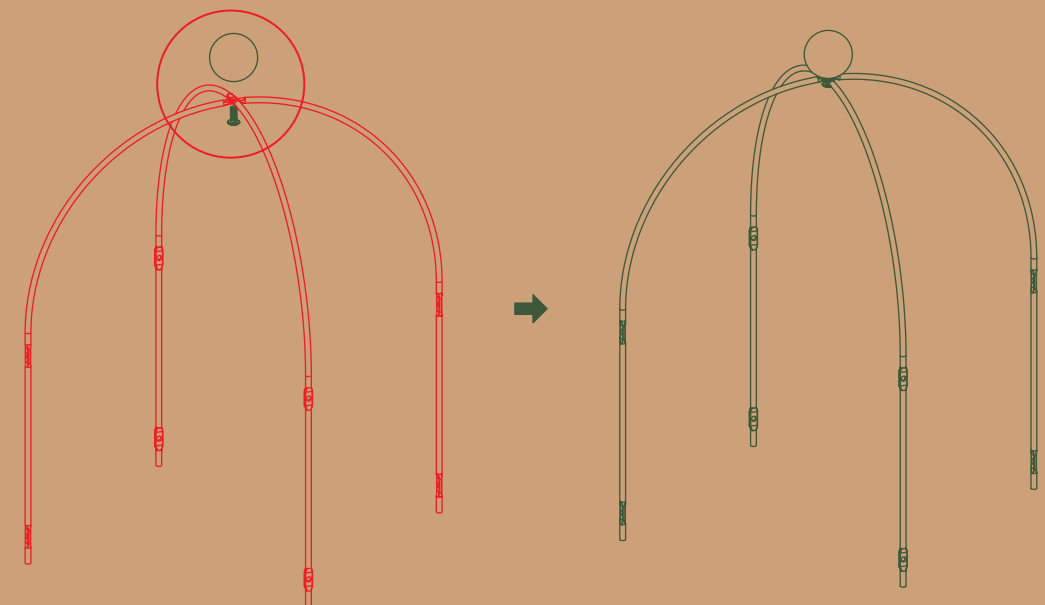

2 Install the Support Rings

Using F1 screws and F2 nuts, install the P2 rings one by one. Start with the first ring, then install the second ring. After both rings are positioned and aligned, use T1 and a screwdriver to fully tighten all screws.

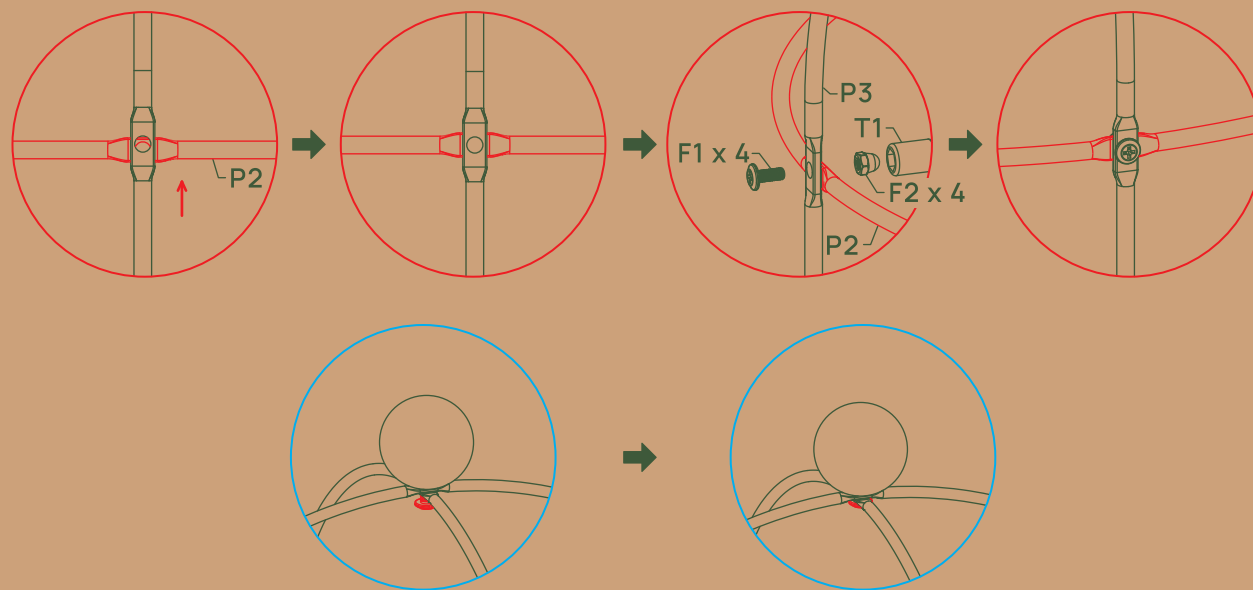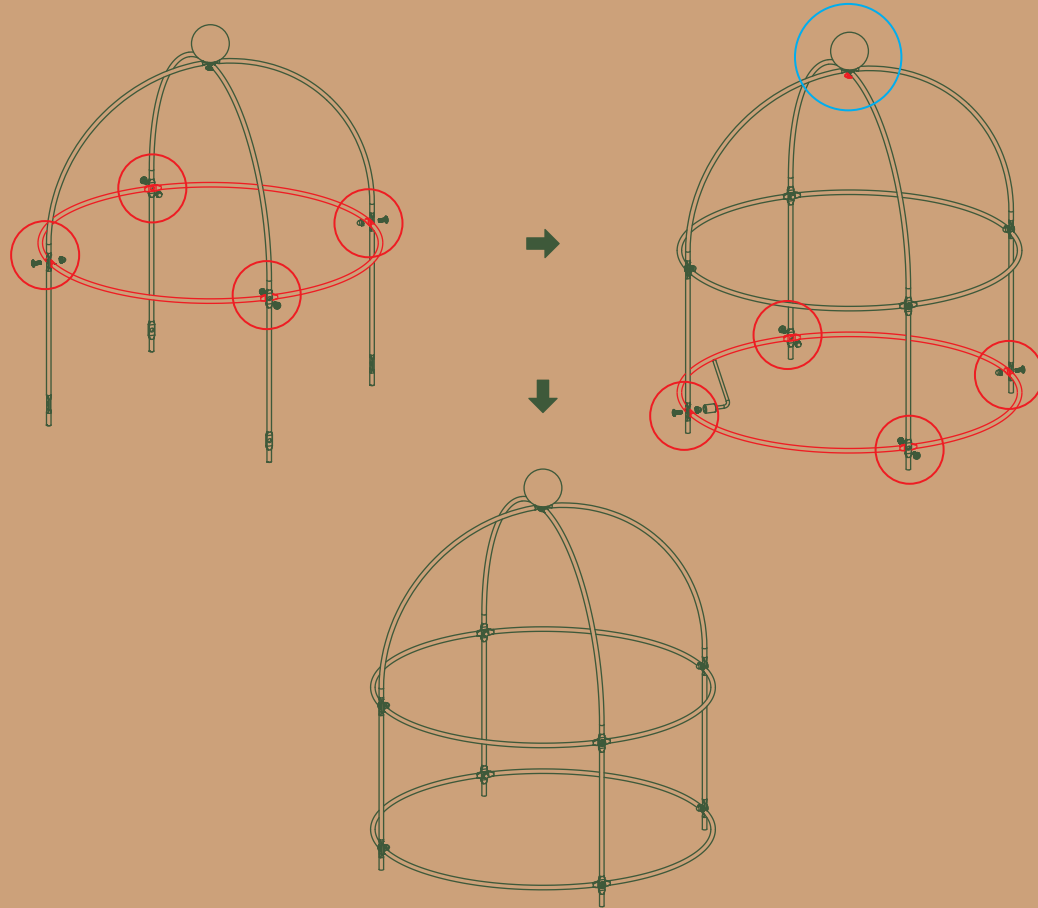

3 Attach the Ground Stakes

Thread the P1 ground stakes onto the P3 arched support rods, one by one, and tighten securely, then place it into the soil.

Note: Make sure all rods are evenly tightened and standing straight.

