


ASSEMBLY INSTRUCTION

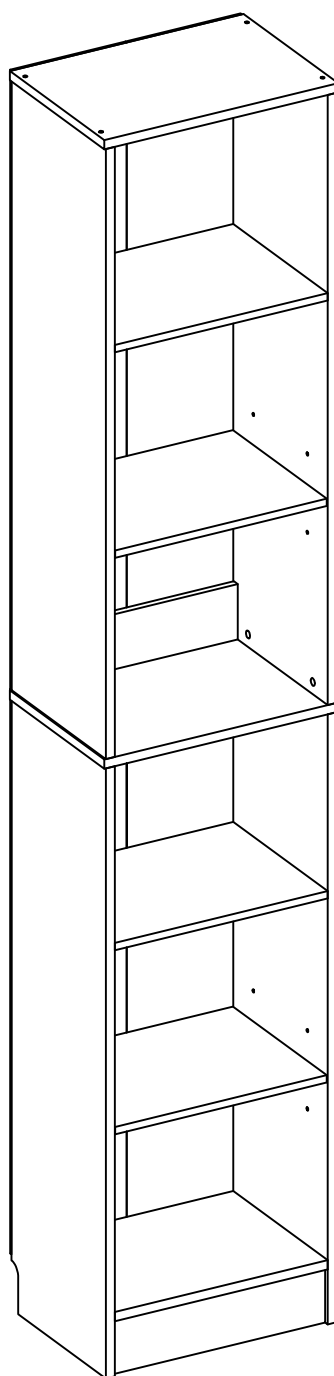

(Note:Two people are recommended to install, which will greatly improve your installation efficiency.)

✉ toptohome@hotmail.com

Thank you for purchasing our products.

As a reliable seller, we have been pursuing to provide customers with 100% satisfied products and services, so we hope that you will enjoy this shopping experience.

If you find any damage, missing parts, or dissatisfaction after receiving the product, please feel free to contact us the first time, We will provide you with a 100% satisfactory solution.

Thanks again for your order. And please feel free to contact us from our store or toptohome@hotmail.com in case of any problem regarding assembling or the product itself. We will do everything we can to resolve it.

Please call for replacement parts or assistance: 1-878-888-6665.
Mon-Fri 9am-5pm (PST)


TIPS:

1. Please read this instruction manual carefully, follow it step by step and pay attention to the notes, you will assemble it quickly, safely and correctly.
2. Two people are recommended to install, which will greatly improve your installation efficiency.
3. Put the screws in loosely until all pieces are together and then tighten them all. It will save your time if you make a mistake while installing

Using Camlocks


Connect the male camlock as directed in the assembly instructions using a screwdriver.

1 DO NOT OVER TIGHTEN

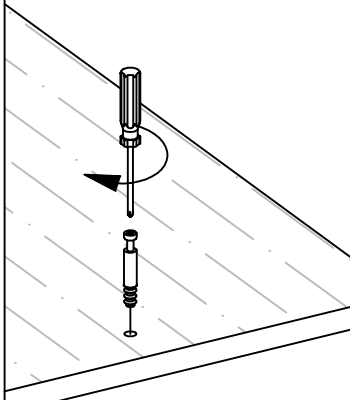

Push the male camlock into the entry hole.


2

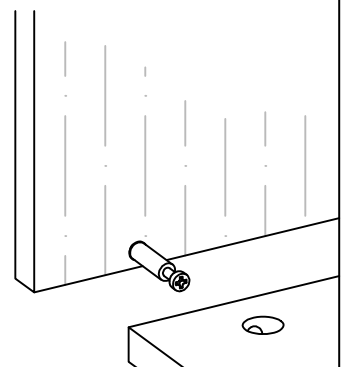

Insert the female camlock as shown in the instruction.

Note: ensure that the arrow on the top of the camlock points toward the entry hole for the male camlock.

3

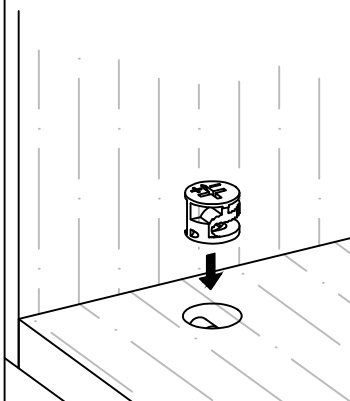



Turn the female camlock clockwise with a screwdriver.













You should feel a click when the camlock is locked in place.






The joint is now secure.

4



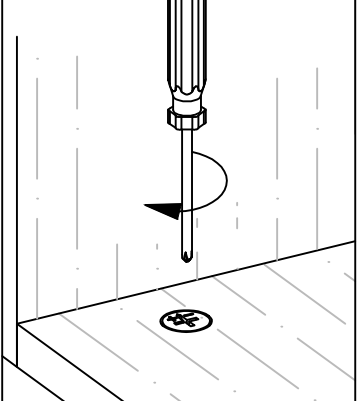


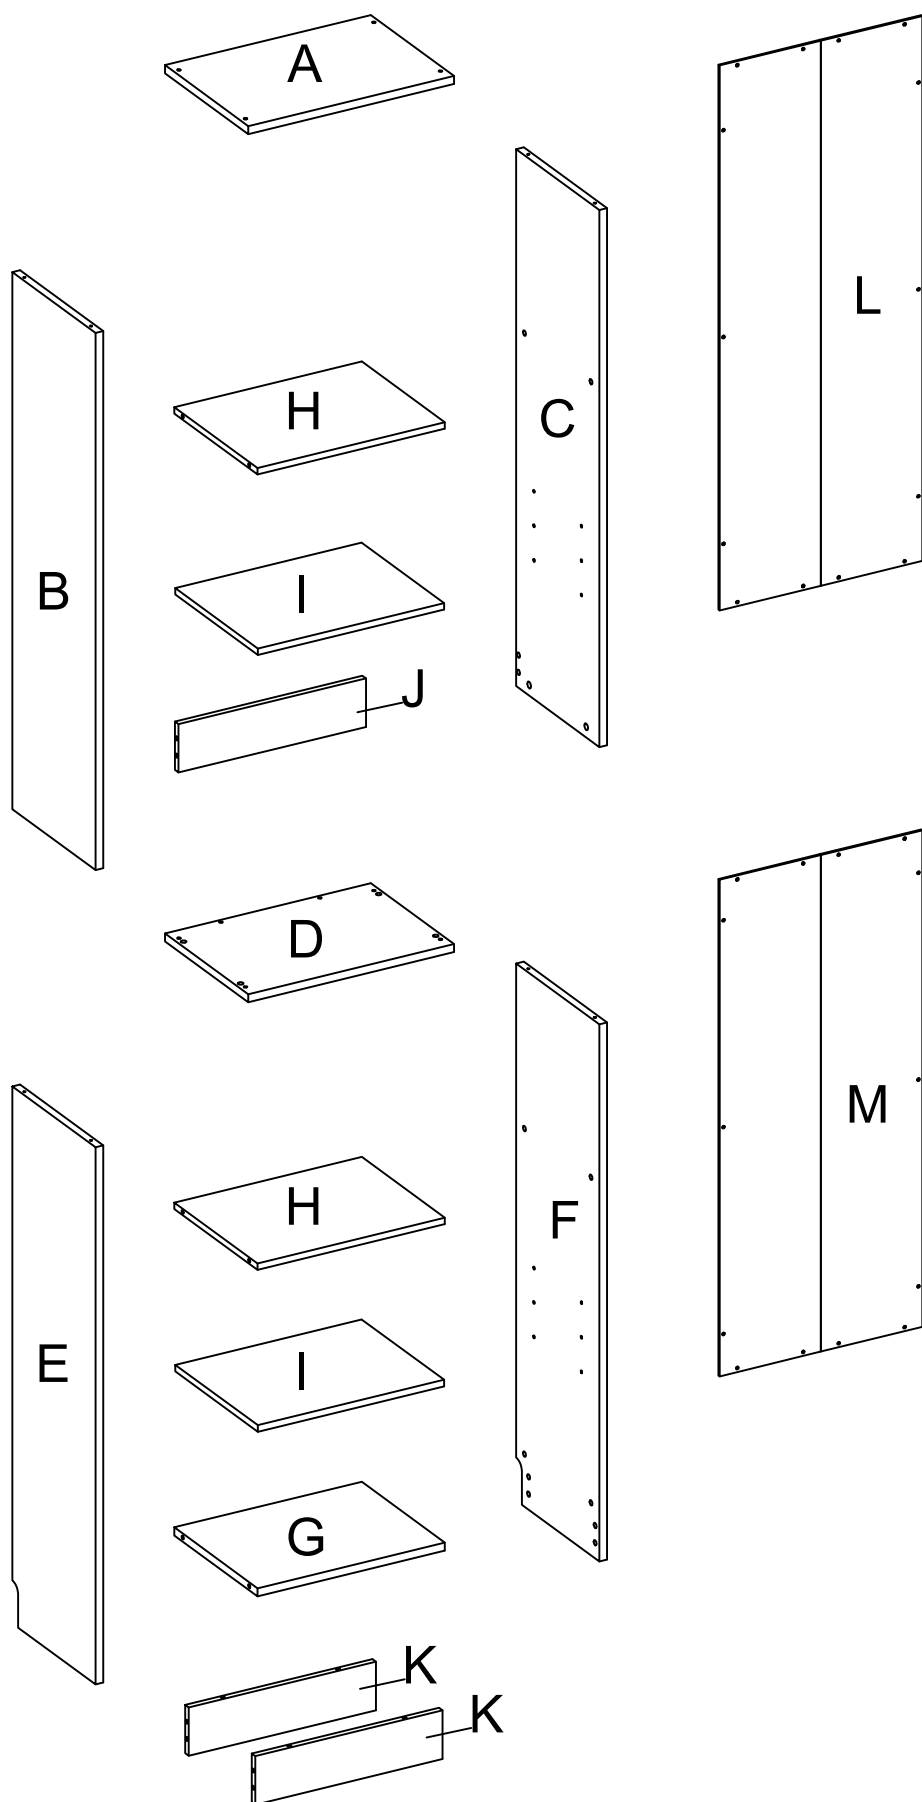

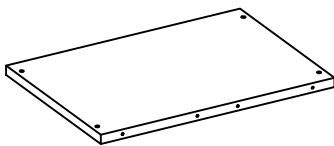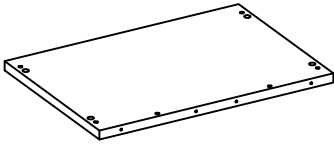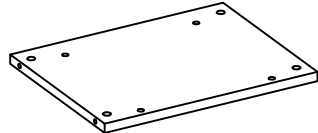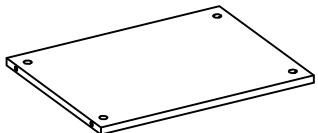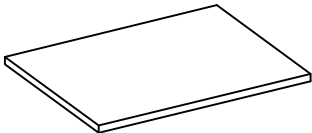
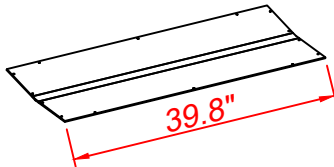
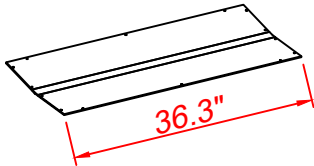
PART LIST			
A x 1pc 	B x 1pc 	C x 1pc 	D x 1pc 
E x 1pc 	F x 1pc 	G x 1pc 	H x 2pcs 
I x 2pcs 	J x 1pc 	K x 2pcs 	L x 1pc 
M x 1pc 			

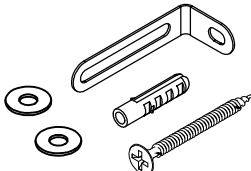HARDWARE LIST			
① 	② 	③ 	
M6x28 32 pcs	Ø12 32 pcs	M6x19 8 pcs	
④ 	⑤ 	⑥ 	
M5x40 10 pcs	M3x16 28 pcs	M4x40 2 pcs	
⑦ 	⑧ 	⑨ 	
8 pcs	M3 1 pc	1 pc	



STEP 1

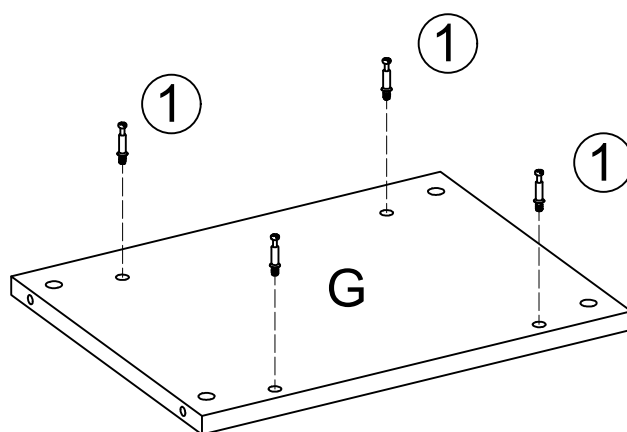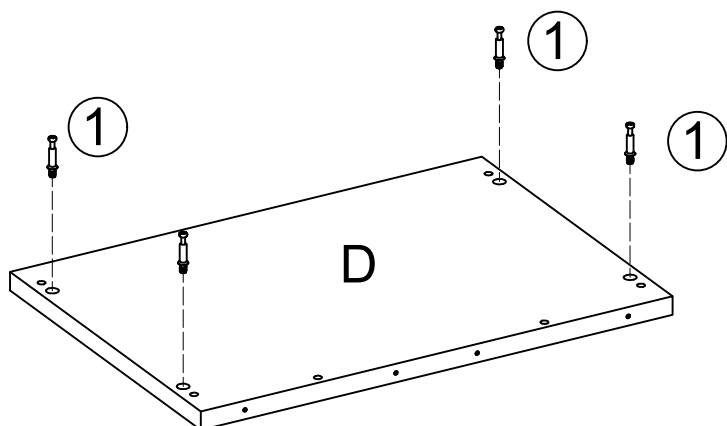



STEP 2

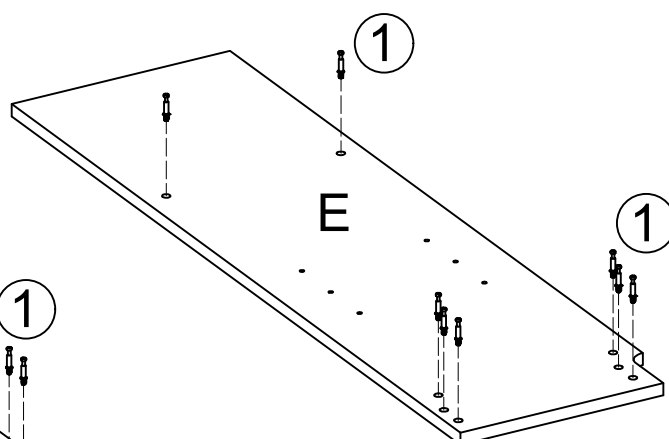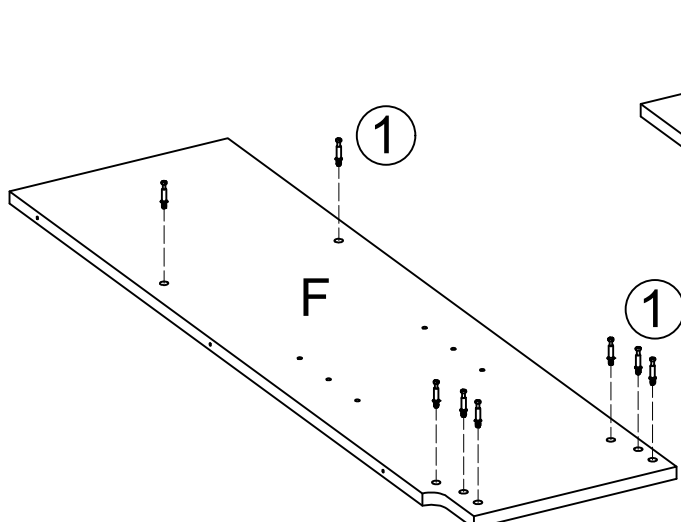

STEP 3

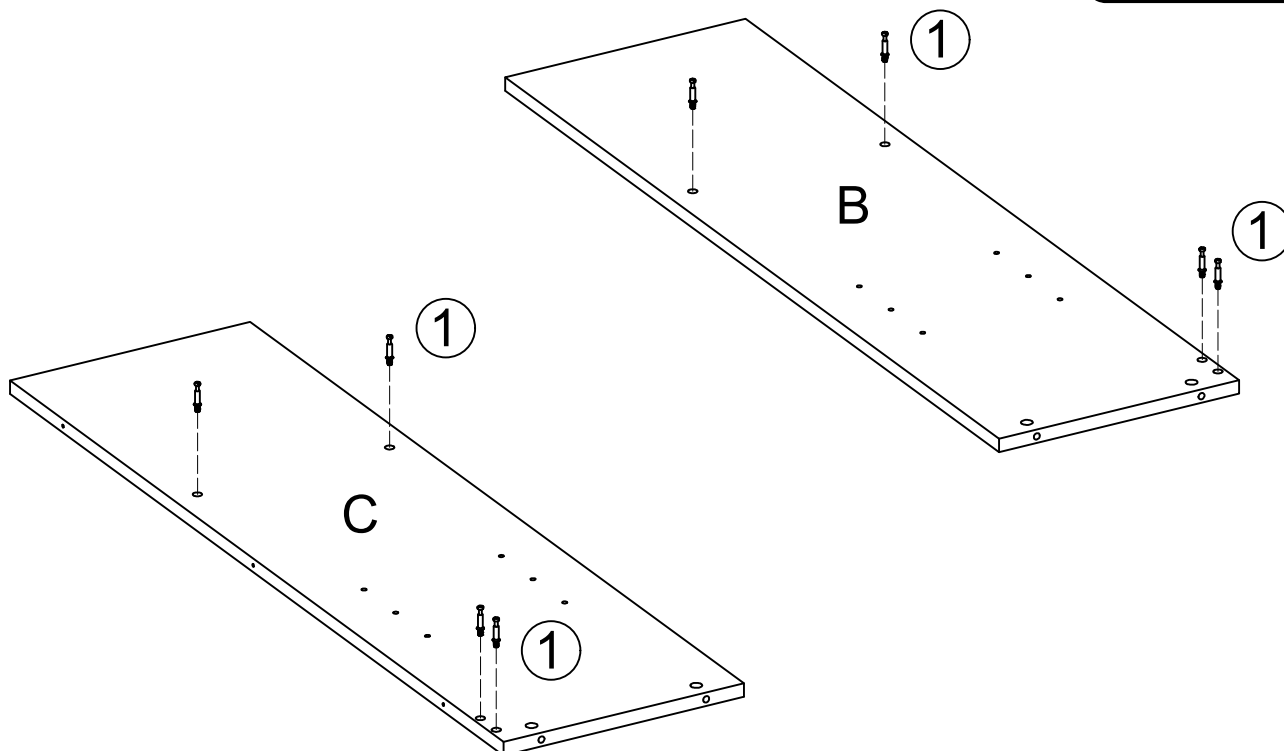

STEP 4

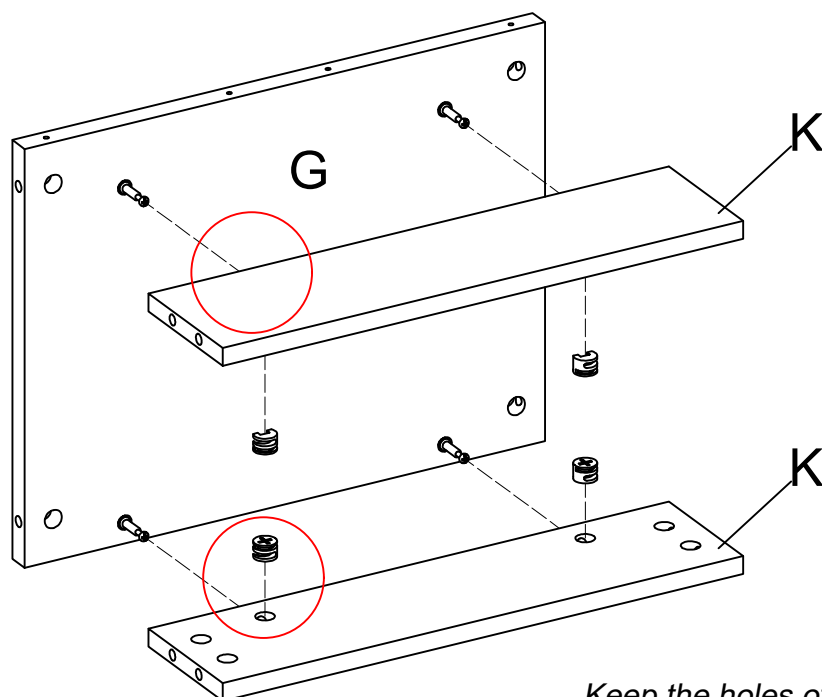


Keep the holes of the Part K
toward this direction as shown

STEP 5


②  x16

Keep the holes of the
Part G and Part H toward
this direction as shown

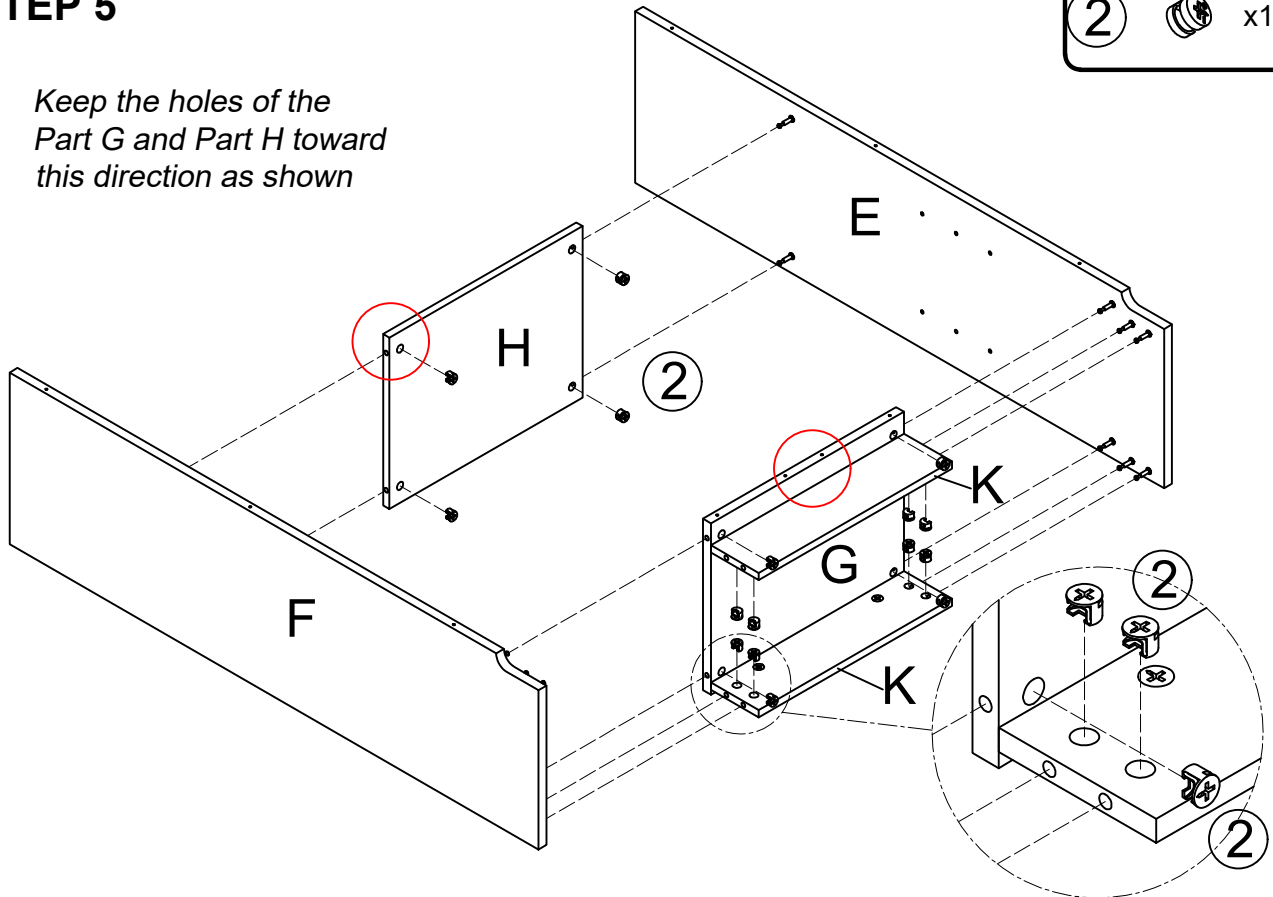


STEP 6

⑦  x8

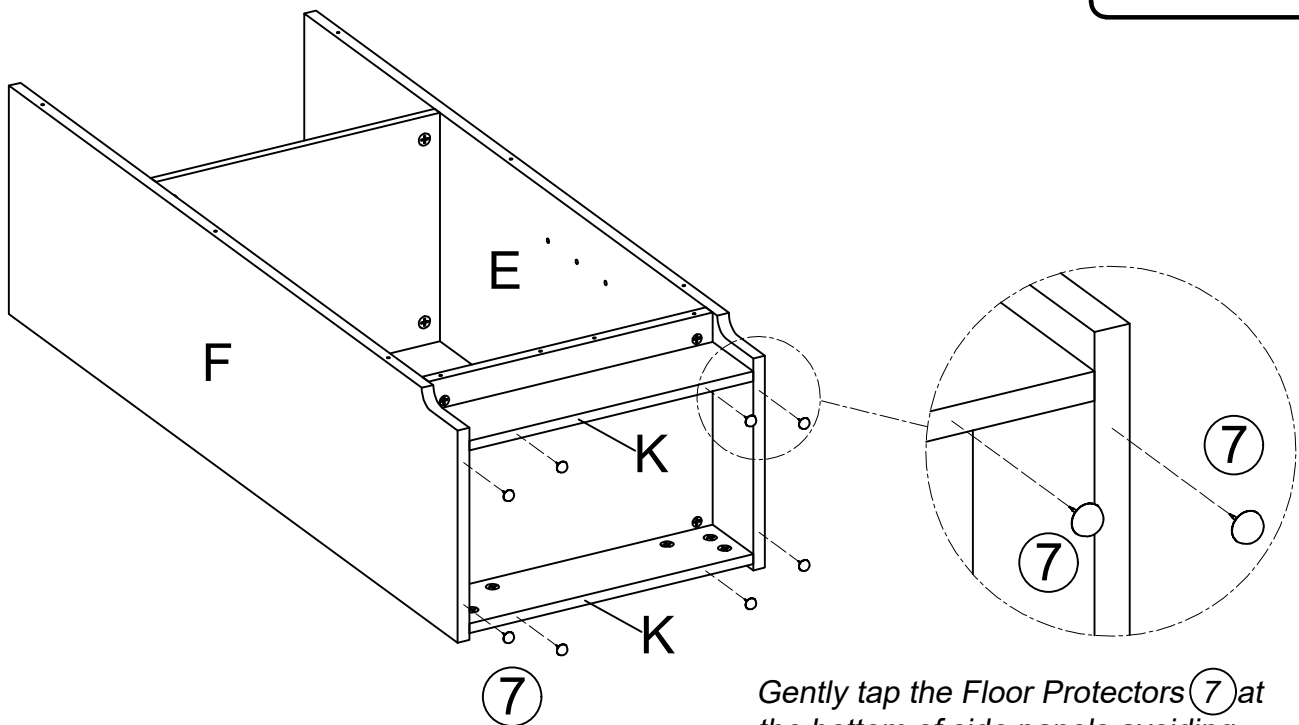


Gently tap the Floor Protectors ⑦ at
the bottom of side panels avoiding
crack or damage of side panel.


STEP 7

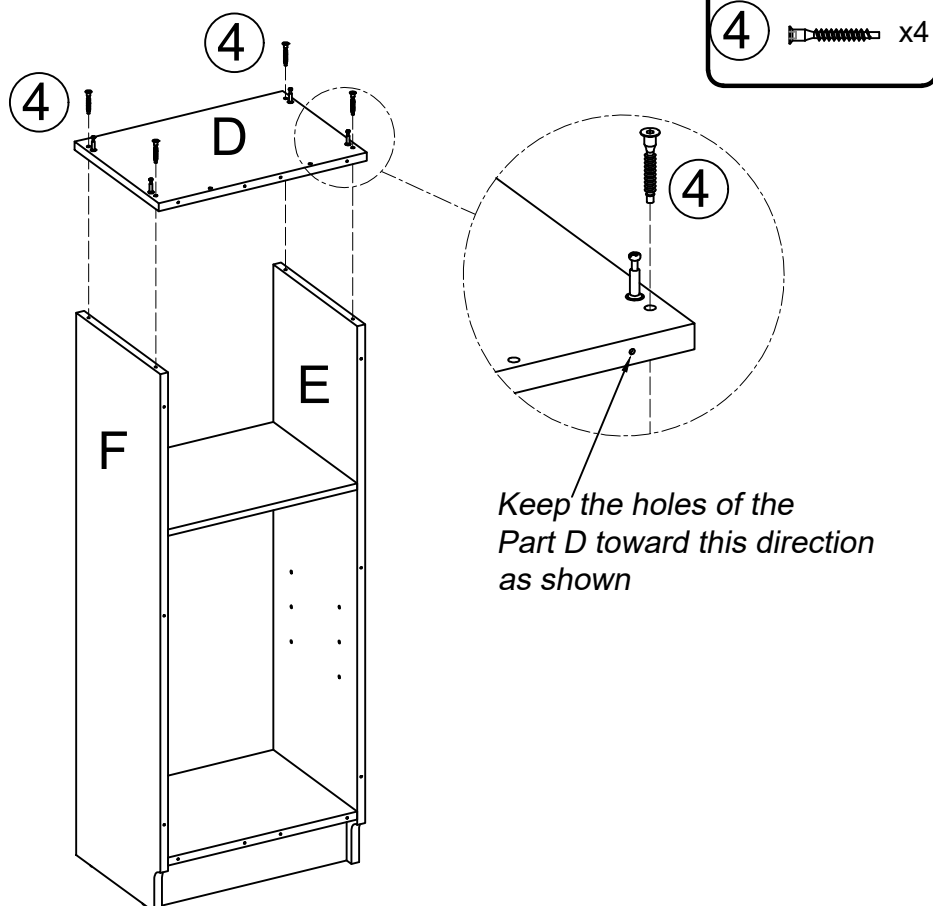


STEP 8

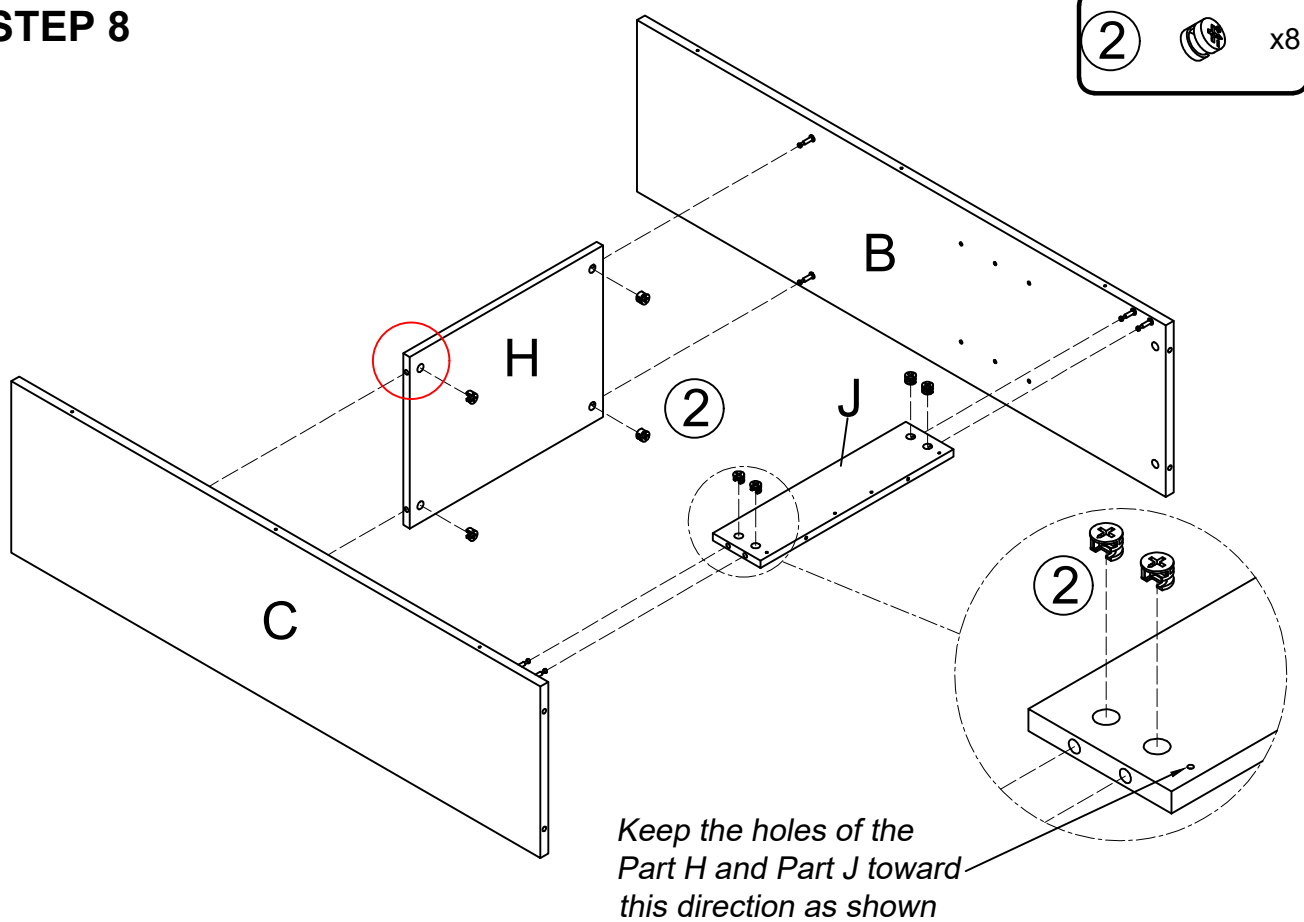

STEP 9

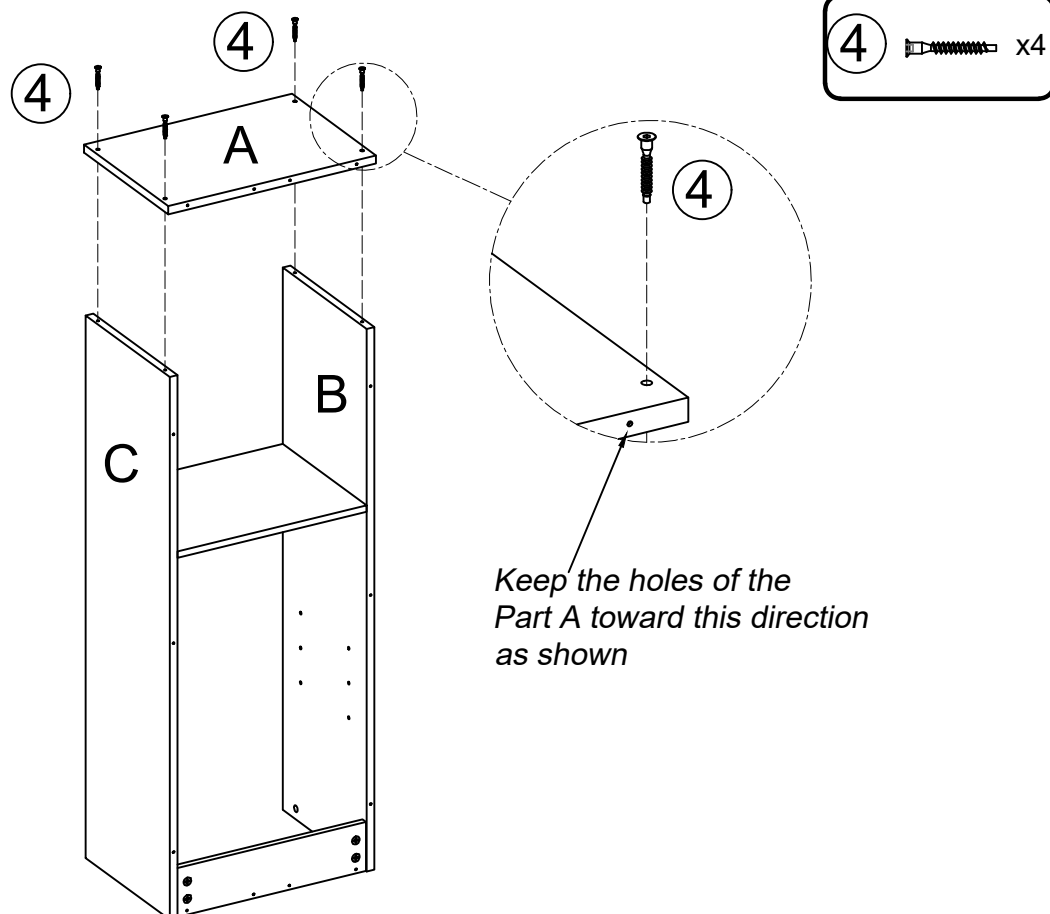


STEP 10

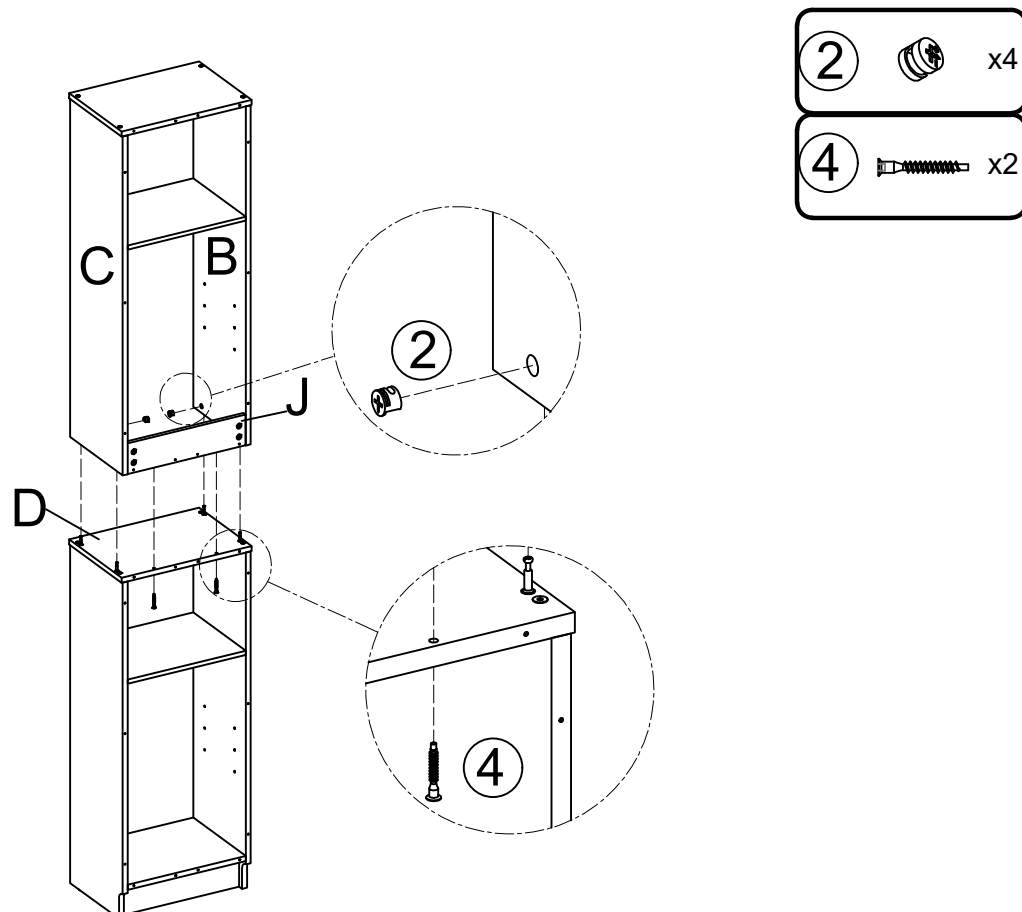


STEP 11

⑤  x28

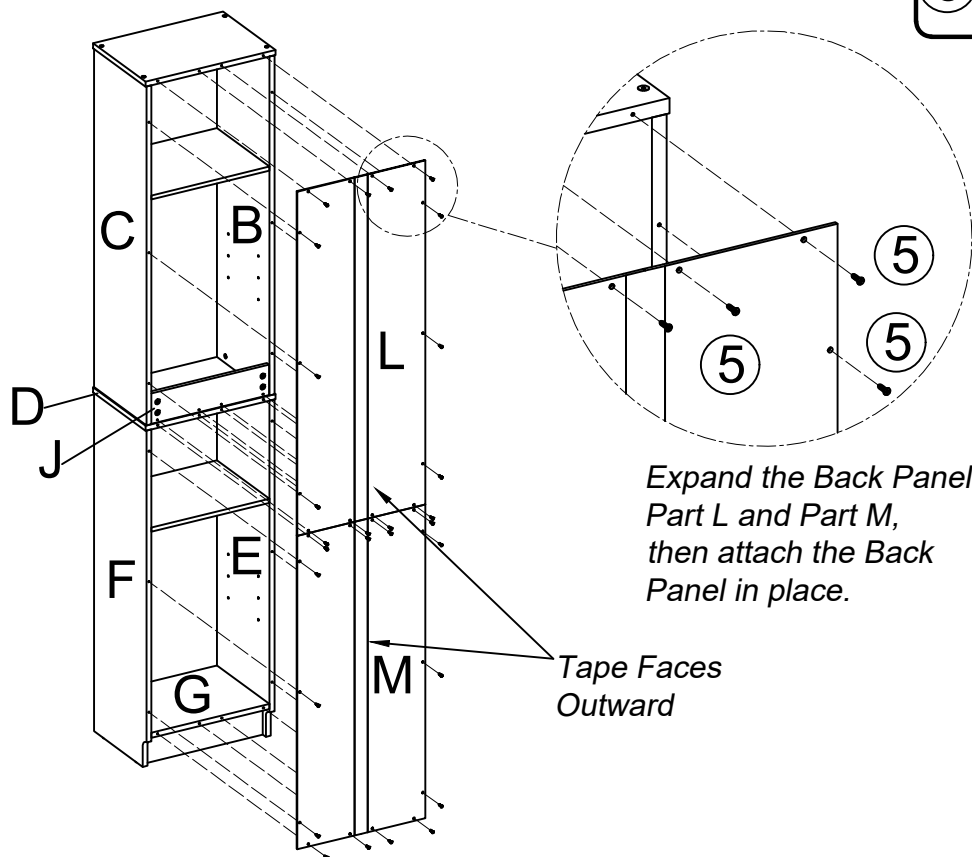


STEP 12

③  x8

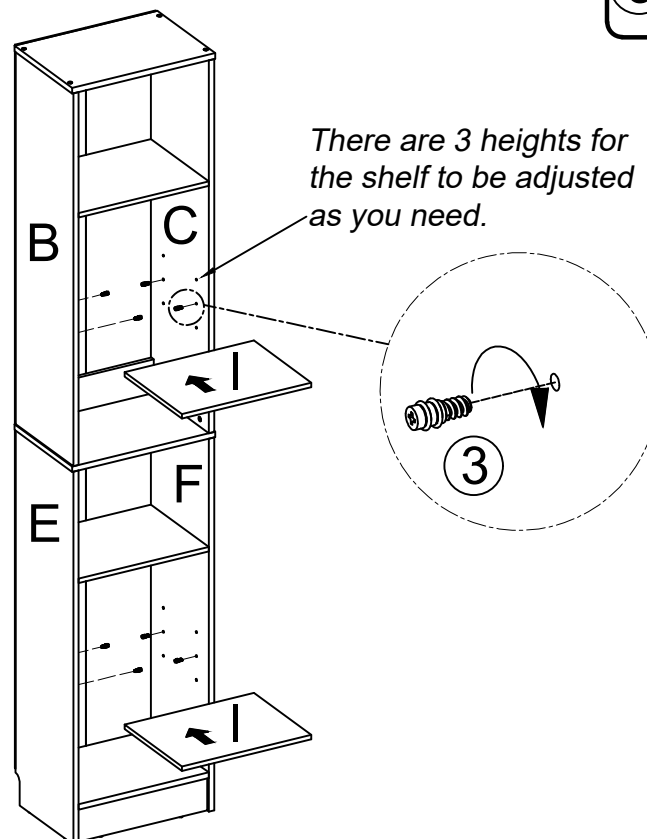

STEP 13



TIPPING RESTRAINT HARDWARE

Note: We have included two Tipping Restraint Hardware set for this Unit. When properly installed, this restraint can provide protection against the unexpected tipping of the Unit due to small tremors, bumps or climbing. We strongly recommend mounting this hardware to a wall stud and your Unit.

Note: You must install the Tipping Restraint Hardware with the unit in use to prevent any accidents or damage to the unit.

