


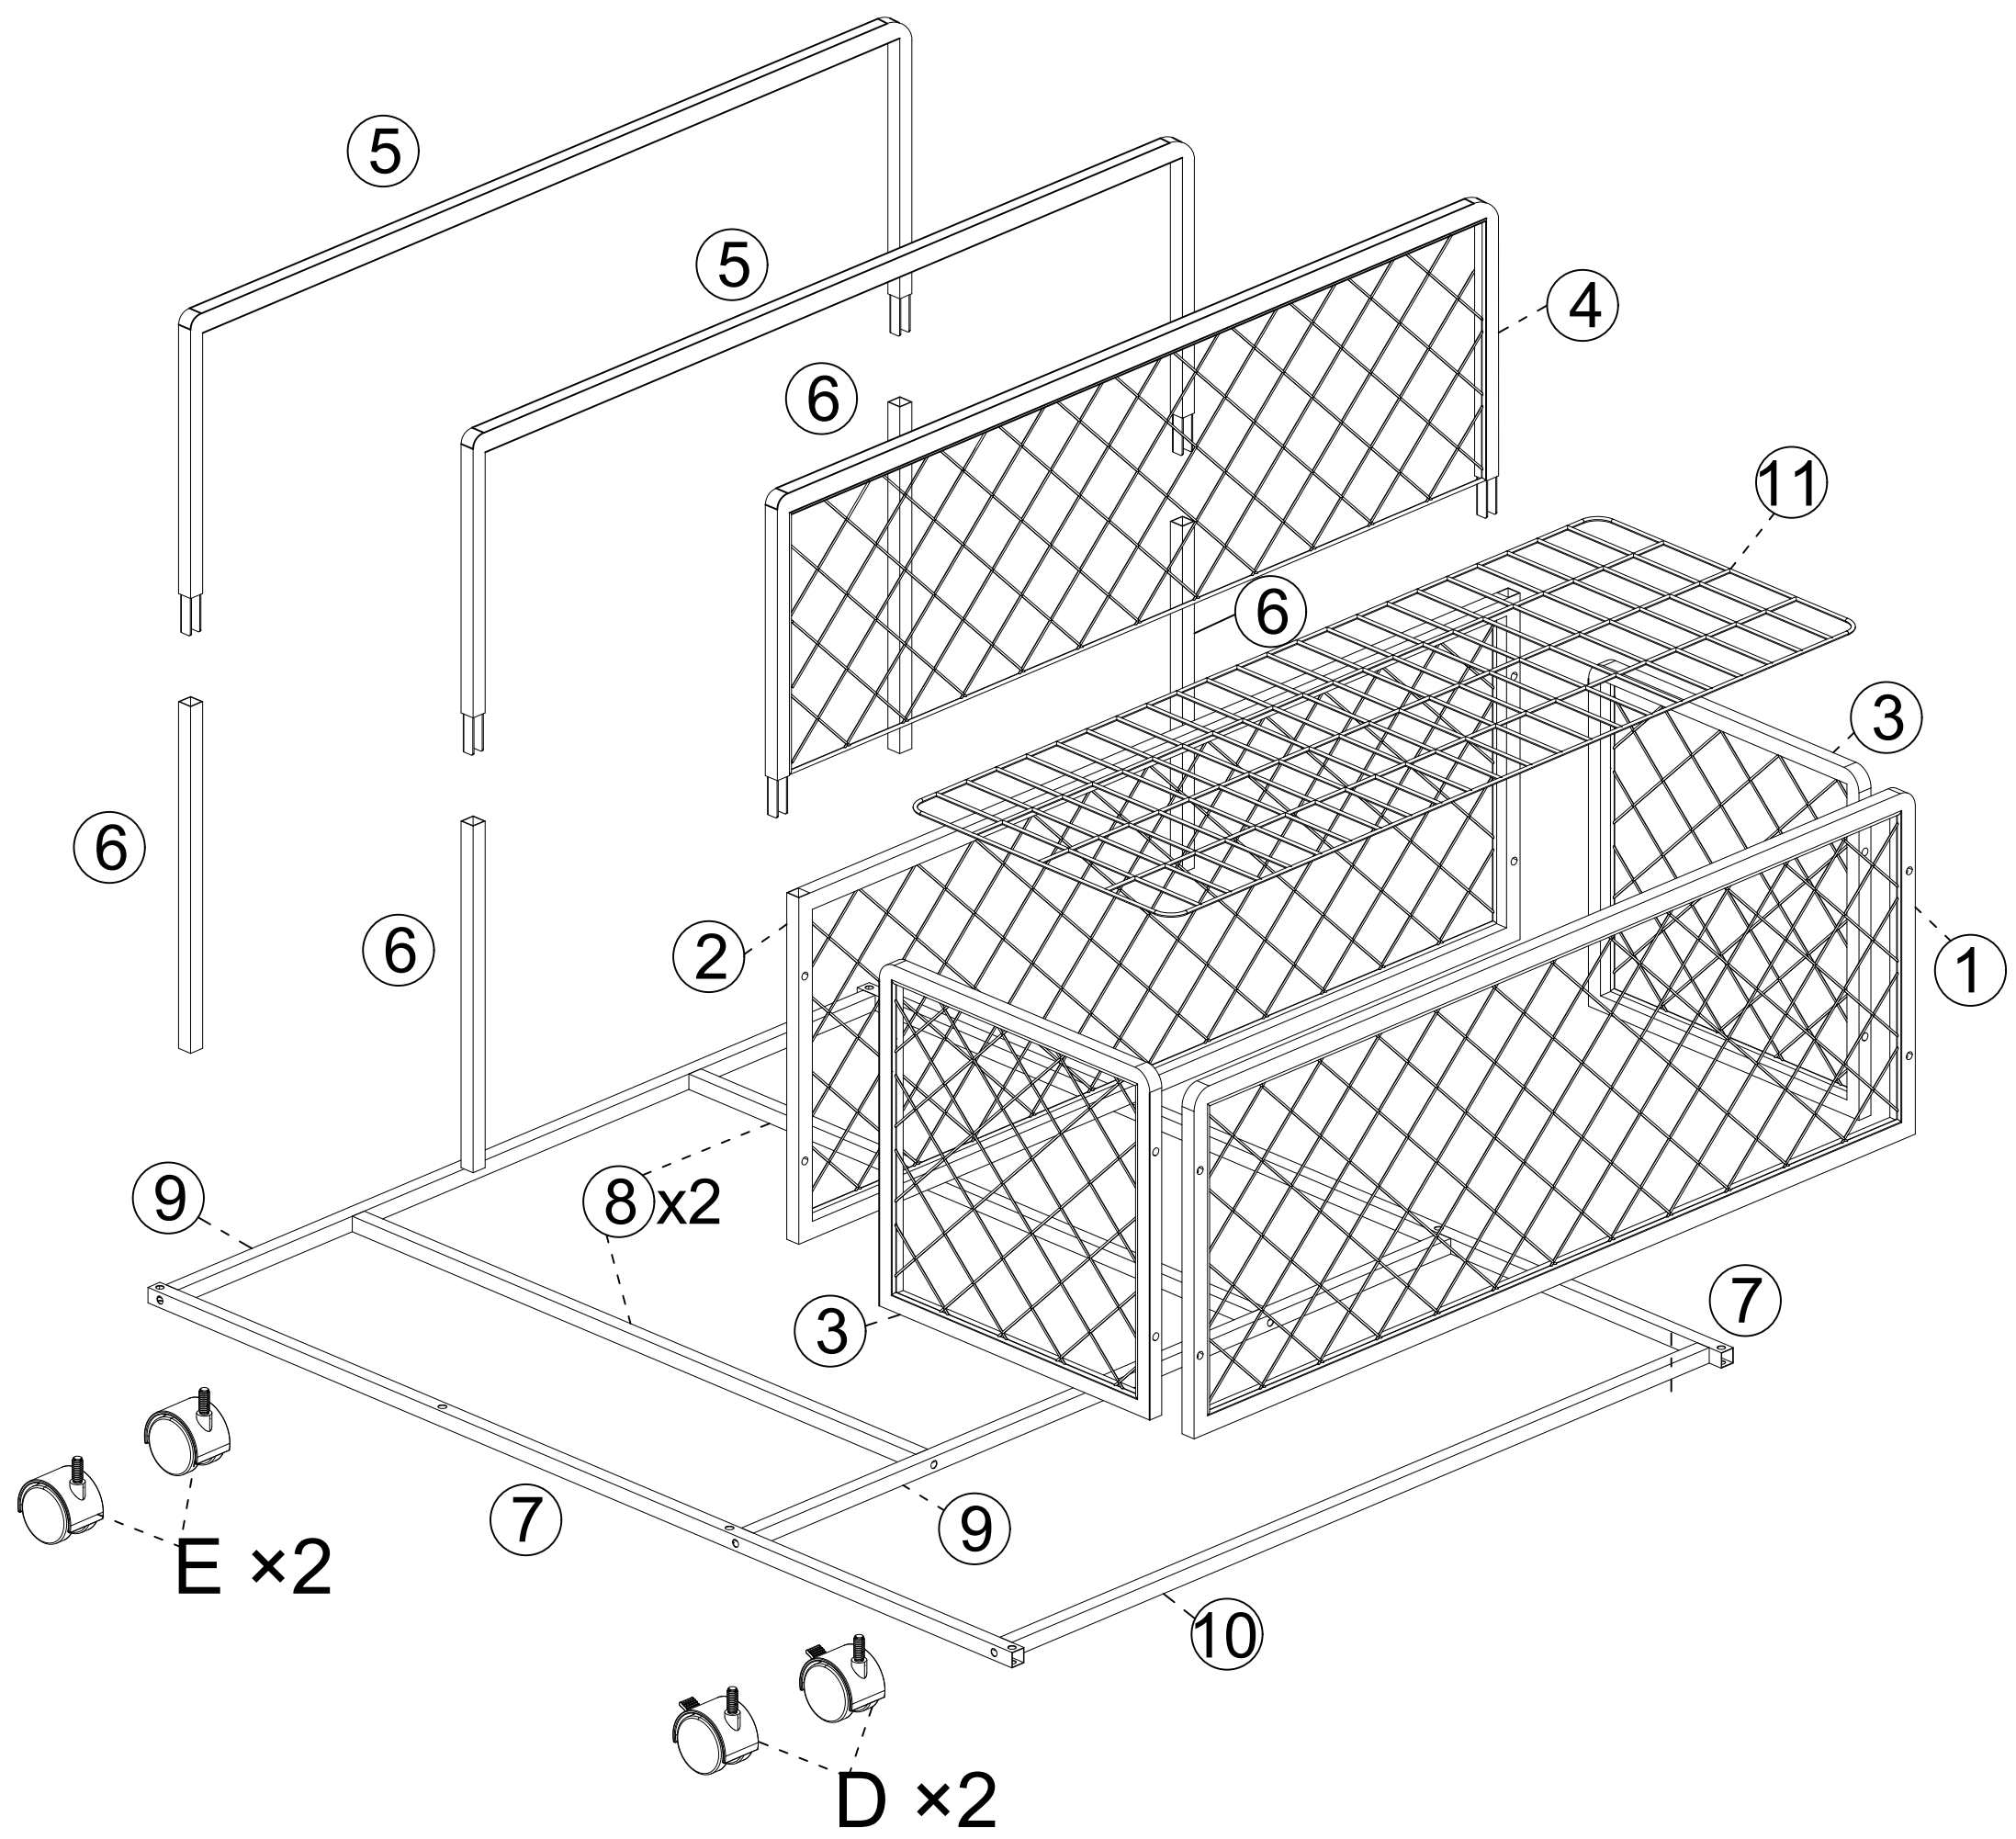


# Installation Manual

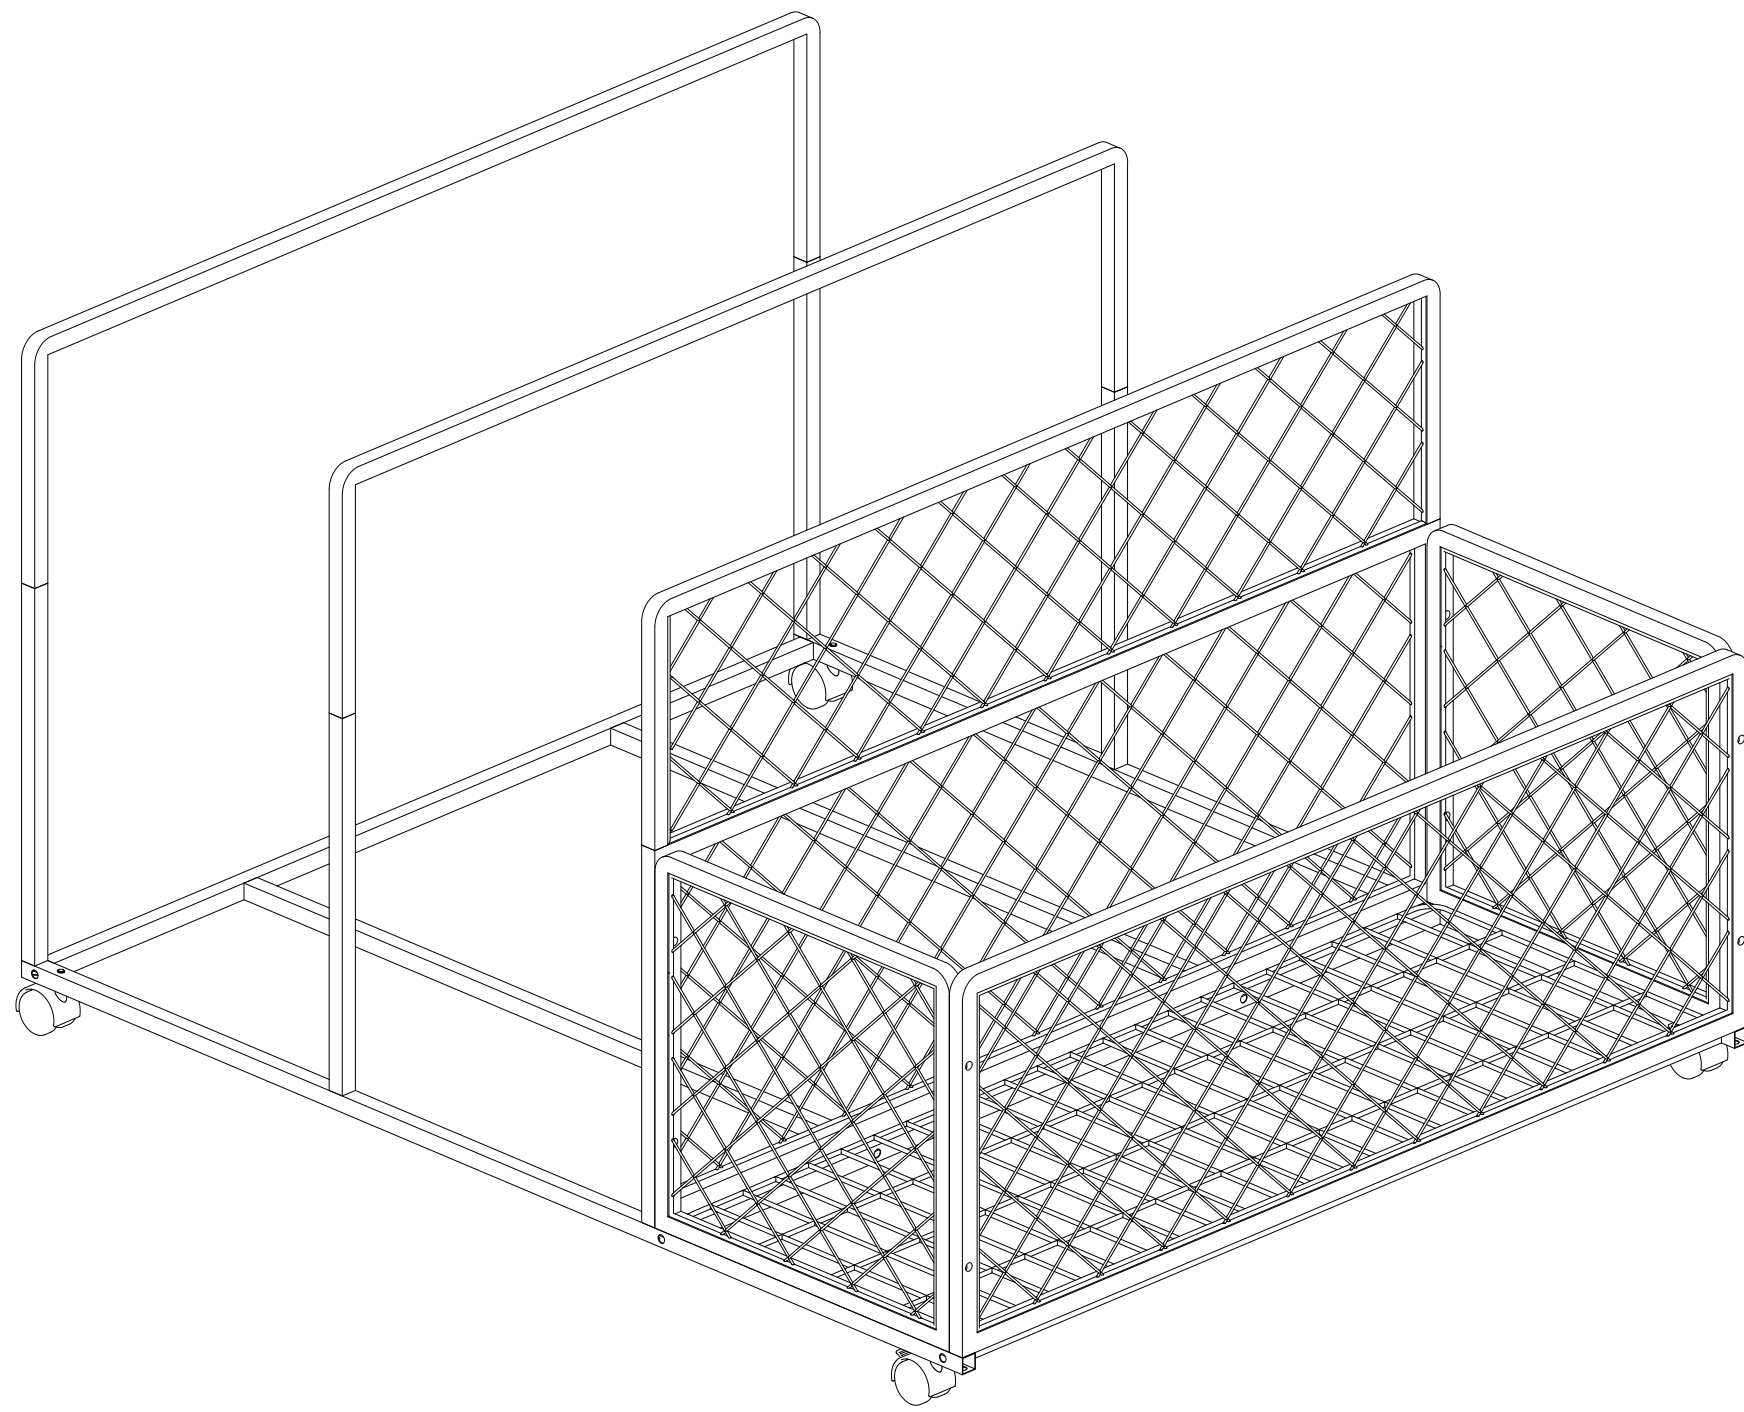


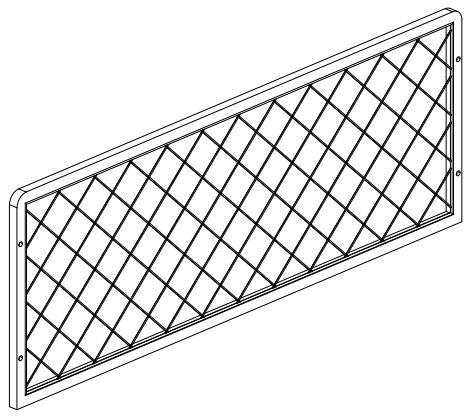


① × 1pc

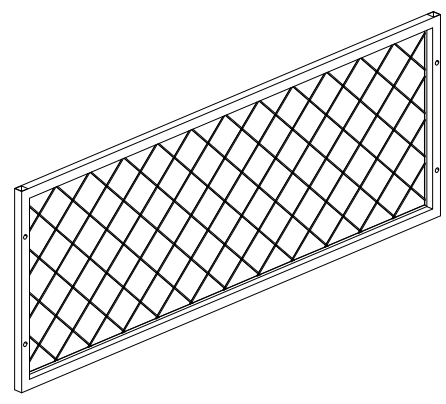


② × 1pc

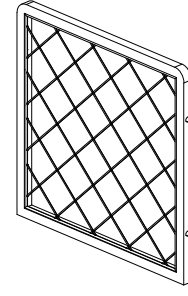

③ × 2pcs

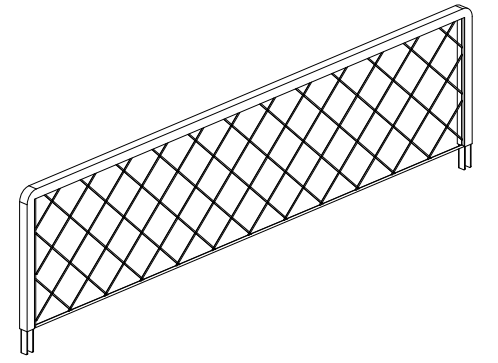


④ × 1pc

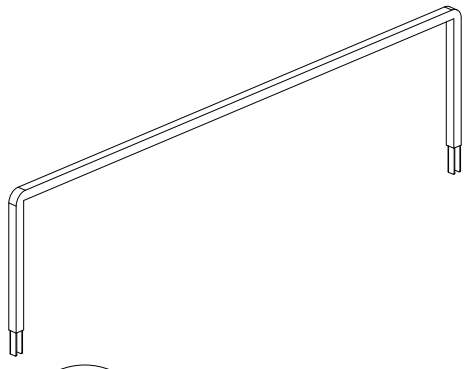


⑤ × 2pcs




⑥ × 4pcs

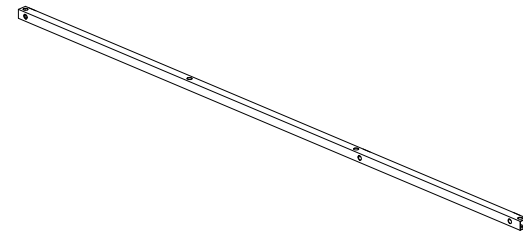


⑦ × 2pcs

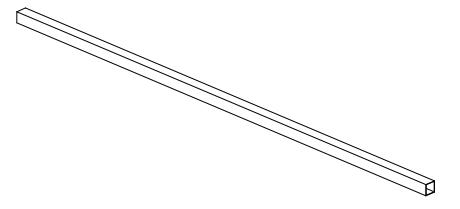


⑧ × 2pcs

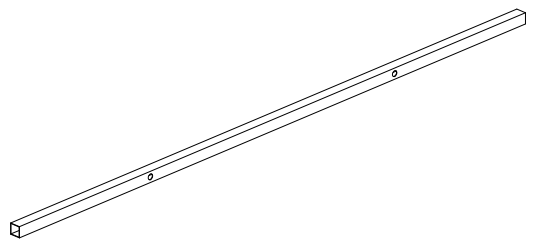


⑨ × 2pcs

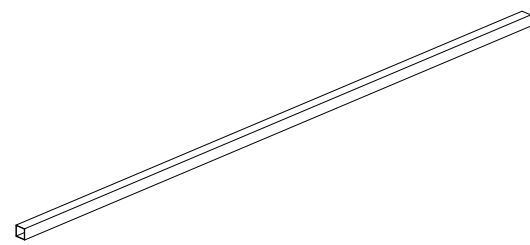

⑩ × 1pc

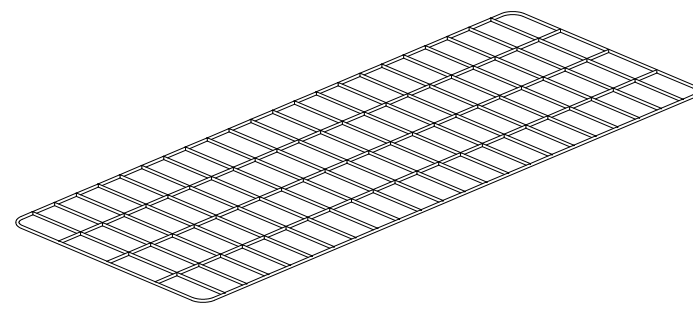


⑪ × 1pc




M6×35mm

Ⓐ × 18pcs + 1pc




M6×25mm

Ⓑ × 8pcs + 1pc




M6×12mm


Ⓒ × 12pcs + 1pc

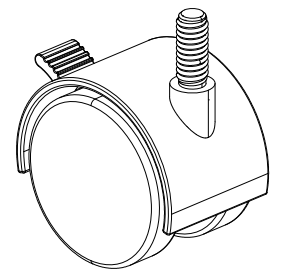


Ⓓ × 2pcs

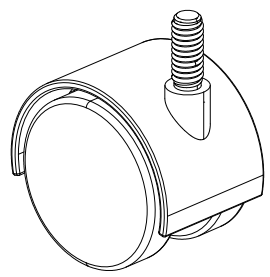

Ⓔ × 2pcs

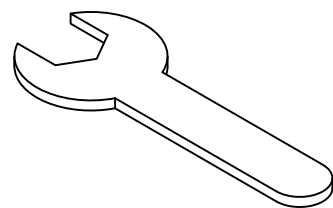




Ⓕ × 1pc

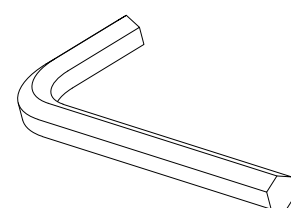

4mm  
Ⓖ × 1pc


1

Note: For easy setup intention, do not tighten screws during the installation process


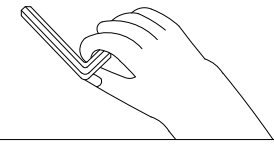
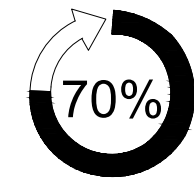


M6×35mm

A ×4pcs

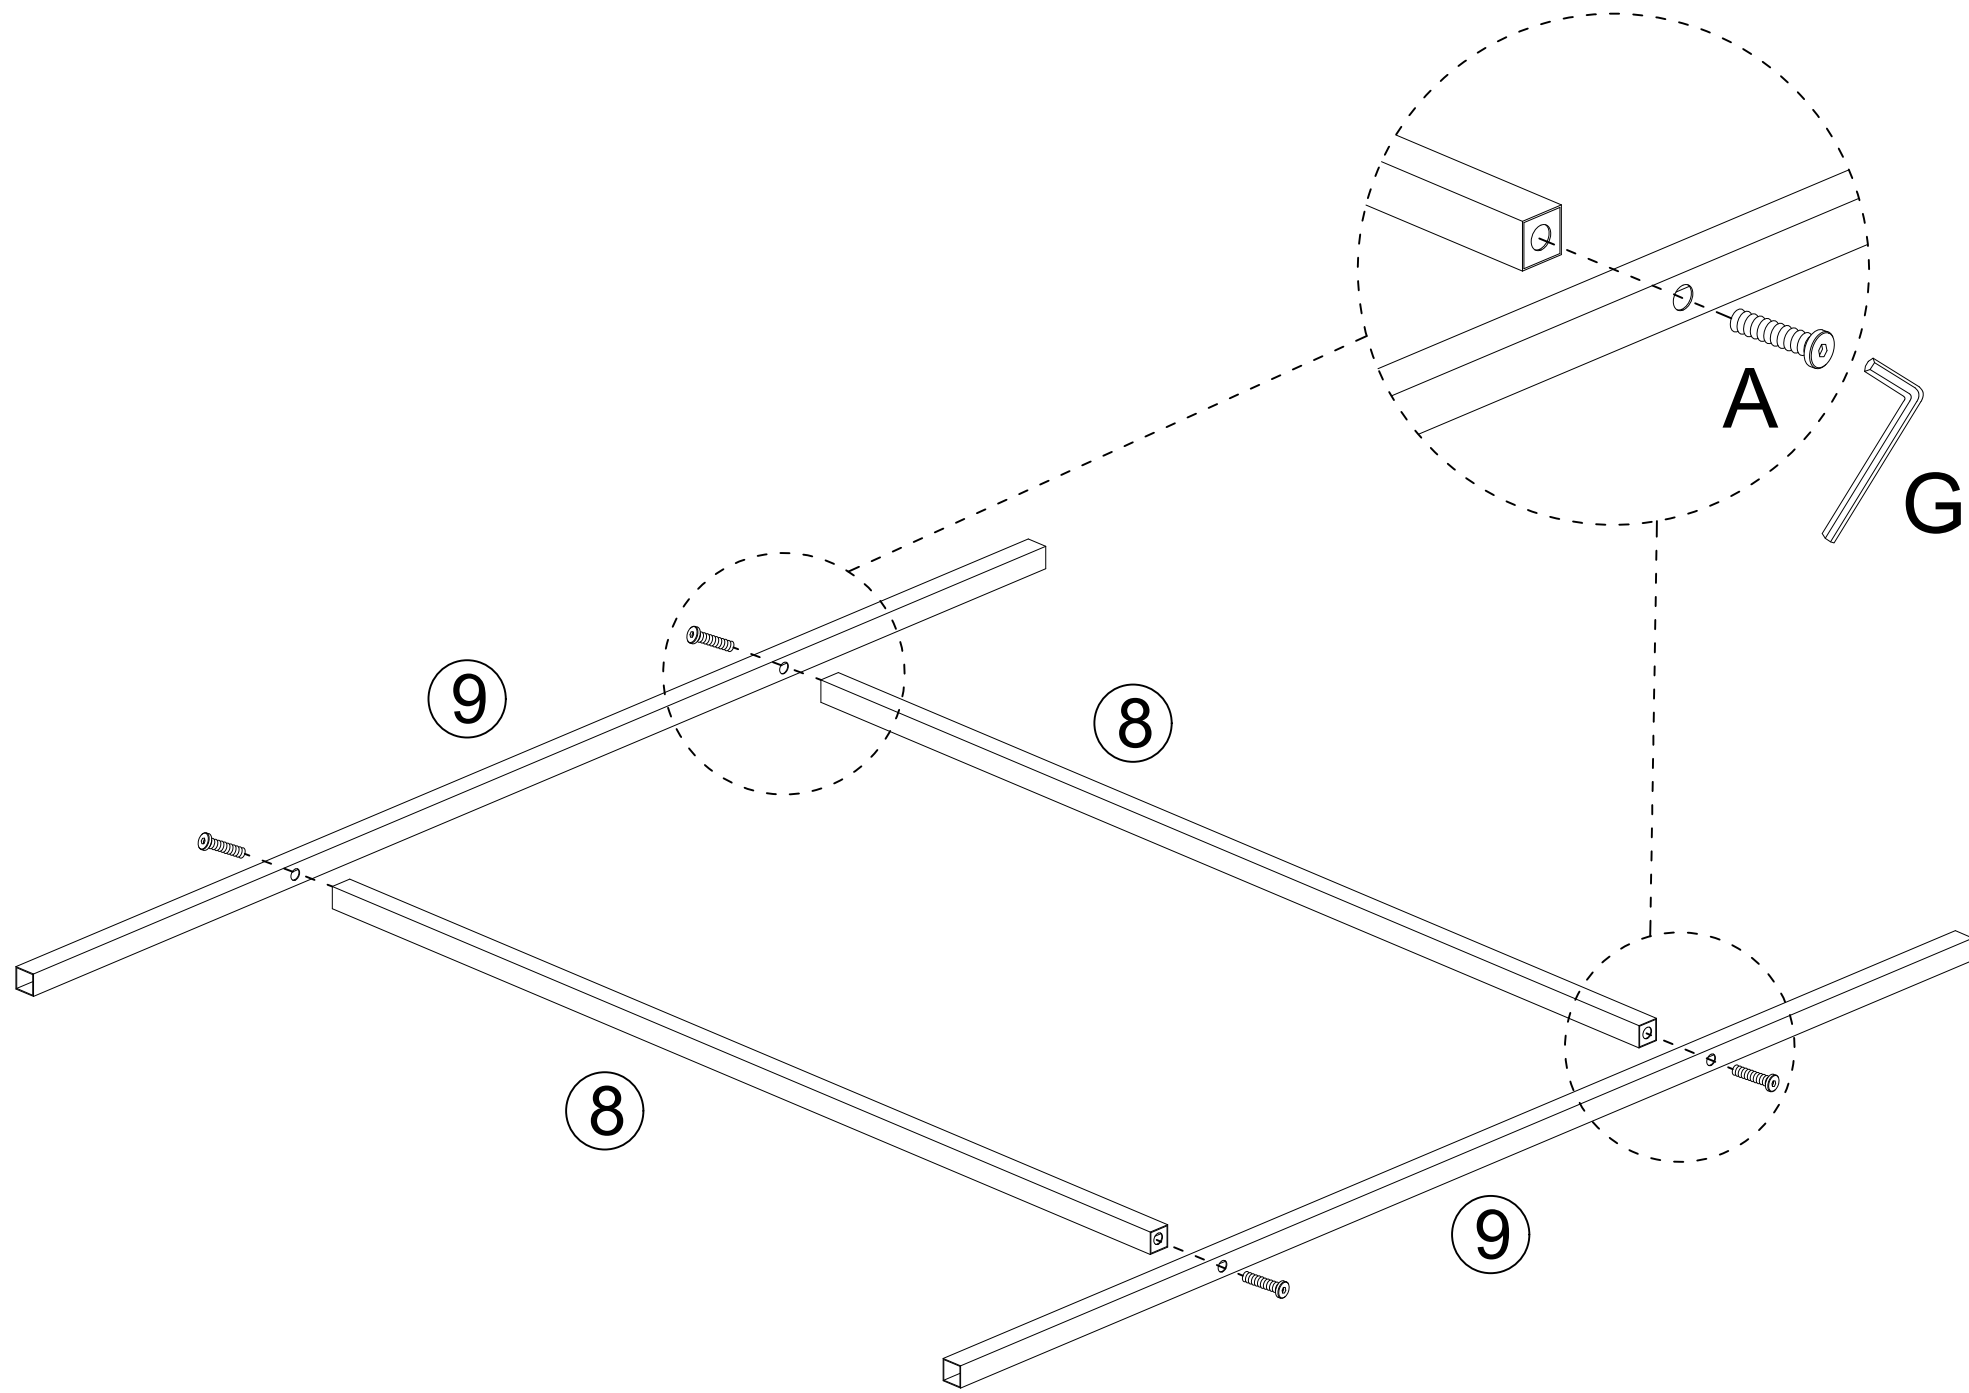


2


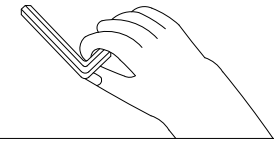
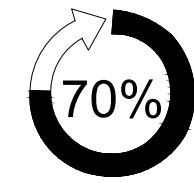


M6×35mm

A ×6pcs

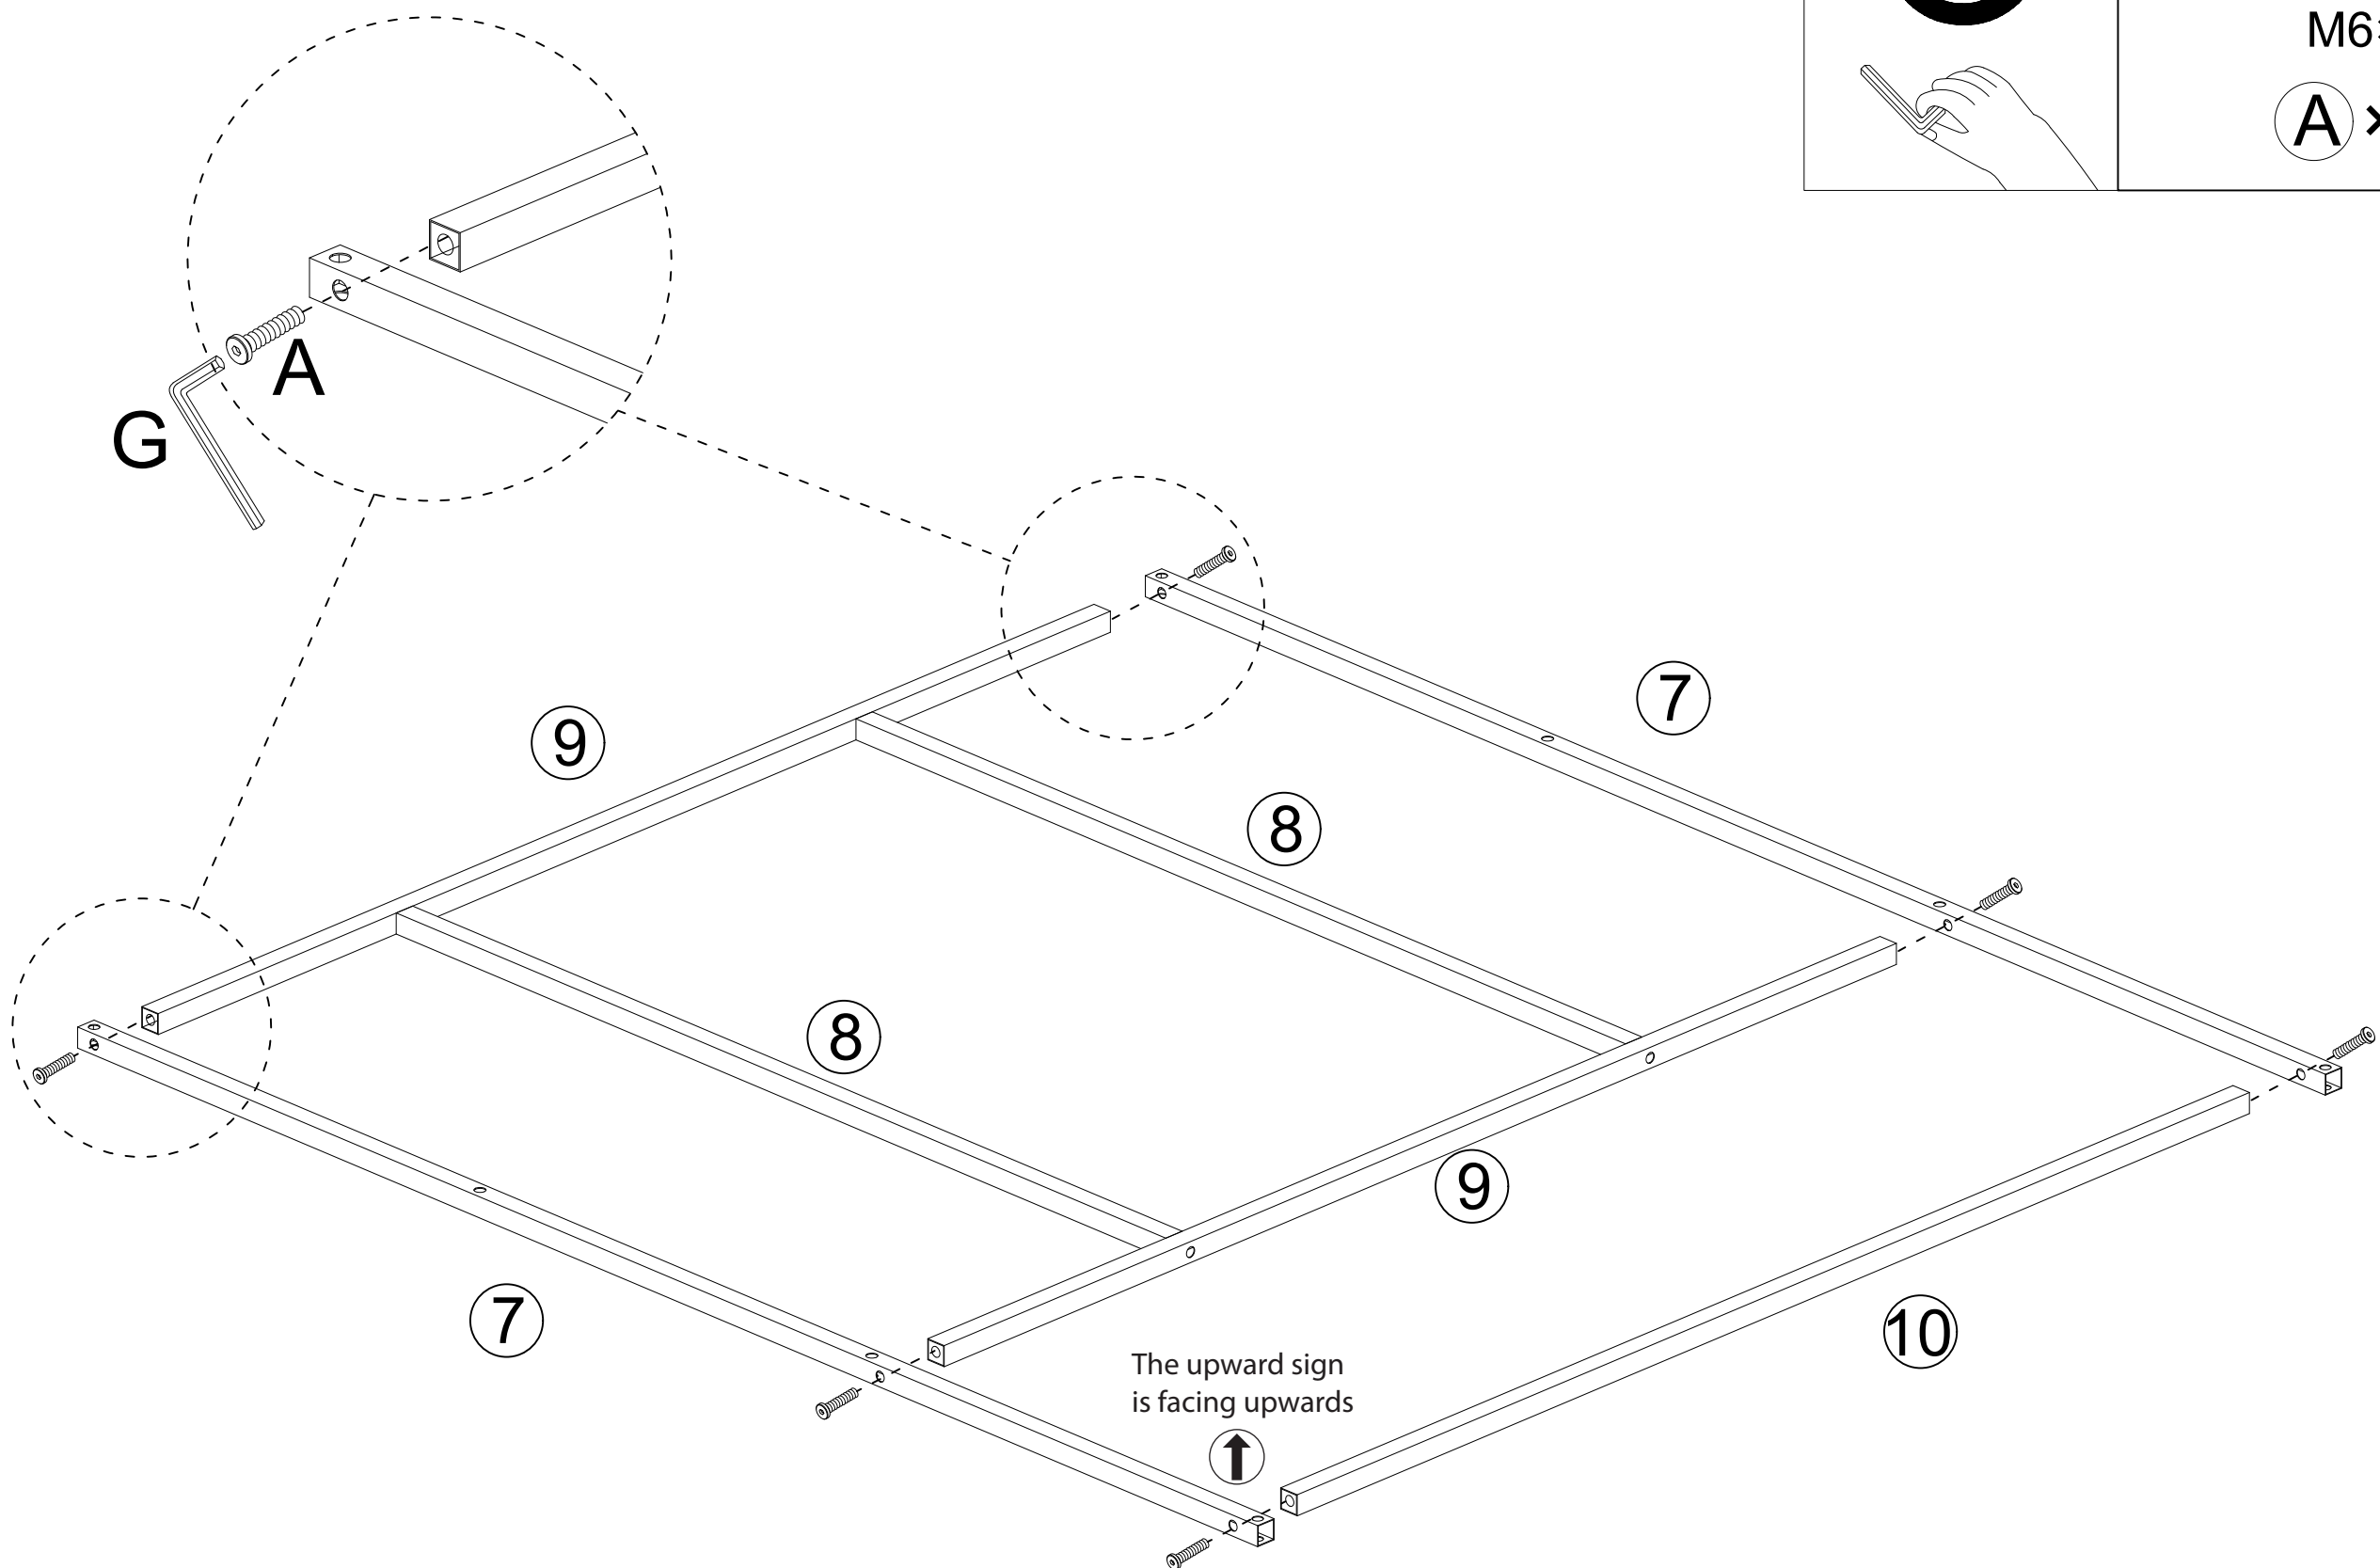

3

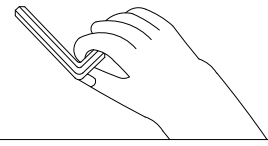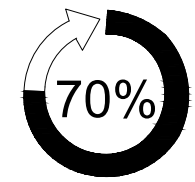

M6×12mm


C ×8pcs

STEP1




STEP2

G

C

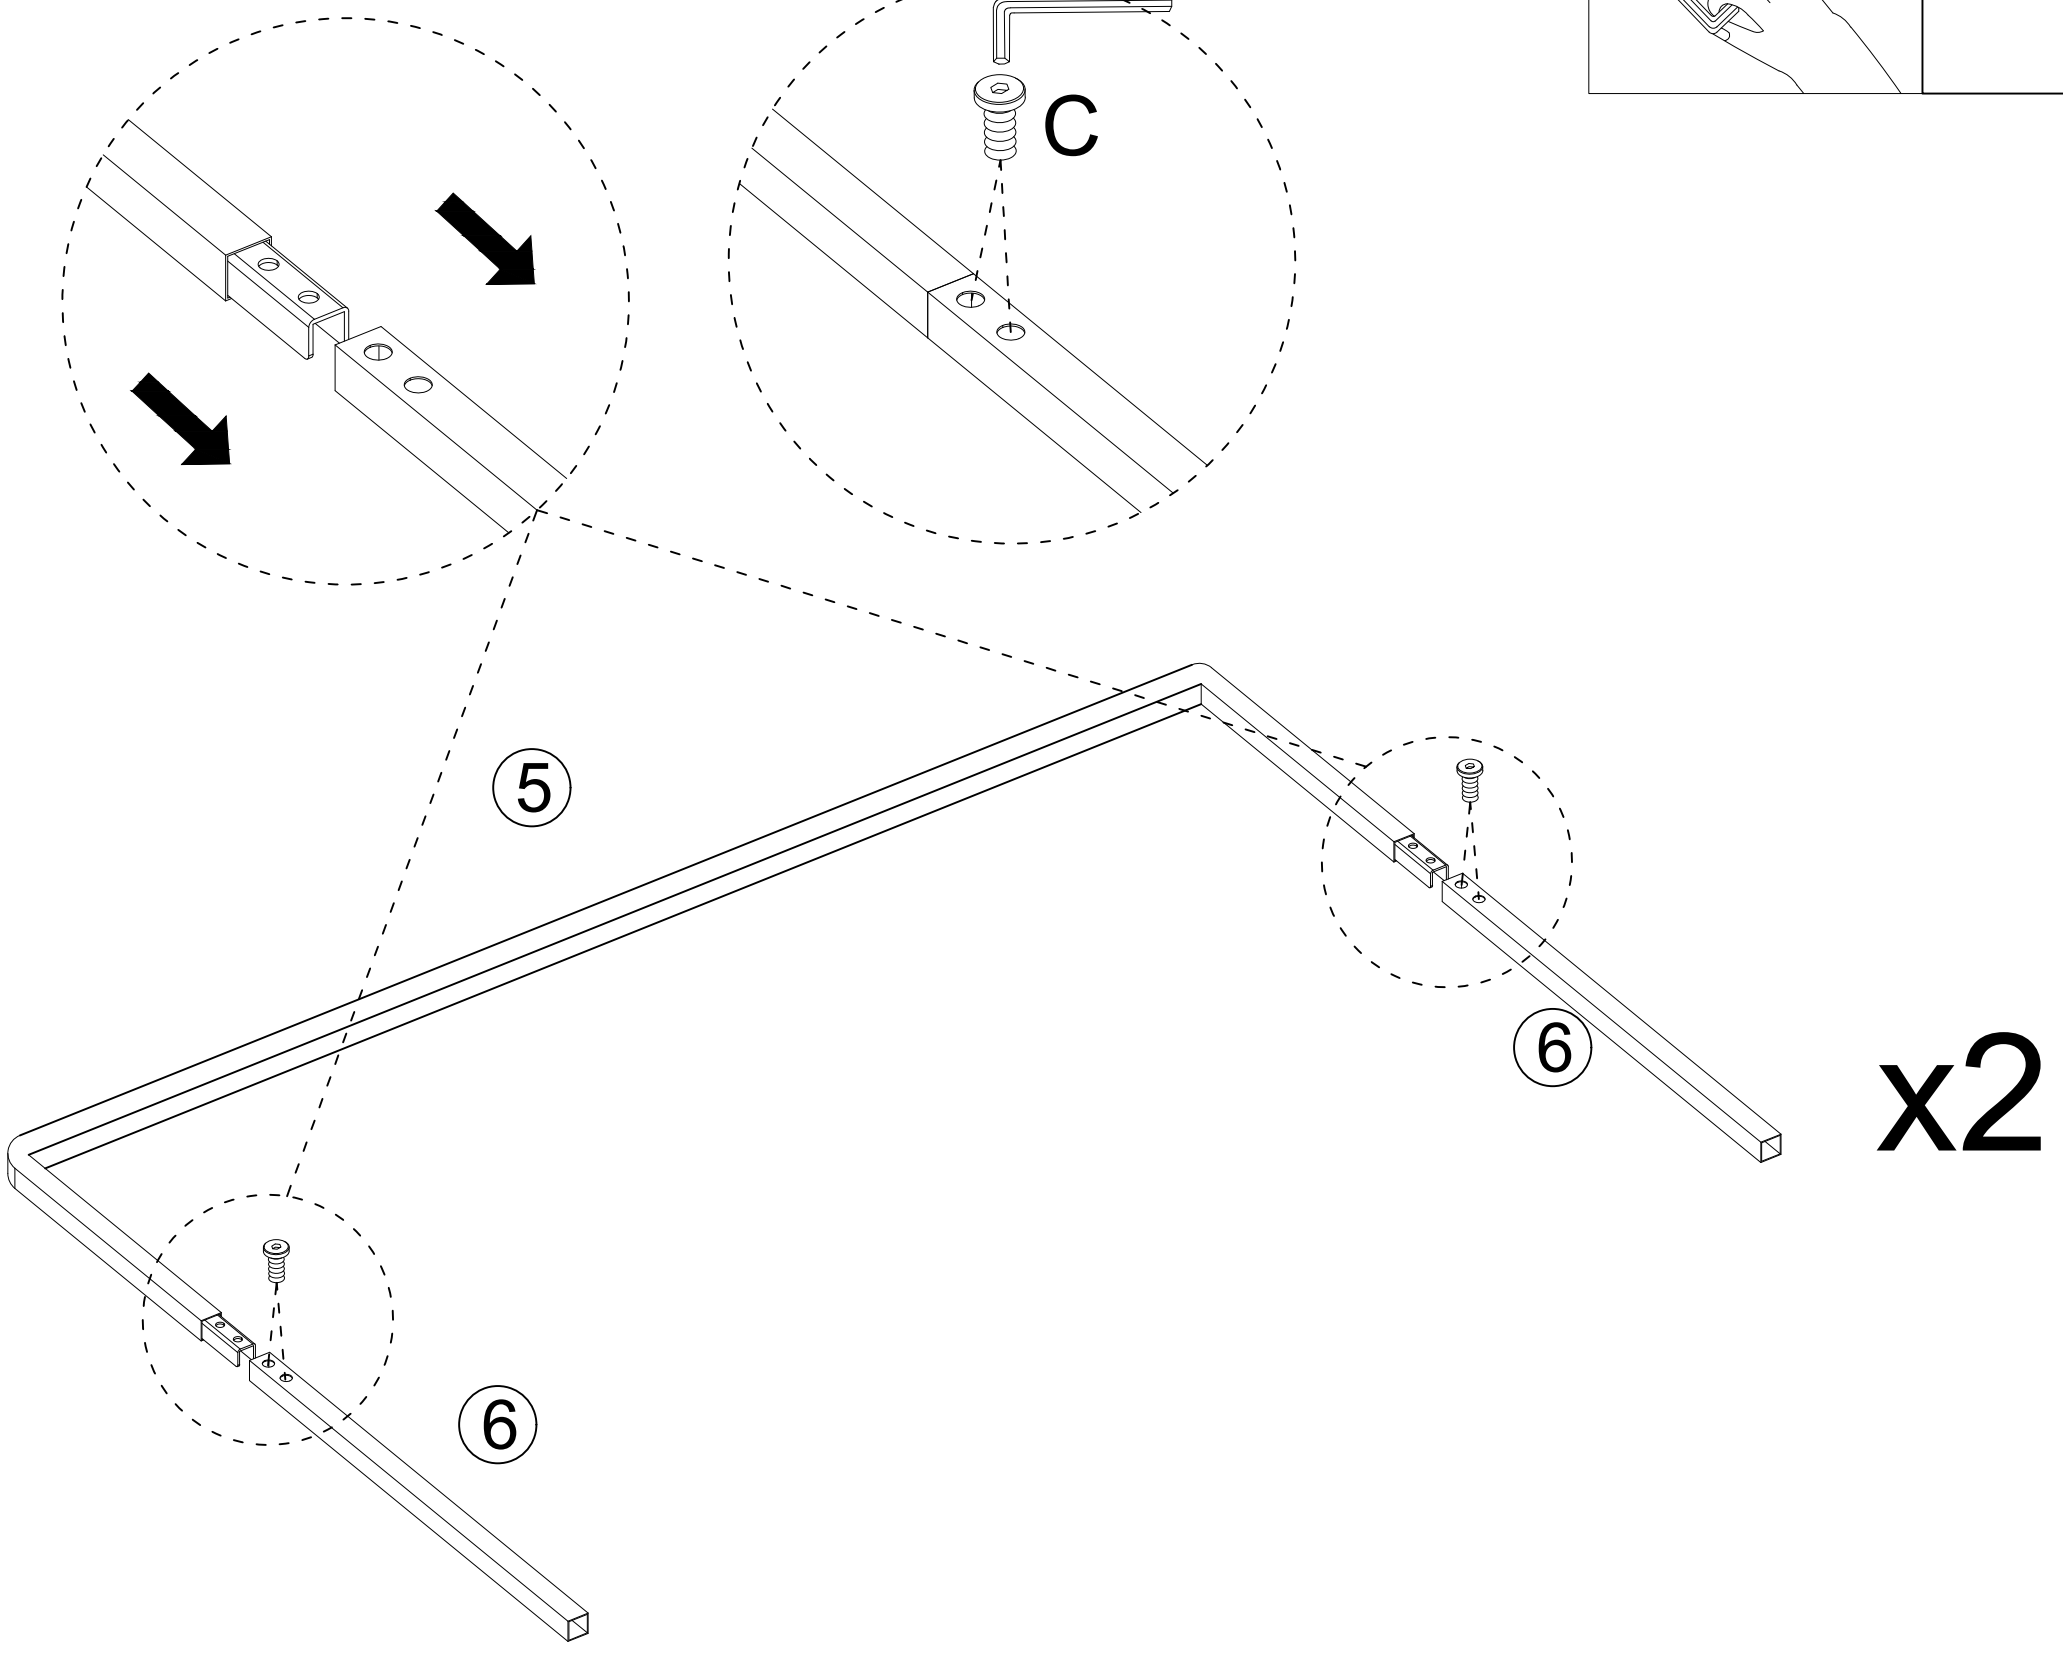

4

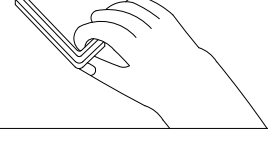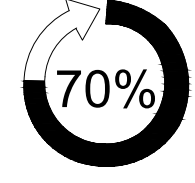

M6×12mm


C ×4pcs

STEP1




STEP2

G

C

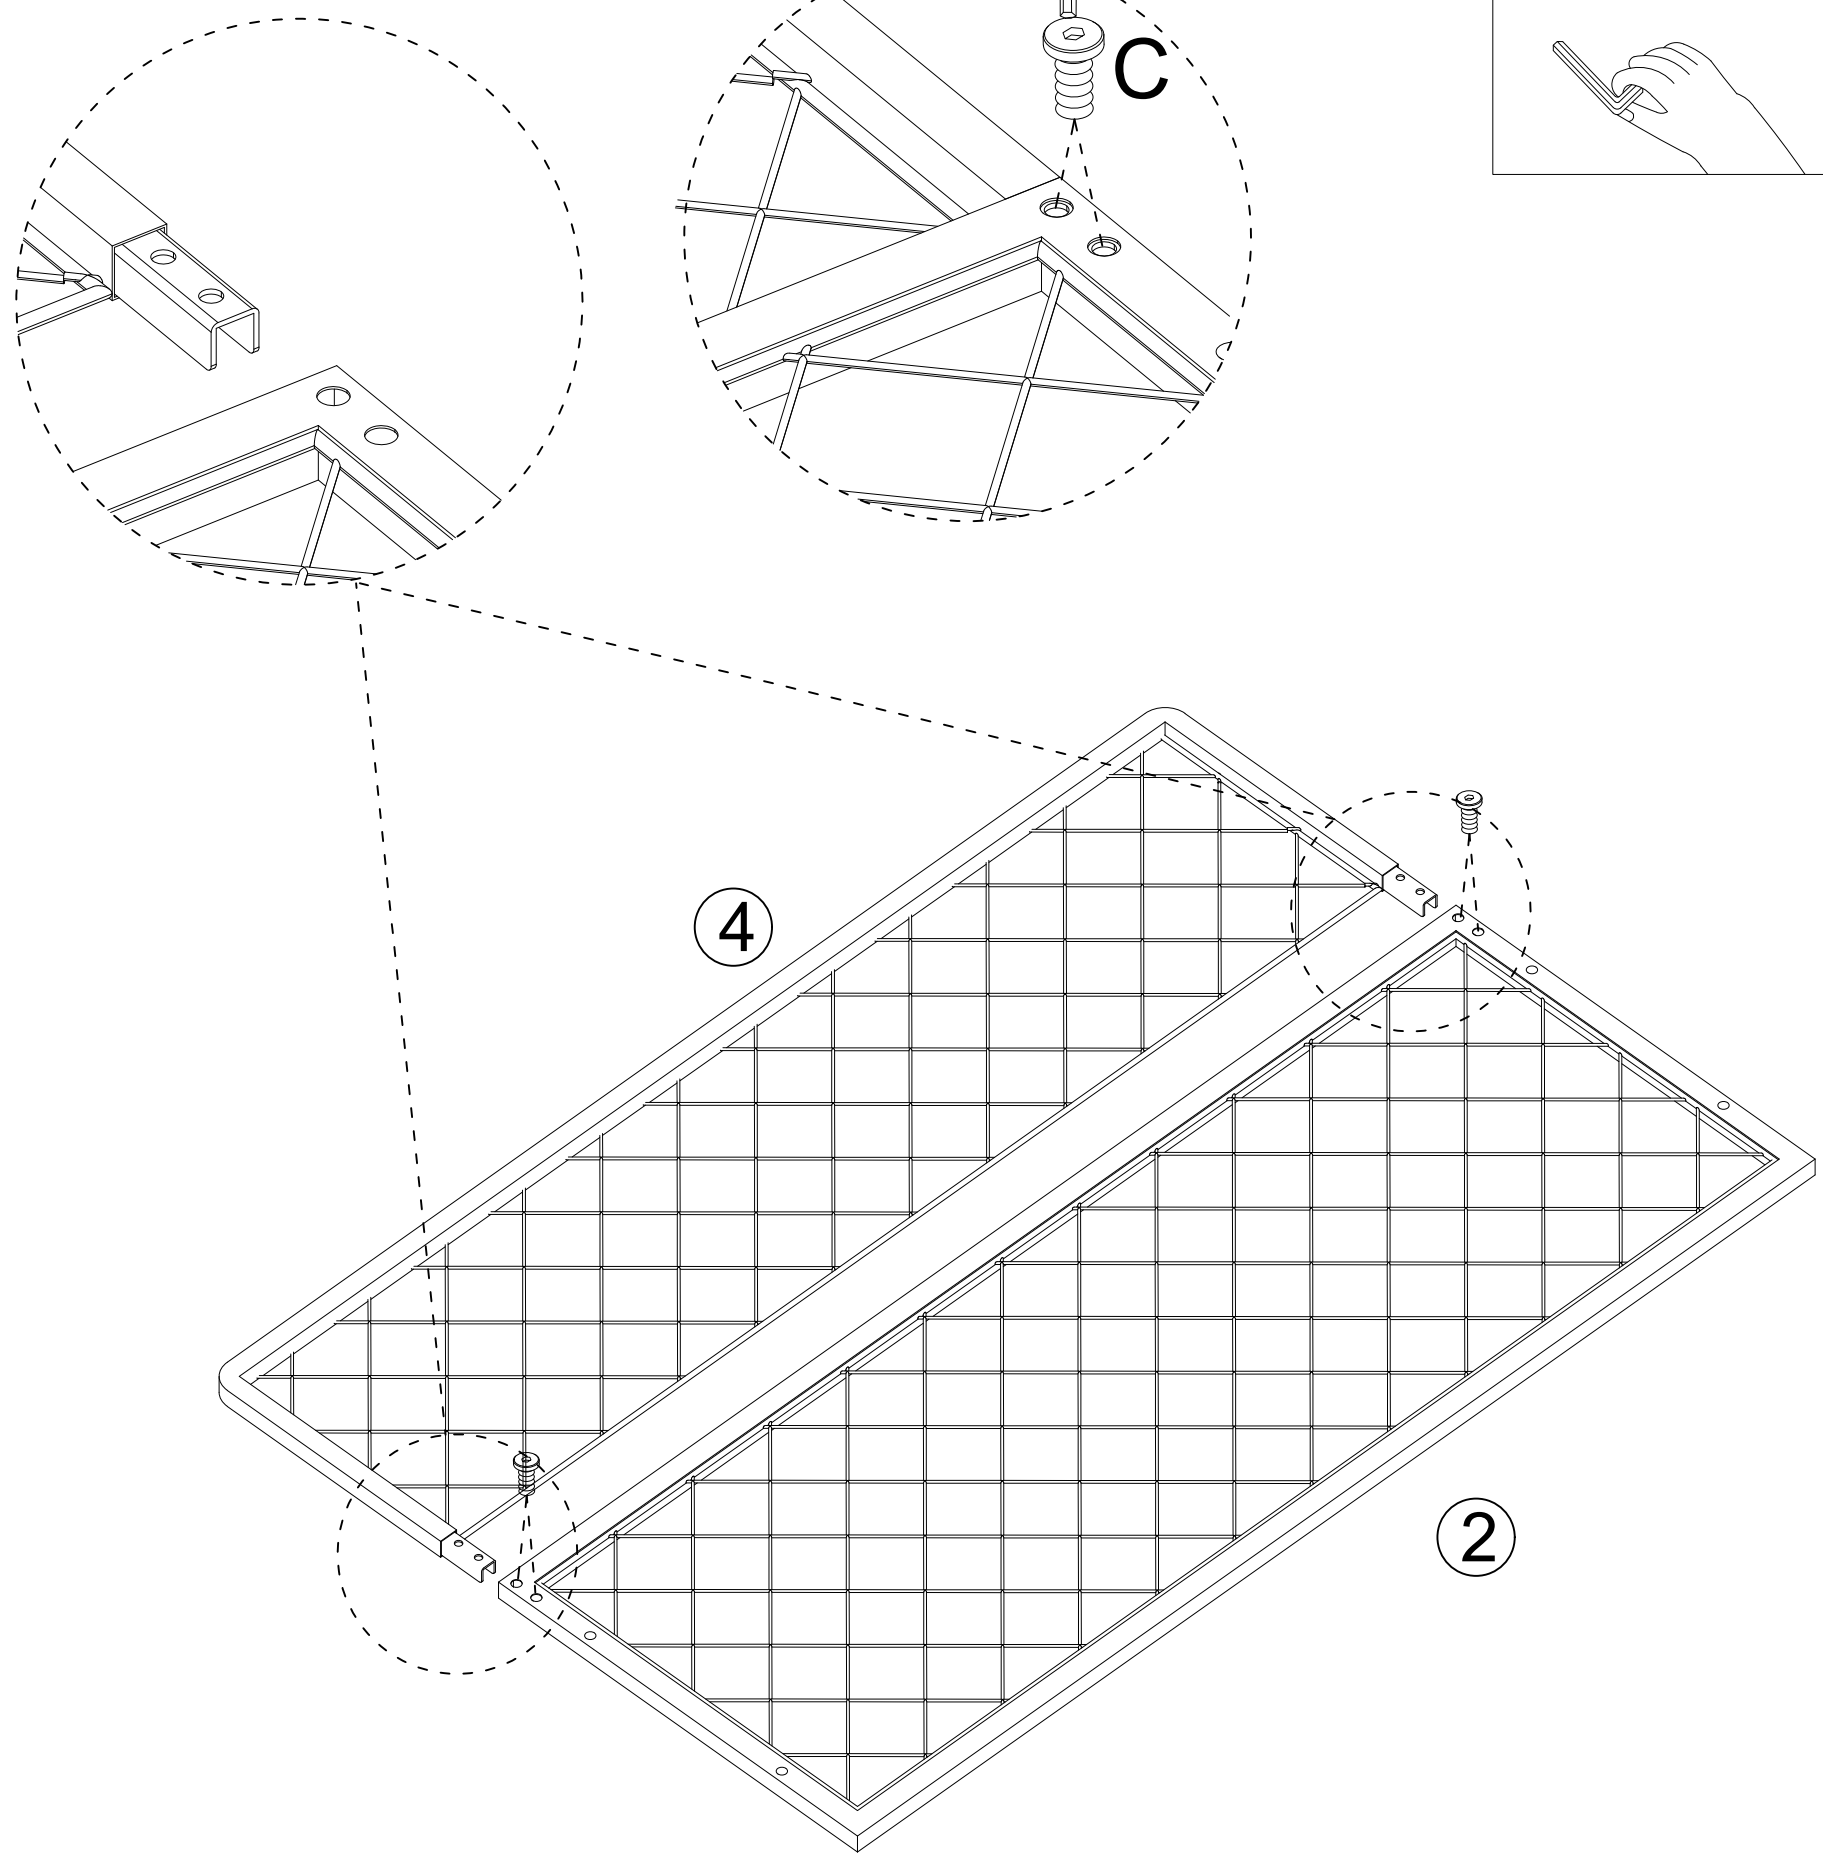


5


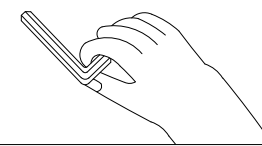
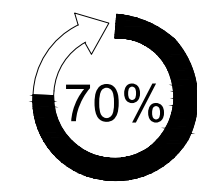


M6×25mm

B × 8 pcs

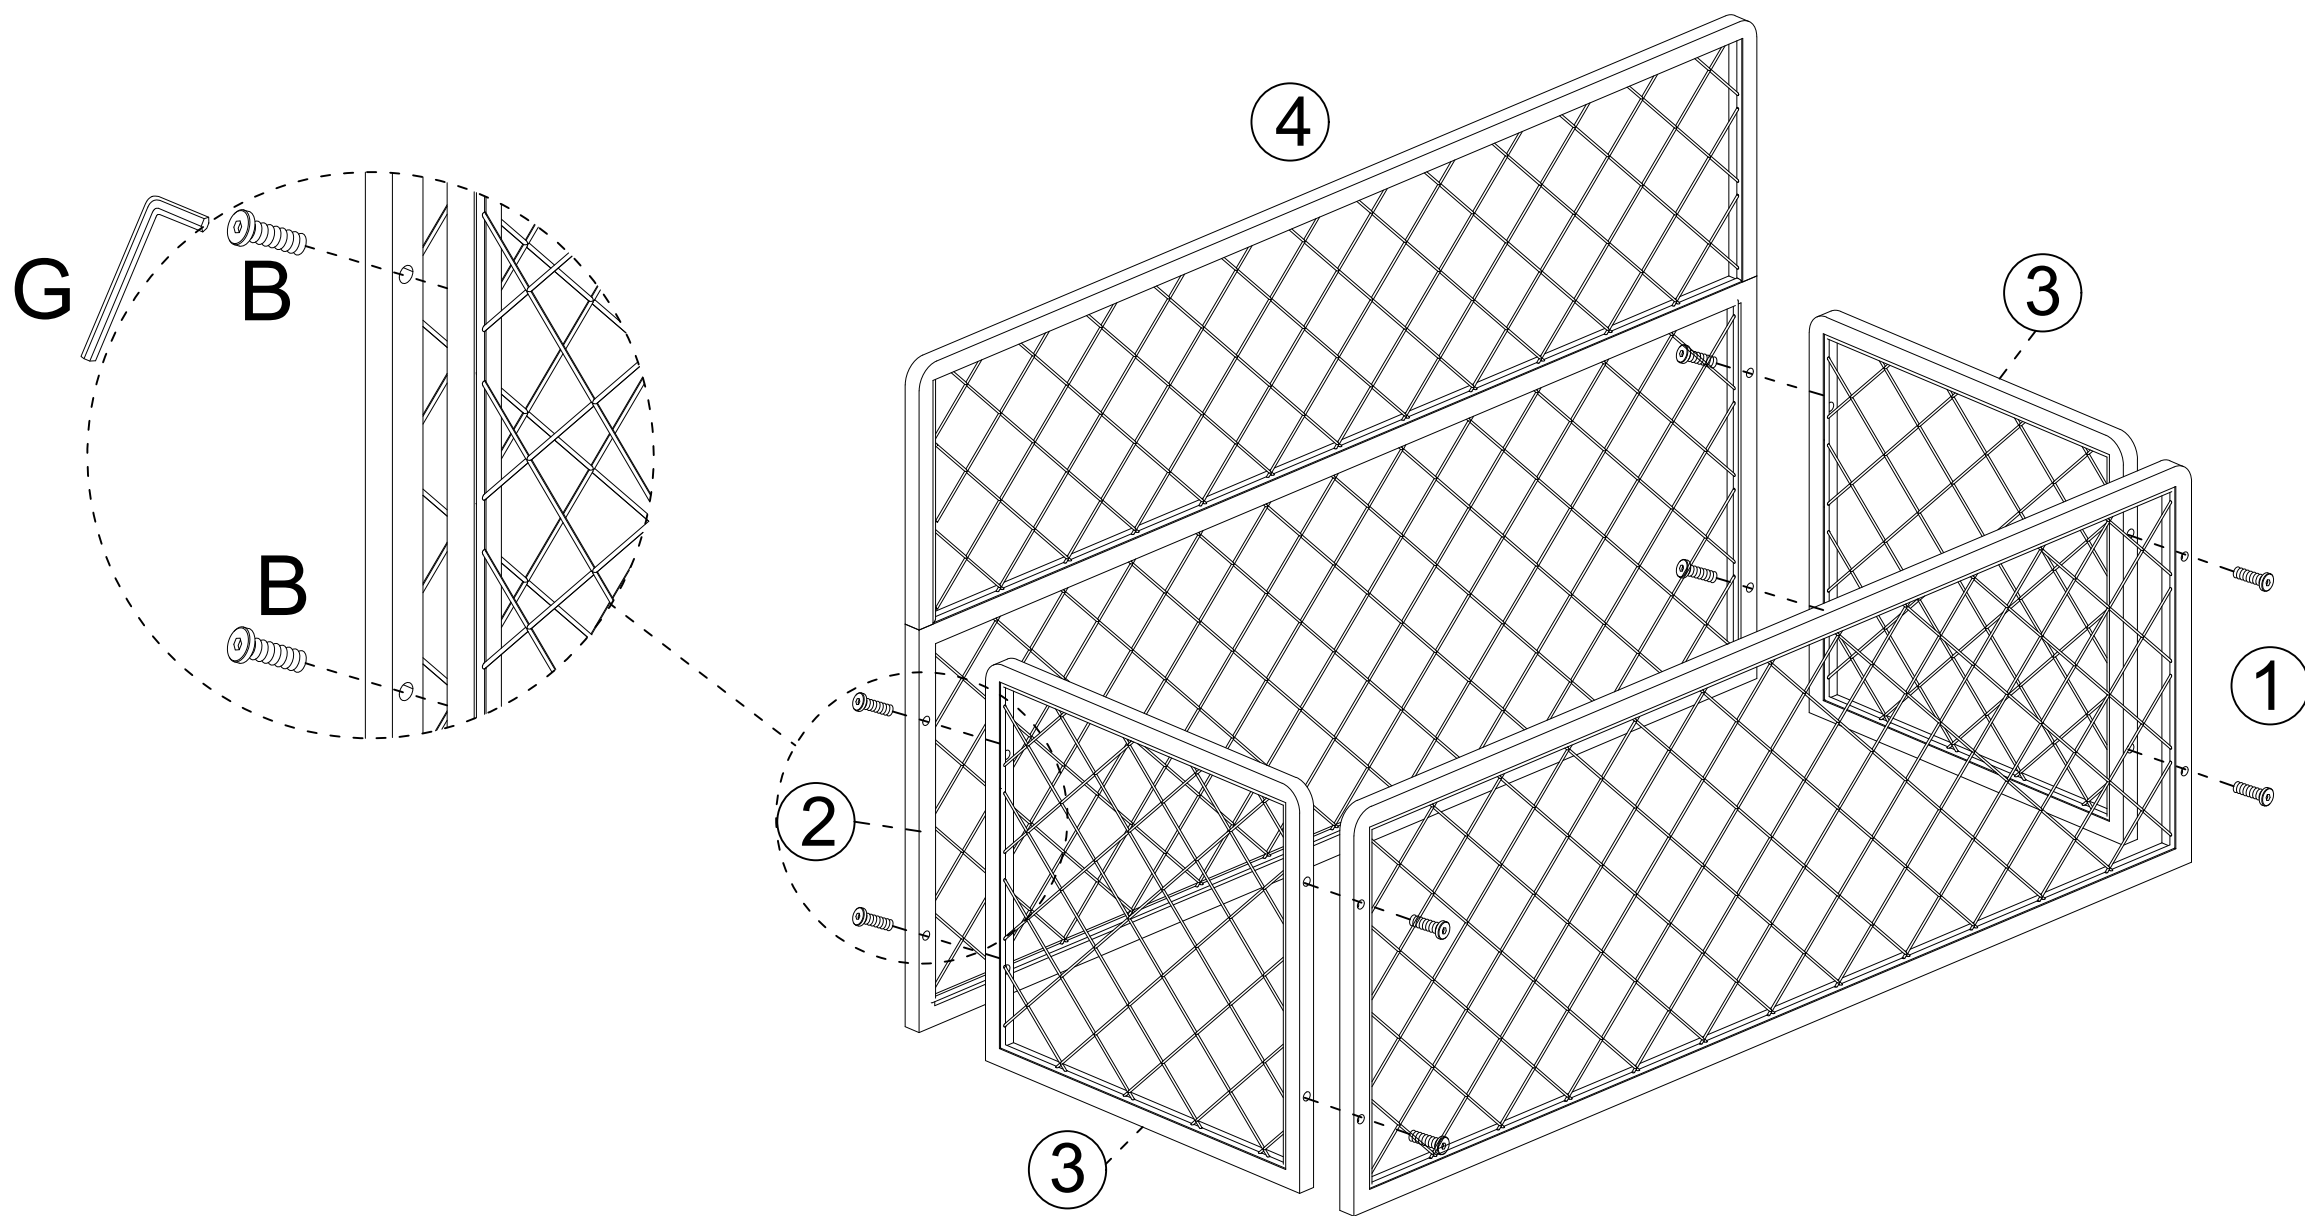


6


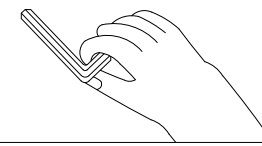
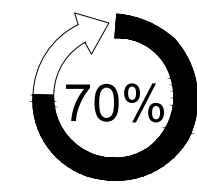


M6×35mm


A × 8 pcs

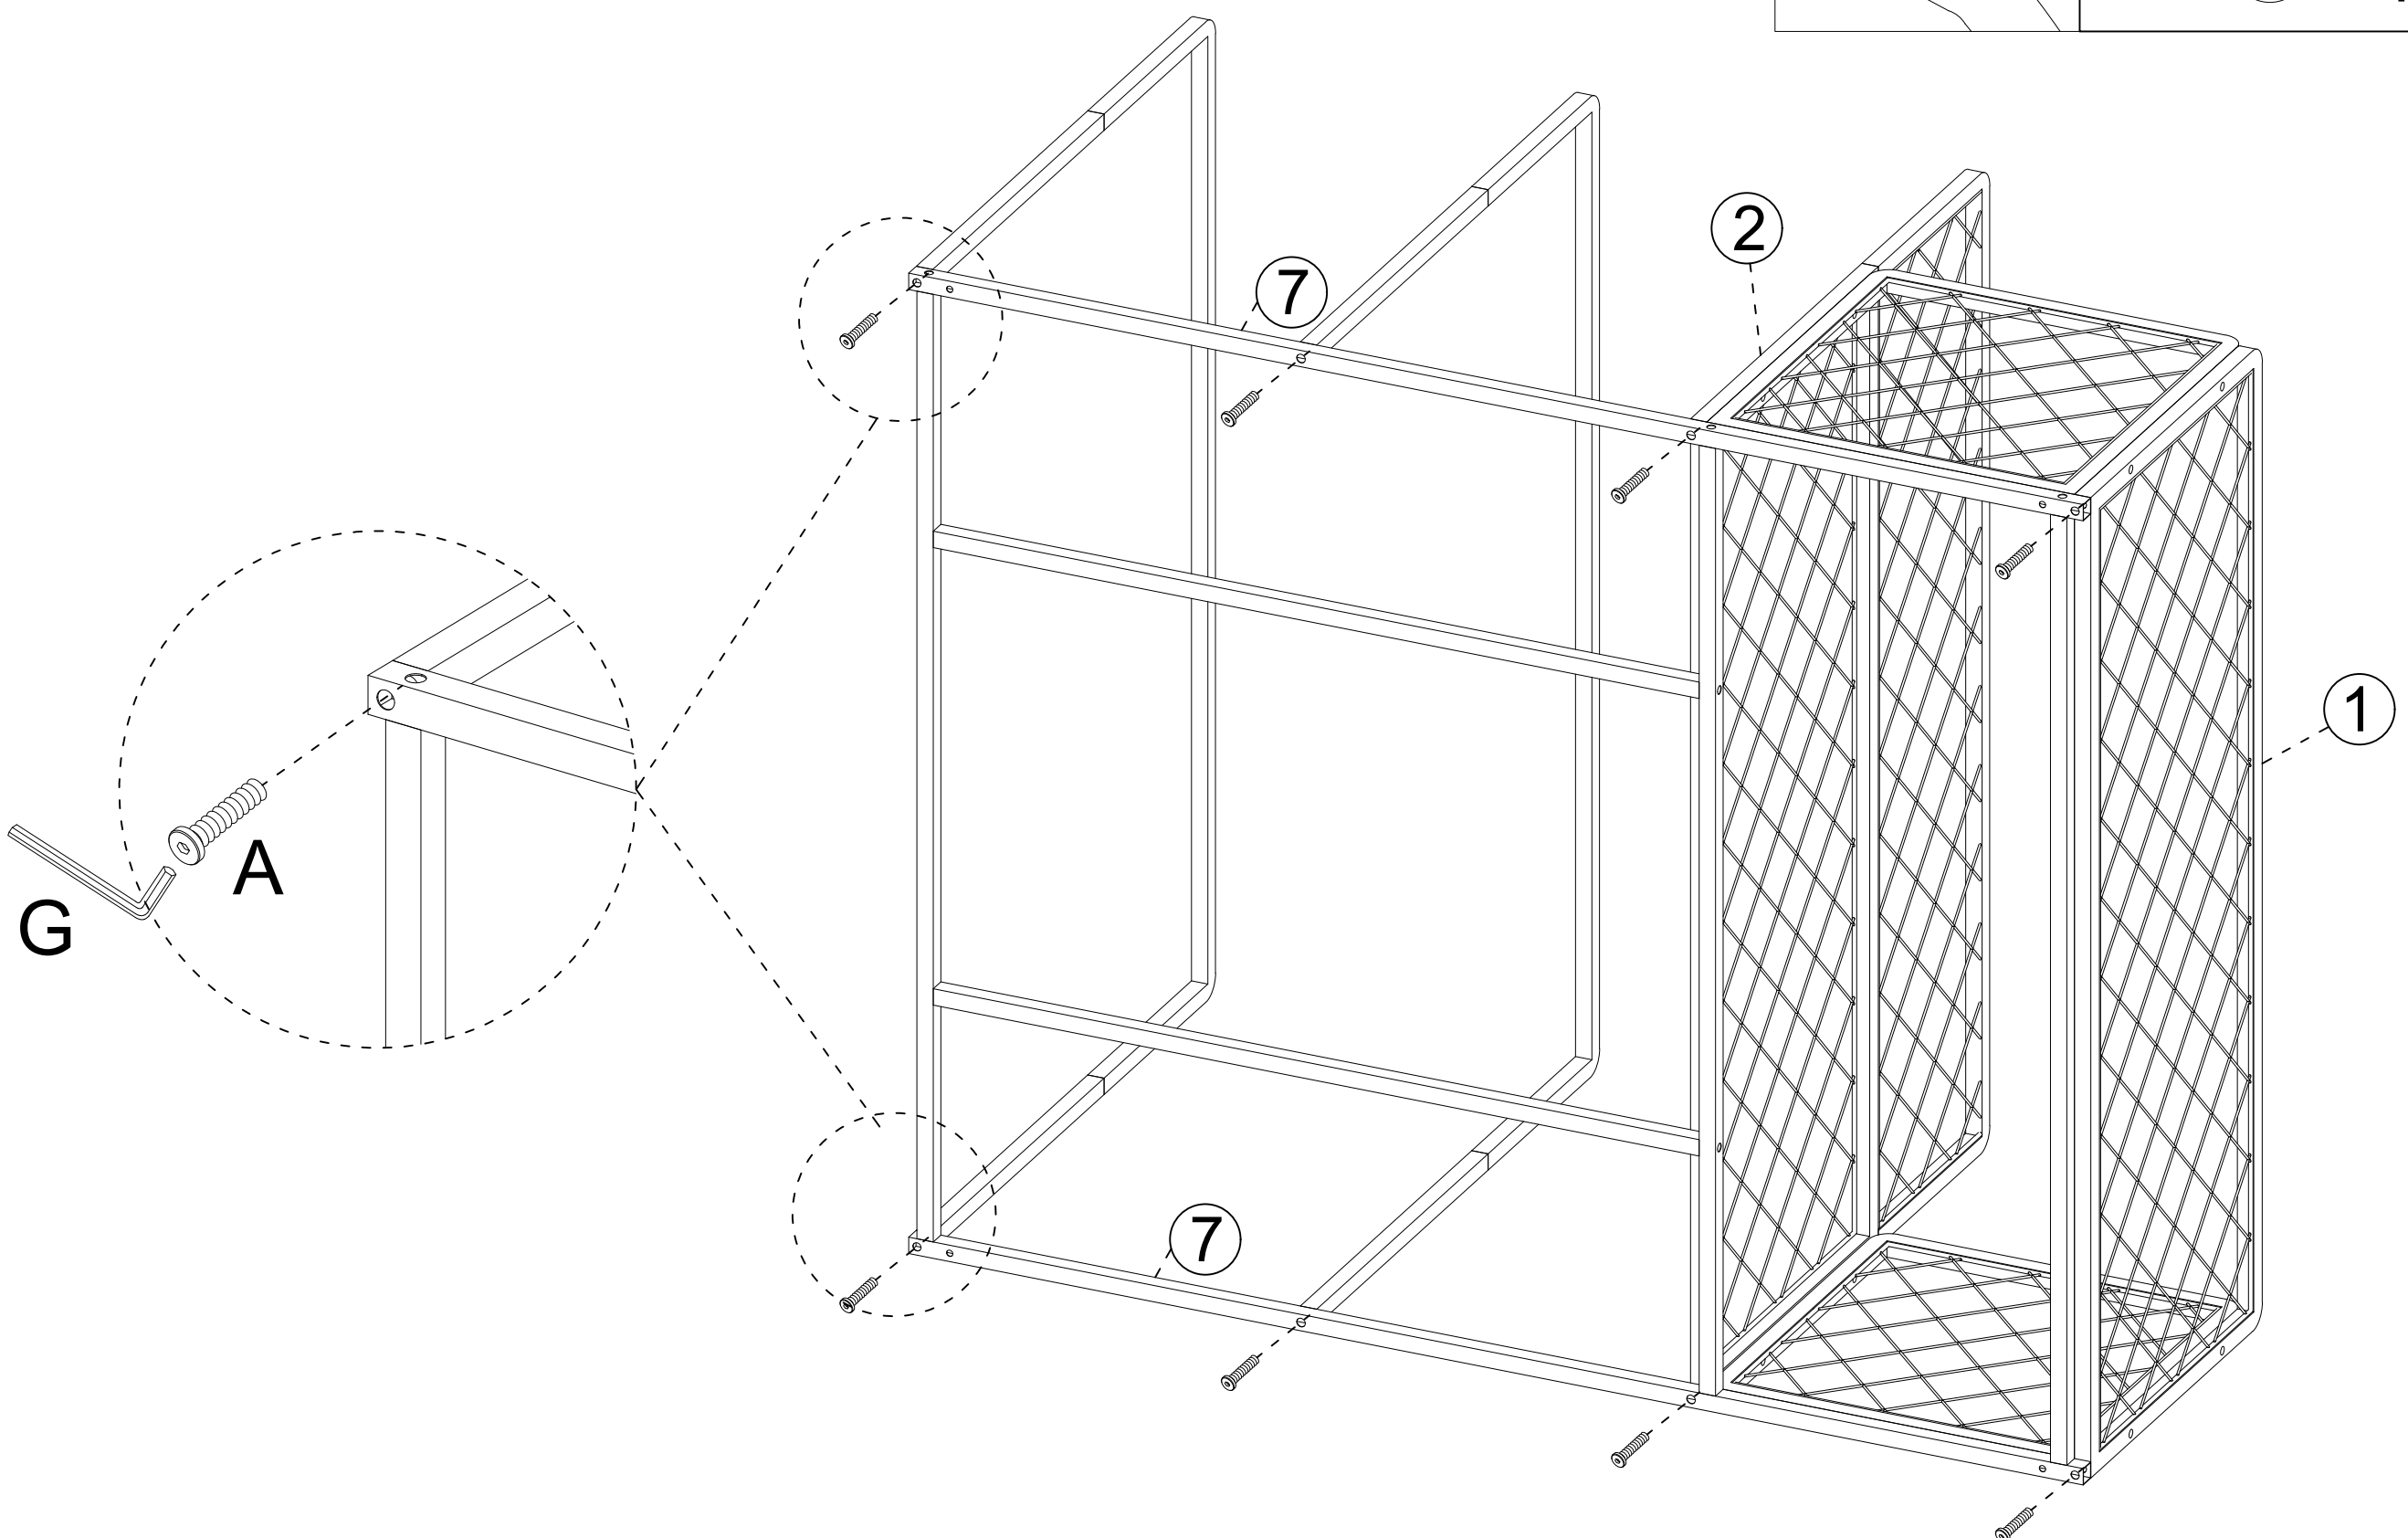


7

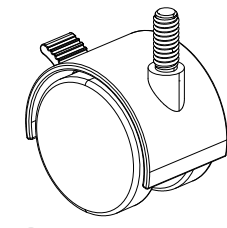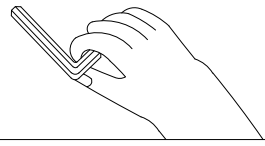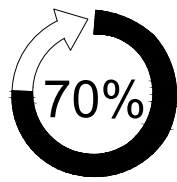


D × 2pcs

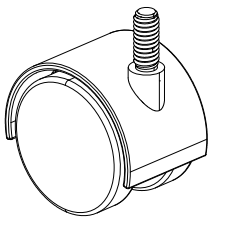

E × 2pcs

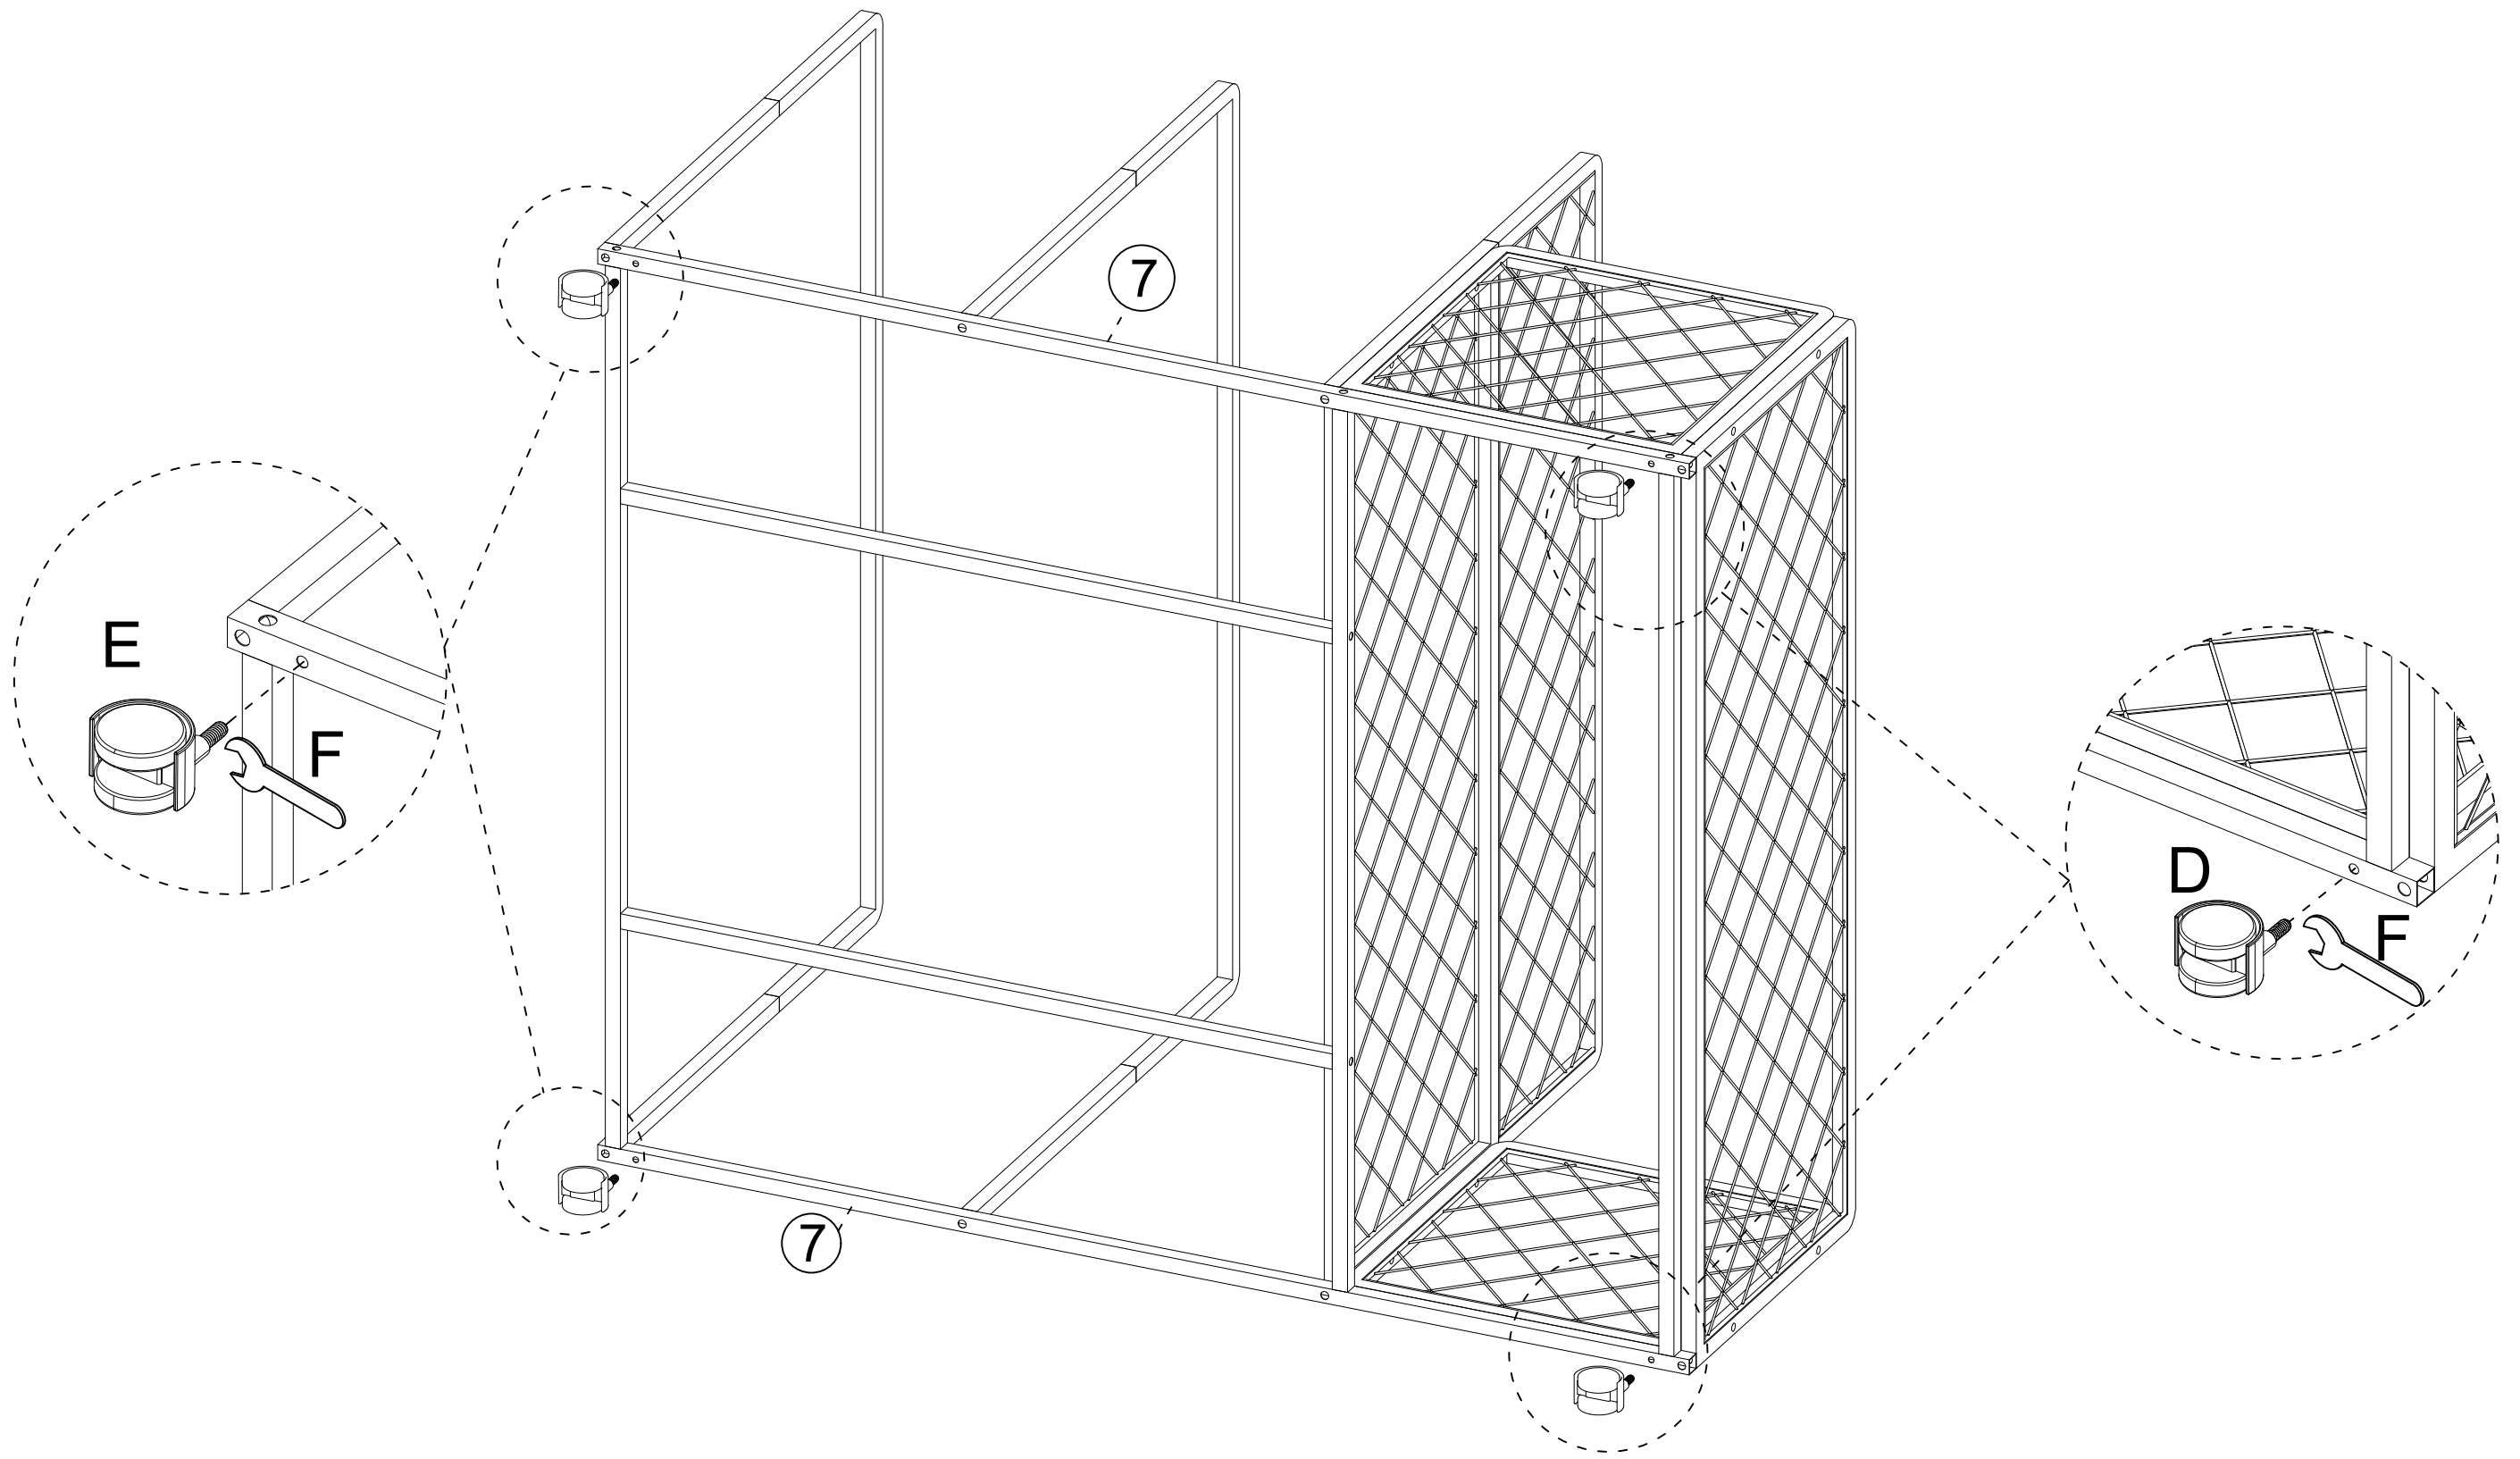

8

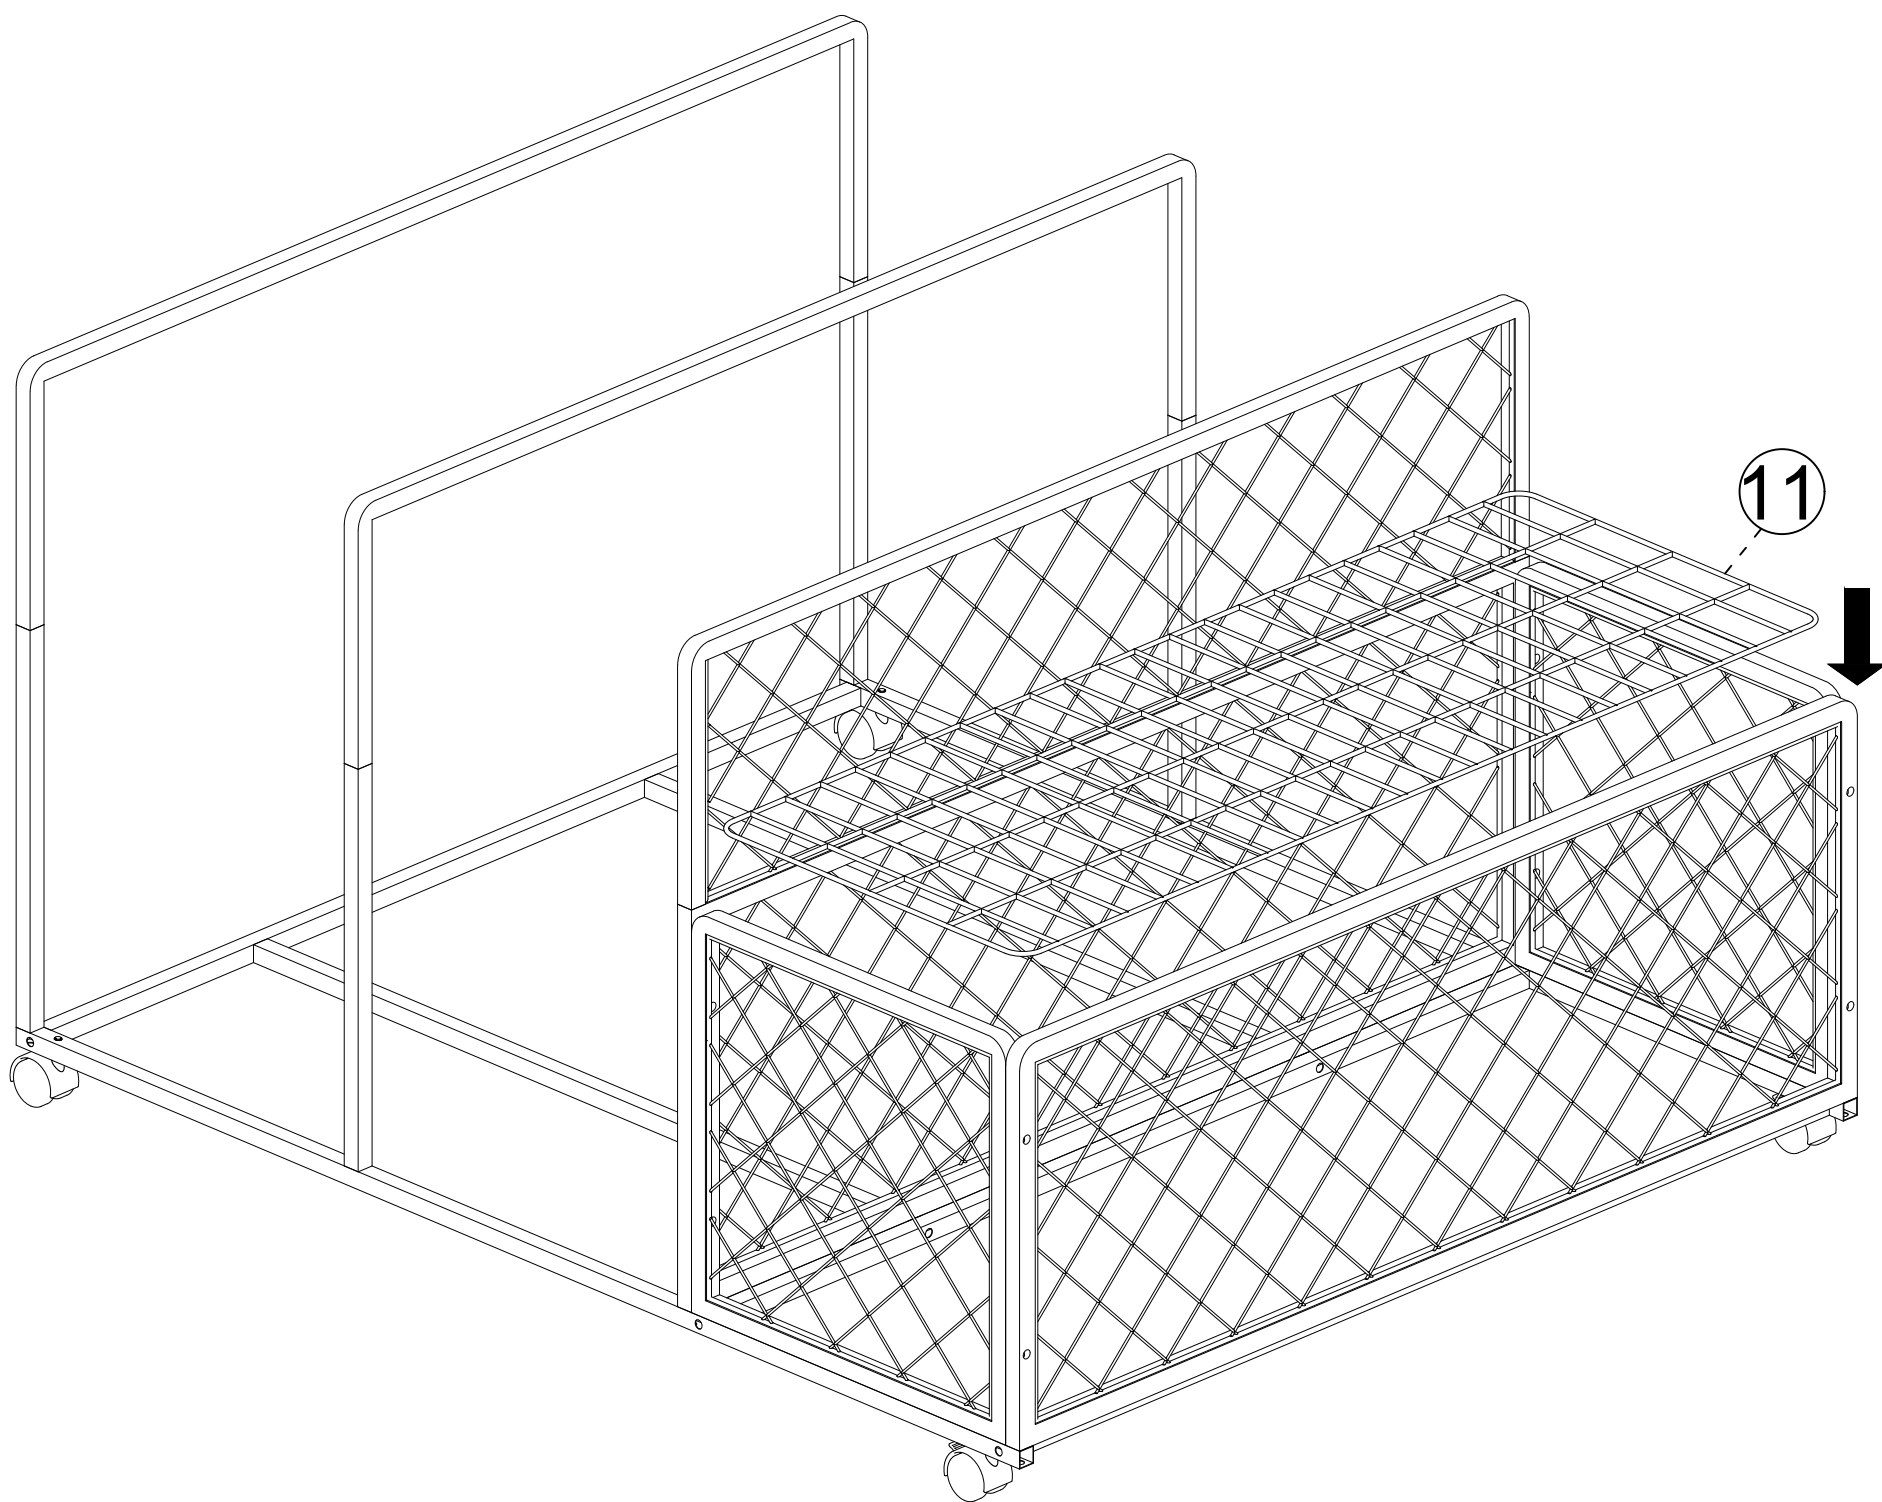

9

Tighten all screws to 100% after inspection.

