



**FLEXSTONE**  
LUXURIOUS BATH SURROUNDS

# Inside Corner Trim Install Instructions

\*Read all instructions before starting\*

For missing items or returns do not return to store.

Please call 877-941-3662

(Monday – Friday 8:00 a.m. – 5:00 p.m MT)

**RECOMMENDED:** Visit <http://FlexstoneProducts.com/installation> to access a walk-through video and other useful installation information.

Packaged Date:  Packaged By:

# Inside Corner Trim Instructions


## Inside Corner Trim

FLXICN



### Installation of Inside Corner Trim

1. Inside Corner Trims can be used to hide gaps or poor cuts where two panels meet in a corner. Install Inside Corner Trims AFTER the FlexStone wall panels and edge trims and corner shelf are installed. Be sure to peel away protective masking from the wall panels before installing the Inside Corner Trim.
2. Measure from the tub or shower base to the bottom of the horizontal edge trims of the bath kit. Cut the Inside Corner Trim to proper length. If a corner shelf is installed in this corner, divide the Inside Corner Trim into sections to run from the tub or shower base up to the bottom of the corner shelf, and from the top of the corner shelf up to the edge trims.
3. Peel away protective masking from the trim, apply construction adhesive to the back of each flange of the trim, keeping the adhesive away from the edges of each flange (to avoid adhesive squeezing out the edges).
4. Secure in place, and hold with painter's tape while the adhesive cures.
5. Seal all edge joints with Performance Pro 100% Silicone, as with the rest of the surround.

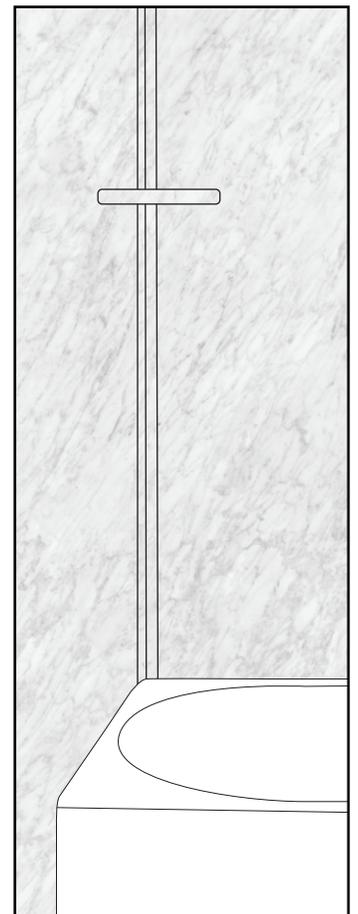

**FLEXSTONE**  
LUXURIOUS BATH SURROUNDS