

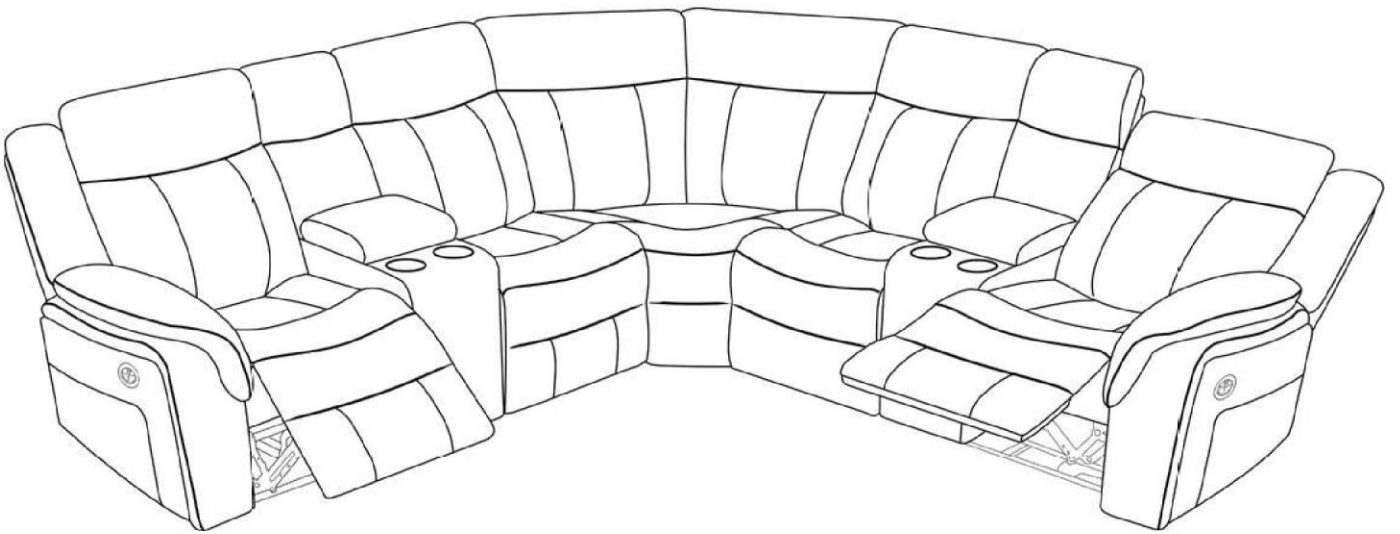
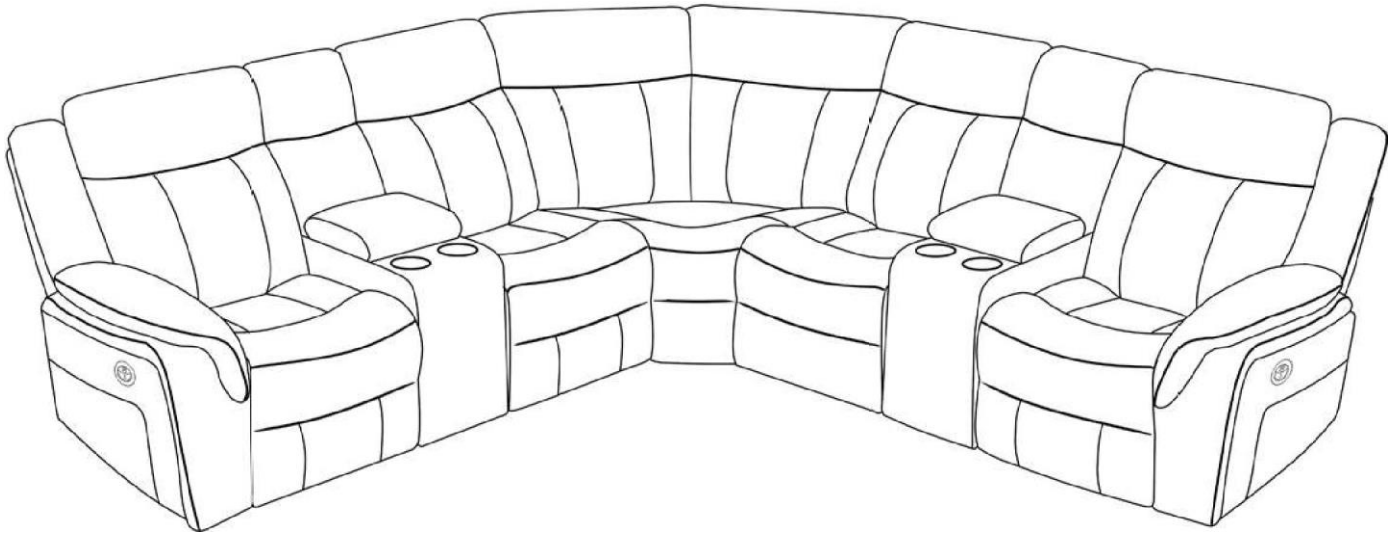
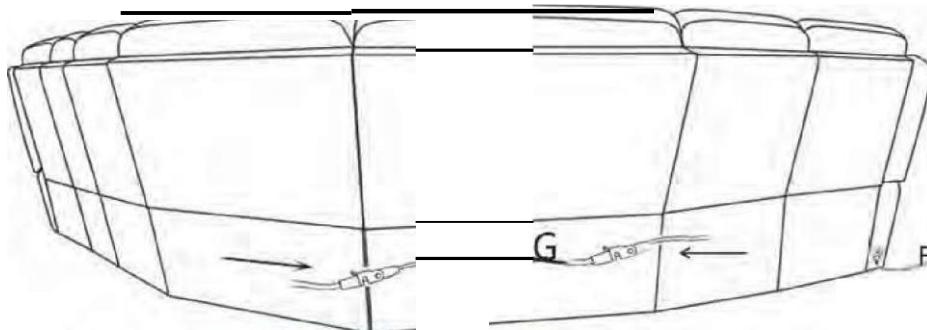
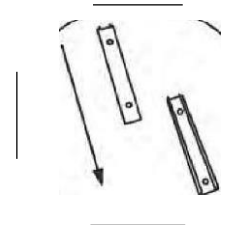
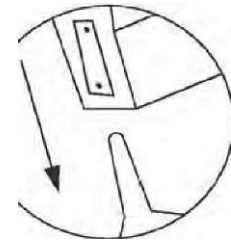


UM02 OPERATION INSTRUCTIONS

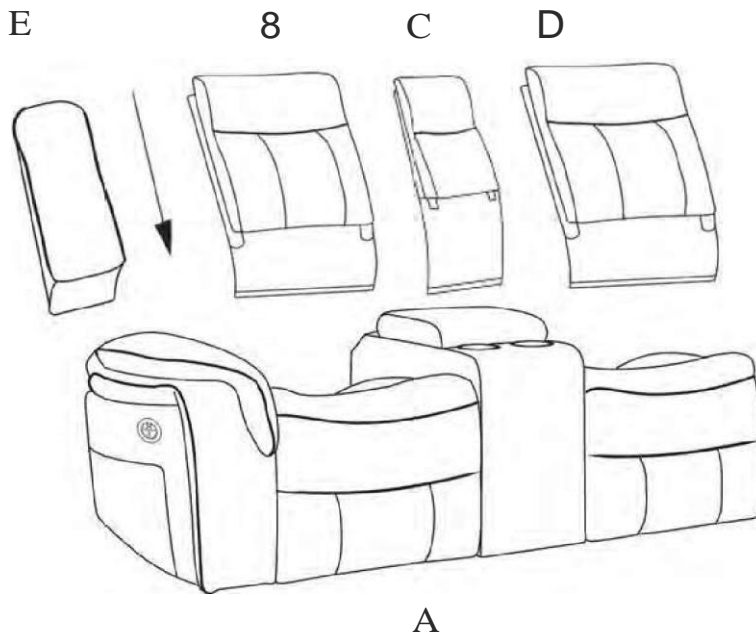

UM02 LAF LOVESEAT ASSEMBLY INSTRUCTIONS


Place the Left/ Right Backrest(B,D) to the Loveseat Assembly(A), place the Left Wing(E) to the Left Brackrest(B), align with the metal brackets on each piece.then slowly lower the backrest until the metal brackets snap into the locked position side to the Recliner Loveseat Assembly(A). Install the Console Backrest(C) to the Recliner Loveseat Assembly(A), Connect the power cord(G/F), product is now completed.

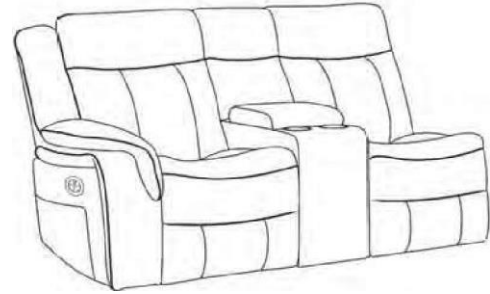


Connect the power cord G between LAF Loveseat backside's socket and RAF Loveseat backside's socket.

PARTS LIST


Recliner Loveseat Assembly(1PC)

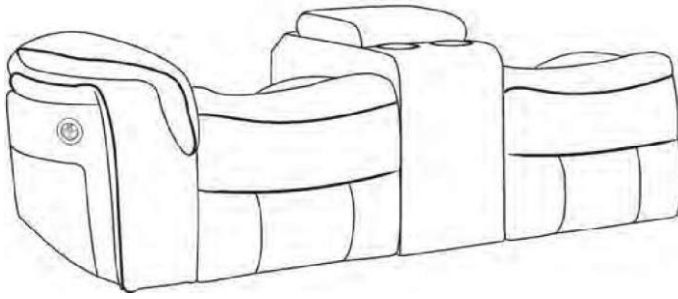

B Left Backrest(1PC)

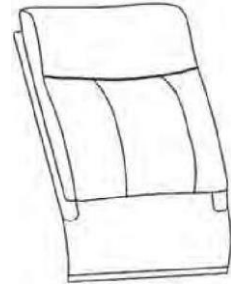


C Console Backrest
(1PC)

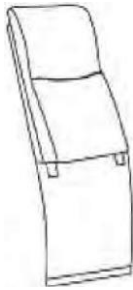

(Packed underneath
the bottom console)

D Right Backrest(1PC)

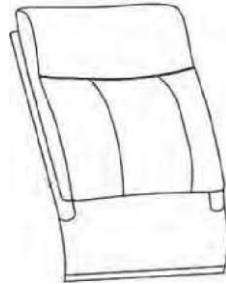

E Left Wing(1PC)



Power Supply(1PC)




(Packed in Console area)

G Power cord(1PC)




(Packed in Console area)

CHECK HIDDEN BOTTOM COMPARTMENT FOR CONSOLE BACK CUSHIONS

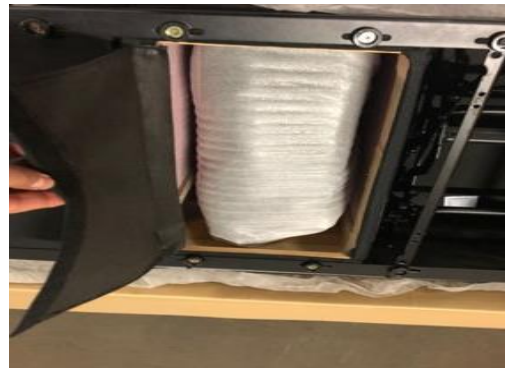

Parts For UM02 LAF Loveseat

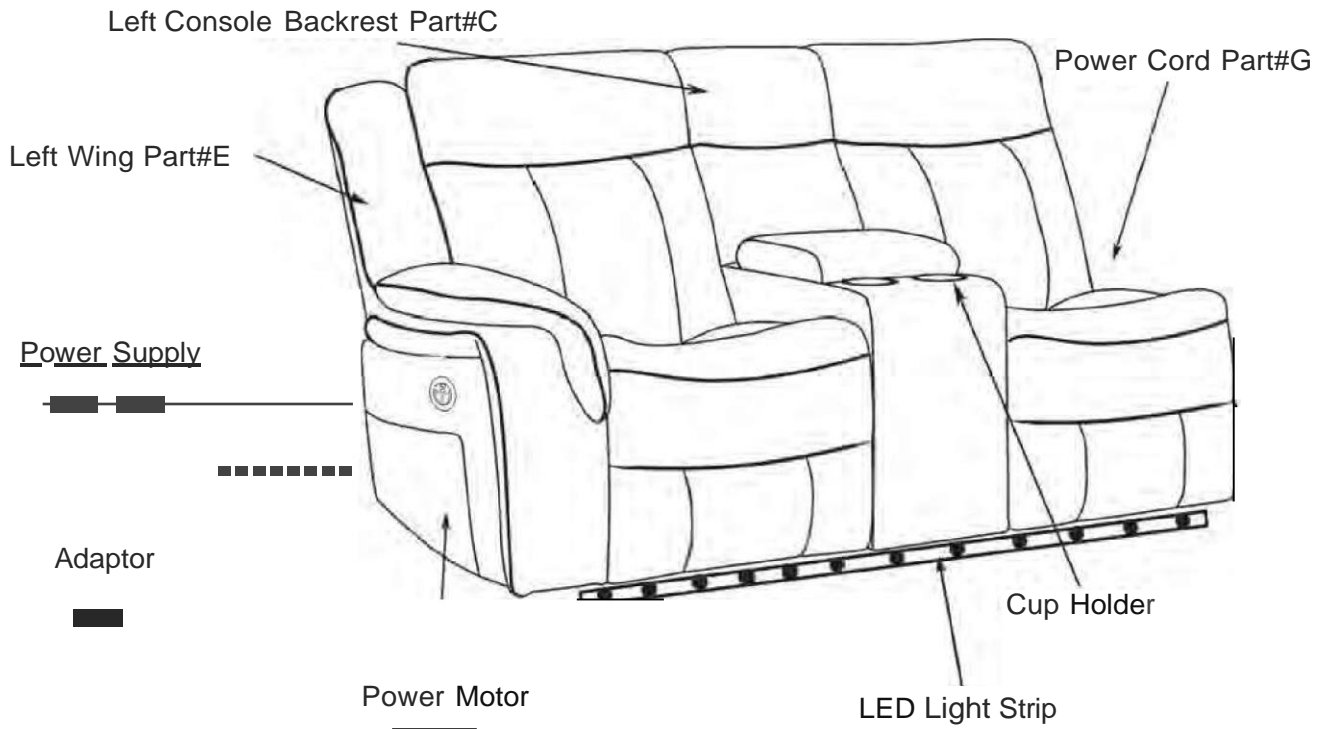

PRODUCT DETAILS





Product Size	68"L x 36"W x 40"H
Carton Size	68"L x 30"W x 26"H
Net Weight	141 lbs
Gross Weight	154 lbs
Cuft	30.69'

FABRIC CONTENT'. POLYESTER 100%

This fabric is machine washable.
 Allow +/- 3% residual shrinkage.
 Do not use cleaning products containing brightening agents.


UM02 RAF LOVESEAT ASSEMBLY INSTRUCTIONS

Place the Left/ Right Backrest(B,D) to the Loveseat Assembly(A), place the Right Wing(E) to the Right Brackrest(D), align with the metal brackets on each piece, then slowly lower the backrest until the metal brackets snap into the locked position side to the Recliner Loveseat Assembly(A). Install the Console Backrest(C) to the Recliner Loveseat Assembly(A), product is now completed..

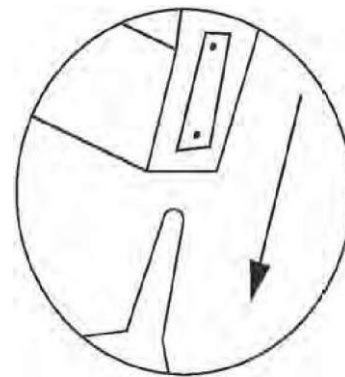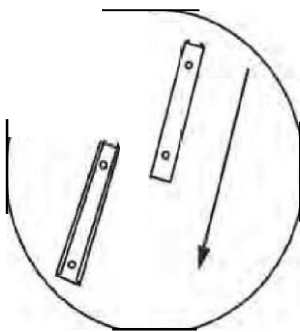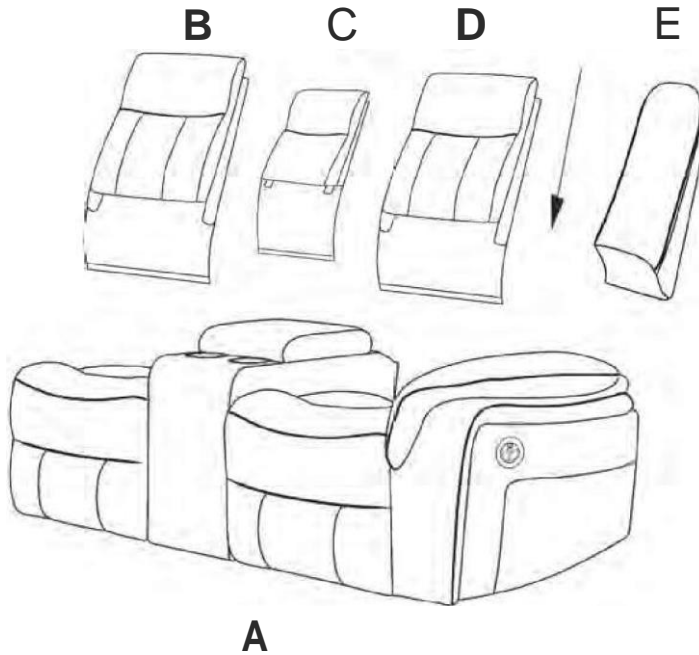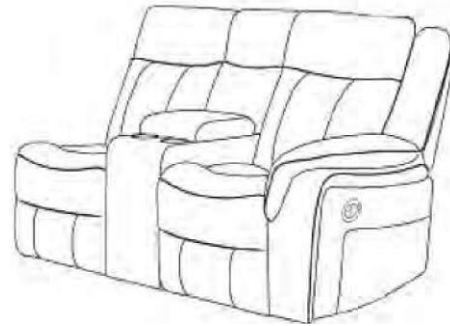


PARTS LIST


Recliner Loveseat Assembly(1PC)

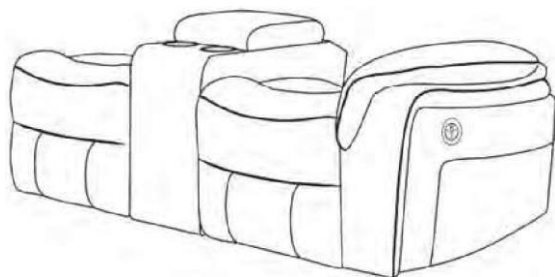

Left Backrest(1PC)

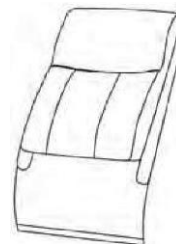


C Console Backrest (1PC)

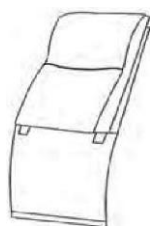

(Packed underneath the bottom console)

D Right Backrest(1PC)

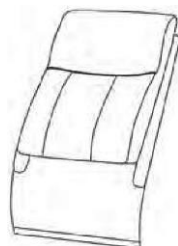

E Right Wing(1PC)




CHECK HIDDEN BOTTOM COMPARTMENT FOR CONSOLE BACK CUSHIONS



Console backrest inside



Parts For RAF Loveseat

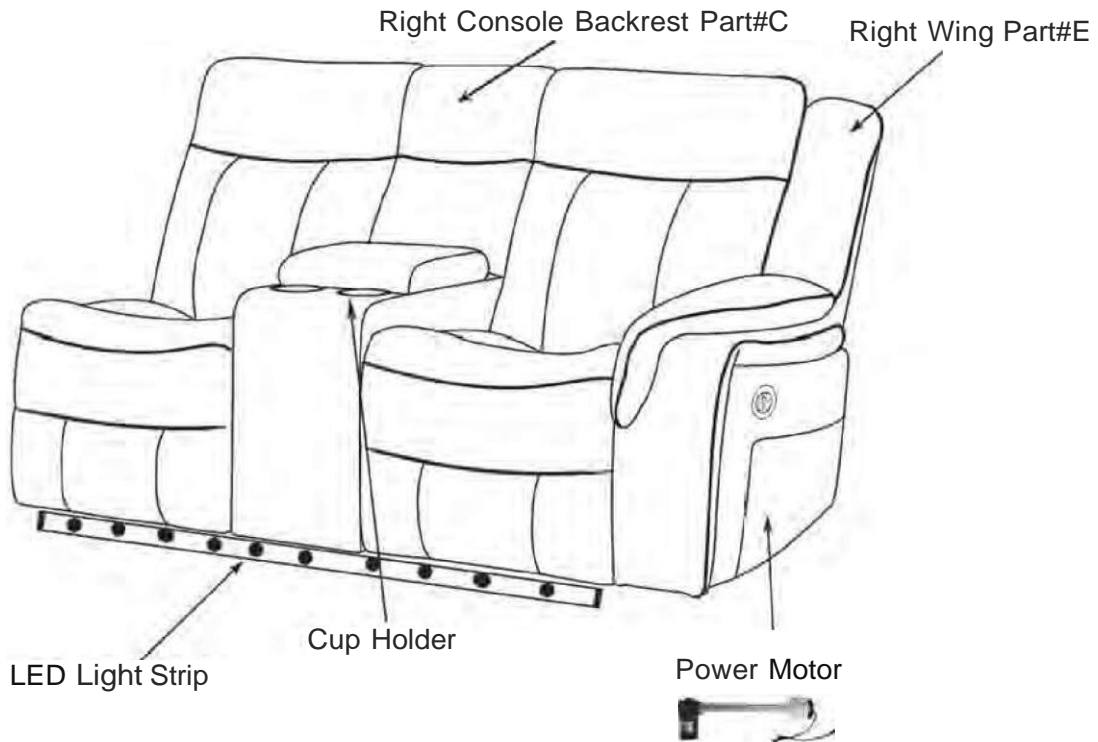

PRODUCT DETAILS

Product Size	68"L x 36"W x 40"H
Carton foze	68"L x '30"W x 26"H
Net Weight	141 lbs
Gross Weight	154 lbs
Cuft	30.69'



FABRIC CONTENT: POLYESTER 100%

This fabric is machine washable.
Allow +/- 3% residual shrink.<U>e.

Do not use cleaning products oontainin_g brighlening agents.


UM02 WEDGE ASSEMBLY INSTRUCTIONS

Place the Left/ Right Backrest(B,C) to the Wedge seat Assembly(A), align with the metal brackets on each piece, then slowly lower the backrest until the metal brackets snap into the locked position side to the Wedge Assembly(A), connect the back power cord. product is now completed.

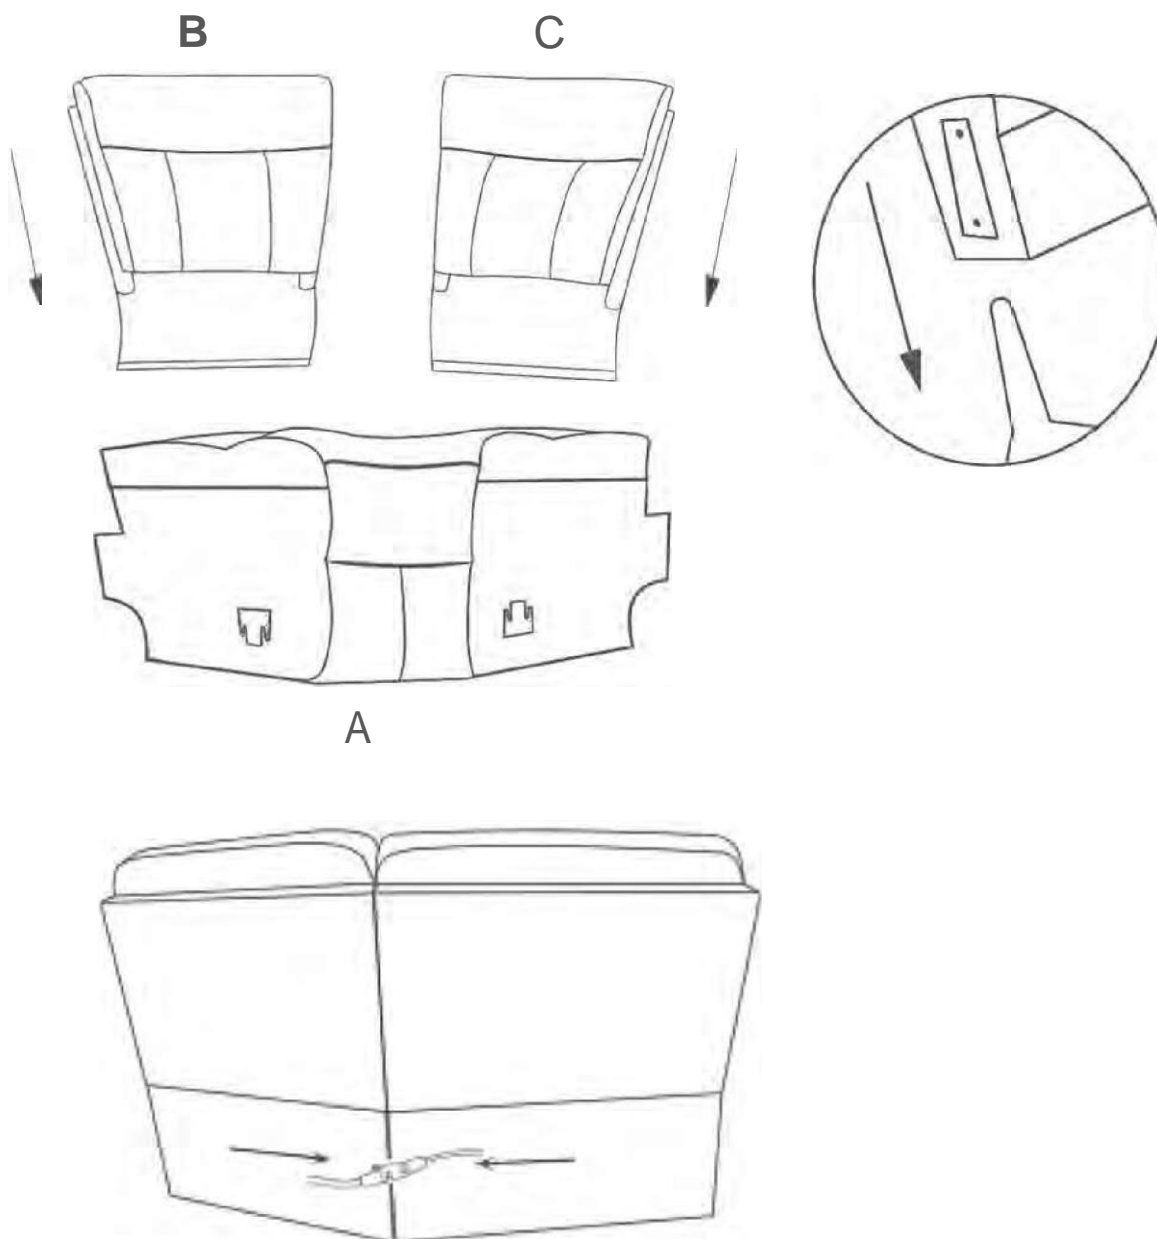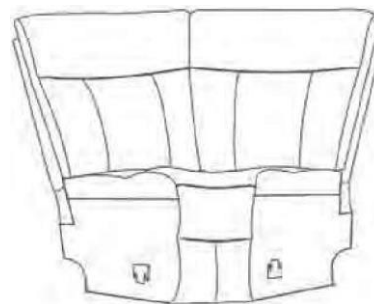


PARTS LIST


A Wedge Seat(1PC)

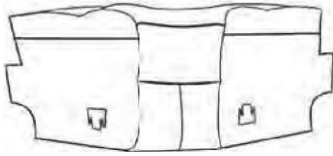


B Left Backrest(1PC)

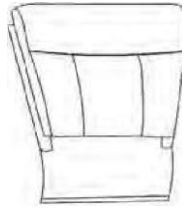


C Right Backrest(1PC)

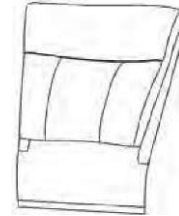

COMPLETED WEDGE

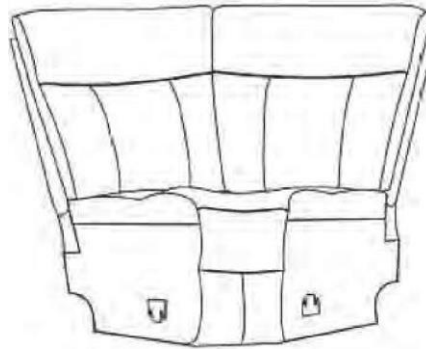

Parts For WEDGE

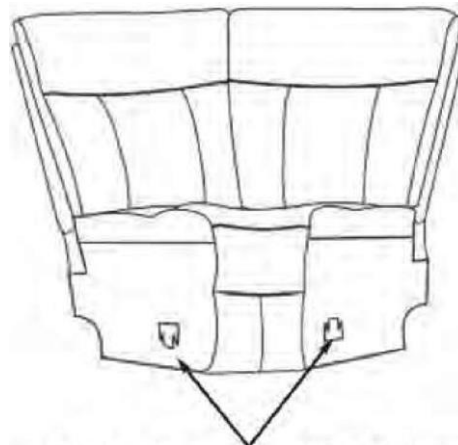

WEDGE SEAT BRACKET


WEDGE SEAT DETAILS





Product Size	59"Lx 35"W x: 19"H
Carton Size	44.25"L x 33.5"W x 18.25"H
Net Weight	40 LBS
Gross Weight	48 LBS
Cutt	15.66'


WEDGE BACKREST DETAILS

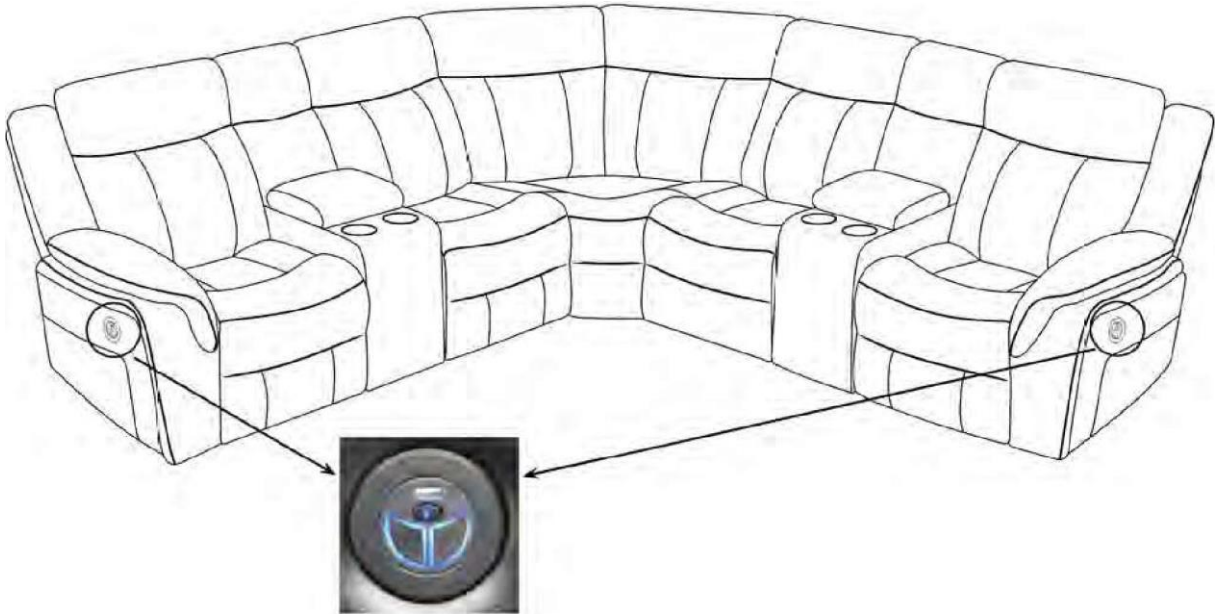Product Size	35"L x 29"W } 10"H
Carton Size	36"L x 30"W x 20"H
Net Weight	31 LBS
Gross Weight	37 LBS
Cutt	12.5'


OPERATING INSTRUCTION



- 1) Both A / B is control button.
- 2) Press  to recline the sofa, press  to return back.
- 3) Press  to turn the LED strip on and off.
- 4)  USB PORT for power charge.

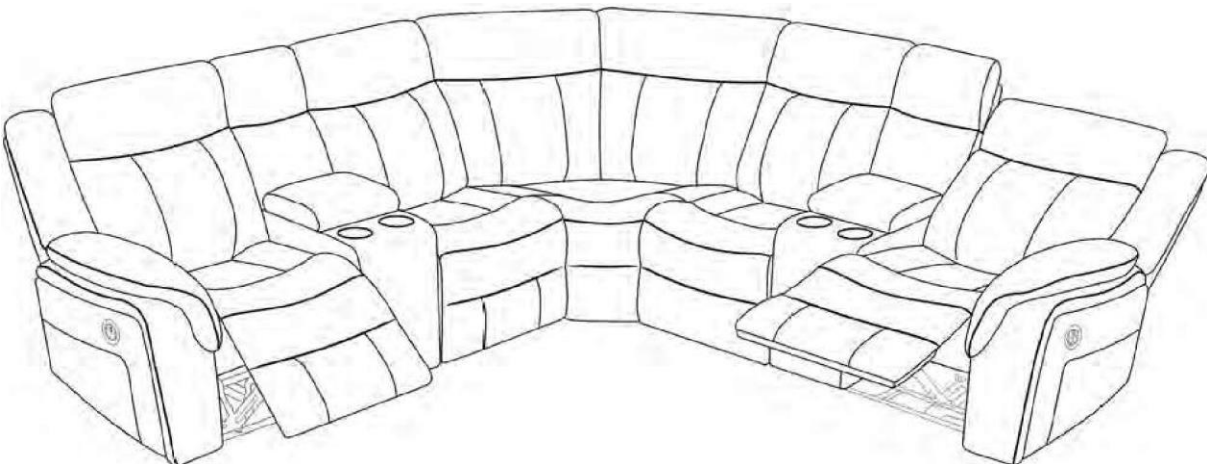

How to Disassemble

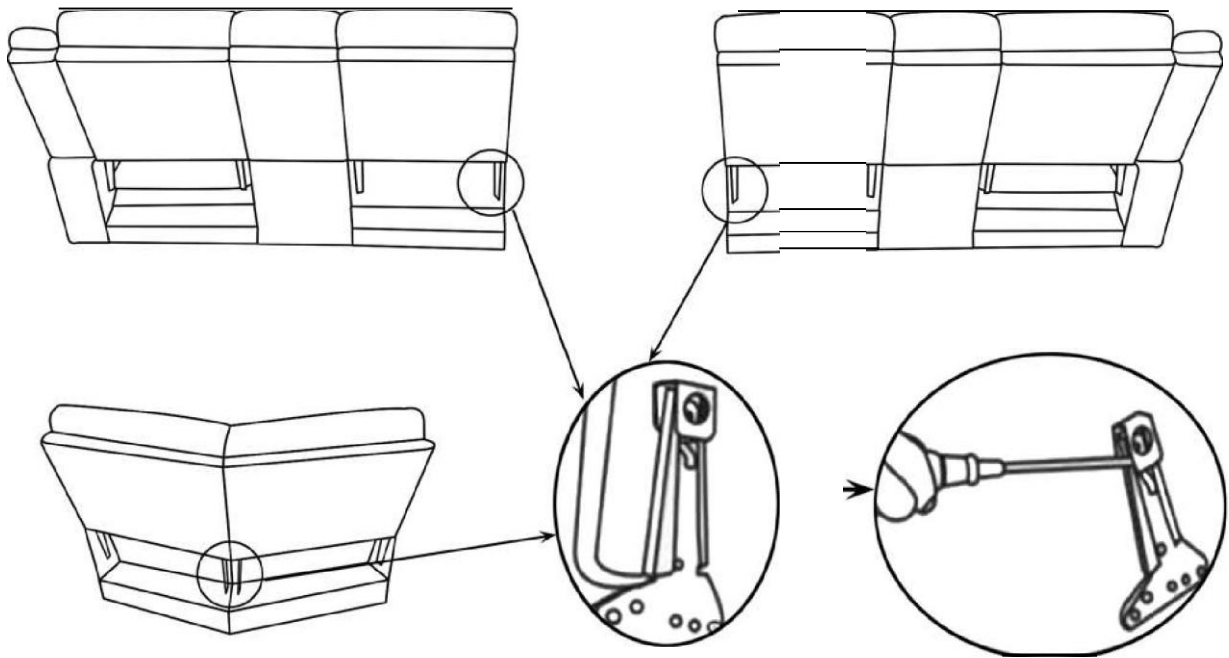

Please use a flathead screwdriver to pry the metal locking bracket apart, unlocking it. Then the backrest can be pulled out.