



















ASSEMBLY INSTRUCTION FOR 12'X20' ULTRAWOOD GAZEBO

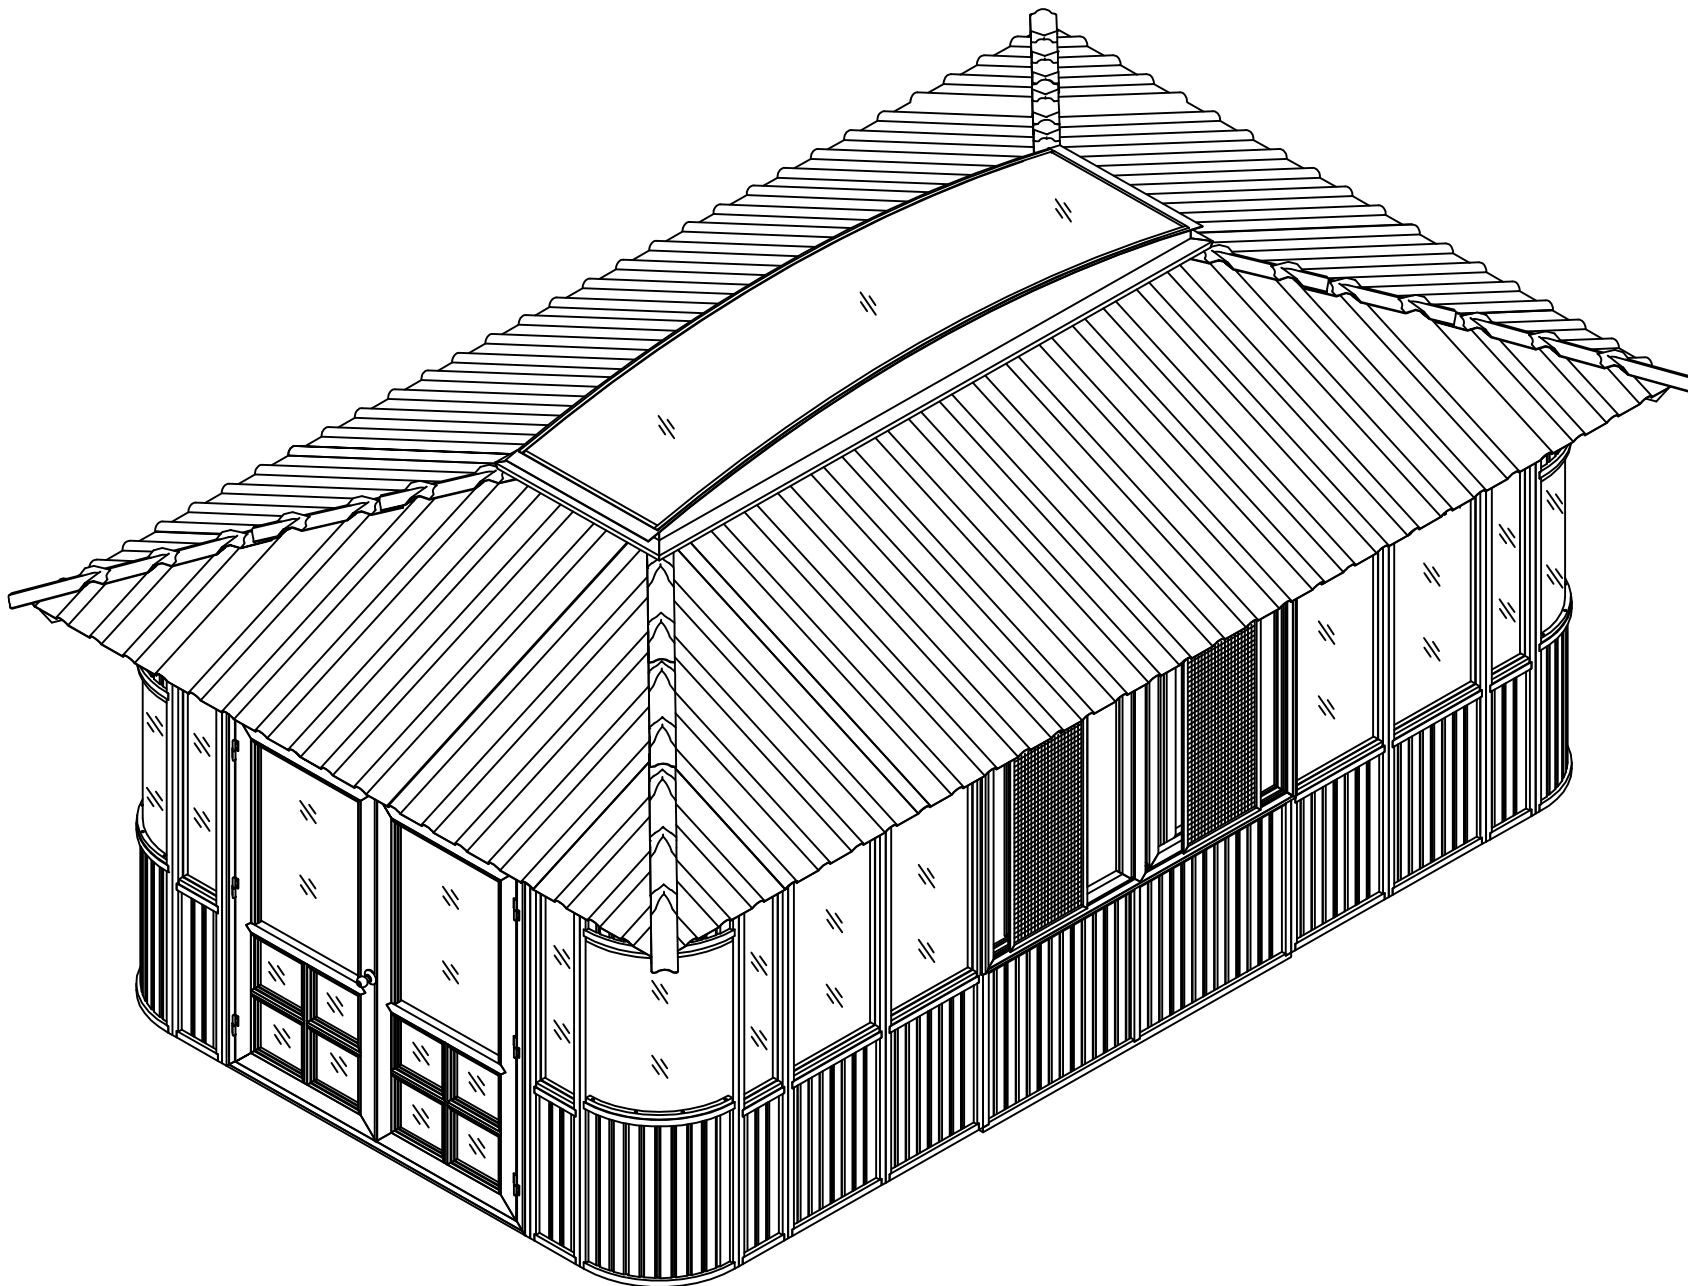

ASSEMBLY INSTRUCTION FOR 12'X20' ULTRAWOOD GAZEBO


A SIZE: 1670 X 80 X 70MM 65$\frac{3}{4}$" X 3" X 2$\frac{3}{4}$" X6	A-1 SIZE: 1670 X 80 X 70MM 65$\frac{3}{4}$" X 3" X 2$\frac{3}{4}$" X4	B SIZE: 2270 X 90 X 70MM 89$\frac{3}{8}$" X 3$\frac{3}{4}$" X 2$\frac{3}{4}$" X4	C SIZE: 2500X 60 X35MM 98$\frac{2}{5}$" X 2$\frac{3}{8}$" X 1$\frac{3}{8}$" X2	C1 SIZE: 1765 X 60 X 35MM 69$\frac{1}{2}$" X 2$\frac{3}{8}$" X 1$\frac{3}{8}$" X2	C2 SIZE: 1765 X 60 X 35MM 69$\frac{1}{2}$" X 2$\frac{3}{8}$" X 1$\frac{3}{8}$" X6	D SIZE: 590 X 90 X 35MM 23$\frac{1}{16}$" X 3$\frac{1}{2}$" X 1$\frac{3}{8}$" X4
D1 SIZE: 300 X 90 X 35MM 12" X 3$\frac{1}{2}$" X 1$\frac{3}{8}$" X4	E SIZE: 1190 X 60 X 35MM 46$\frac{7}{8}$" X 2$\frac{3}{8}$" X 1$\frac{3}{8}$" X2	E1 SIZE: 1190 X 60 X 35MM 46$\frac{7}{8}$" X 2$\frac{3}{8}$" X 1$\frac{3}{8}$" X2	F SIZE: 809 X 60 X 35MM 31$\frac{5}{8}$" X 2$\frac{3}{8}$" X 1$\frac{3}{8}$" X2	F1 SIZE: 809 X 60 X 35MM 31$\frac{5}{8}$" X 2$\frac{3}{8}$" X 1$\frac{3}{8}$" X2	G SIZE: 704 X 60 X 35MM 27$\frac{11}{16}$" X 2$\frac{3}{8}$" X 1$\frac{3}{8}$" X2	G1 SIZE: 704 X 60 X 35MM 27$\frac{11}{16}$" X 2$\frac{3}{8}$" X 1$\frac{3}{8}$" X2
H SIZE: 377 X 60 X 35MM 14$\frac{5}{8}$" X 2$\frac{3}{8}$" X 1$\frac{3}{8}$" X2	H1 SIZE: 377 X 60 X 35MM 14$\frac{5}{8}$" X 2$\frac{3}{8}$" X 1$\frac{3}{8}$" X2	I SIZE: 1660 X 70 X 35MM 65$\frac{3}{8}$" X 2$\frac{3}{4}$" X 1$\frac{3}{8}$" X2	I1 SIZE: 1660 X 70 X 35MM 65$\frac{3}{8}$" X 2$\frac{3}{4}$" X 1$\frac{3}{8}$" X2	J SIZE: 1330 X 70 X 35MM 52$\frac{3}{8}$" X 2$\frac{3}{4}$" X 1$\frac{3}{8}$" X2	J1 SIZE: 1330 X 70 X 35MM 52$\frac{3}{8}$" X 2$\frac{3}{4}$" X 1$\frac{3}{8}$" X2	K SIZE: 1710 X 880 X 30MM 67$\frac{5}{16}$" X 34$\frac{3}{8}$" X 1$\frac{1}{16}$" X4
K1 SIZE: 1710 X 880 X 30MM 67$\frac{5}{16}$" X 34$\frac{3}{8}$" X 1$\frac{1}{16}$" X4	L SIZE: 942 X 862 X 30MM 37" X 34" X 1$\frac{1}{16}$" X4	L1 SIZE: 942 X 862 X 30MM 37" X 34" X 1$\frac{1}{16}$" X4	N SIZE: 1710 X 580 X 30MM 67$\frac{5}{16}$" X 22$\frac{5}{8}$" X 1$\frac{1}{16}$" X4	O SIZE: 720 X 115 X 50MM 28$\frac{3}{8}$" X 4$\frac{1}{2}$" X 2" X4	P SIZE: 830 X 115 X 50MM 33" X 4$\frac{1}{2}$" X 2" X4	P1 SIZE: 1020 X 115 X 50MM 41$\frac{1}{16}$" X 4$\frac{1}{2}$" X 2" X4
Q SIZE: 1398.5X 230 X 100MM 55" X 9" X 4" X2	Q0 SIZE: 1398.5X 230 X 100MM 55" X 9" X 4" X2	Q1 SIZE: 1007 X 107X 100MM 39$\frac{3}{8}$" X 4$\frac{1}{4}$" X 4" X2	Q2 SIZE: 805 X 35X35MM 31$\frac{1}{16}$" X 1$\frac{3}{8}$" X 1$\frac{3}{8}$" X3	R SIZE:3310 X 875 X 3MM 130$\frac{1}{2}$" X 34$\frac{3}{8}$" X $\frac{1}{16}$" X1	S1 SIZE: 1269 X 140 X 60MM 50" X 5$\frac{1}{2}$" X 2$\frac{3}{8}$" X2	S1-1 SIZE: 1269 X 140 X 60MM 50" X 5$\frac{1}{2}$" X 2$\frac{3}{8}$" X2
S2 SIZE: 800 X 140 X 60MM 31$\frac{1}{2}$" X 5$\frac{1}{2}$" X 2$\frac{3}{8}$" X2	S3 SIZE: 1710 X 880 X 30MM 67$\frac{5}{16}$" X 34$\frac{3}{8}$" X 1$\frac{1}{16}$" X4	S4 SIZE: 1710 X 780 X 30MM 67$\frac{5}{16}$" X 30$\frac{11}{16}$" X 1$\frac{1}{16}$" X2	S5 SIZE: 1018 X 60 X 35MM 40" X 2$\frac{3}{8}$" X 1$\frac{3}{8}$" X12	S6 SIZE:946 X 70 X 35MM 37$\frac{1}{4}$" X 2$\frac{3}{4}$" X 1$\frac{3}{8}$" X6	S7 SIZE: 2300X 90 X 35MM 90$\frac{1}{2}$" X 3$\frac{1}{2}$" X 1$\frac{3}{8}$" X4	S8 SIZE: 395 X 70 X70MM 15$\frac{1}{2}$" X 2$\frac{3}{4}$" X 2$\frac{3}{4}$" X4

ASSEMBLY INSTRUCTION FOR 12'X20' ULTRAWOOD GAZEBO

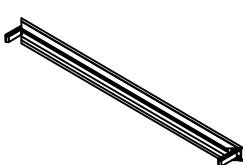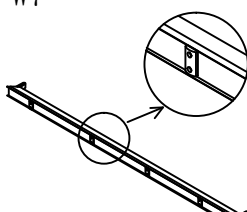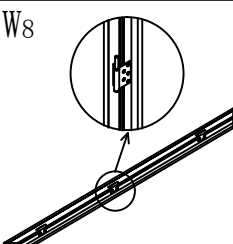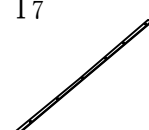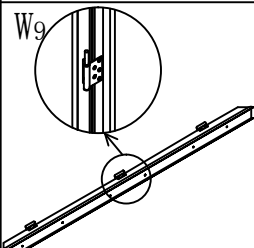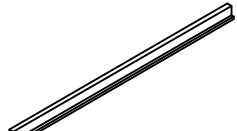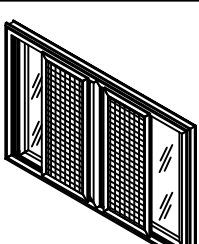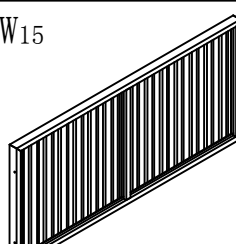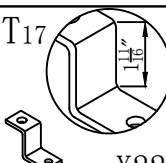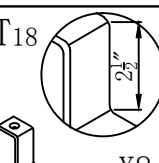
W₁  SIZE: 693X60X2080MM 27$\frac{1}{4}$"X2$\frac{3}{8}$"X81$\frac{7}{8}$" X4	W₂  SIZE: 600X60X2080MM 23$\frac{5}{8}$"X2$\frac{3}{8}$"X81$\frac{7}{8}$" X4	W₃  SIZE: 600X60X2080MM 23$\frac{5}{8}$"X2$\frac{3}{8}$"X81$\frac{7}{8}$" X4	W₄  SIZE: 305X60X2080MM 12"X2$\frac{3}{8}$"X81$\frac{7}{8}$" X4	T₁  X4	T₂  X10	T₃  X4	T₆  X6	
W₅  SIZE: 305X60X2080MM 12"X2$\frac{3}{8}$"X81$\frac{7}{8}$" X4	W₆  SIZE: 1837X65X45MM 72$\frac{3}{8}$"X2$\frac{9}{16}$"X1$\frac{1}{4}$" X1	W₇  SIZE: 1837X65X45MM 72$\frac{3}{8}$"X2$\frac{9}{16}$"X1$\frac{1}{4}$" X1	W₈  SIZE: 1995X65X45MM 78$\frac{9}{16}$"X2$\frac{9}{16}$"X1$\frac{1}{4}$" X1	T₇  X4	T₈  X2	T₉  X4	T₁₀  8-Ø8X50MM SIZE: $\frac{5}{16}$" X 2"	
W₉  SIZE: 1995X65X45MM 78$\frac{9}{16}$"X2$\frac{9}{16}$"X1$\frac{1}{4}$" X1	W₁₀  SIZE: 900X35X1932MM 35$\frac{3}{8}$"X1$\frac{3}{8}$"X76$\frac{1}{2}$" X1	W₁₁  SIZE: 900X35X1932MM 35$\frac{3}{8}$"X1$\frac{3}{8}$"X76$\frac{1}{2}$" X1	W₁₂  SIZE: 1900X59X90MM 74$\frac{1}{4}$"X2$\frac{3}{8}$"X3$\frac{1}{2}$" X1	T₁₀₋₁  16-Ø10X150MM	T₁₁  X2	T₁₂  X1	T₁₃  X2	
W₁₃  SIZE: 60X35X1990MM 2$\frac{3}{8}$"X1$\frac{3}{8}$"X78$\frac{3}{8}$" X2	W₁₄  SIZE: 1930X1230X87MM 76"X48$\frac{3}{8}$"X3$\frac{3}{8}$" X3	W₁₅  SIZE: 1900X880X60MM 75$\frac{3}{4}$"X34$\frac{1}{8}$"X2$\frac{3}{8}$" X3	T₄  X4	T₅  X2	T₁₄  X1	T₁₆  X24	T₁₇  X22	T₁₈  X8
					U₂  56-Ø5X75MM SIZE: $\frac{3}{16}$" X 3"	U₃  210-Ø5X55MM SIZE: $\frac{3}{16}$" X 2$\frac{1}{16}$"	U₄  318-Ø4X30MM SIZE: $\frac{3}{16}$" X 1$\frac{1}{16}$"	U₅  174-Ø4X55MM SIZE: $\frac{3}{16}$" X 2$\frac{1}{16}$"
					U₆  38-Ø4X20MM SIZE: $\frac{3}{16}$" X $\frac{13}{16}$"	U₇₋₁  4-Ø6X20MM SIZE: $\frac{3}{16}$" X $\frac{13}{16}$"	U₉  Color: Black 214-Ø4X30MM SIZE: $\frac{3}{16}$" X 1$\frac{1}{16}$"	U₁₀  121-Ø5X55MM SIZE: $\frac{3}{16}$" X 2$\frac{1}{16}$"
			T₄  X4	T₅  X2	V  SHIM X15	V₁  PLASTIC SPACER PLECE X56	V₂  X4	X  1-Ø5X30x70MM

ASSEMBLY INSTRUCTION FOR 12'X 20' ULTRAWOOD GAZEBO


#1

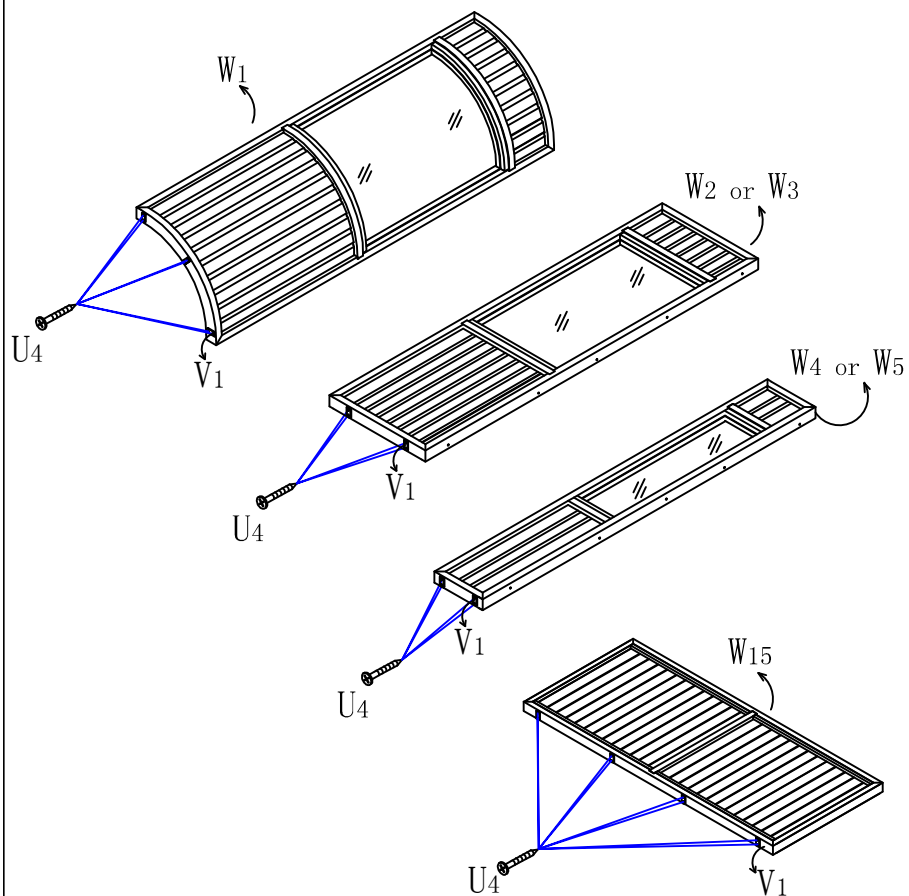

#2

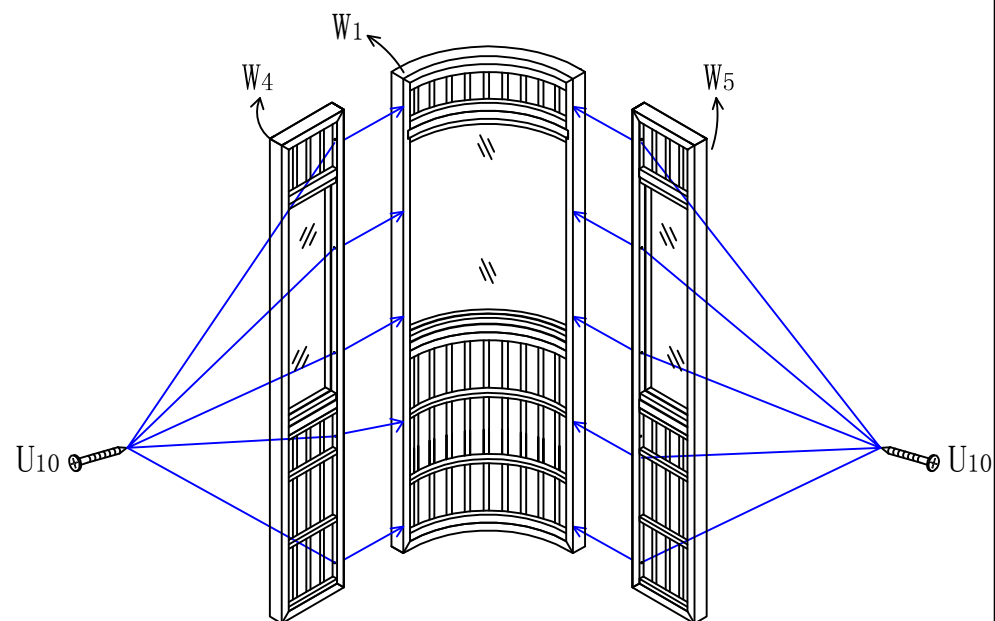


#3

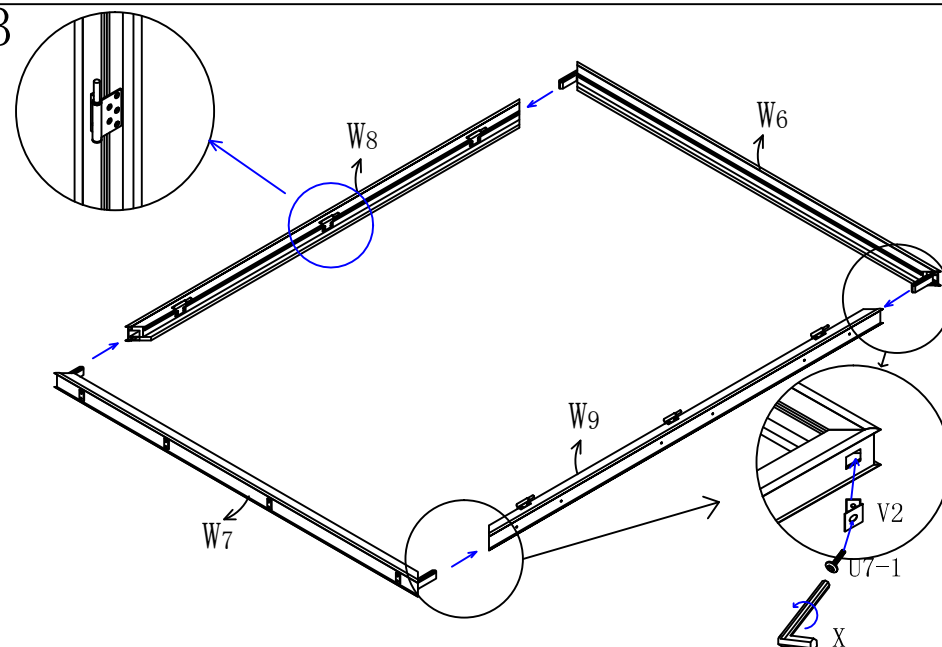


ASSEMBLY INSTRUCTION FOR 12'X20' ULTRAWOOD GAZEBO

#4

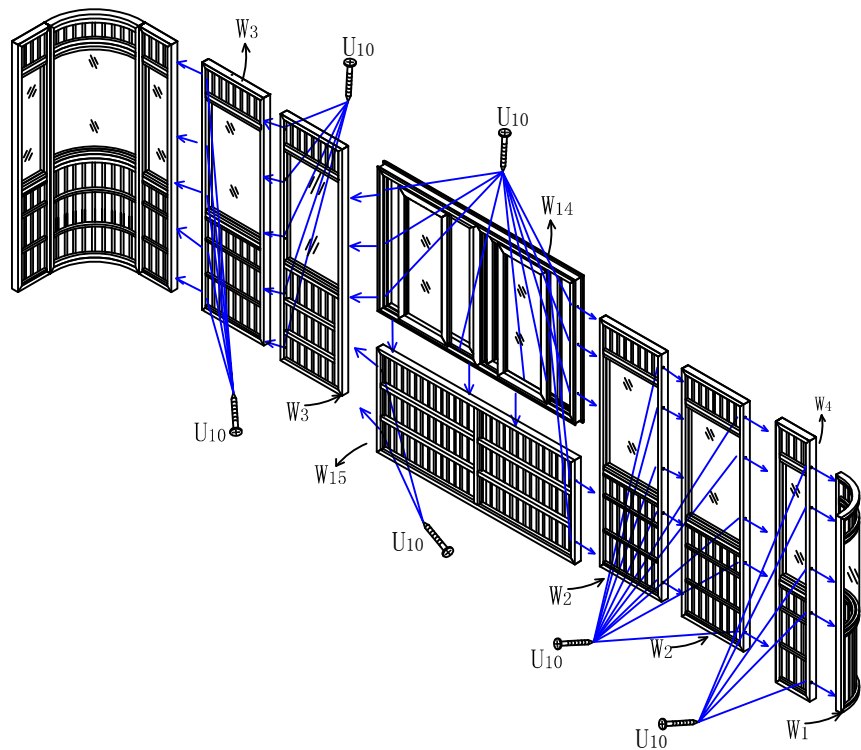


#5

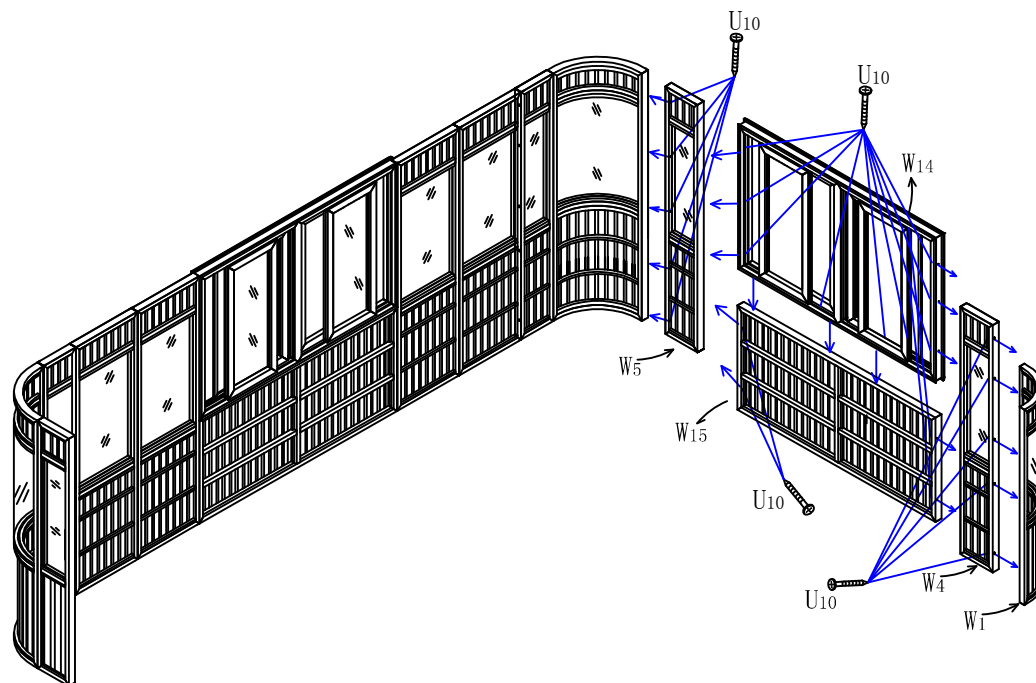


ASSEMBLY INSTRUCTION FOR 12'X20' ULTRAWOOD GAZEBO

#6

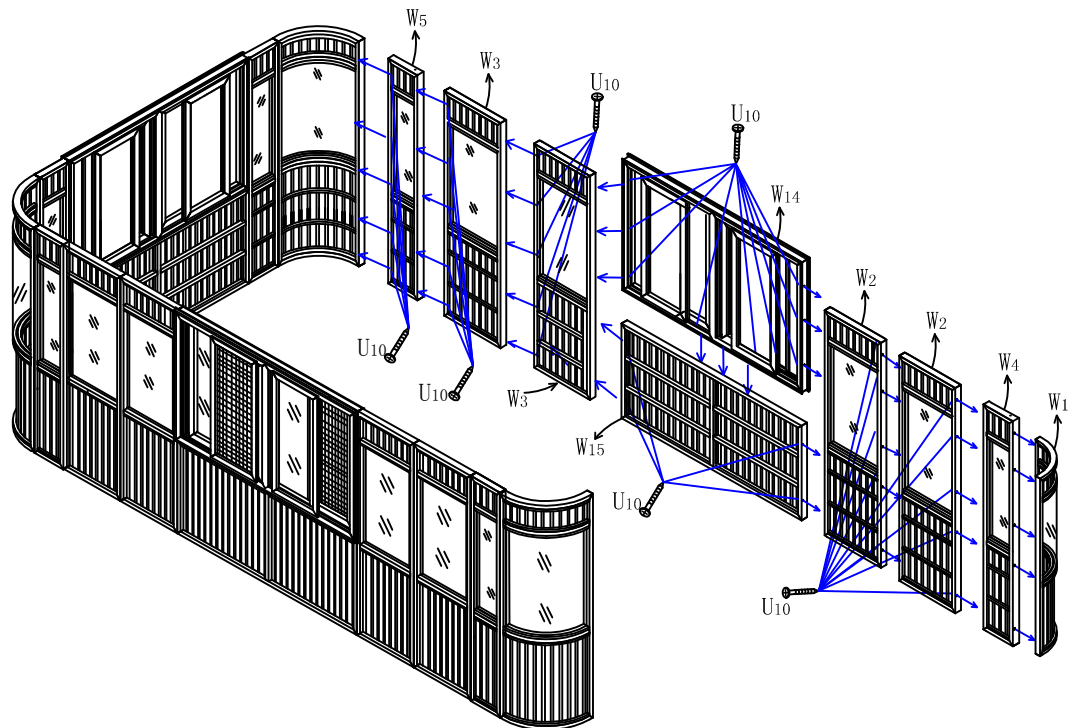


#7

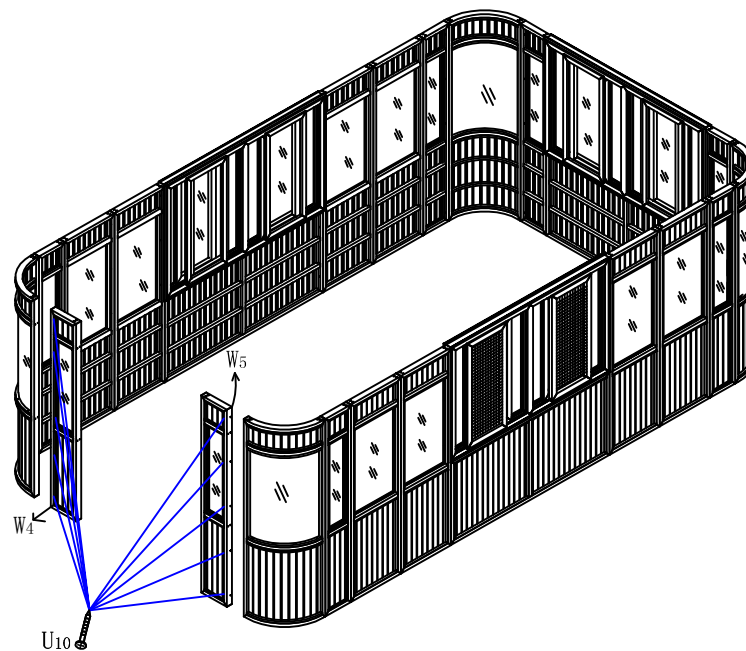


ASSEMBLY INSTRUCTION FOR 12'X 20' ULTRAWOOD GAZEBO

#8

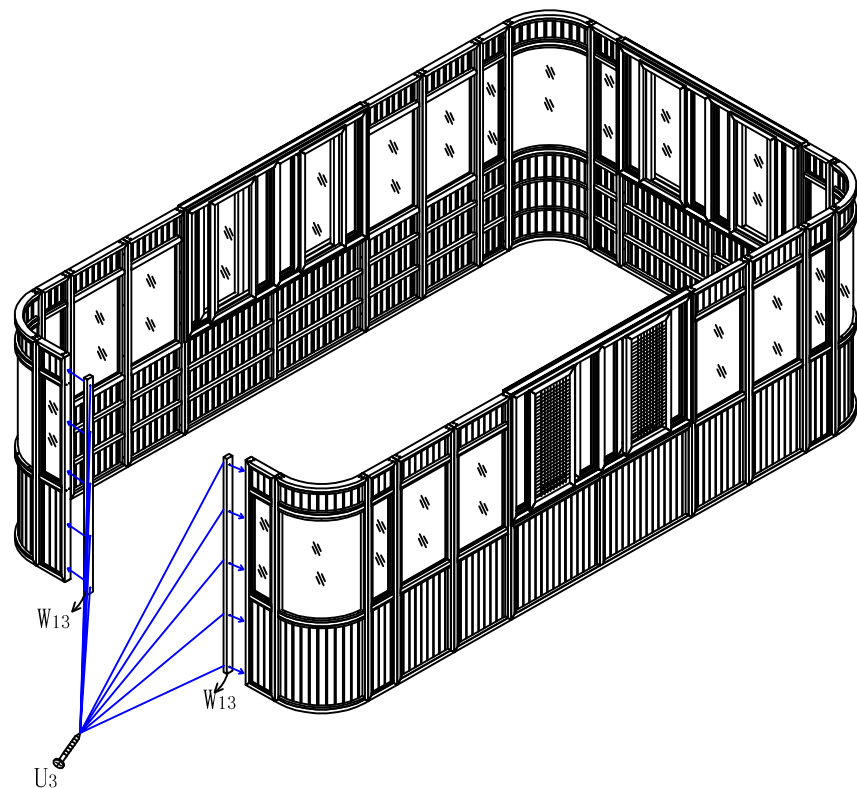


#9

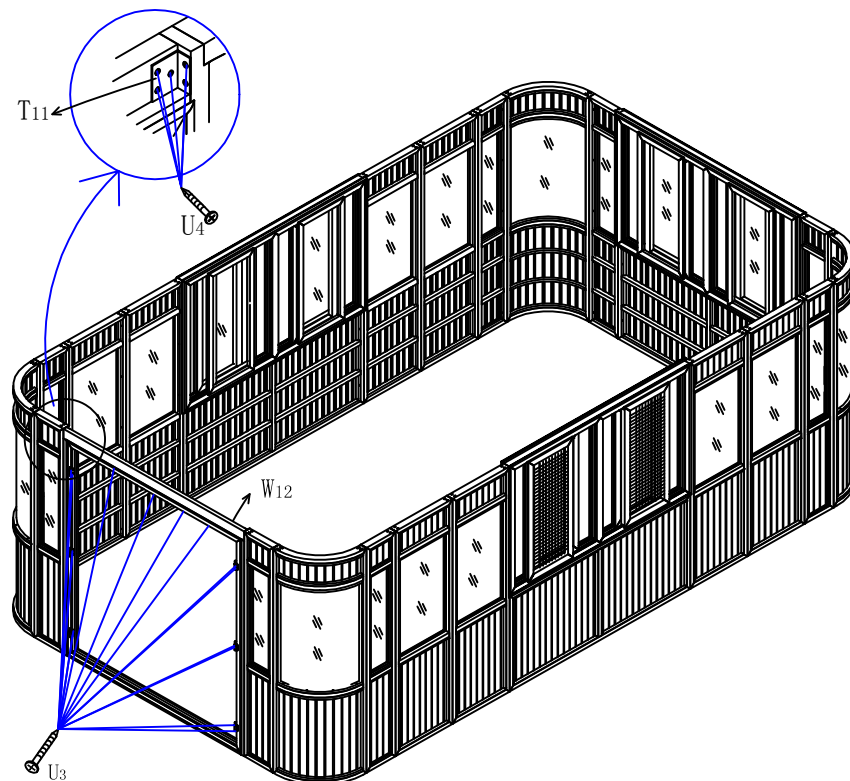


ASSEMBLY INSTRUCTION FOR 12'X20' ULTRAWOOD GAZEBO


#10

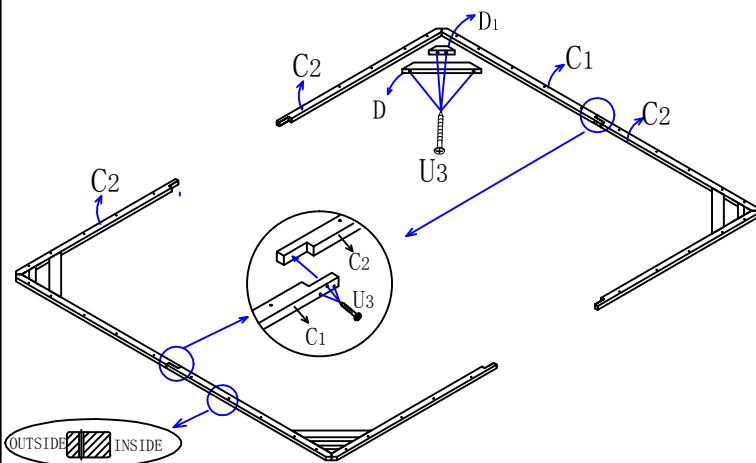


#11

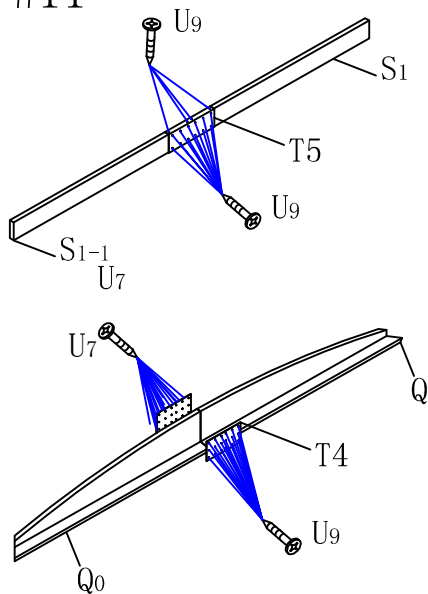


#12

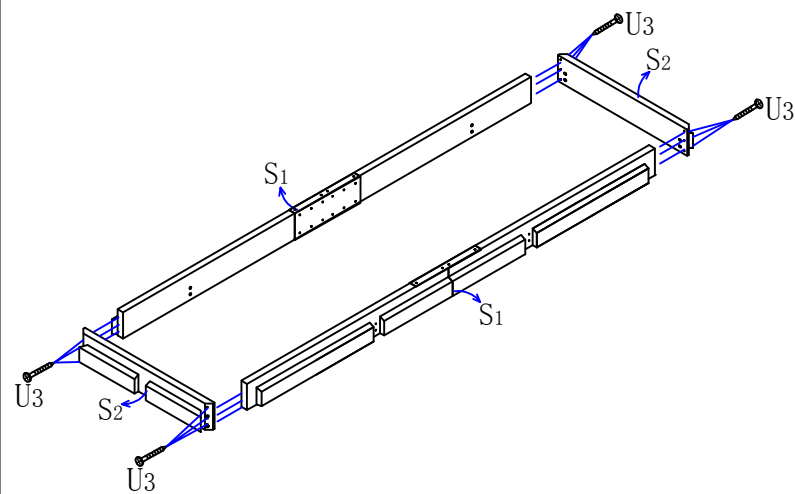

#13

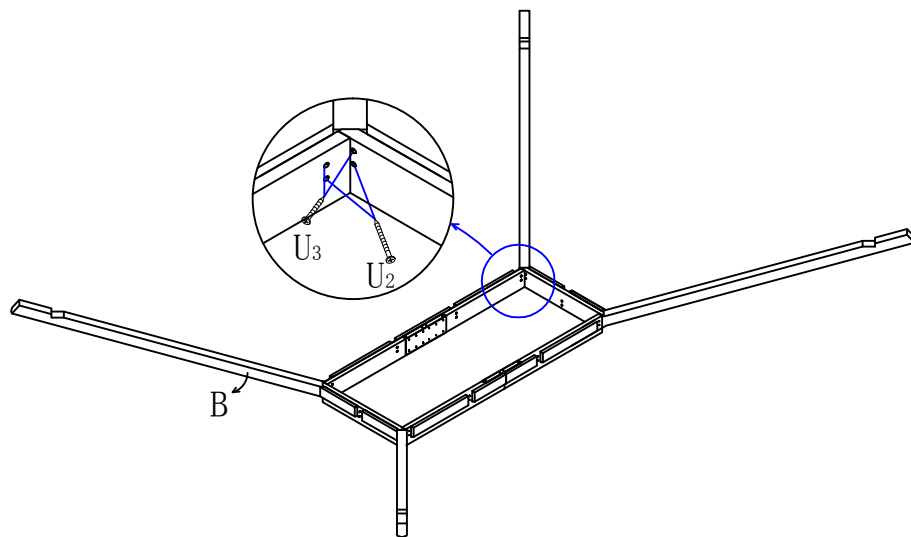


#14

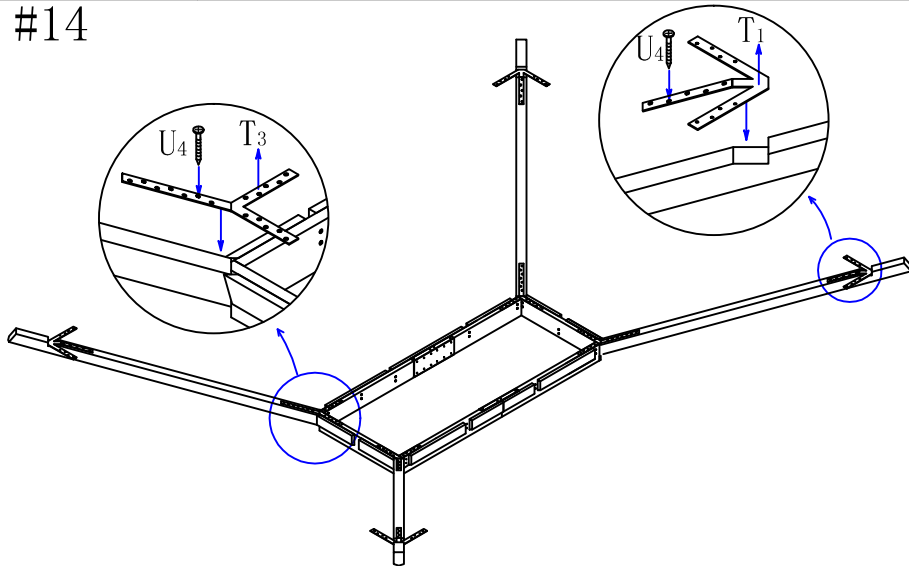


ASSEMBLY INSTRUCTION FOR 12'X20' ULTRAWOOD GAZEBO


#15

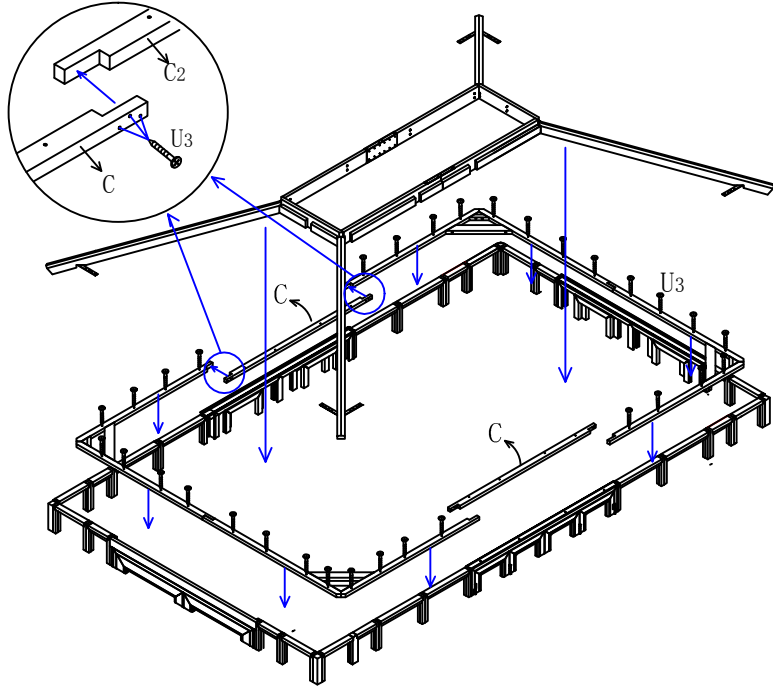


#16

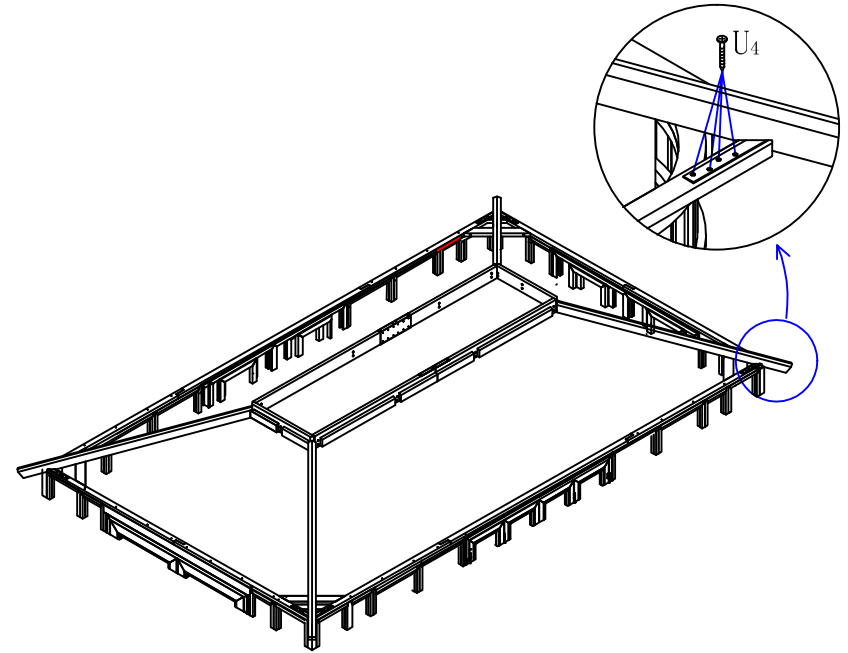

#17

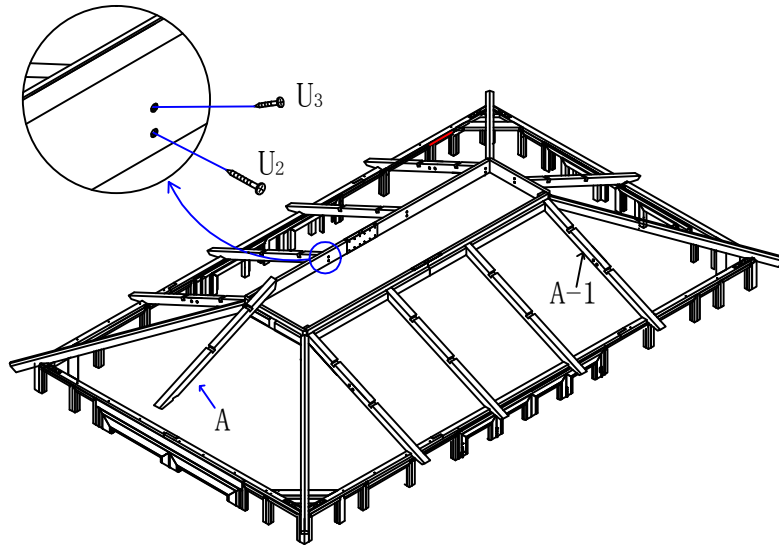


#18

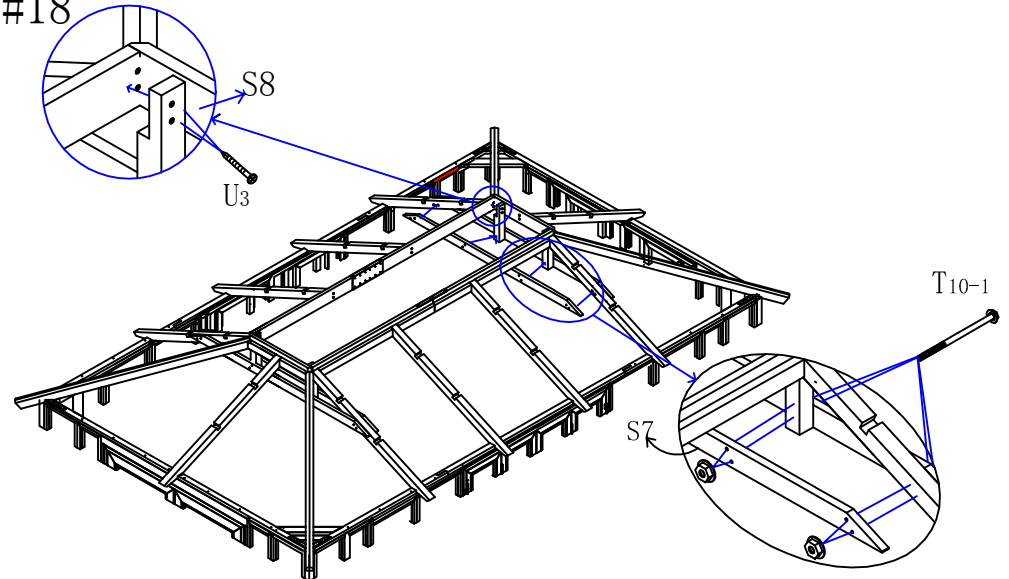


ASSEMBLY INSTRUCTION FOR 12'X20' ULTRAWOOD GAZEBO


#19

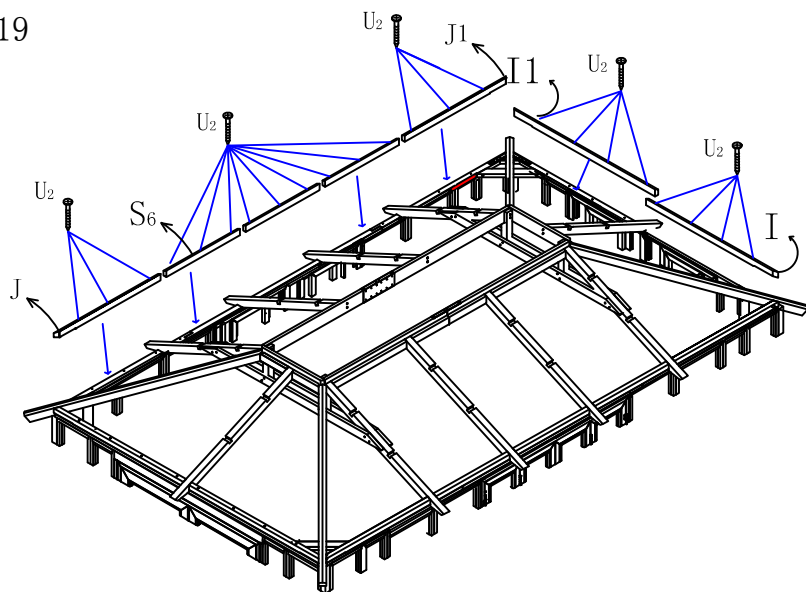


#20

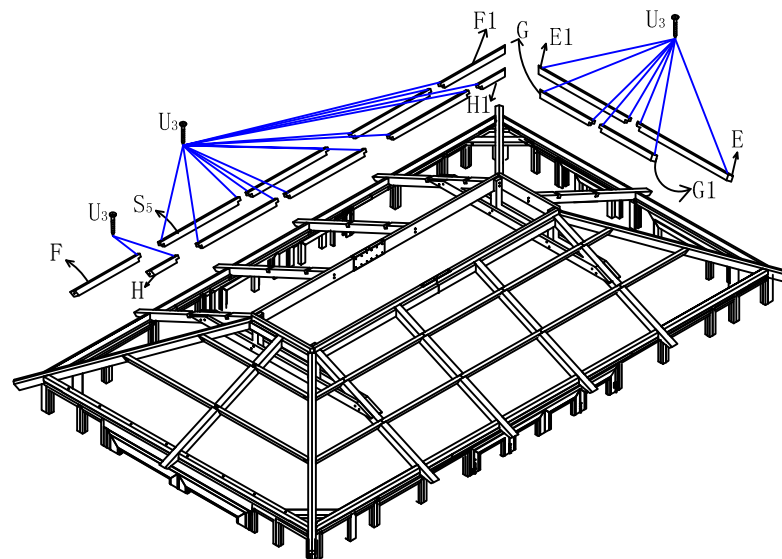

#21

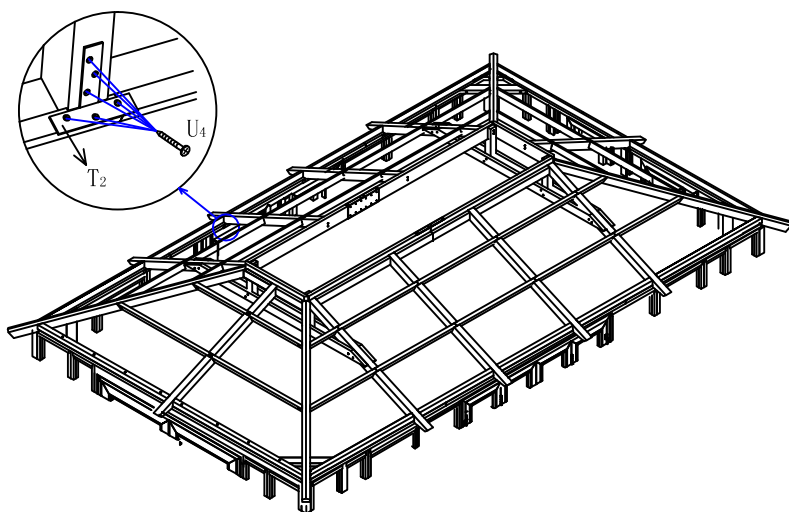


#22

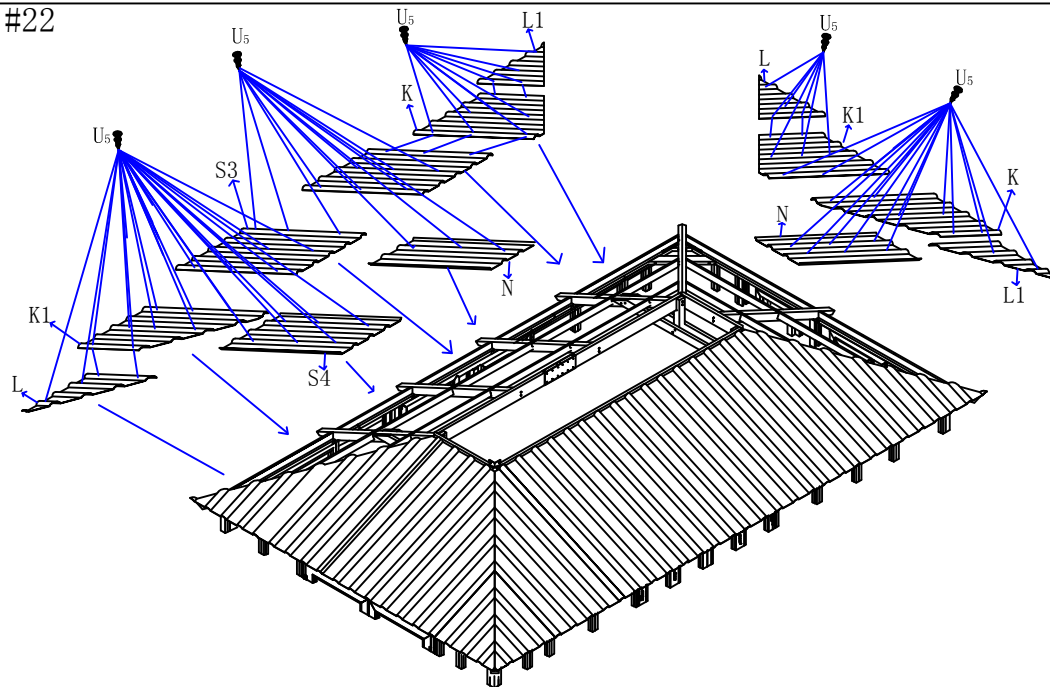


ASSEMBLY INSTRUCTION FOR 12'X20' ULTRAWOOD GAZEBO


#23

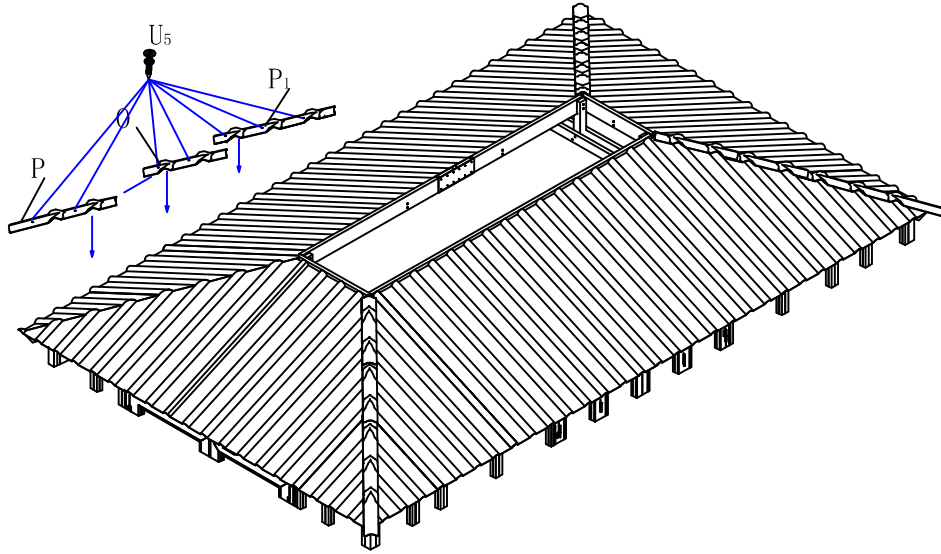


#24

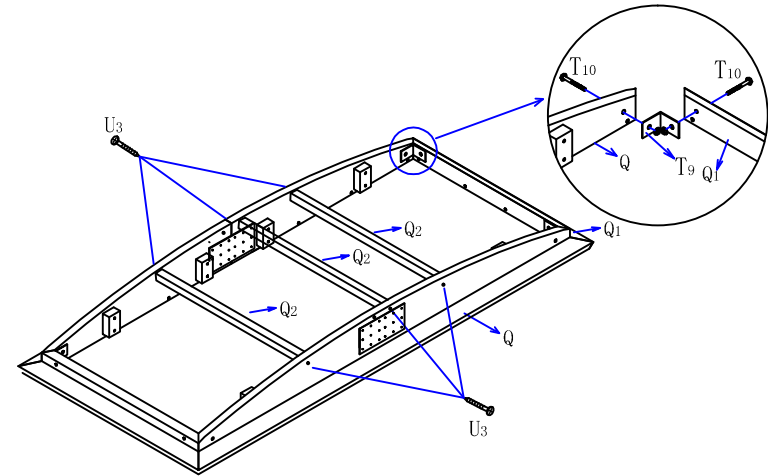

#25

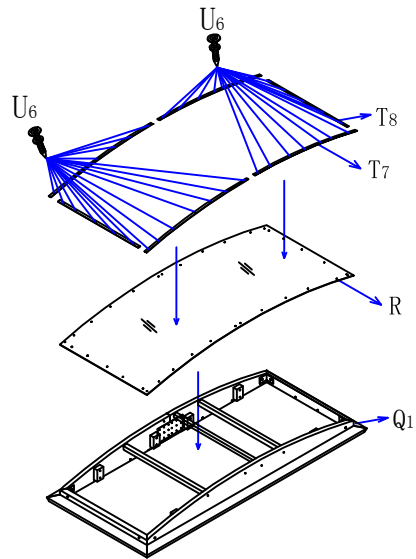


#26

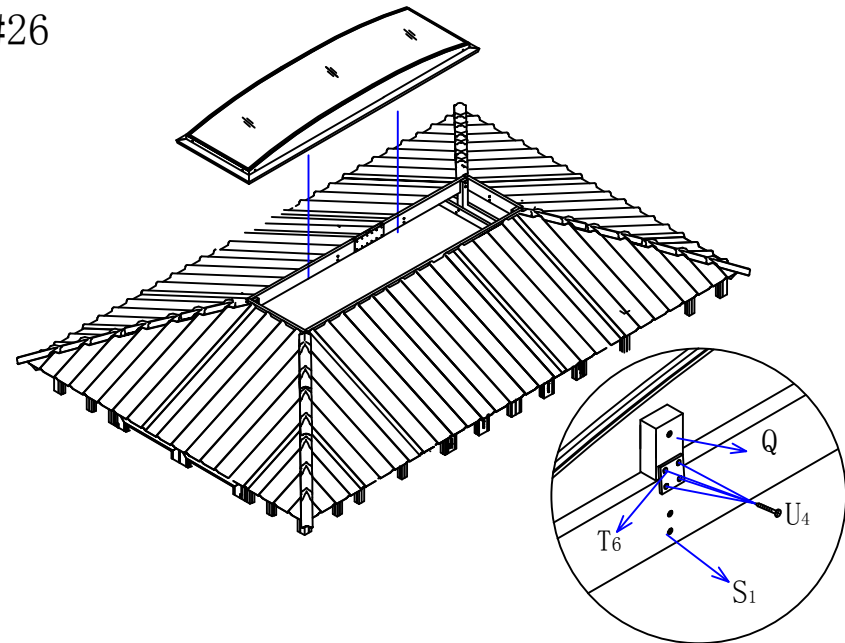

ASSEMBLY INSTRUCTION FOR 12' X 20' ULTRAWOOD GAZEBO

#27

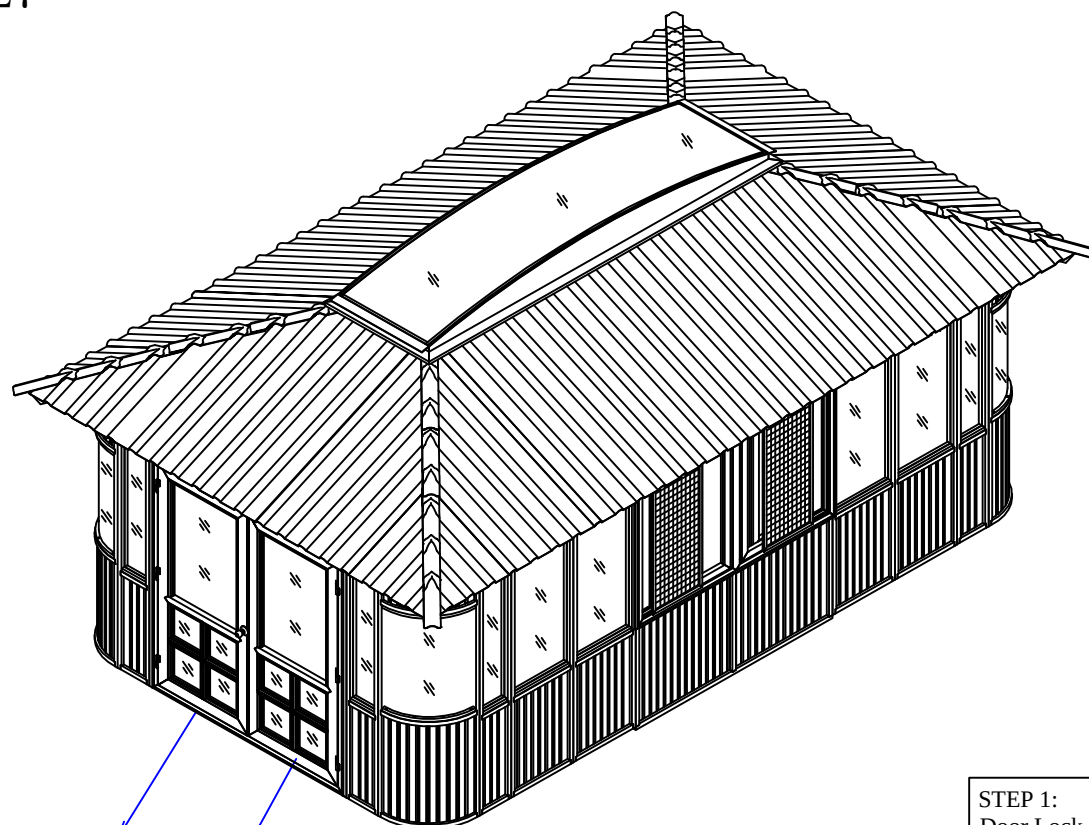



W10

W11




Install handle /lock assembly


Install shims for smooth operation.

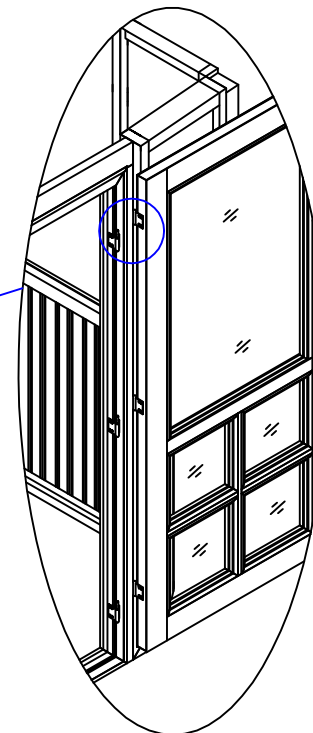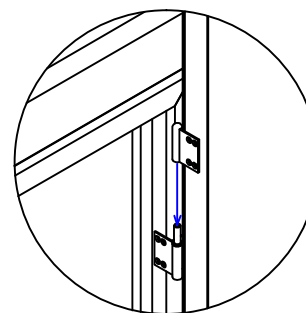


STEP 1:
Door Lock Installation.

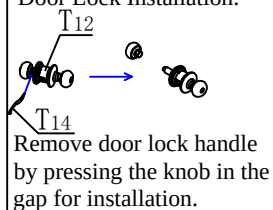


STEP 2:
Remove door lock cover ring and inner lock ring.




STEP 3: Door Lock Handle Installation.

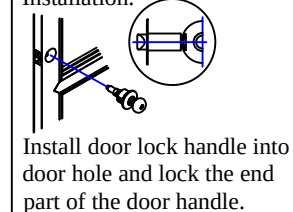


STEP 4: Install door lock inner ring with screw that shown.

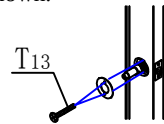

STEP 5: Door Lock Cover Ring Installation.

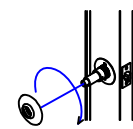

STEP 6: Door Lock Handle Installation.

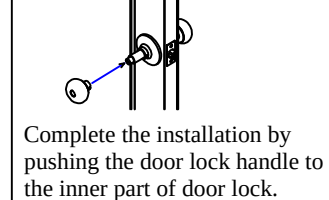

ASSEMBLY INSTRUCTION FOR 12'X20' ULTRAWOOD GAZEBO

#28

