


1220 Simple Pitched Sun Canopy

If you have any questions about the Simple Pitched Sun Canopy, please feel free to contact us.
Customer Service Email: Service@alaulm.com

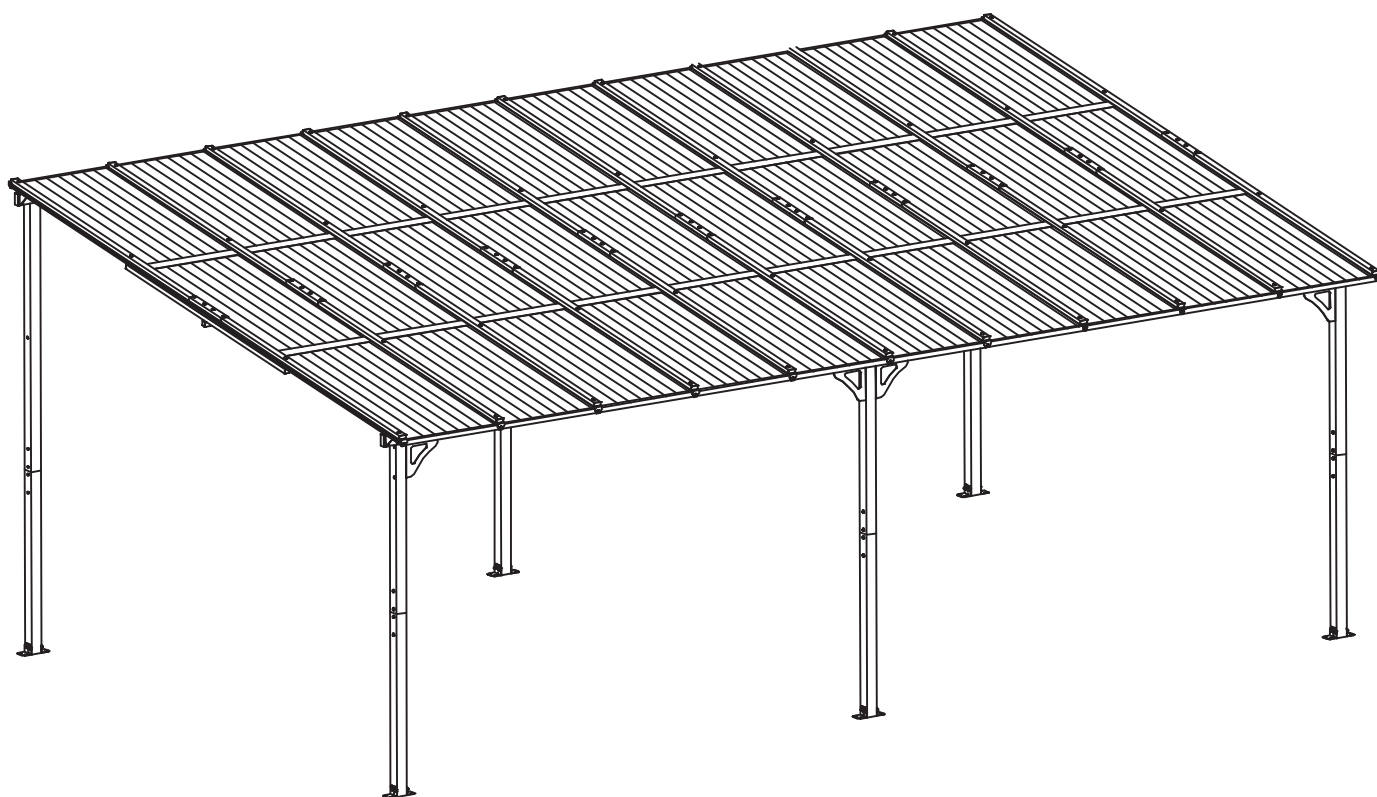

SKU:P25105-D1

IMPORTANT

PLEASE READ BEFORE YOU COMMENCE ASSEMBLY

Follow the guidelines in this user guide to ensure correct
assembly and care for this product.

Catalog

Notice 3

Specifications 5

Part List 6

Screw Set 7

Installation Steps 8

NOTICE



PLEASE RETAIN THESE INSTRUCTIONS FOR FUTURE REFERENCE.

Dear Customer,

Thank you for shopping with us!

This product consists of two boxes.

When you receive the product, please make sure that all the parts are intact.

Then please browse the entire installation manual before assembling.

If any problem occurs unsatisfactorily as follows:

A.The outer box is damaged

B.The product is damaged / bent / cracked while you open the box

C.The parts / accessories / assembly tools are missing

D.The product is hard to assemble

E. The instructions are not clear and can not be referred

F.The product has functional problems

G.Other aspects that you are not satisfied with

H.Product stability has been tested: the product can withstand winds of approximately 40-60mph and a static pressure test of 6.5 lbs per square foot after correct installation and fixation(Snow accumulation of about 7 inches in thickness will not pose a threat to the product.)


Please feel free to contact us for help. Our after-sales team service

(**Service@alaulm.com**) will reply within 24 hours



and will do our best to resolve the problem for you.







SPECIFICATIONS





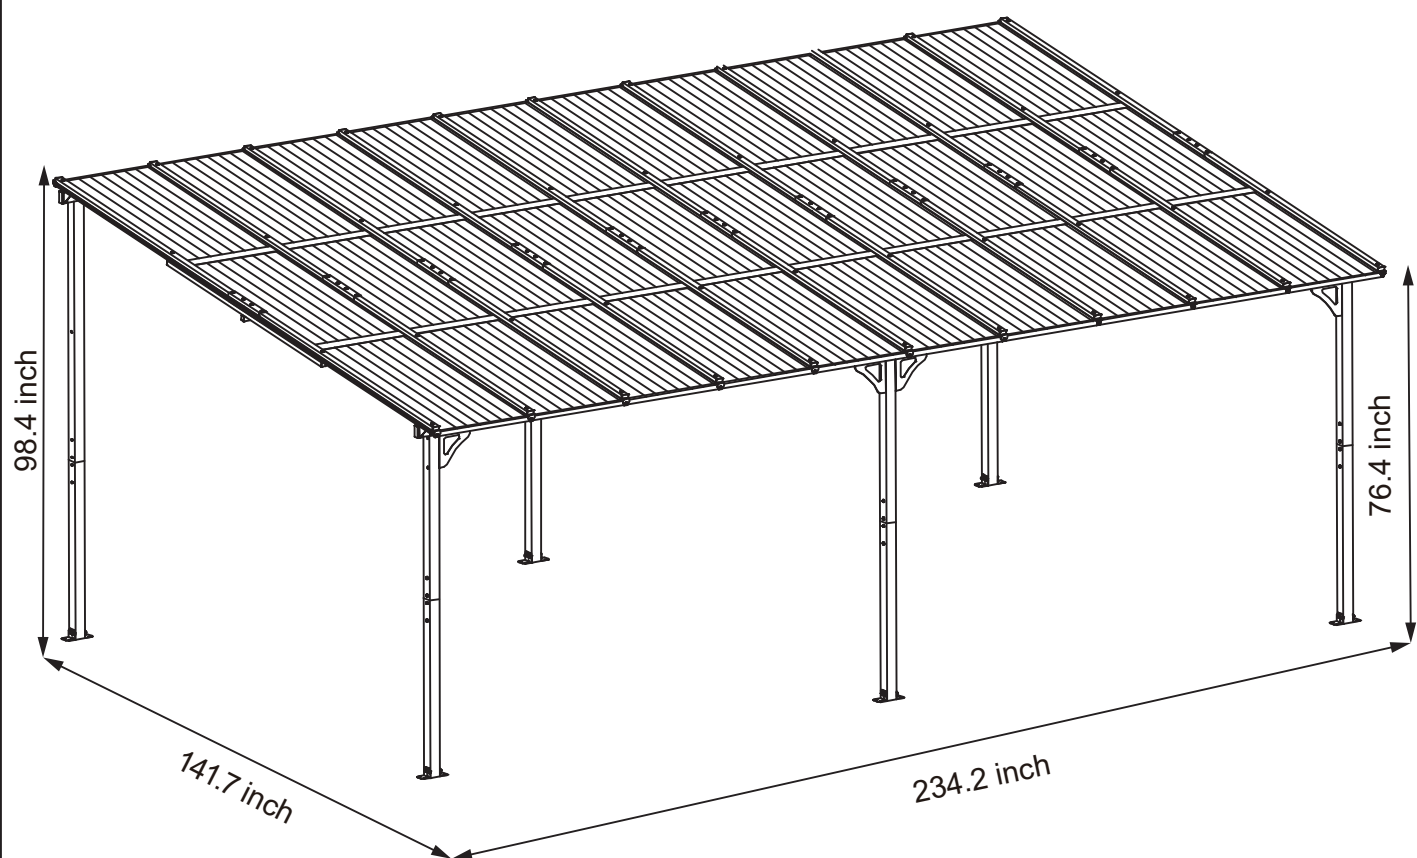


PART LIST


Box A			
NO.	PART.		Qty.
A		Top Back Leg	1
B		Top Front Leg	1
D		Side Beam	4
E3		Board Arm	22
H1		Arm Connection	8


Box C			
NO.	PART.		Qty.
B		Top Front Leg	2
K3		UV Protected Board	30
L		Leg Connection	6
N		Back Connection	4
N1		Middle Beam Connection	2
S		Arm Up Connection	11
T		Arm Down Connection	11

PART LIST



Box B					
NO.	PART.	Qty.	NO.	PART.	Qty.
A	 Top Back Leg	2	I2	 Arm Hold Tube (Short)	1
C	 Bottom Leg	6	J	 Arm Hold Tube Connection	4
D4	 Middle Beam	4	M	 Wall & Floor Connection	14
F	 Board Protection	20	O	 Right Beam Hold	2
G	 Middle Board Connection	20	P	 Left Beam Hold	2
H1	 Arm Connection	3	Q	 Arm & Beam Connection	22
I	 Arm Hold Tube (Side)	2	R	 Arm Protection	22
I1	 Arm Hold Tube (Middle)	2	Z4	 Middle Wall Connection	2



SCREW SET

NO.	PART.	Qty.
U	 Beam Plug	4
V	 Hold Plug	24
W1	 Bolt M6*15	236
W2	 Bolt M6*70	12
W4	 Bolt M6*35	33
W5	 Bolt M6*50	44



NO.	PART.	Qty.
X1	 Beam Plug	12
X2	 Hold Plug	44
Y	 Bolt M6*15	24
Z	 Allen Wrench	1
Z1	 Waterproof Washer	56
Z5	 Expansion Bolts	8


STEP1

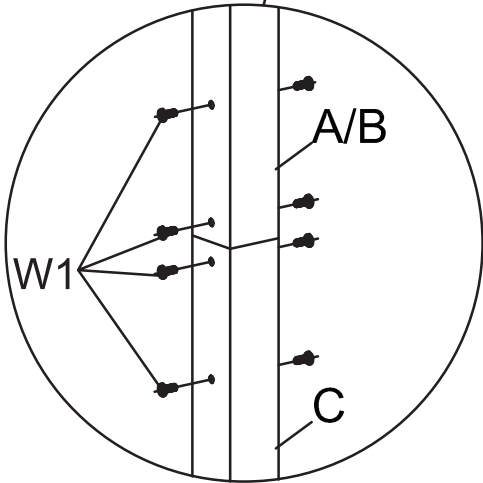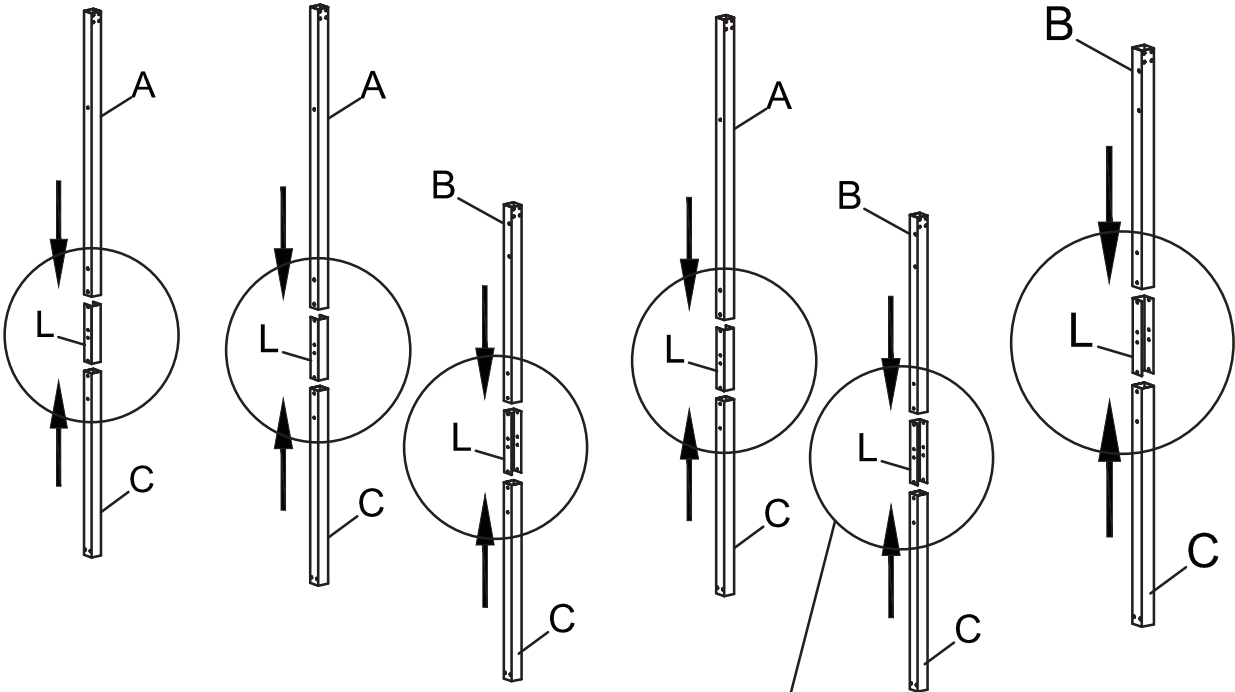


A		X3
B		X3
C		X6
L		X6
W1		X48

STEP2

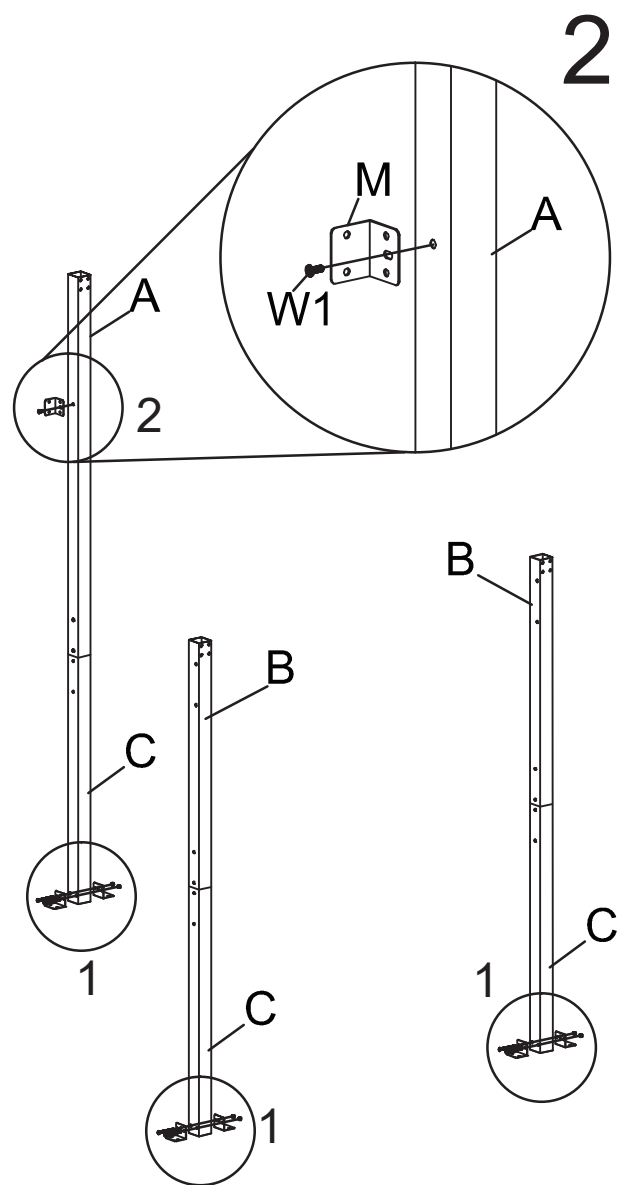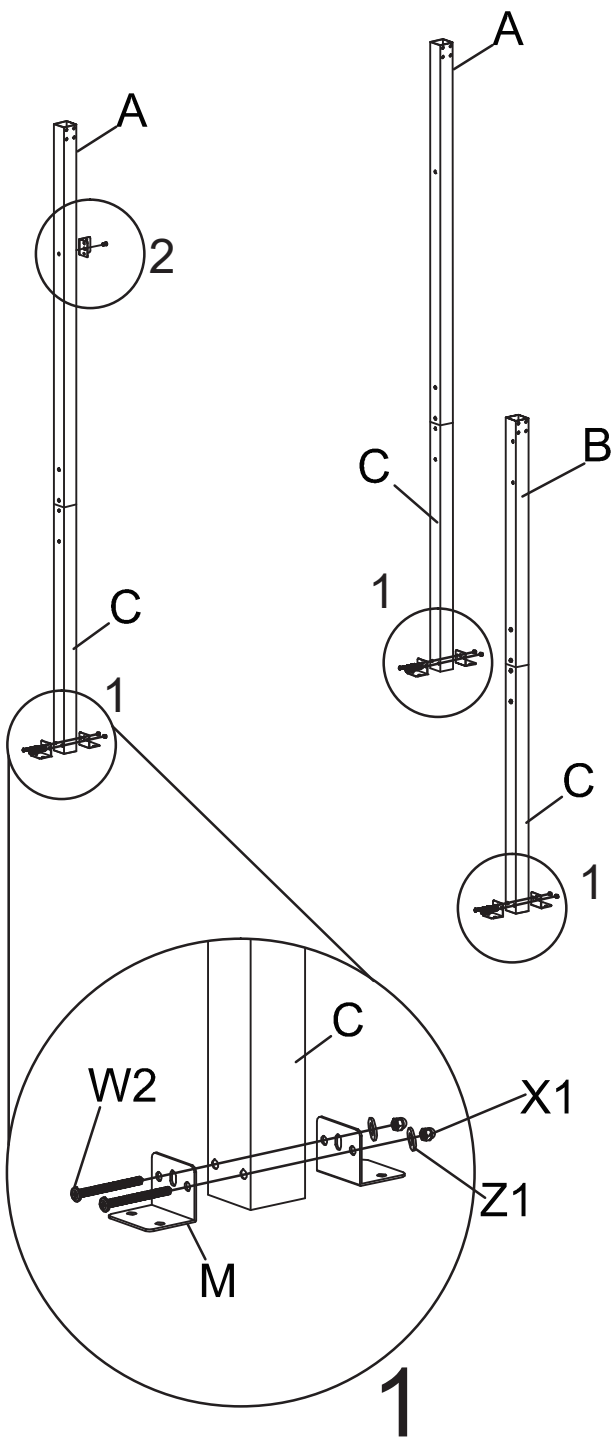



M		X14
W2		X12
W1		X2
Z1		X12
X1		X12

STEP3

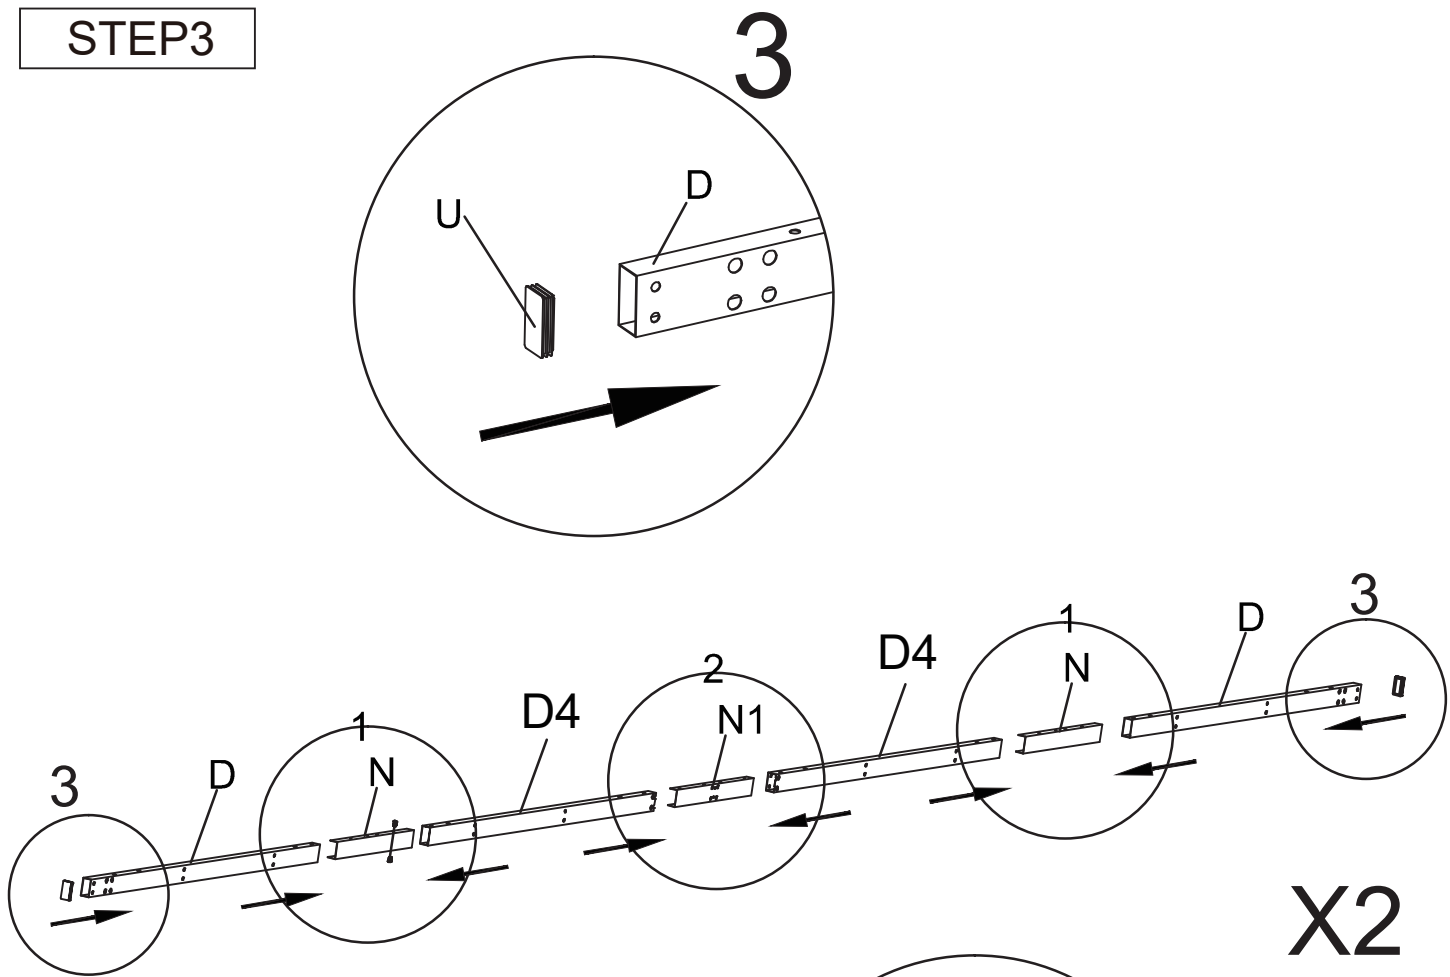

X2

D		X4
D4		X4
N		X4
N1		X2
U		X4
W1		X48

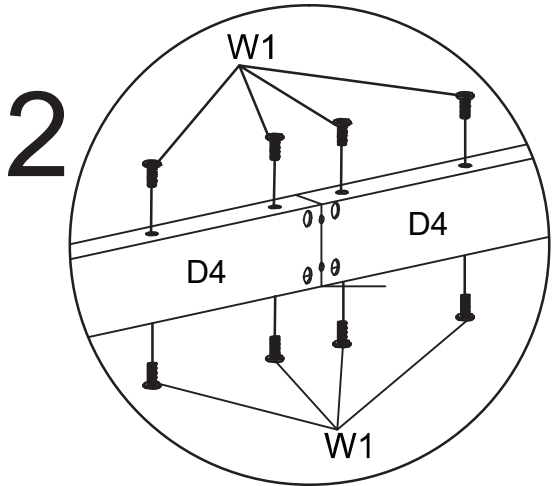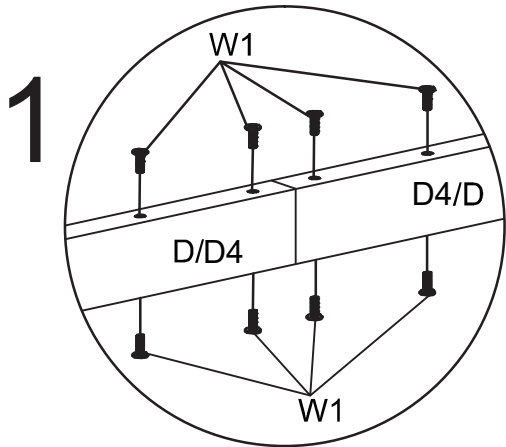


STEP4

Y




X24

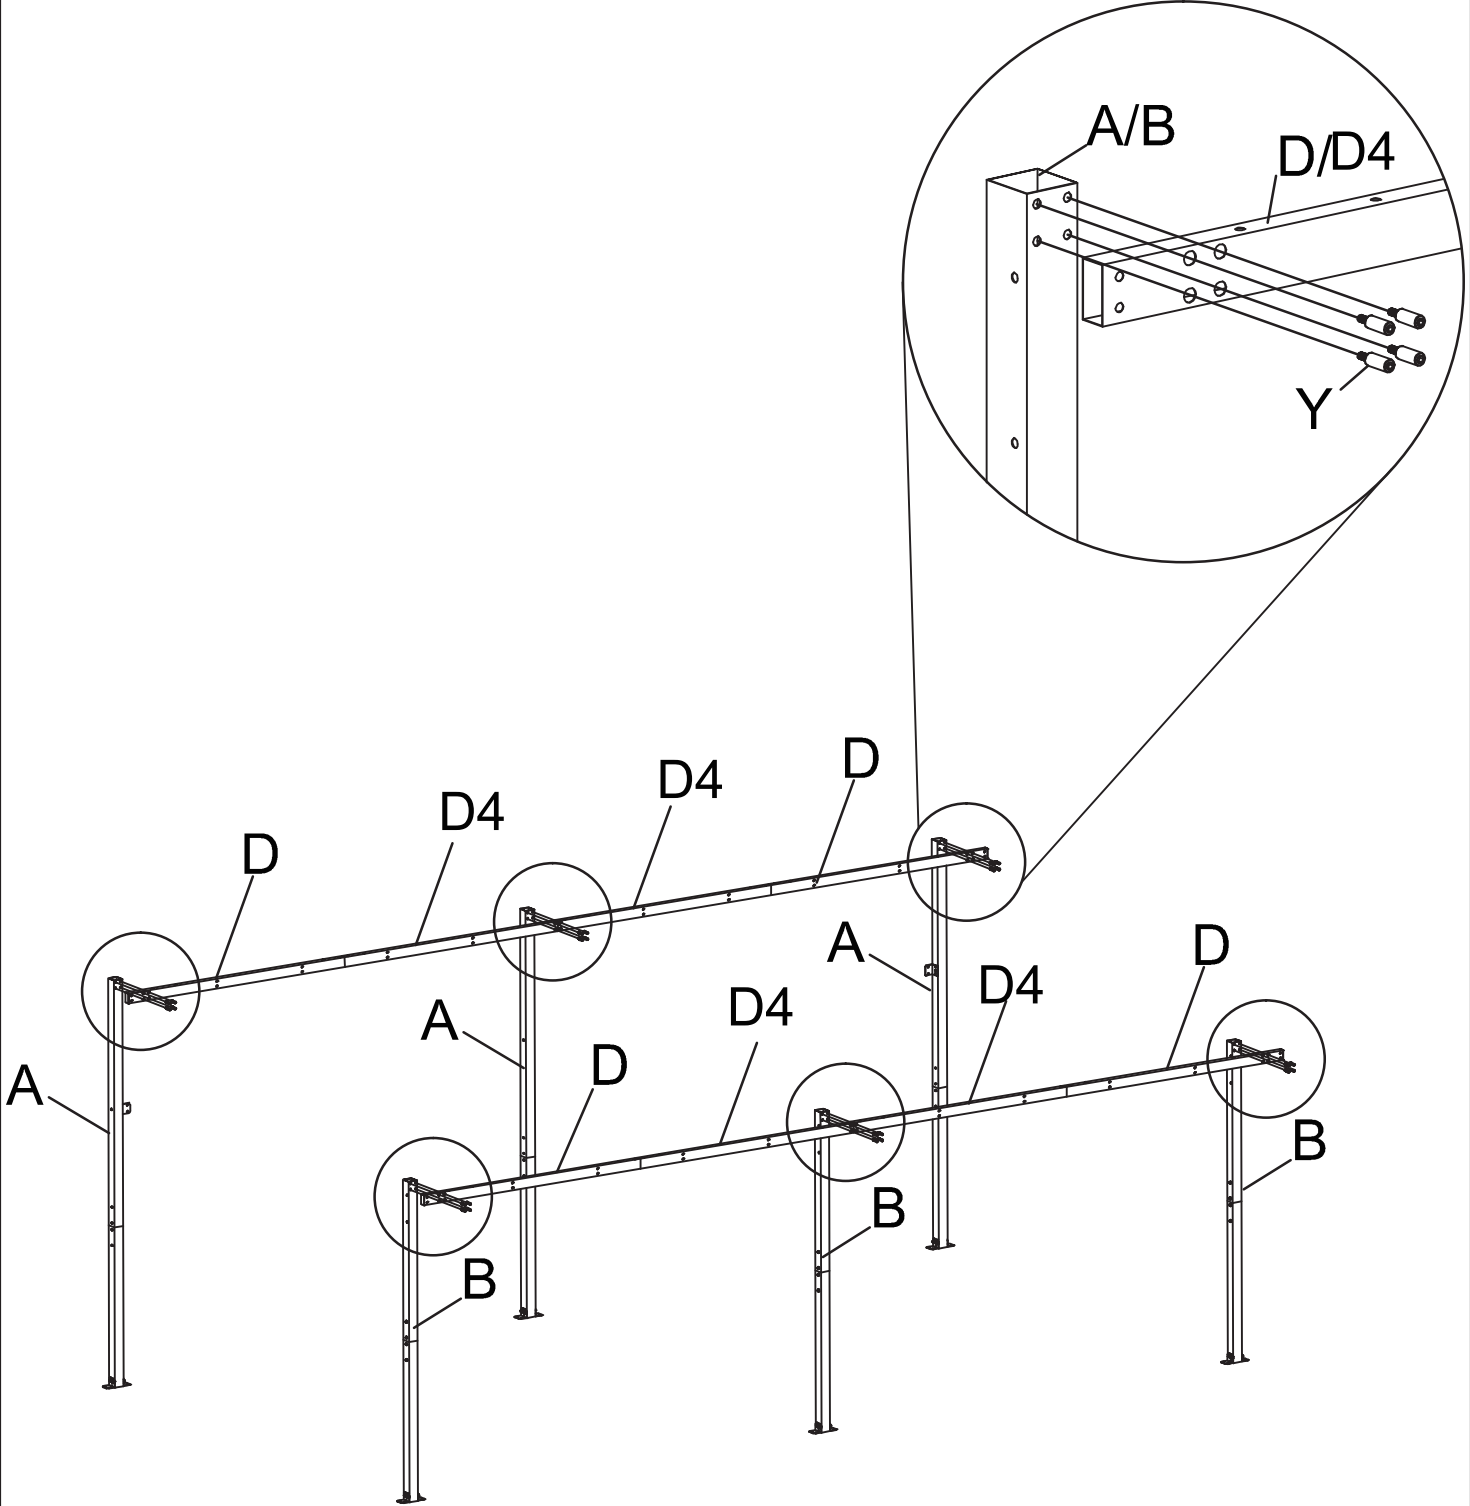


STEP5

O		X2
P		X2
W1		X12
Z4		X2


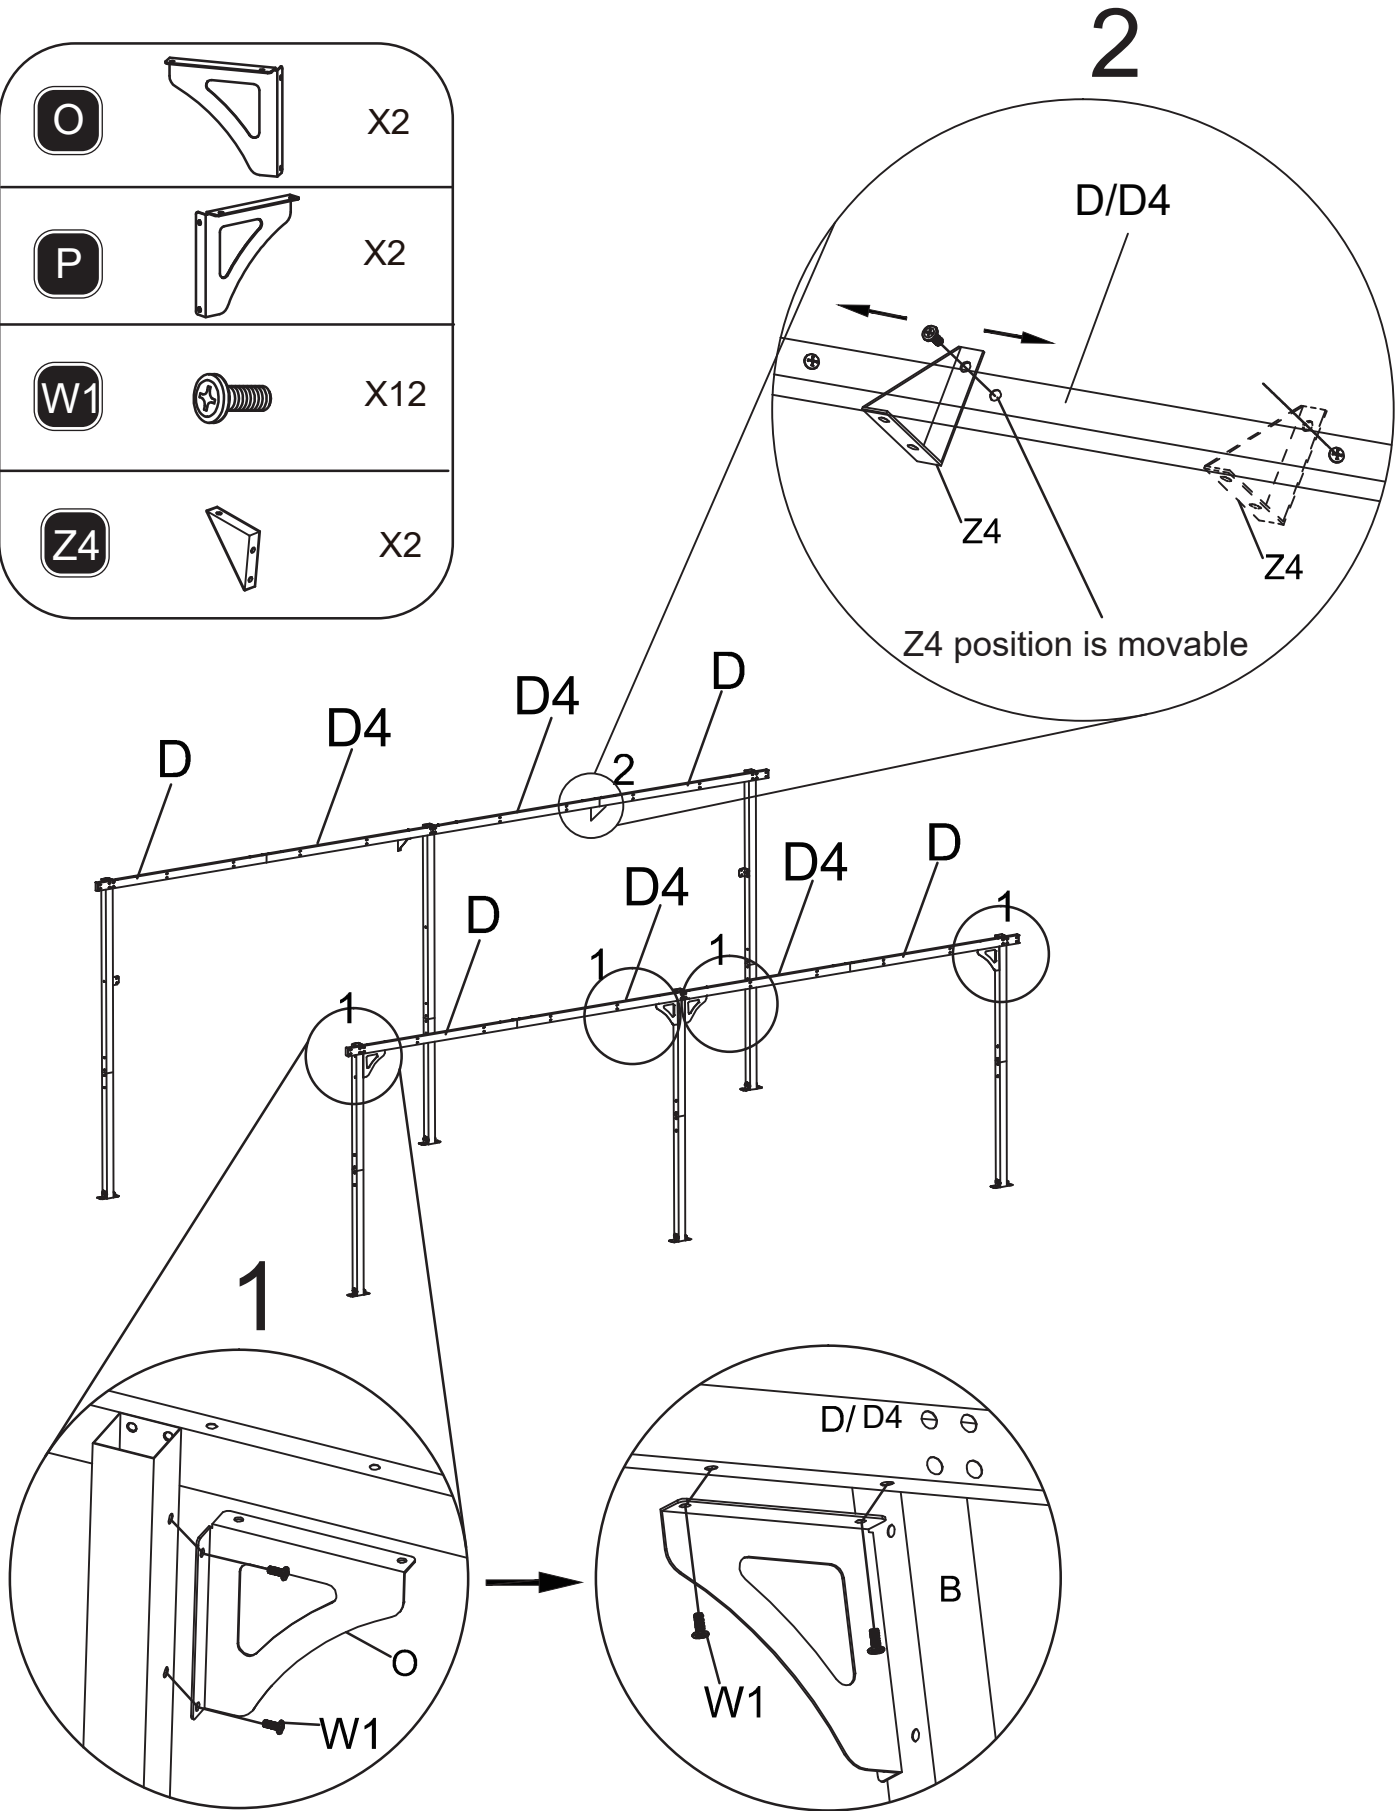


STEP6

S		X11
T		X11
W5		X 44
E3		X22
Z1		X44
X2		X44

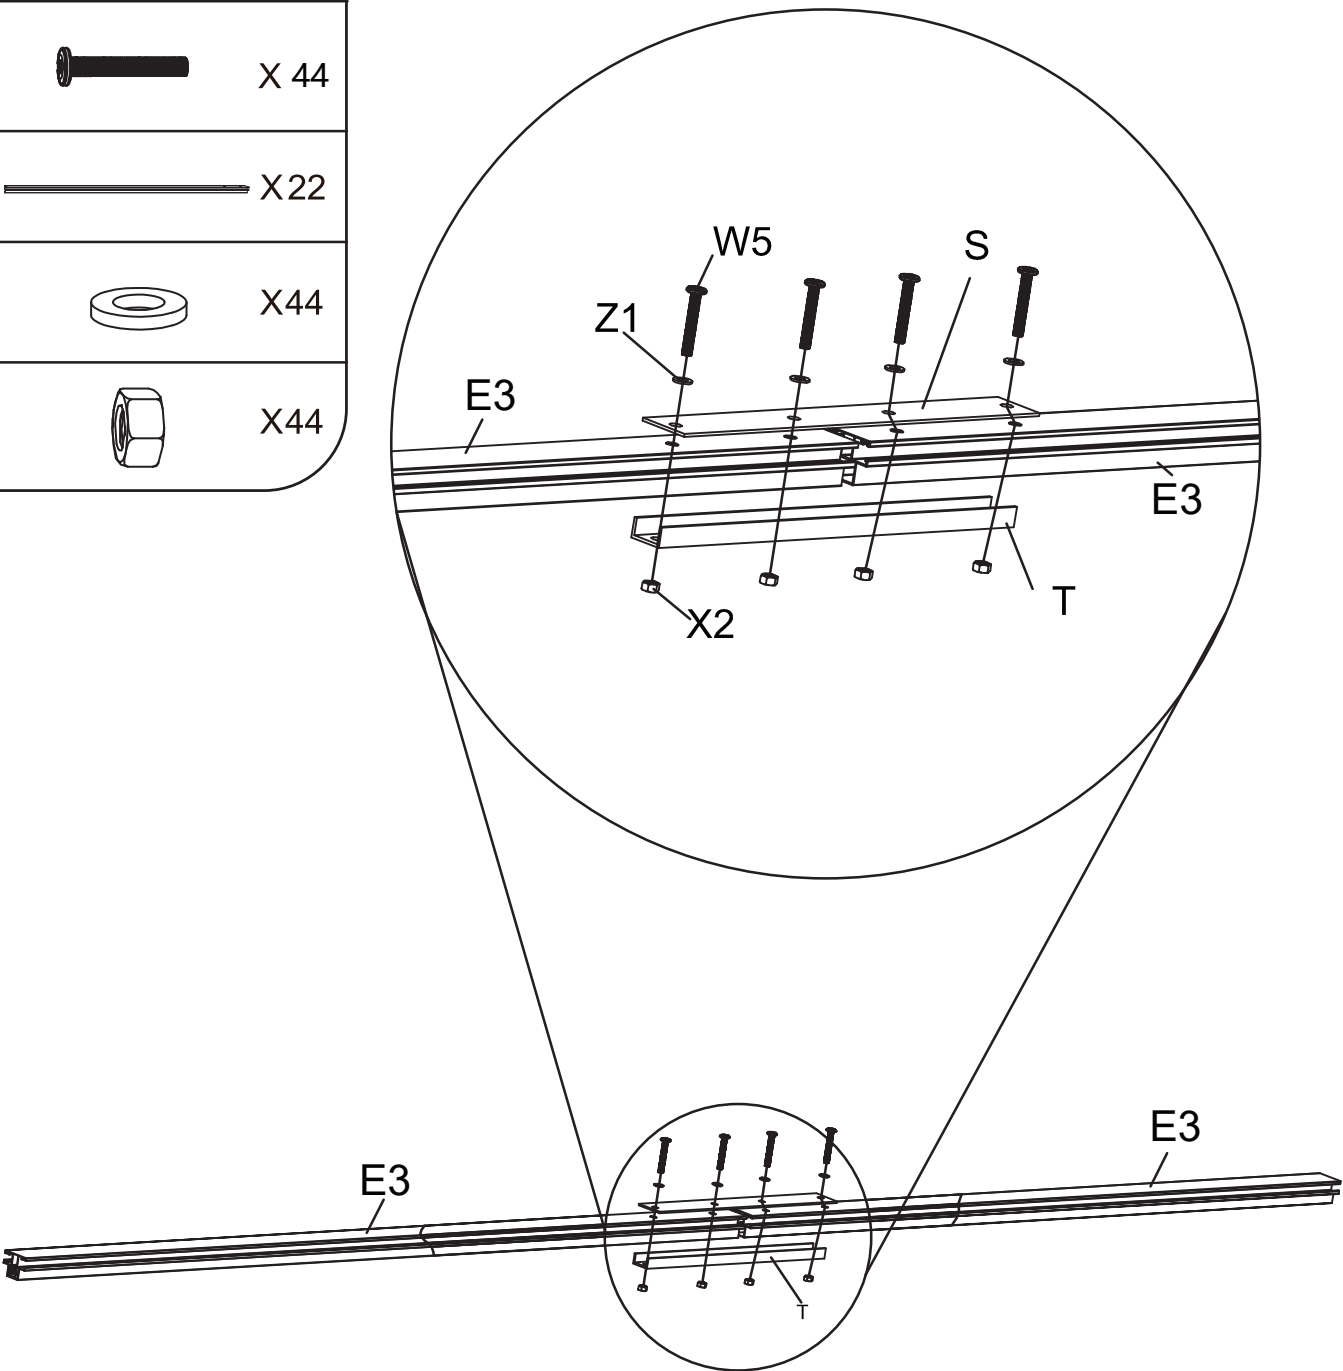

STEP7

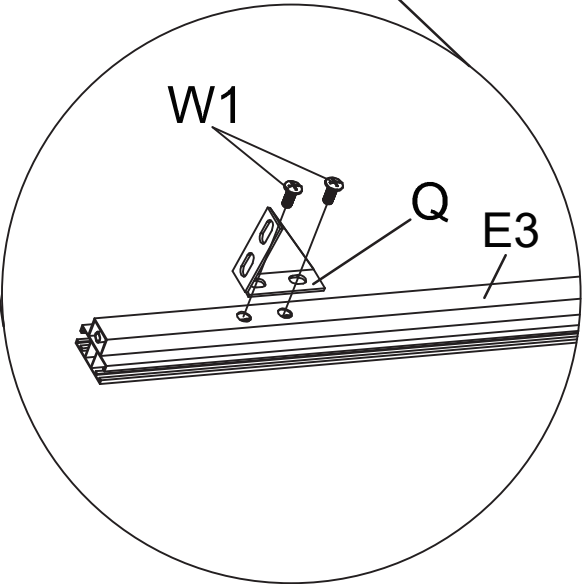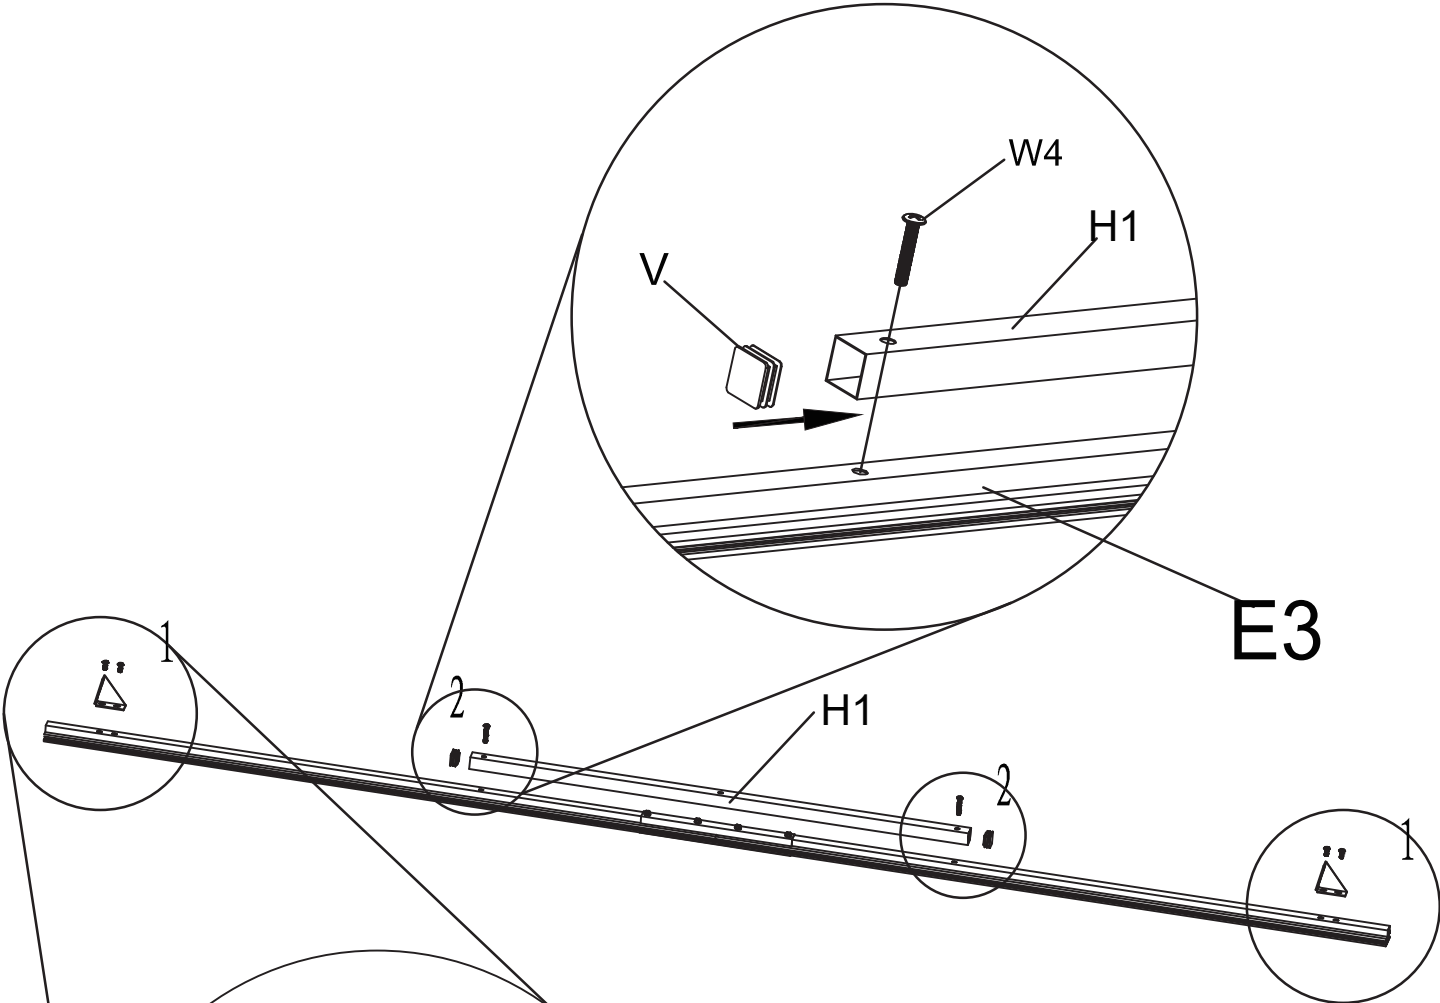



Q		X22
V		X22
W1		X44
W4		X22
H1		X11

STEP8


W1






X44

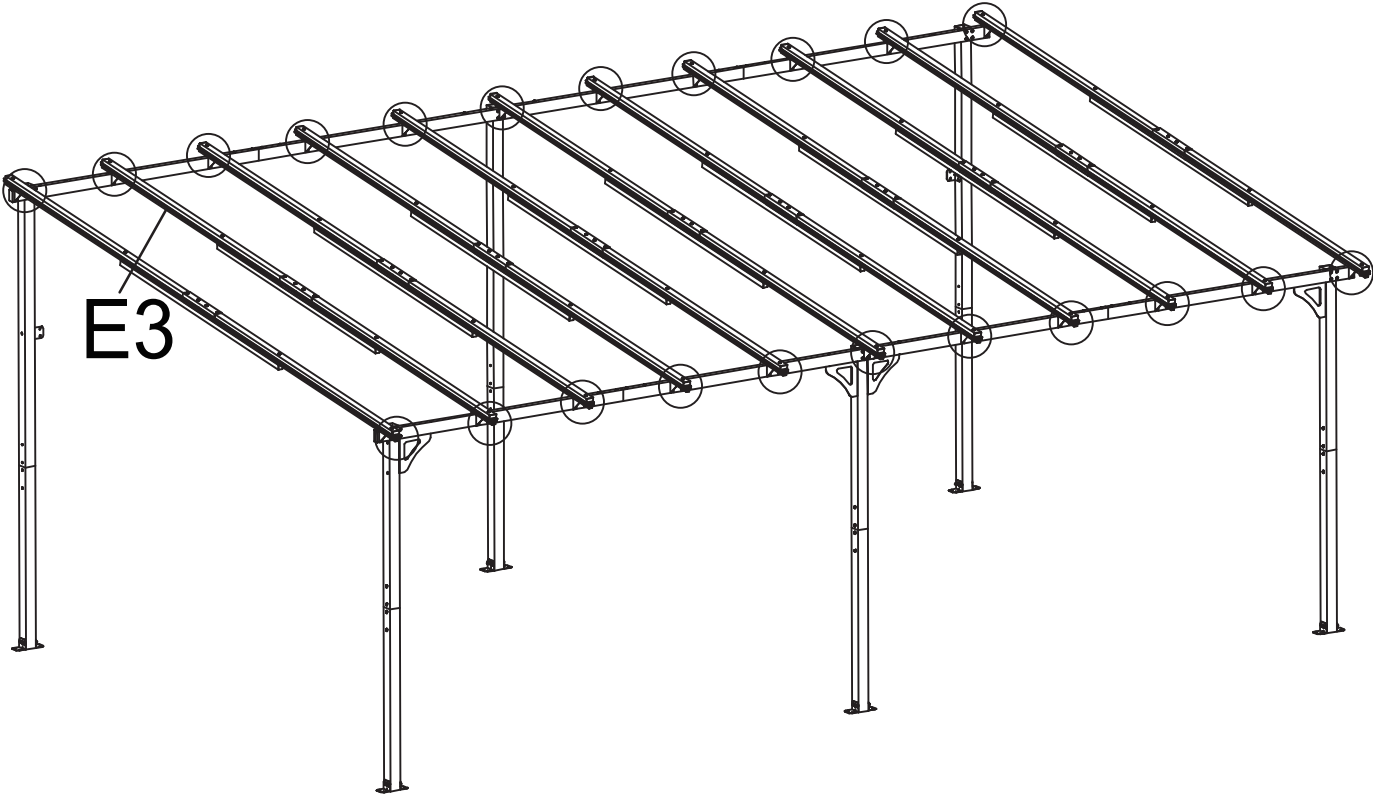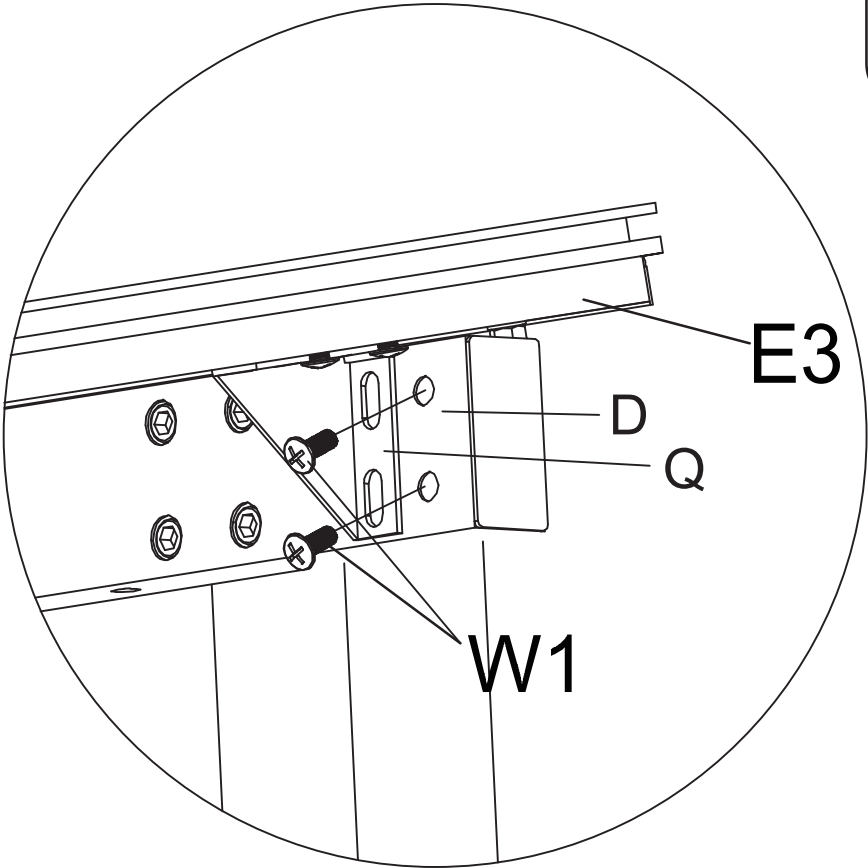

STEP9

I		X2
J		X4
W1		X16
V		X2
I1		X2
I2		X1

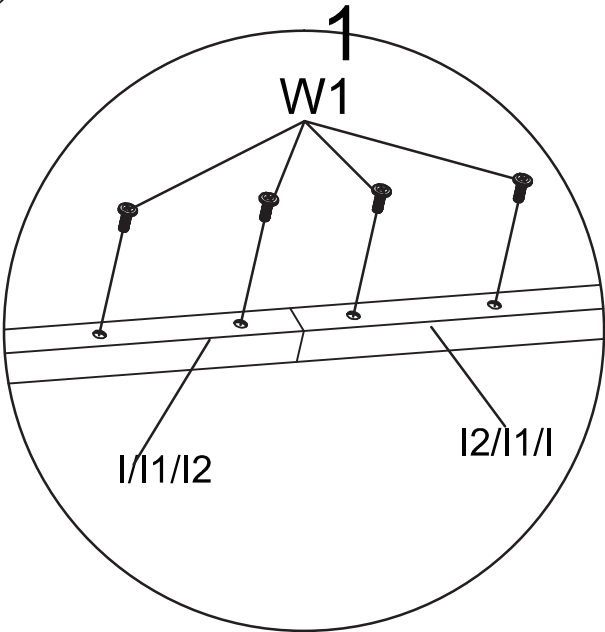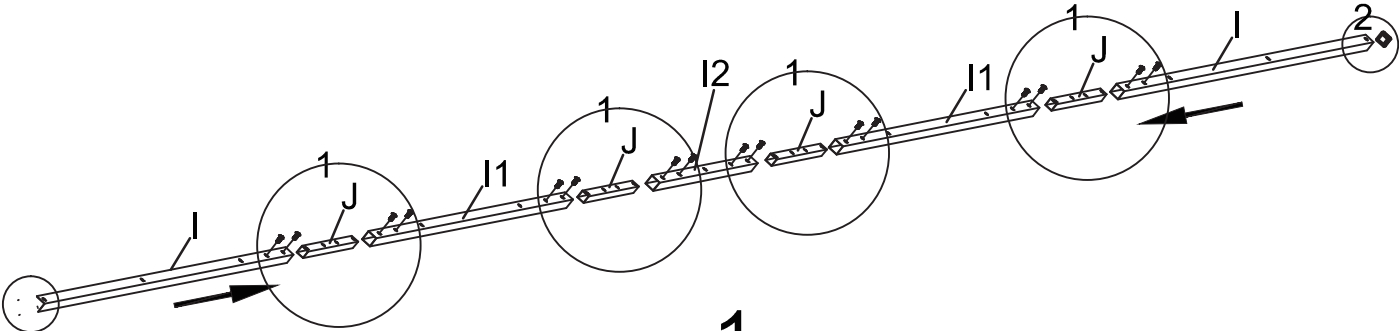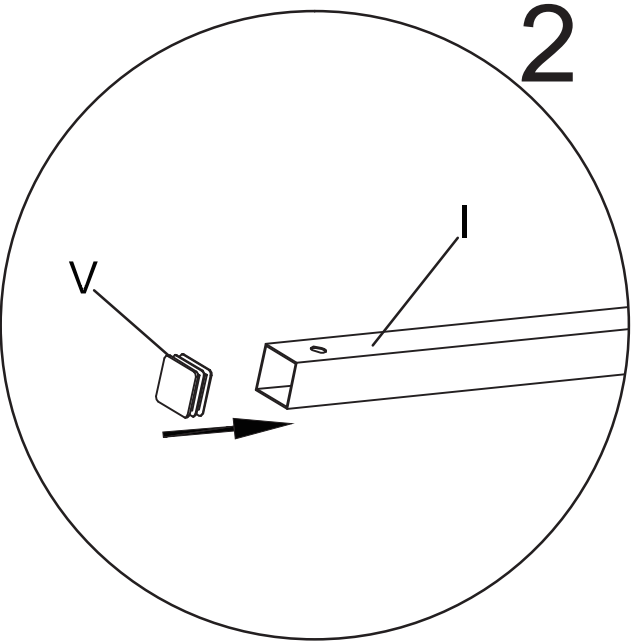


STEP10

W4




X11


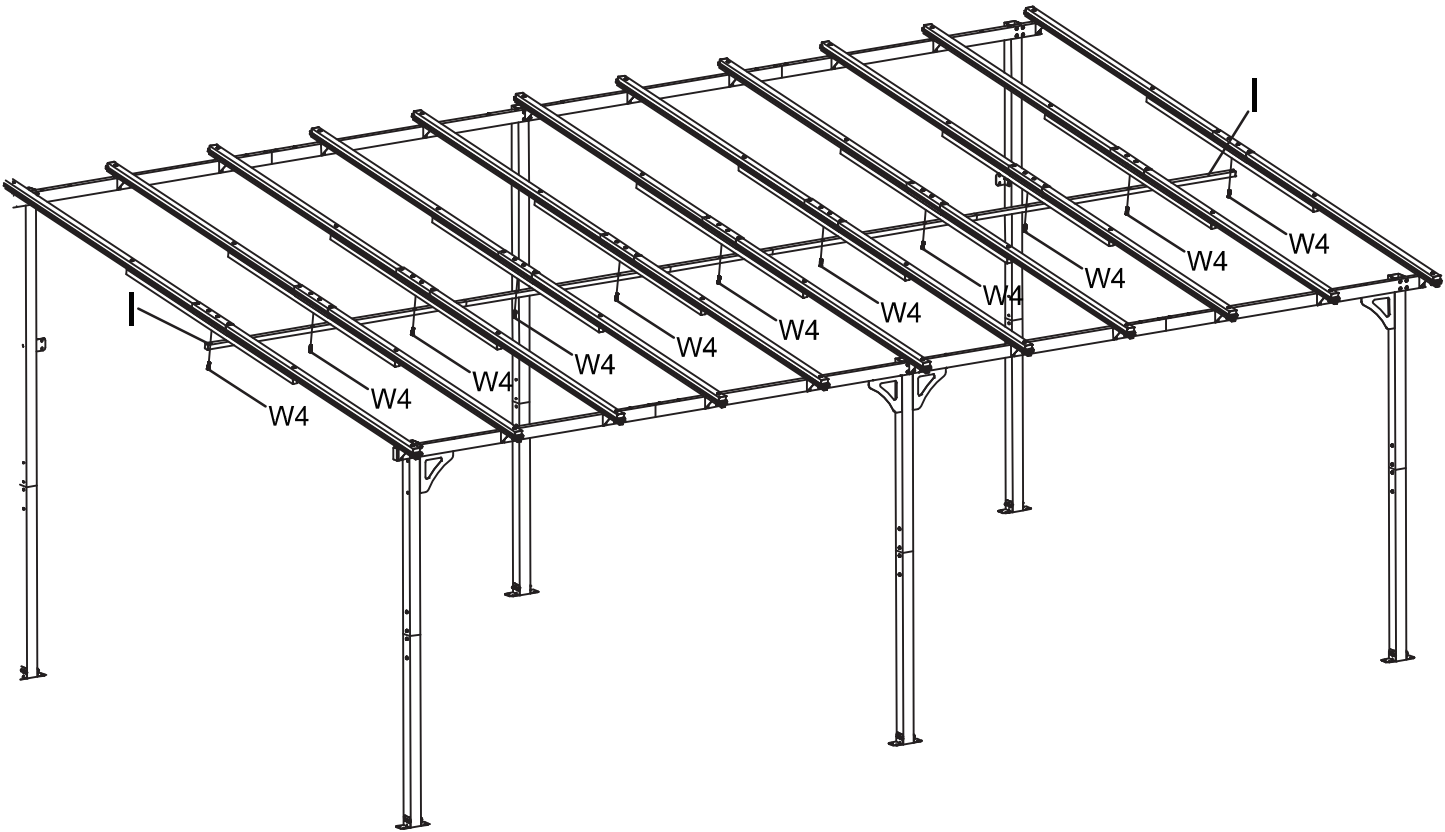


STEP11

K3






X10

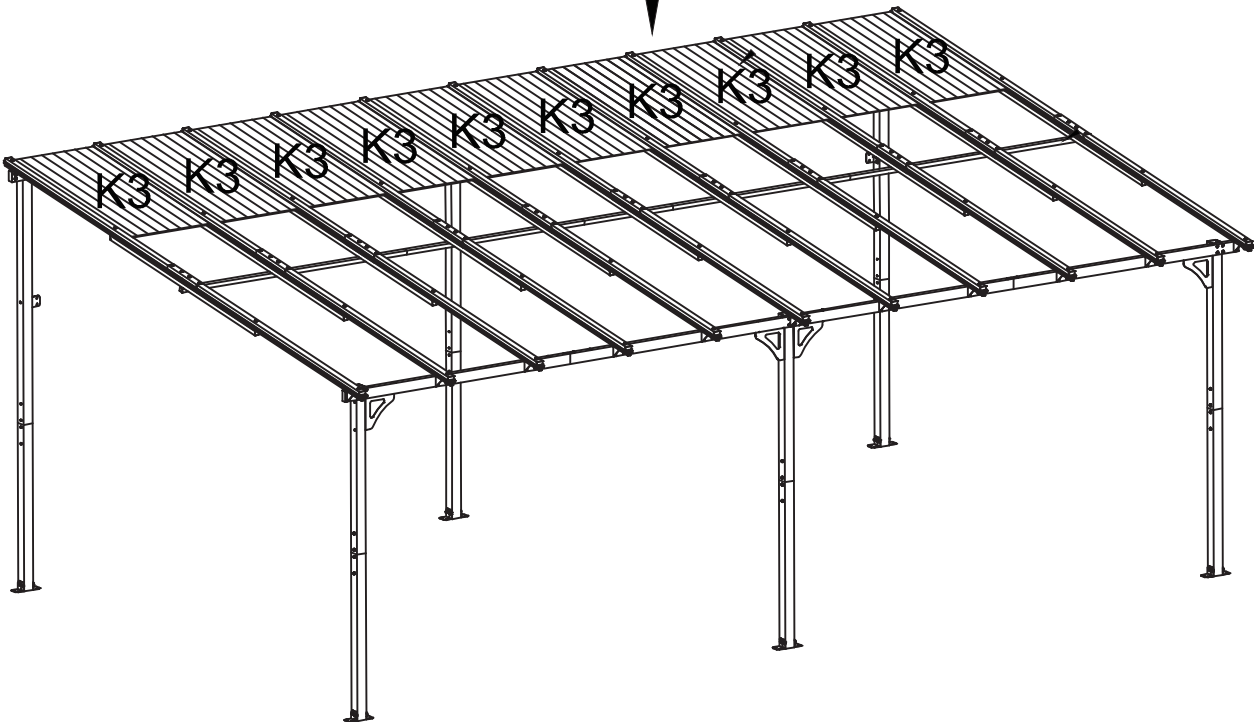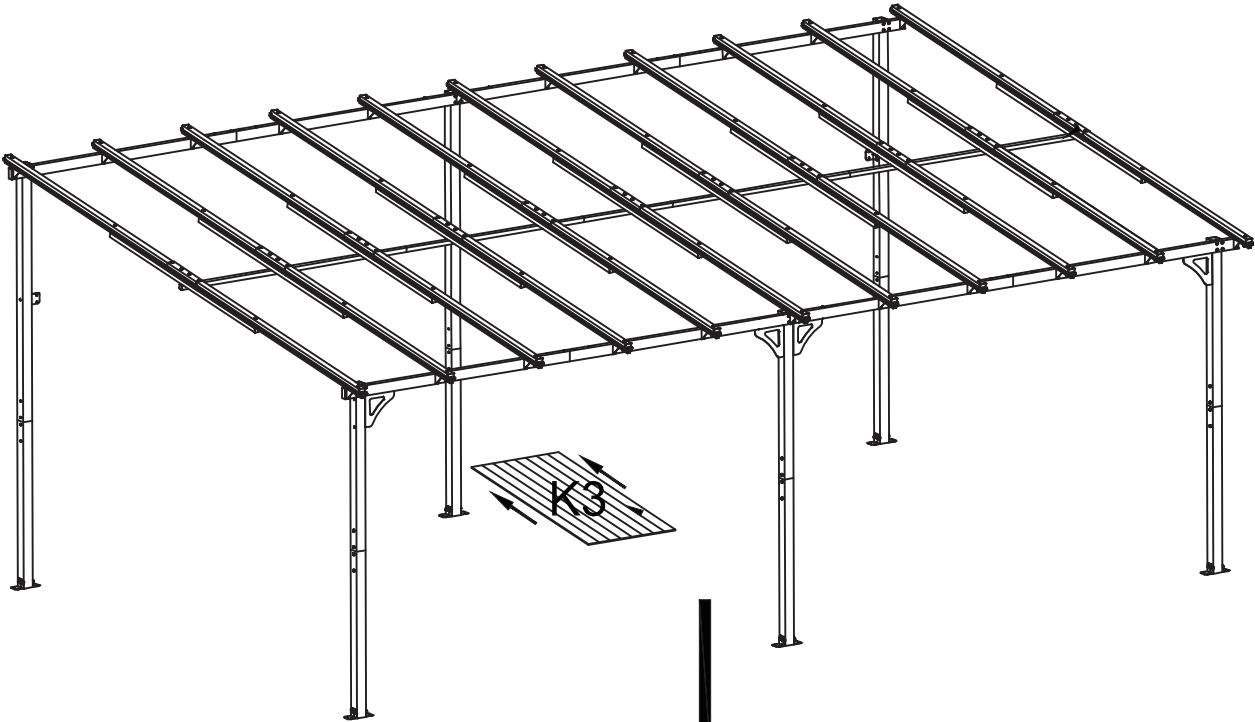

STEP12




R		X11
W1		X11
F		X10

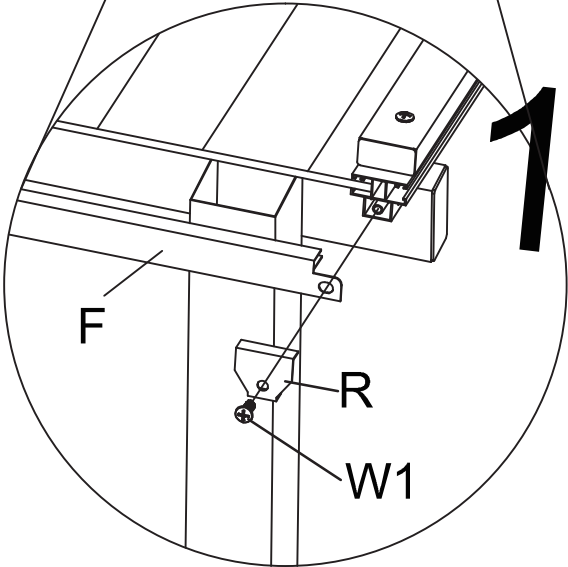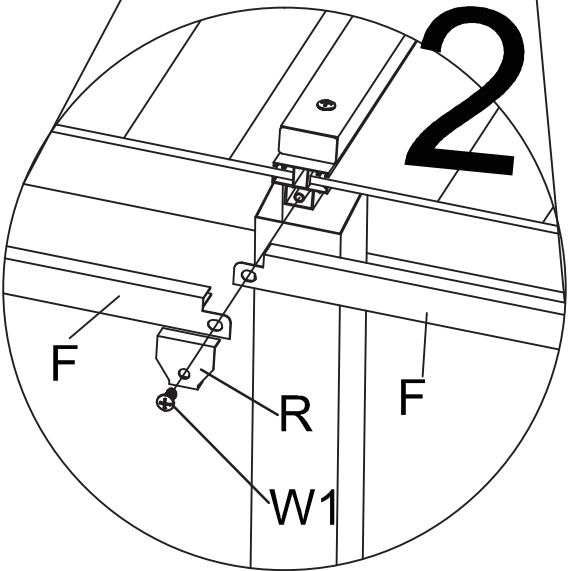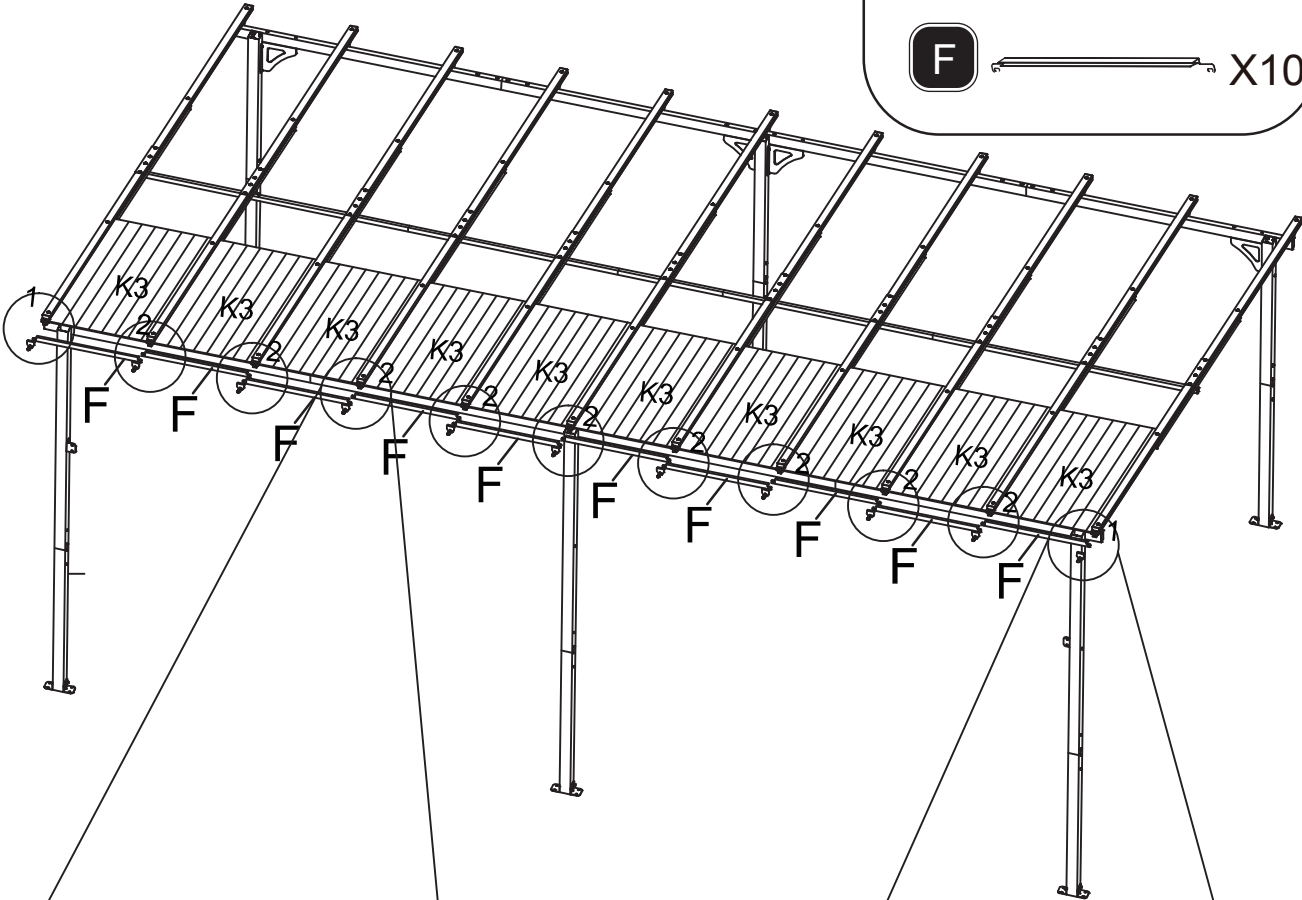

STEP13


G

X10

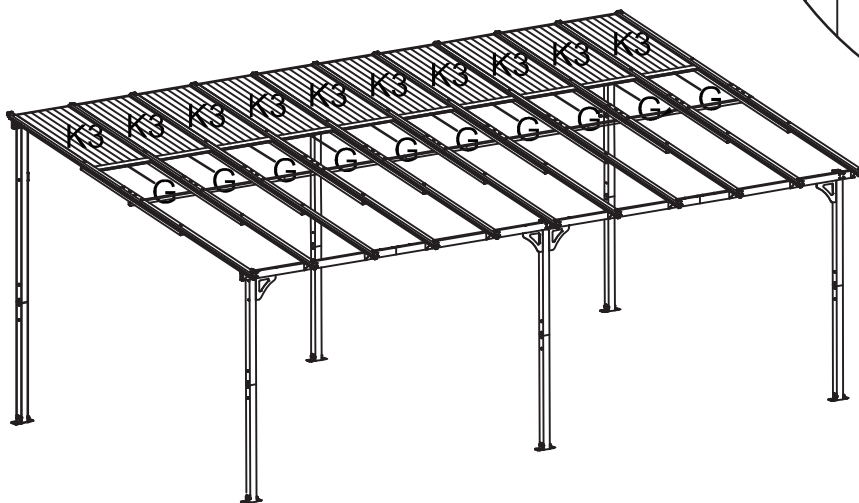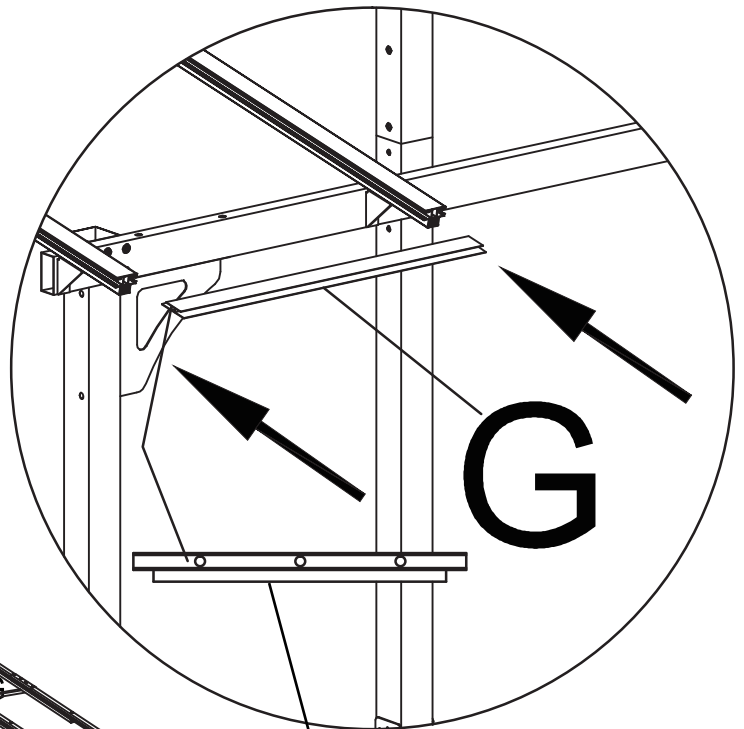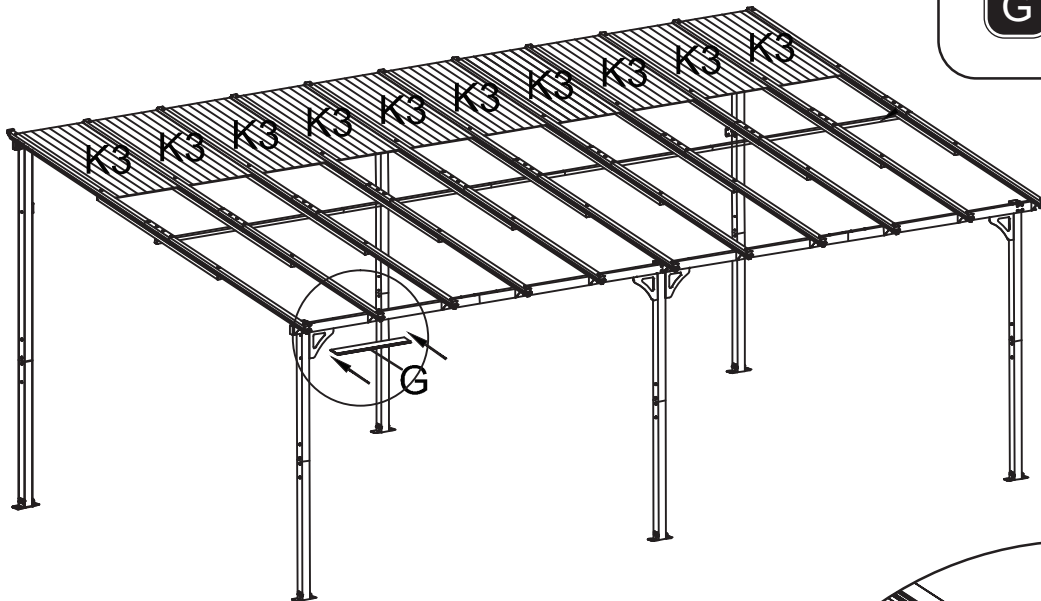


Please note: Each side of the 'G' has a drainage hole. Make sure to install with the side containing the drainage hole facing upwards (the higher side) to prevent water leakage."

STEP 14

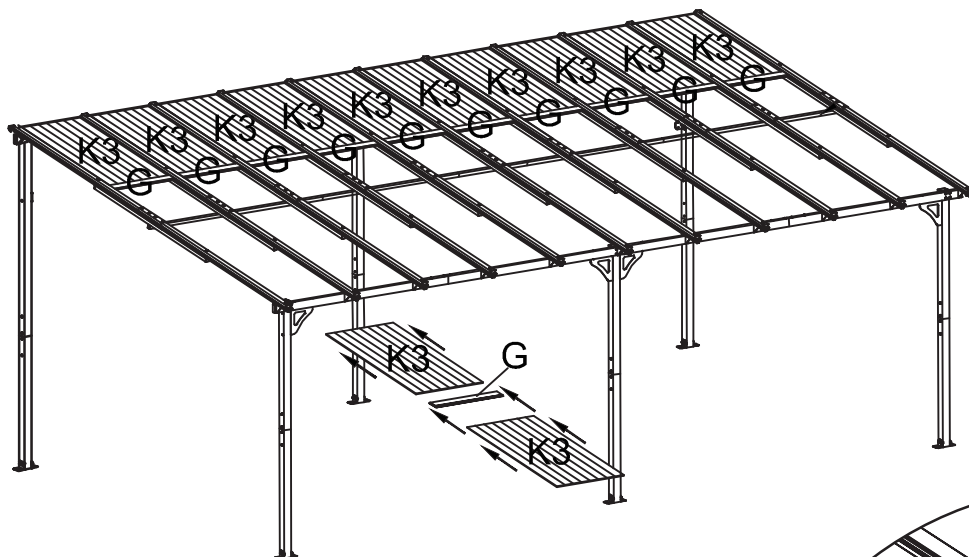

G





X10

K3



X20


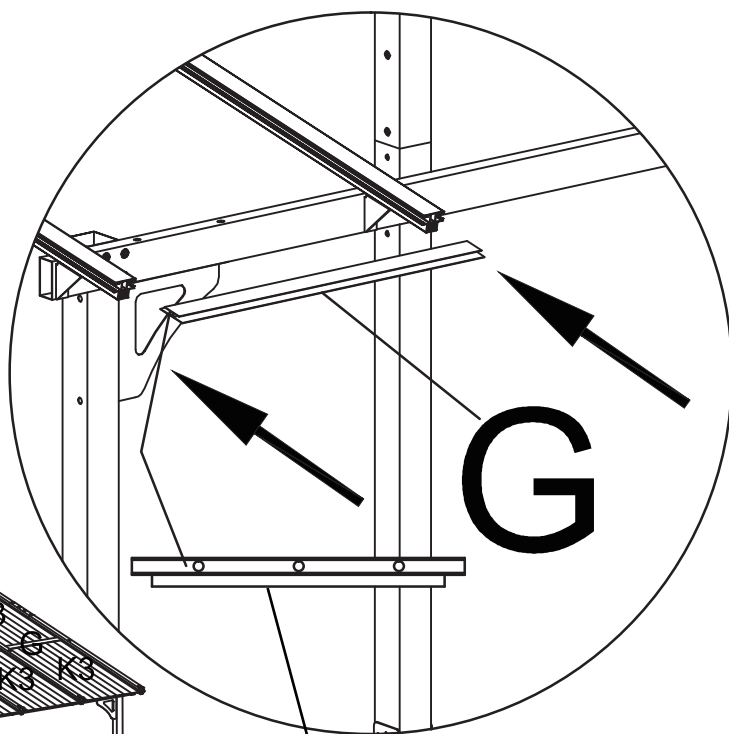
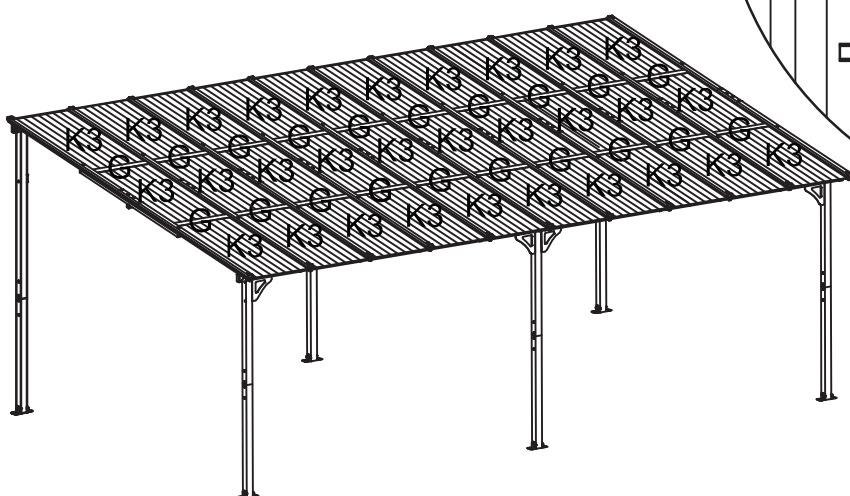


G

Please note: Each side of the 'G' has a drainage hole. Make sure to install with the side containing the drainage hole facing upwards (the higher side) to prevent water leakage."


STEP15

R		X11
W1		X11
F		X10

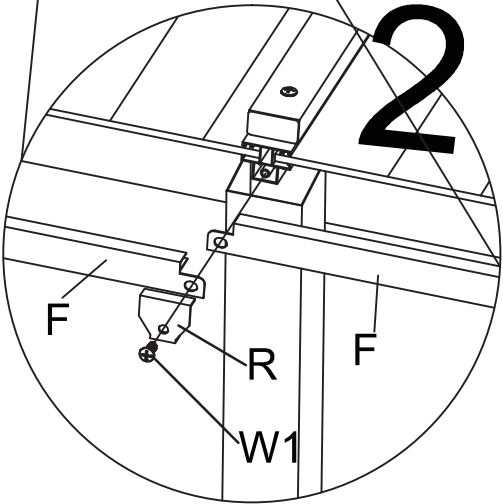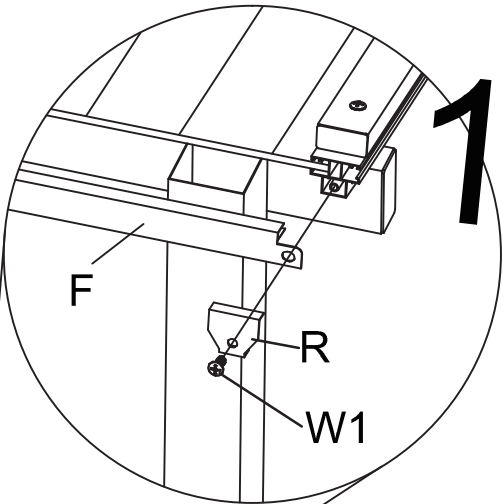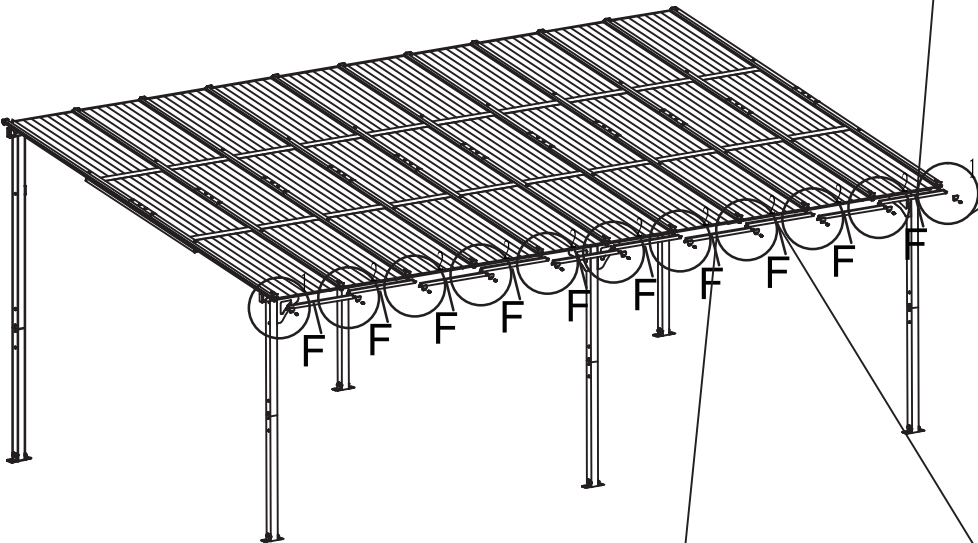



STEP16

Z5



X8

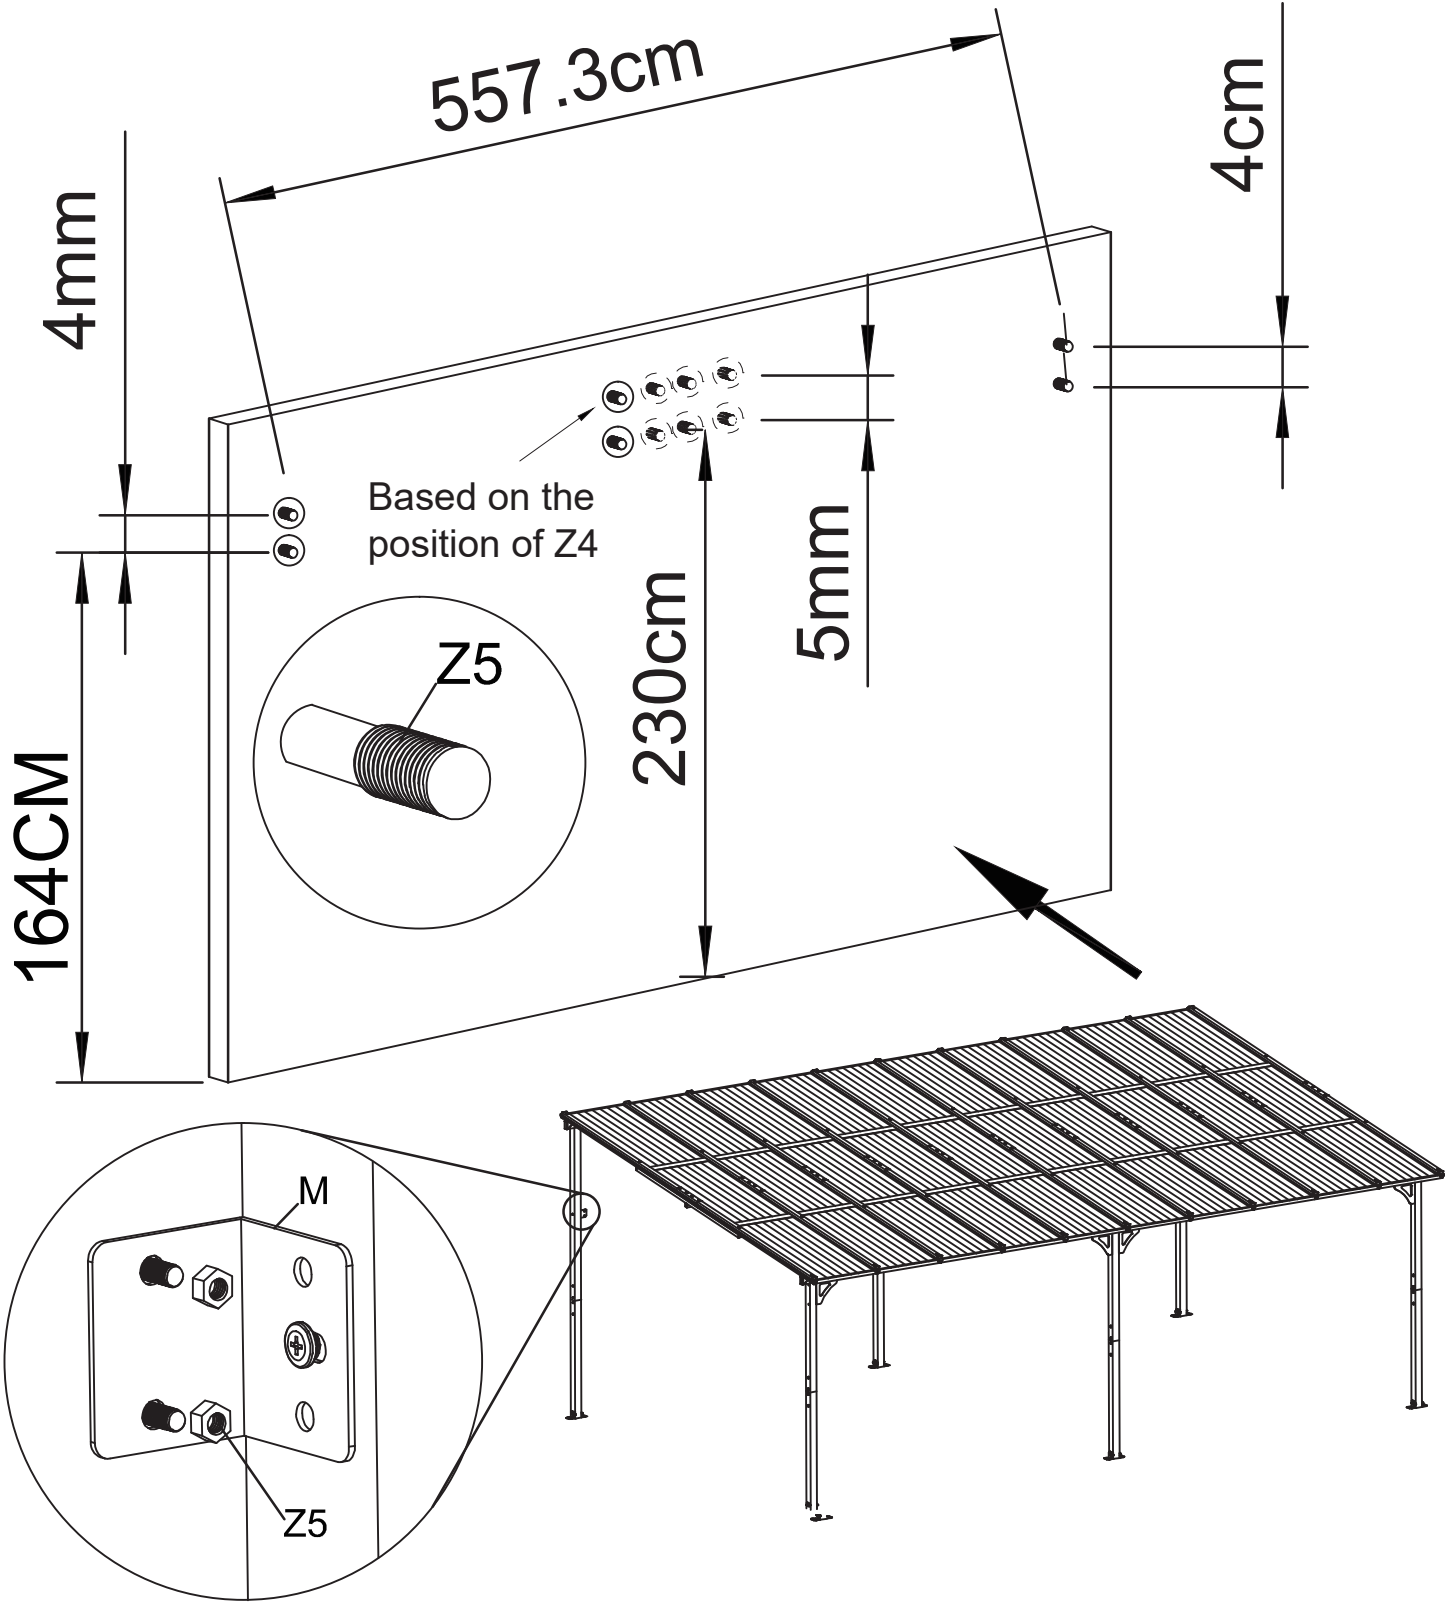

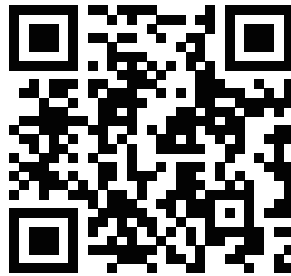

www.alaulm.com


Make Your Life Much Better.



Note: Please prepare below tools before installation.



Pistol Drill

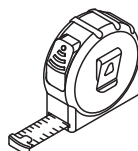

Tape Measure



Ladder



Screw Driver



Gloves

Warning

We recommend two adults to complete the installation. Two adults installed together will make the installation process easier and safer.

The gloves must be carried to prevent hand cuts during installation.

Take care when using power tools near water the use of a residual current device (RCD) is advised.

Please use the electric driver carefully during screwing to prevent the screw from slipping and hurting your hand. (We recommend that beginners use a manual screwdriver for installation.)

Be careful not to fall when installing the roof. Please steady the ladder and make sure the product placed on a flat ground.

PLEASE KEEP THIS INSTRUCTION FOR FUTURE REFERENCE.