



Start Furnishing Your Dream!

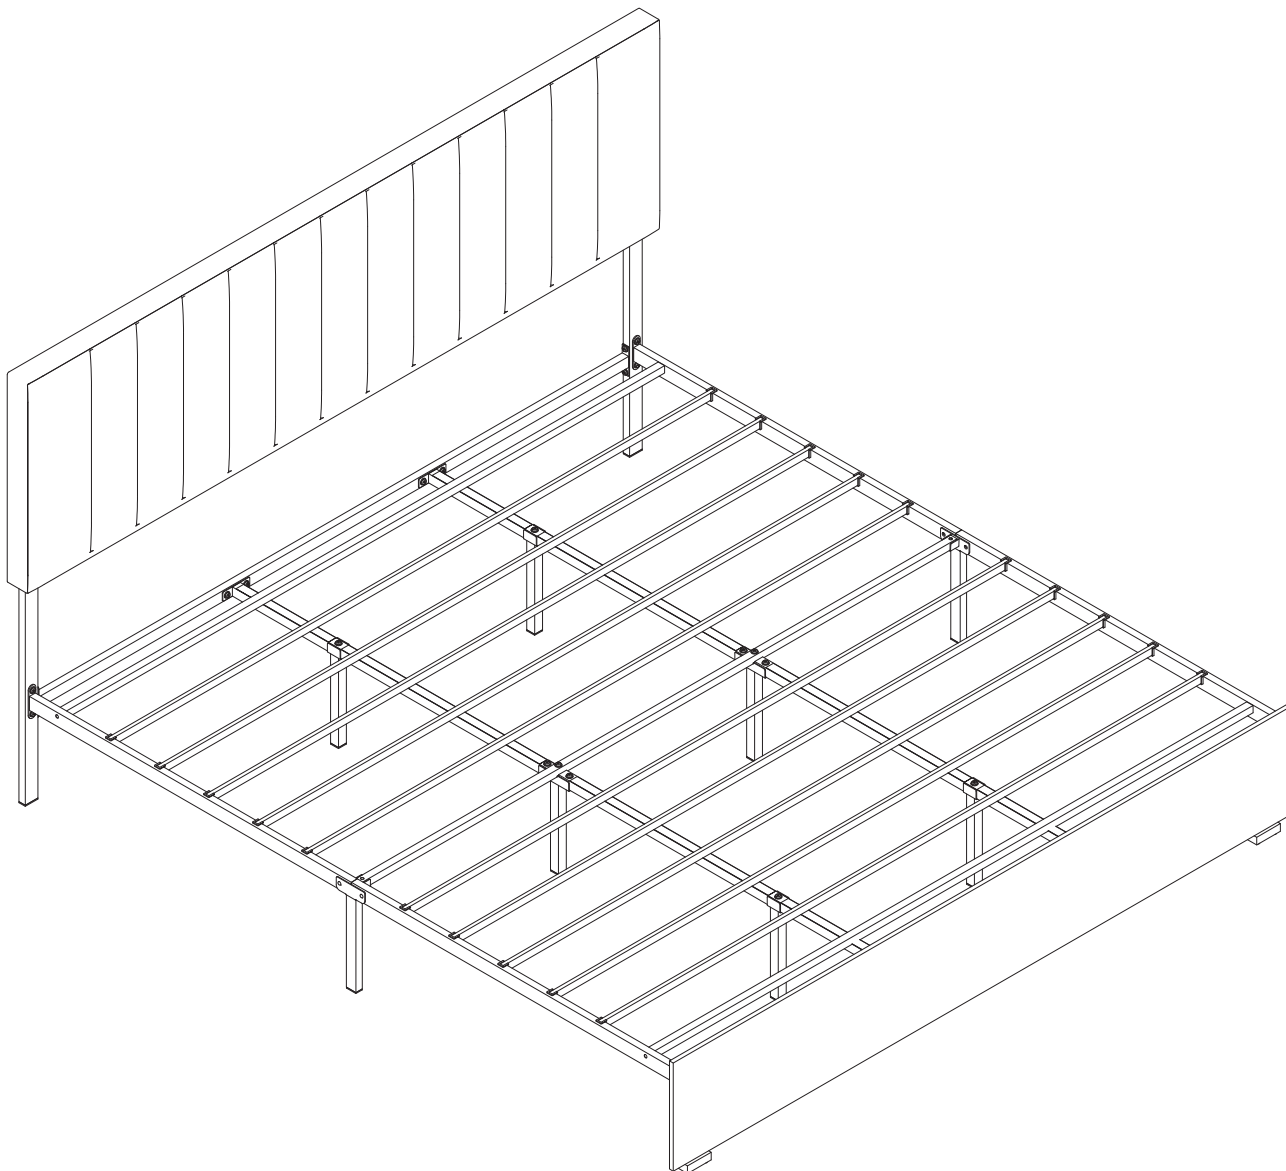













Please check that you have all the parts listed before you start assembling, if you do find that something is missing, do not continue assembly. Please contact us immediately.

NOTE: Please do not completely tighten all the hardware until the entire assembly is complete!






Part List

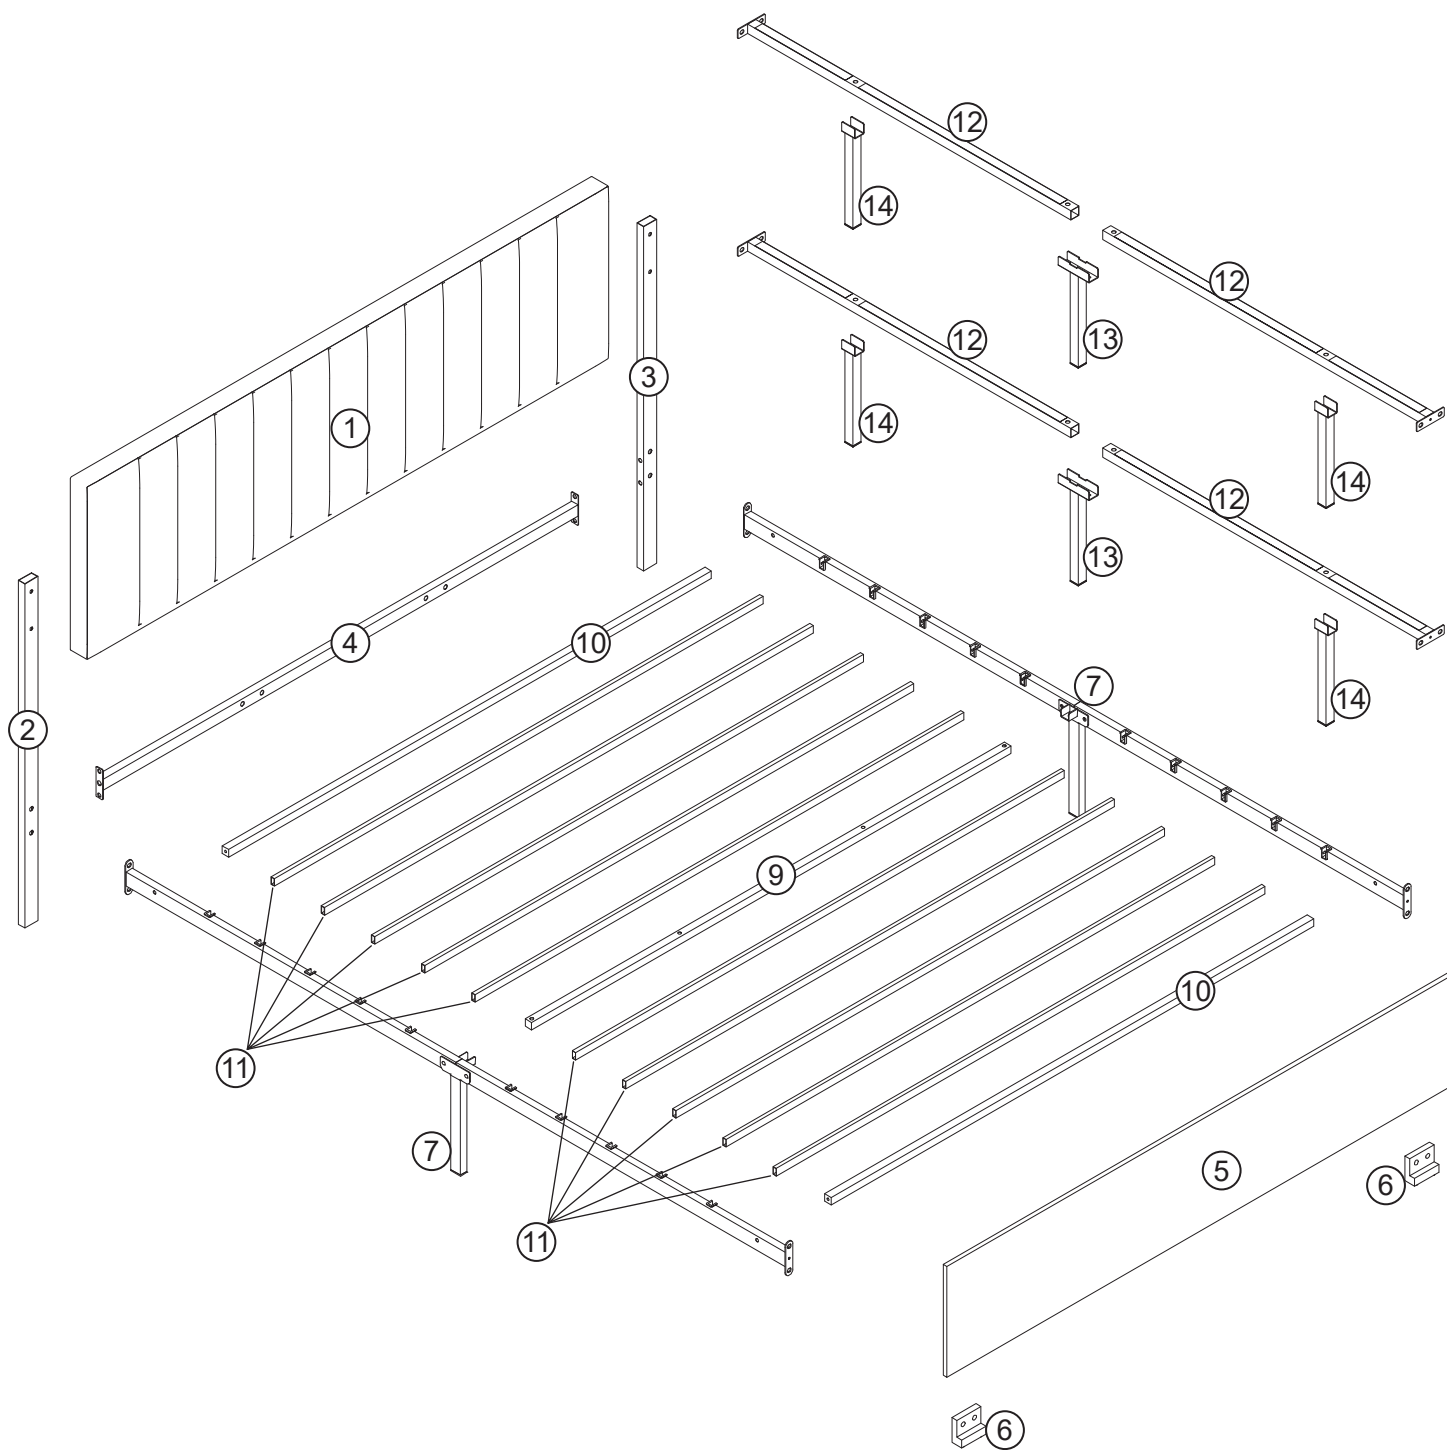

Part List

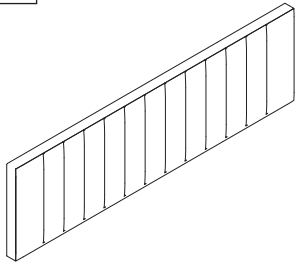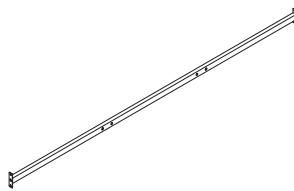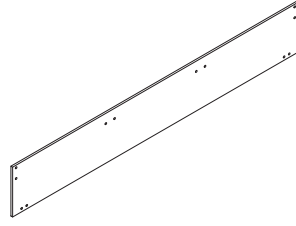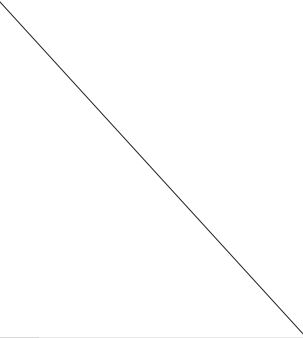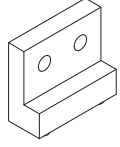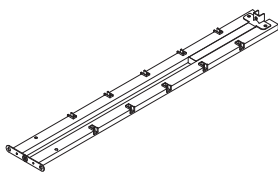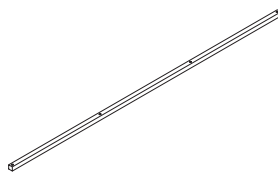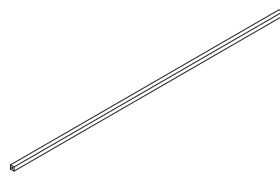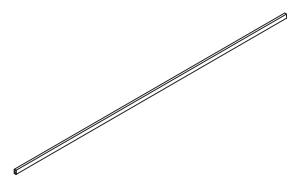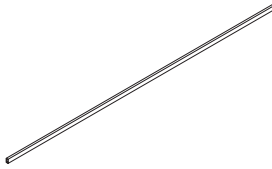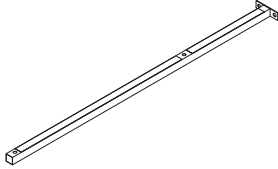1	1PC	2	1PC	3	1PC	4	1PC	5	1PC
									
6	2PCS	7	2PCS			9	1PC	10	2PCS
									
11	10PCS	12	4PCS	13	2PCS	14	4PCS		
									

Hardware List



O	5/16" x 16mm	P	5/16" x 28mm	Q	5/16" x 35mm	R	1/4" x 35mm	S	5/16" x 50mm	X	4 x 100mm
											
x 20+2		x 4+1		x 12+2		x 6+1		x 2+1		x 1	

1

5/16" x 16mm




O x 4

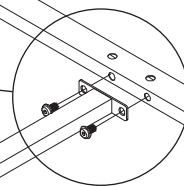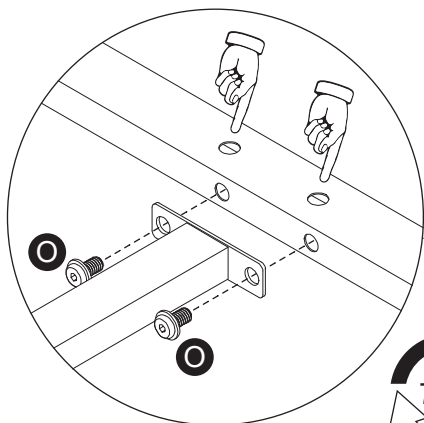

2

4

4

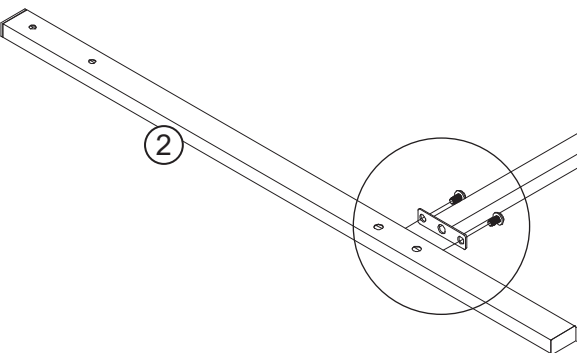

2

5/16" x 35mm



Q x 4

Headboard height can be adjustable.

Please tighten all the bolts after this step is completed.






2

1


4

3

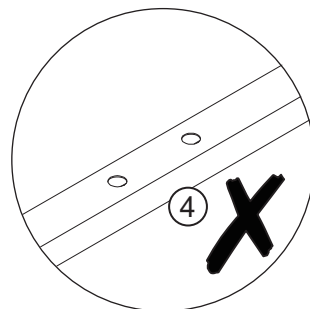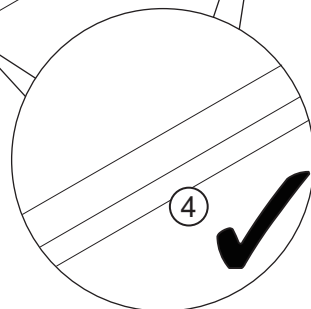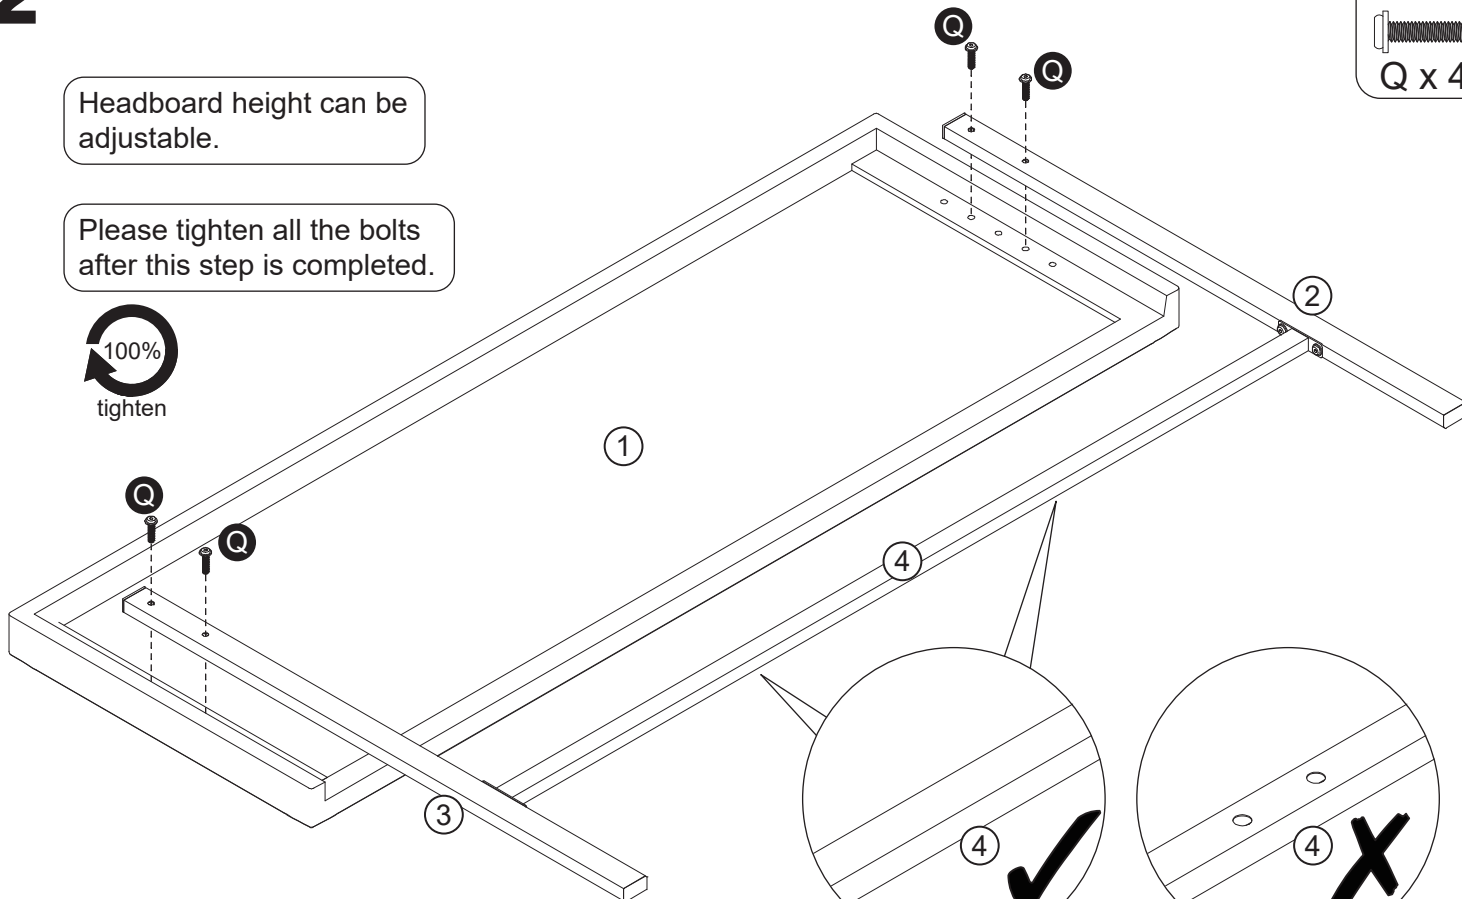


P.4


3

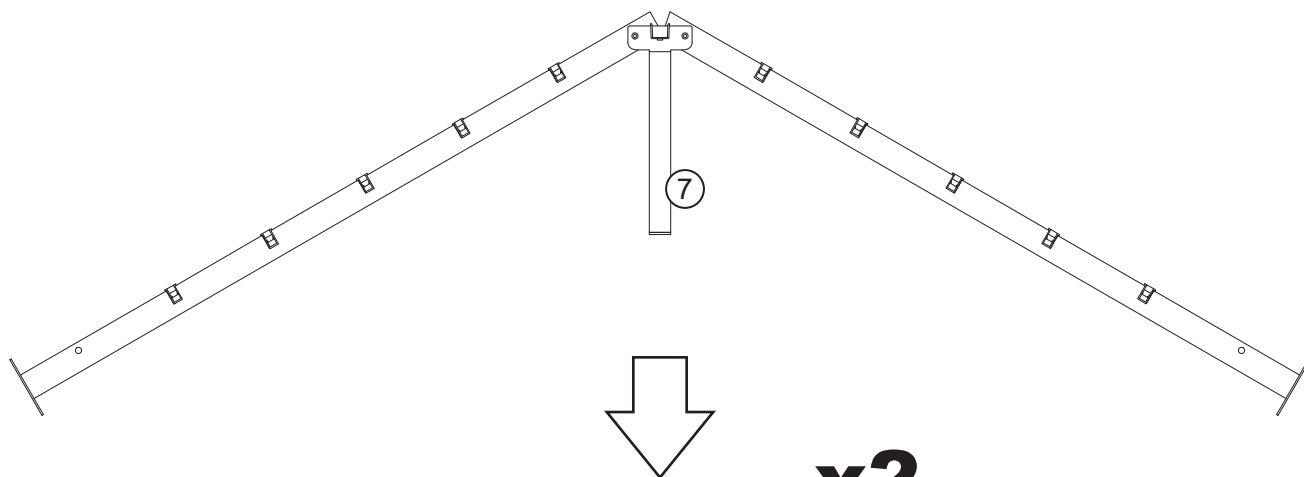

x2

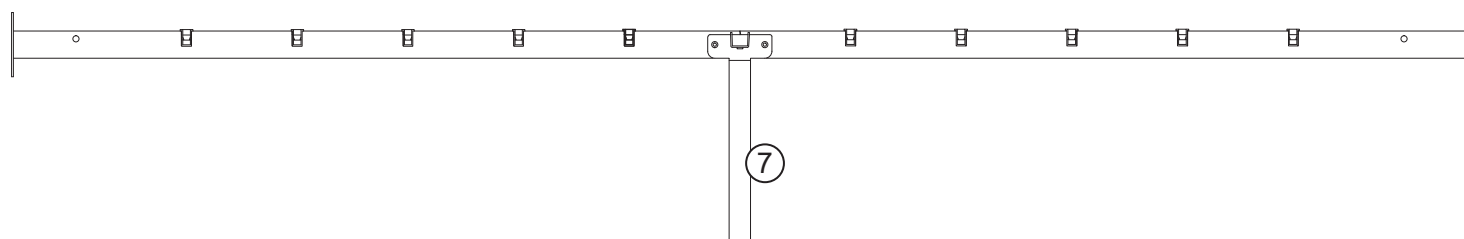

4

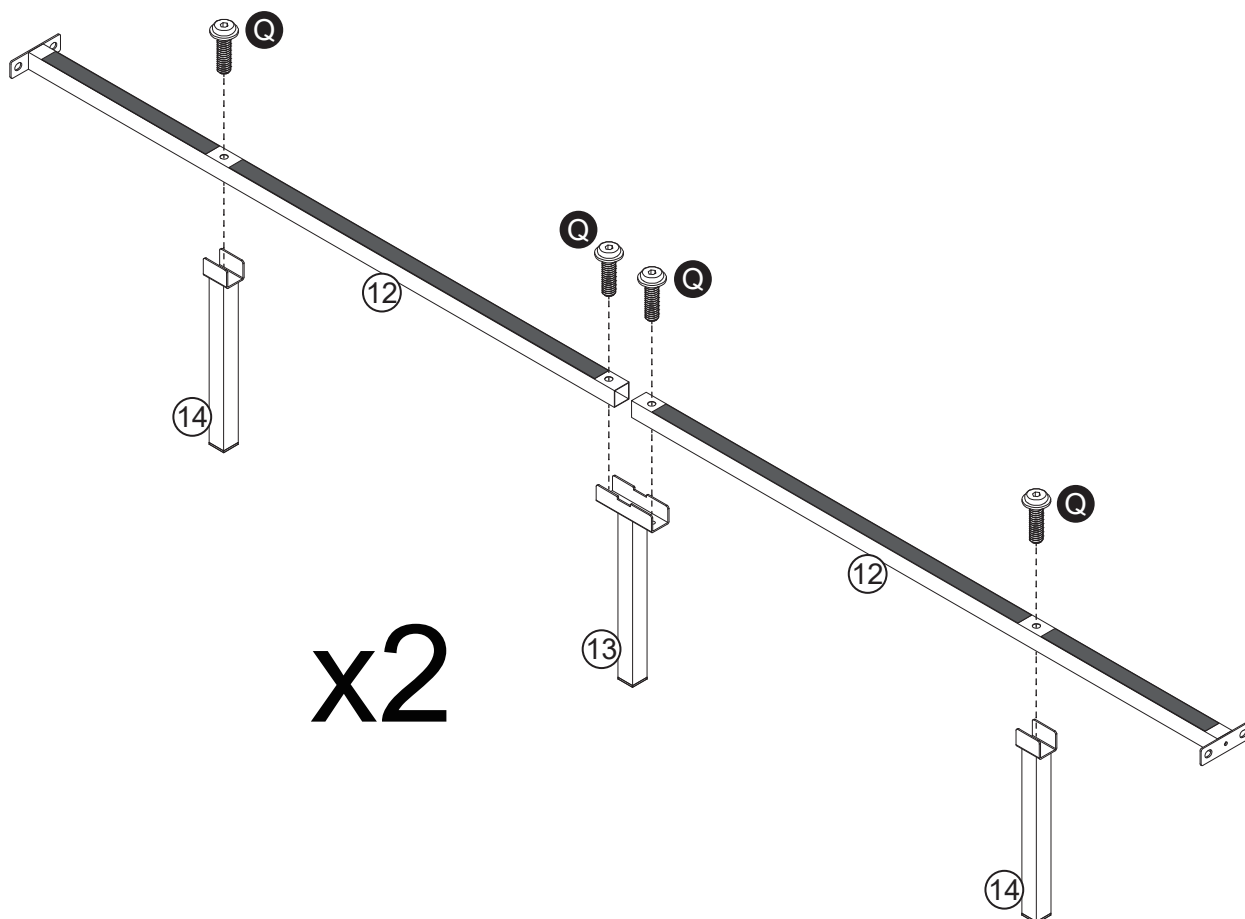


5/16" x 35mm
Q x 8


x2

P.5

5

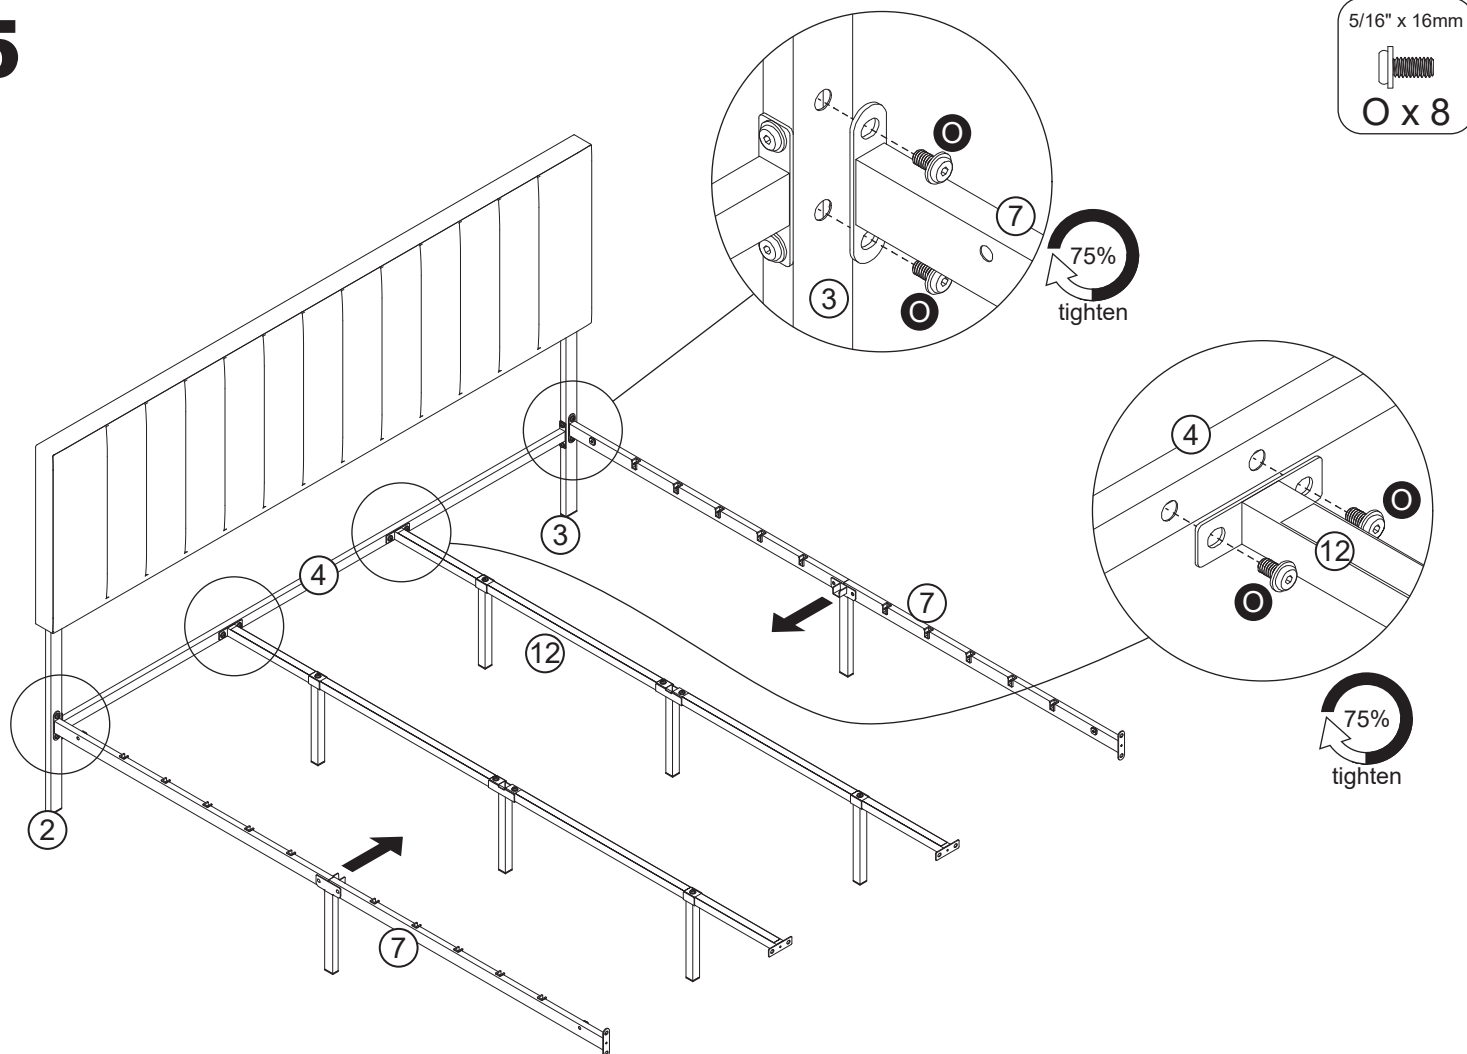


6

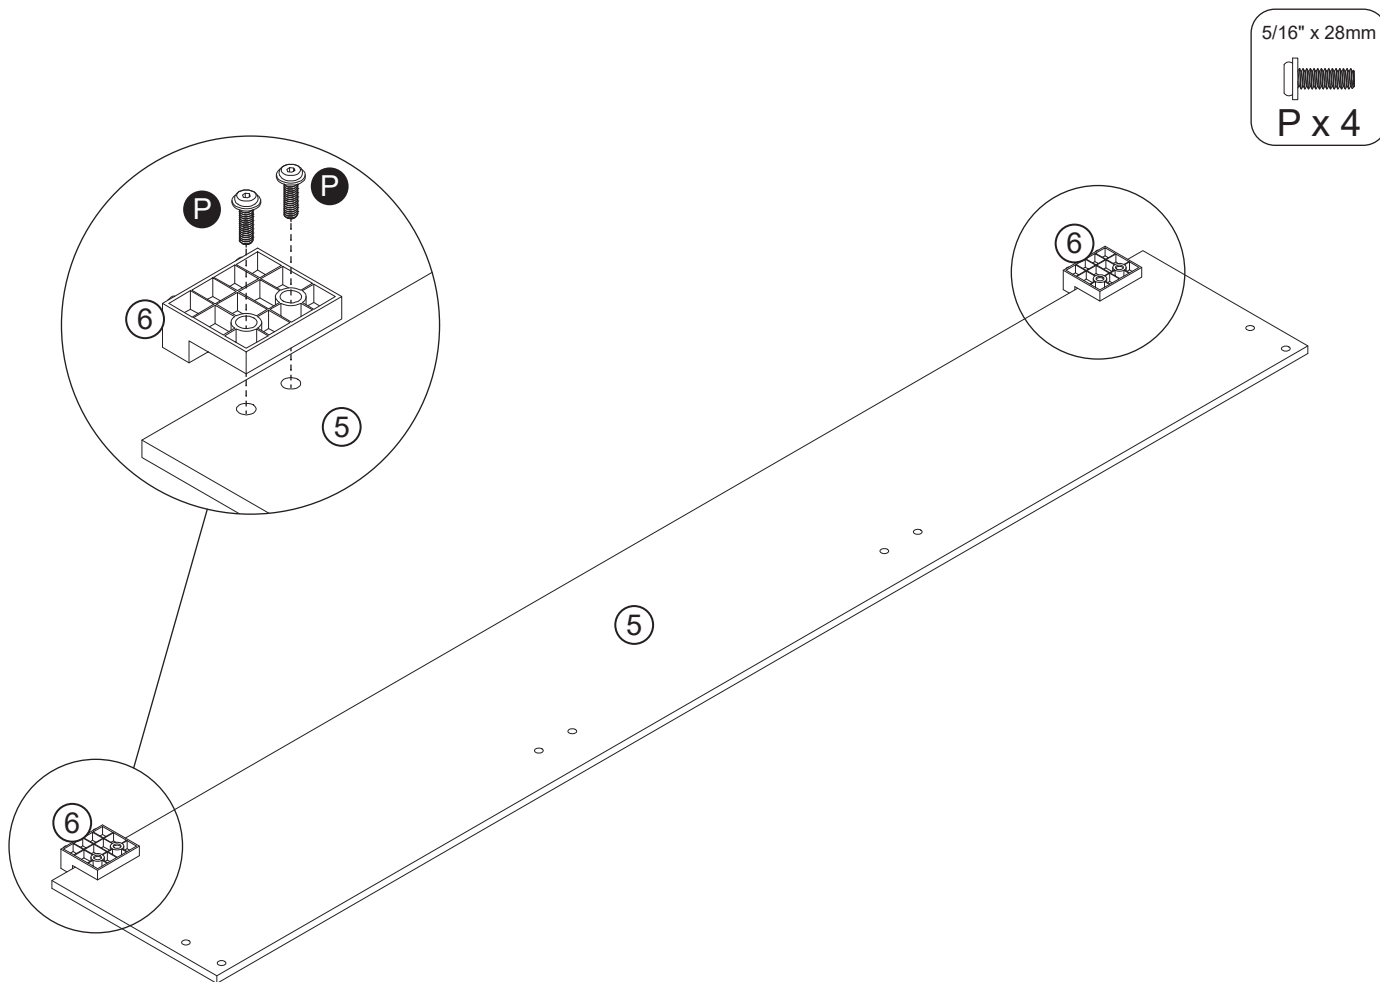


P.6

7

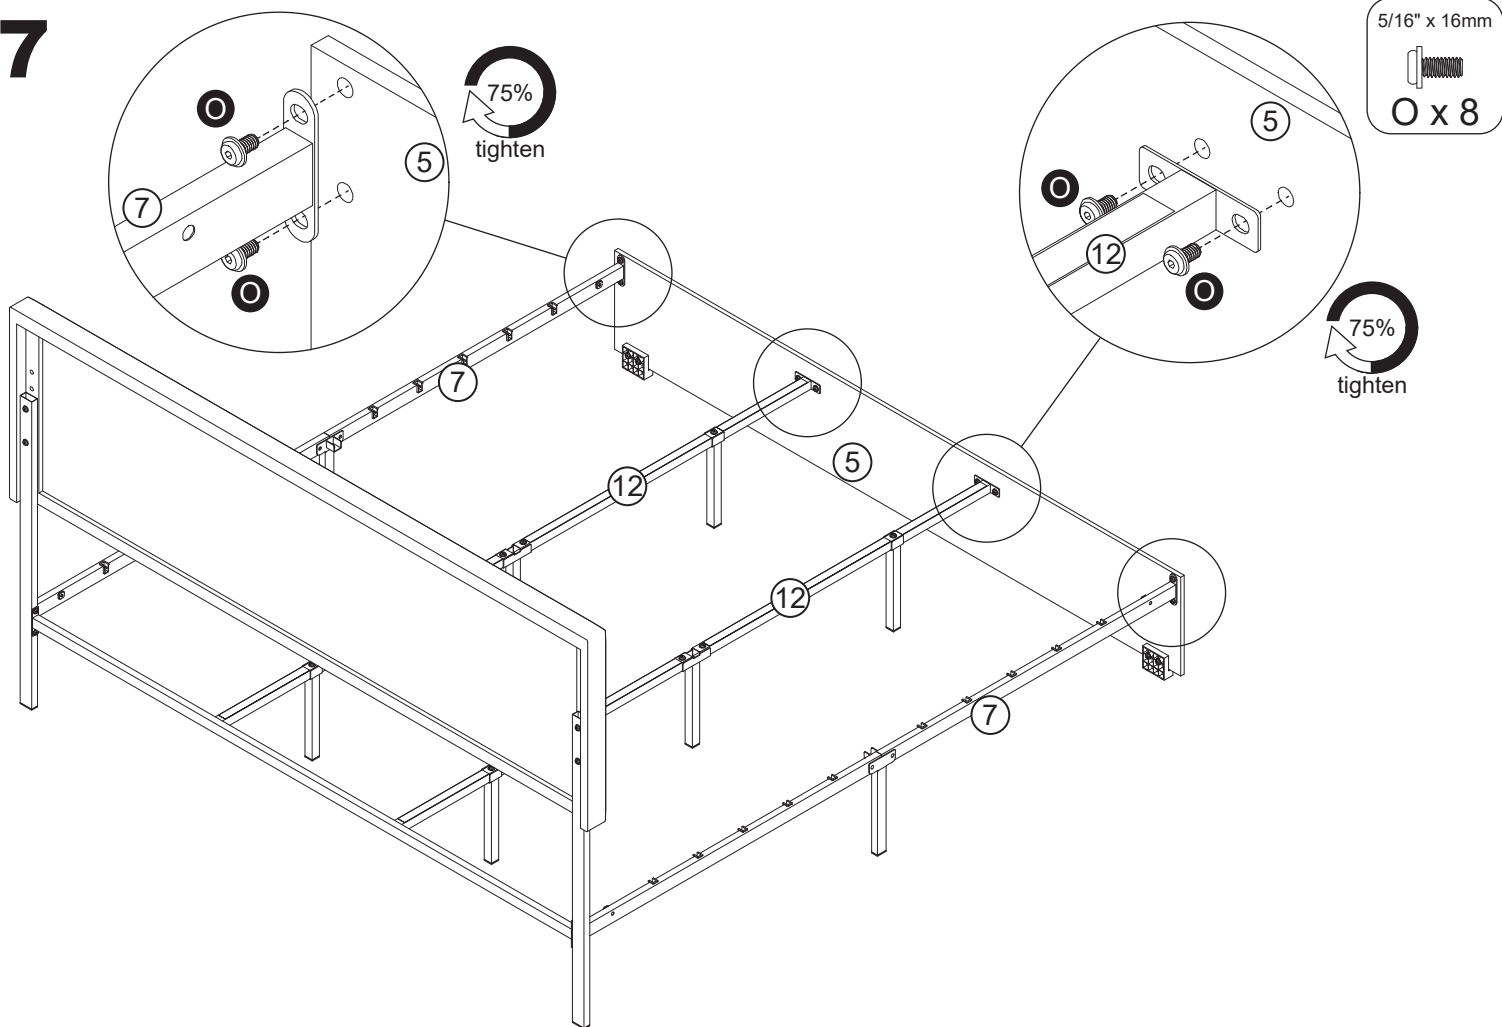

8

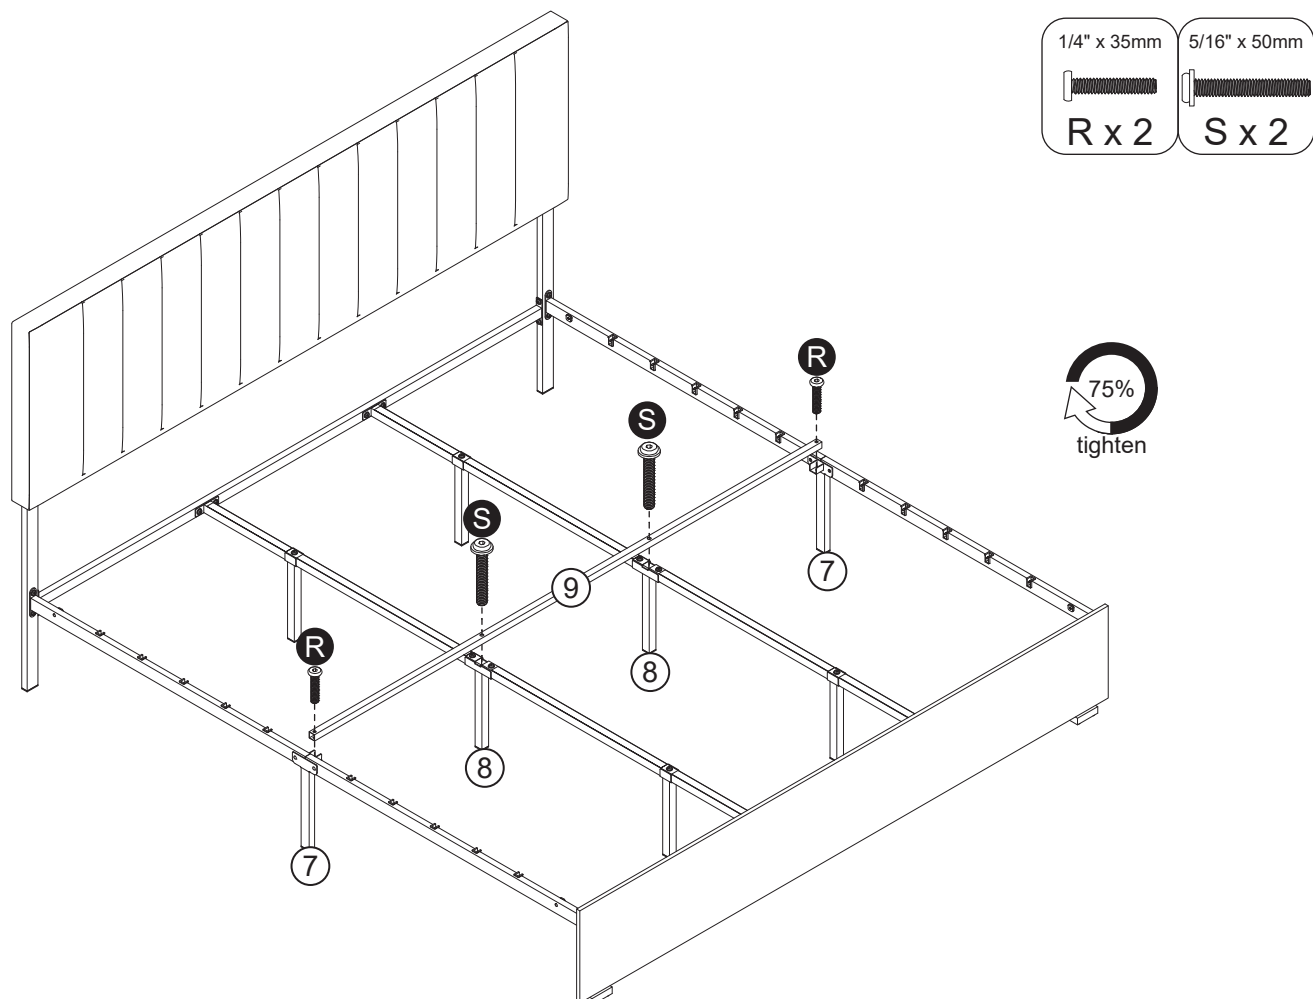

P.7

9


1/4" x 35mm




R x 4




Please tighten all the bolts after this step is completed.

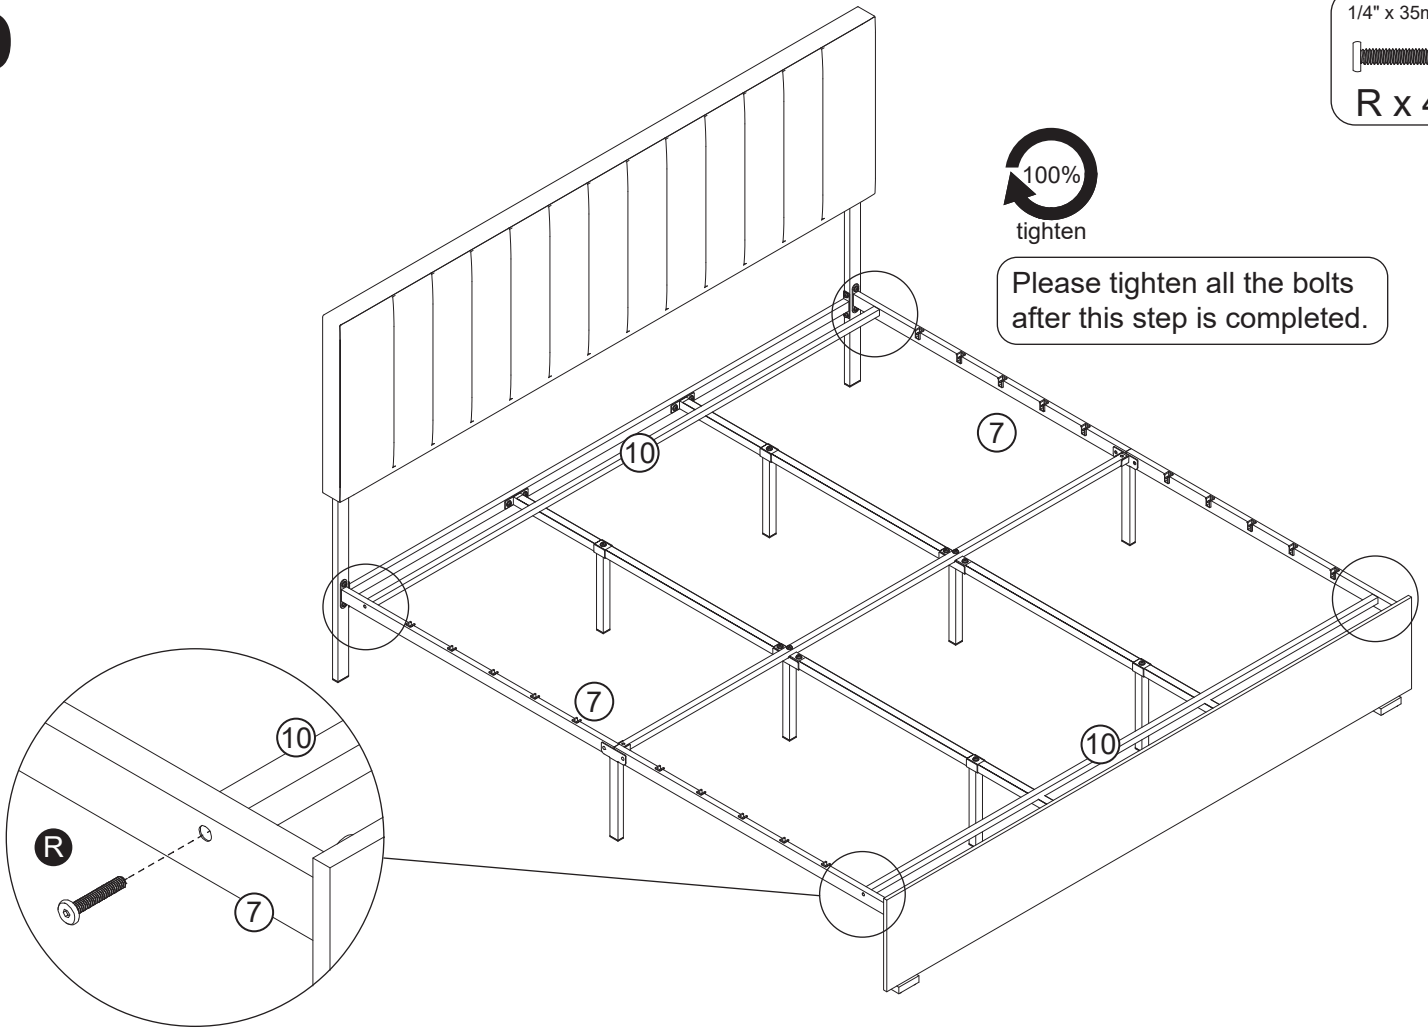

10

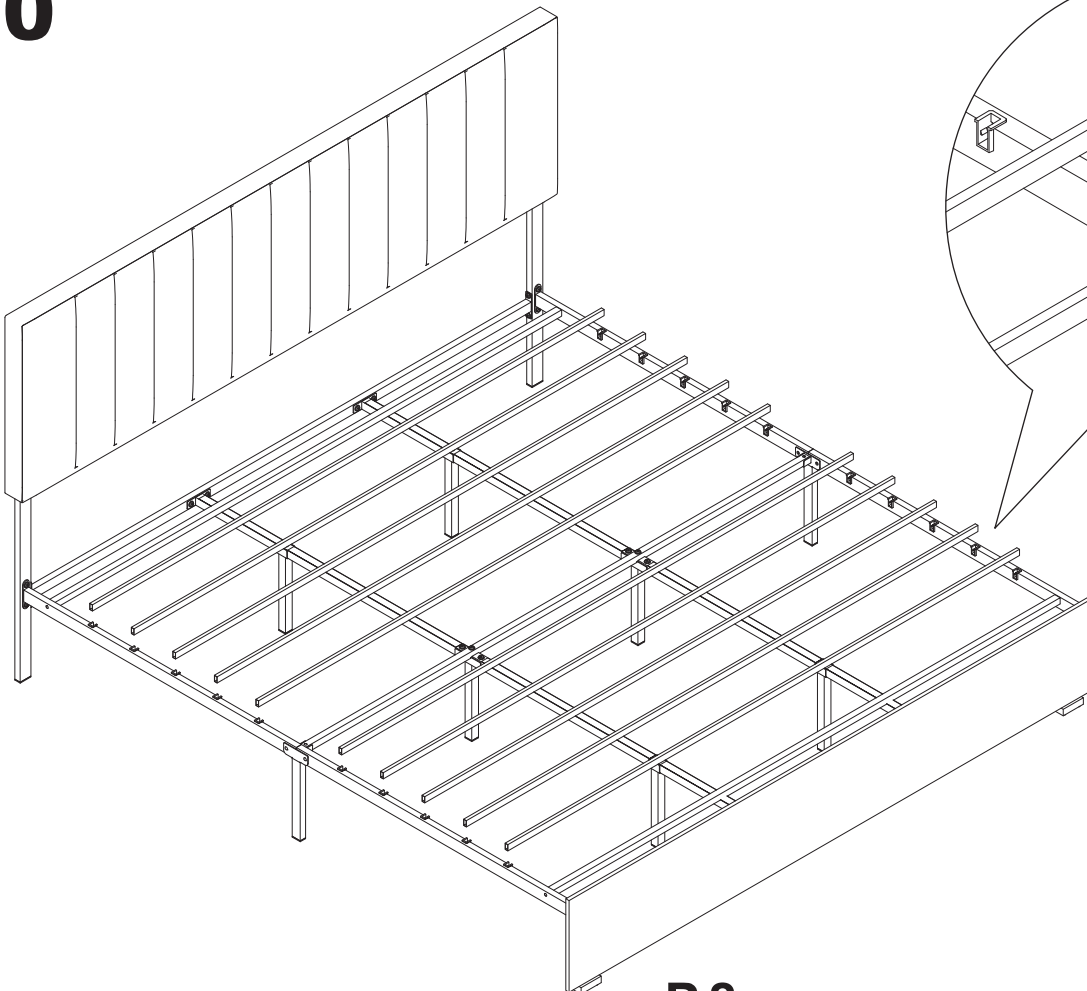

P.8

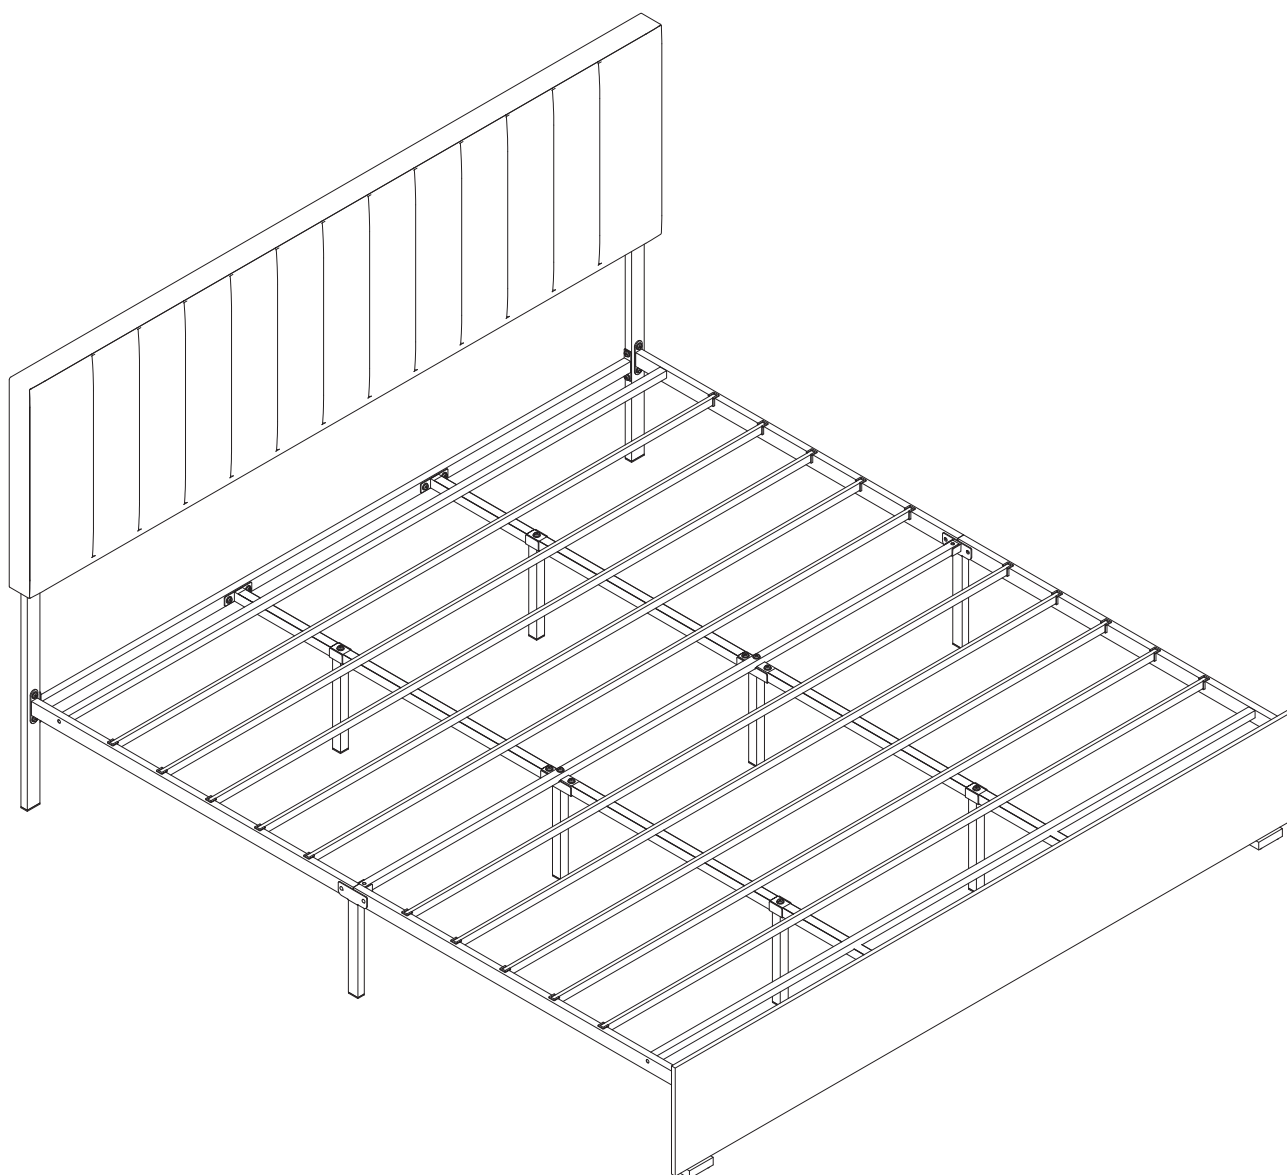

Final Assembly