

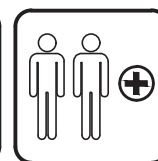
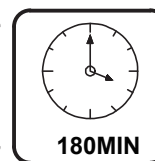
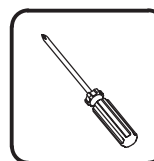
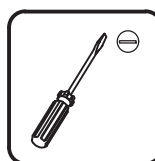



Installation & Assembly

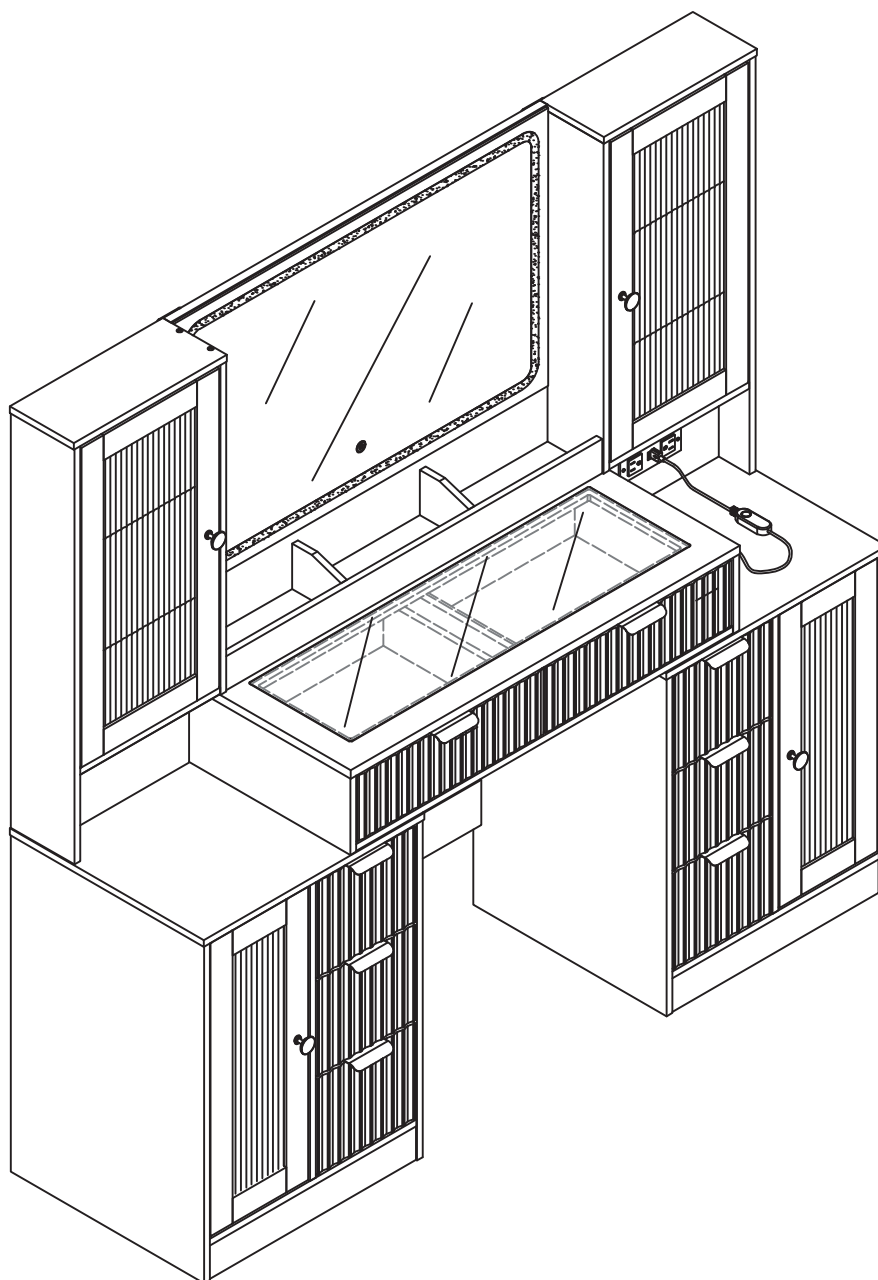


EN_IMPORTANT, RETAIN FOR FUTURE REFERENCE: READ CAREFULLY.

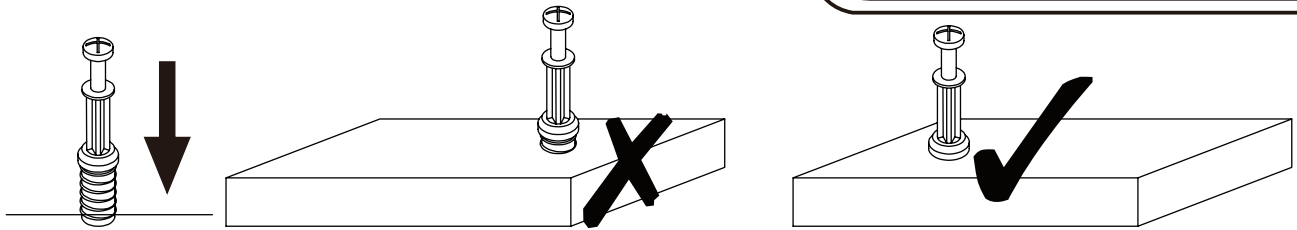


EN_QUICKFIT: Tighten quickfit until shoulder is flush with panel. Do not overtighten or undertighten.

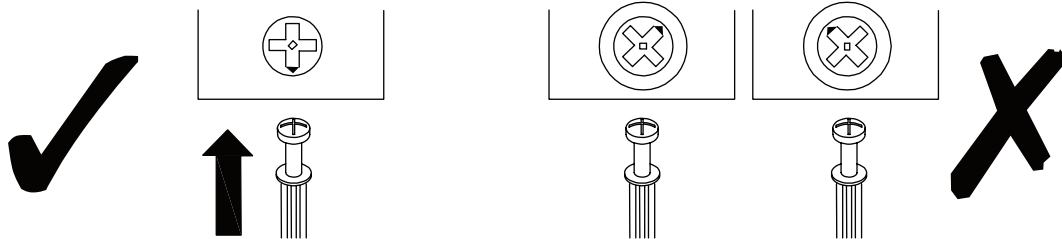











EN_CAM LOCK: When fitting cam lock, ensure starting position is correct before you insert connecting quickfit.










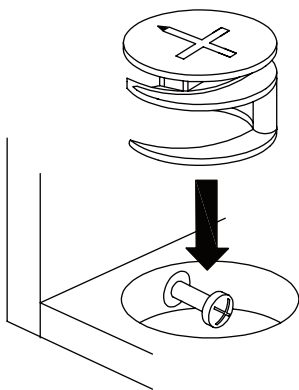












EN_Quickfit head should be in the centre of the cam lock when the two panels are joined.
Cam lock should be inserted before quickfit.










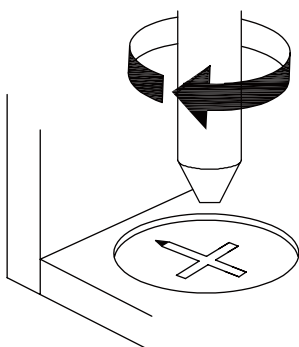












EN_Turn cam lock clockwise to tighten.

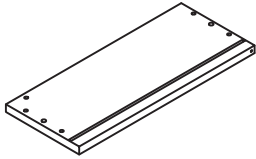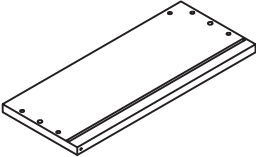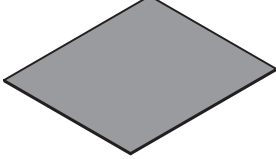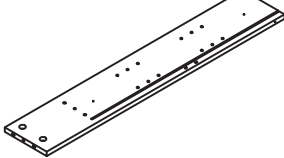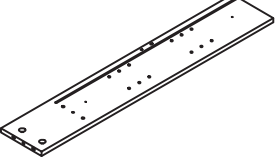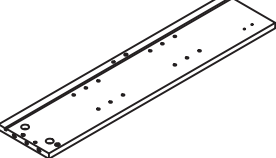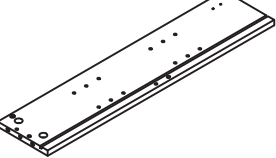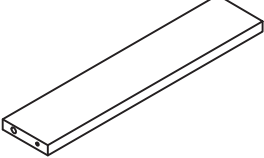
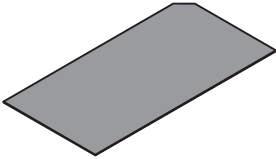
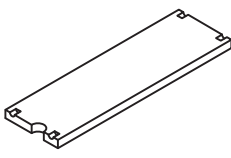
NO.	PARTS	QTY	SPARE
①		x1	
②		x1	
③		x2	
④		x1	
⑤		x1	
⑥		x1	
⑦		x1	
⑧		x2	
⑨		x2	
⑩		x2	

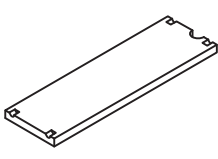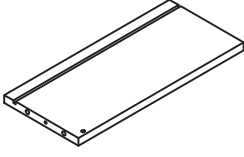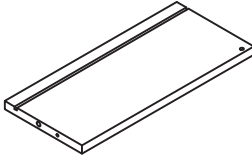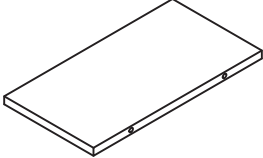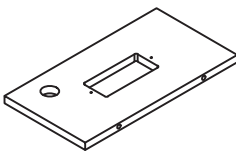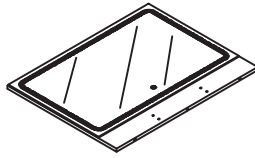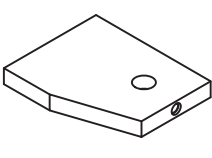
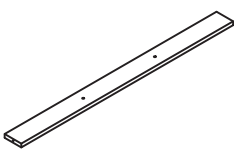
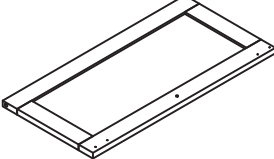
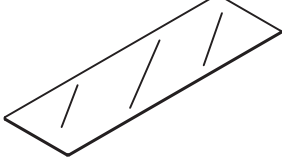
NO.		QTY	SPARE
⑪		x2	
⑫		x1	
⑬		x1	
⑭		x1	
⑮		x1	
⑯		x1	
⑰		x2	
⑱		x1	
⑲		x2	
⑳		x1	

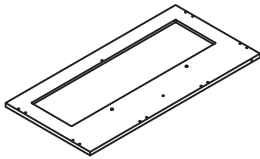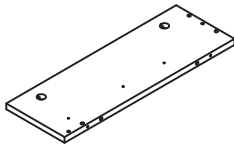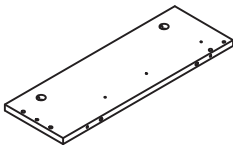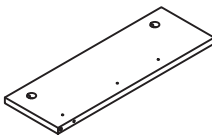
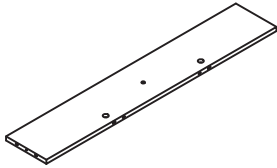
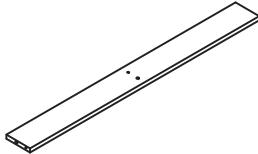
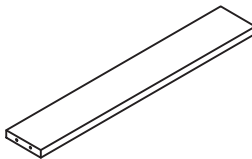
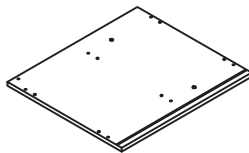
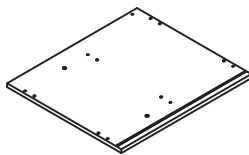
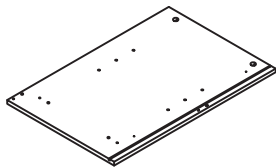
NO.	PARTS	QTY	SPARE
21		x1	
22		x1	
23		x1	
24		x1	
25		x1	
26		x1	
27		x1	
28		x1	
29		x1	
30		x1	

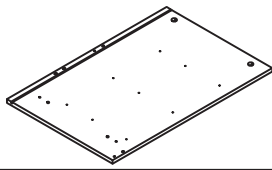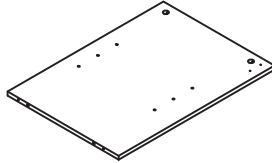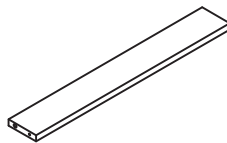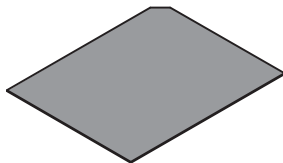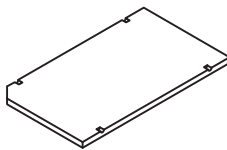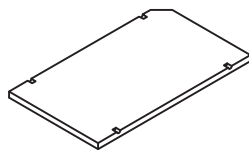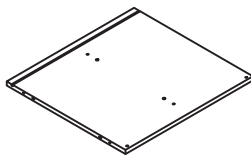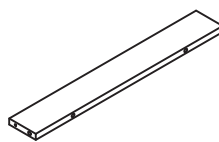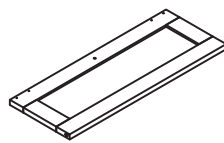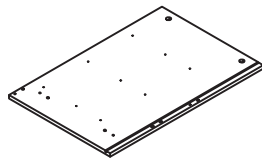NO.		QTY	SPARE
31		x1	
32		x1	
33		x2	
34		x2	
35		x1	
36		x1	
37		x2	
38		x2	
39		x2	
40		x1	

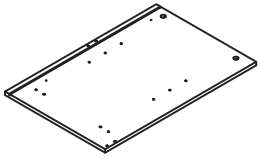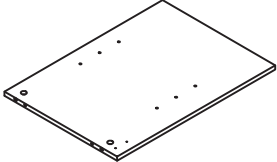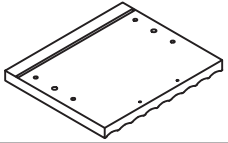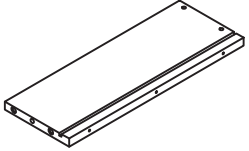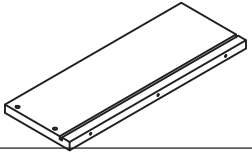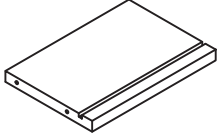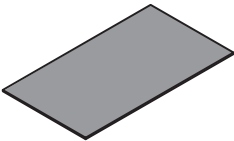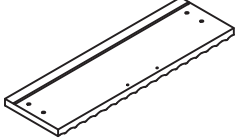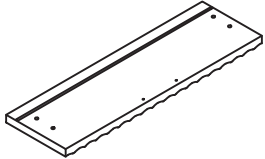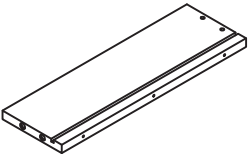
NO.	PARTS	QTY	SPARE
41		x1	
42		x1	
43		x6	
44		x6	
45		x6	
46		x6	
47		x6	
48		x1	
49		x1	
50		x2	

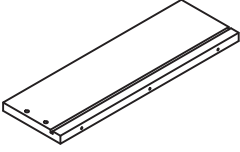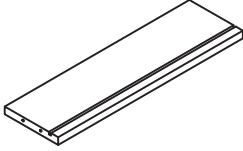NO.		QTY	SPARE
51		x2	
52		x2	
	 Hardware Kit	x1	

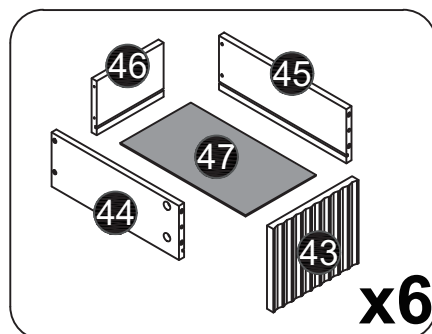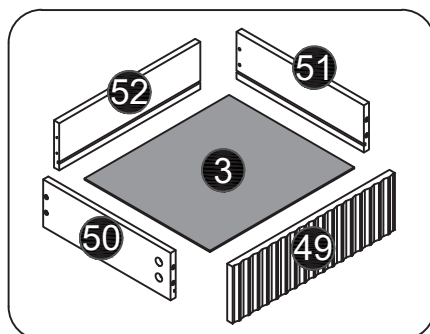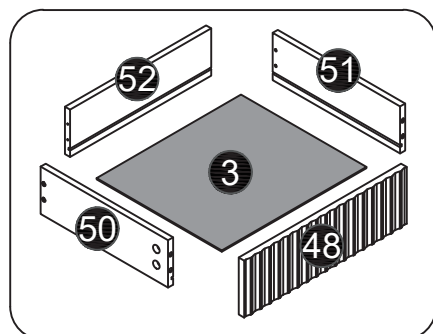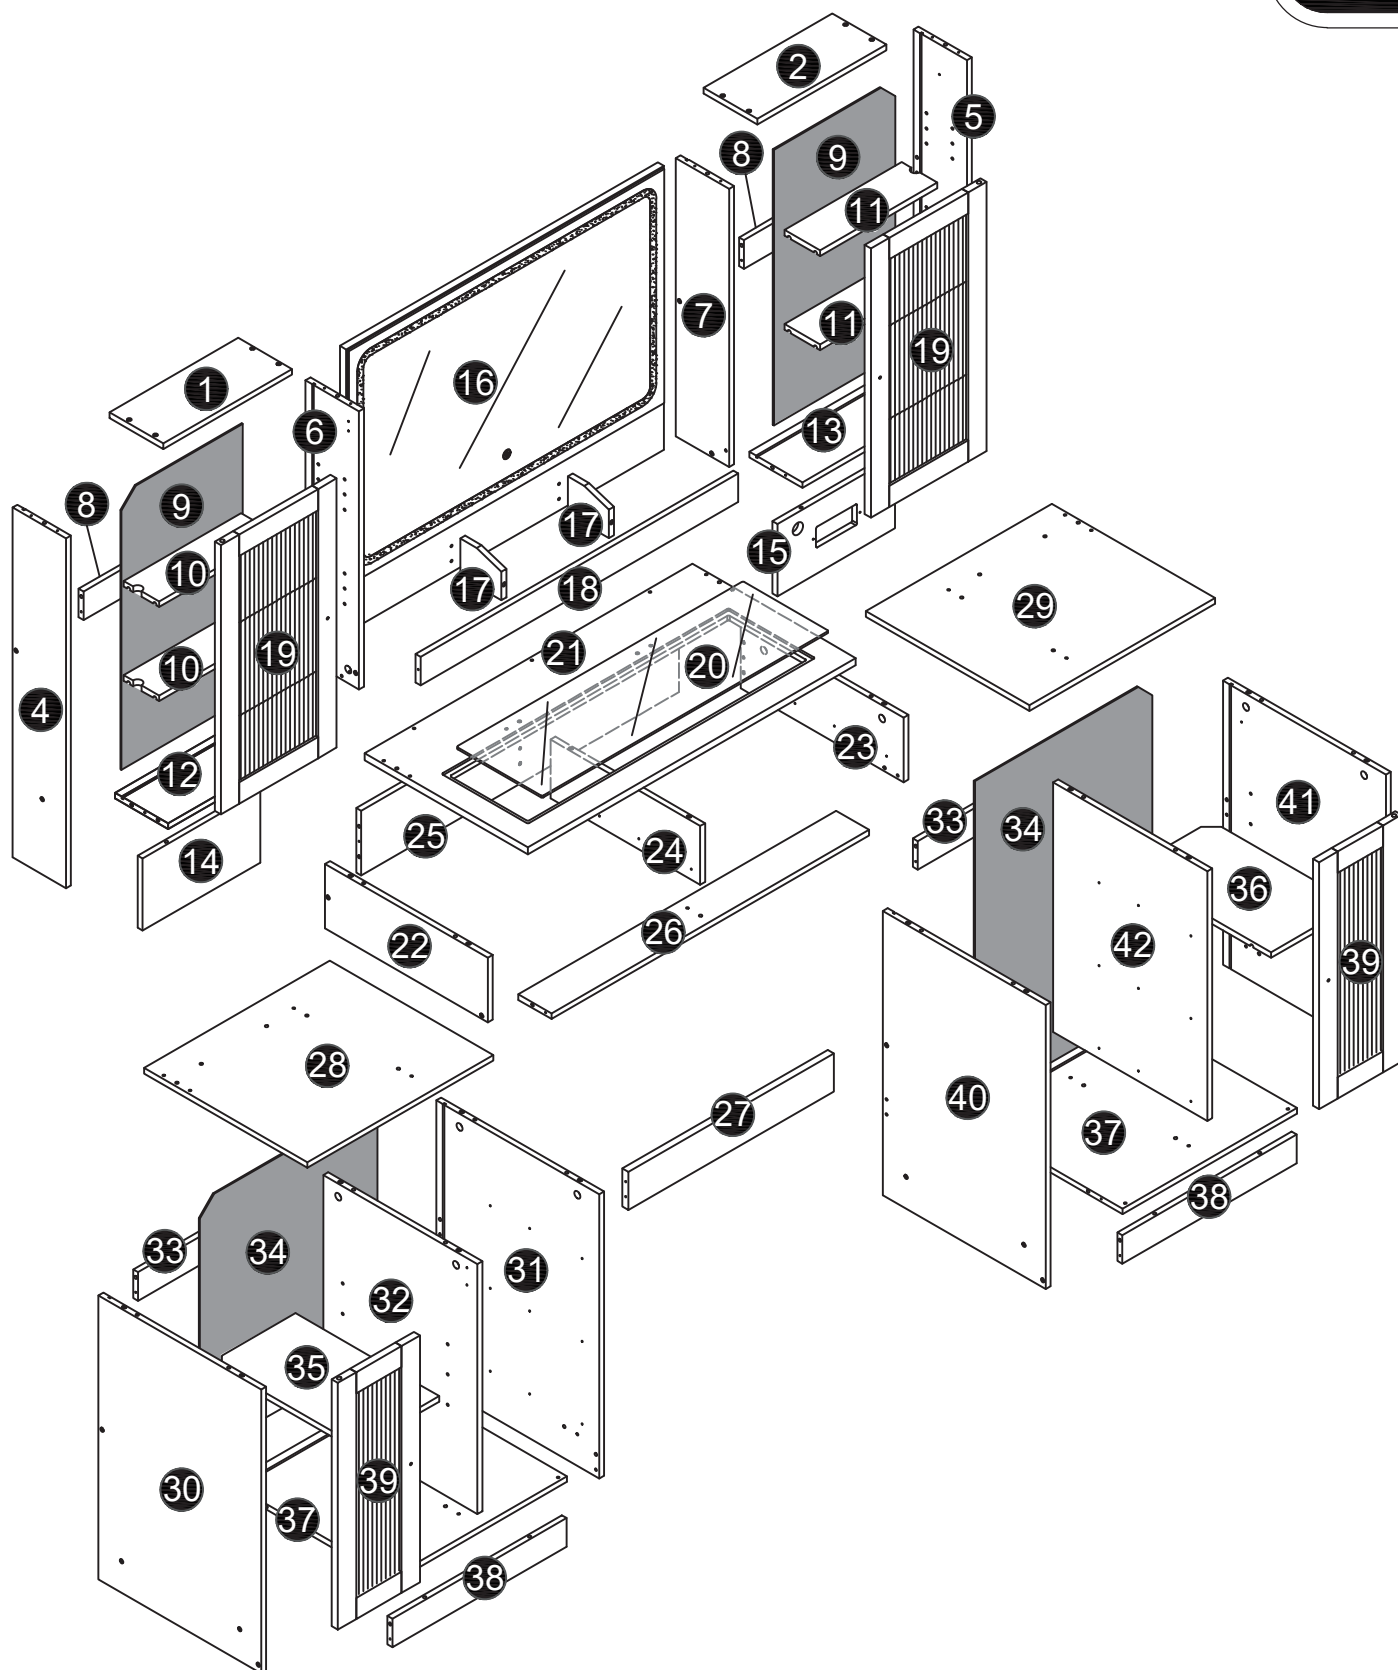

 A x65 Ø6x35mm +3(spare)	 B x65 Ø15x10mm +3(spare)	 C x95 Ø6x30mm +3(spare)	 D x92 Ø4x35mm +3(spare)	 E x96 Ø3.5x12mm +4(spare)	 F x8 F-1 F-2
 G x4 Ø3x14mm G-1 G-2	 H x6 Ø3x12mm H-1 H-2	 I x4 I-1 I-2	 J x16 Ø3x16mm +1(spare) J-1 J-2	 K x32 +3(spare)	 L x2 Ø6x30mm
 M x2 Ø4x14mm M-1 M-2	 N x8 Ø3x10mm N-1 N-2	 O x1 O-1 O-2	 P x8	 Q x1	 R x2 Ø3.5x12mm
 S x1		 T x1	 U x1	 V x24	
 CL x8 L300mm	 CR x8 L300mm	 DL x8 L300mm	 DR x8 L300mm		


A x24




B x24




C x12



D x24




F x6



F-1

F-2

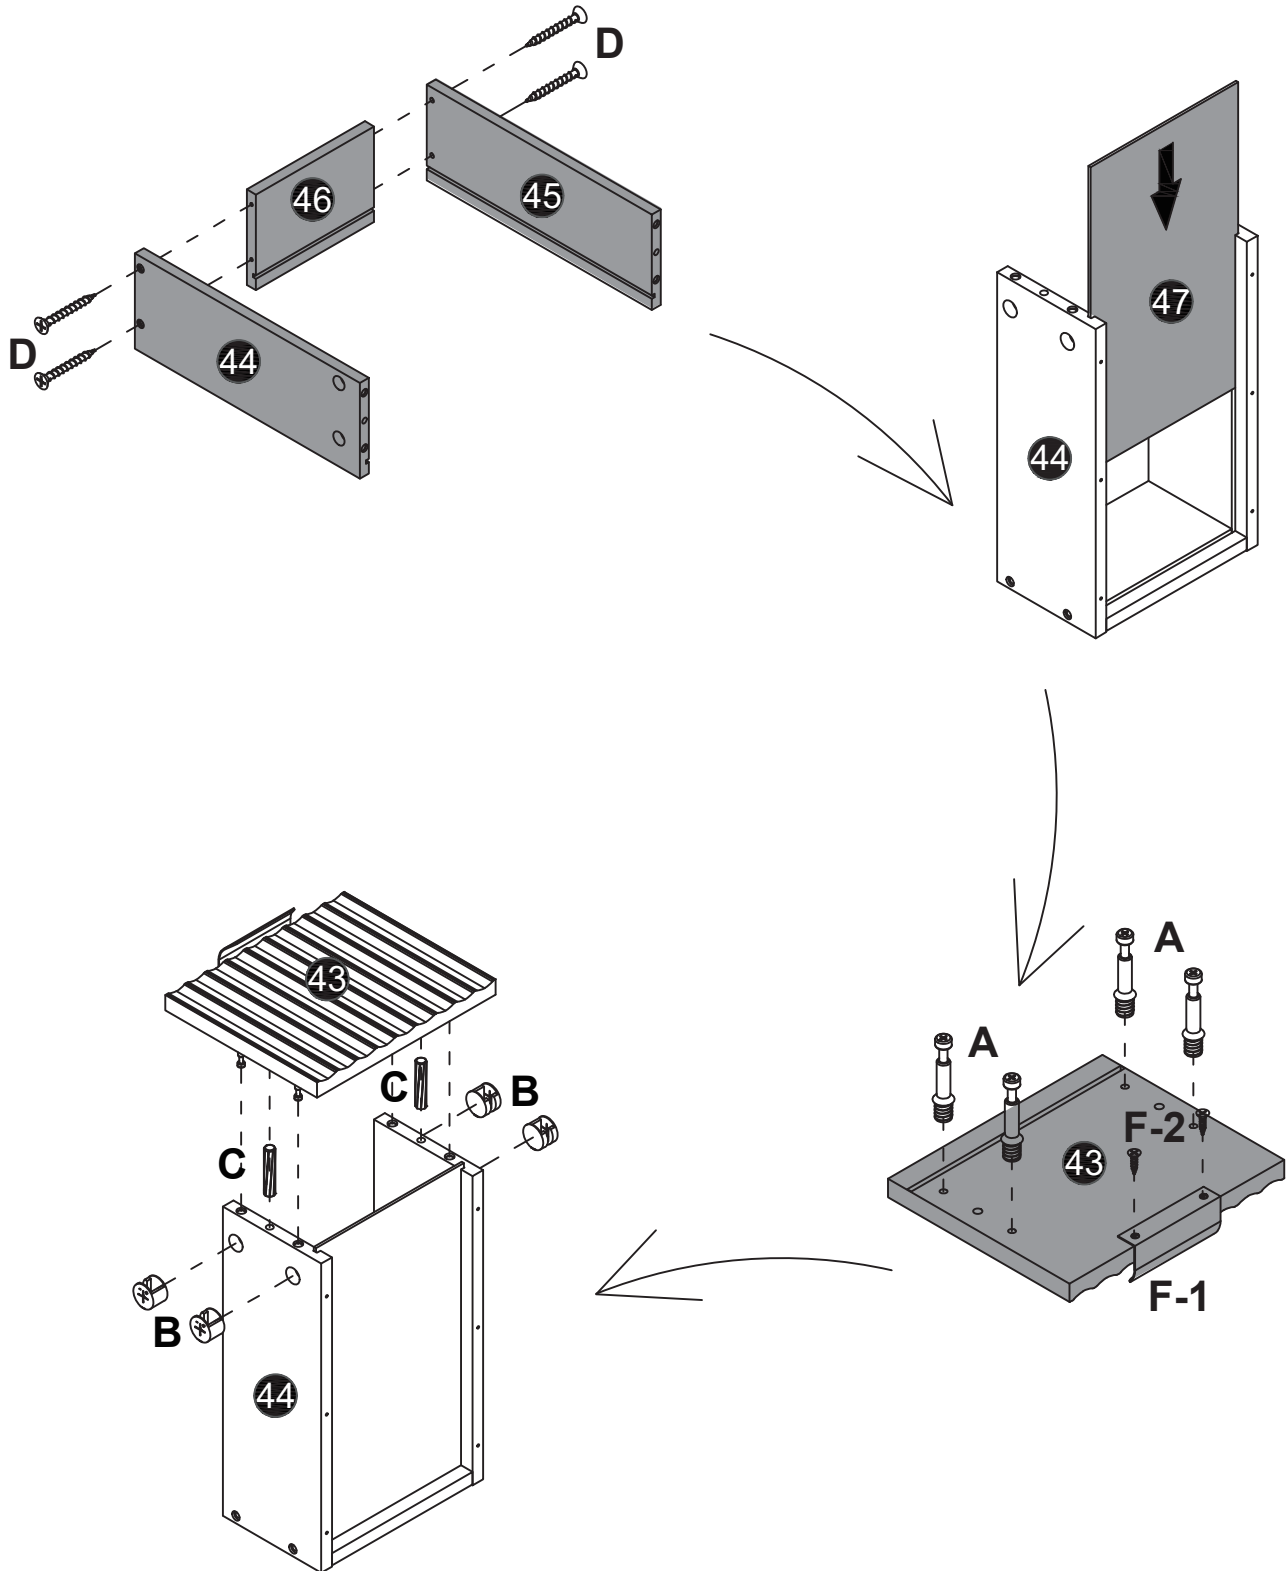


x6

02

E x36

DL x6



DR x6

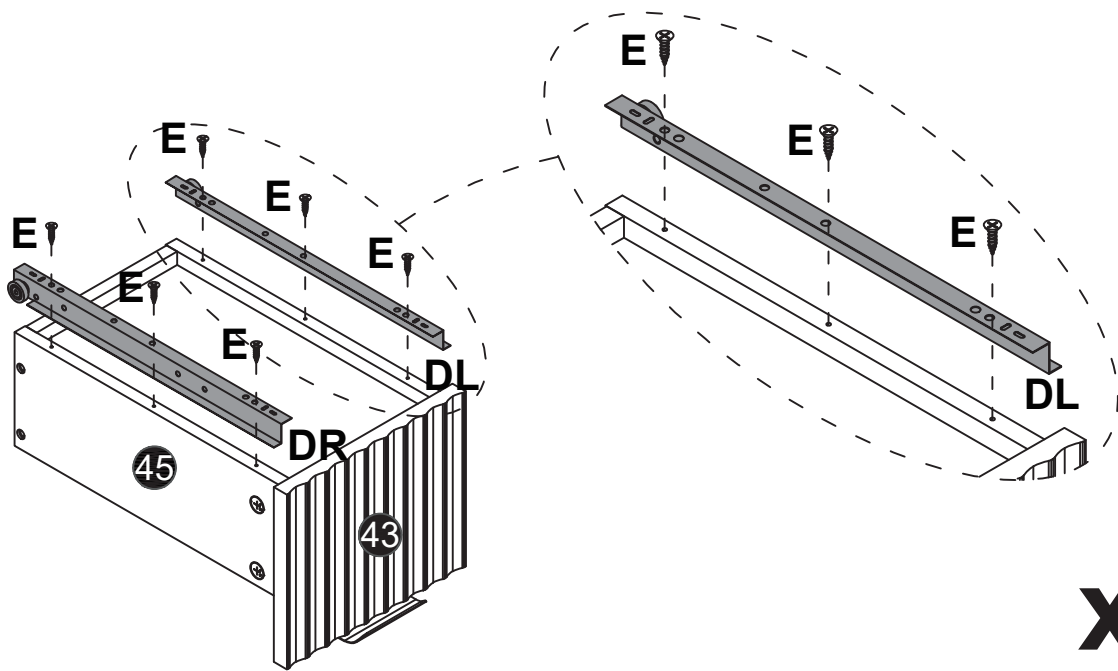

x6


03

D x8

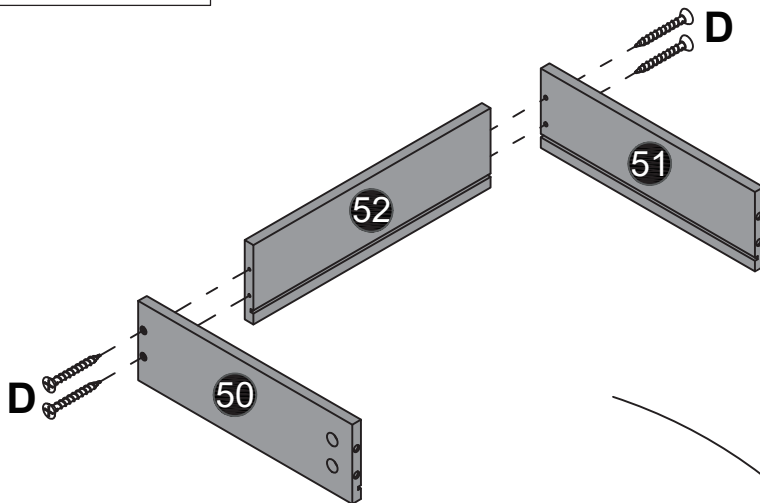

x2


A x8



B x8



F x2







E x12



DL x2




DR x2

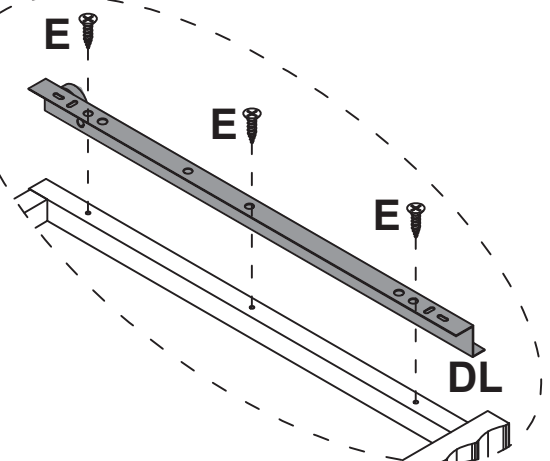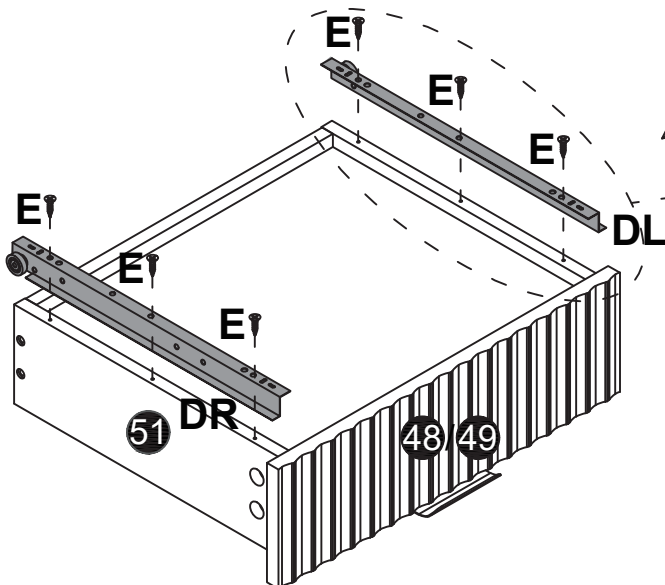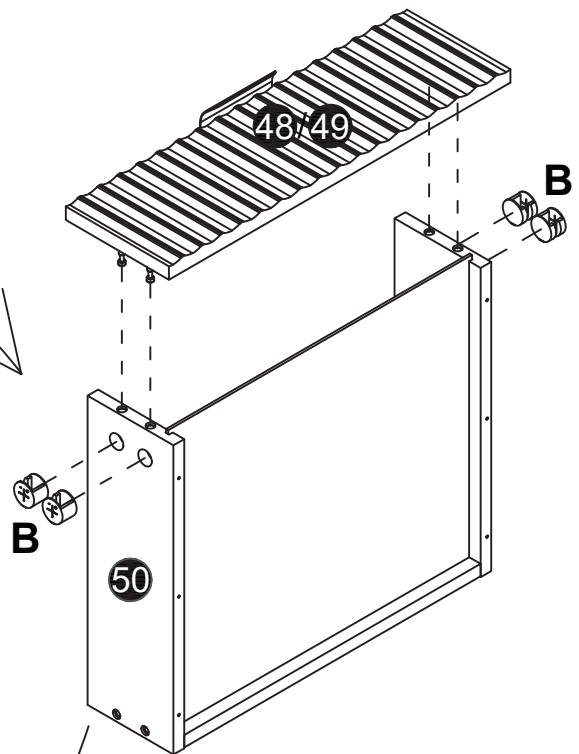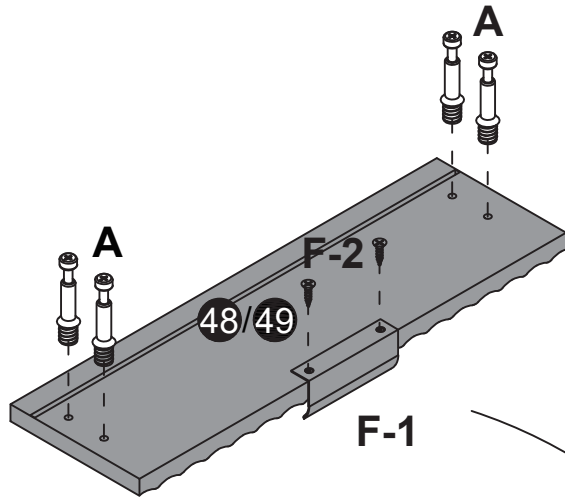



E x9



CL x3

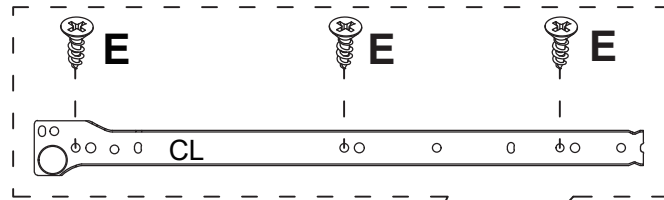


Attention,
first hole

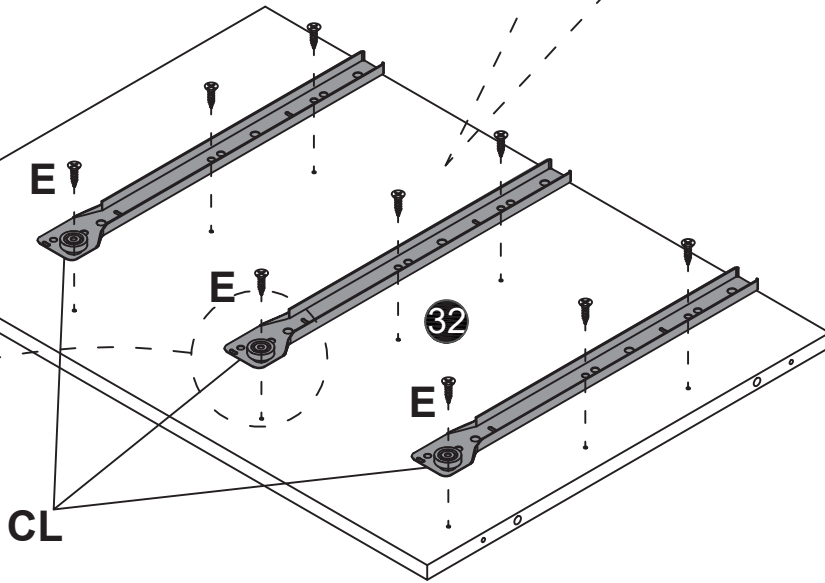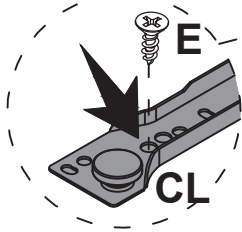



E x9



CR x3

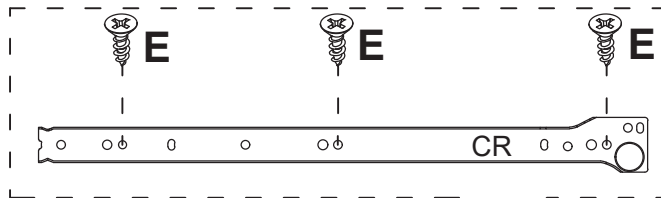



Attention,
first hole

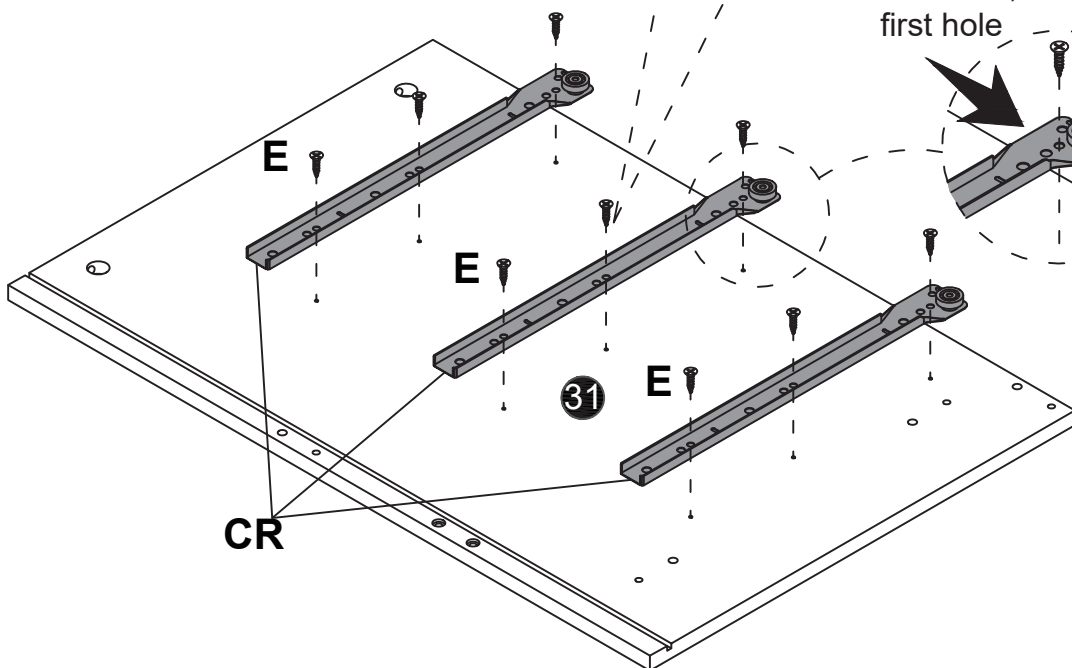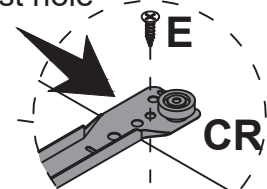

E x9




CR x3

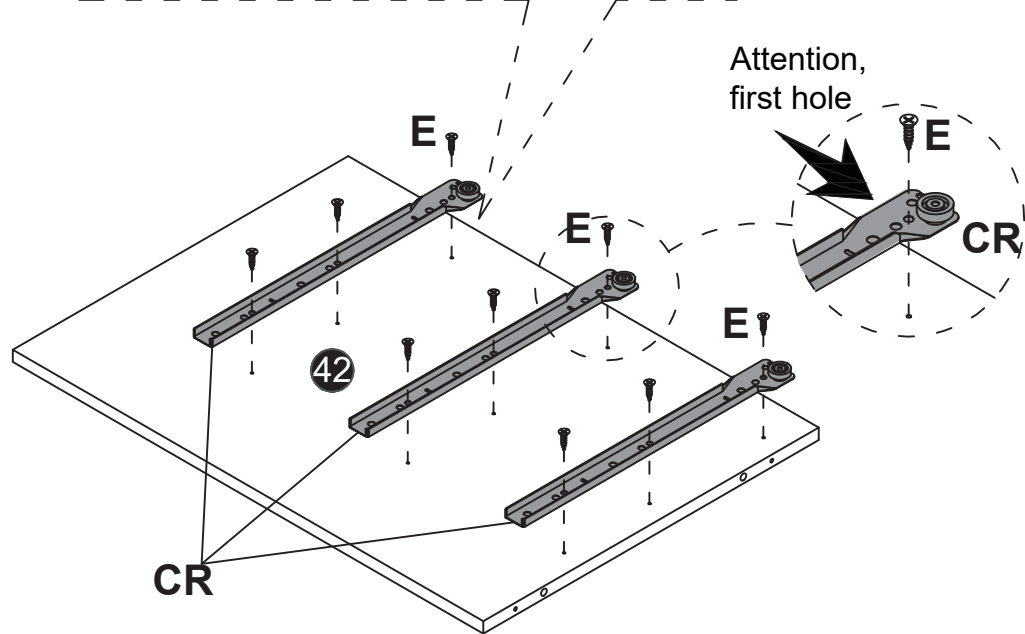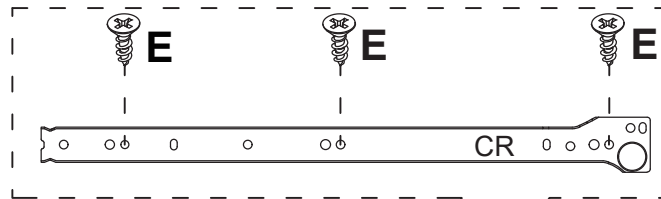



E x9



CL x3

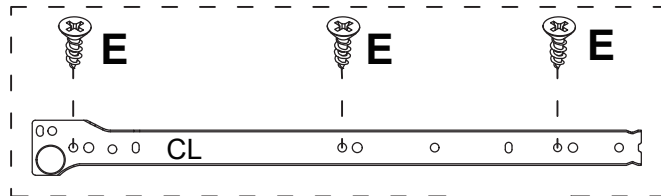



Attention,
first hole

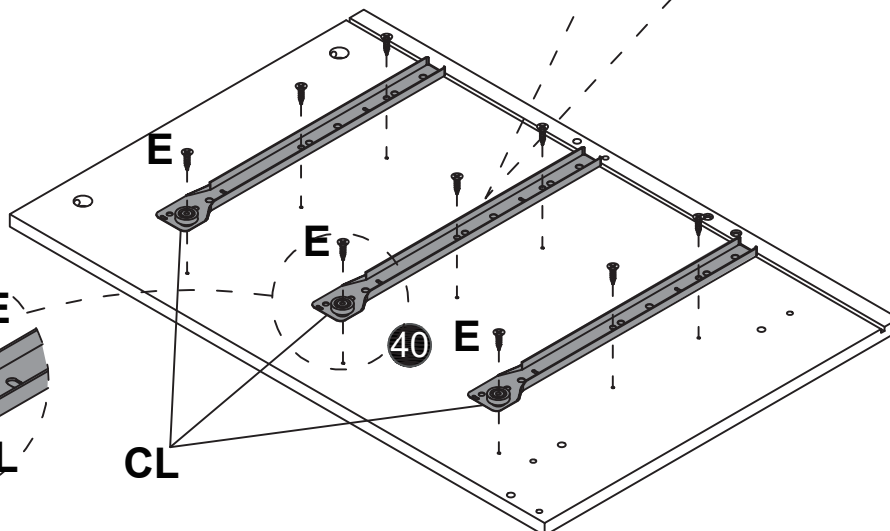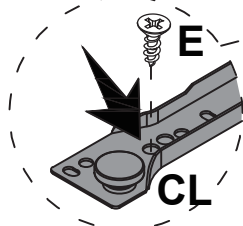

C x2





D x2

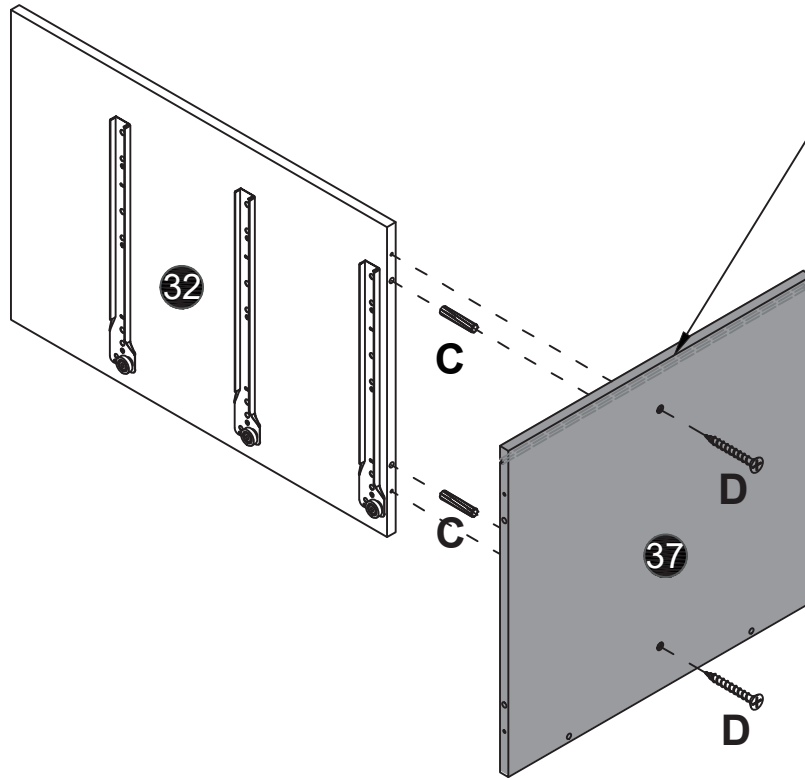



C x2




D x2

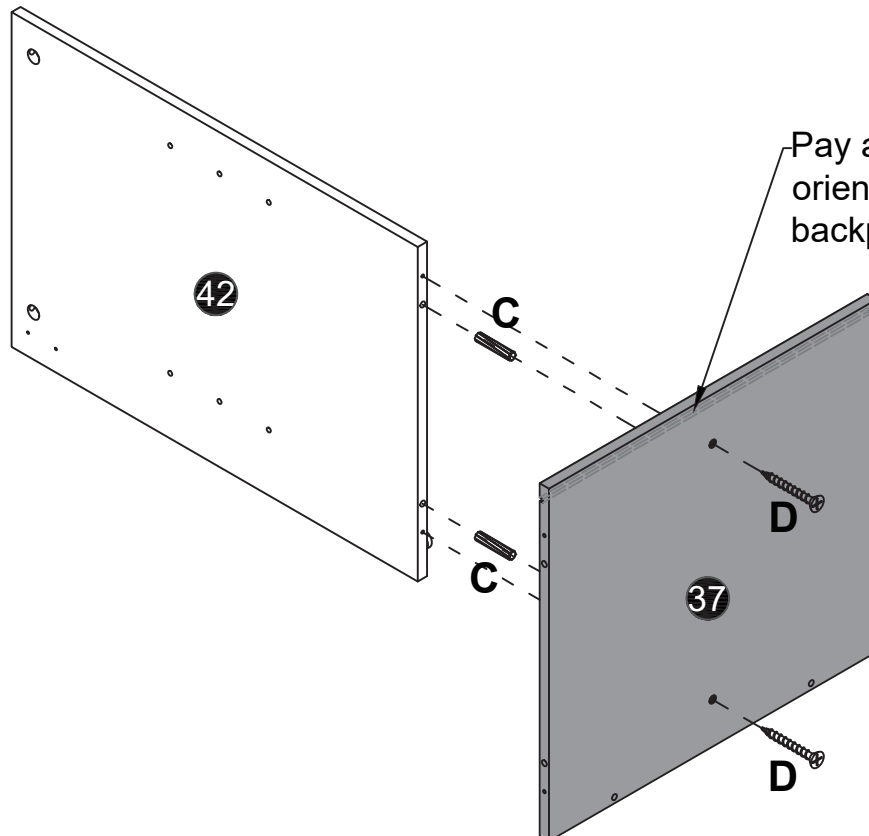

C x2


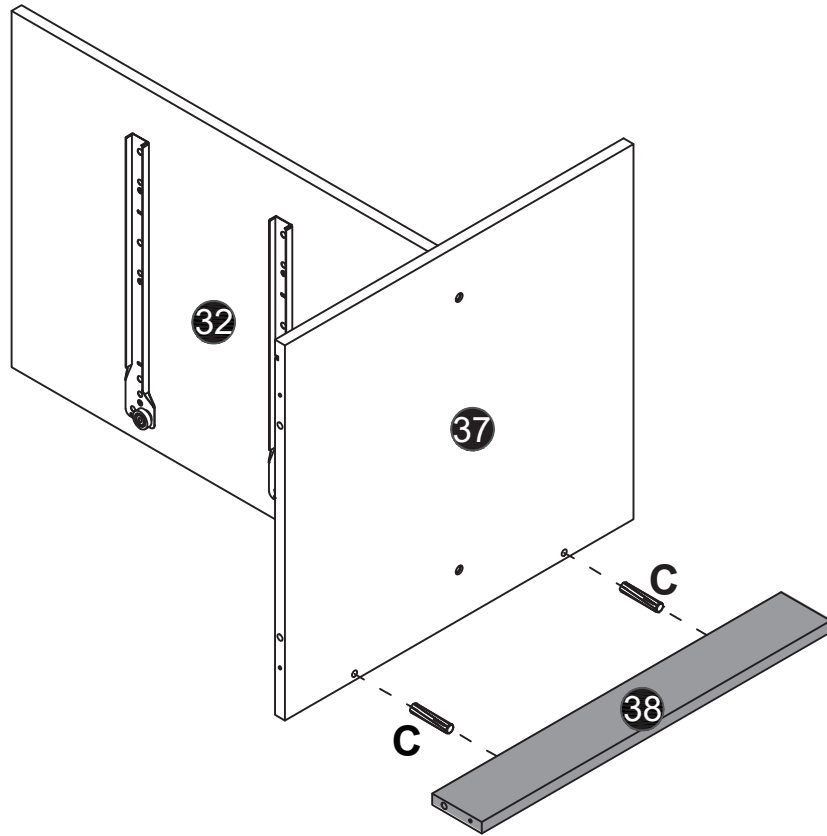



C x2

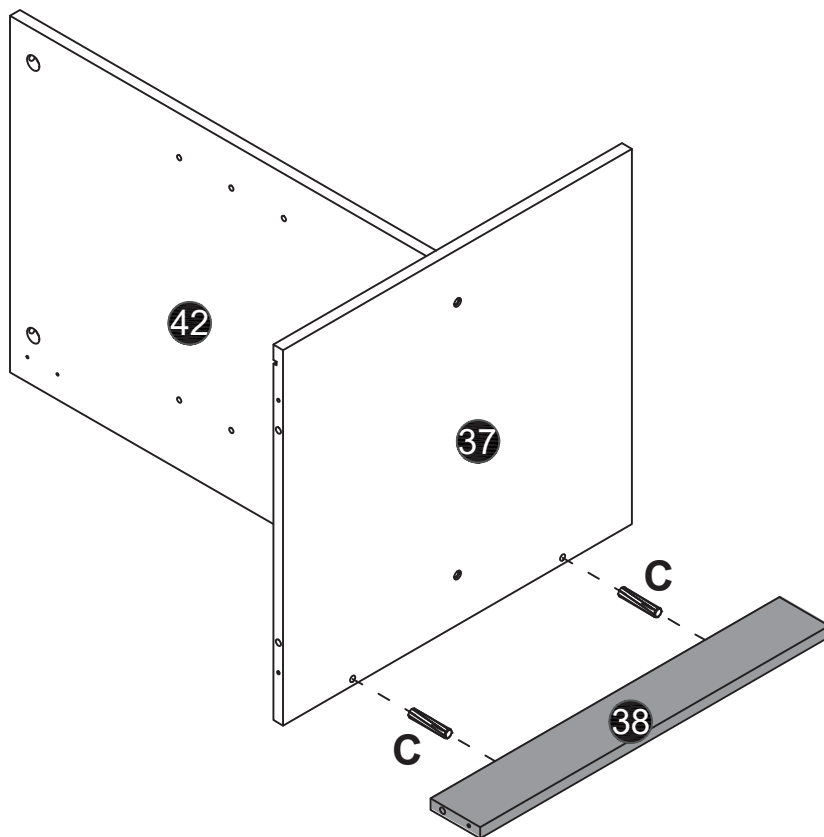



C x4

D x4

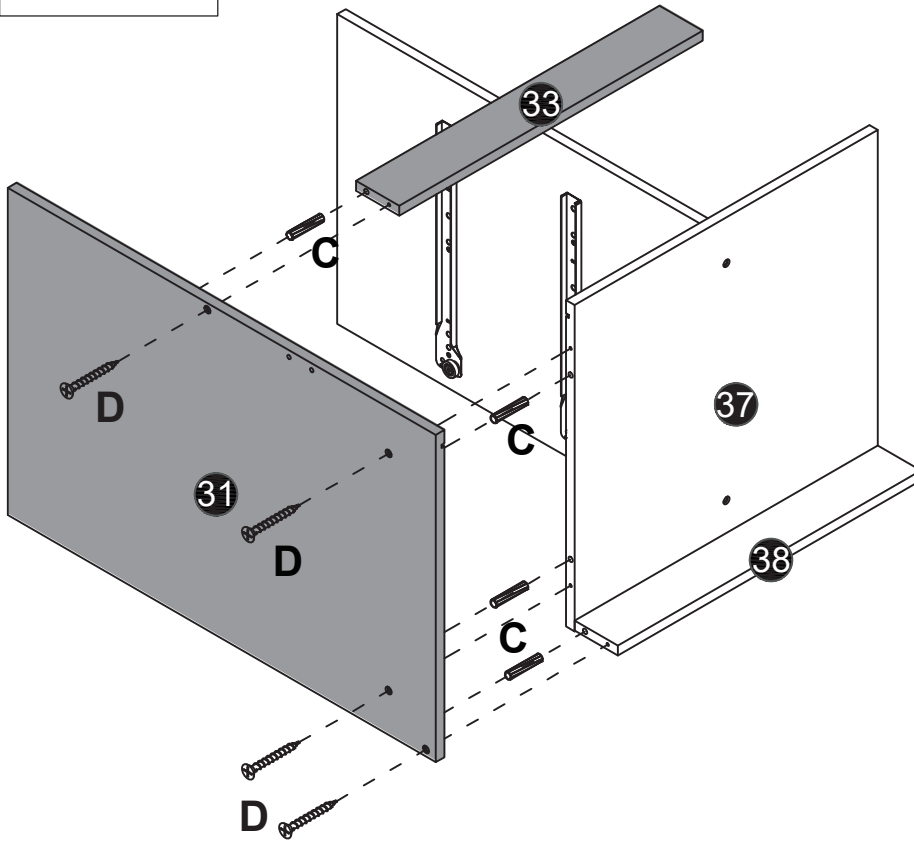



C x4

D x4

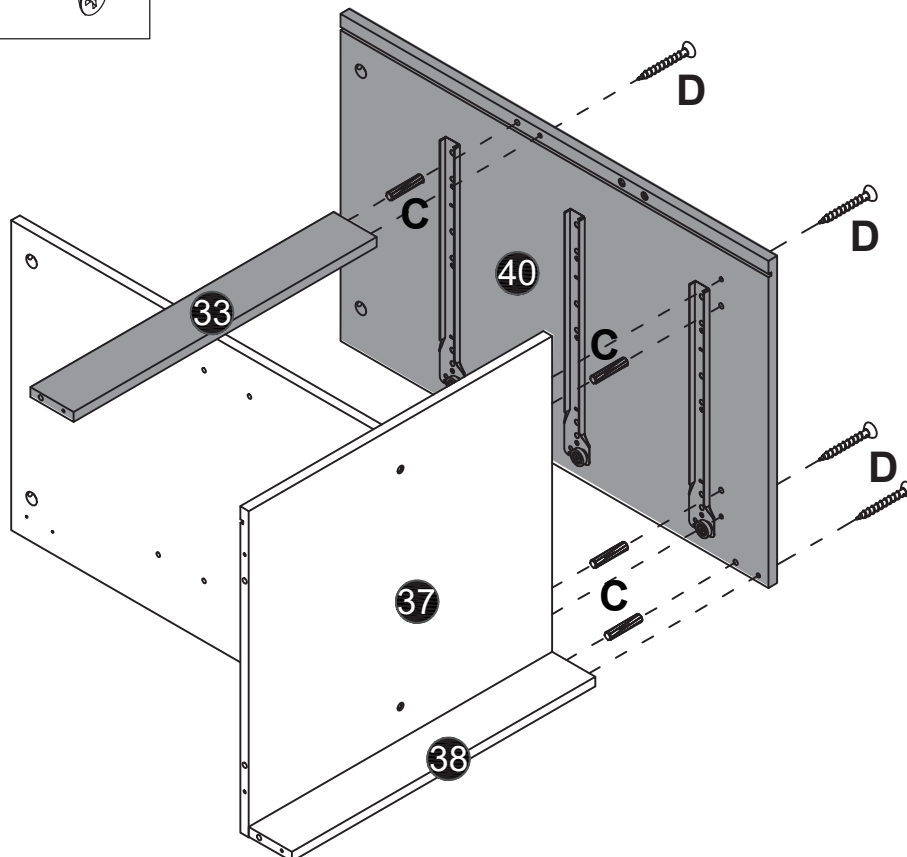


S x1

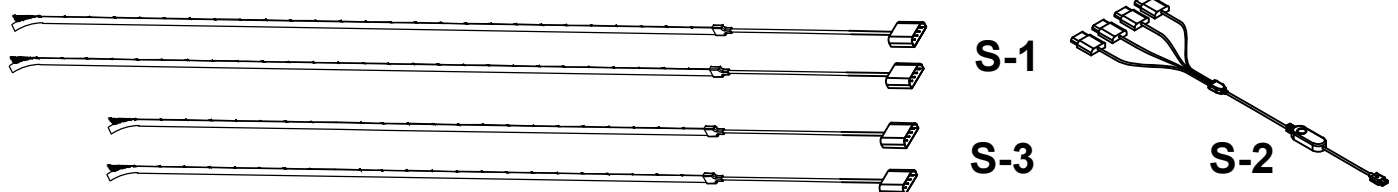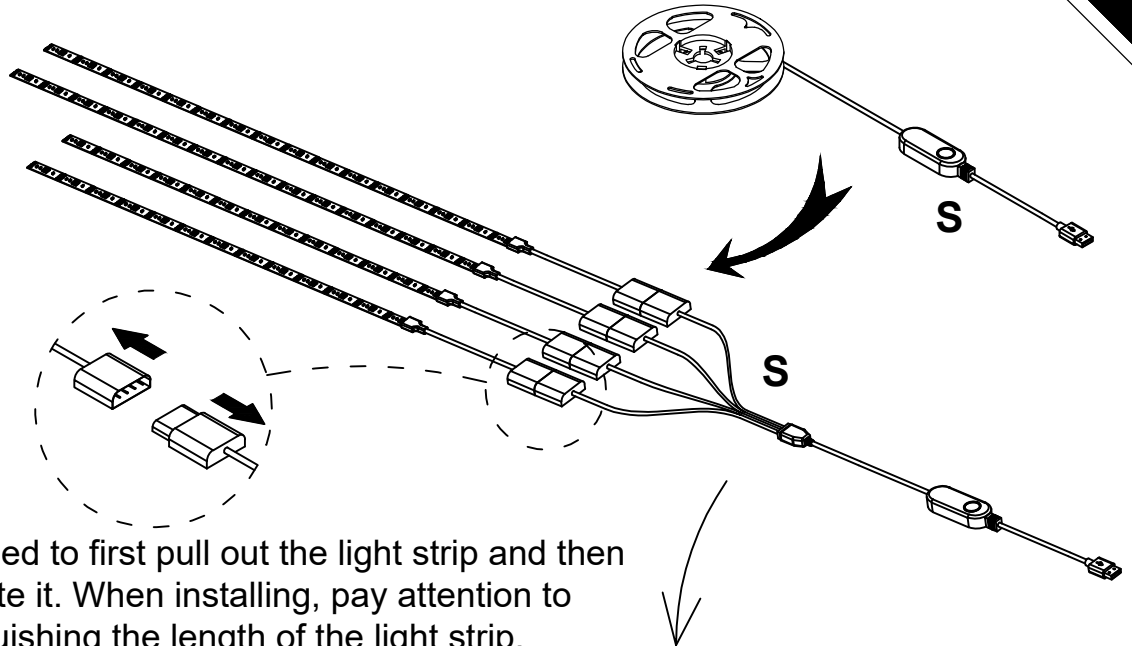


S-3x1

! To avoid installation deviation, please install along the positioning hole.

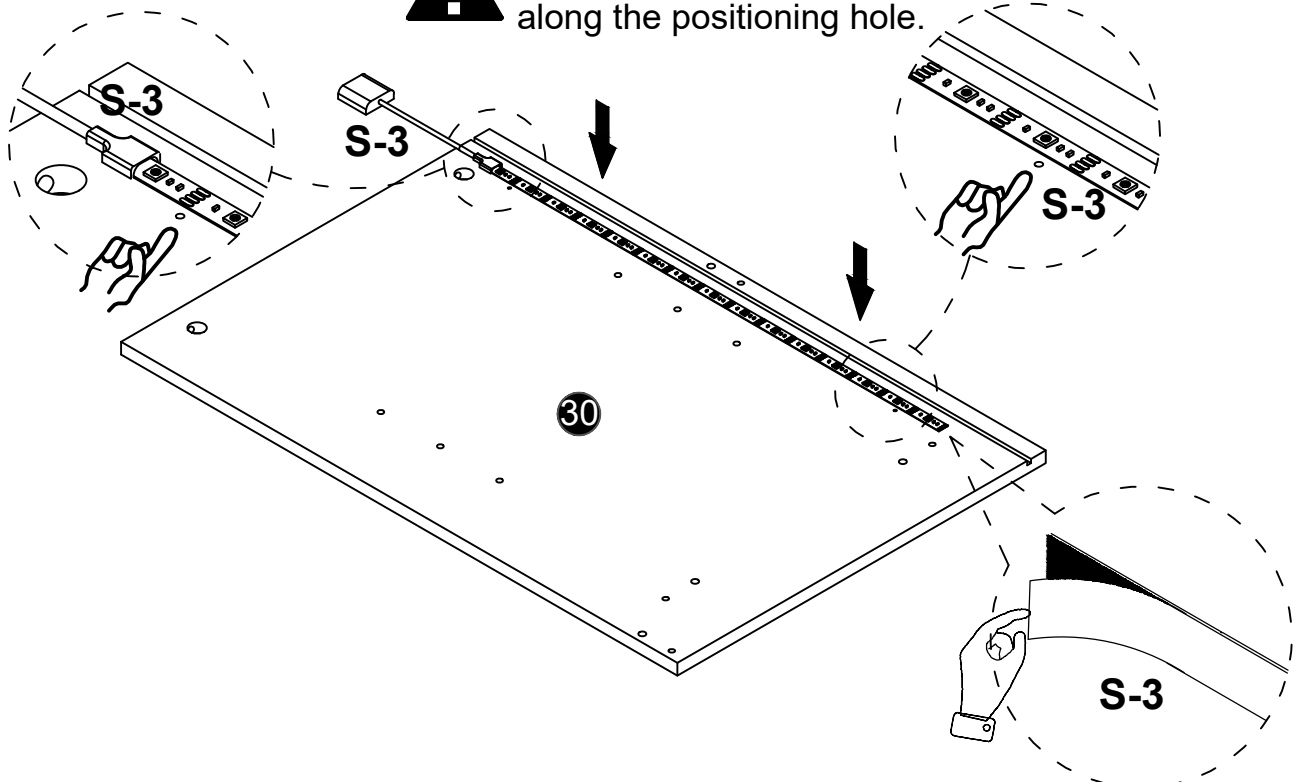


! Tear off the back glue of the light strip.

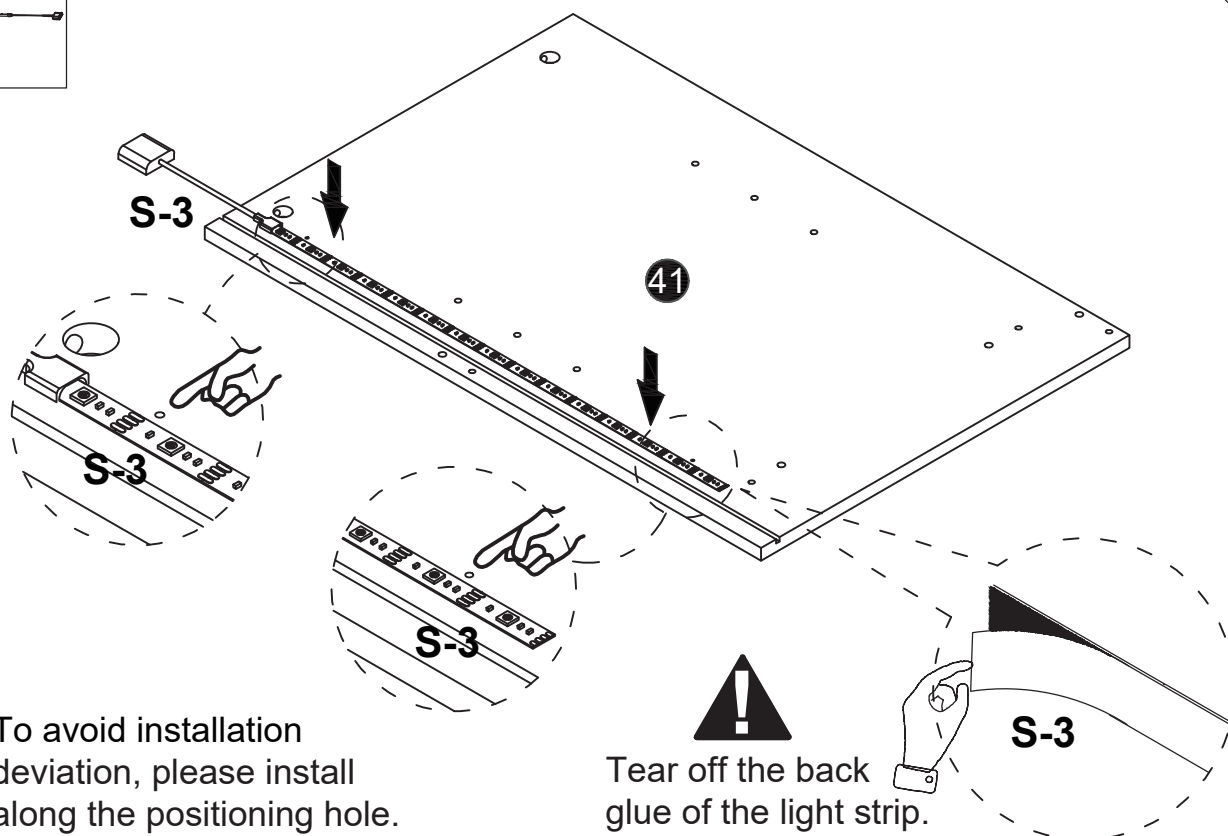

N-1





N-2

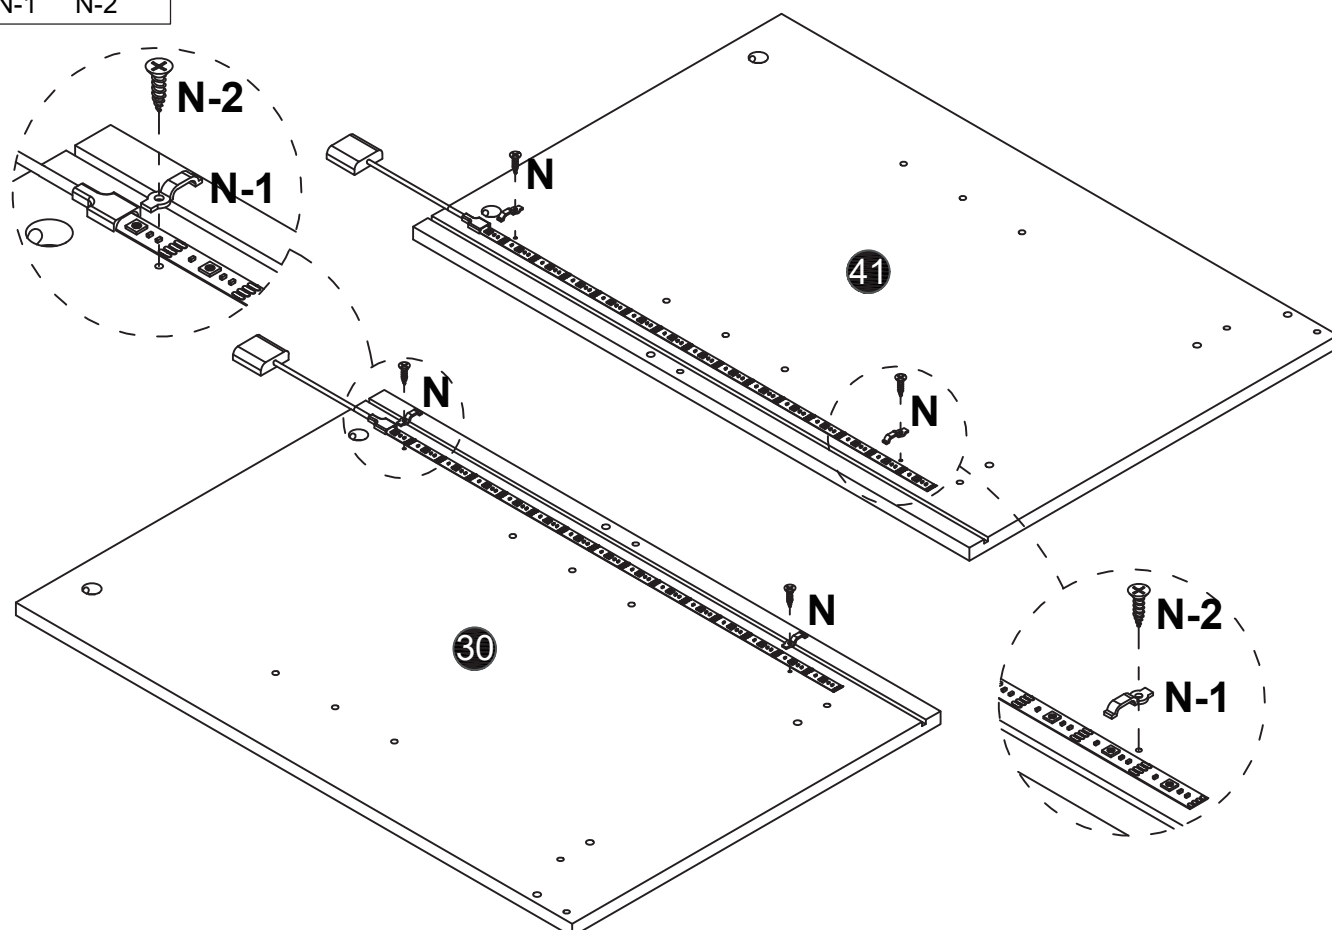



C x4




D x4

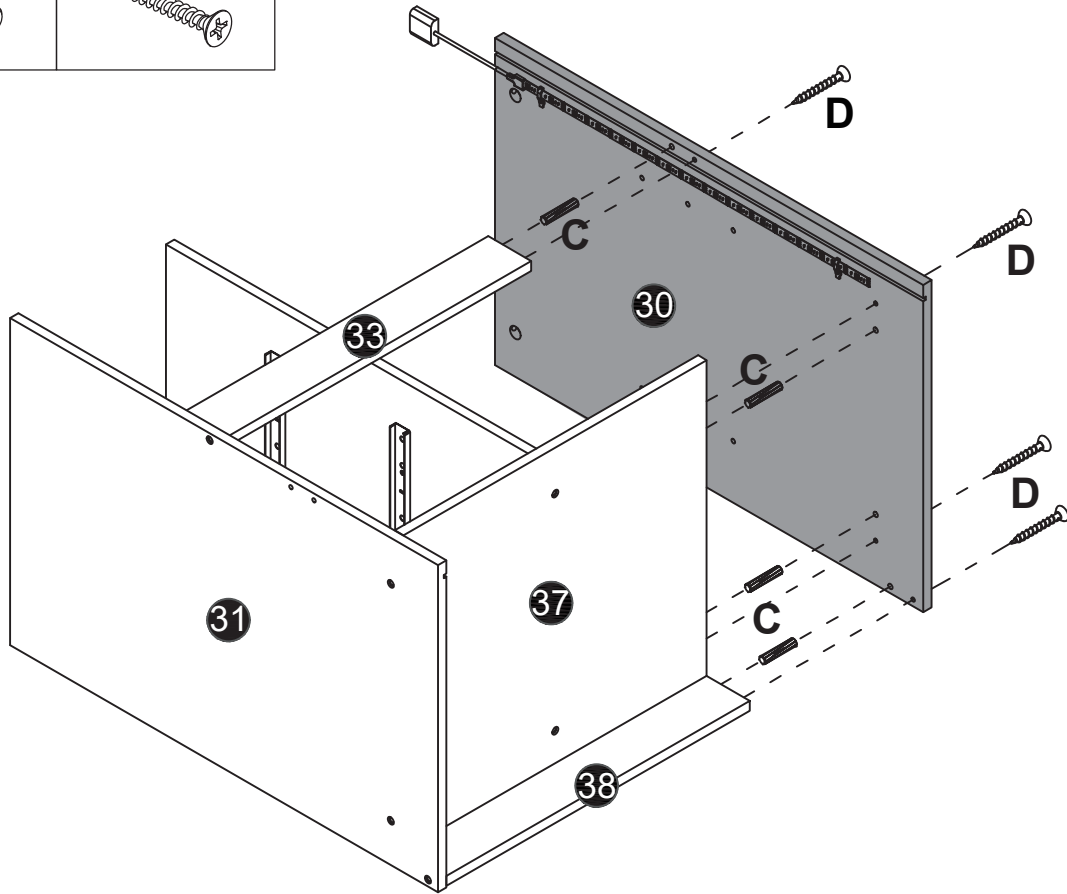


C x4

D x4

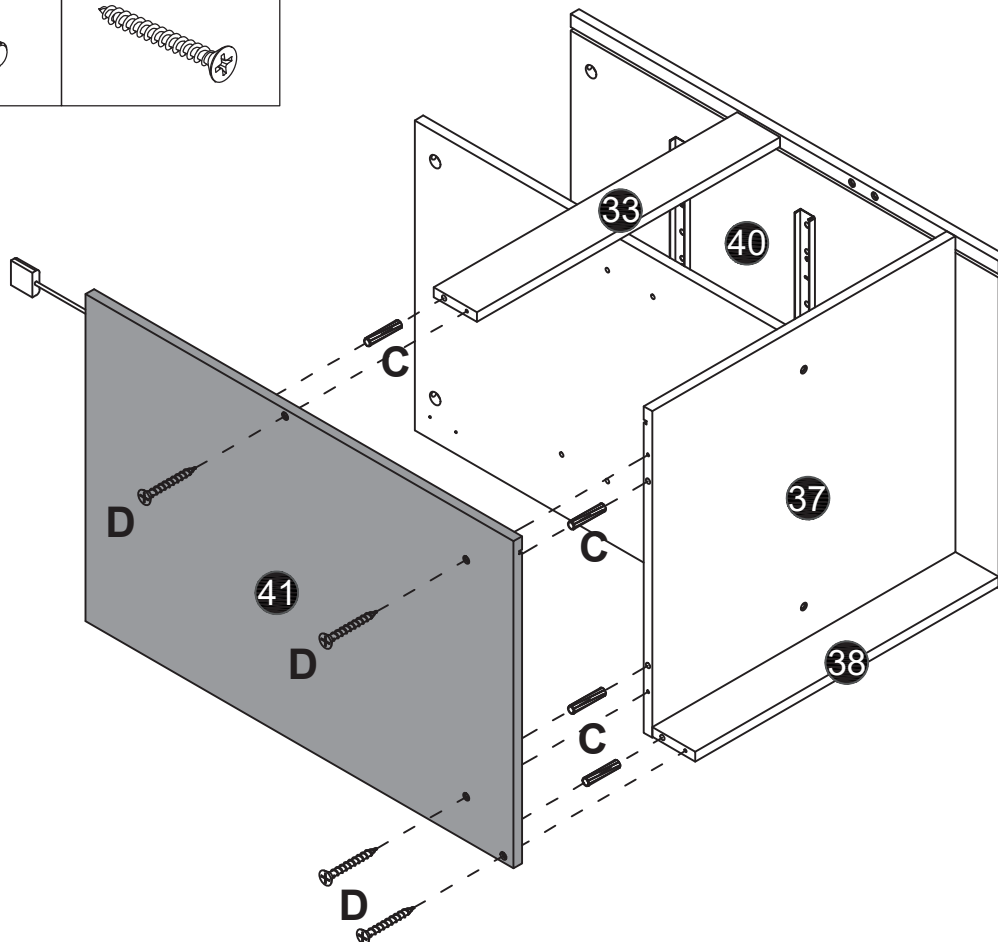

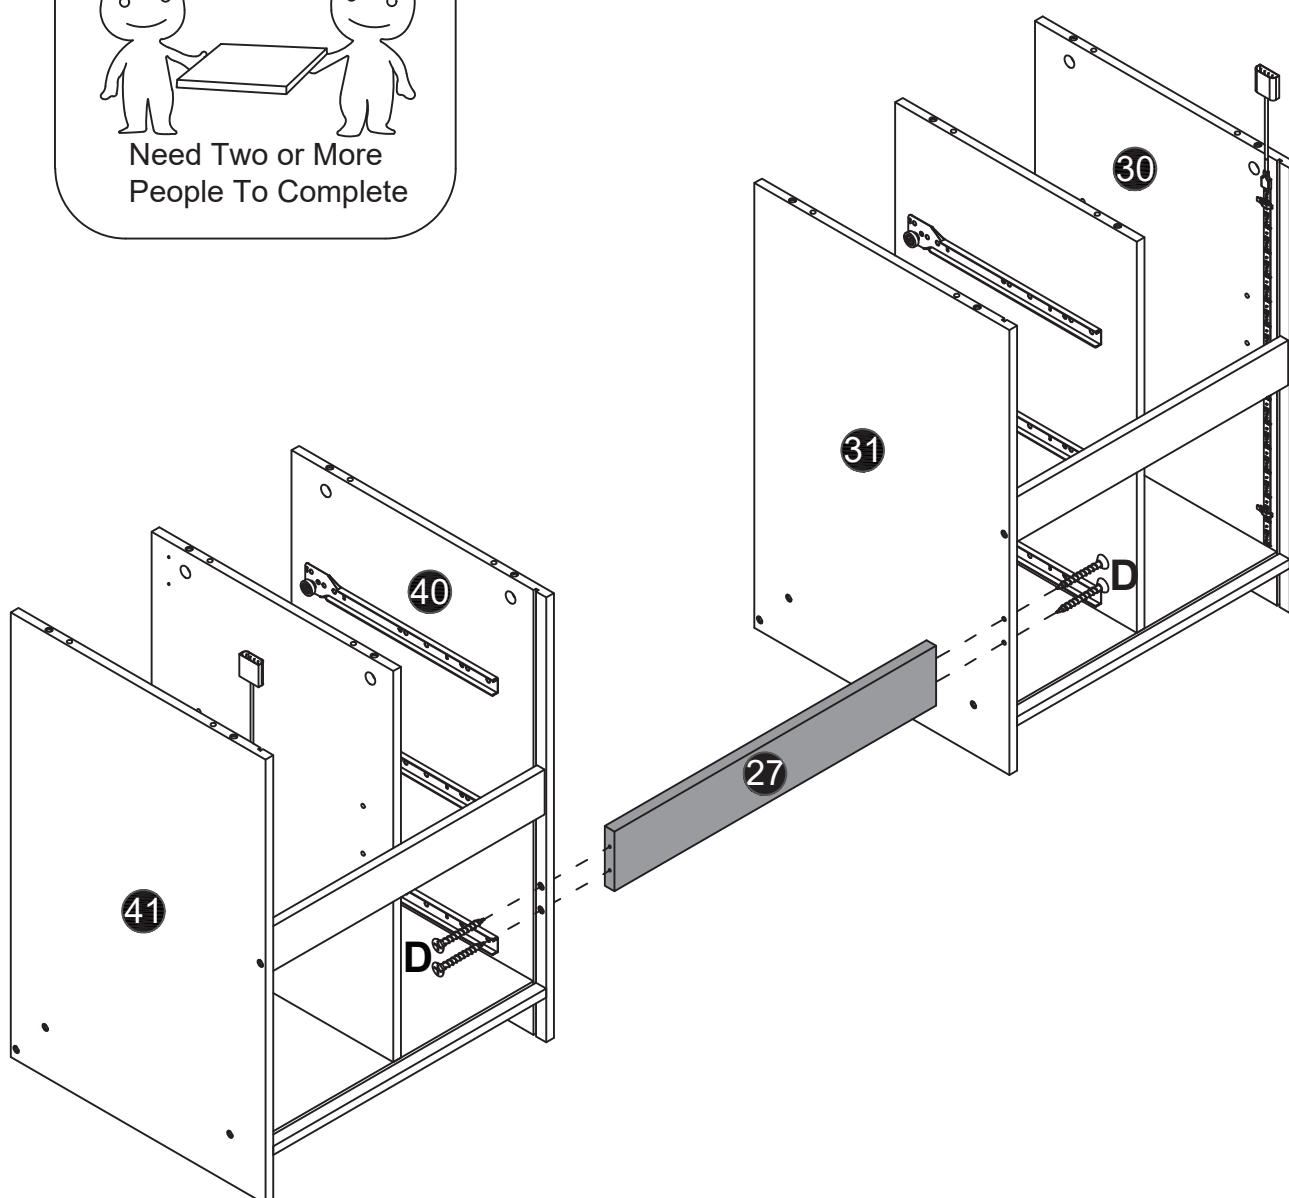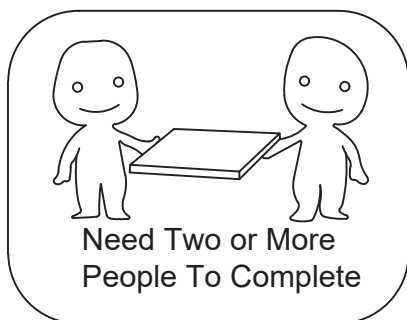

C x12




G x2




G-1




G-2

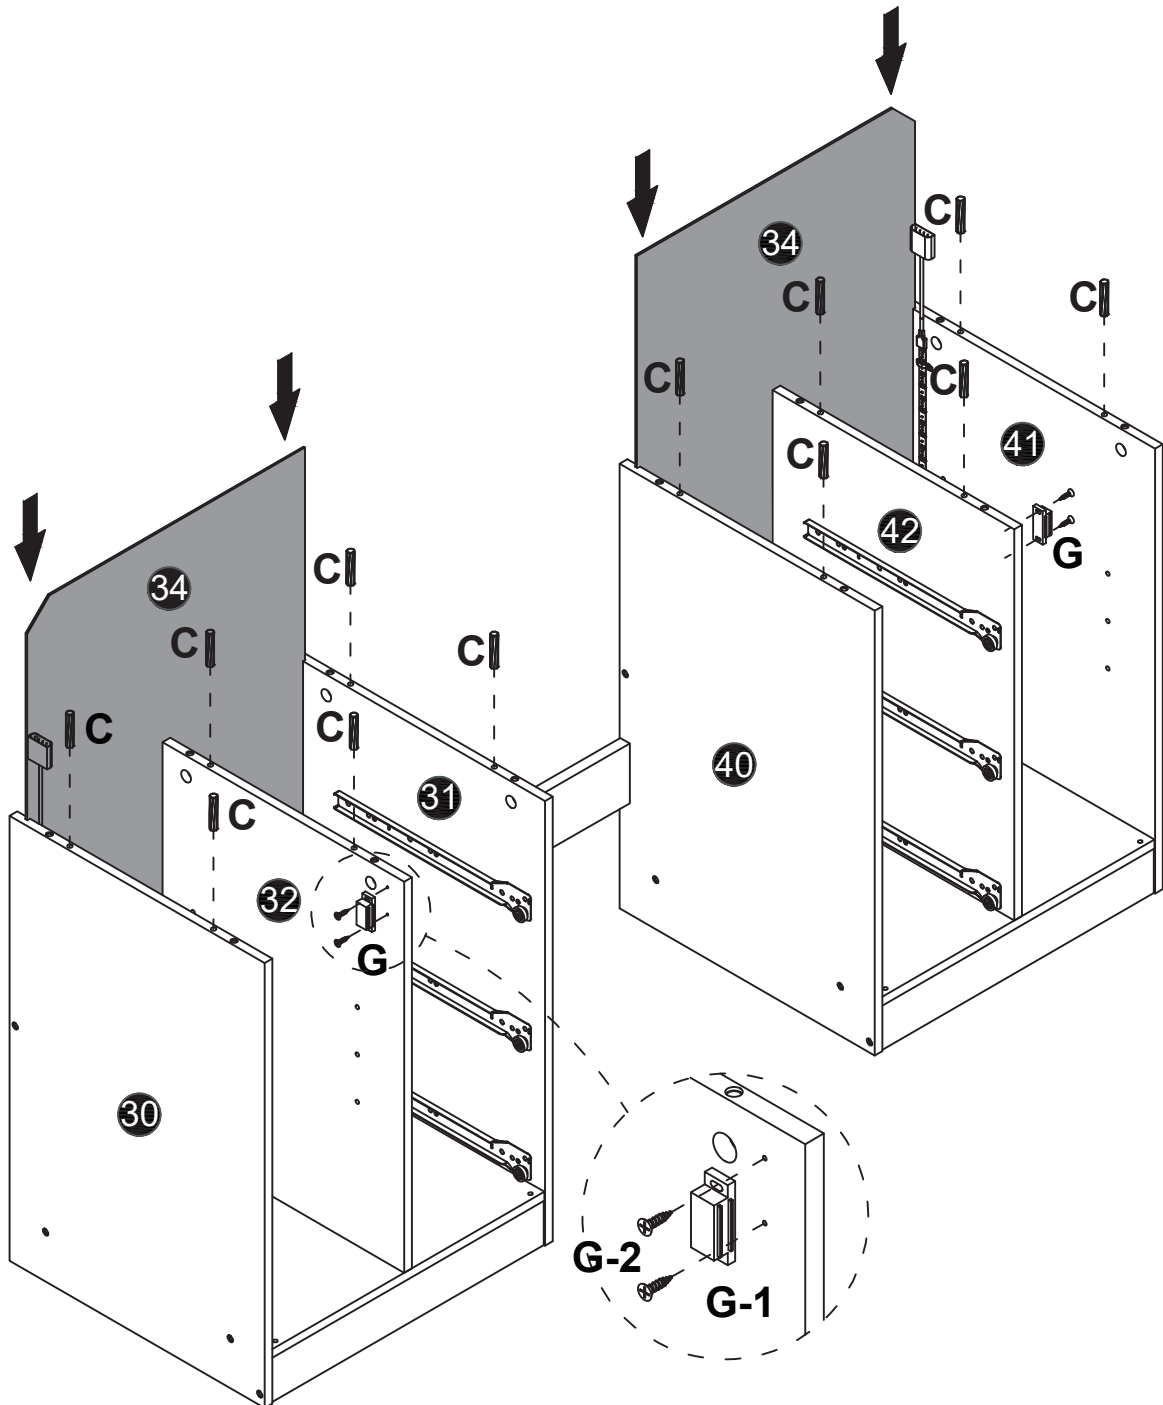


A x6




23

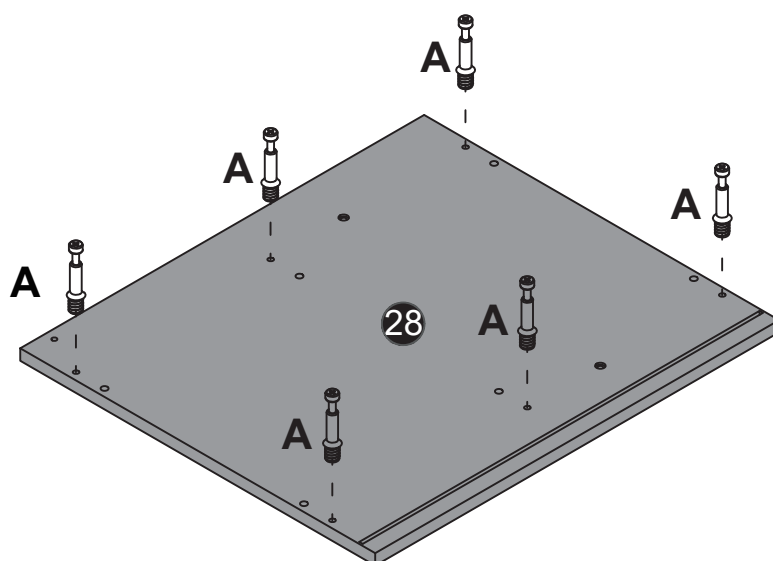


A x6



24


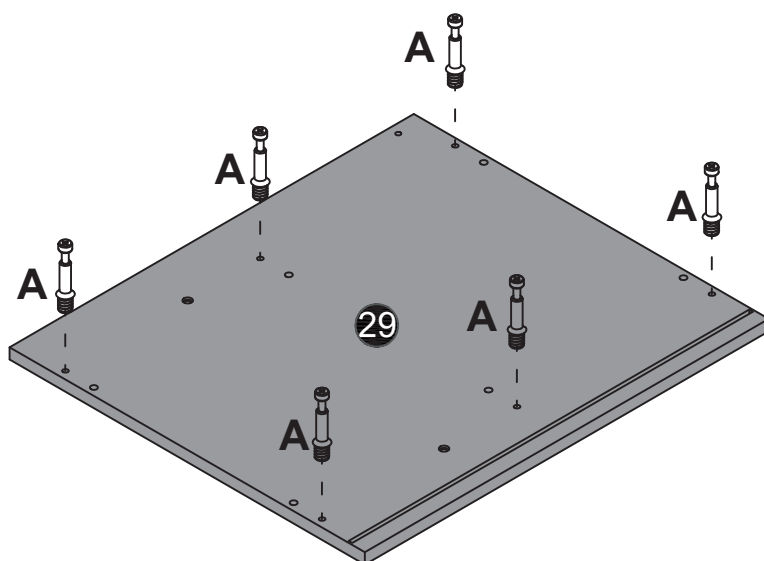


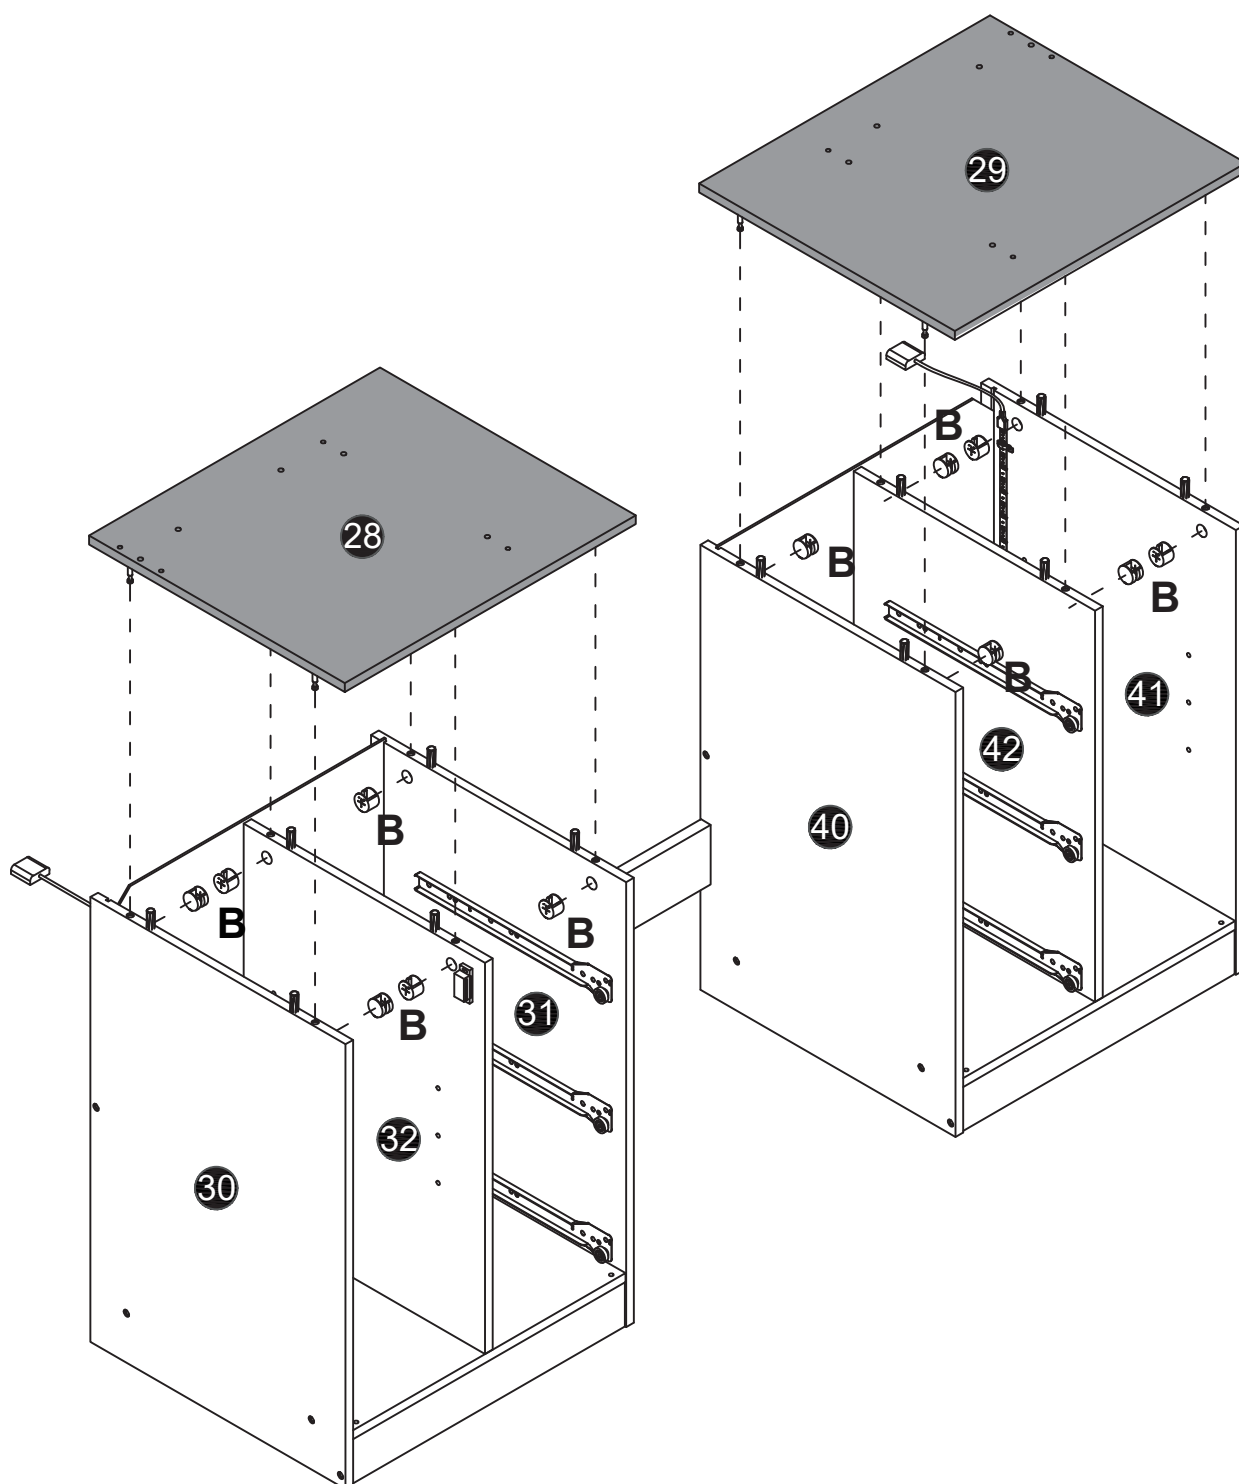




E x6

CL x1


CR x1

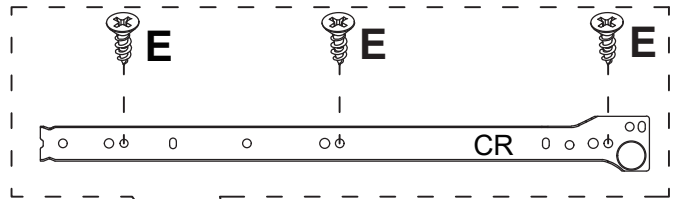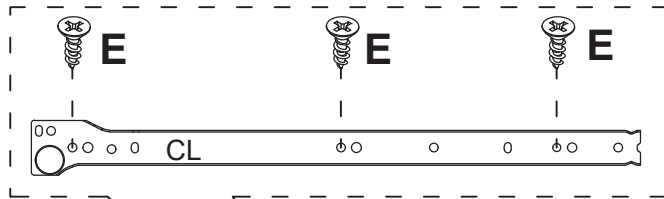

Attention,
first hole

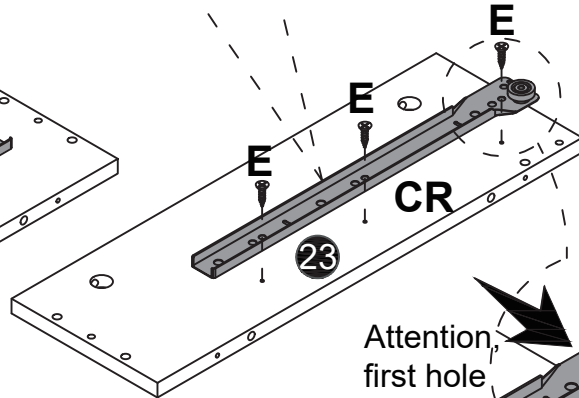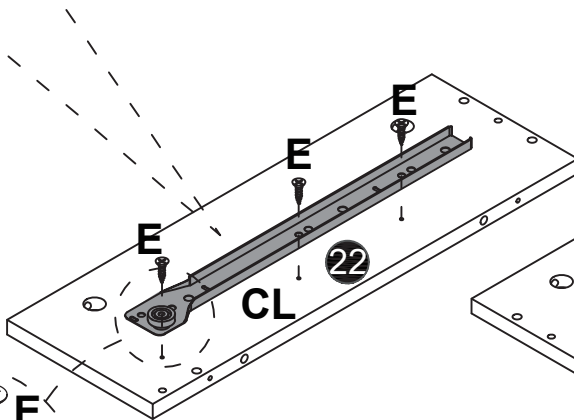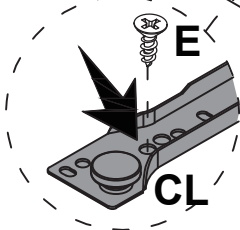




Attention,
first hole

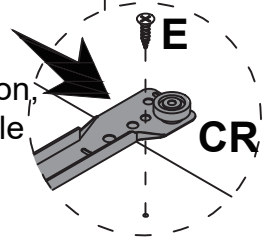


E x6

CL x1


CR x1

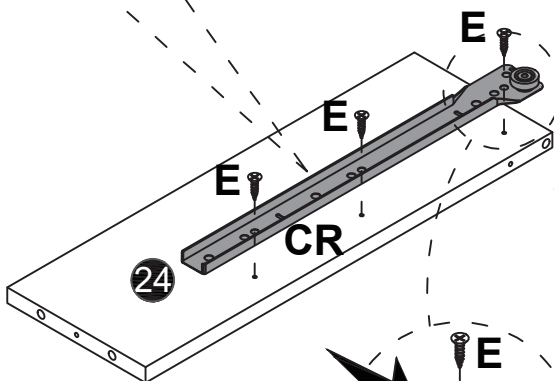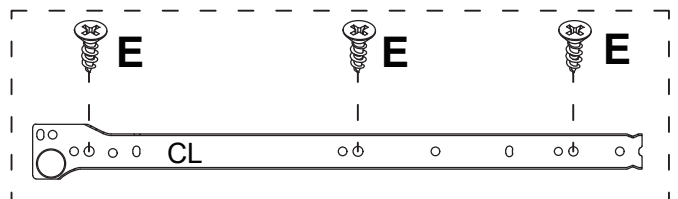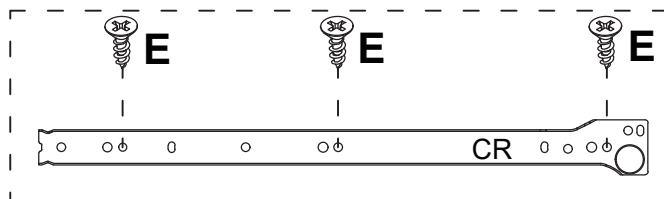


180°

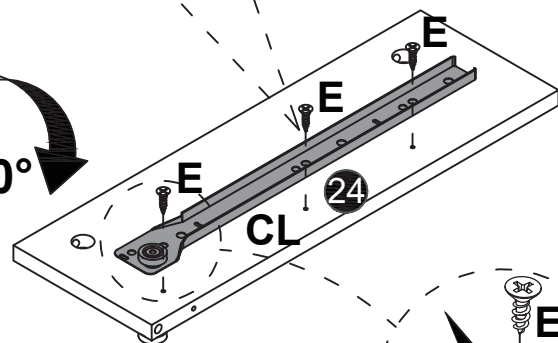


Attention,
first hole

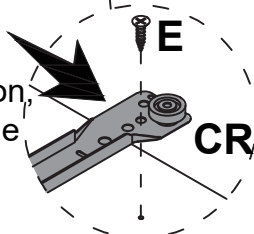



Attention,
second hole

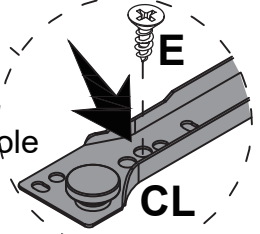

C x2





D x1

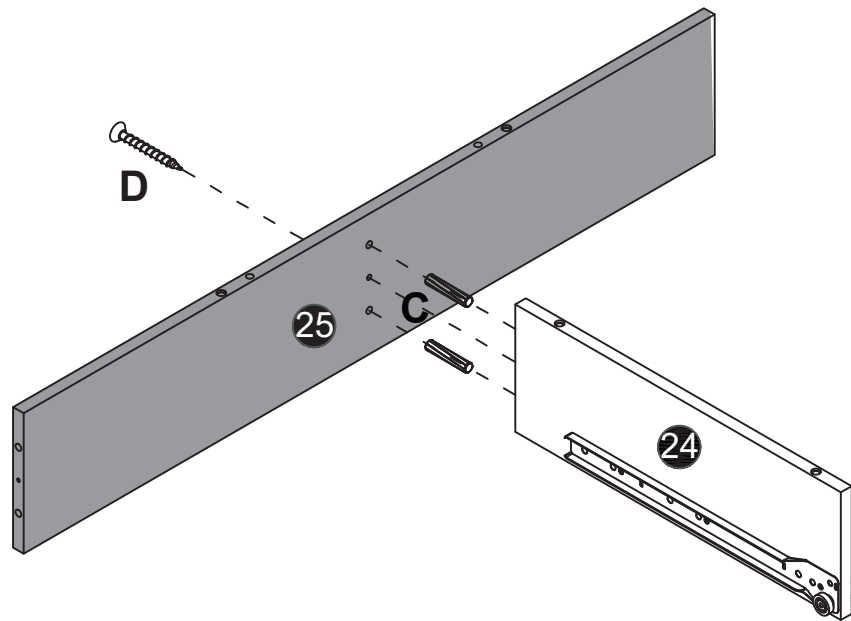


C x1





D x1

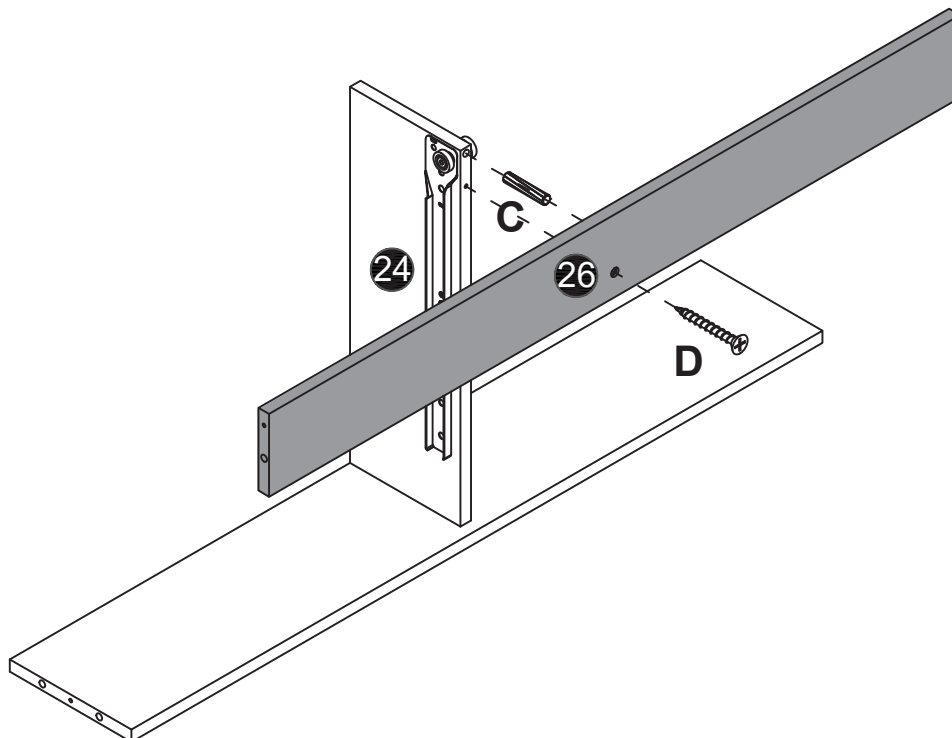

C x6





D x4

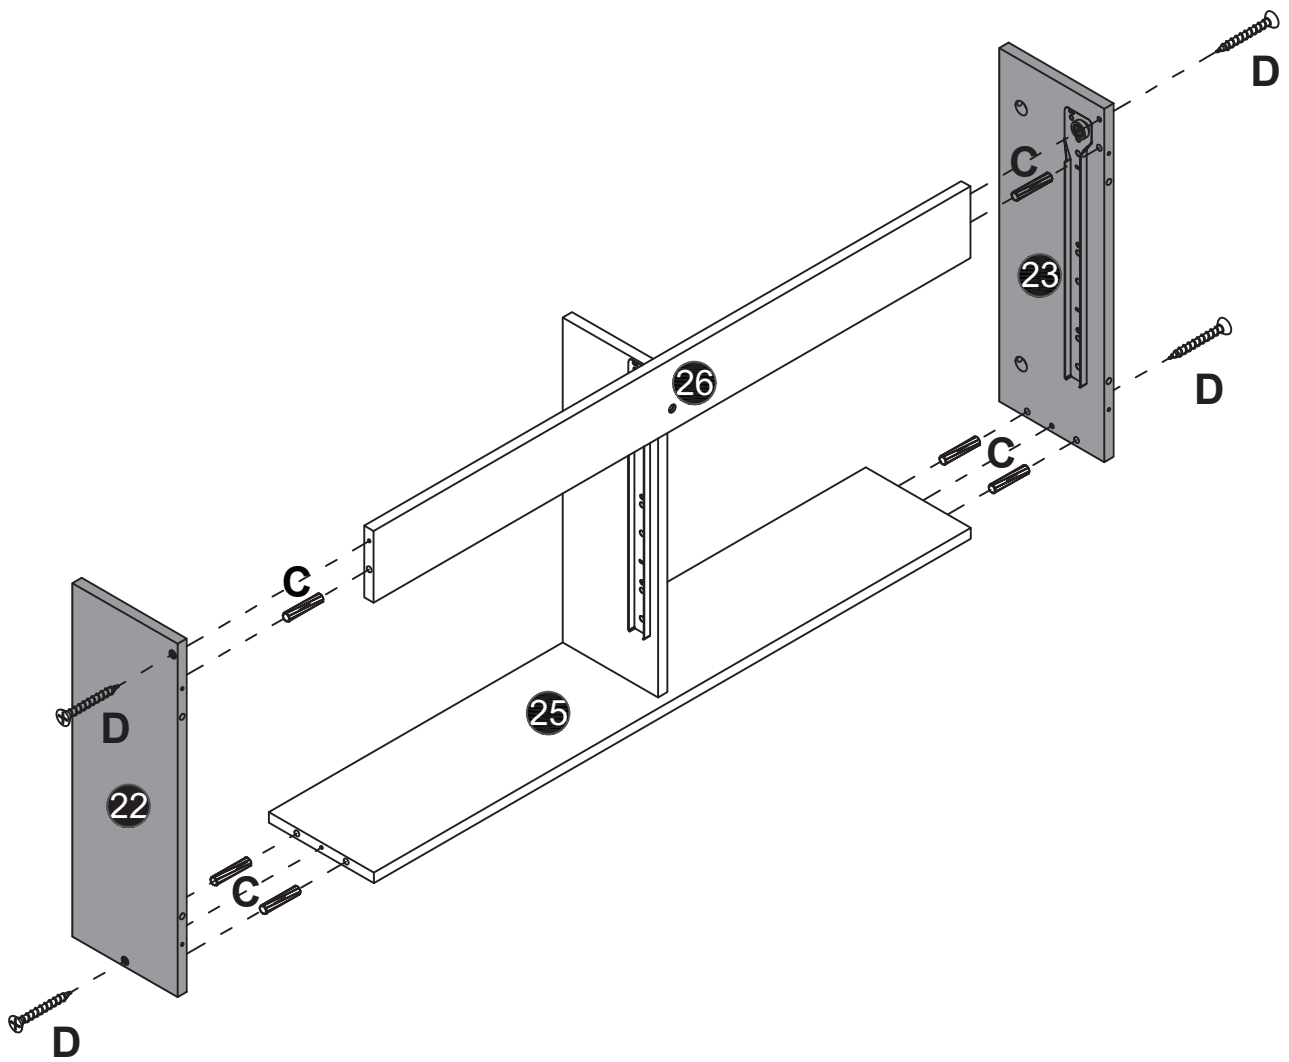


C x4





D x4

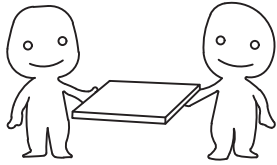



Need Two or More
People To Complete

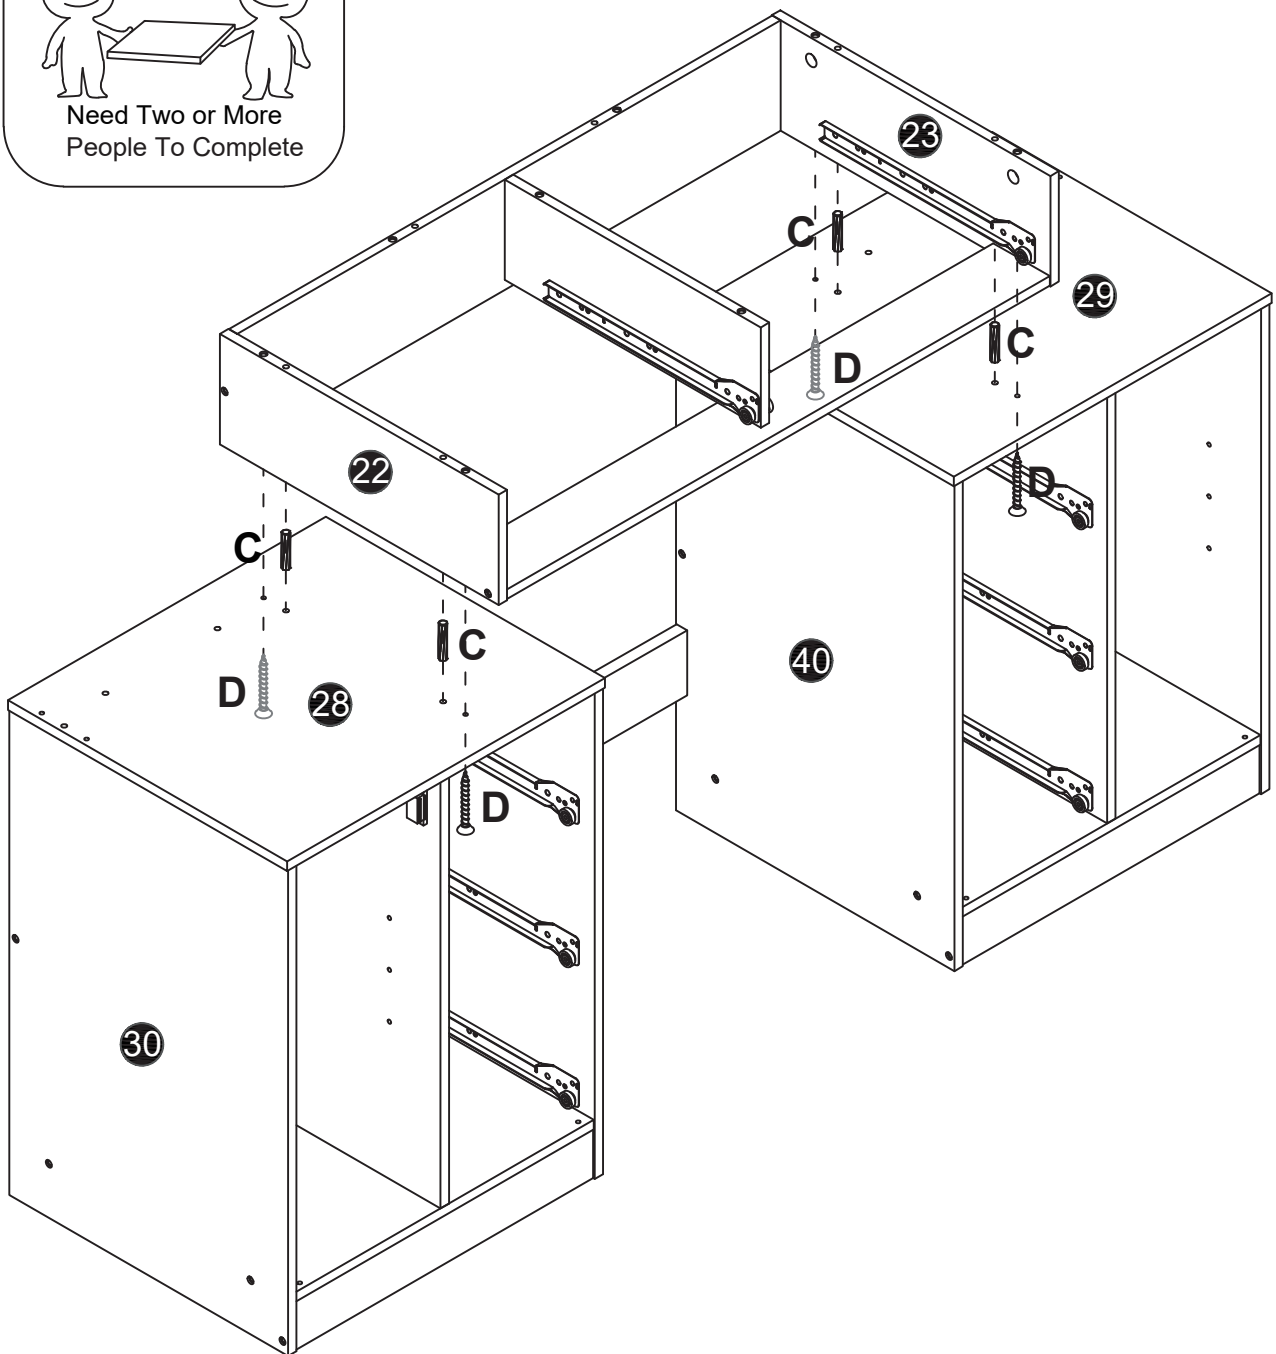


A x8

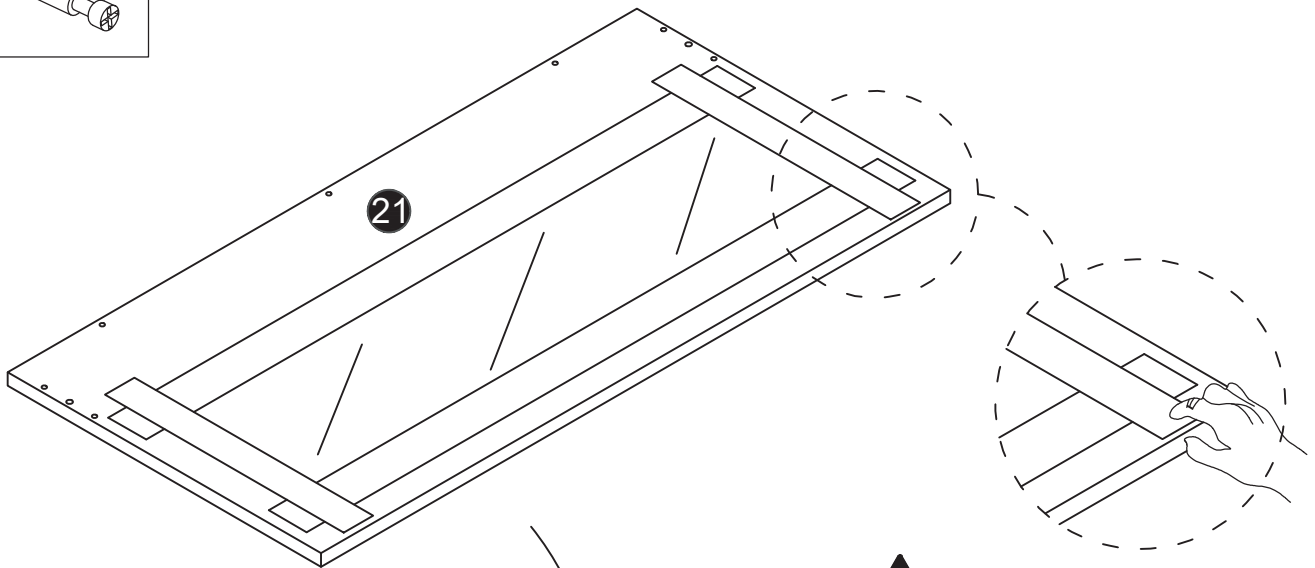


Tear off the tape first.

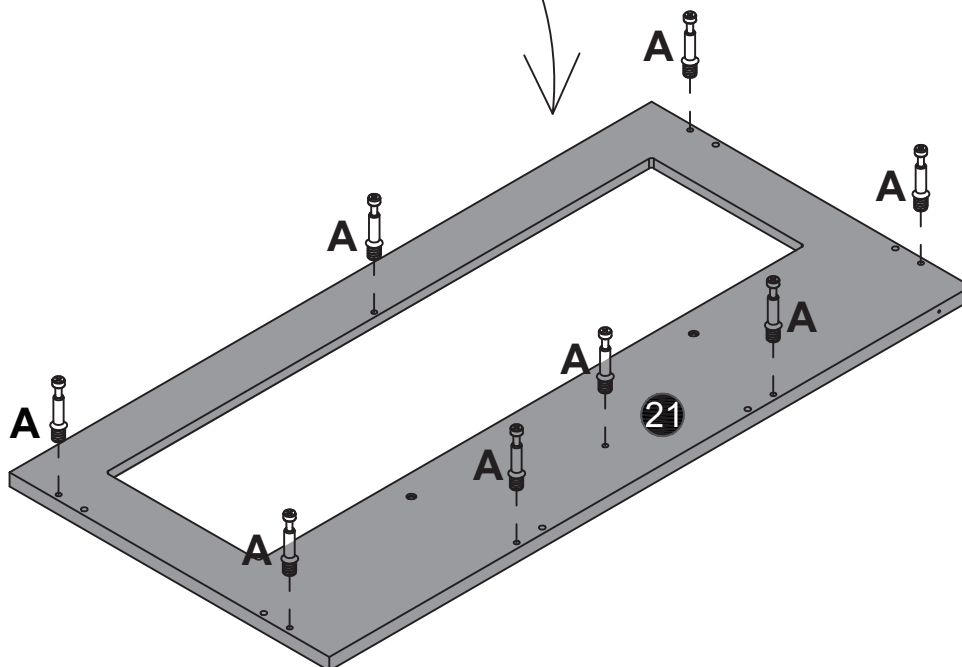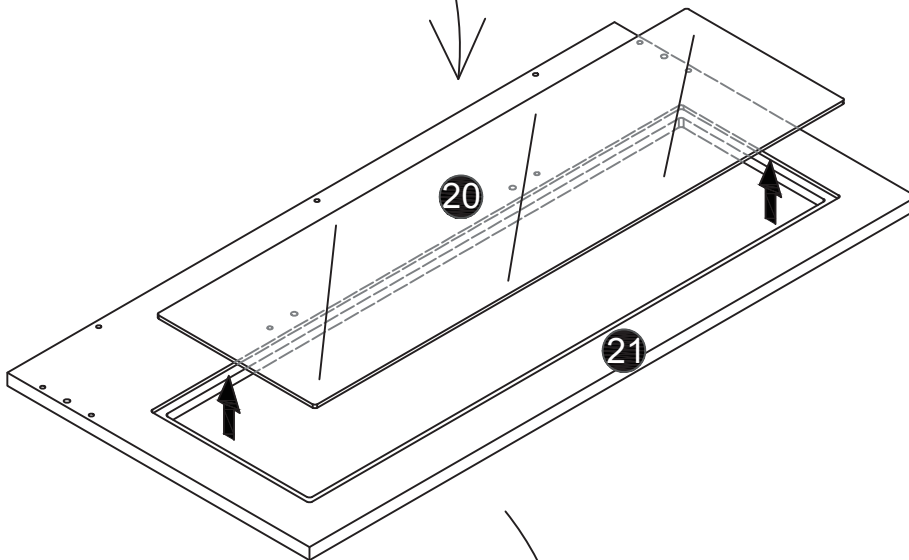

A x2





B x2

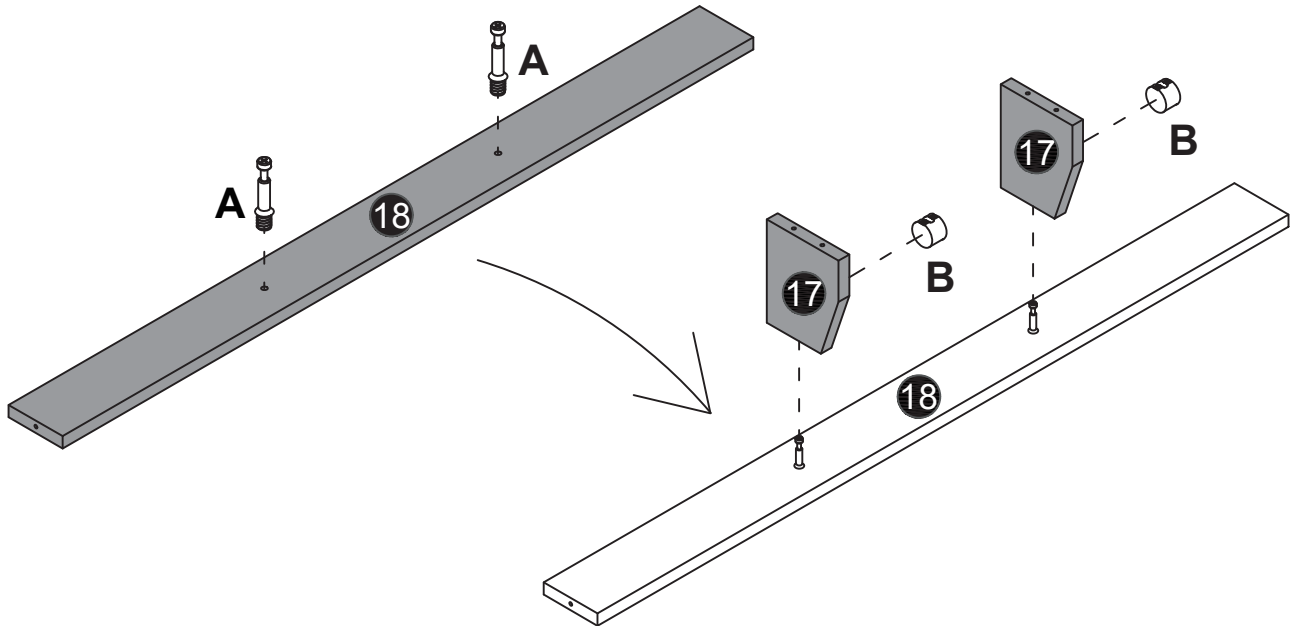

C x2




D x2

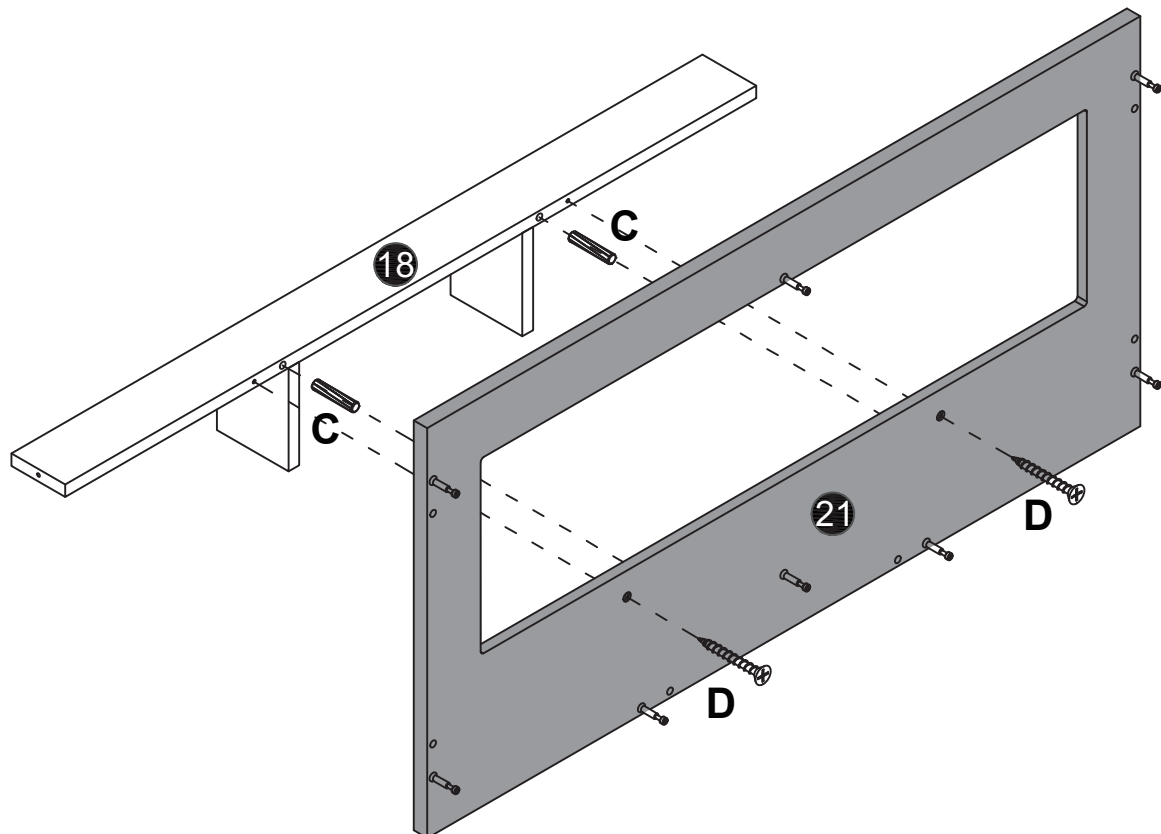


B x8





C x6

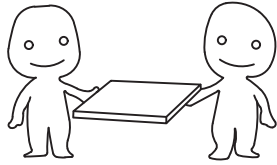



Need Two or More
People To Complete


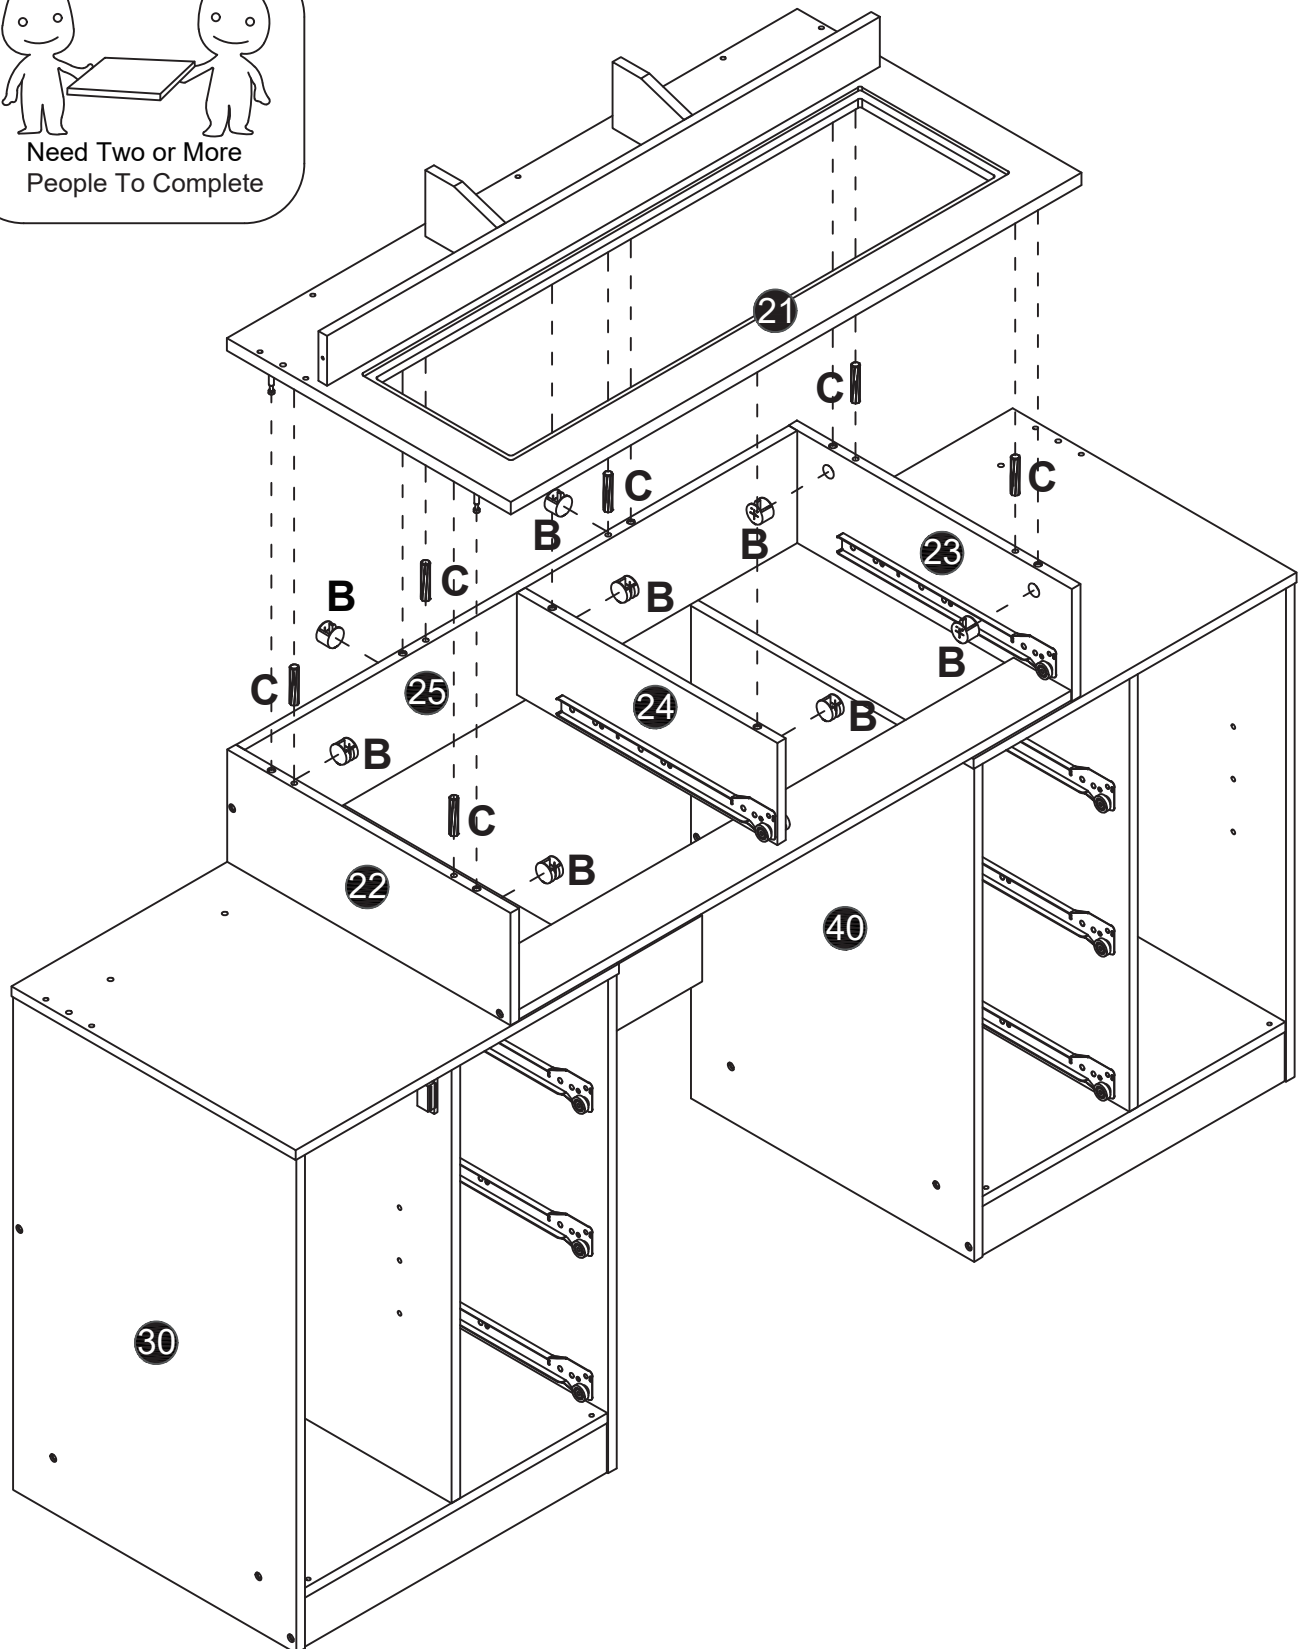


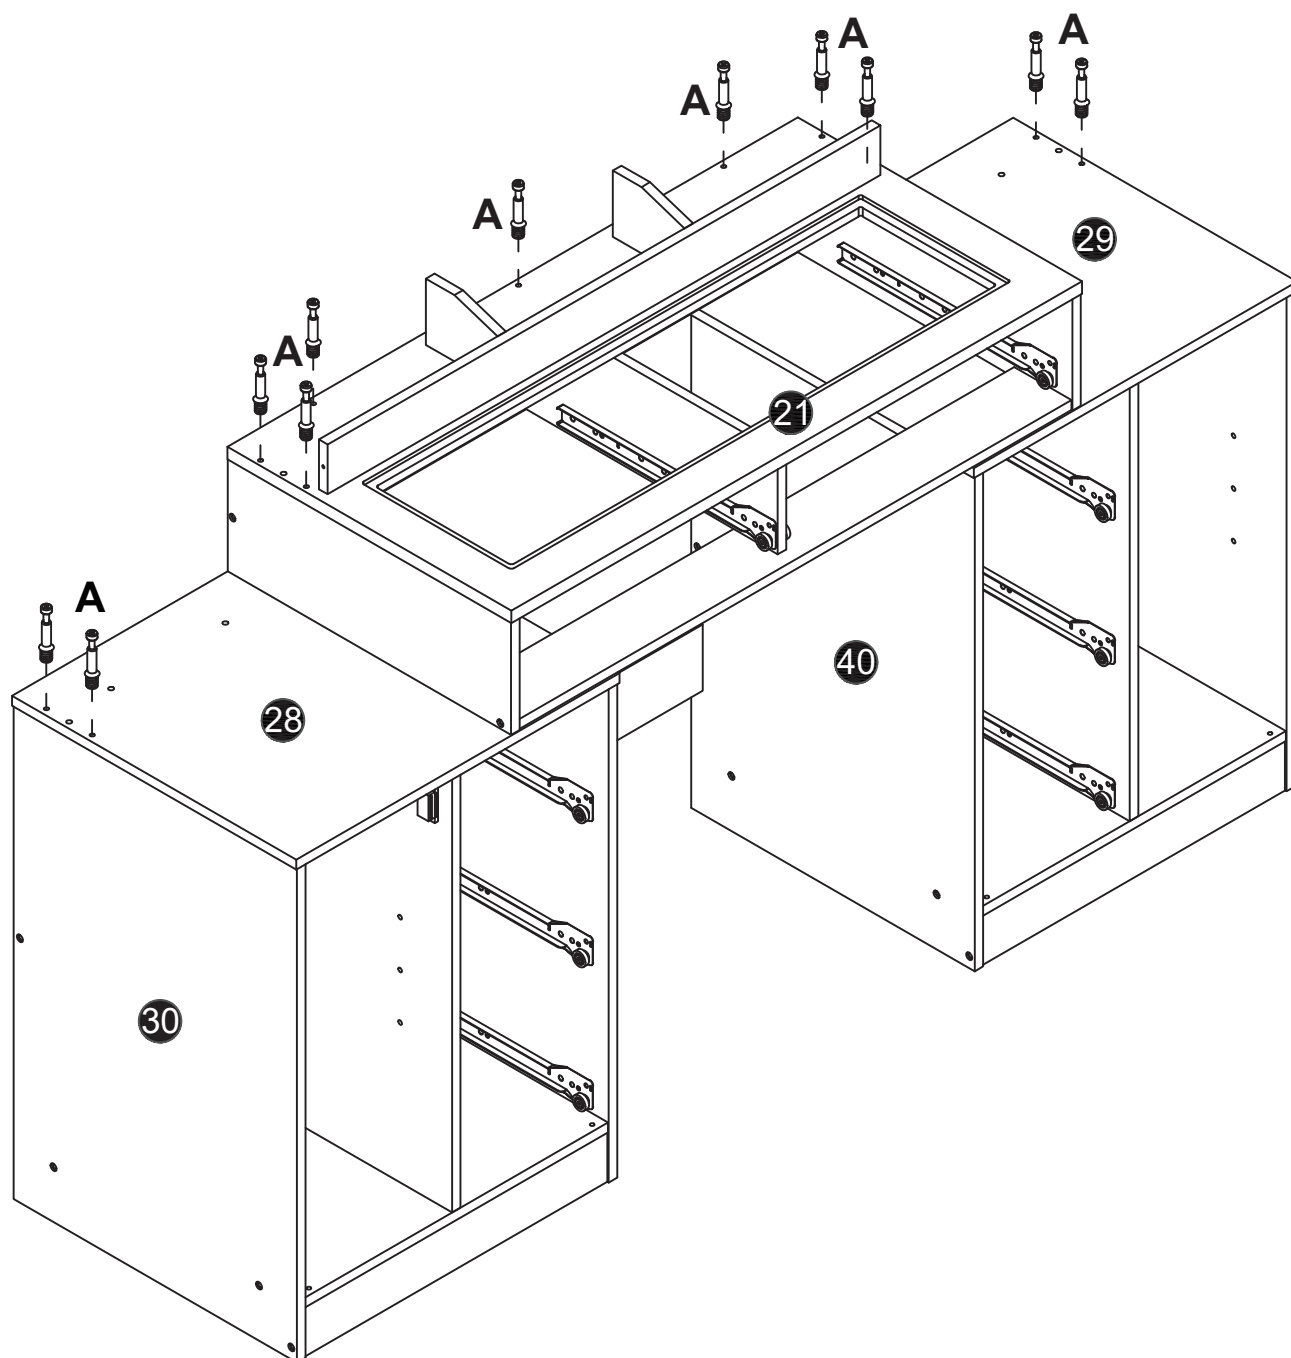



Pay attention to the direction during installation.

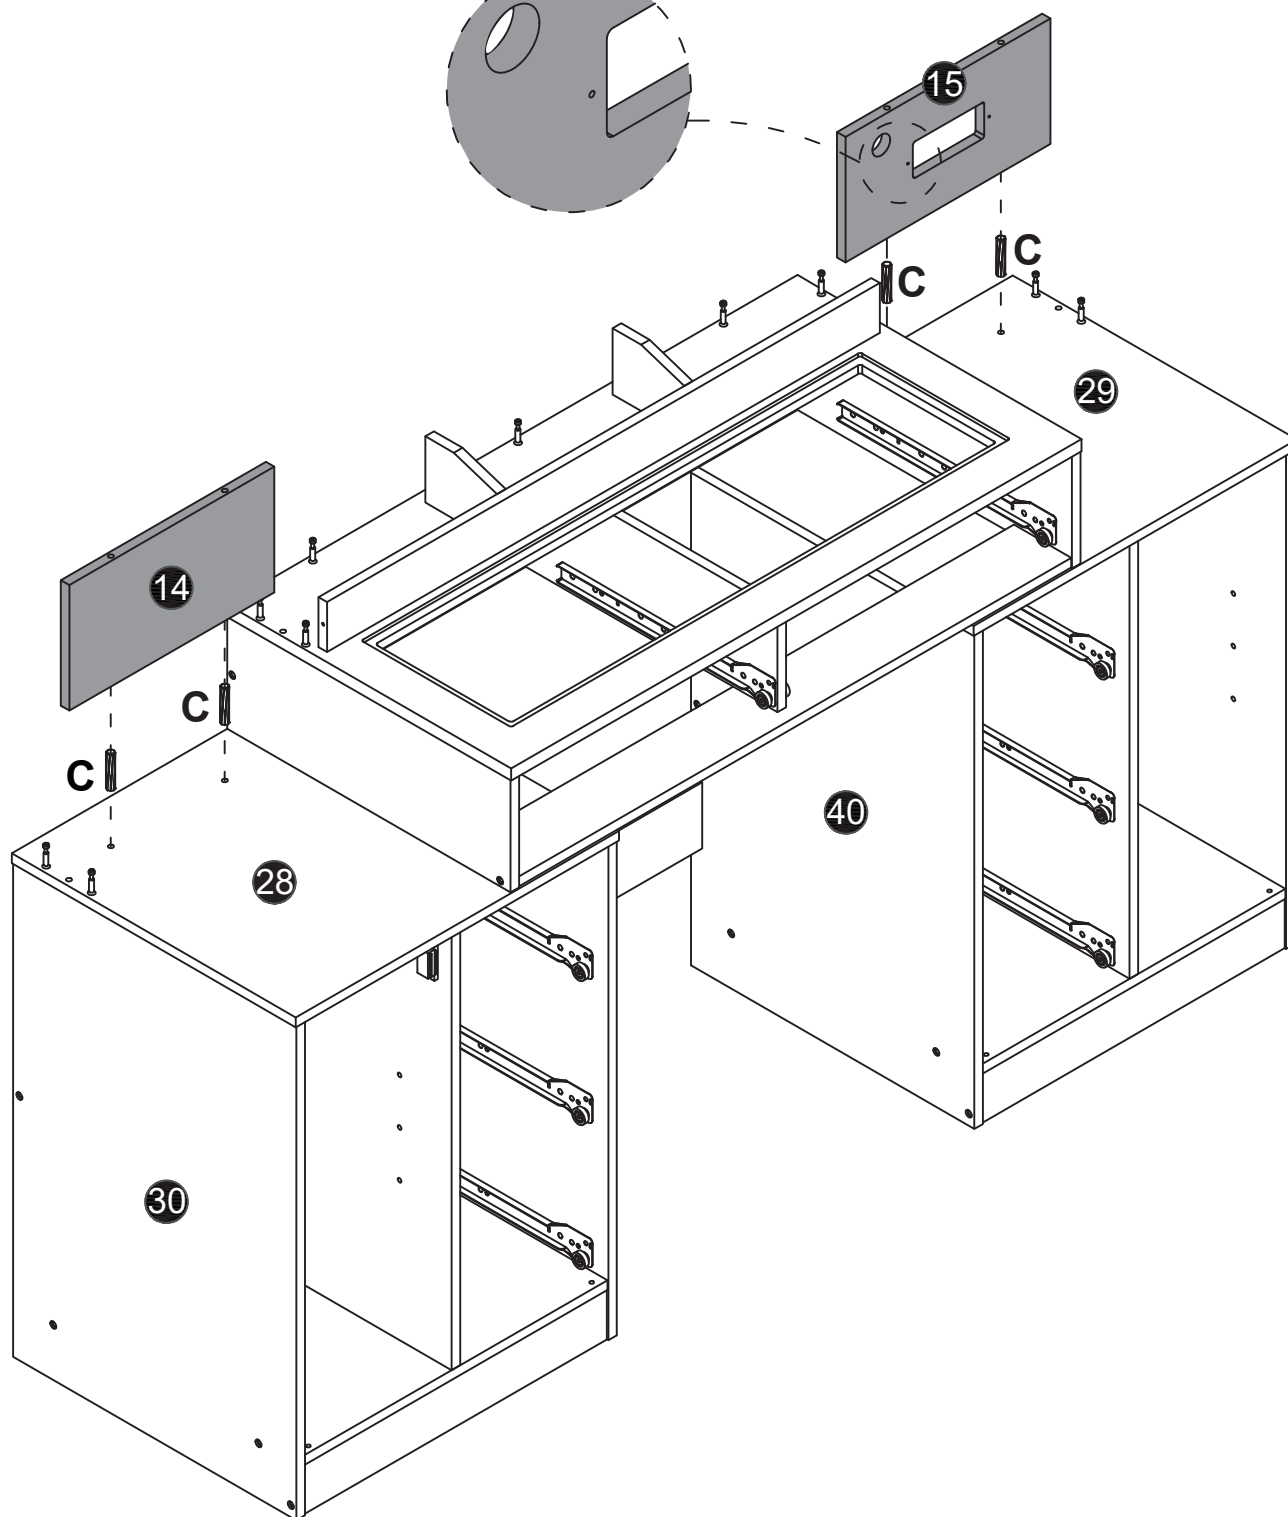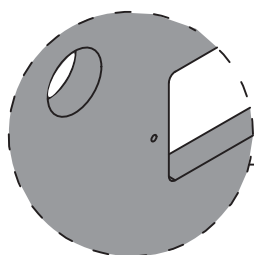

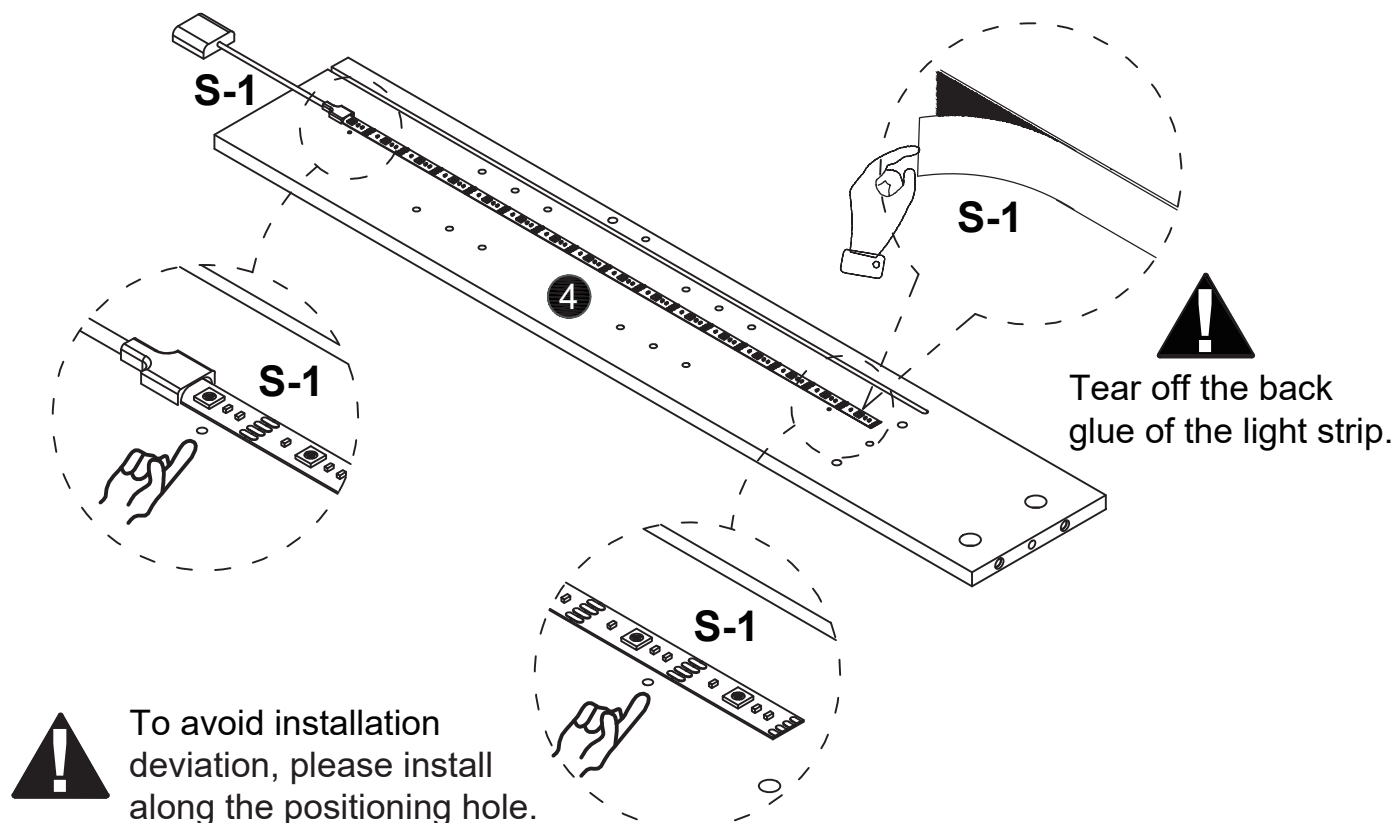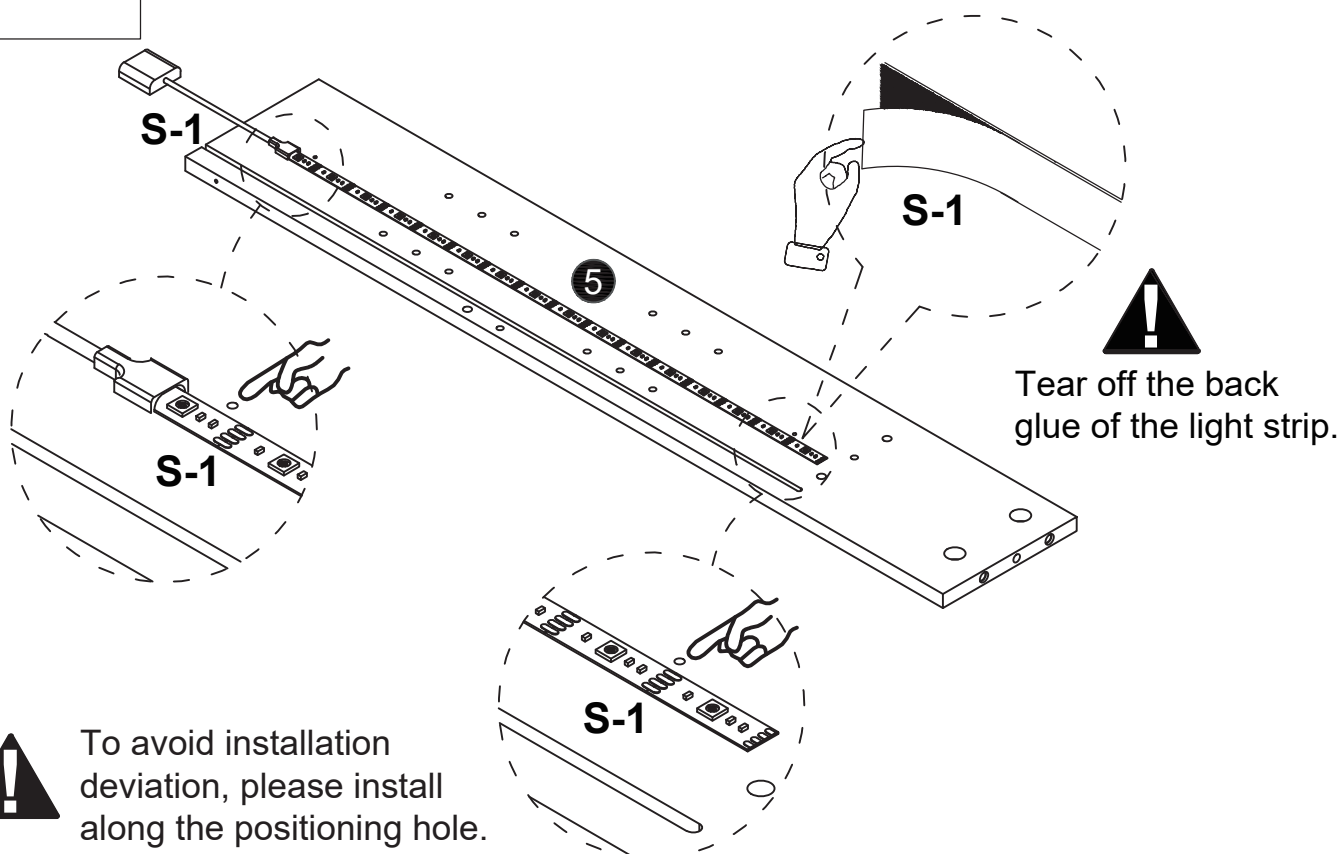


N x4



N-1



N-2


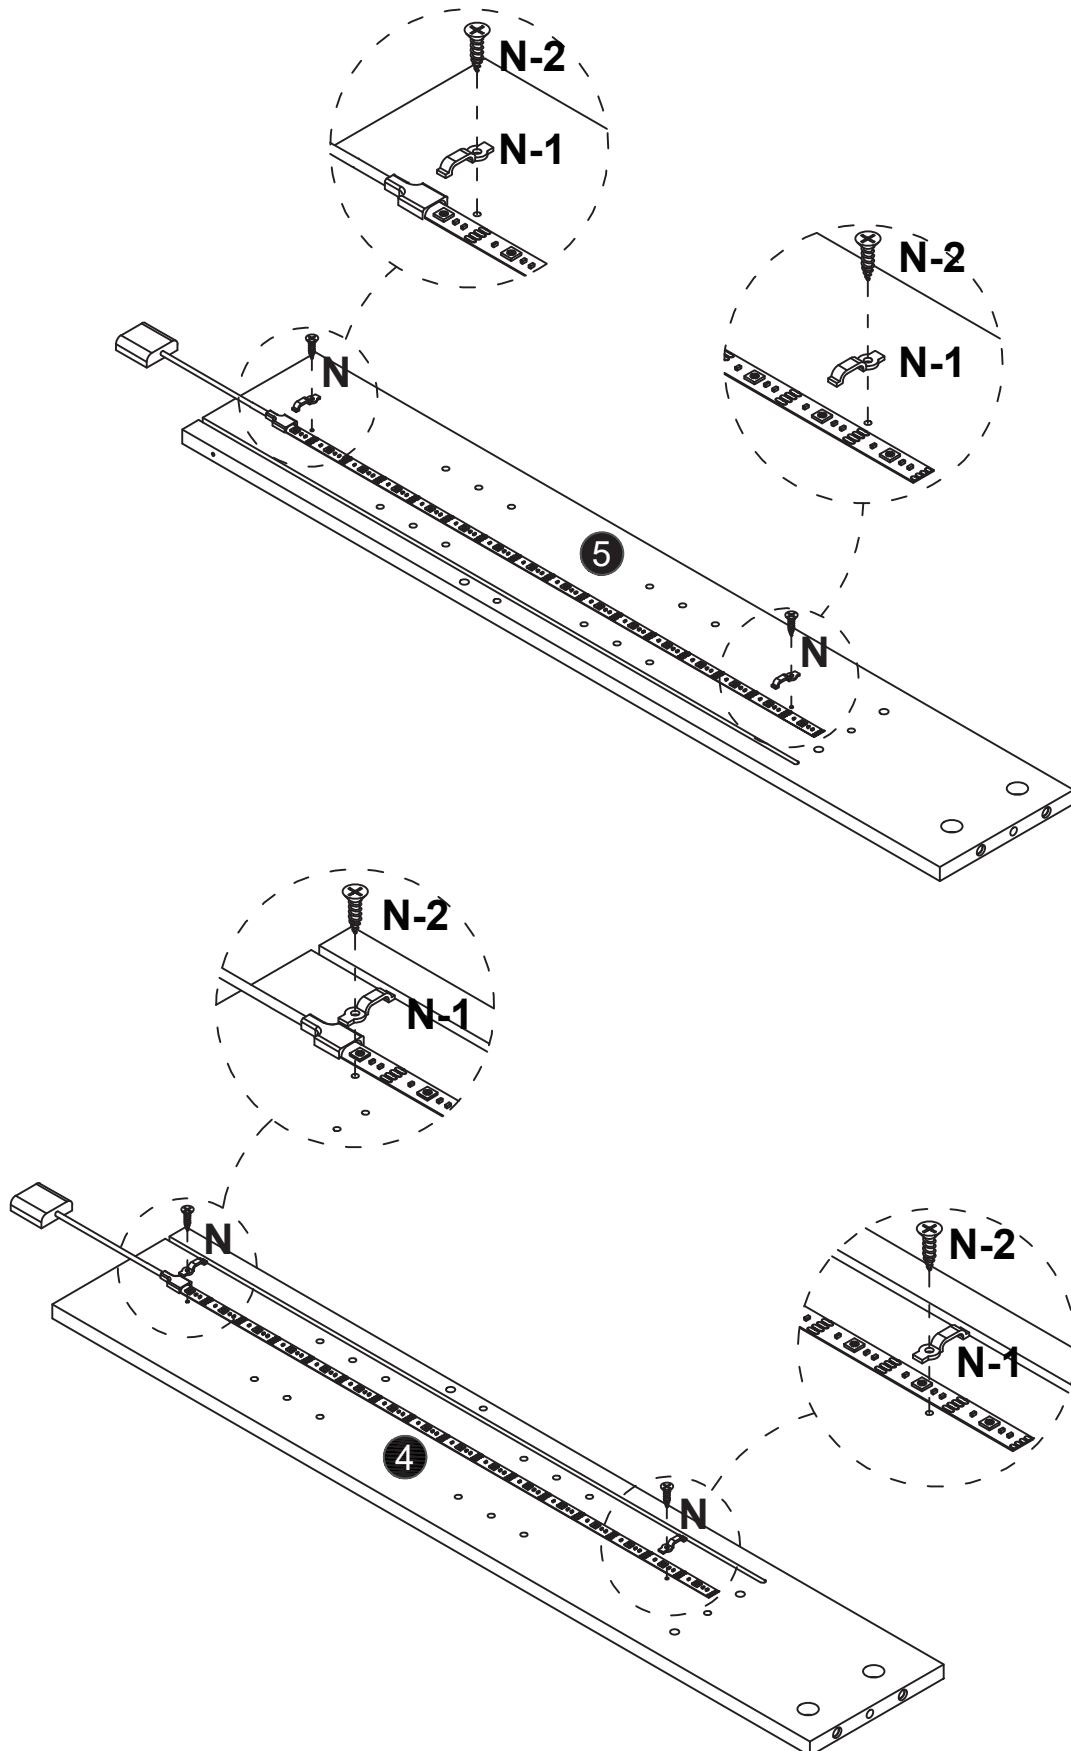





G-1






G-2

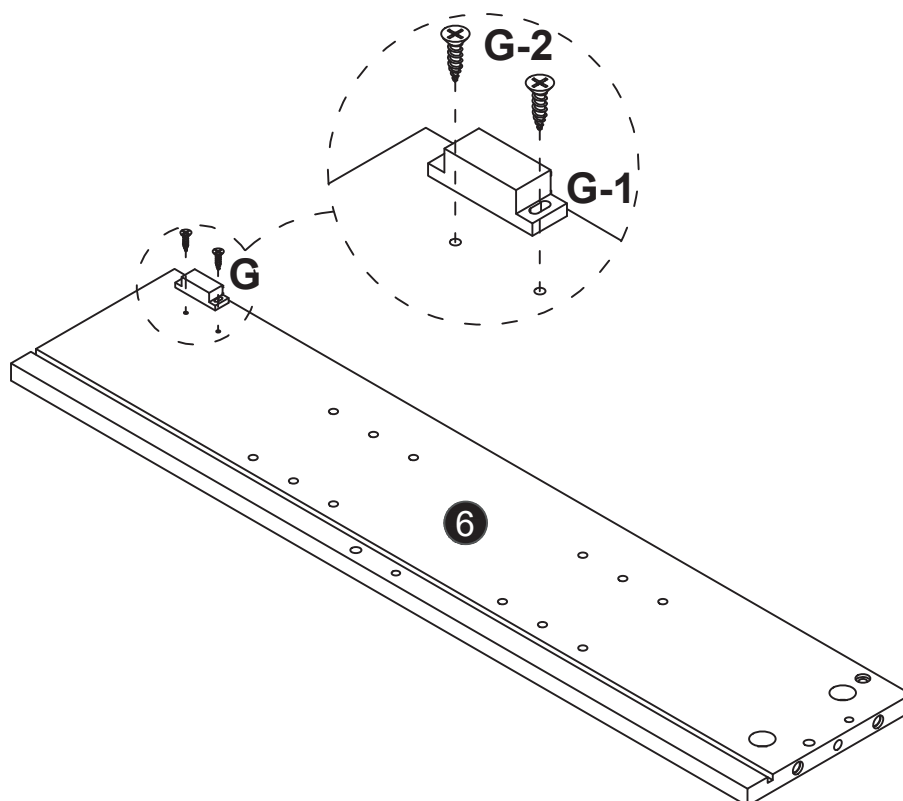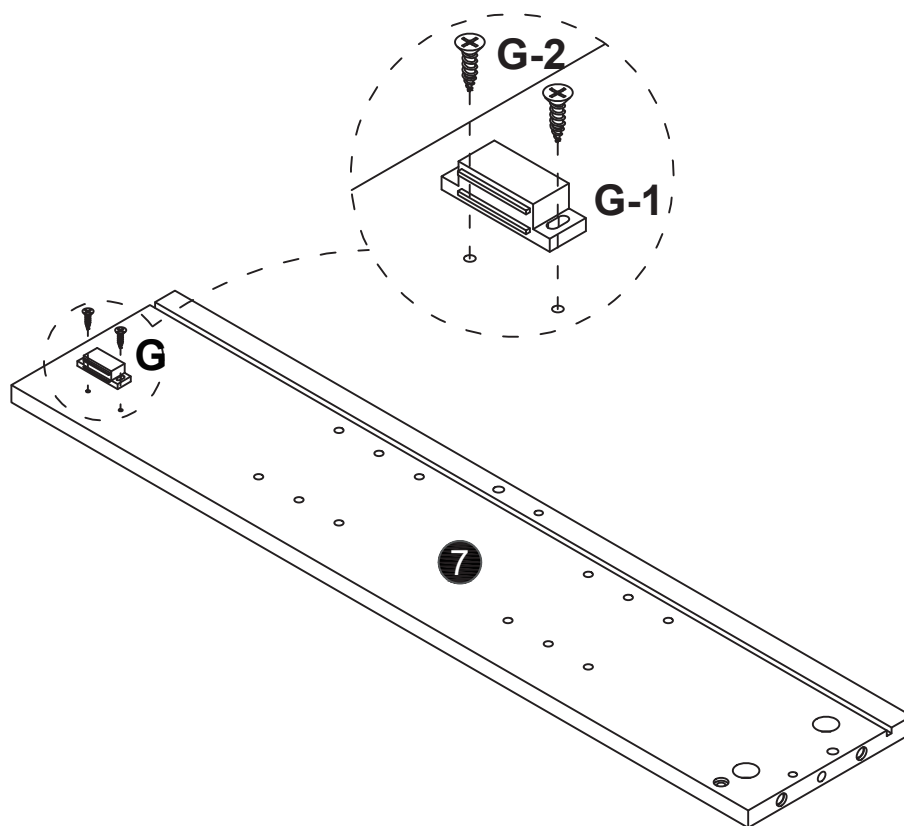

C x10




D x8

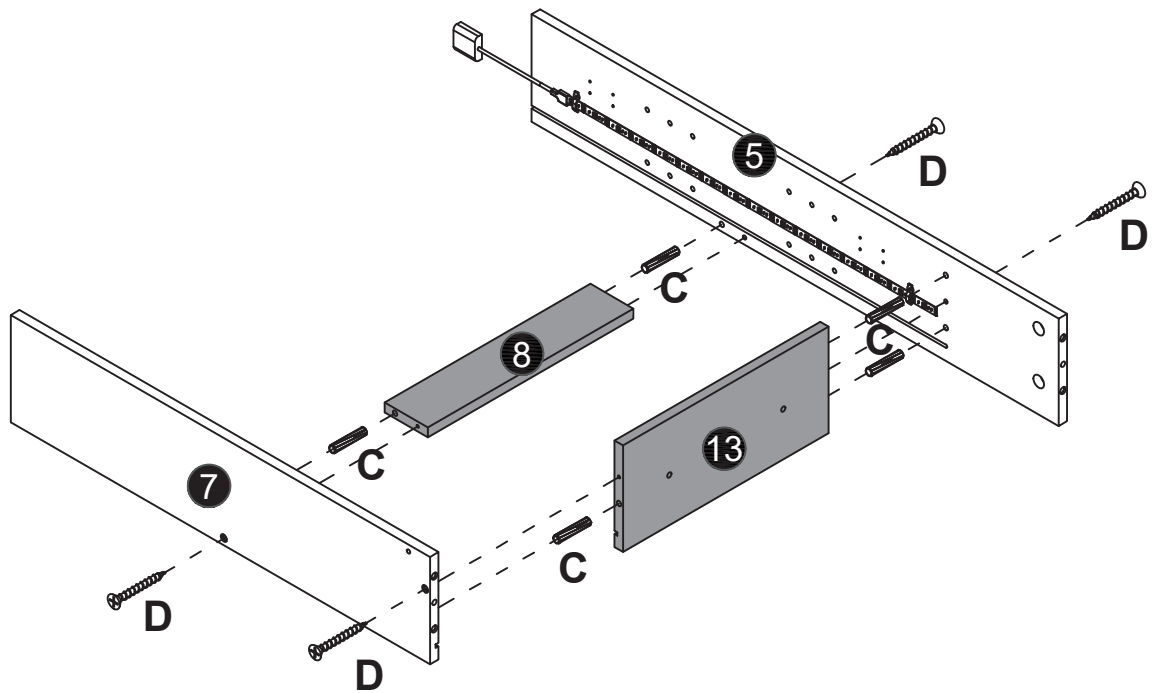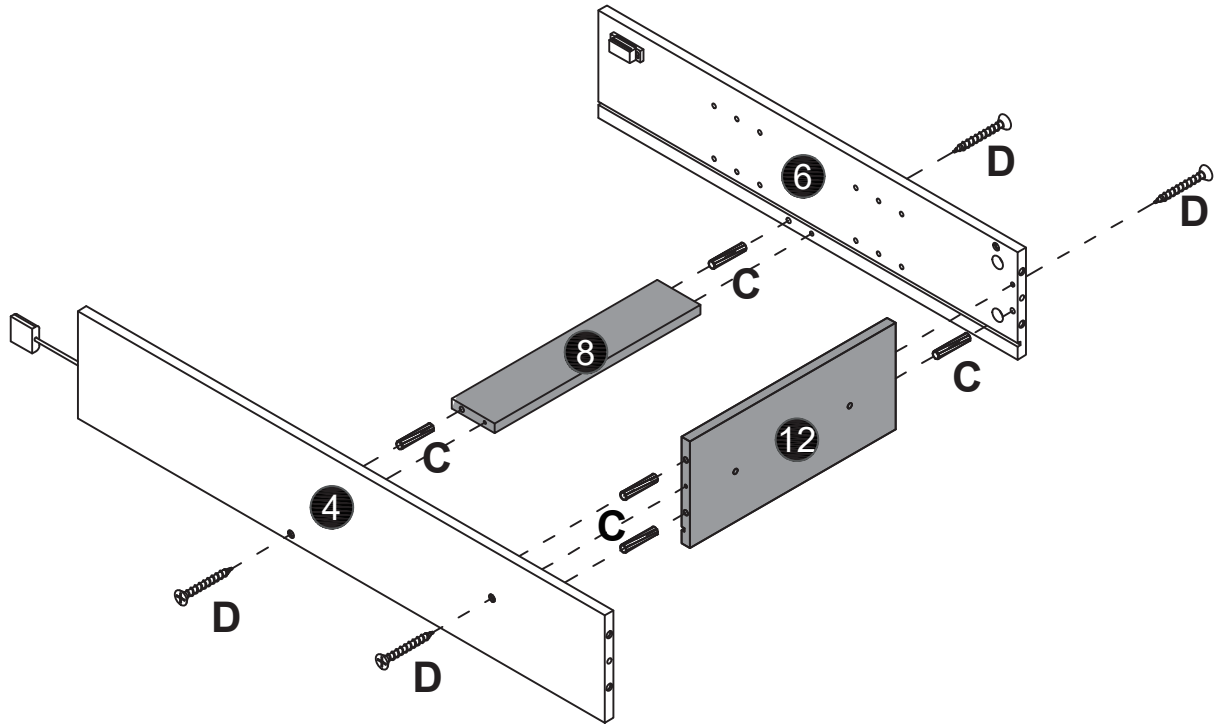


B x4





C x4


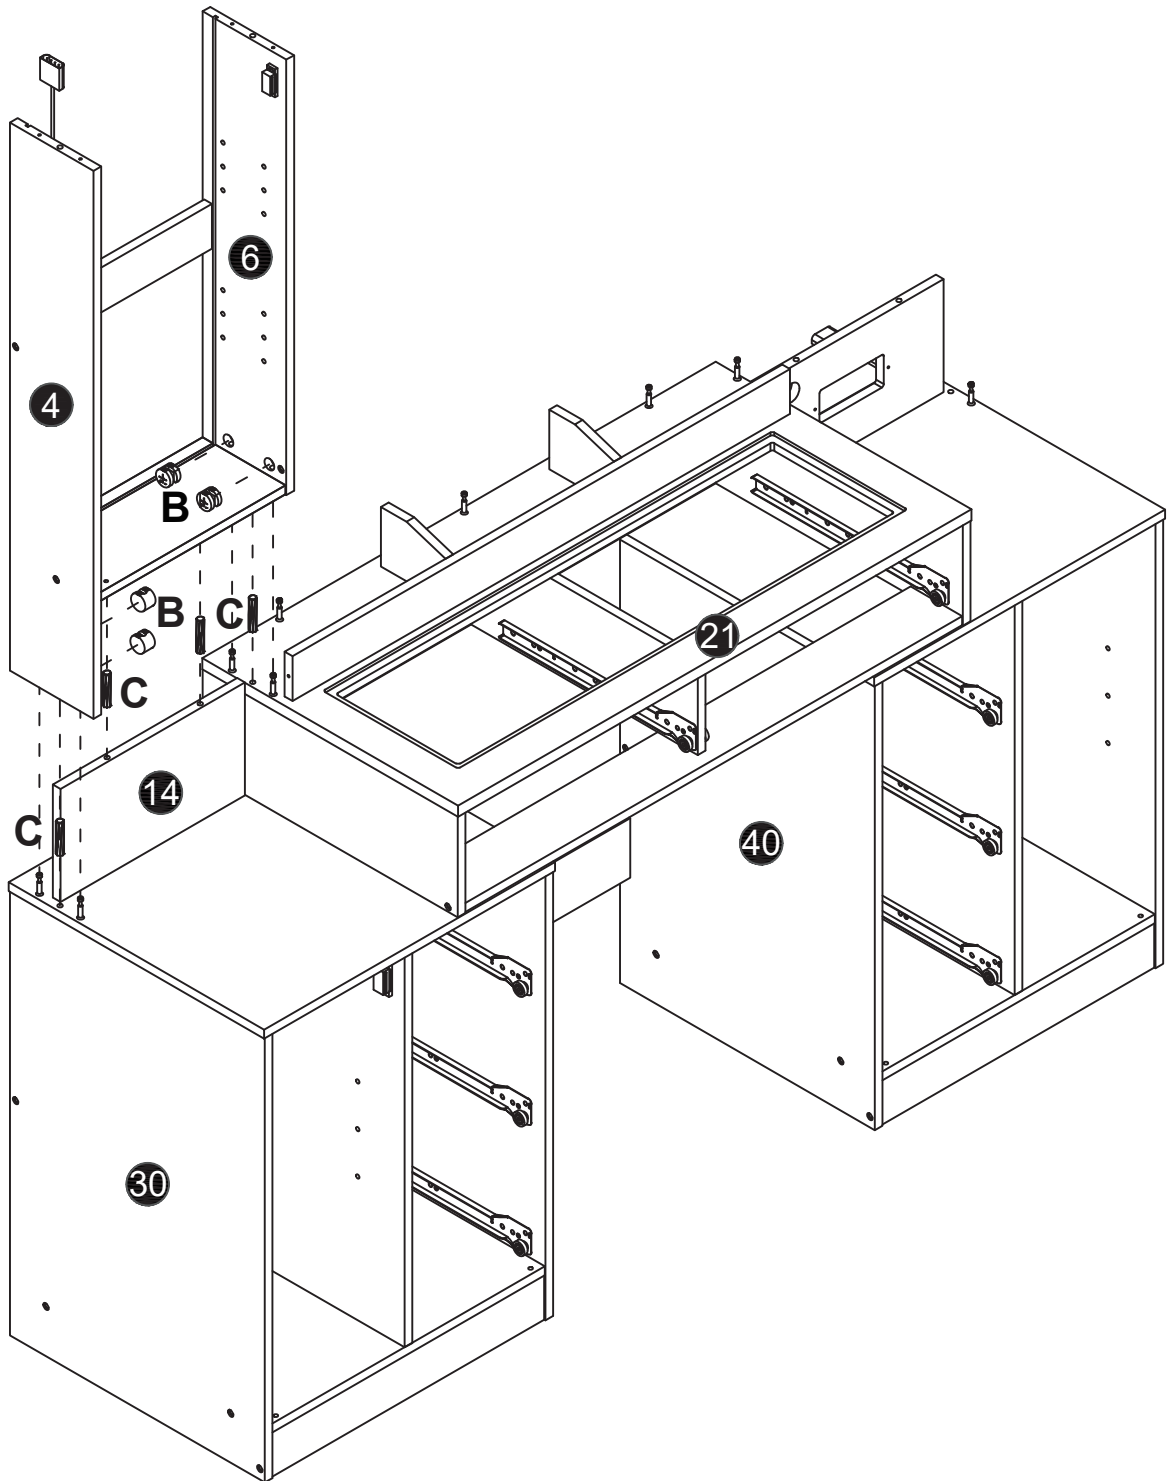




C x2



D x4

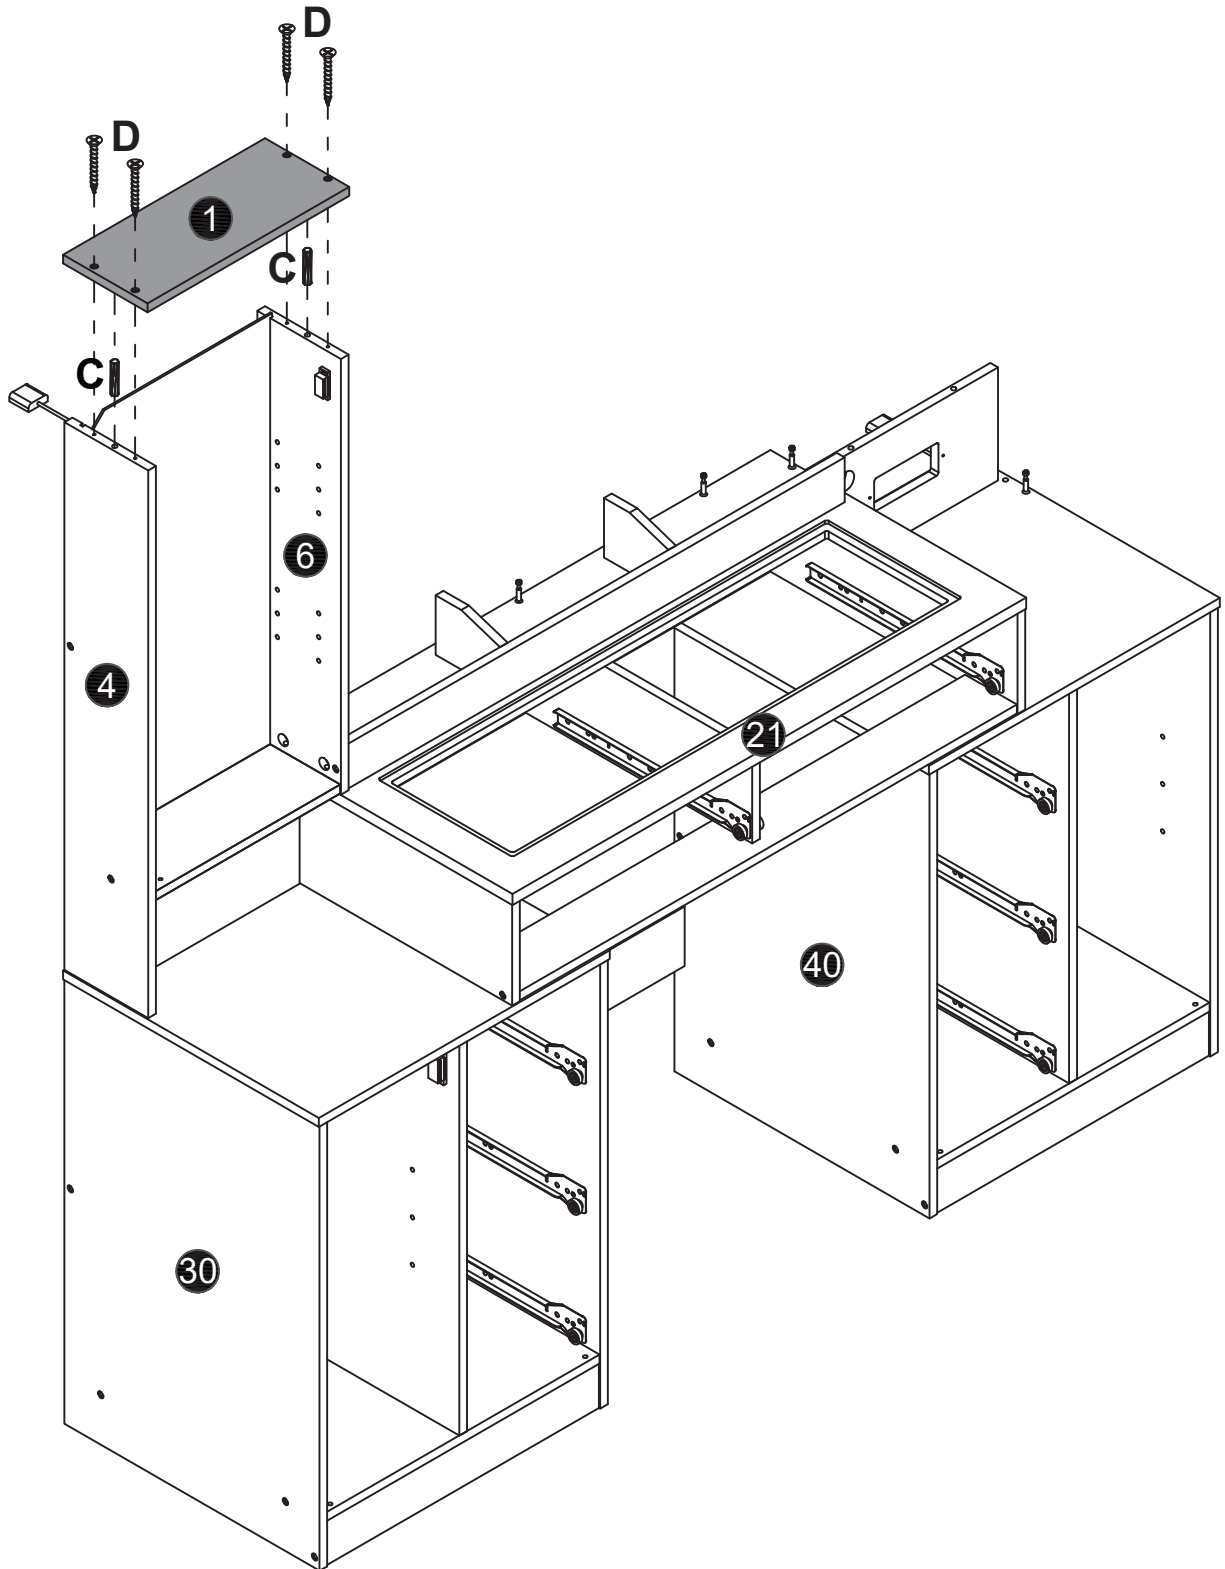

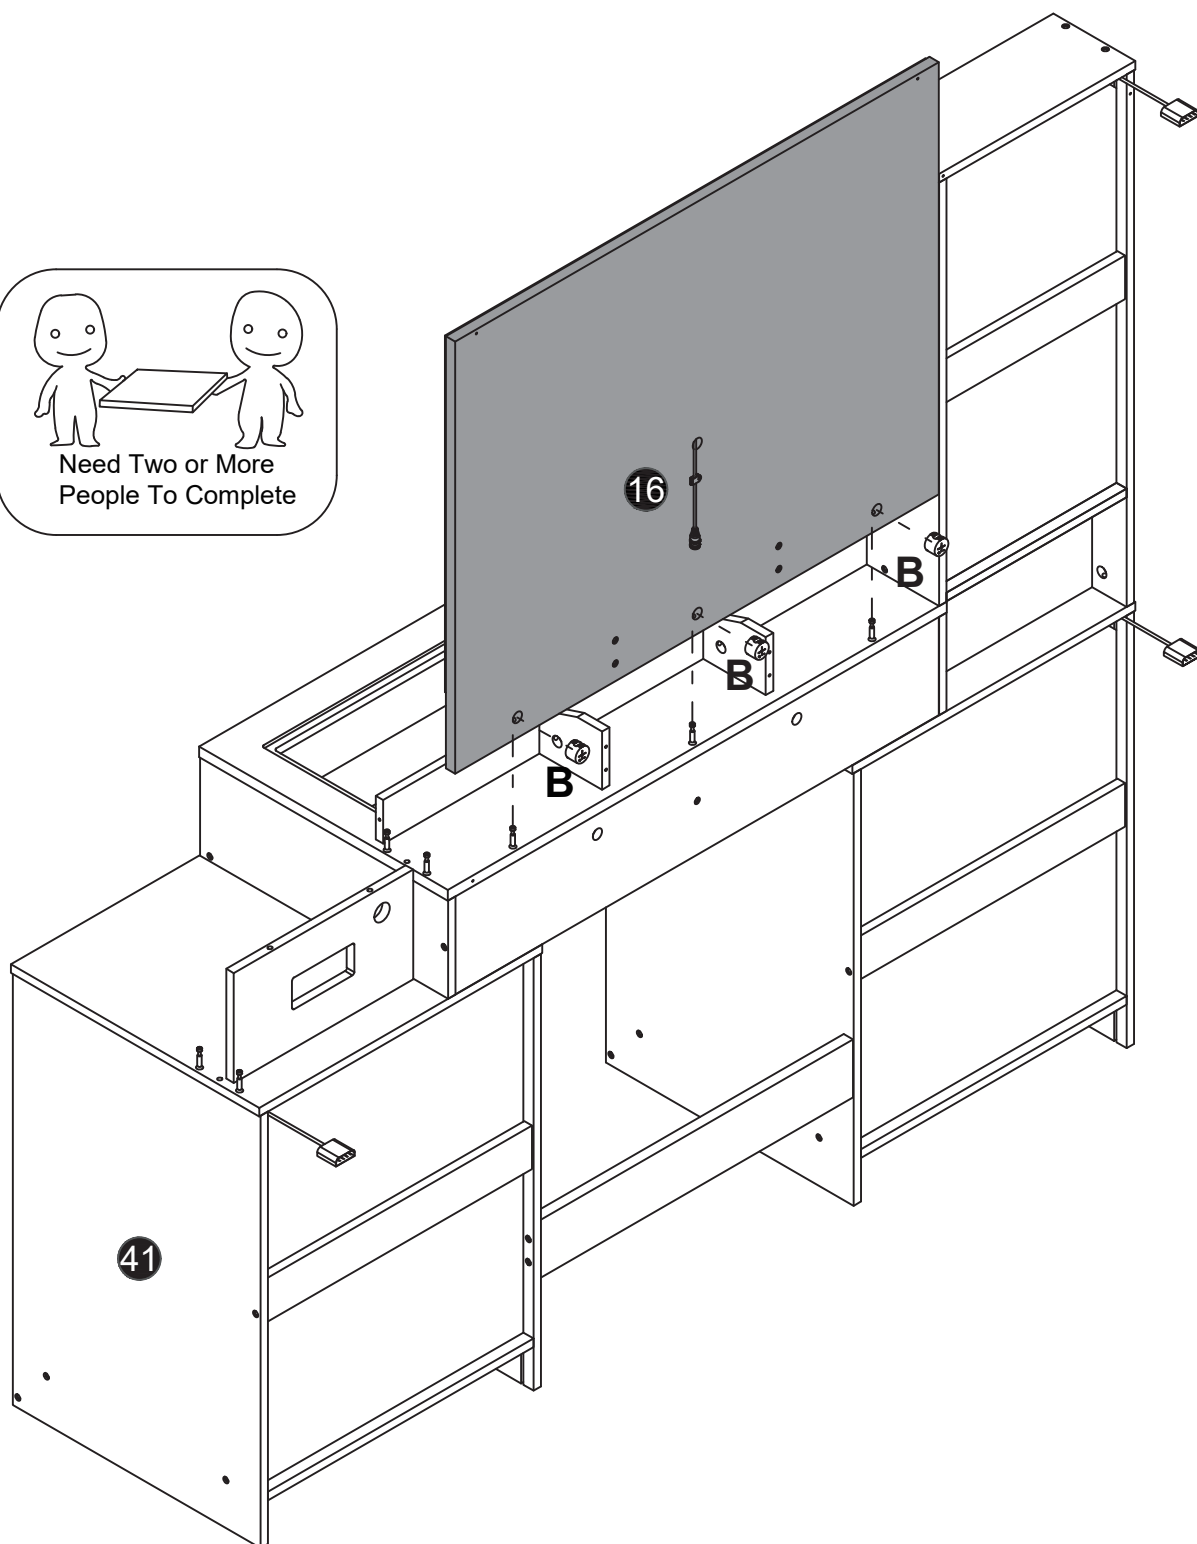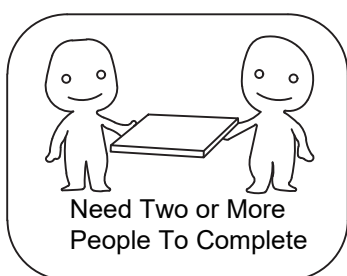


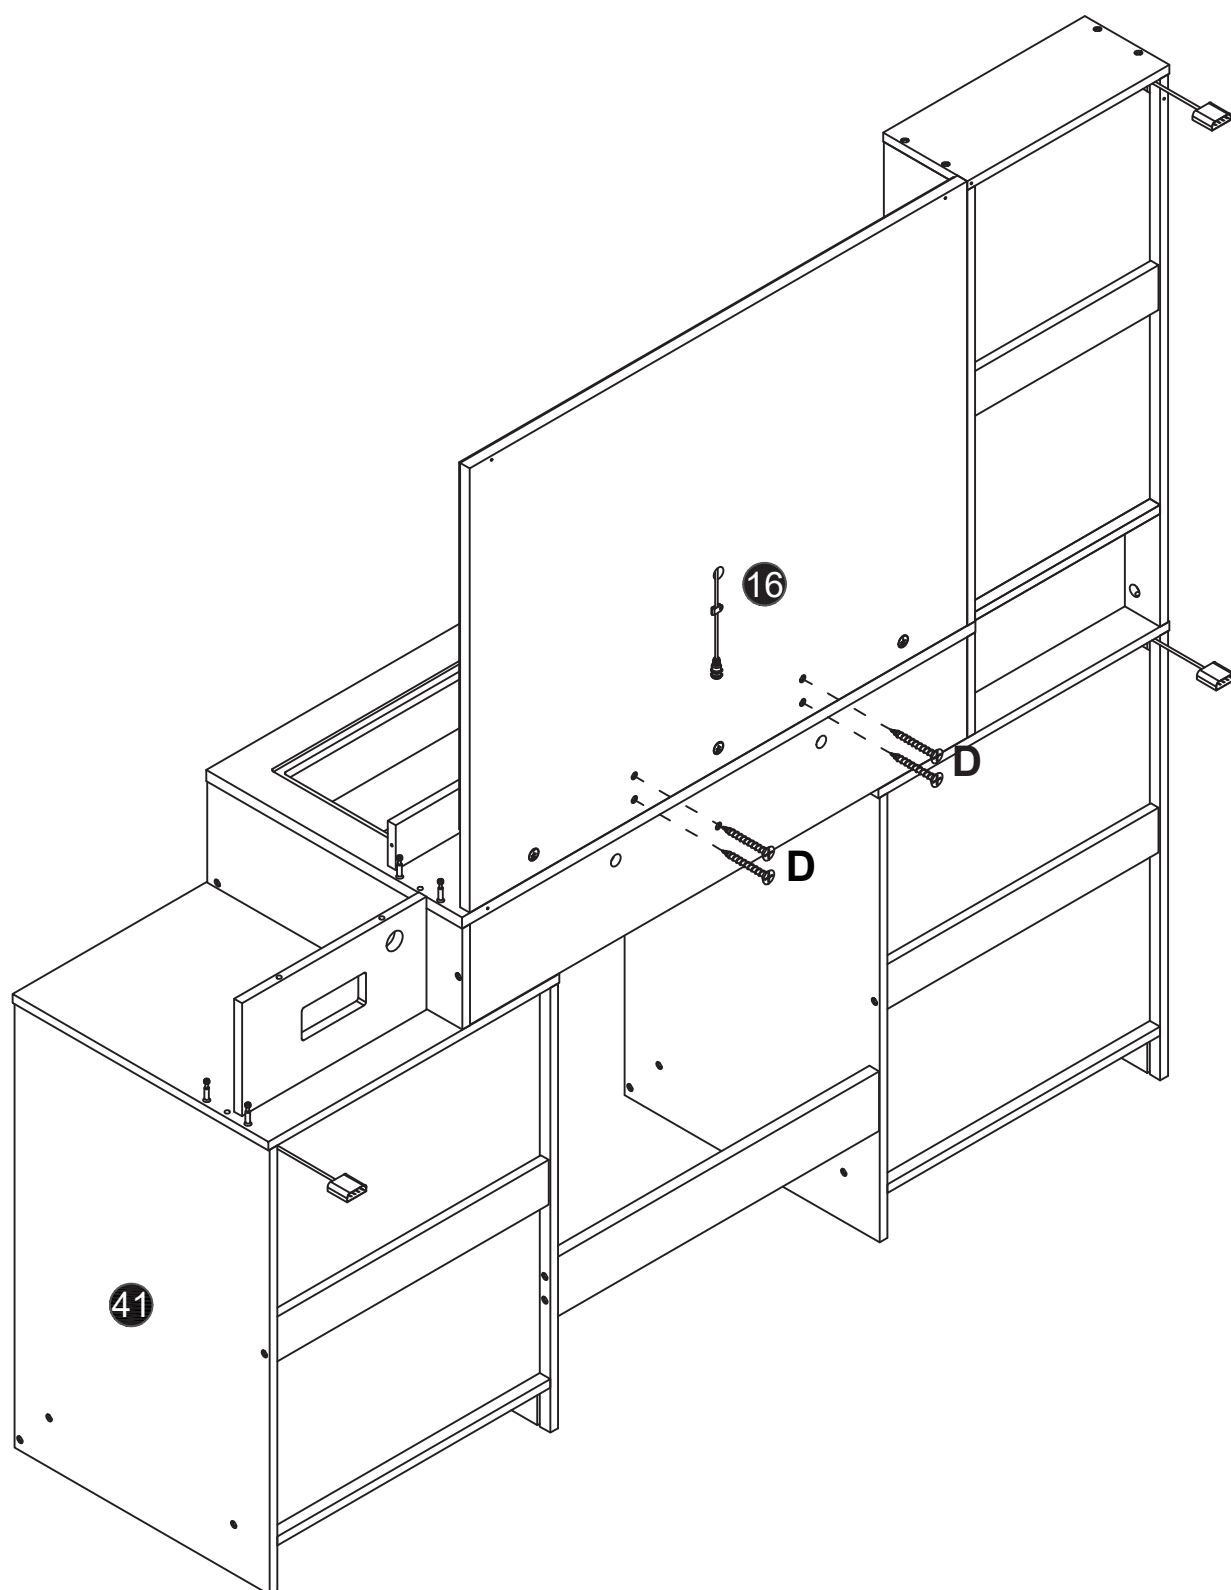



B x4




C x4


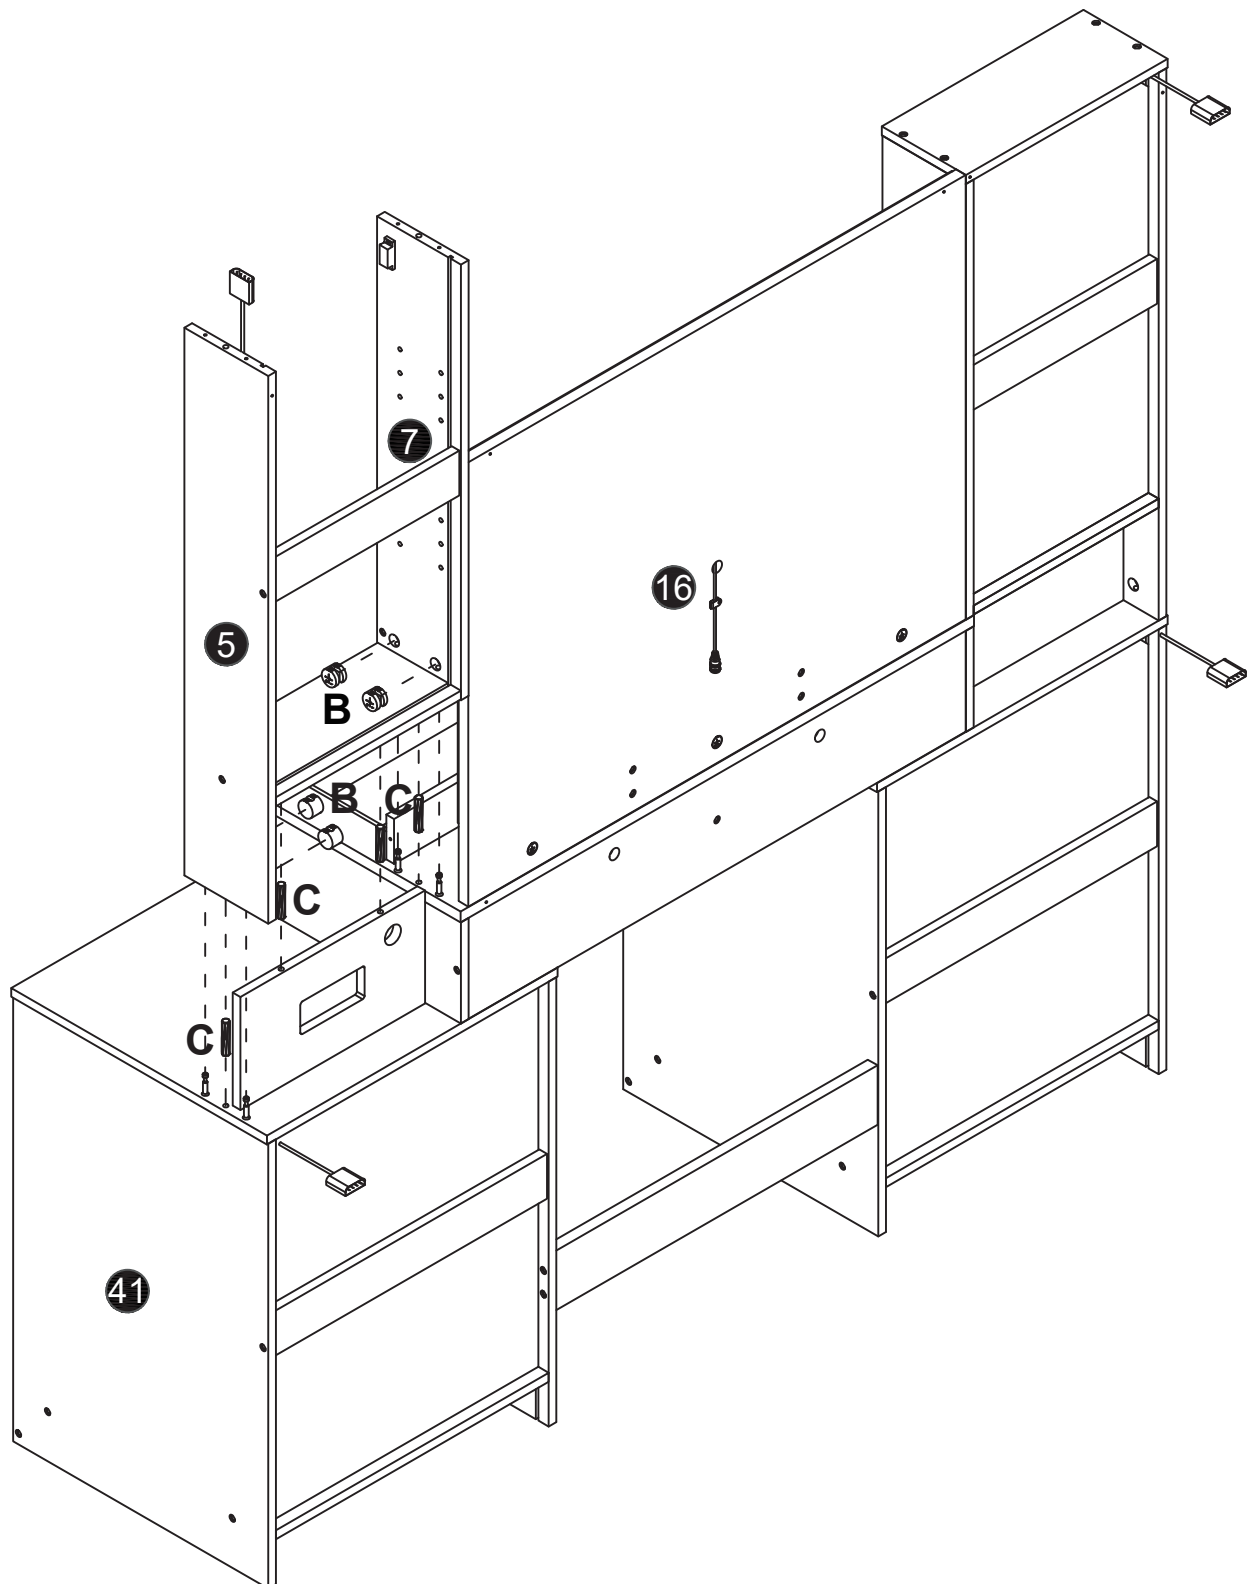


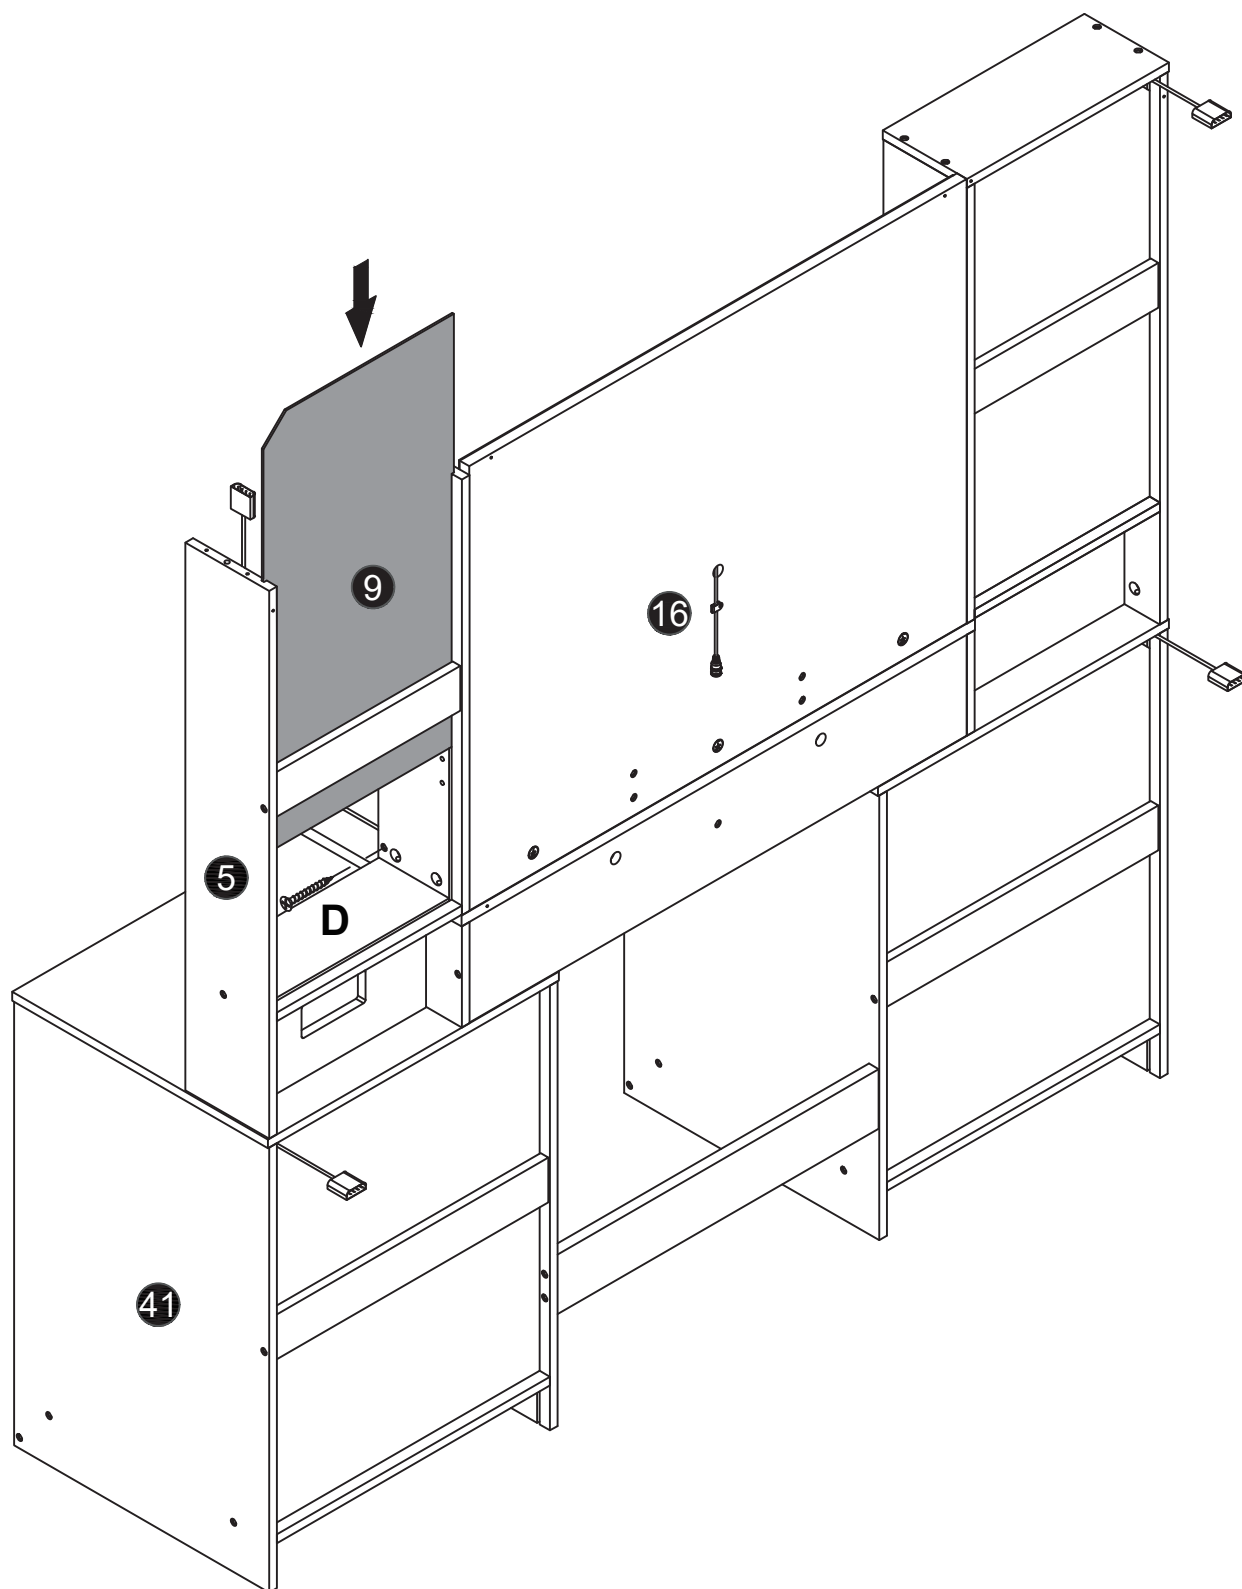



C x2



D x4

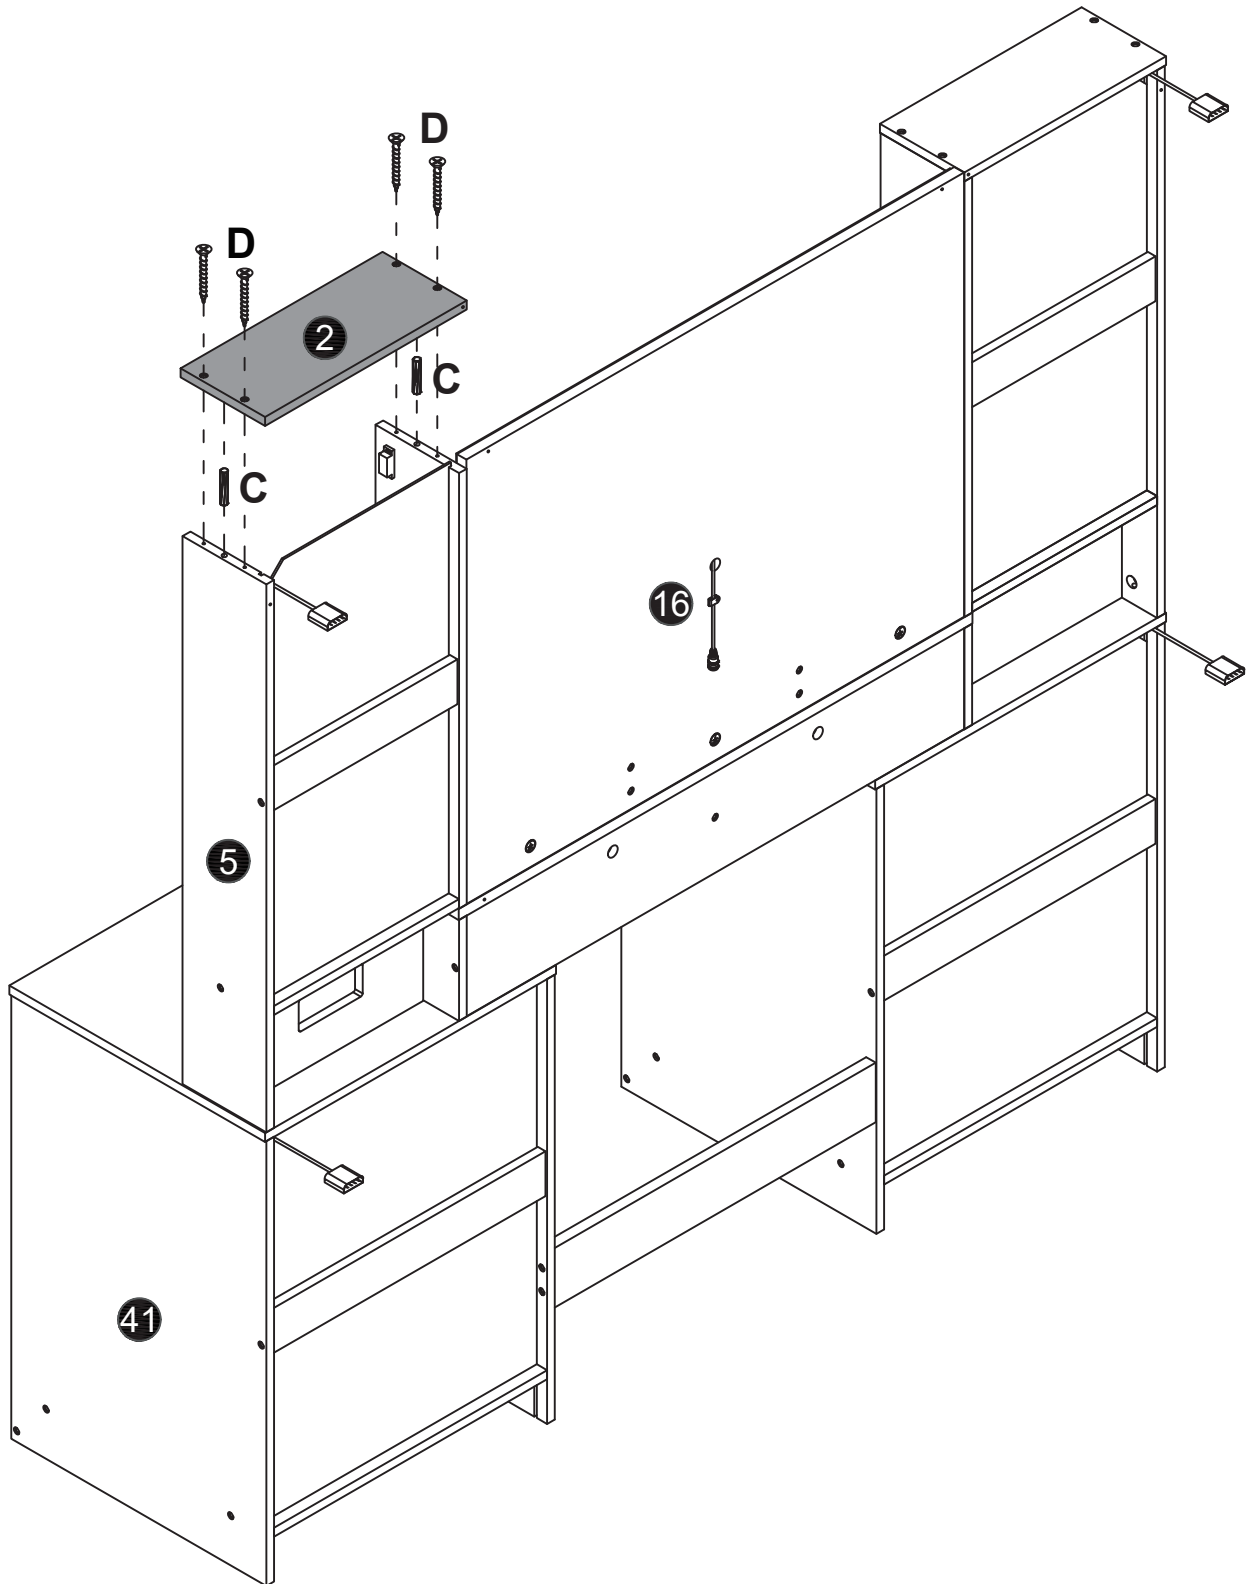

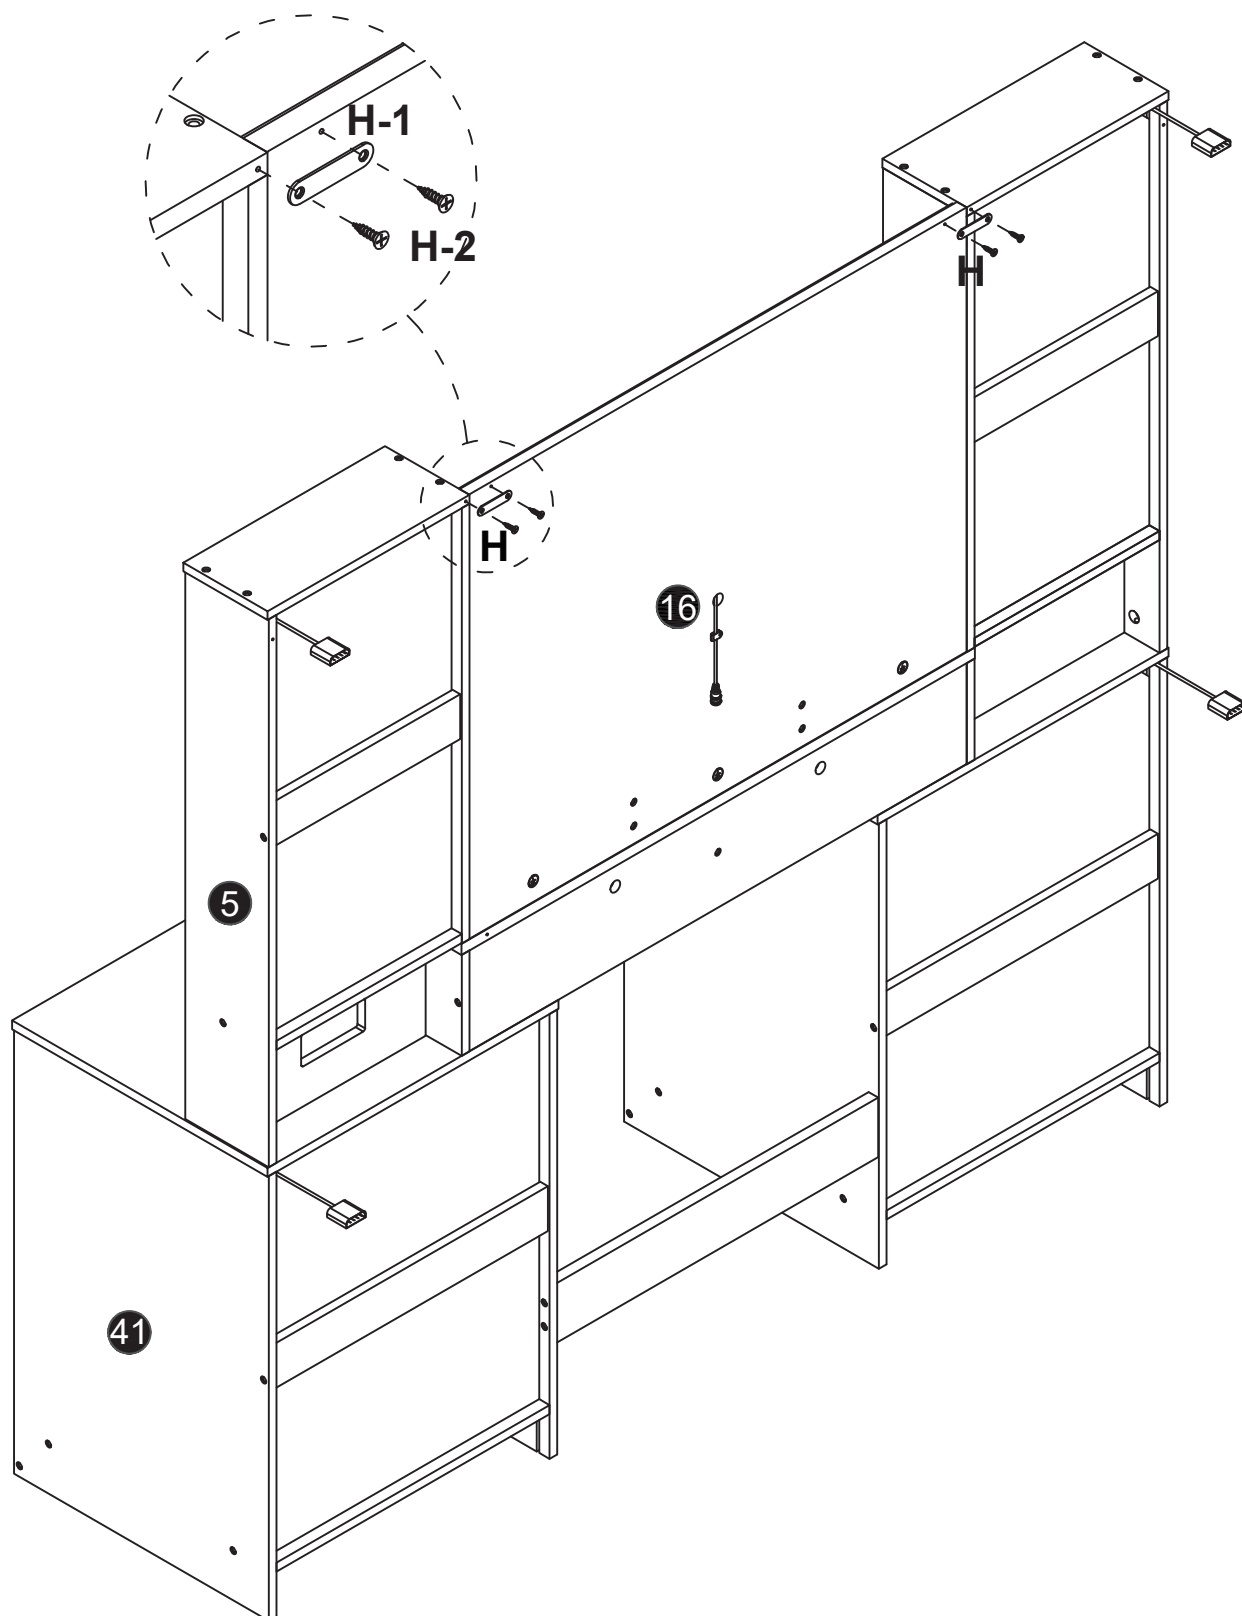


J x16






J-1



J-2

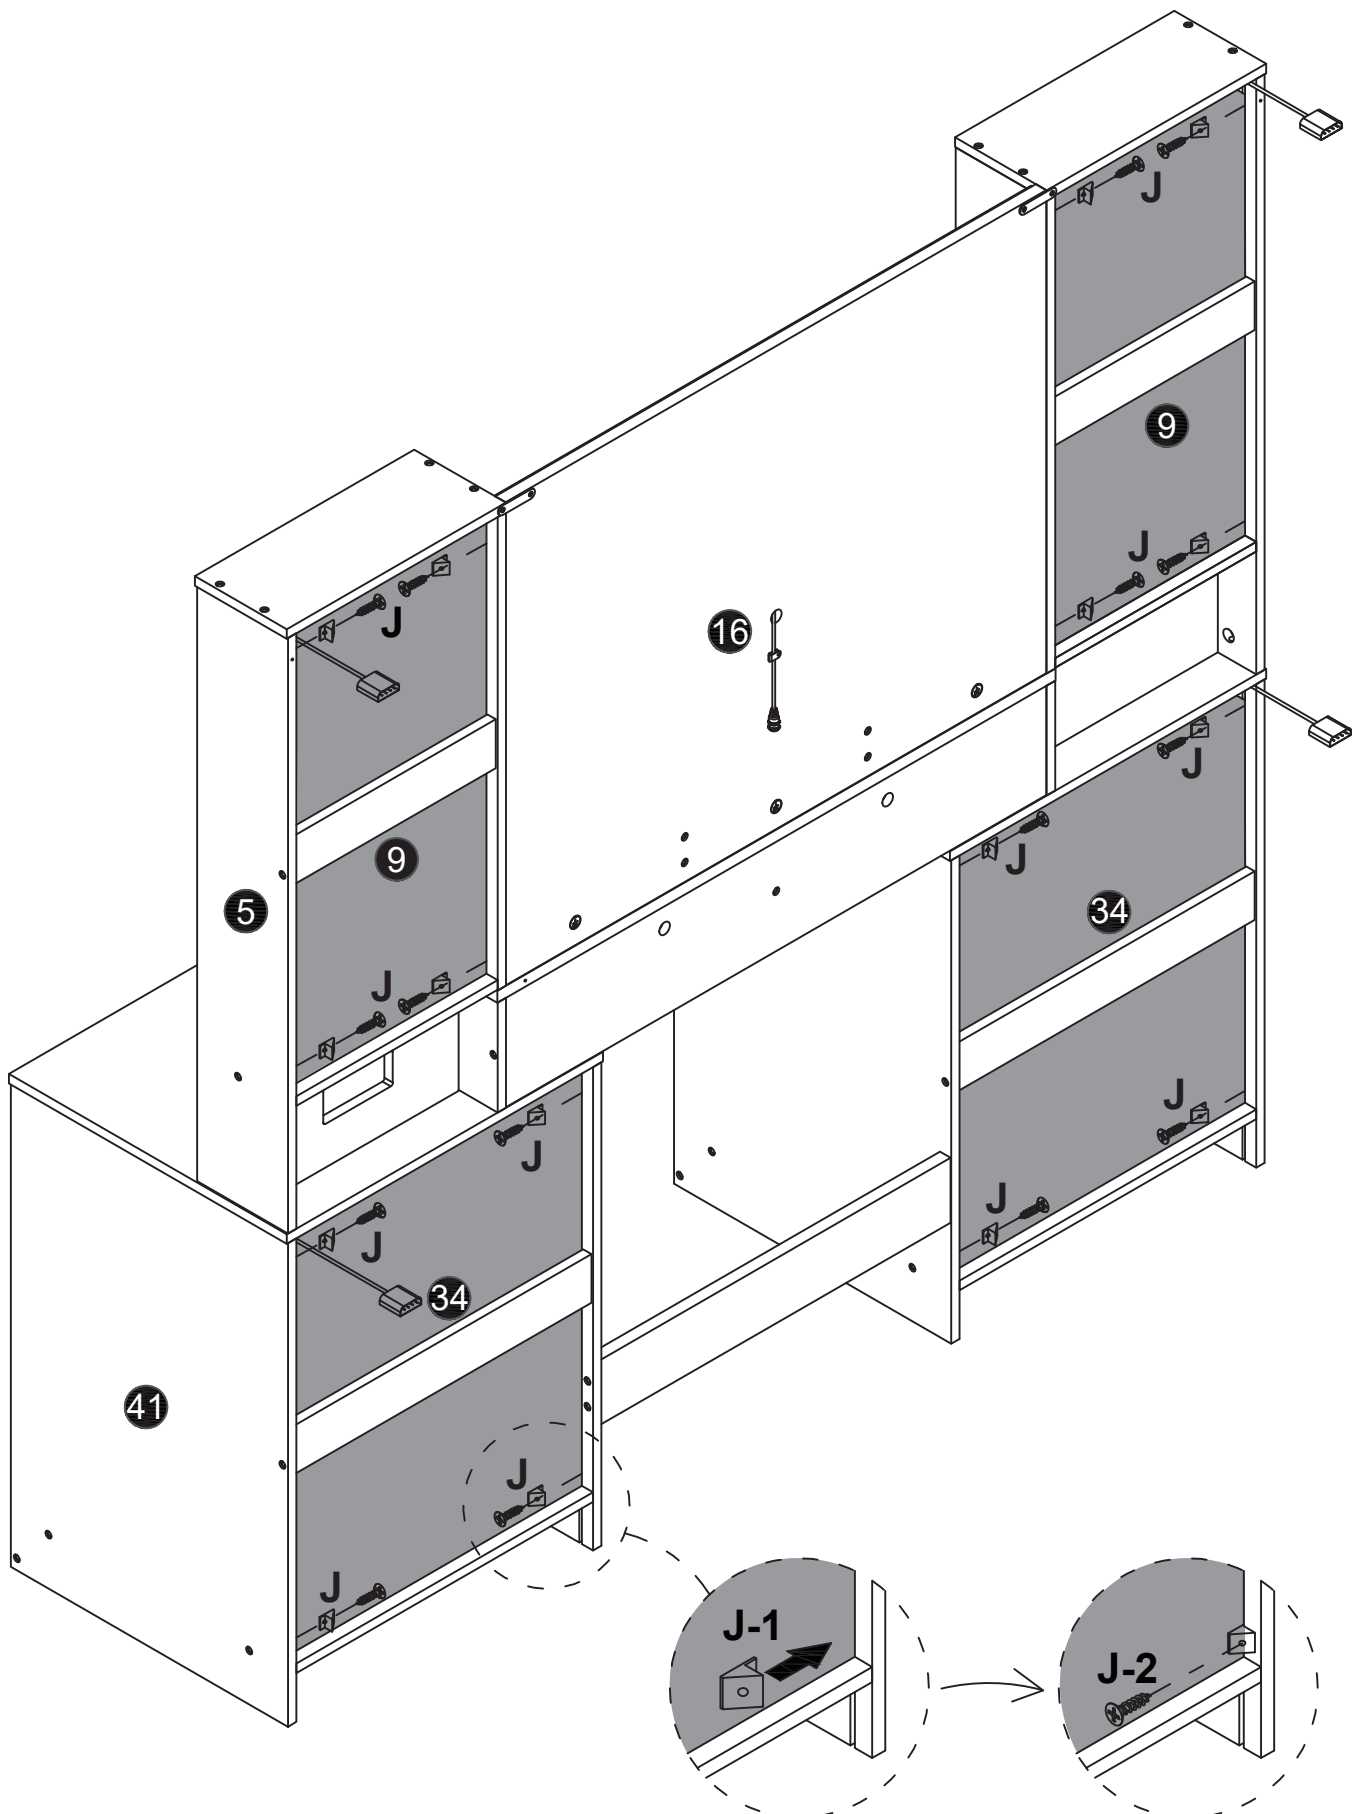


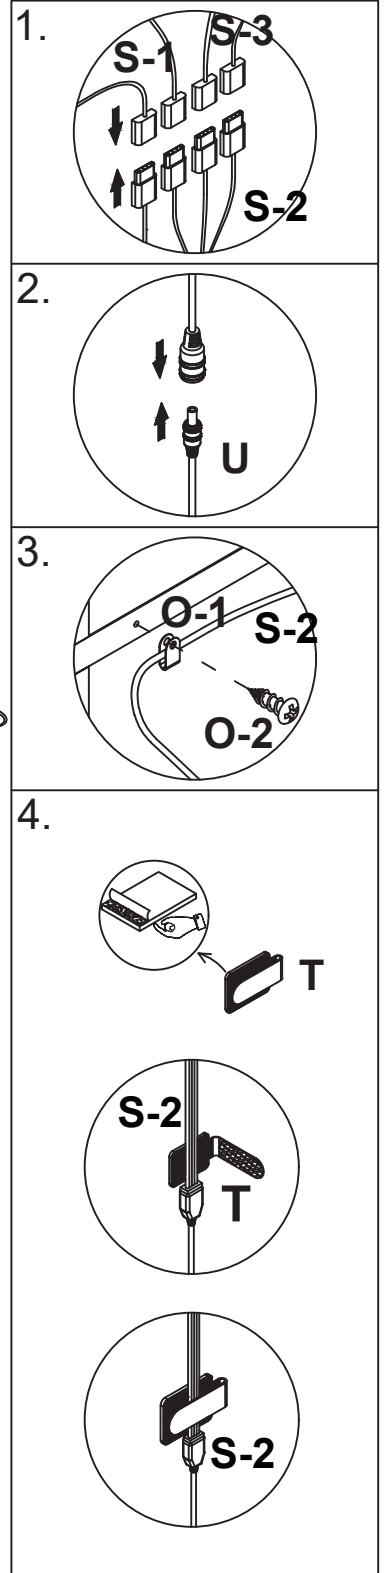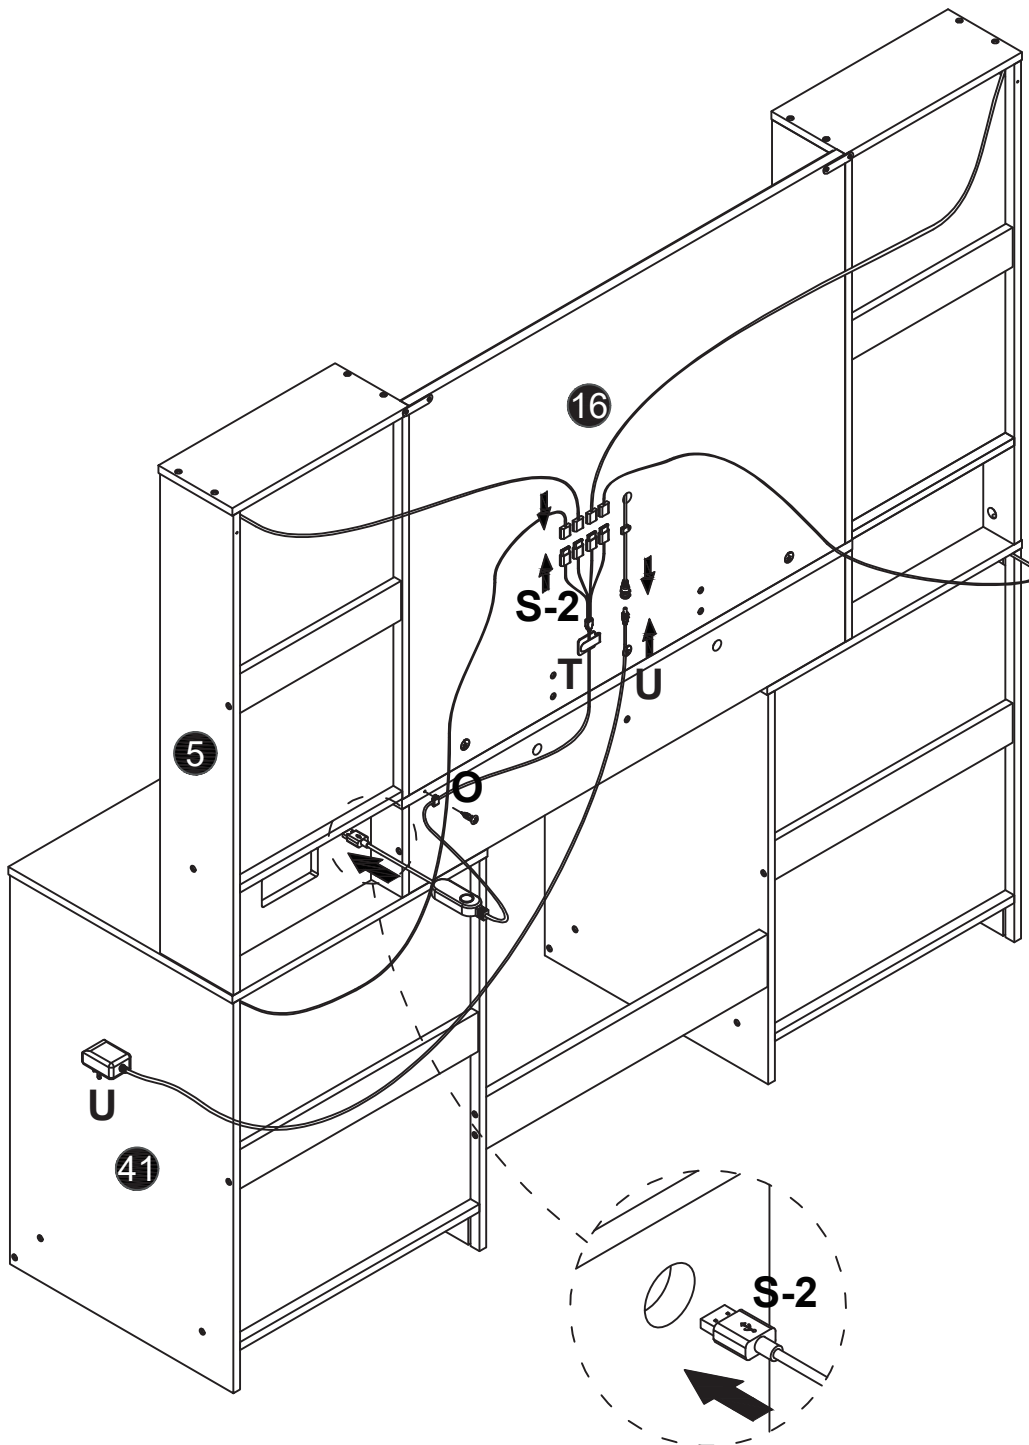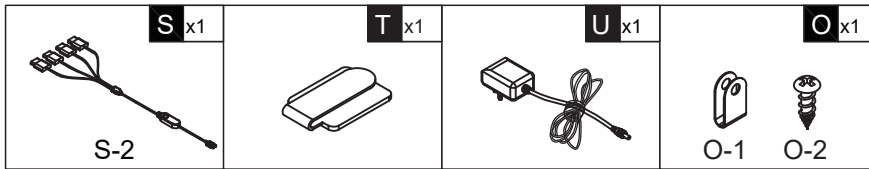

Q x1

R x2

V x24

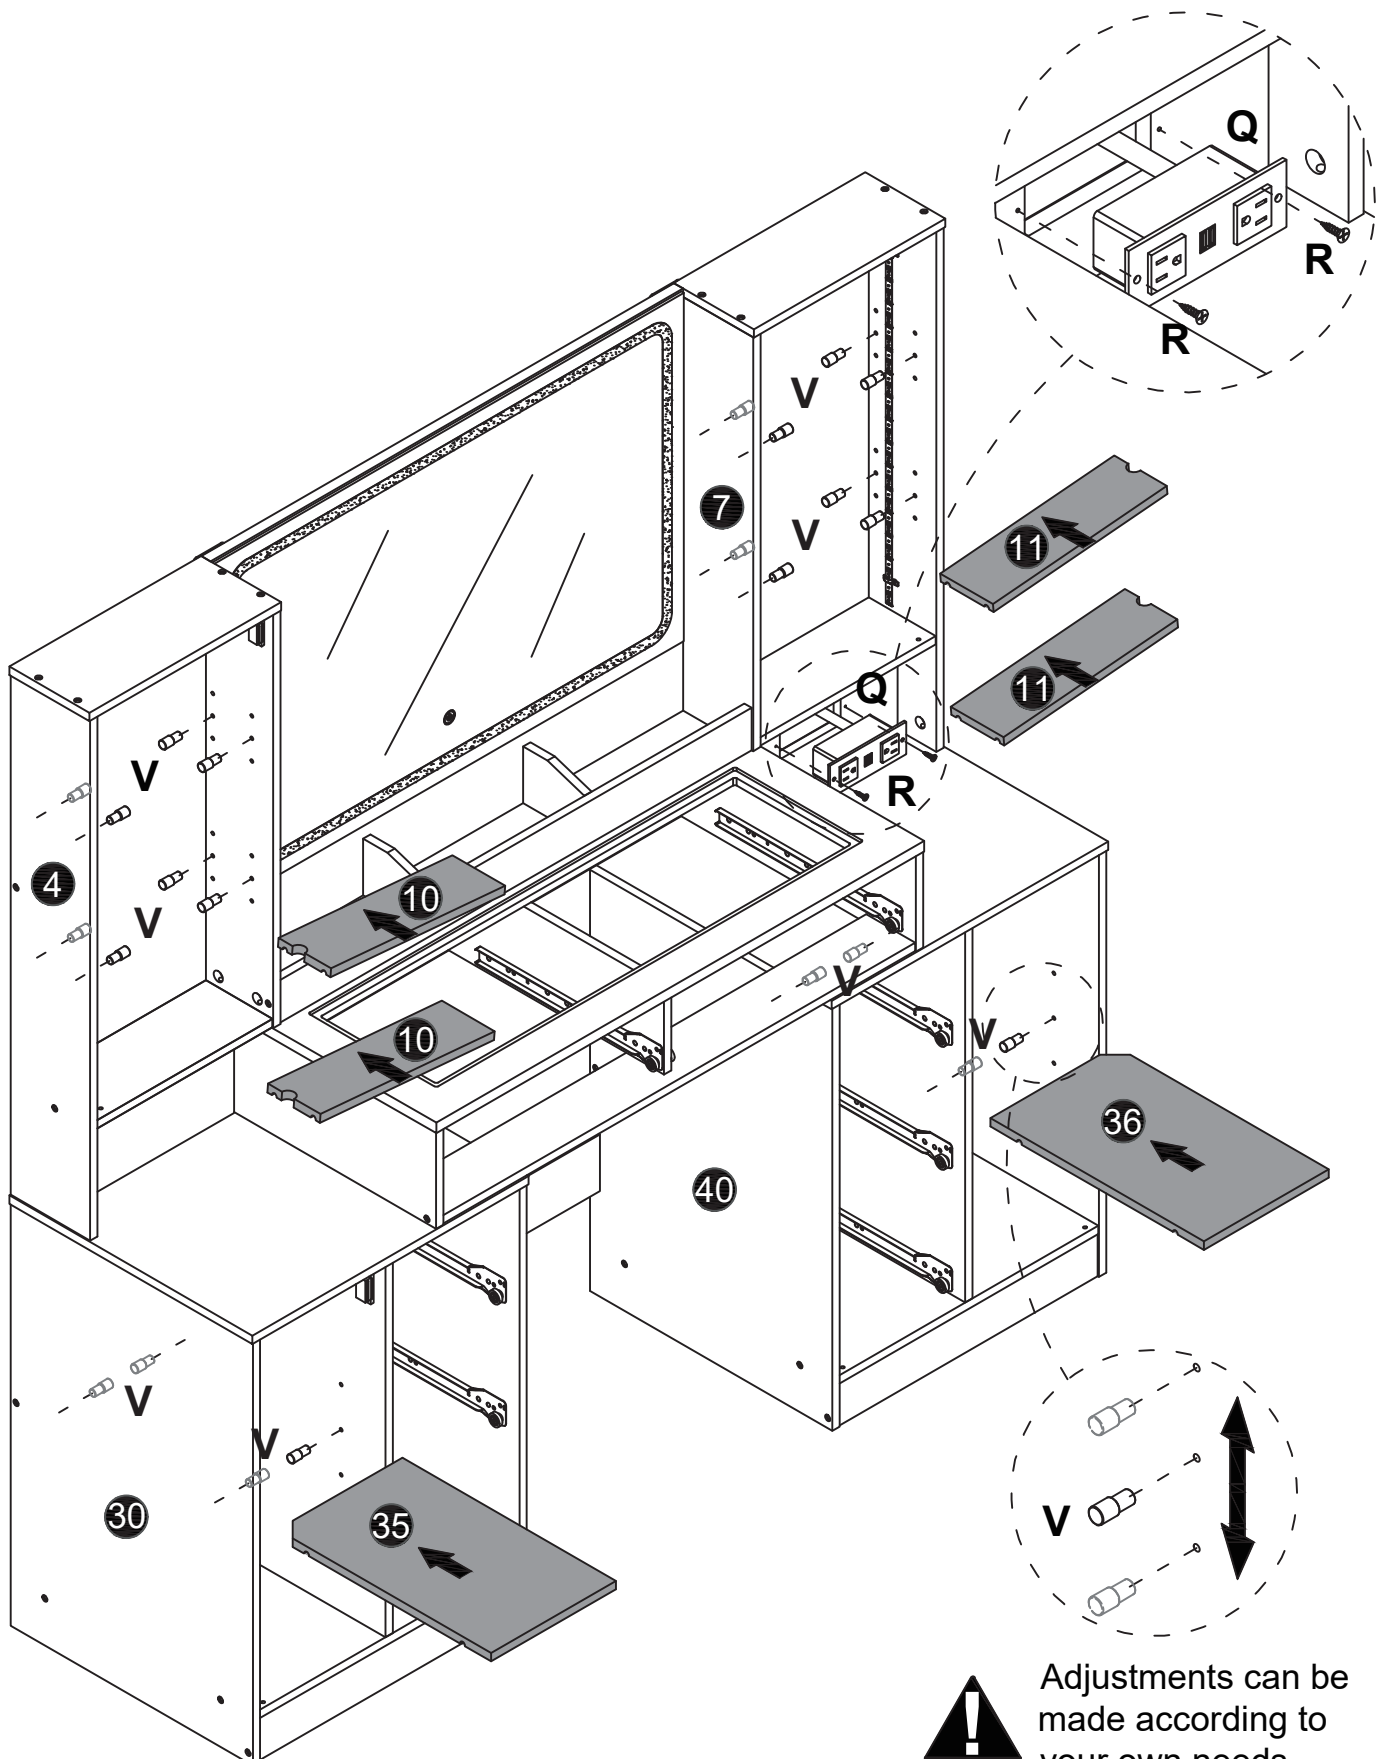

Adjustments can be made according to your own needs.



H x2



I x2



P x4

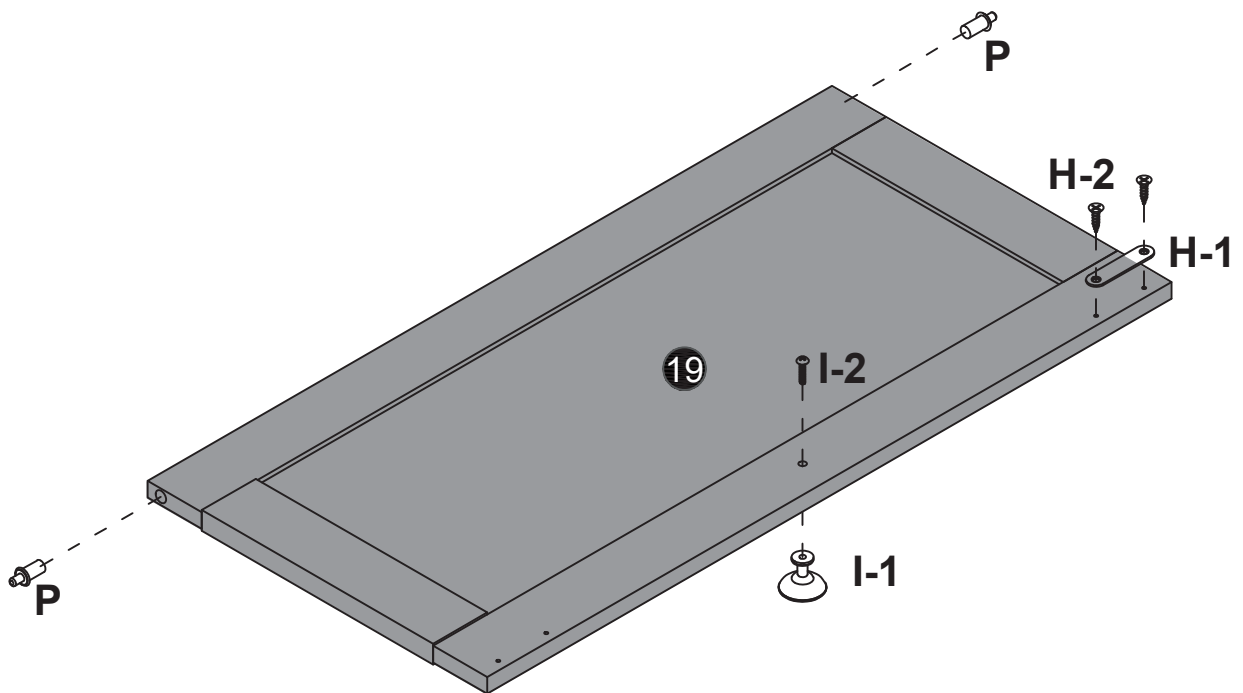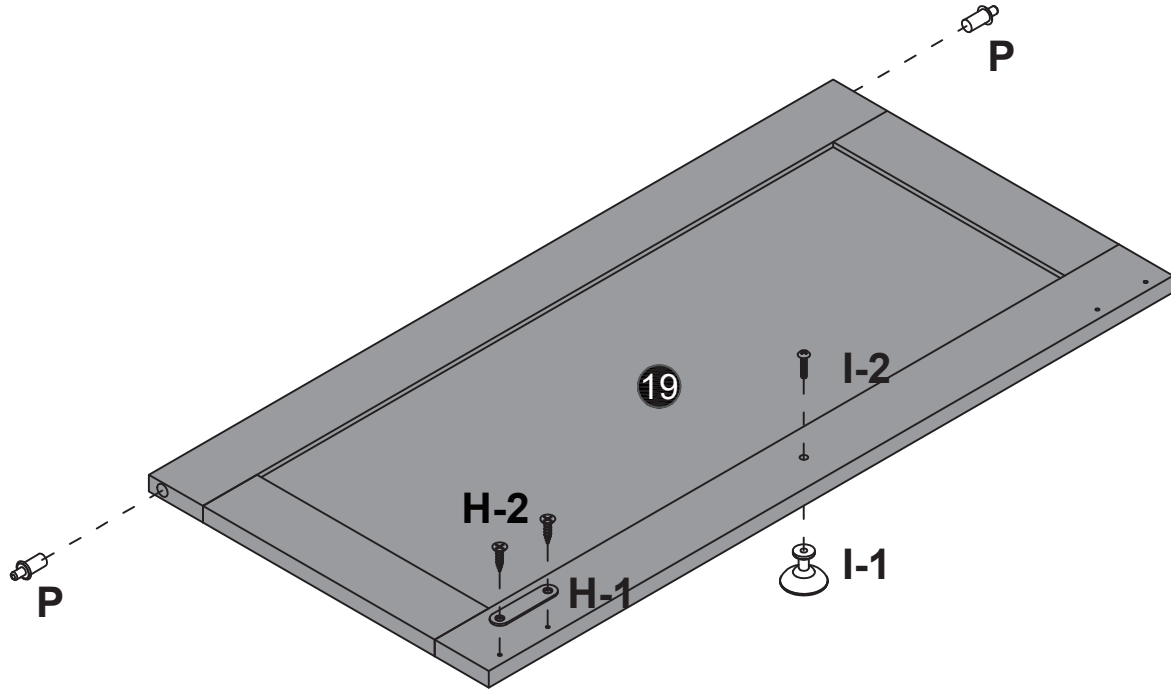



H x2




I x2




P x4


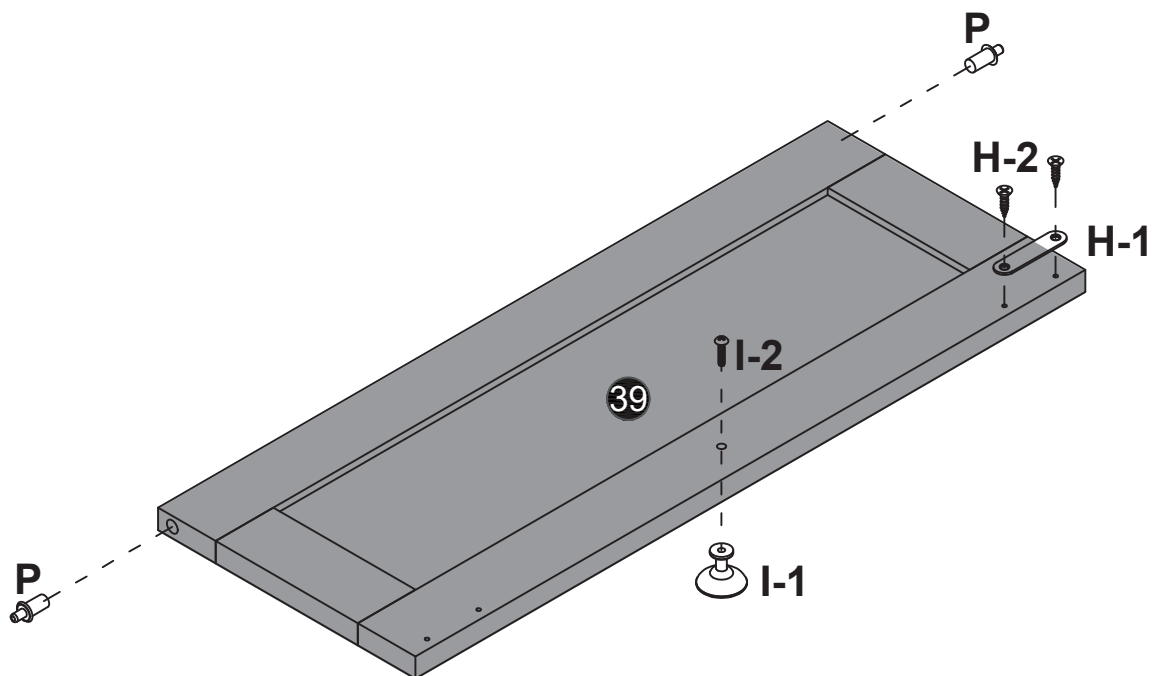
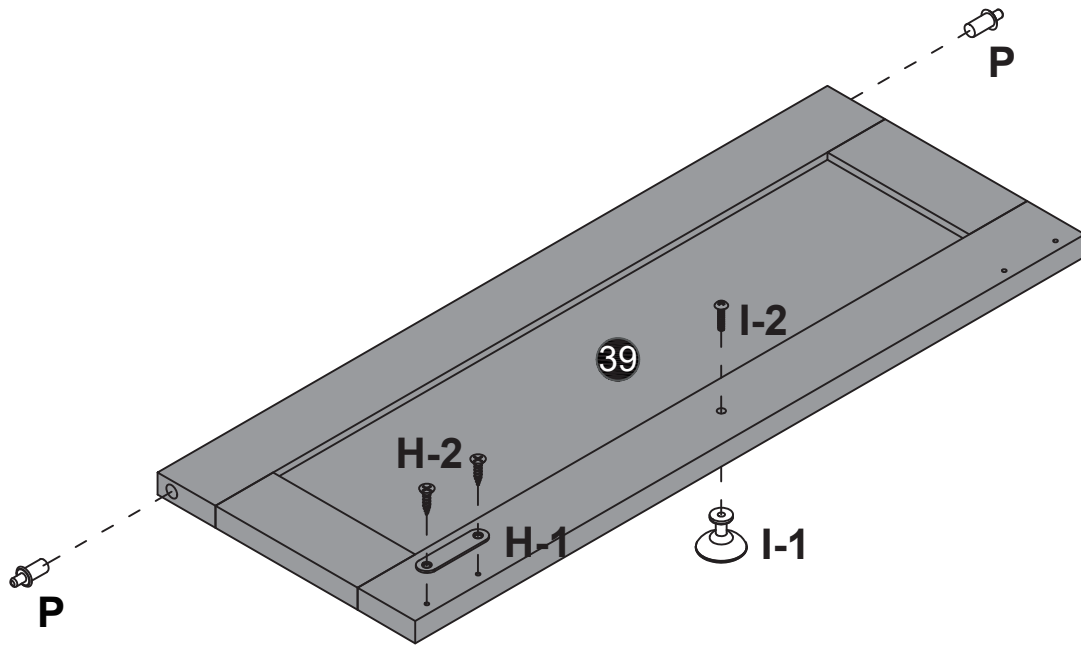


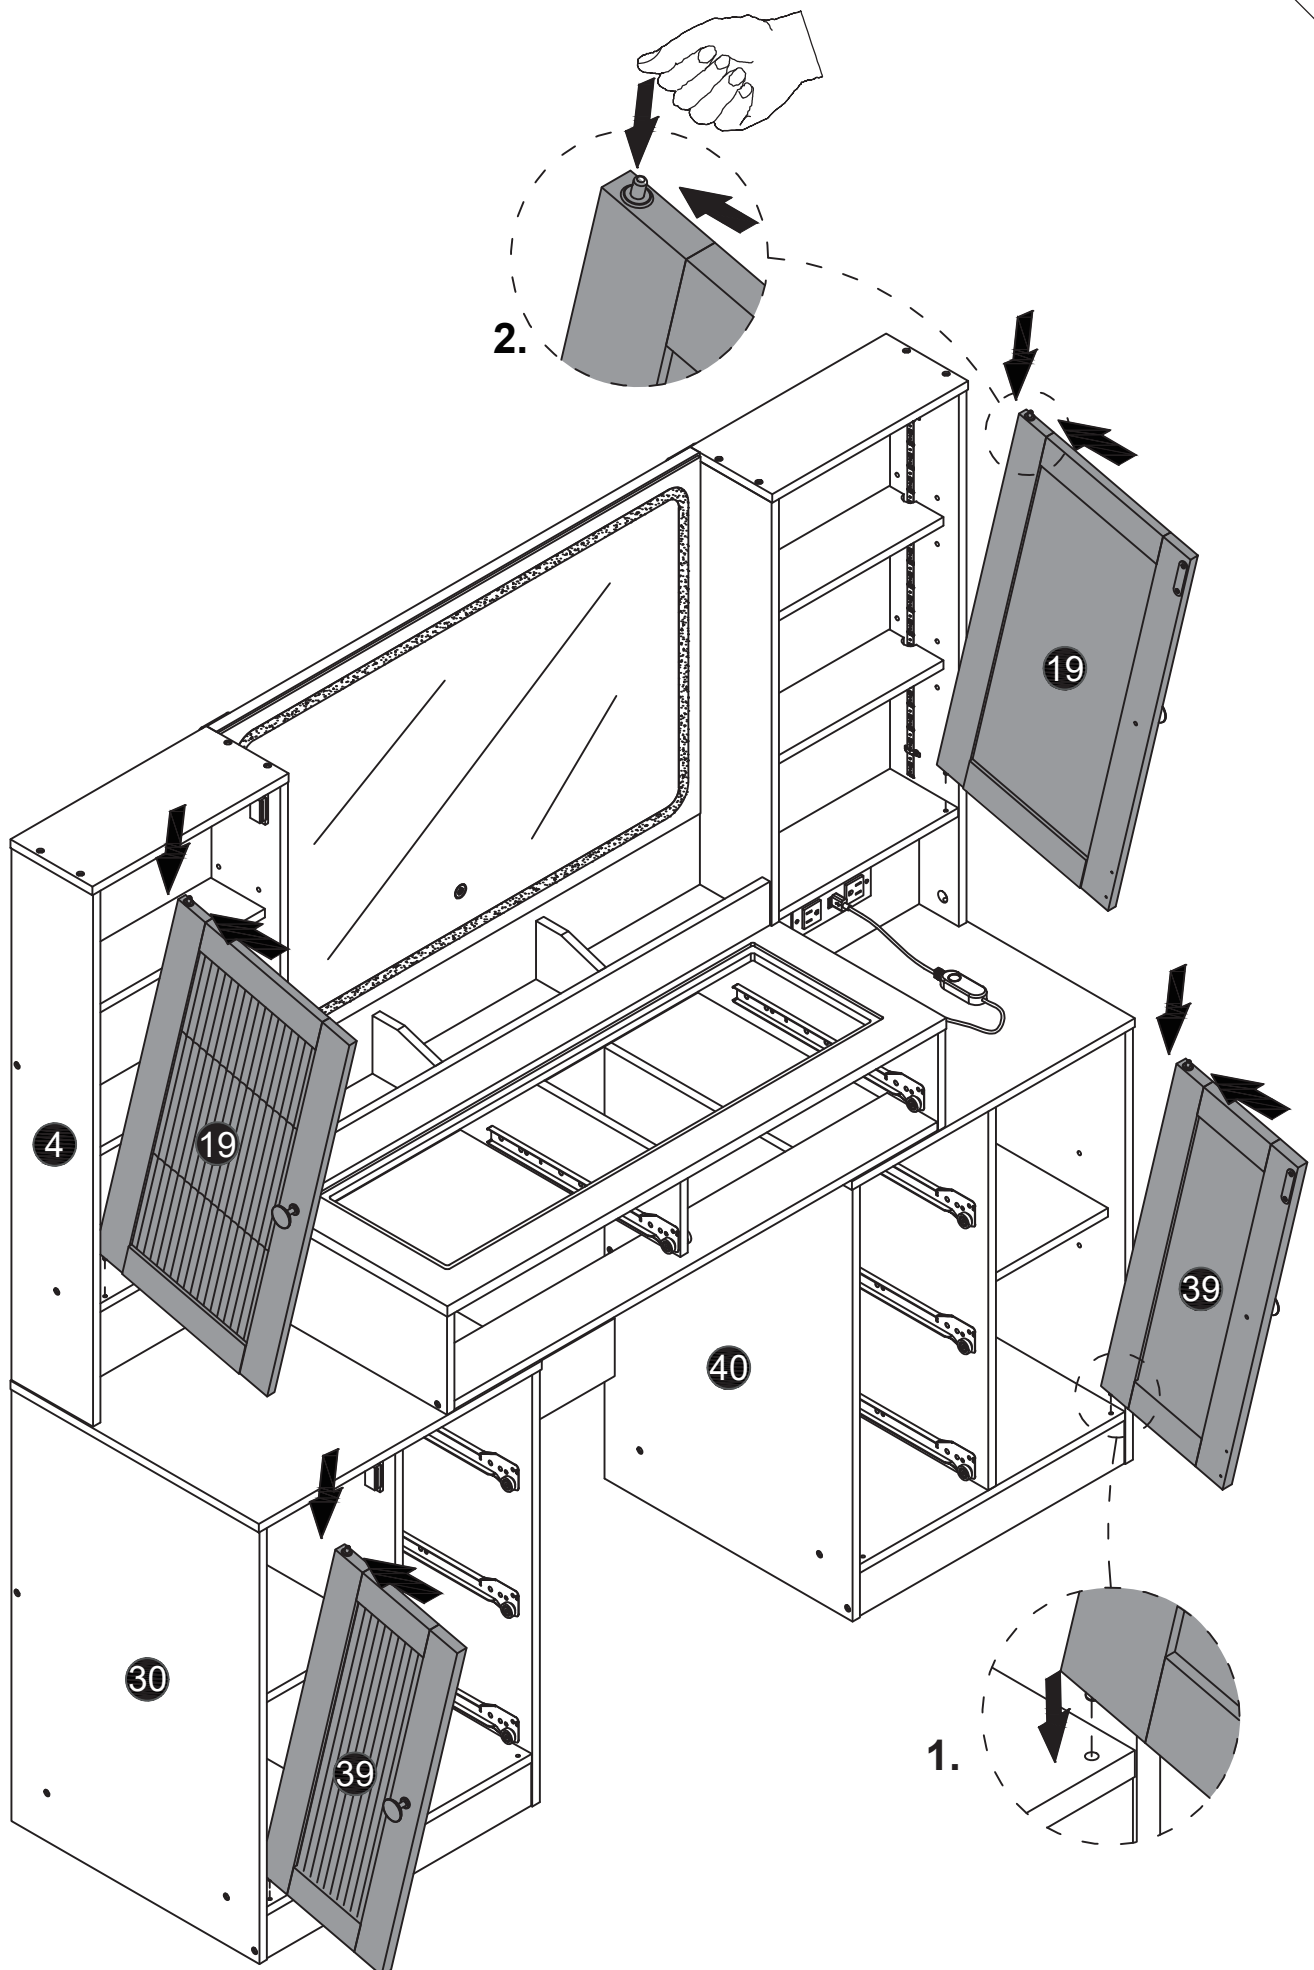


(1)

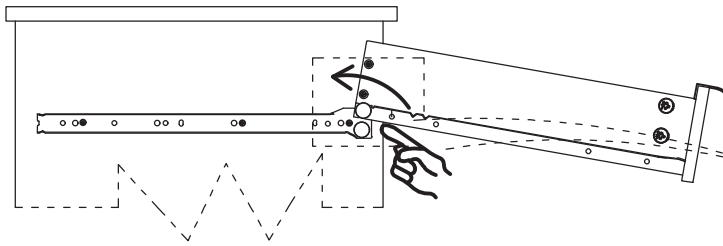


(2)

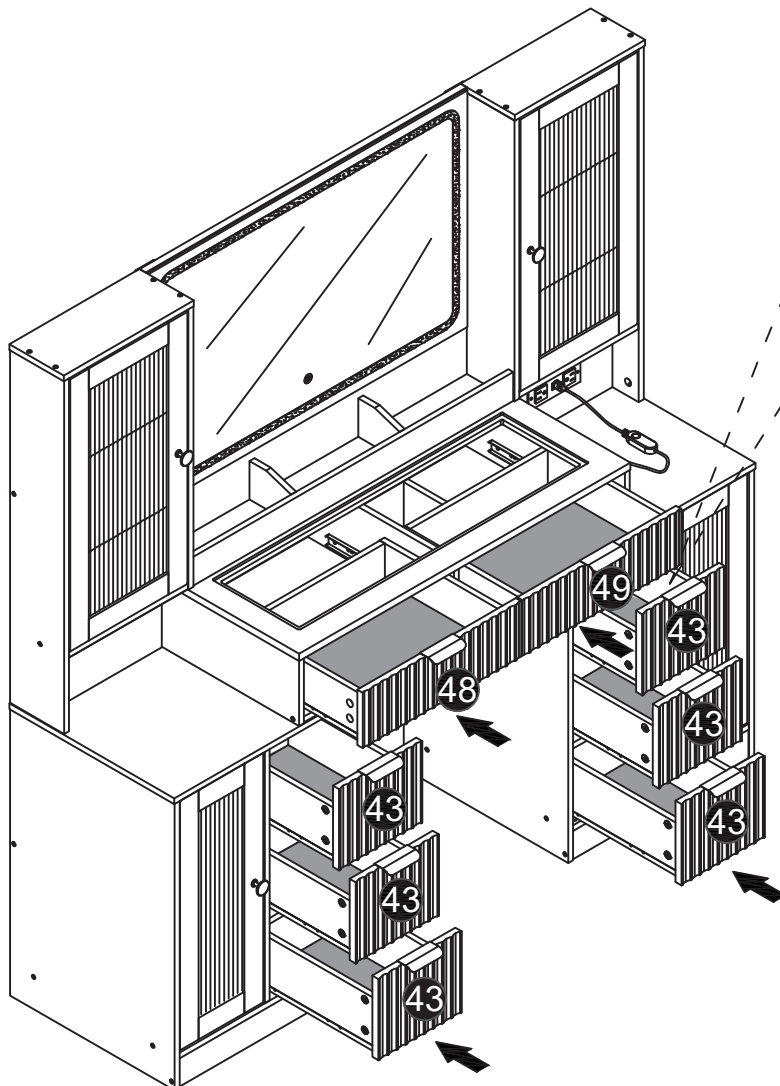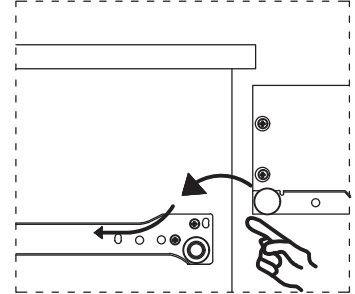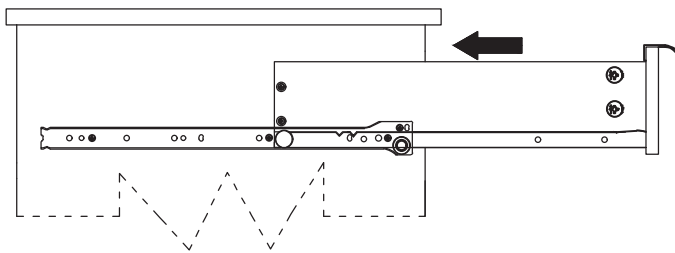

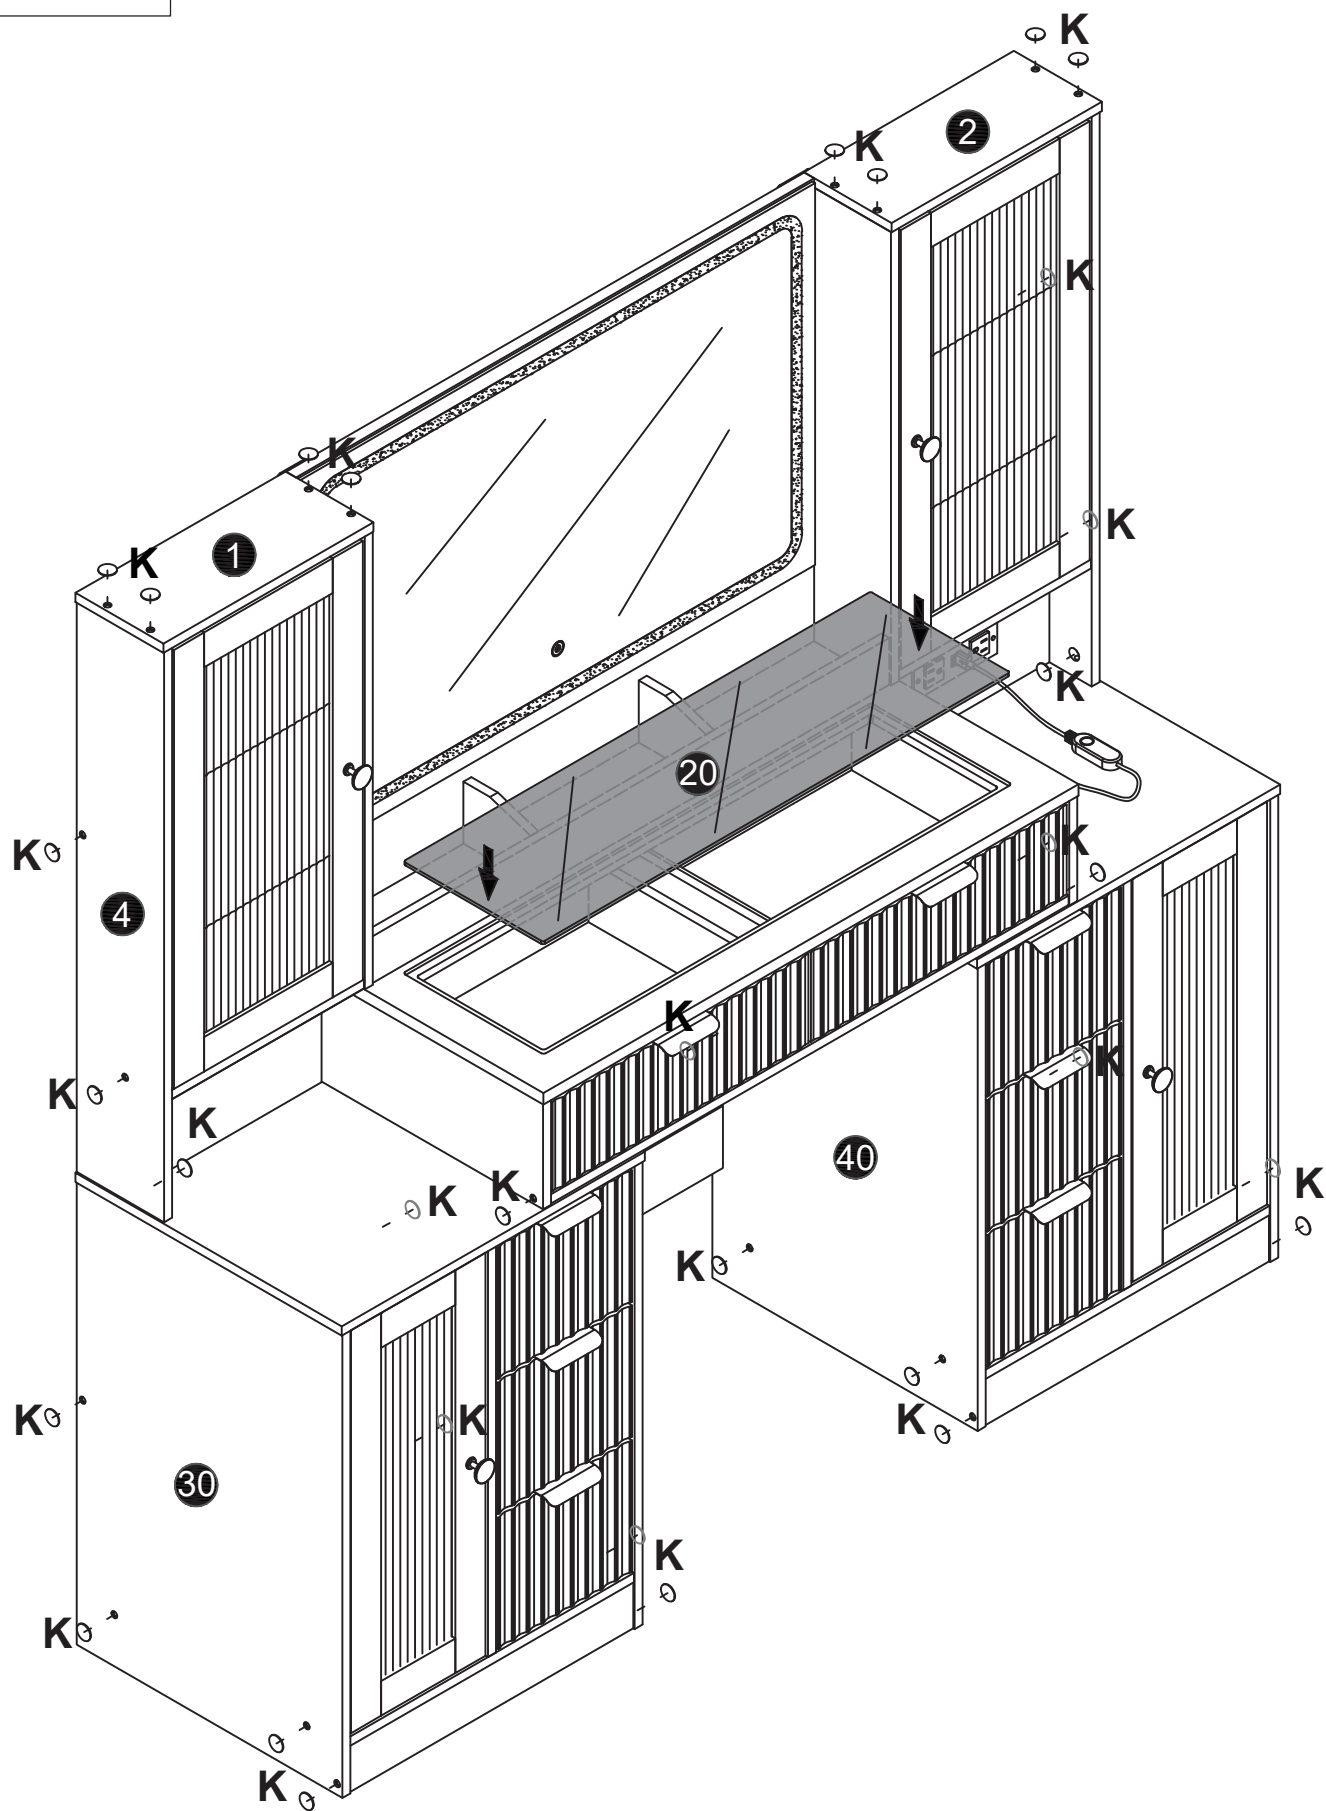

Done


D x2



L x2



M x2




M-1 M-2

M-1

M-2

(1)x2

First fix the anti-rewind screw in the reserved hole of the product.

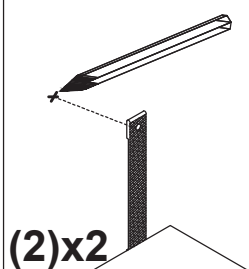

(2)x2

then, use a ruler to measure the approximate height of the product on the wall, and then mark it with a pen.

WALL

+
drilling hole
Ø6x30mm

(3)x2



Then use a tape drill to make holes in the wall that are suitable for the product screws.

WALL

L

(4)x2

WALL


L

D

(5)x2

Then, put the expansion bolt into the hole

Finally, pass the matching screws through the "anti-rewind" and tighten them to fix them on the wall.

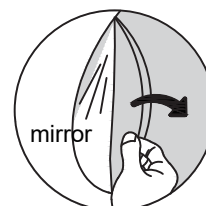

Please tear off the film on the outside of the mirror.

Power supply



WALL

L

D

Scan QR code to download APP controller

OR

Flip to the other side to find the control button

S

