




bed frame

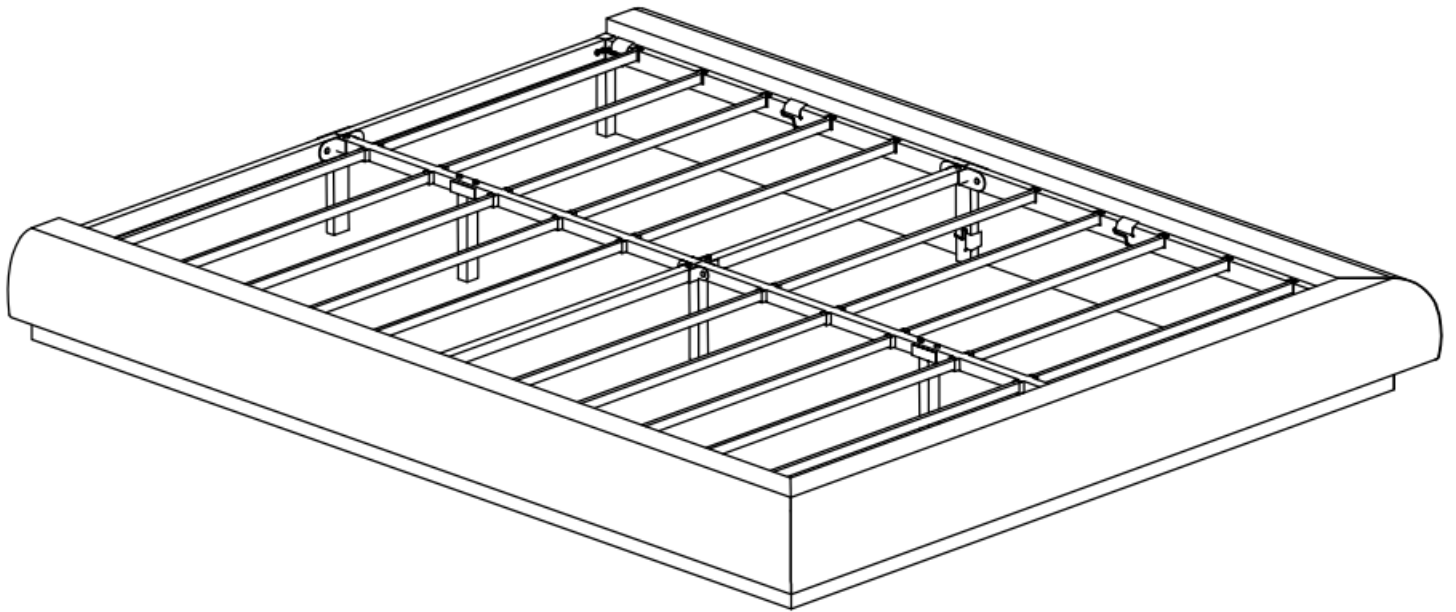

Components

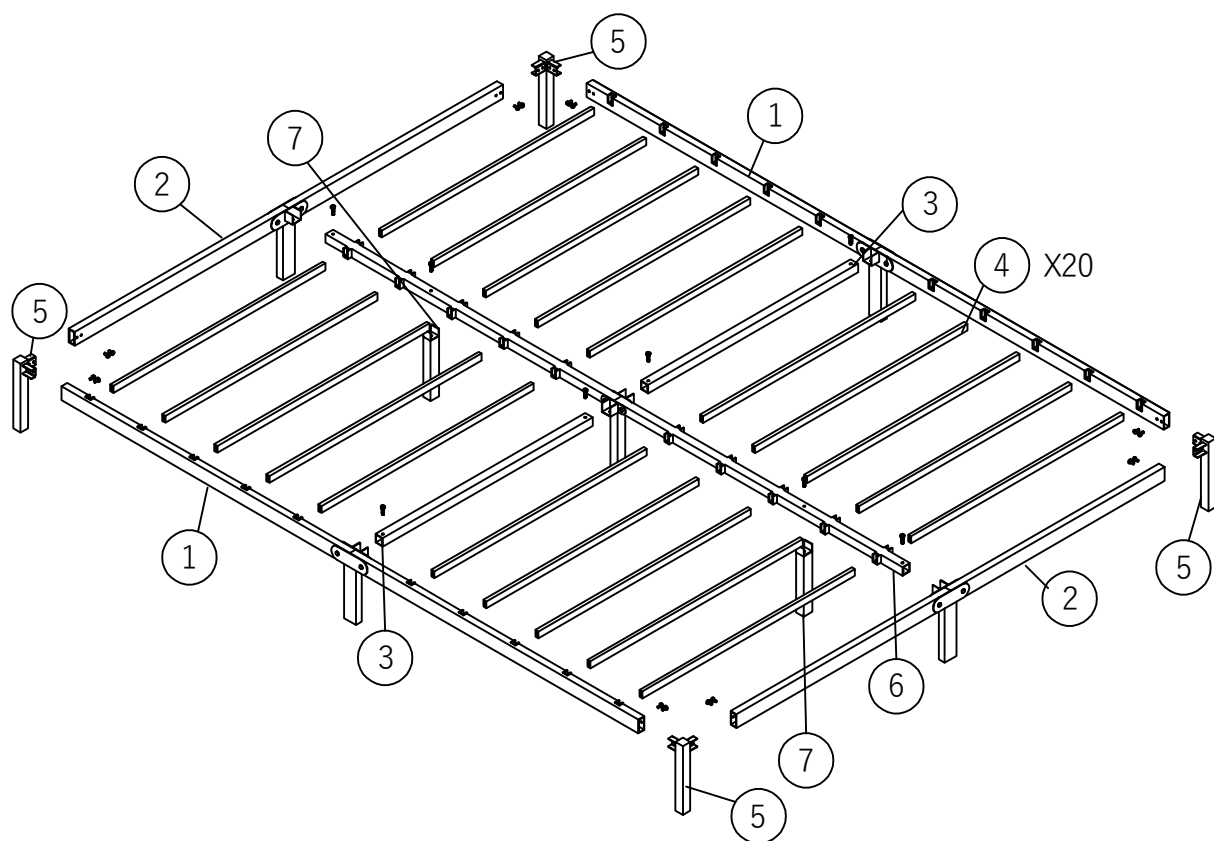

① X2



② X2




③ X2




④ X20




⑤ X4



⑥ X1



⑦ X2



Ⓐ X8+1




M6*35mm

Ⓑ X16+1




M8*10mm


Ⓒ X1

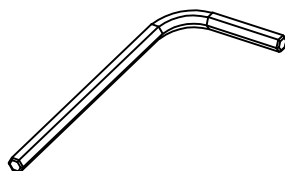


Ⓓ X10+1

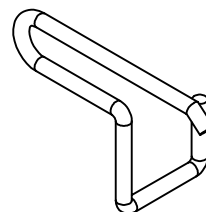


1

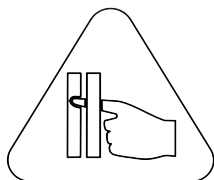


warning hands pinching

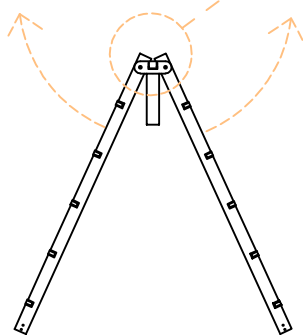

1

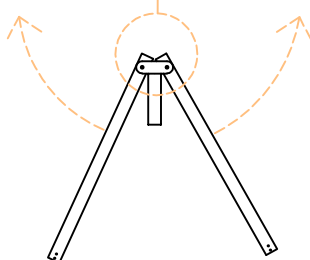


2

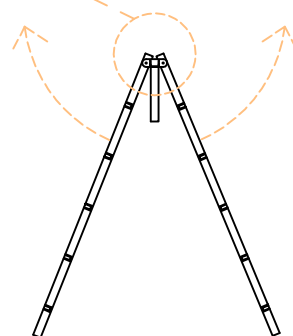

6

2


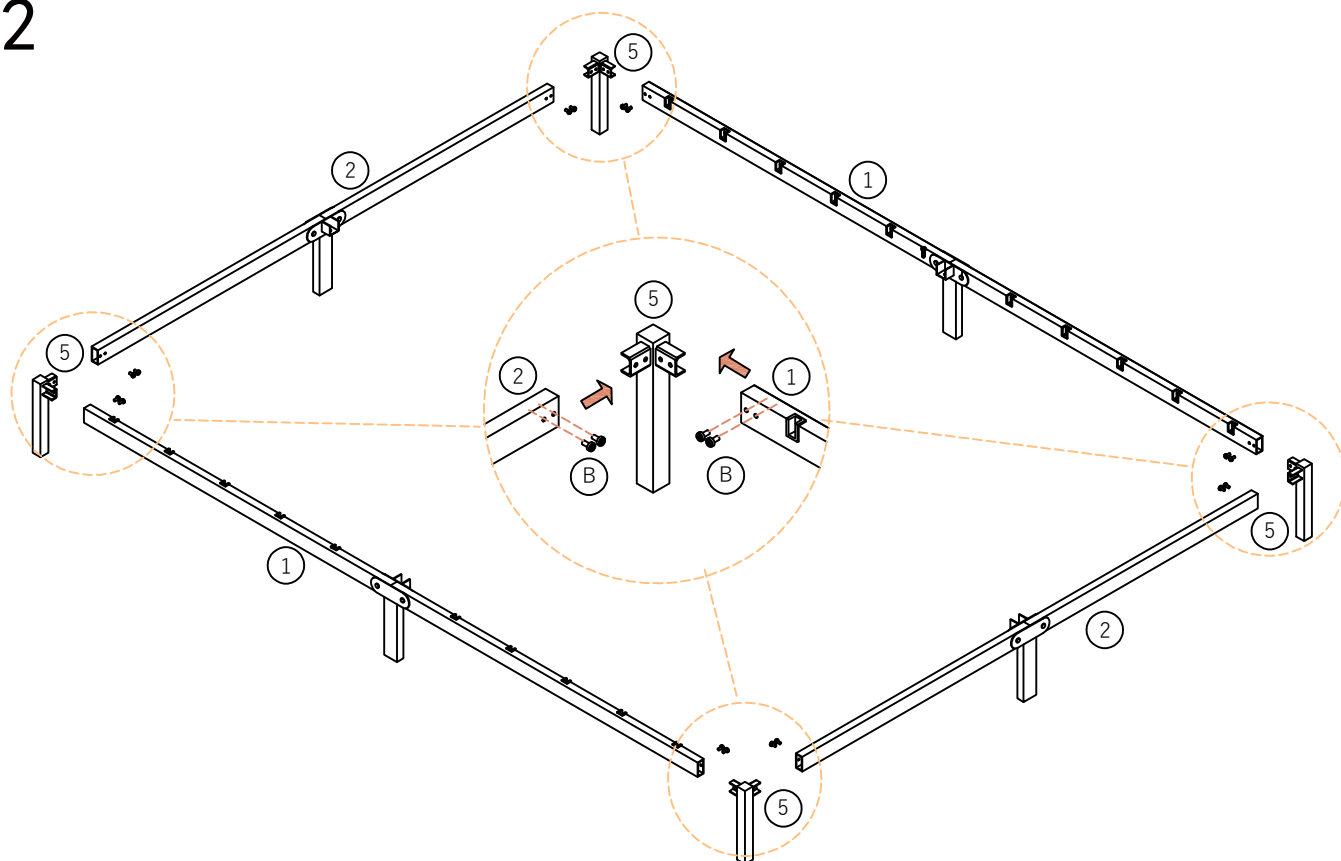


1	2	5	B
2PCS	2PCS	4PCS	16PCS

3



**Warning: Keep distance and enough room to the mattress when opening, as it may have a risk to smack people when restoring.
When cutting it open with a knife, please be careful not to damage the product.**

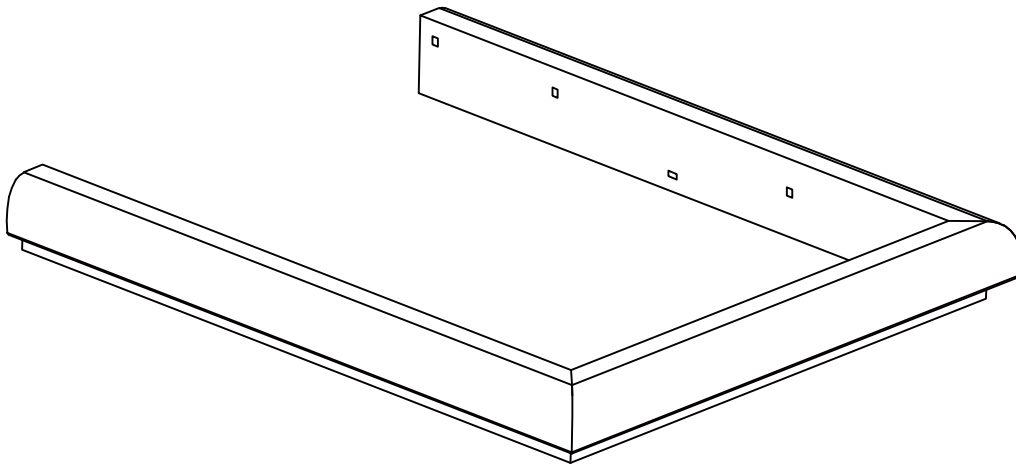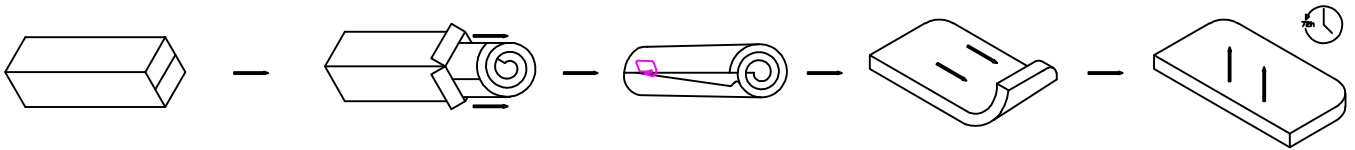



Note:

This product is vacuum compressed. The foam may initially feel softer with slower rebound due to long-term compression. Please allow up to 72 hours for full expansion, air ventilation, and pore recovery to achieve optimal performance.



Shape: Gently pull and smooth the fabric if the stitching appears crooked. Iron Wrinkles: Use an iron with a cloth barrier.

The bed frame will fully form/expand soon.

4

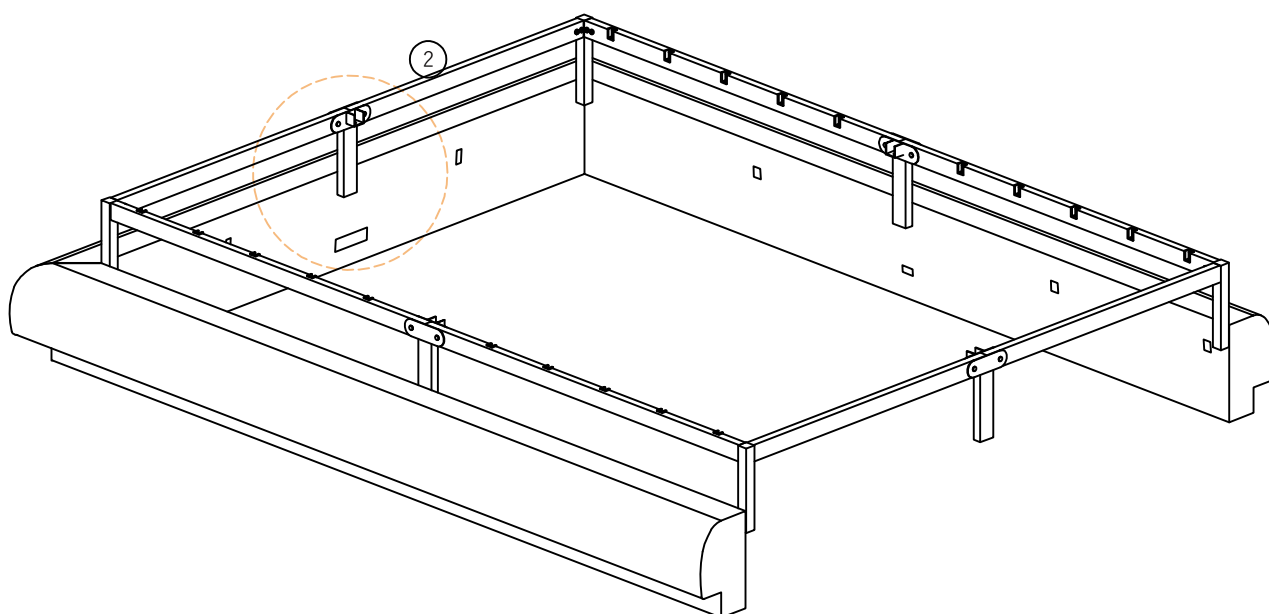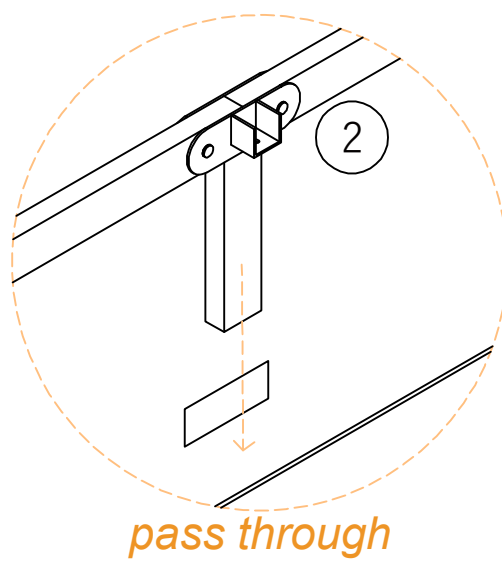


5

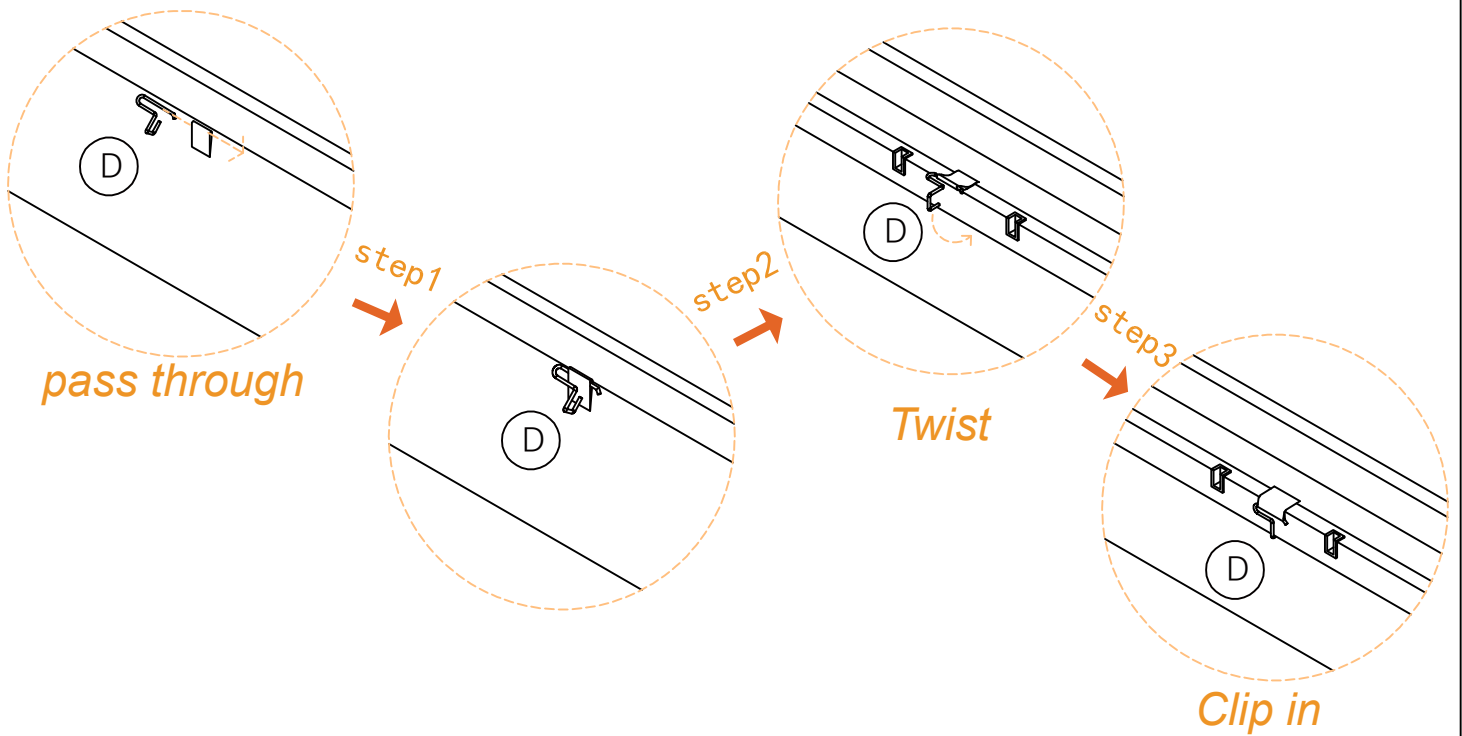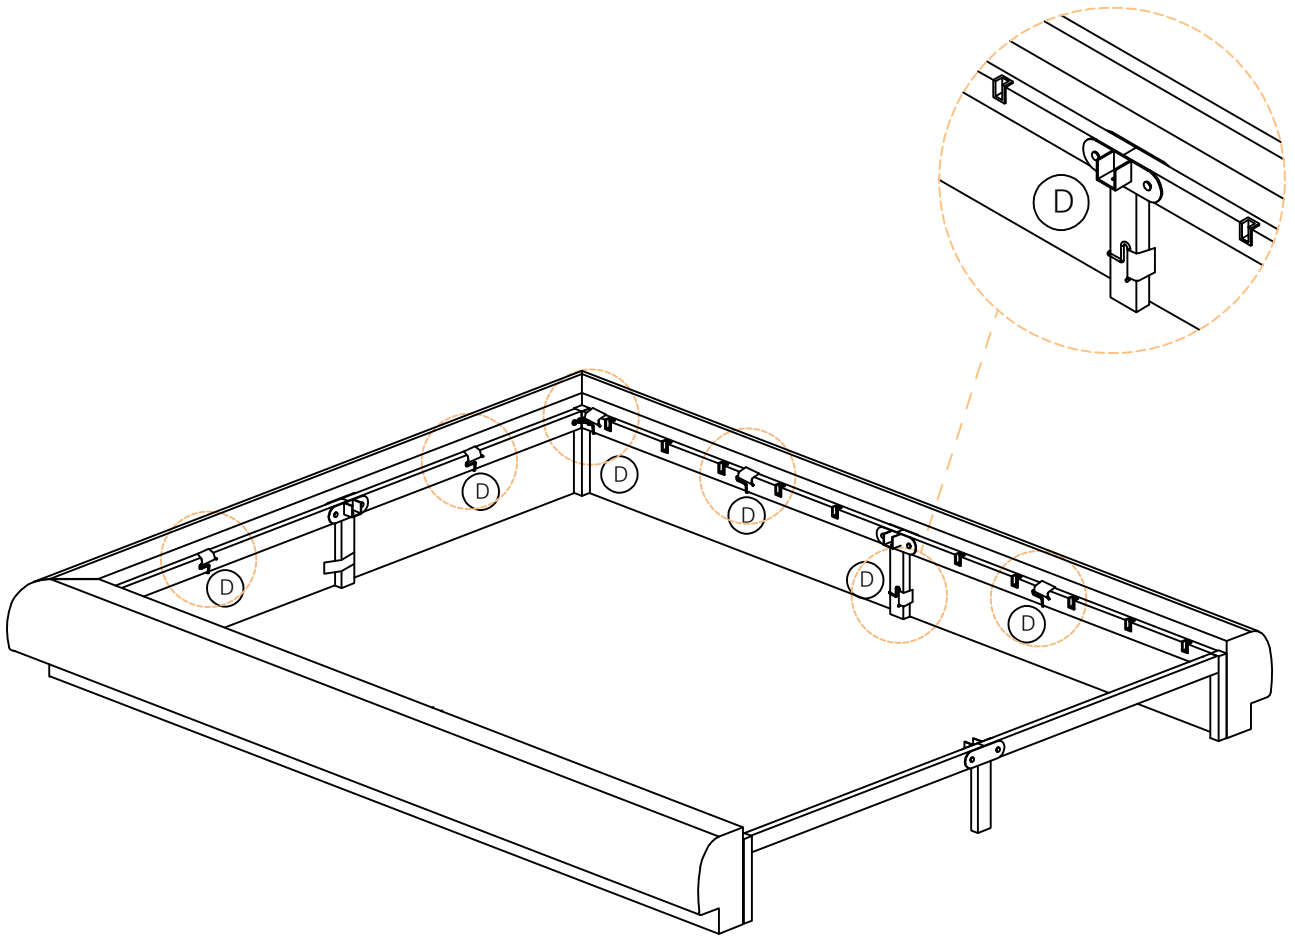


(D)
10PCS

6

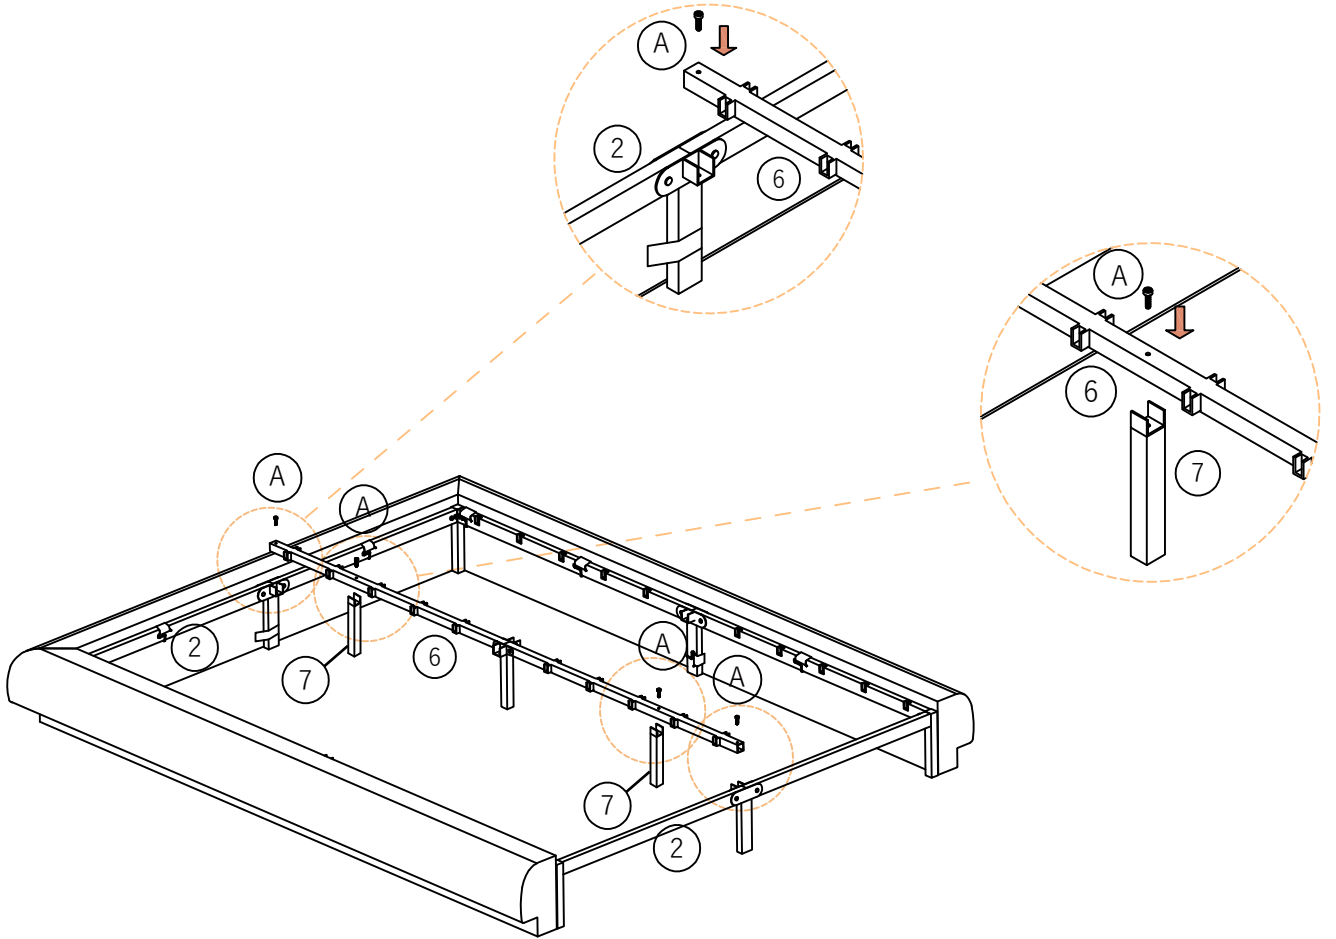


6	7	A
1PCS	2PCS	4PCS

7

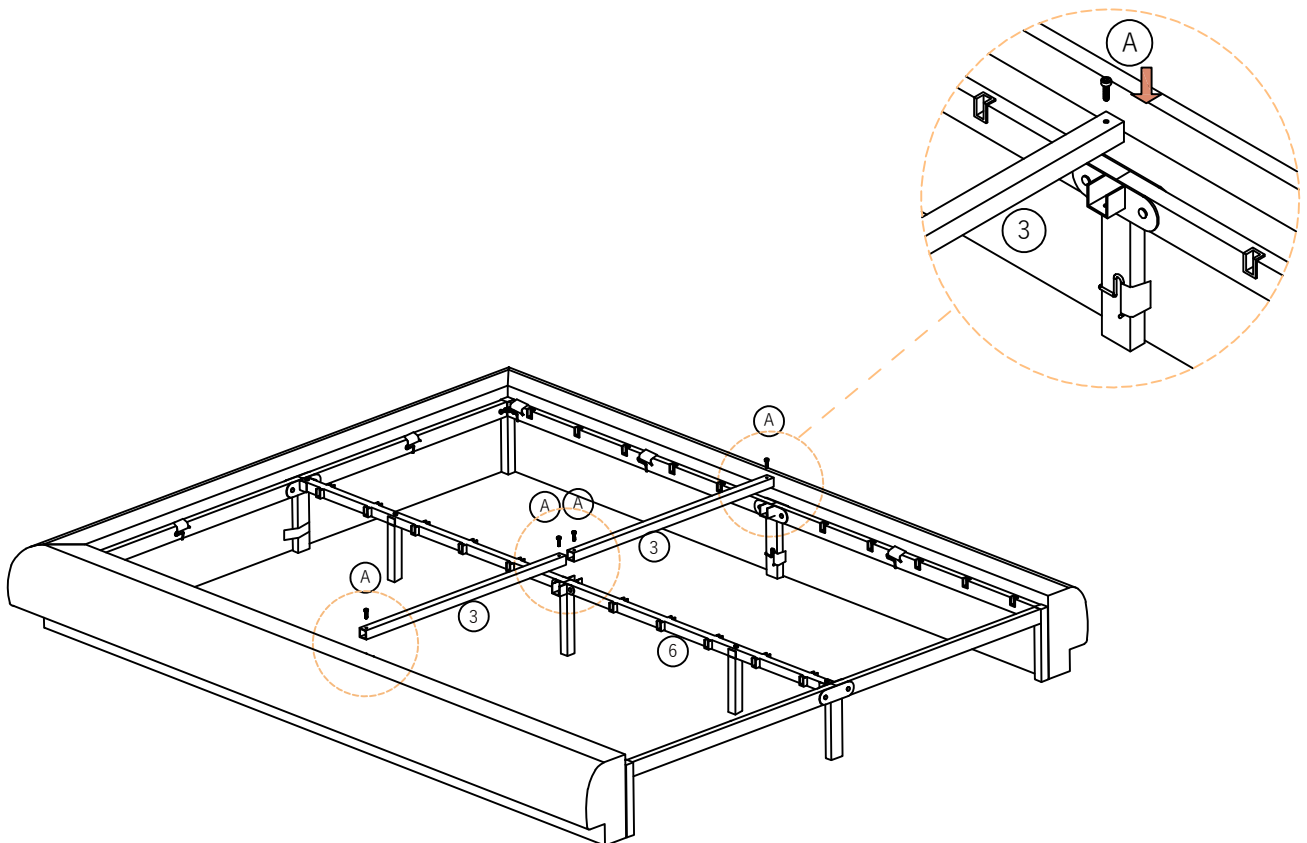

3	A
2PCS	4PCS

8

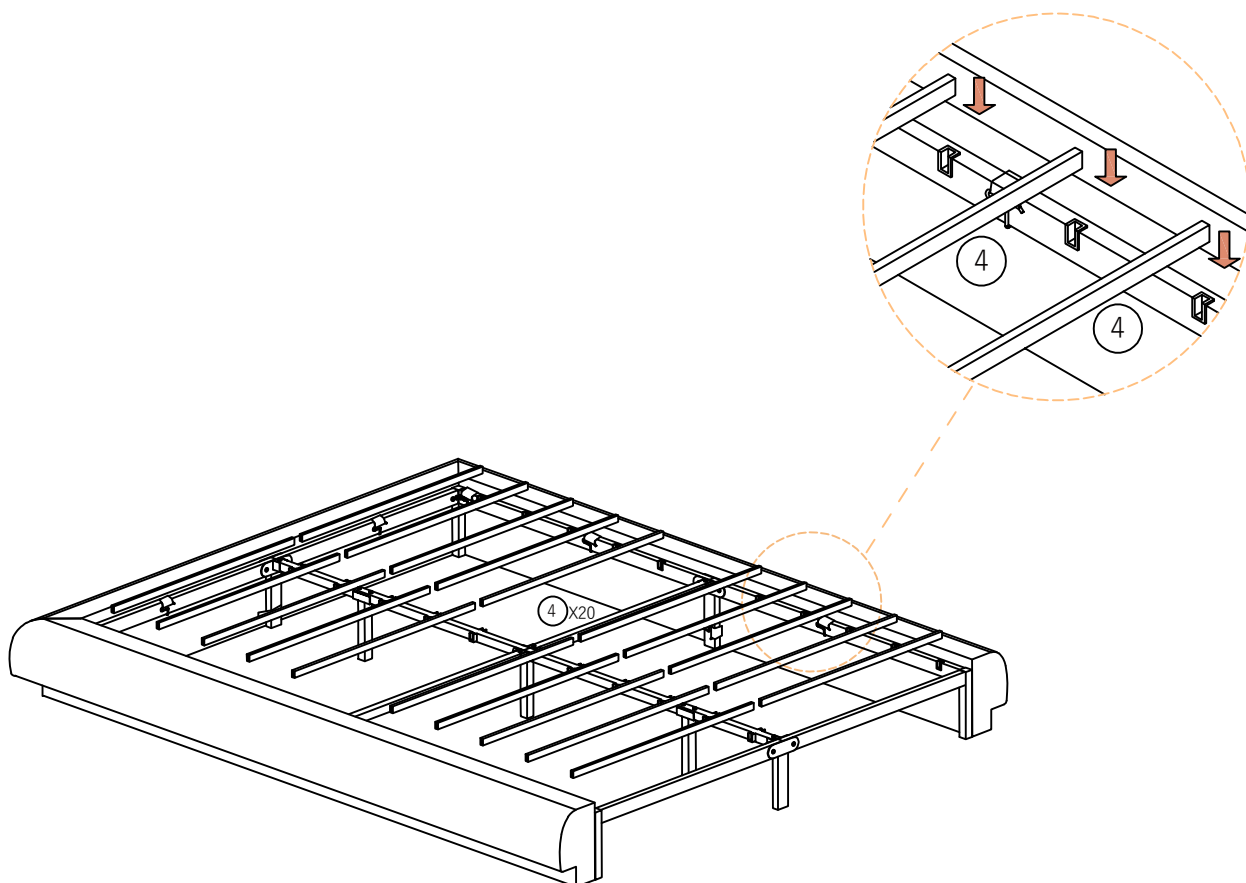

4
20PCS

OK

