
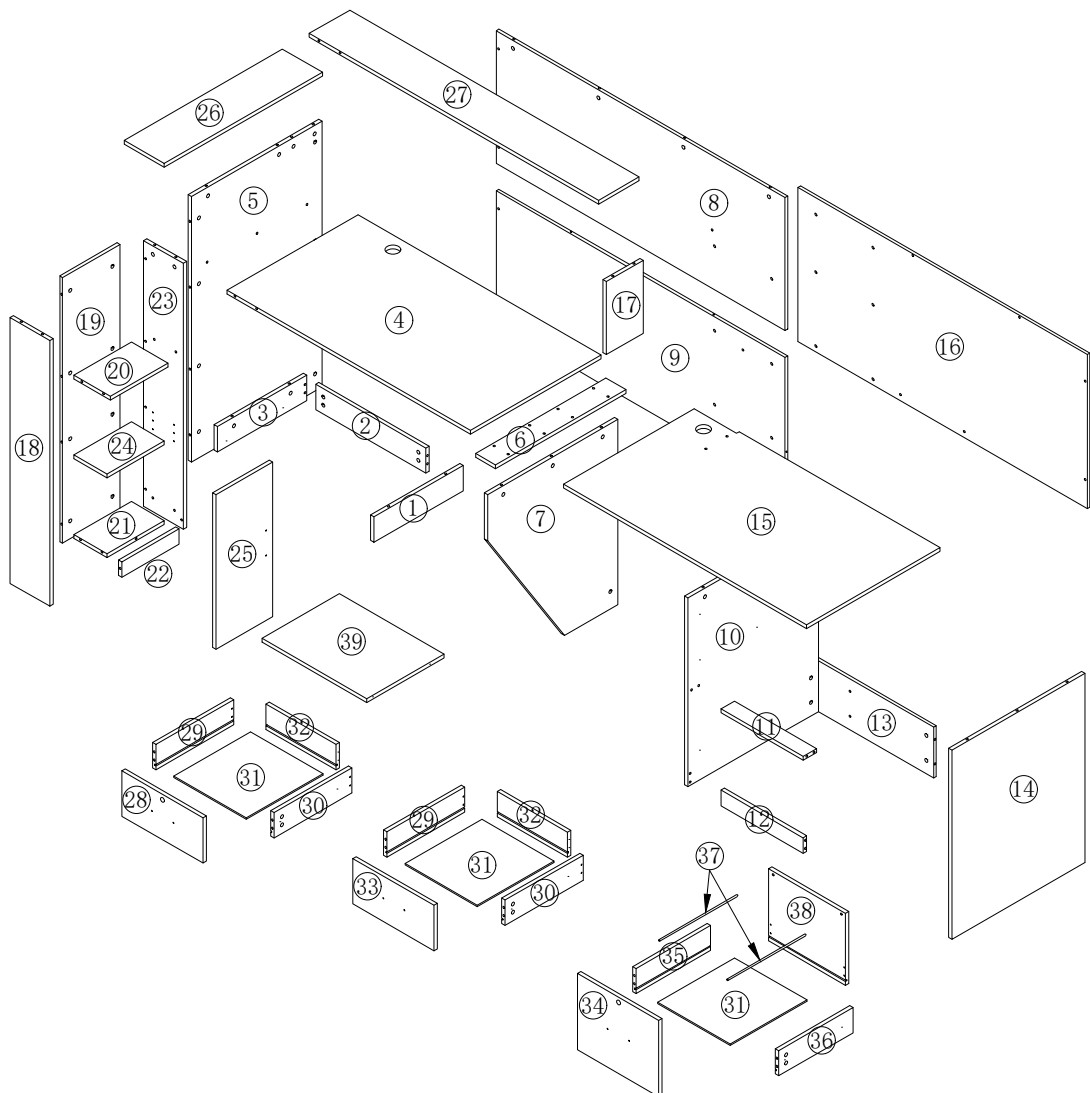
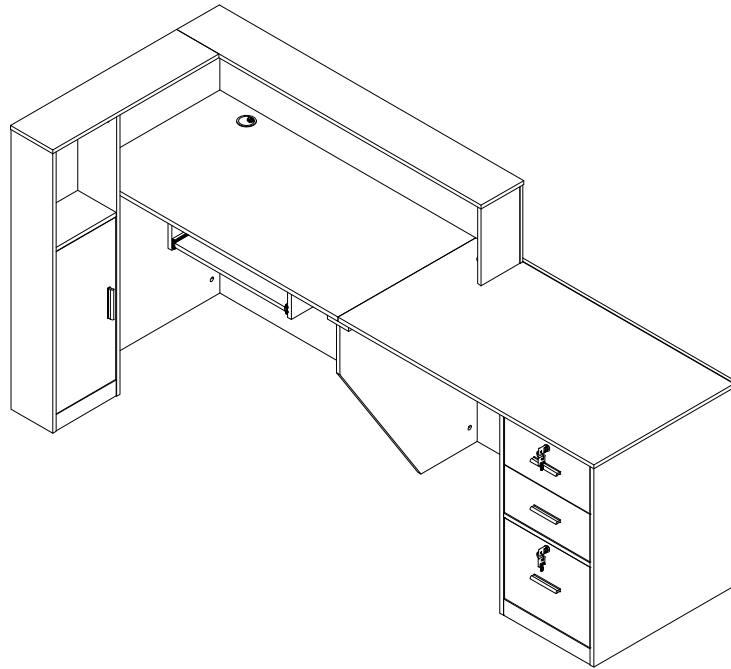



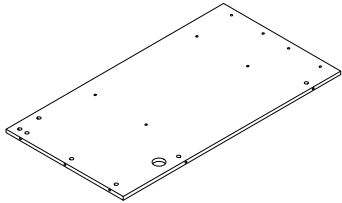
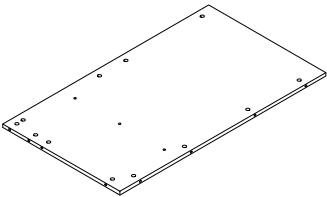

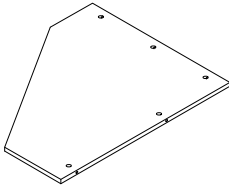
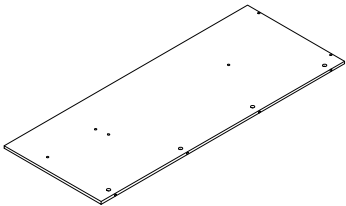
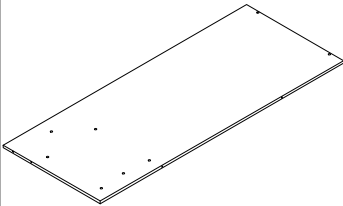
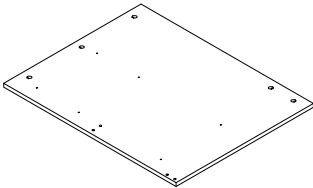


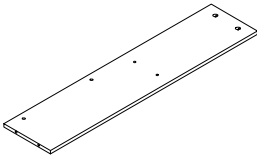
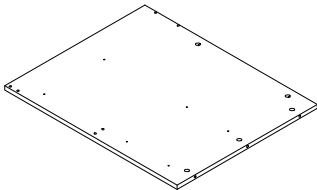
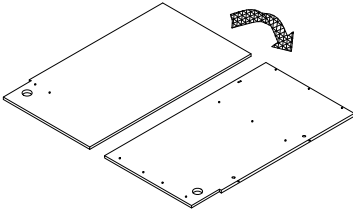
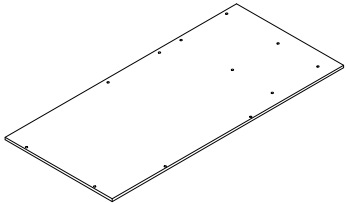

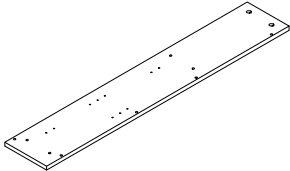
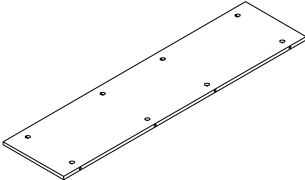



















ASSEMBLY INSTRUCTION





ASSEMBLY INSTRUCTION

① 1PC 	② 1PC 	③ 1PC 	④ 1PC 
⑤ 1PC 	⑥ 1PC 	⑦ 1PC 	⑧ 1PC 
⑨ 1PC 	⑩ 1PC 	⑪ 1PC 	⑫ 1PC 
⑬ 1PC 	⑭ 1PC 	⑮ 1PC 	⑯ 1PC 
⑰ 1PC 	⑱ 1PC 	⑲ 1PC 	⑳ 1PC 

ASSEMBLY INSTRUCTION

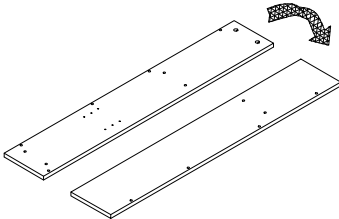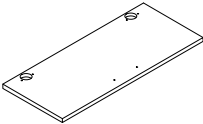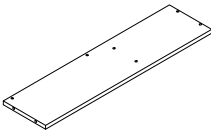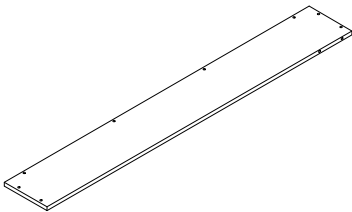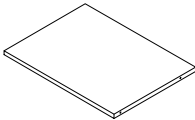②1 1PC 	②2 1PC 	②3 1PC 	②4 1PC 
②5 1PC 	②6 1PC 	②7 1PC 	②8 1PC 
②9 2PCS 	③0 2PCS 	③1 3PCS 	③2 2PCS 
③3 1PC 	③4 1PC 	③5 2PCS 	③6 1PC 
③7 2PCS 	③8 1PC 	③9 1PC 	


ASSEMBLY INSTRUCTION

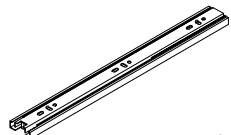A  M6*40 97PCS	B  Ø15*9.5 97PCS	C  Ø3.5*14 44PCS	D  14PCS
E  96#  M4*18 4sets	F  14" 8PCS	G  Ø3.5*40 12PCS	H  H1  H3  H2  H4   Ø3.5*20 2sets
I  M6*25 16PCS	J  Ø6*40 6PCS	K  Ø5*15 4PCS	L  2PCS
M  Ø50 2PCS	N  85PCS	O  12PCS	

Step 1

F 8PCS

14"















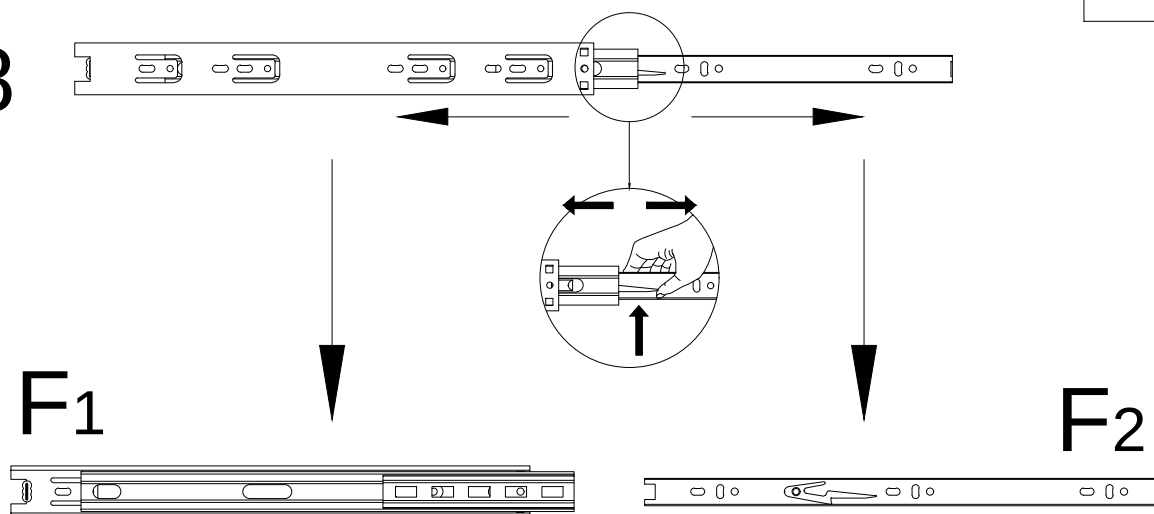
Fx8

Step 2

A 71PCS



M6*40

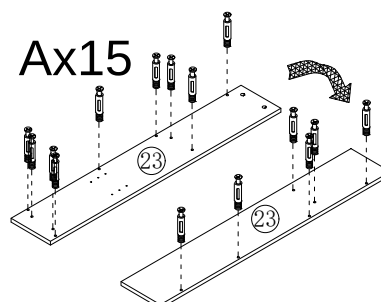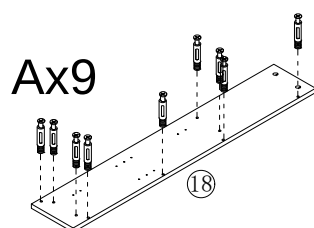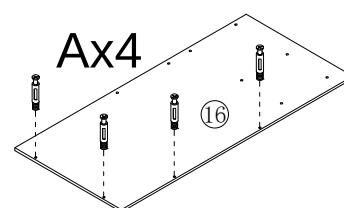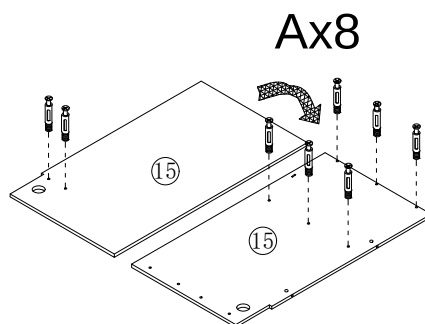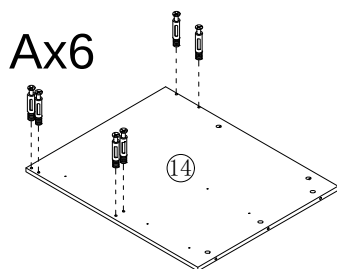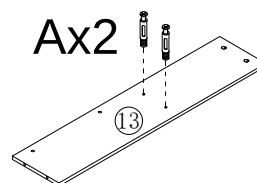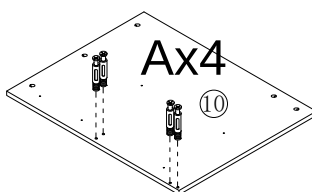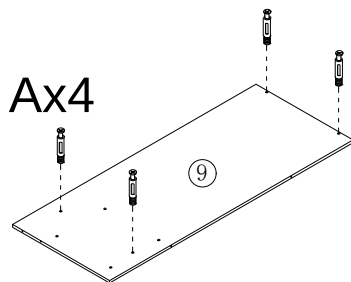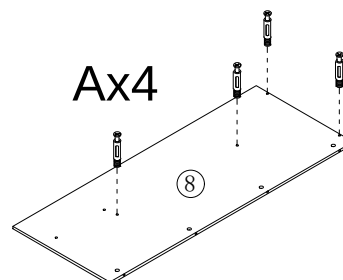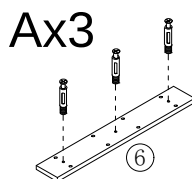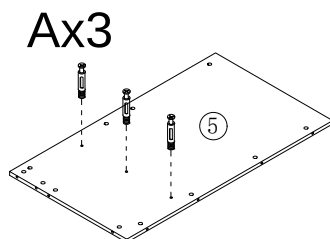
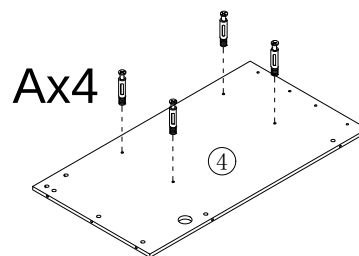
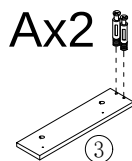
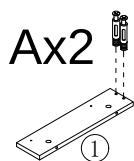


Step 3

A 26PCS



M6*40

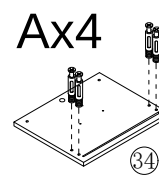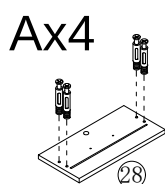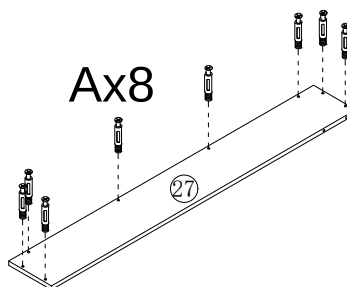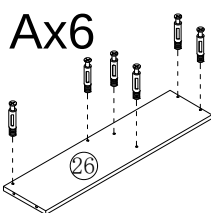

Step 4

C 16PCS







Ø3.5*14


F1 8PCS



14"

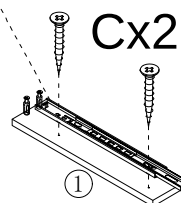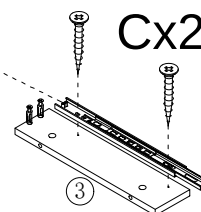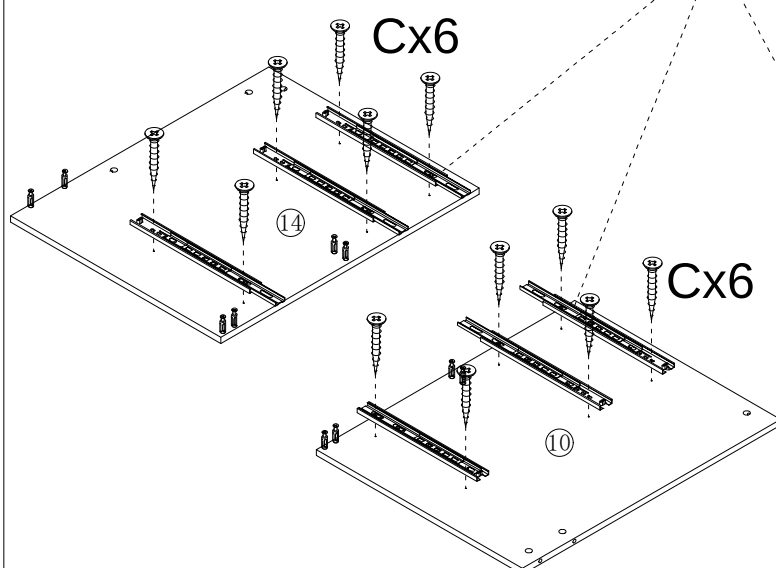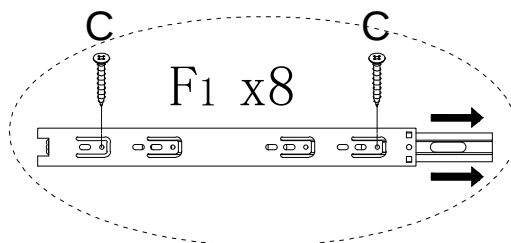


Step 5

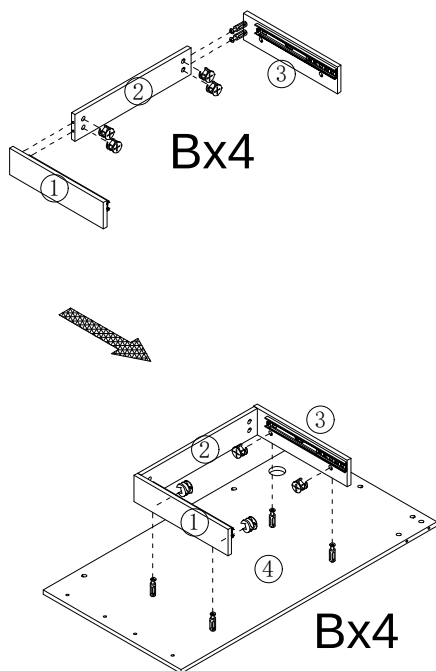


B 8PCS
Ø15*9.5

Step 6

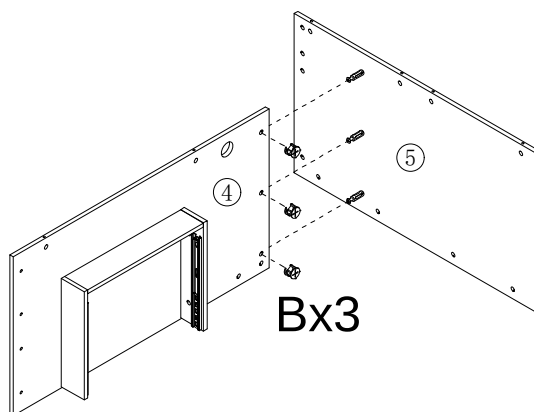


B 3PCS
Ø15*9.5

Step 7

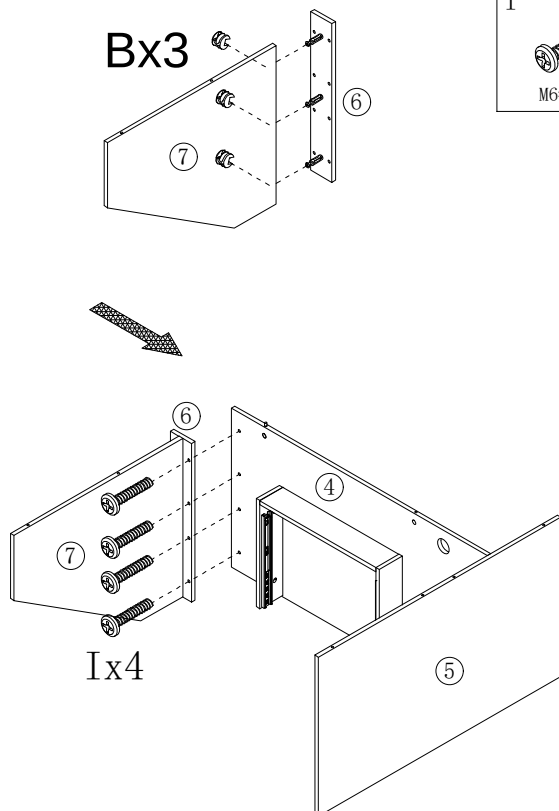

B 3PCS
Ø15*9.5
I 4PCS
M6*25

Step 8

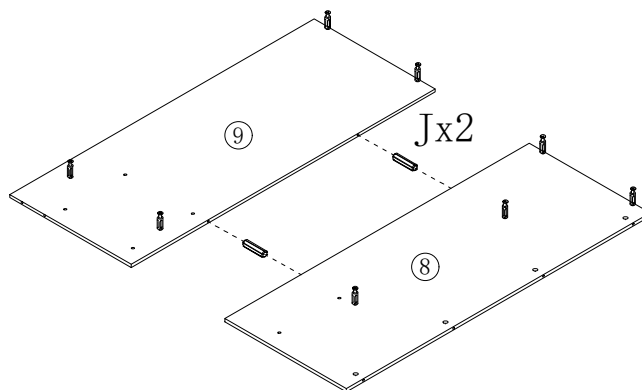


J 2PCS
Ø6*40

ASSEMBLY INSTRUCTION

Step 9

B 8PCS


 Ø15*9.5

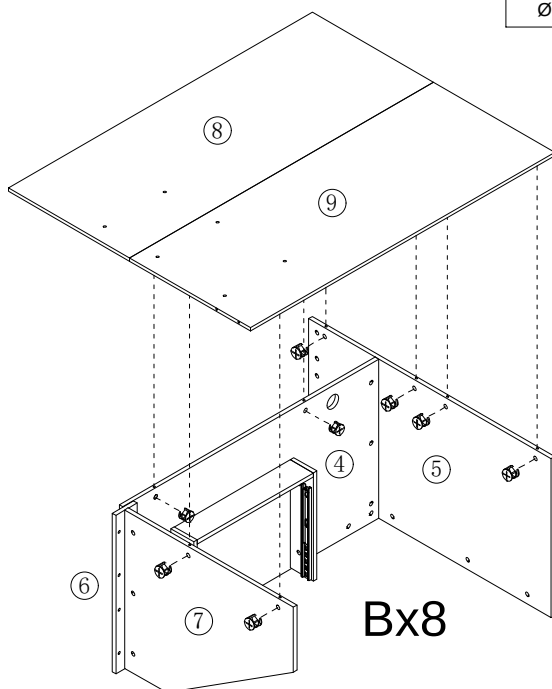

Step 10

B 6PCS


 Ø15*9.5

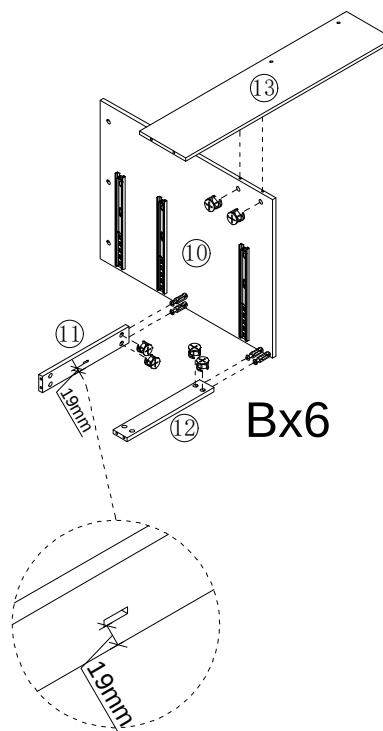

Step 11

B 6PCS


 Ø15*9.5

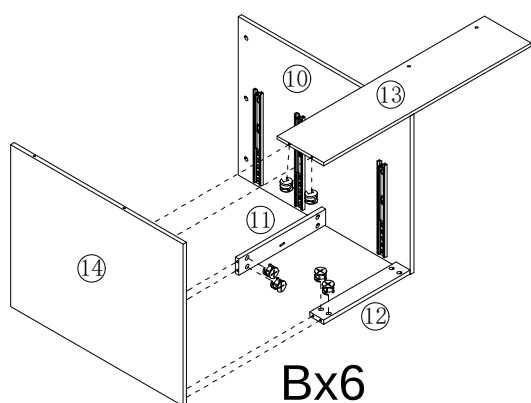

Step 12

B 6PCS

 Ø15*9.5

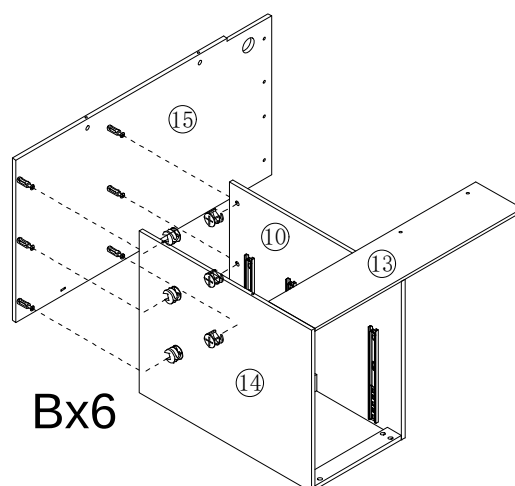


Step 13

J 2PCS



Ø6*40

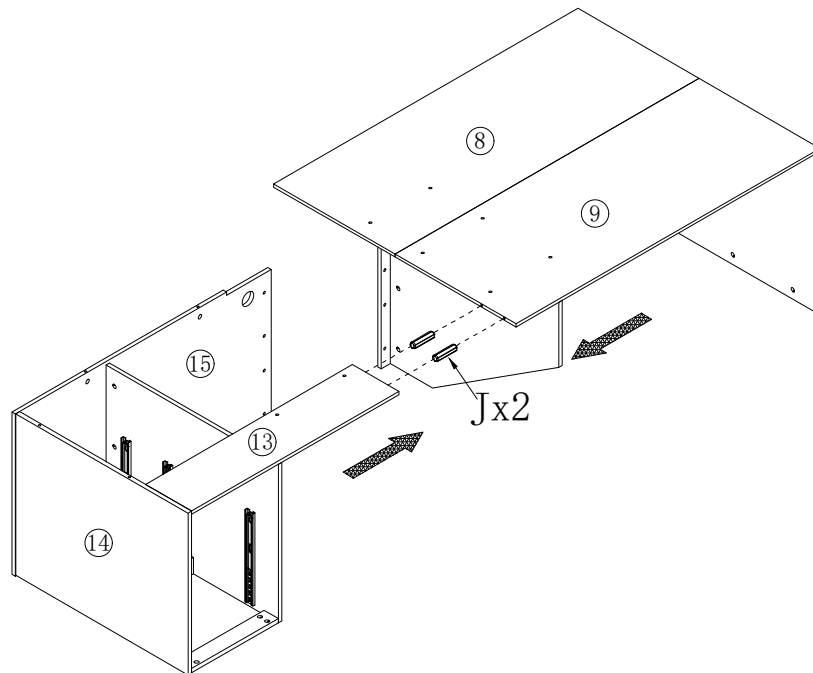


Step 14


I 4PCS



M6*25

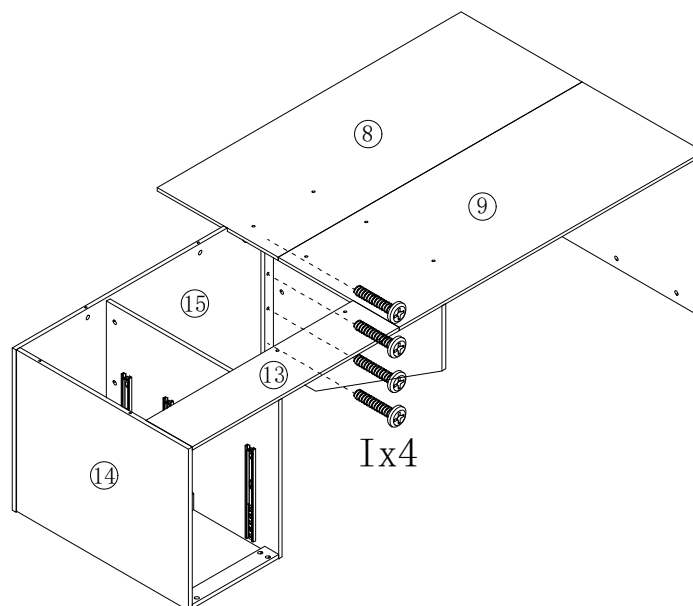

Step 15

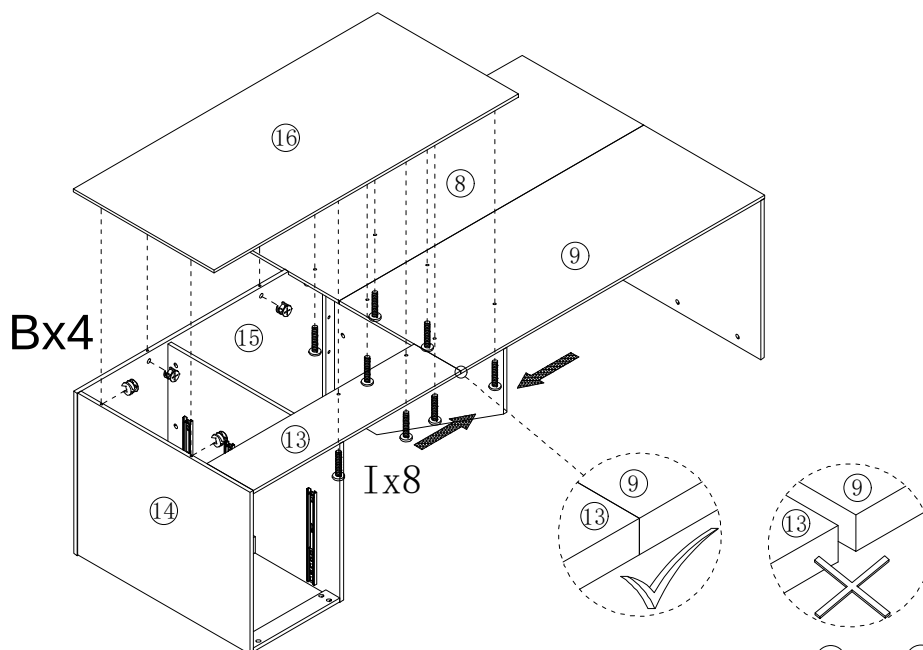

B 4PCS



Ø15*9.5

I 8PCS




M6*30

Please push the plates ⑨ and ⑬ tightly together, and then tighten the accessory screw I.

Step 16

D 14PCS

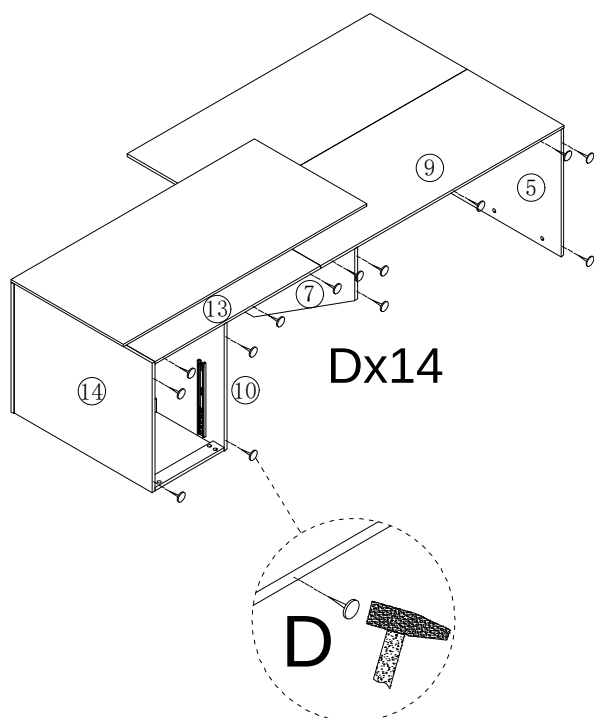


Step 17

B 2PCS




Ø15*9.5

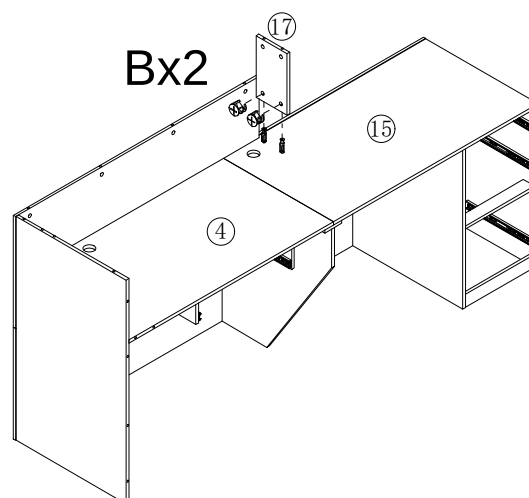

ASSEMBLY INSTRUCTION


Step 18

B 4PCS

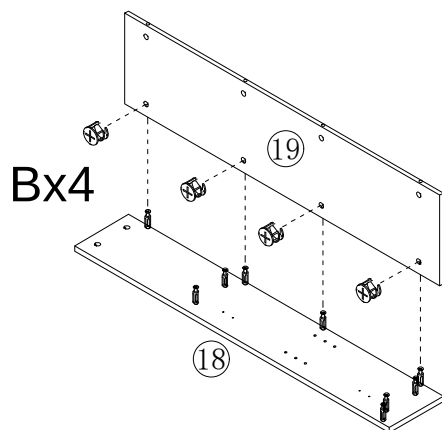


Step 19

B 6PCS

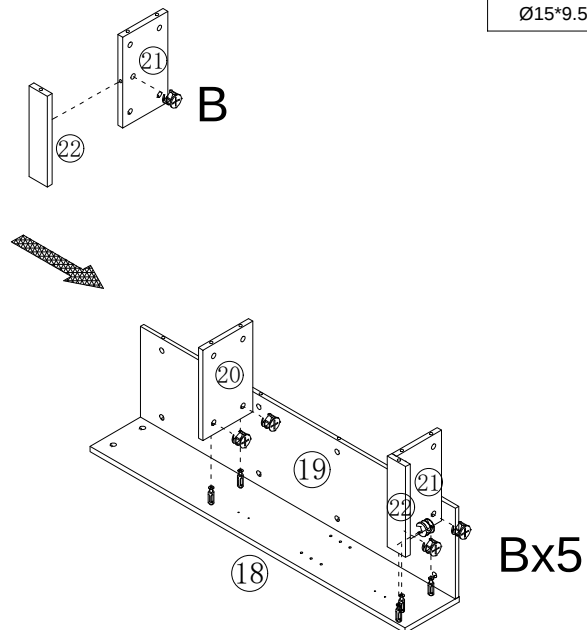


Step 20

B 9PCS

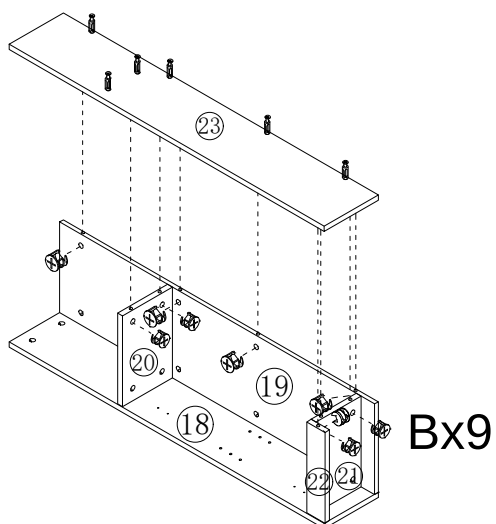


Step 21

K 4PCS

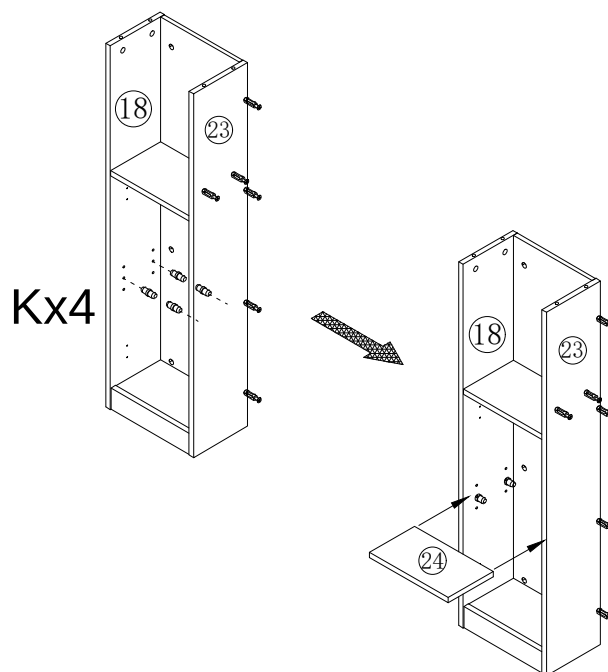

Step 22

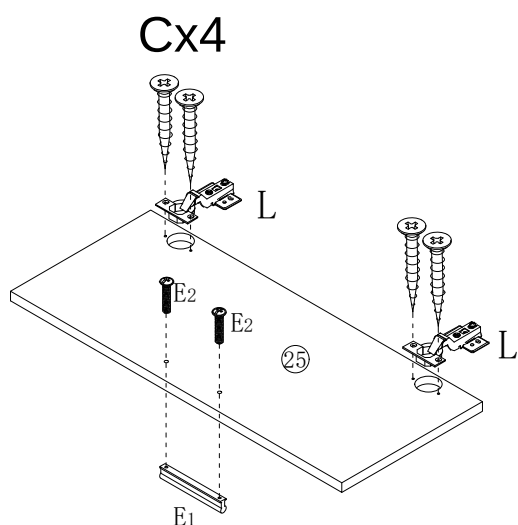


C 4PCS
Ø3.5*14

E 1set
96# M4*18


L 2PCS

Step 23

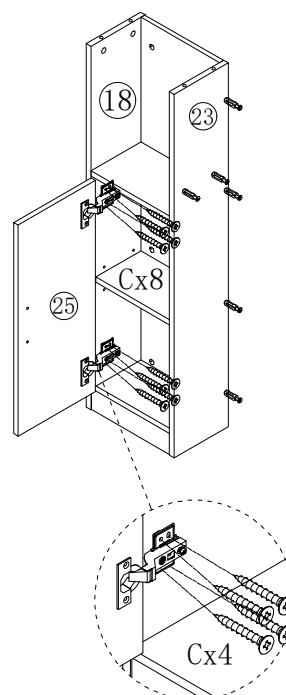



C 8PCS
Ø3.5*14

Step 24

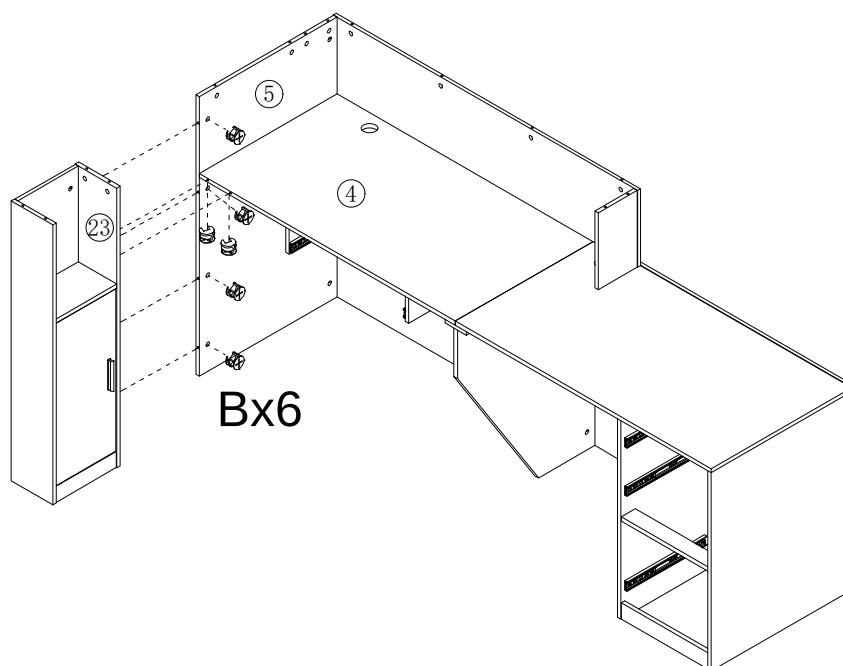



B 6PCS
Ø15*9.5

Step 25

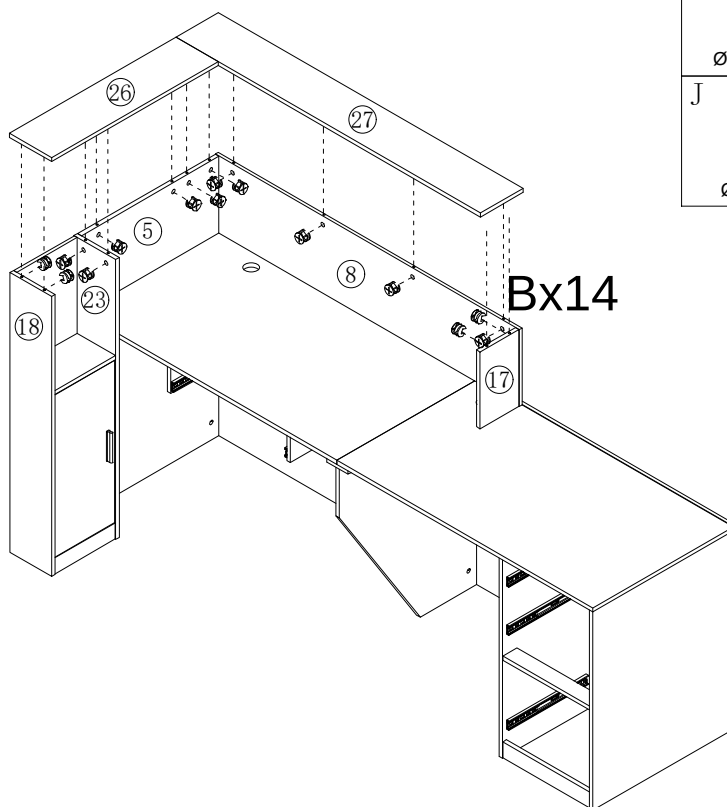
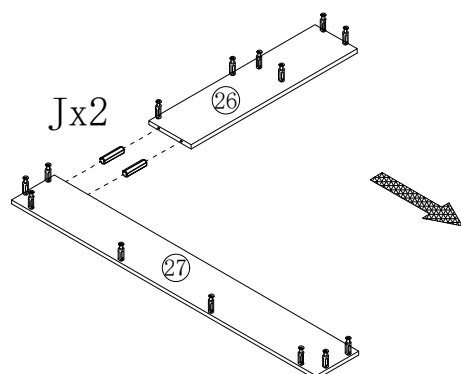


B	14PCS
	Ø15*9.5
J	2PCS
	Ø6*40


Step 26

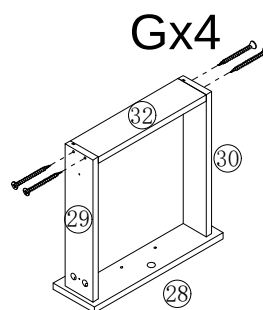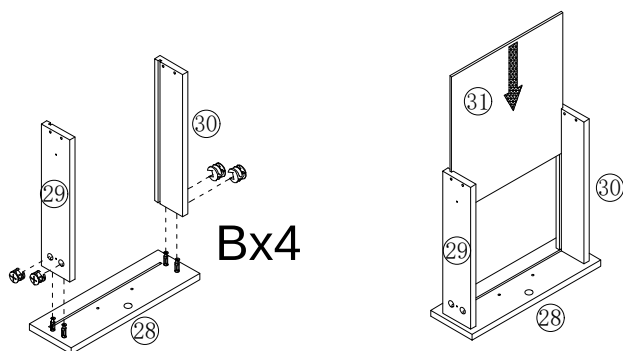

B	4PCS	F ₂	2PCS
	Ø15*9.5		14"
C	4PCS	G	4PCS
	Ø3.5*14		Ø3.5*40
E	1set	H	1set
96#	M4*18	H ₁	H ₂
		H ₃	H ₄

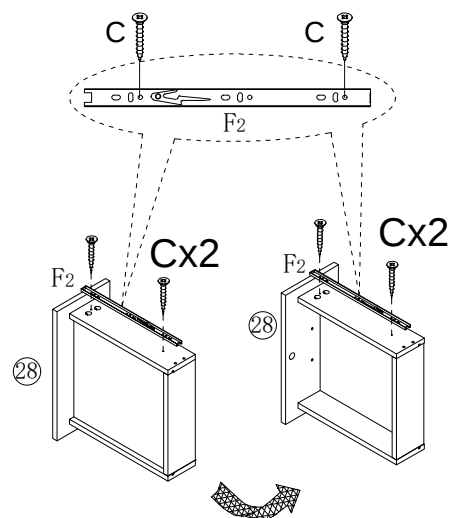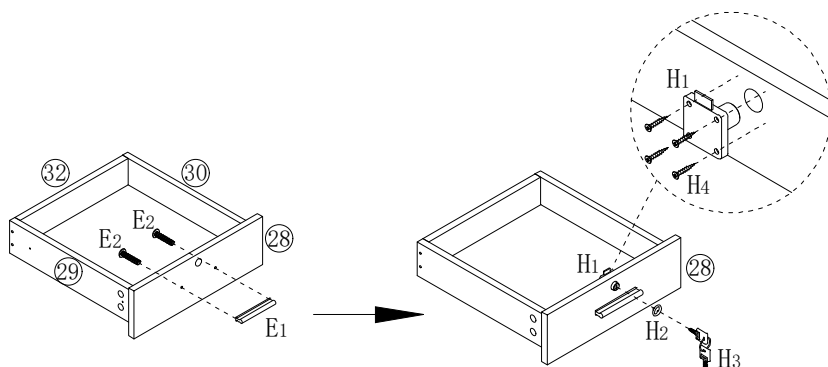


Step 27

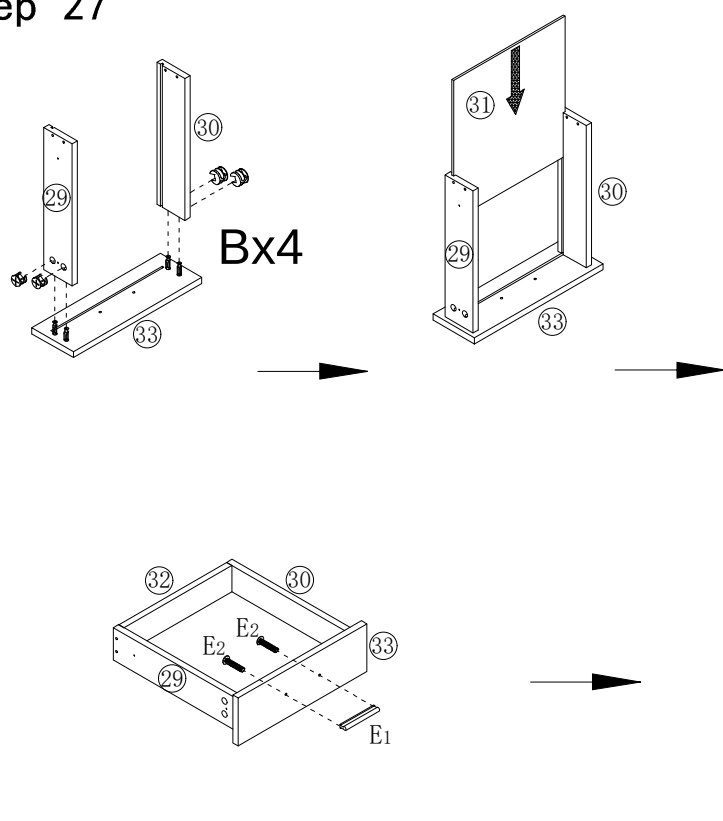


B	4PCS	E	1set
	Ø15*9.5		96# M4*18
C	4PCS	F ₂	2PCS
	Ø3.5*14		14"
G	4PCS		
	Ø3.5*40		

Step 28

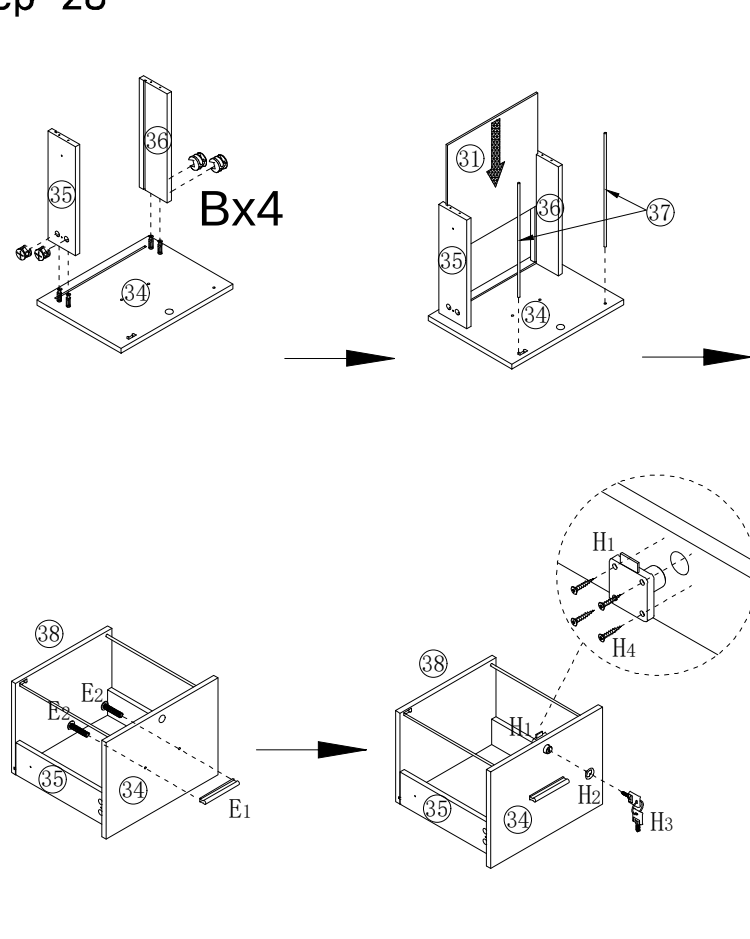


B	4PCS	F ₂	2PCS
	Ø15*9.5		14"
C	4PCS	G	4PCS
	Ø3.5*14		Ø3.5*40
E	1set	H	1set
	96# M4*18		H ₁ H ₂ H ₃ H ₄


Step 29

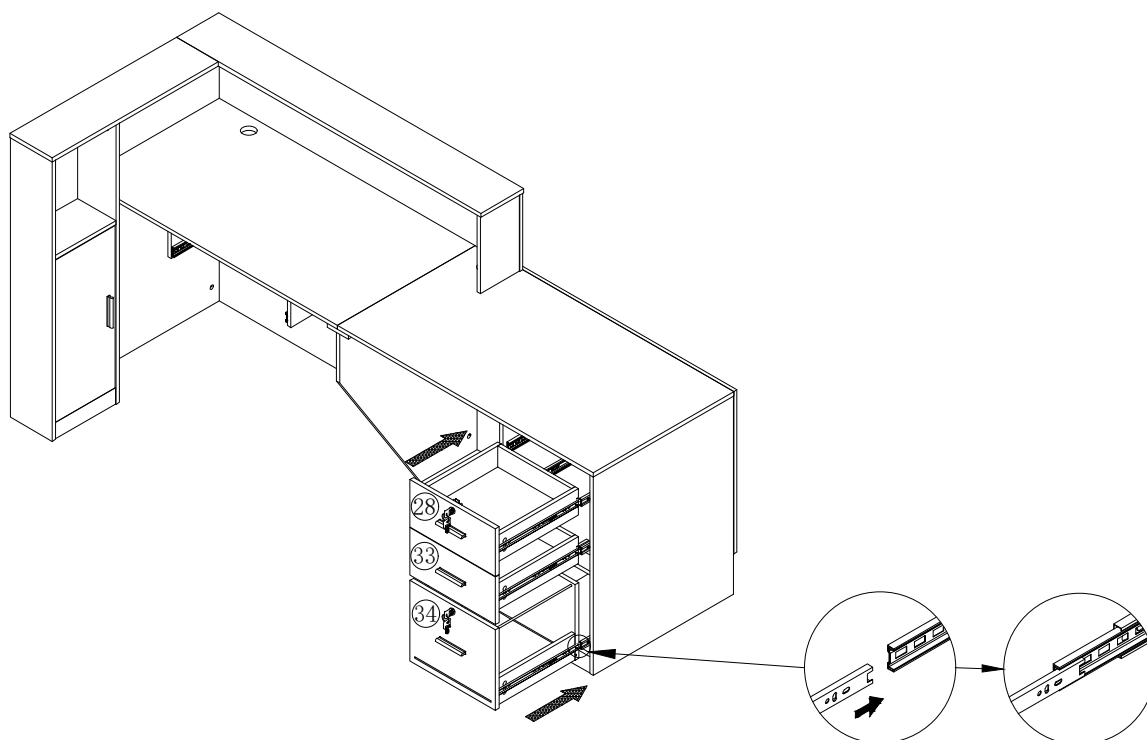

Step 30

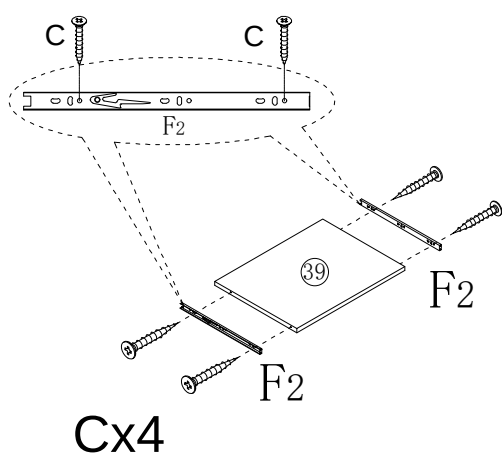



C	4PCS
	
	Ø3.5*14
F2	2PCS
	
	14"

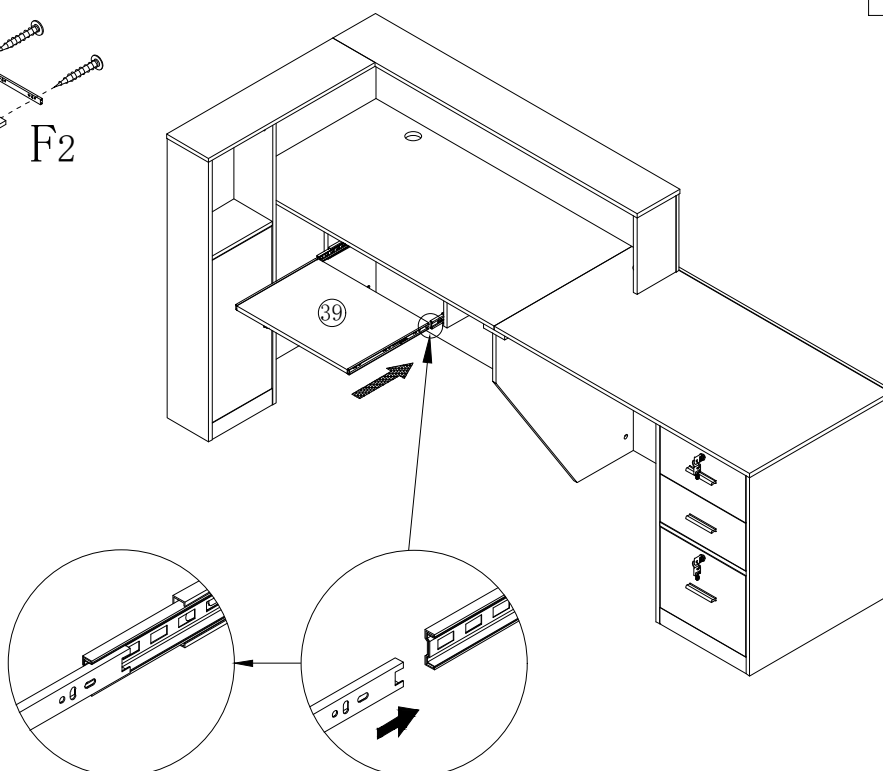


Step 31

M 2PCS

 Ø50

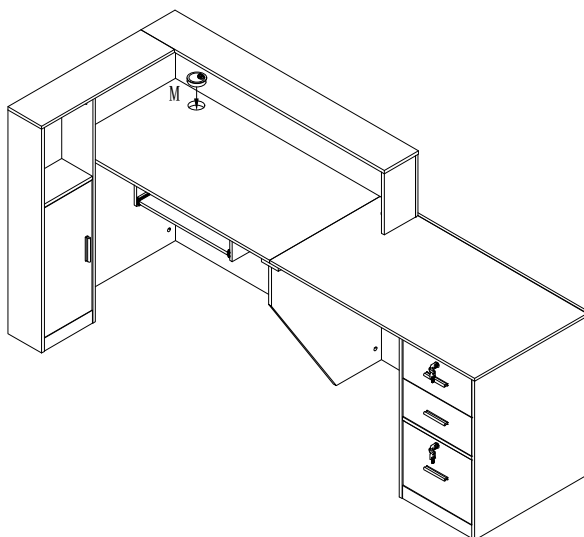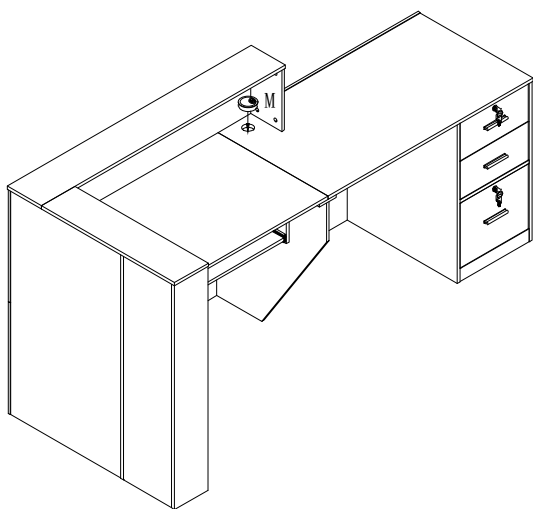

Step 32

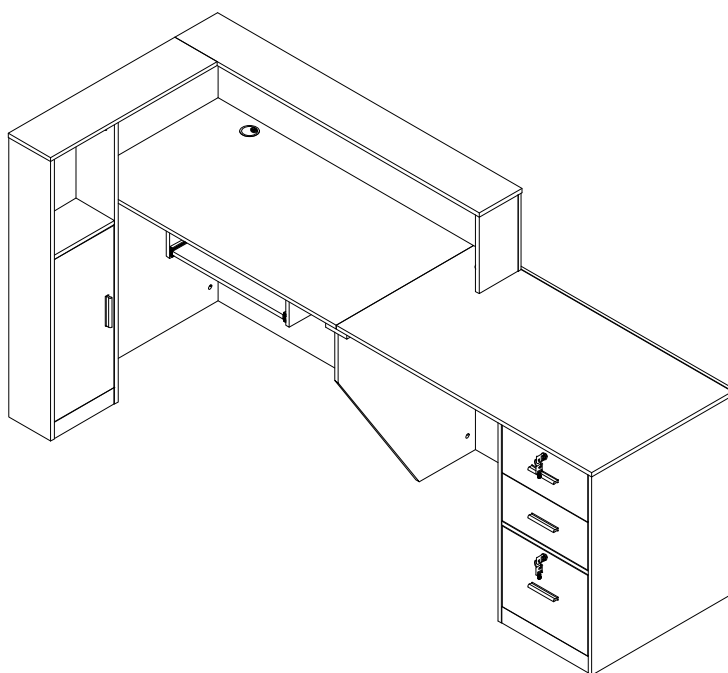

OK