

SE-07.09A

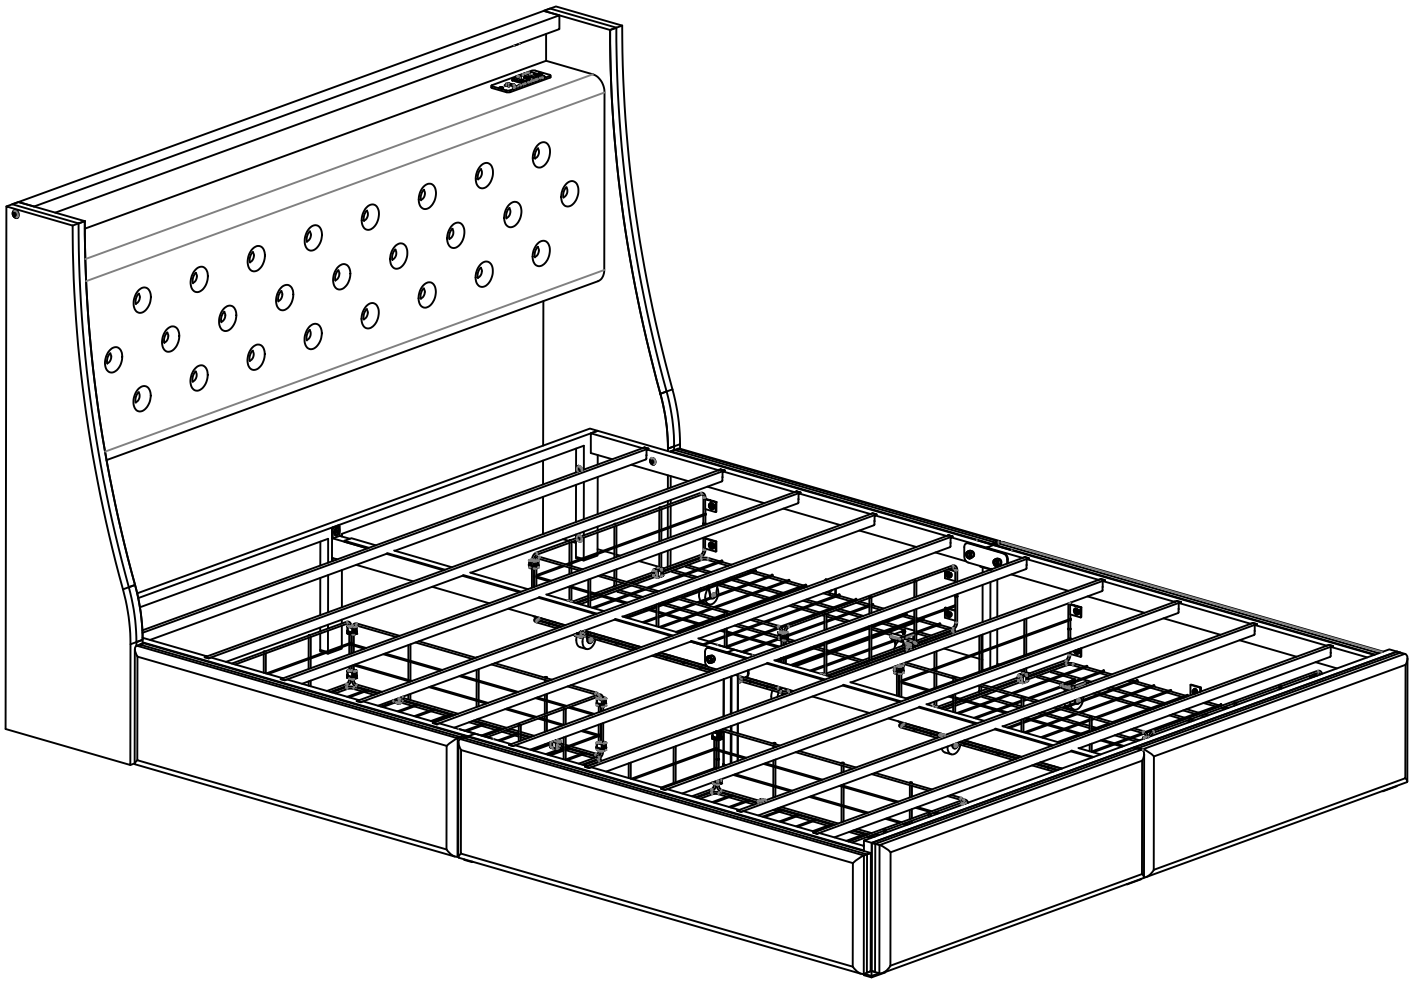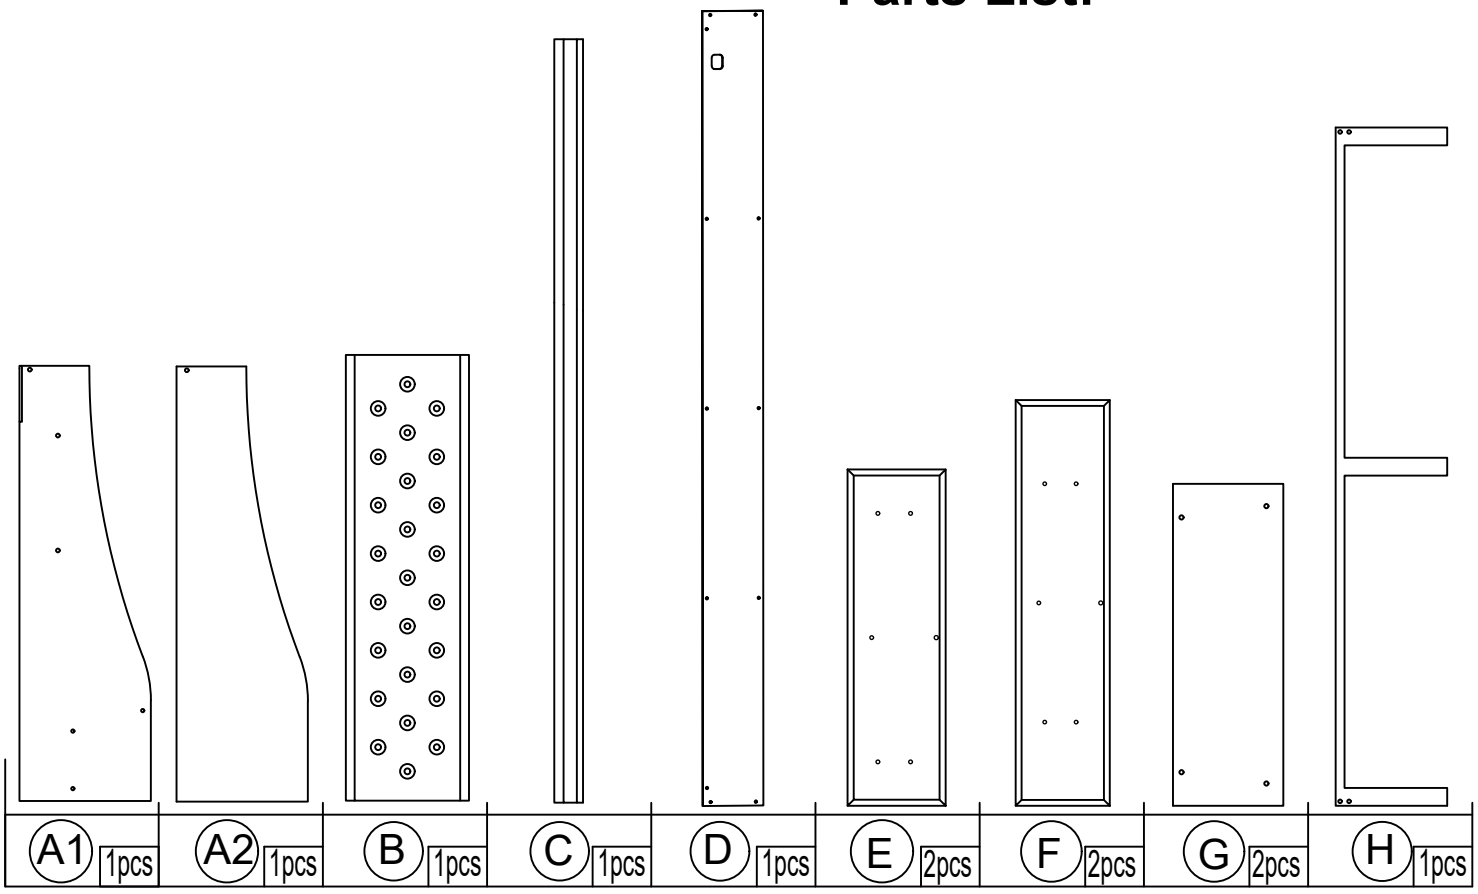



Model: C336B-FC-FH

Please Scan the QR code to watch the tutorial video


Parts List:



A1 1pcs
A2 1pcs
B 1pcs
C 1pcs
D 1pcs
E 2pcs
F 2pcs
G 2pcs
H 1pcs

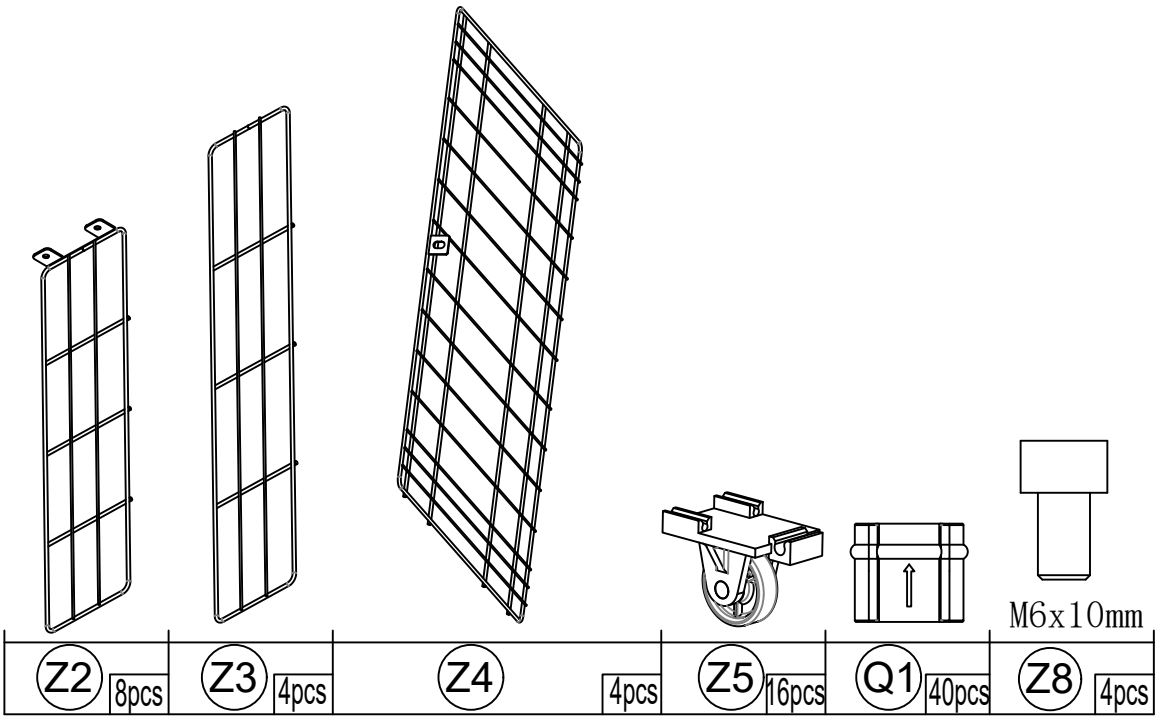
M6x10mm
Z2 8pcs
Z3 4pcs
Z4 4pcs
Z5 16pcs
Q1 40pcs
Z8 4pcs

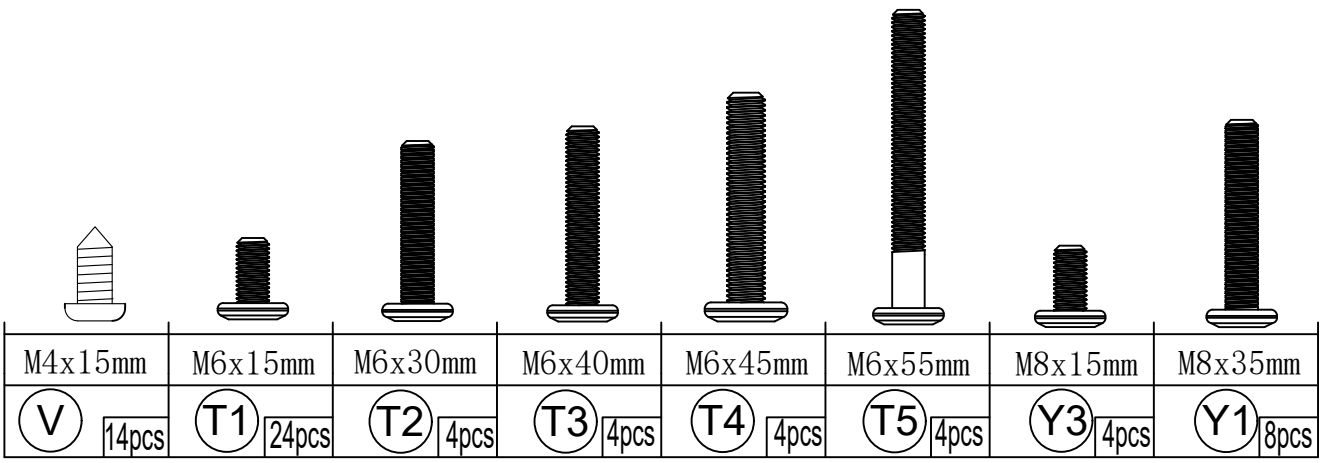

M4x15mm
M6x15mm
M6x30mm
M6x40mm
M6x45mm
M6x55mm
M8x15mm
M8x35mm
V 14pcs
T1 24pcs
T2 4pcs
T3 4pcs
T4 4pcs
T5 4pcs
Y3 4pcs
Y1 8pcs

Parts List:

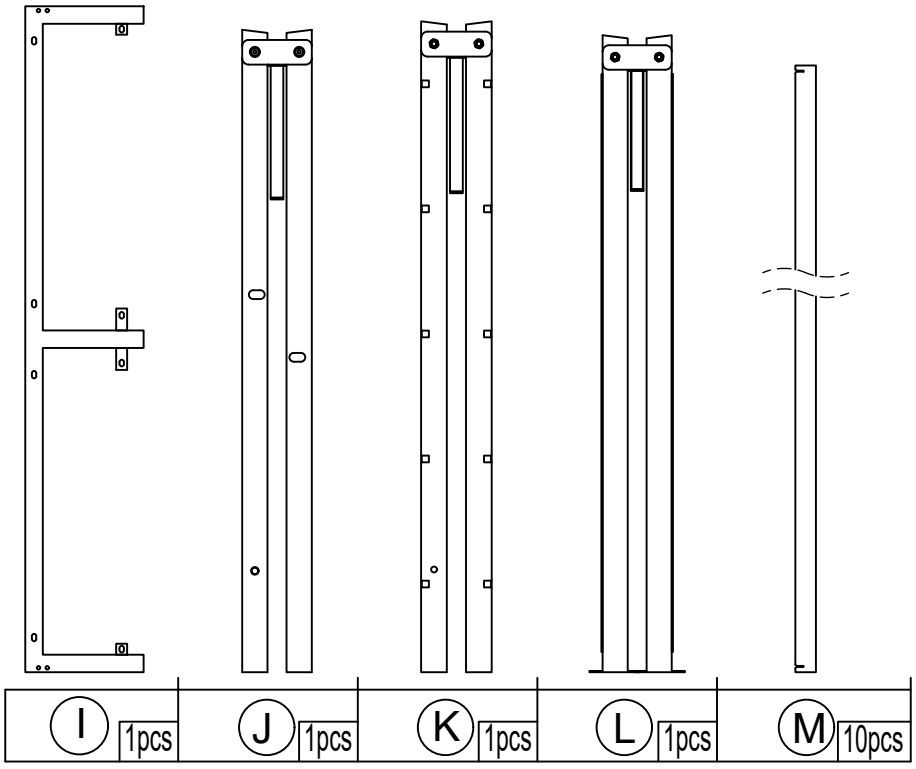

I 1pcs
J 1pcs
K 1pcs
L 1pcs
M 10pcs

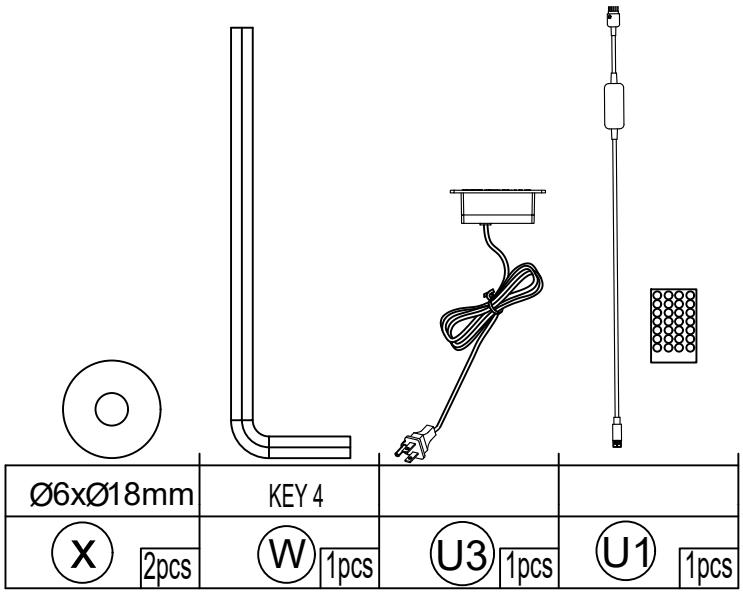
Ø6xØ18mm
X 2pcs
KEY 4
W 1pcs
U3 1pcs
U1 1pcs


Step 1

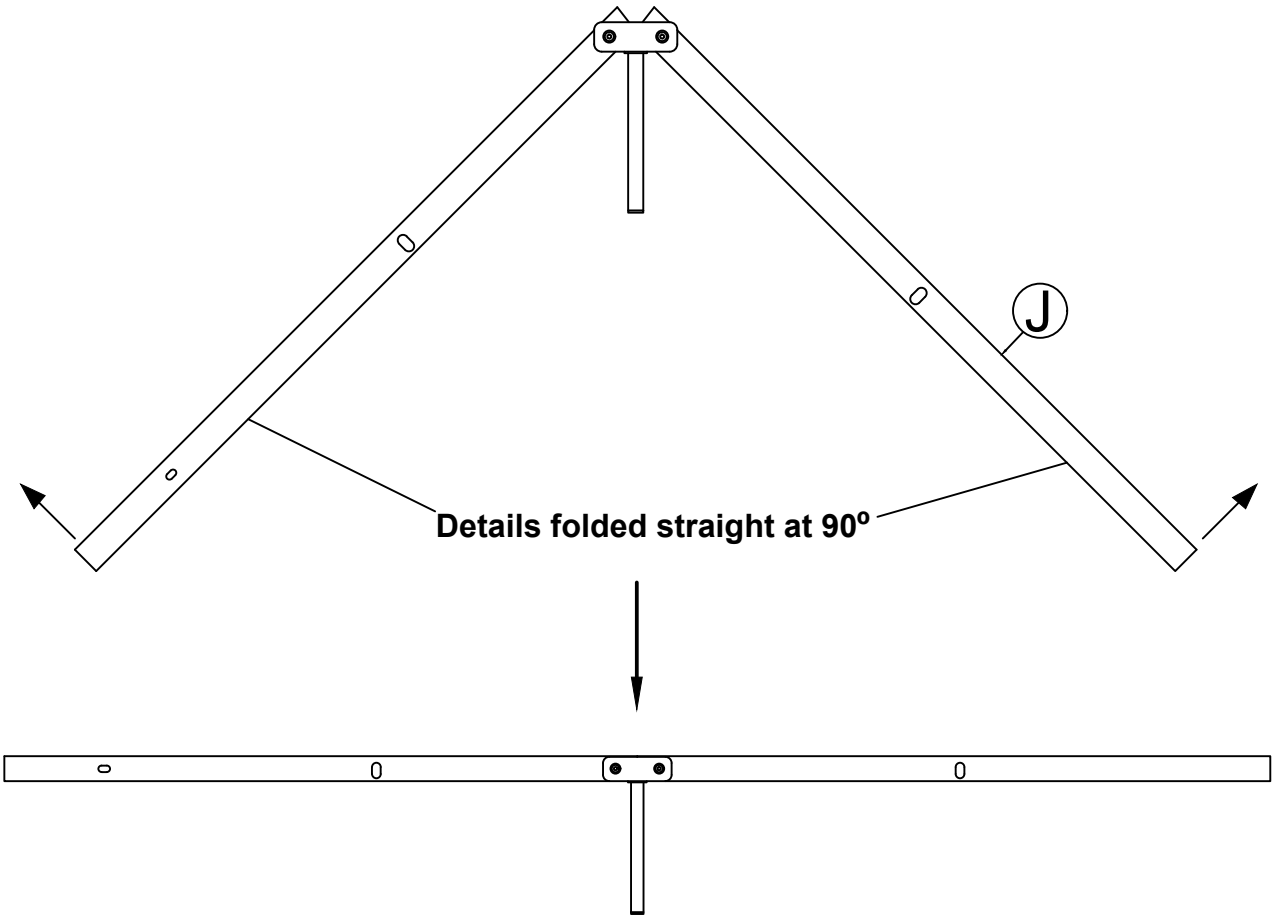
J
Details folded straight at 90º


Step 2

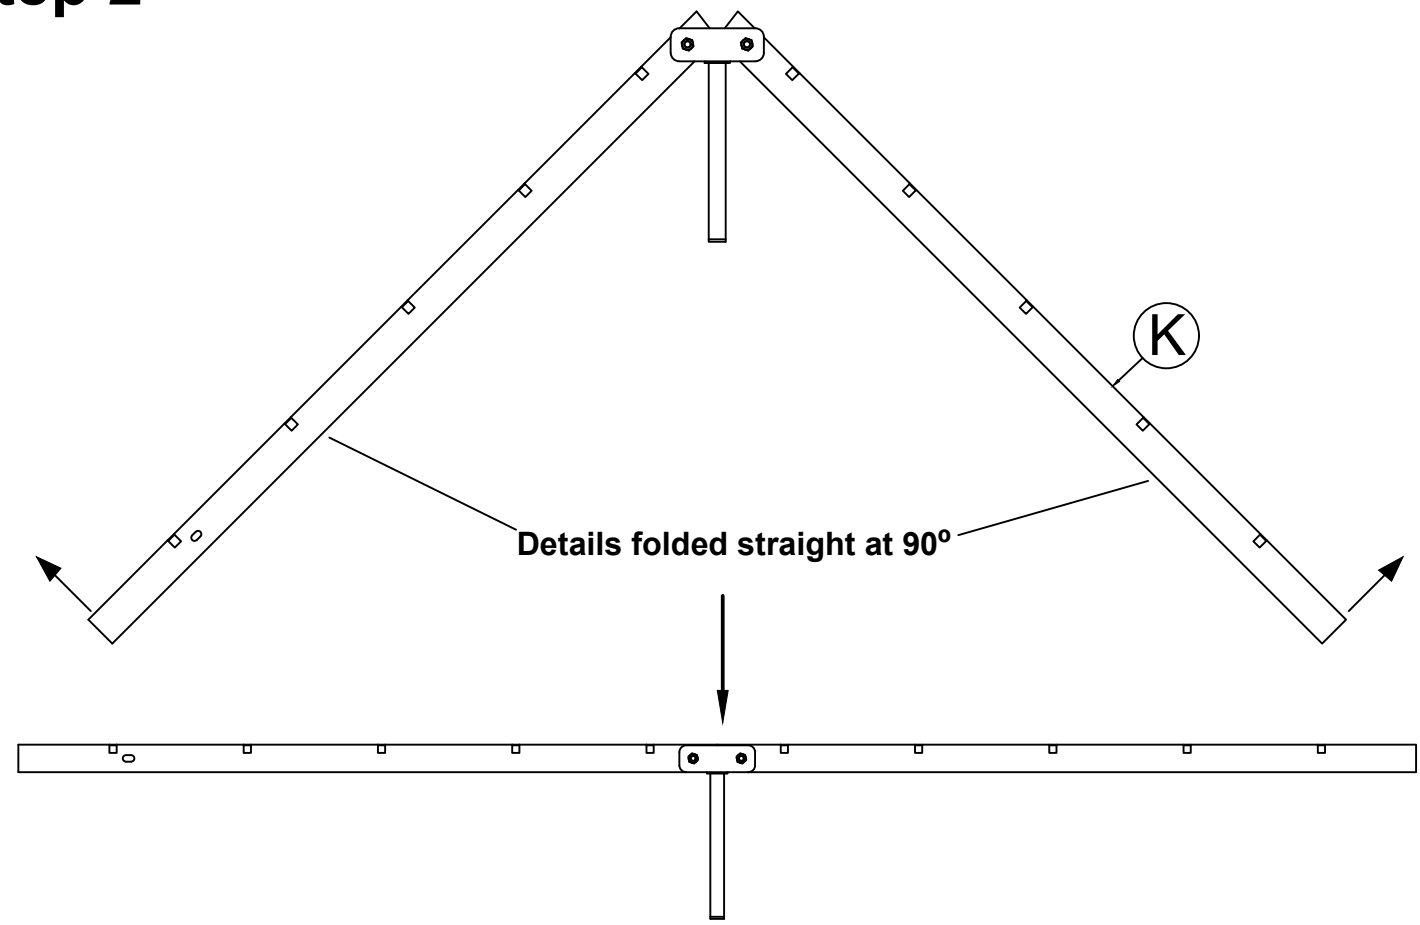
K
Details folded straight at 90º


Step 3

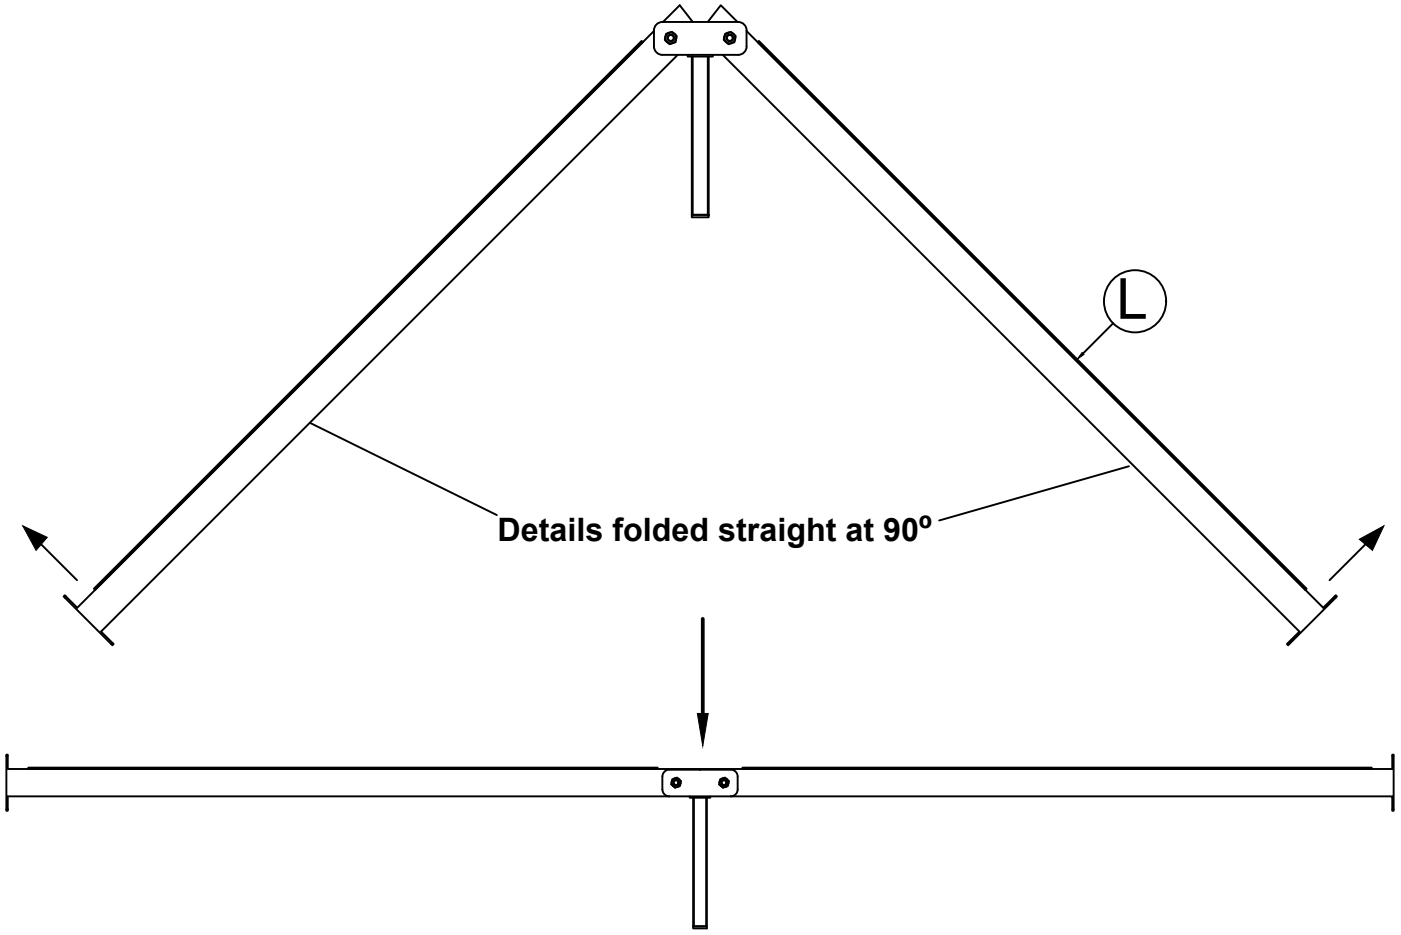
L
Details folded straight at 90º


Step 4

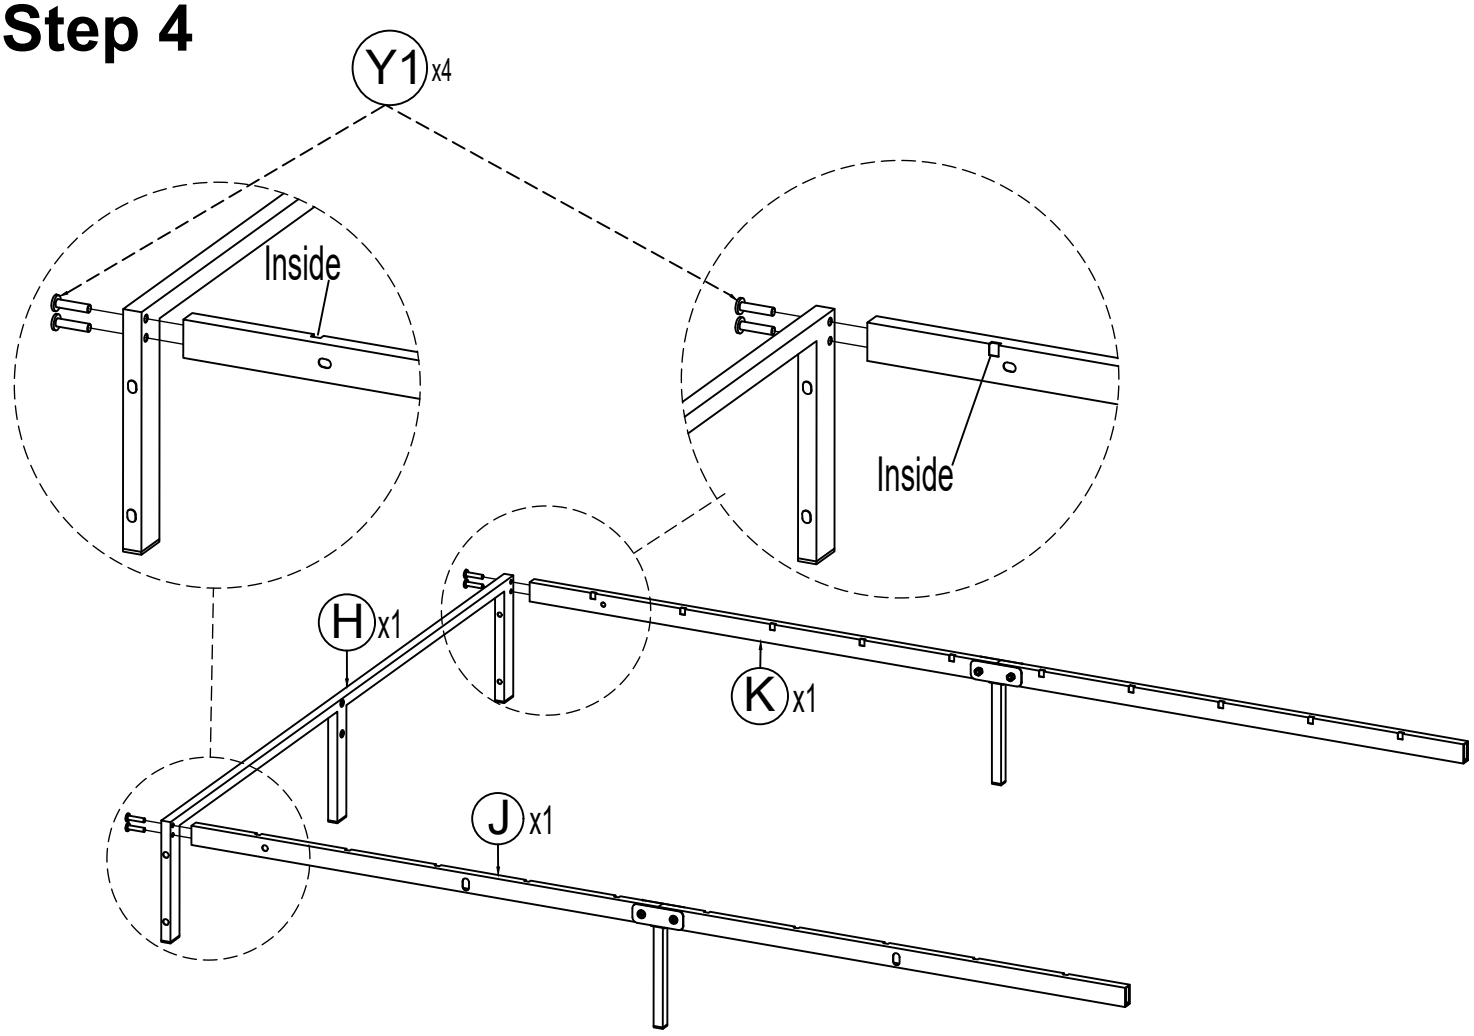
Y1 x4
Inside
Inside
H x1
K x1
J x1

Step 5

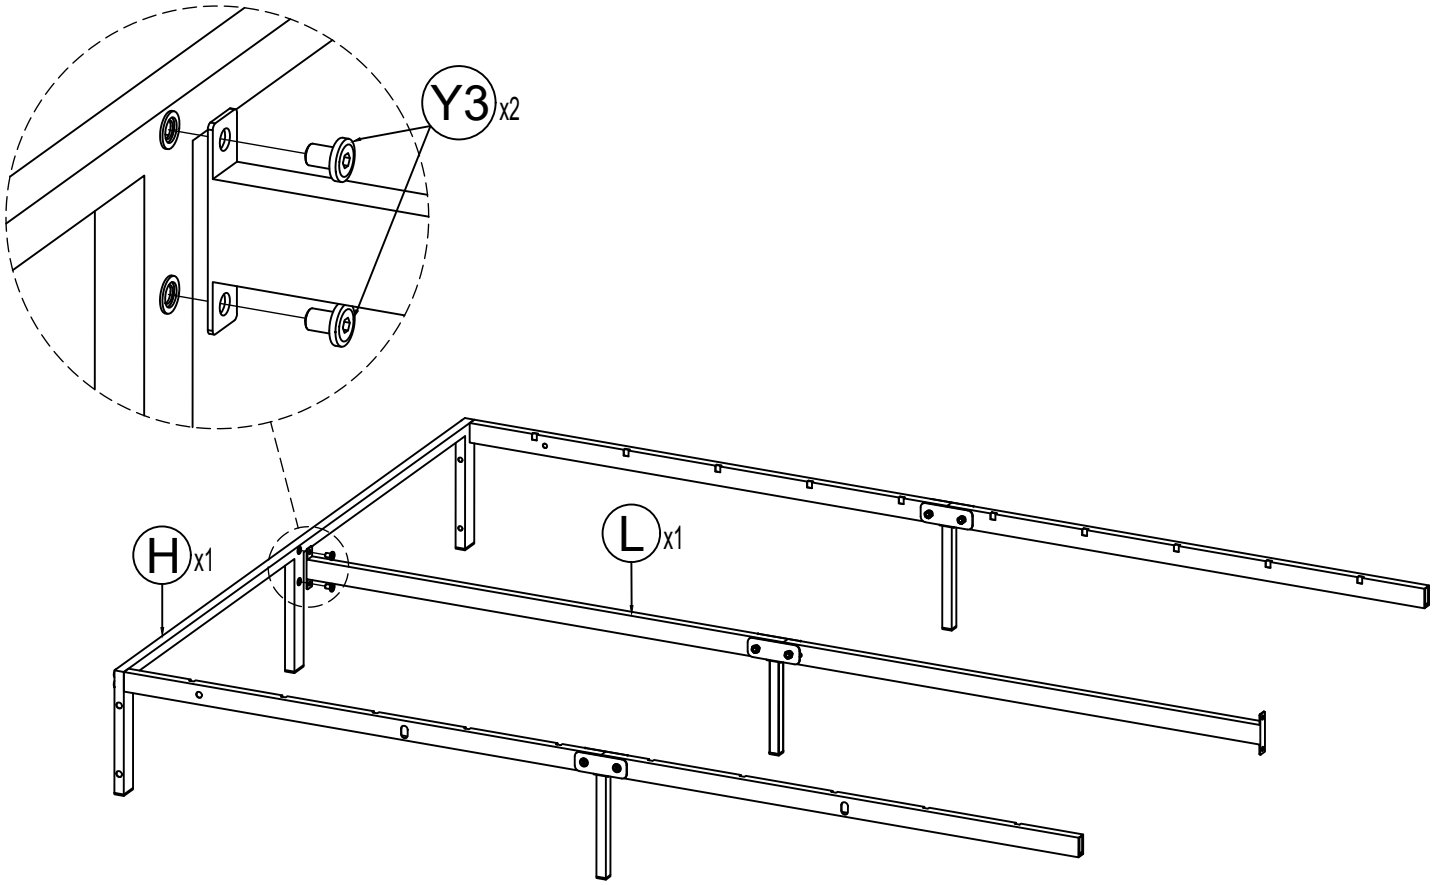


Step 6

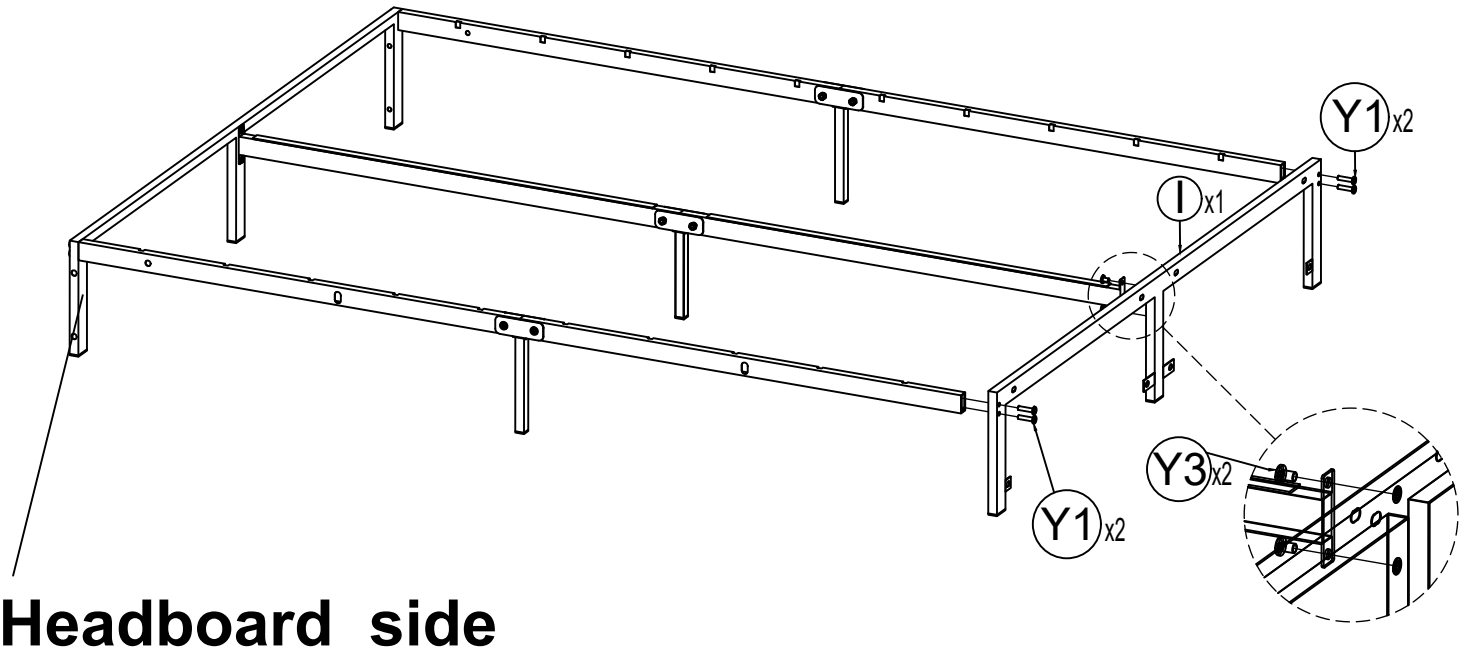


Headboard side


Step 7

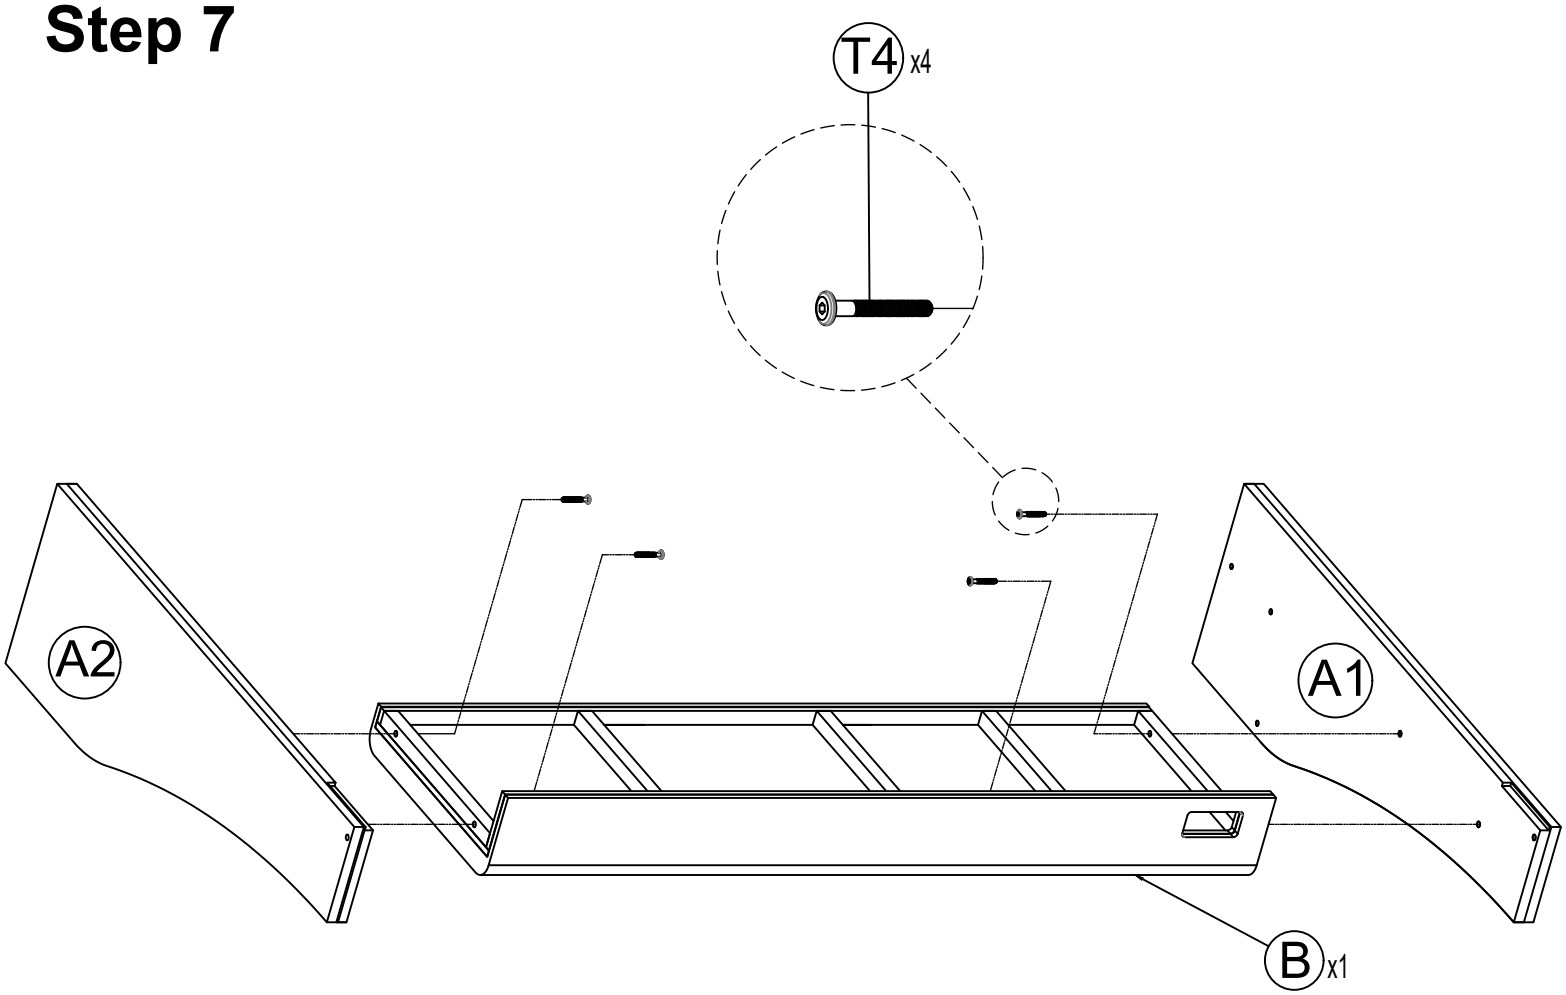

Step 8

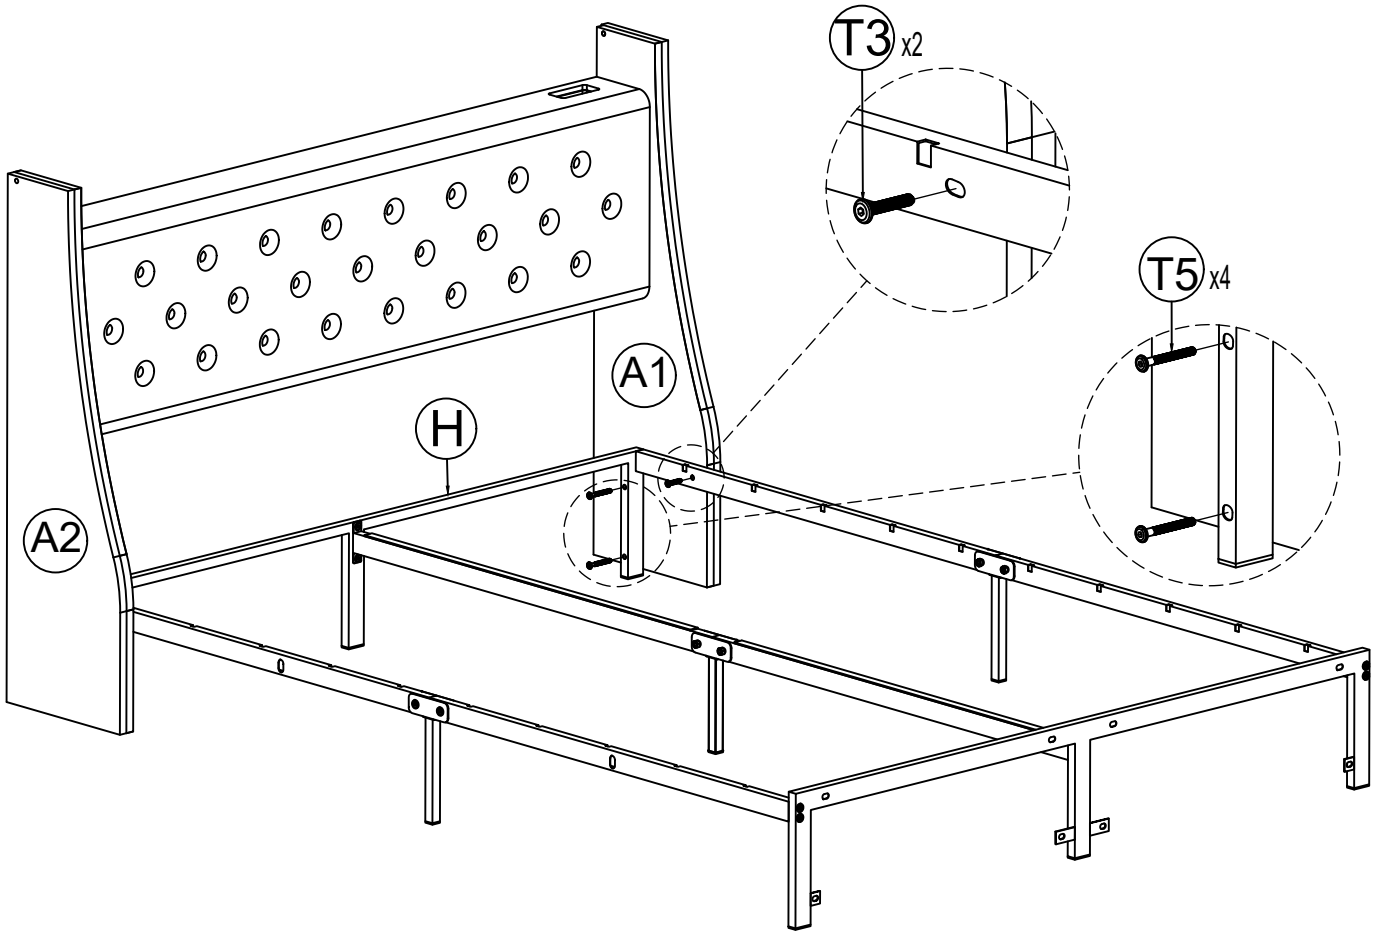


Step 9

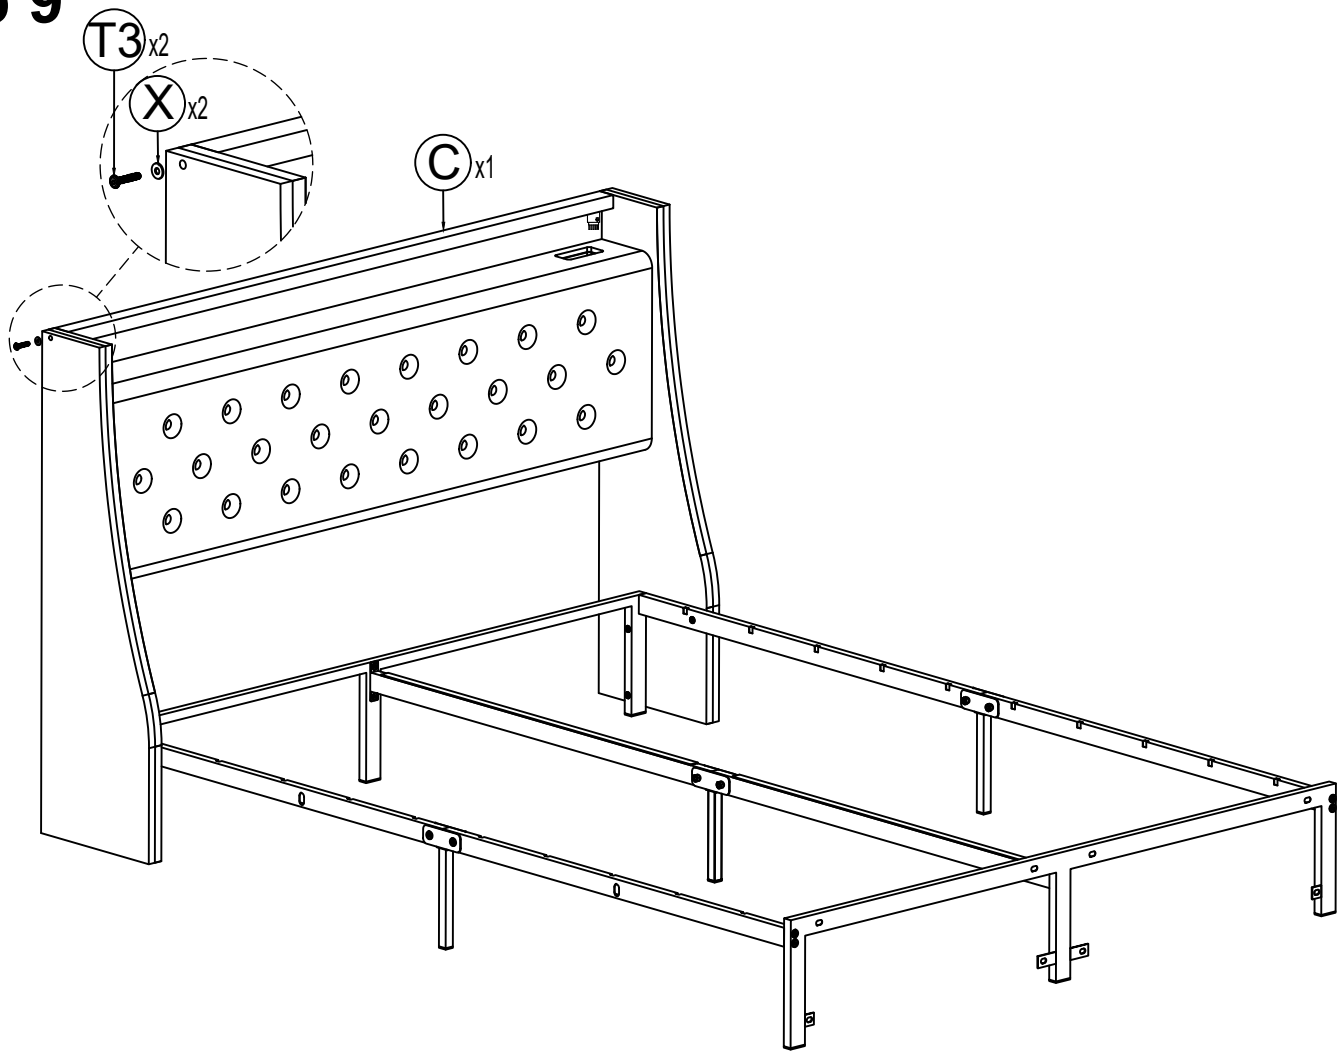


Step 10


We suggest using drill machine to install "V" screws

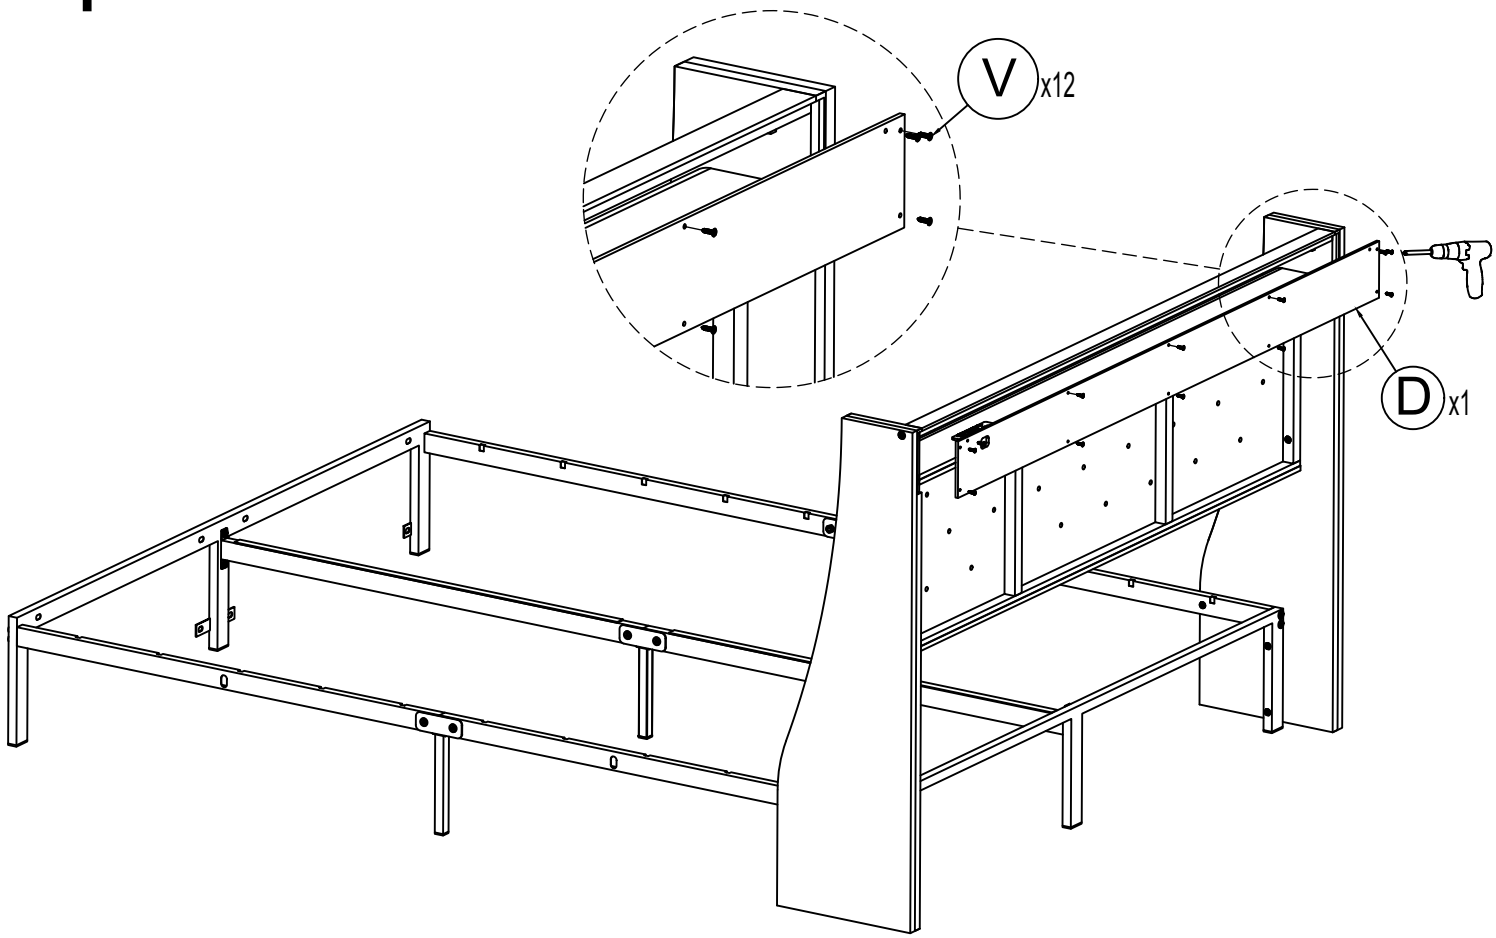

Step 11

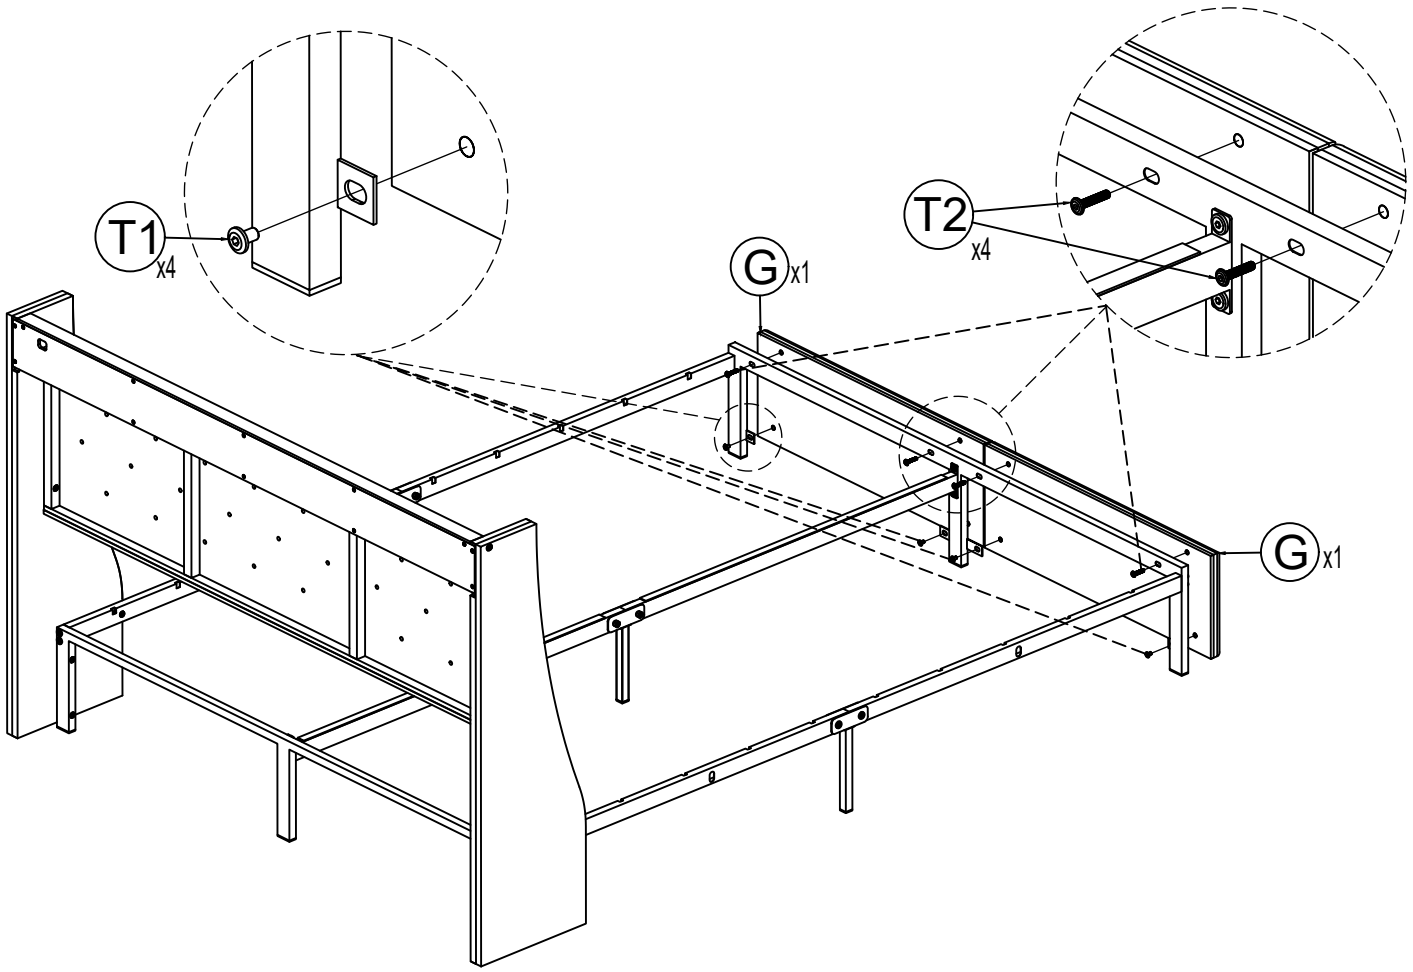

Step 12

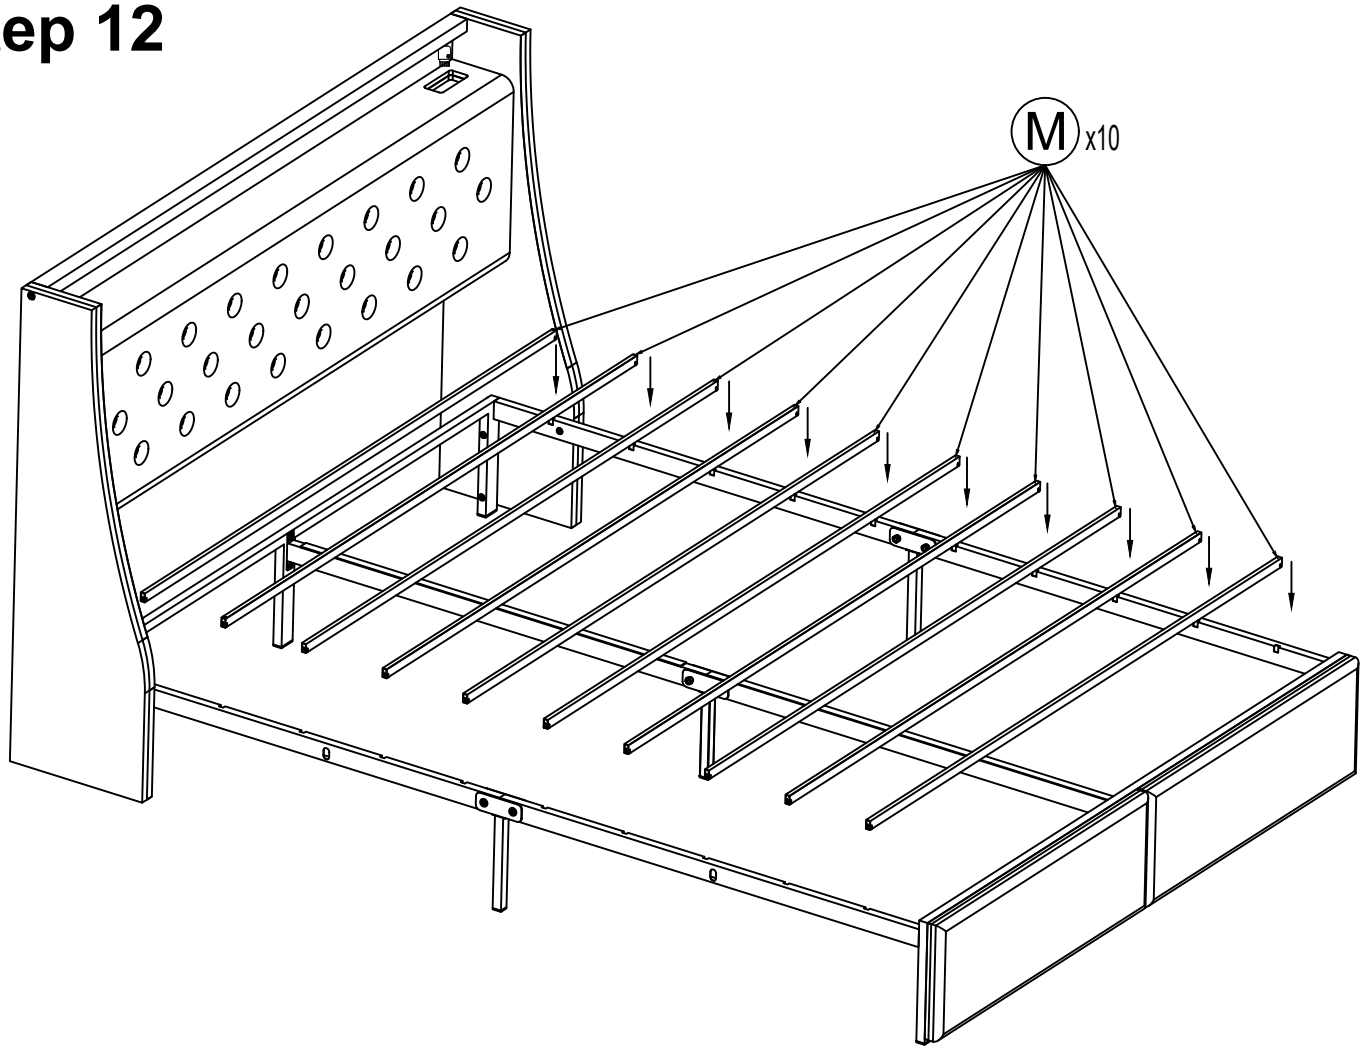


Step 13

U1 x1


We suggest using drill machine to install "V" screws

Tear off the double-sided adhesive tape on U1.

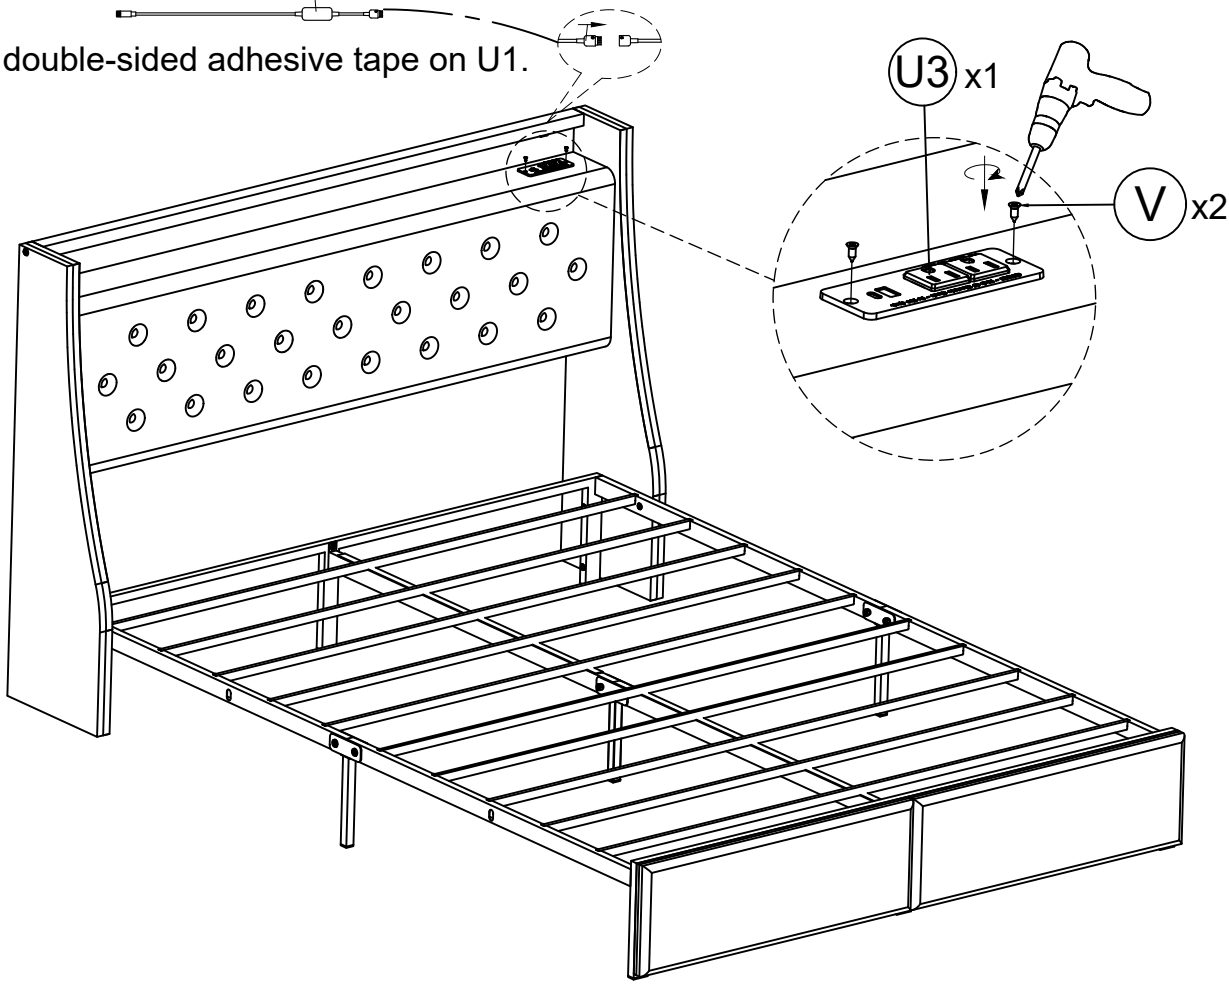


Step 14


Wheel mounting position

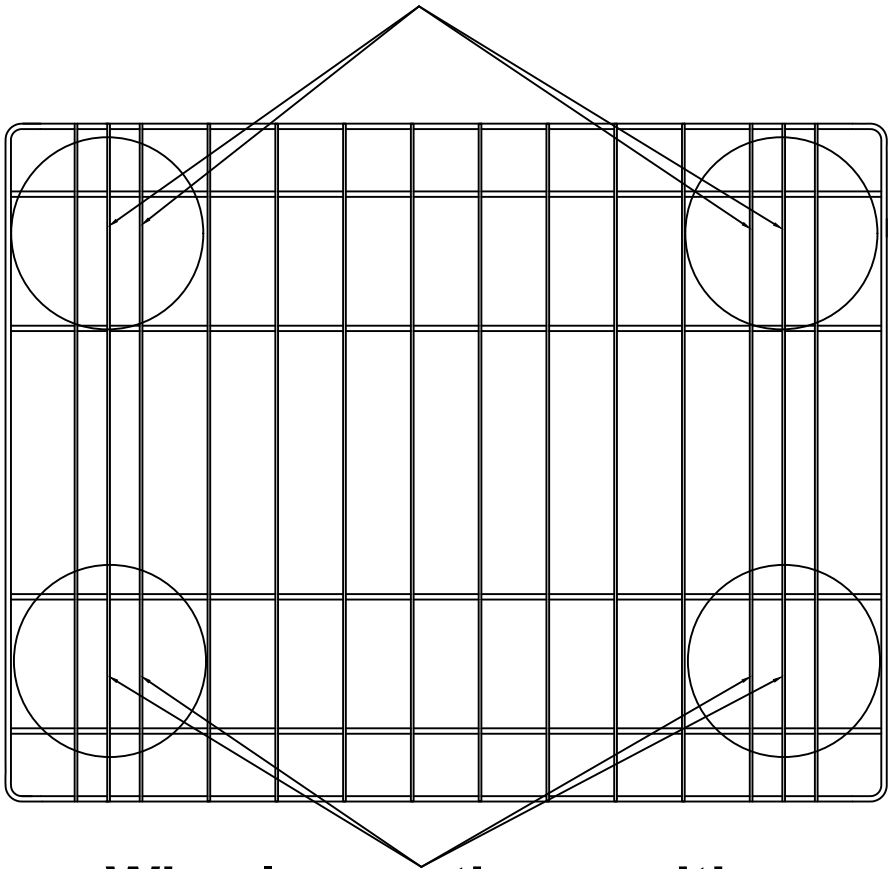


Wheel mounting position

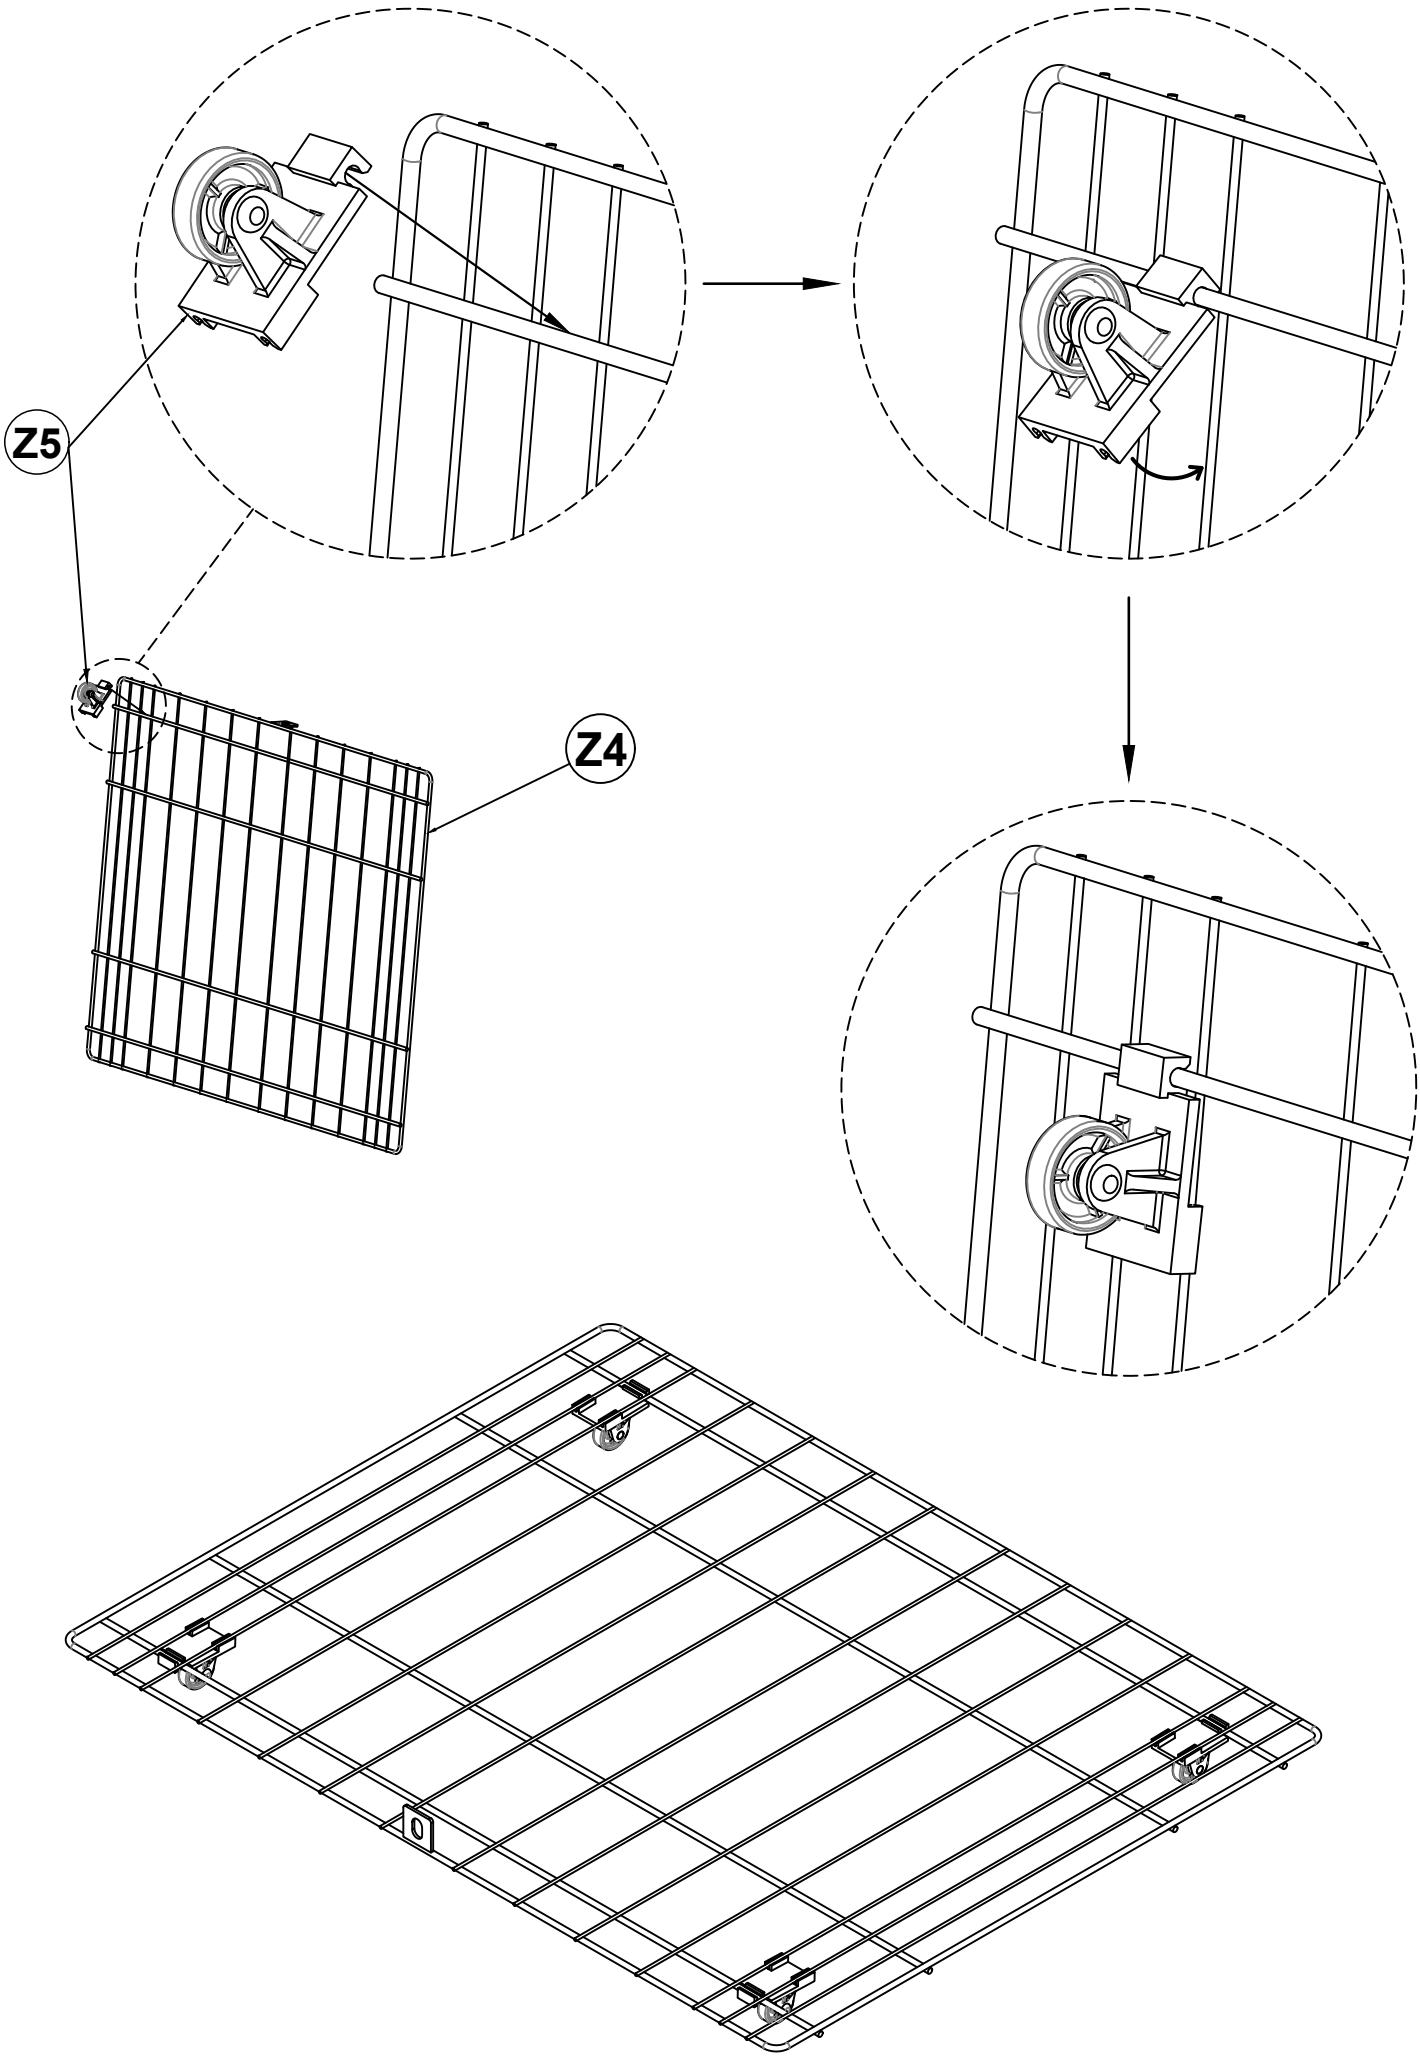
Z5
Z4


Detailed assembly instructions Q1

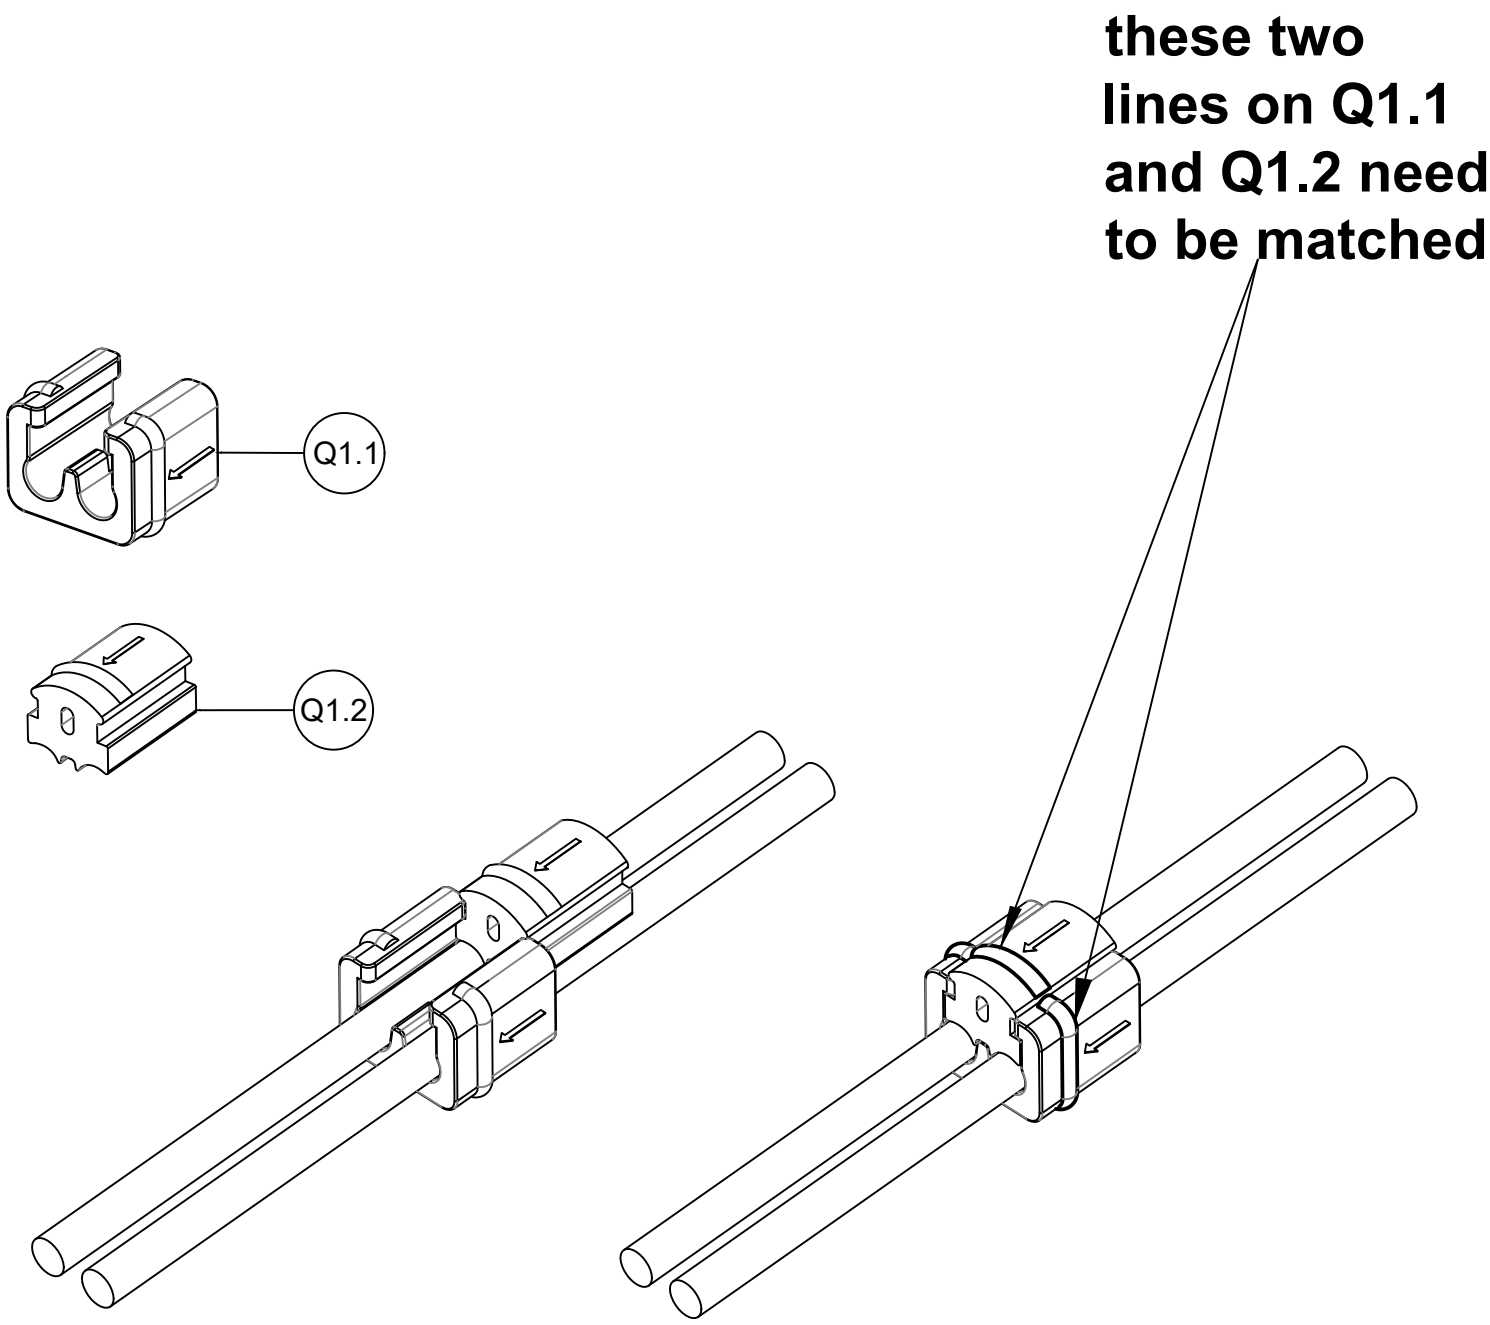


Step 15

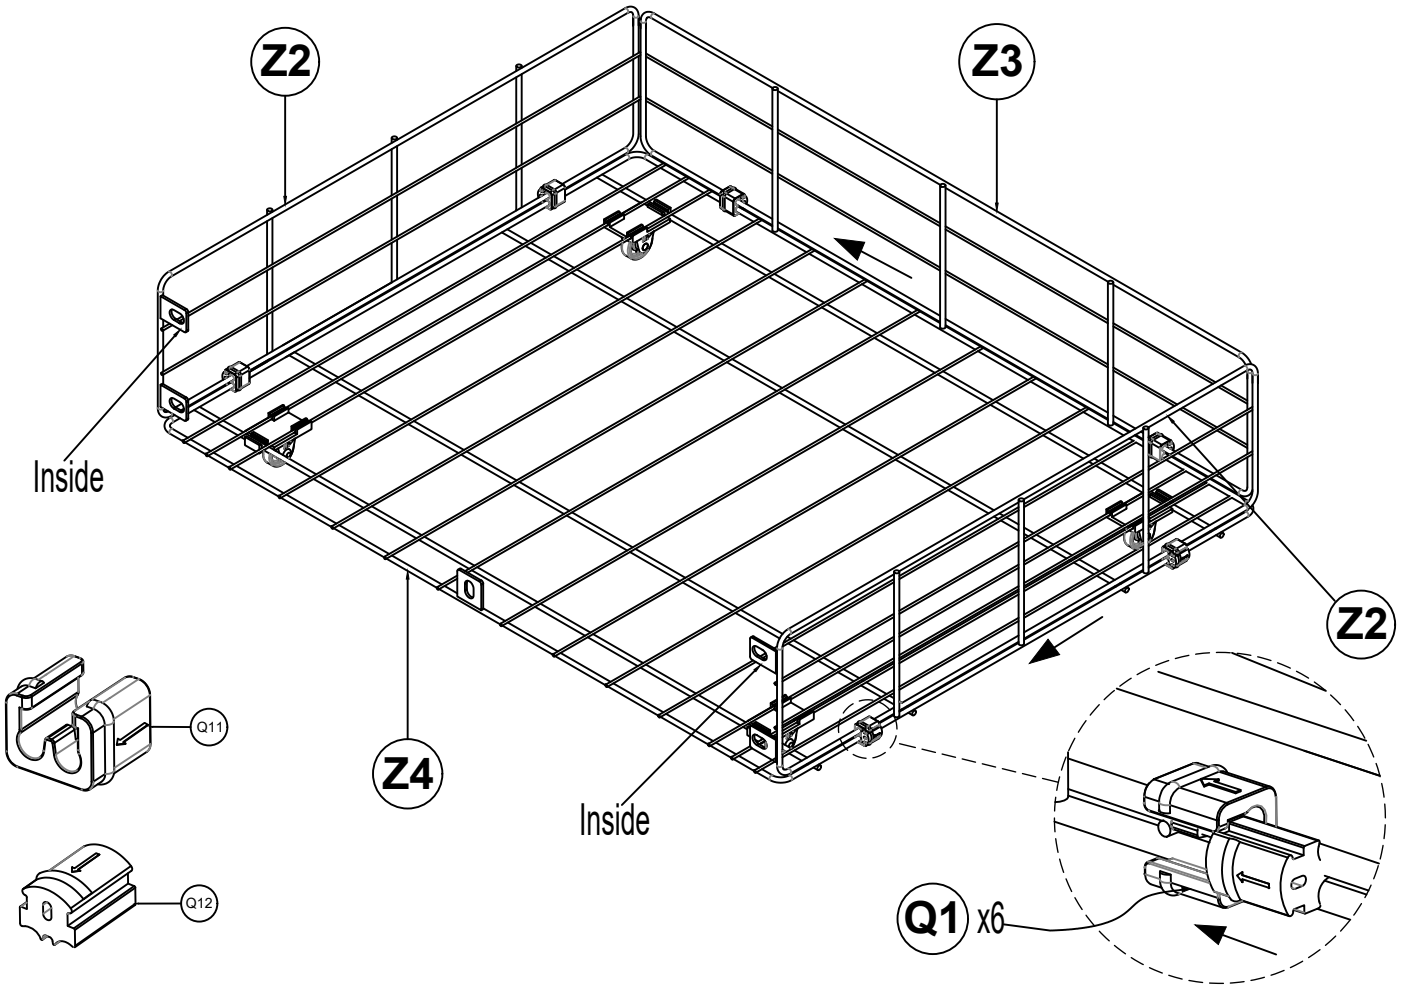


Step 16

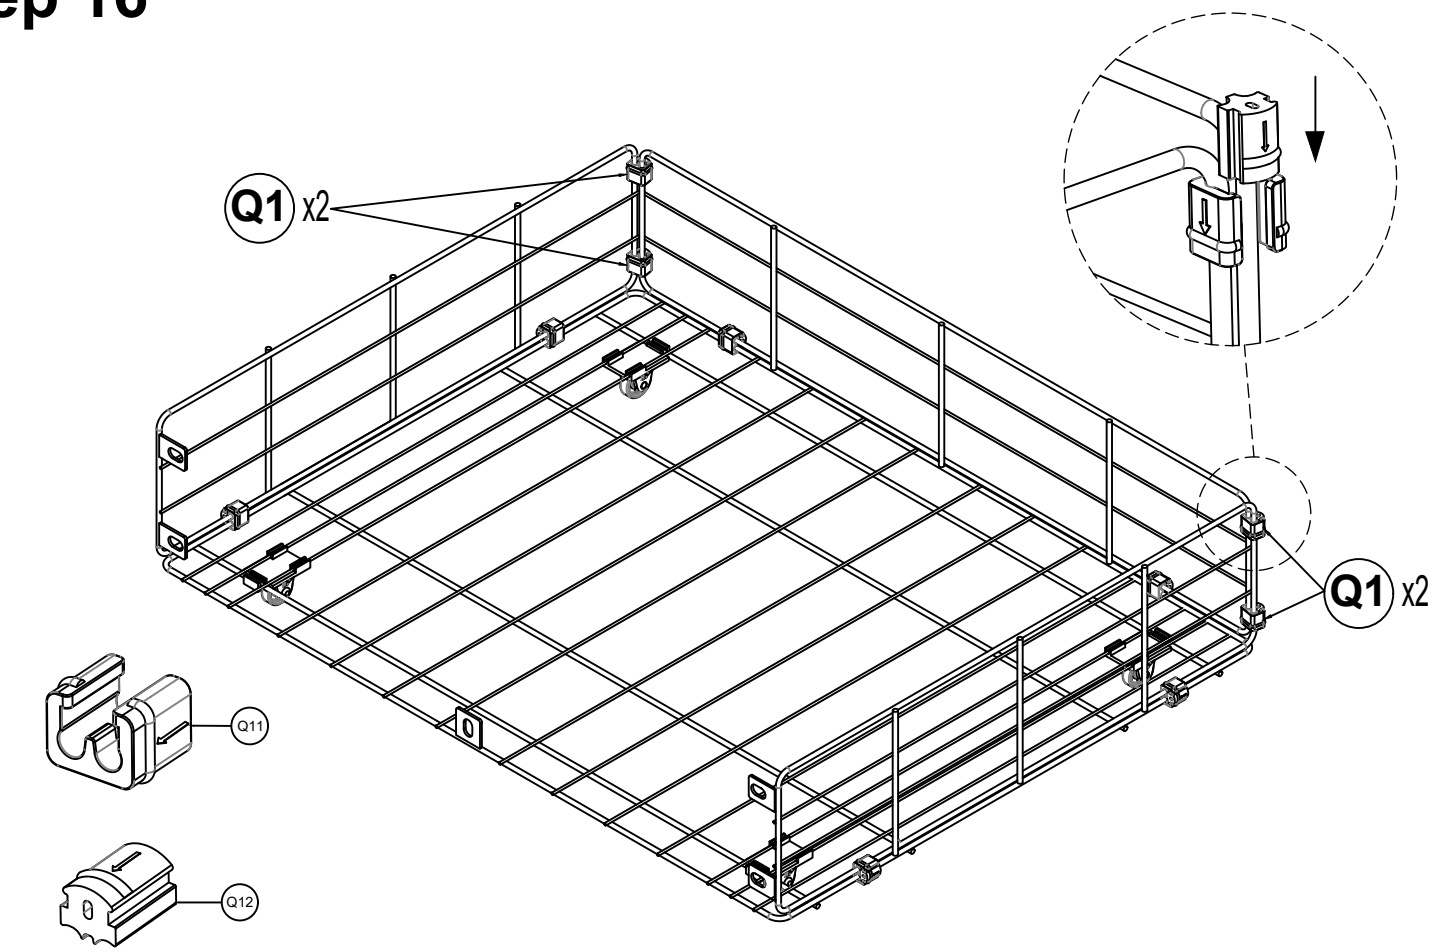


Step 17

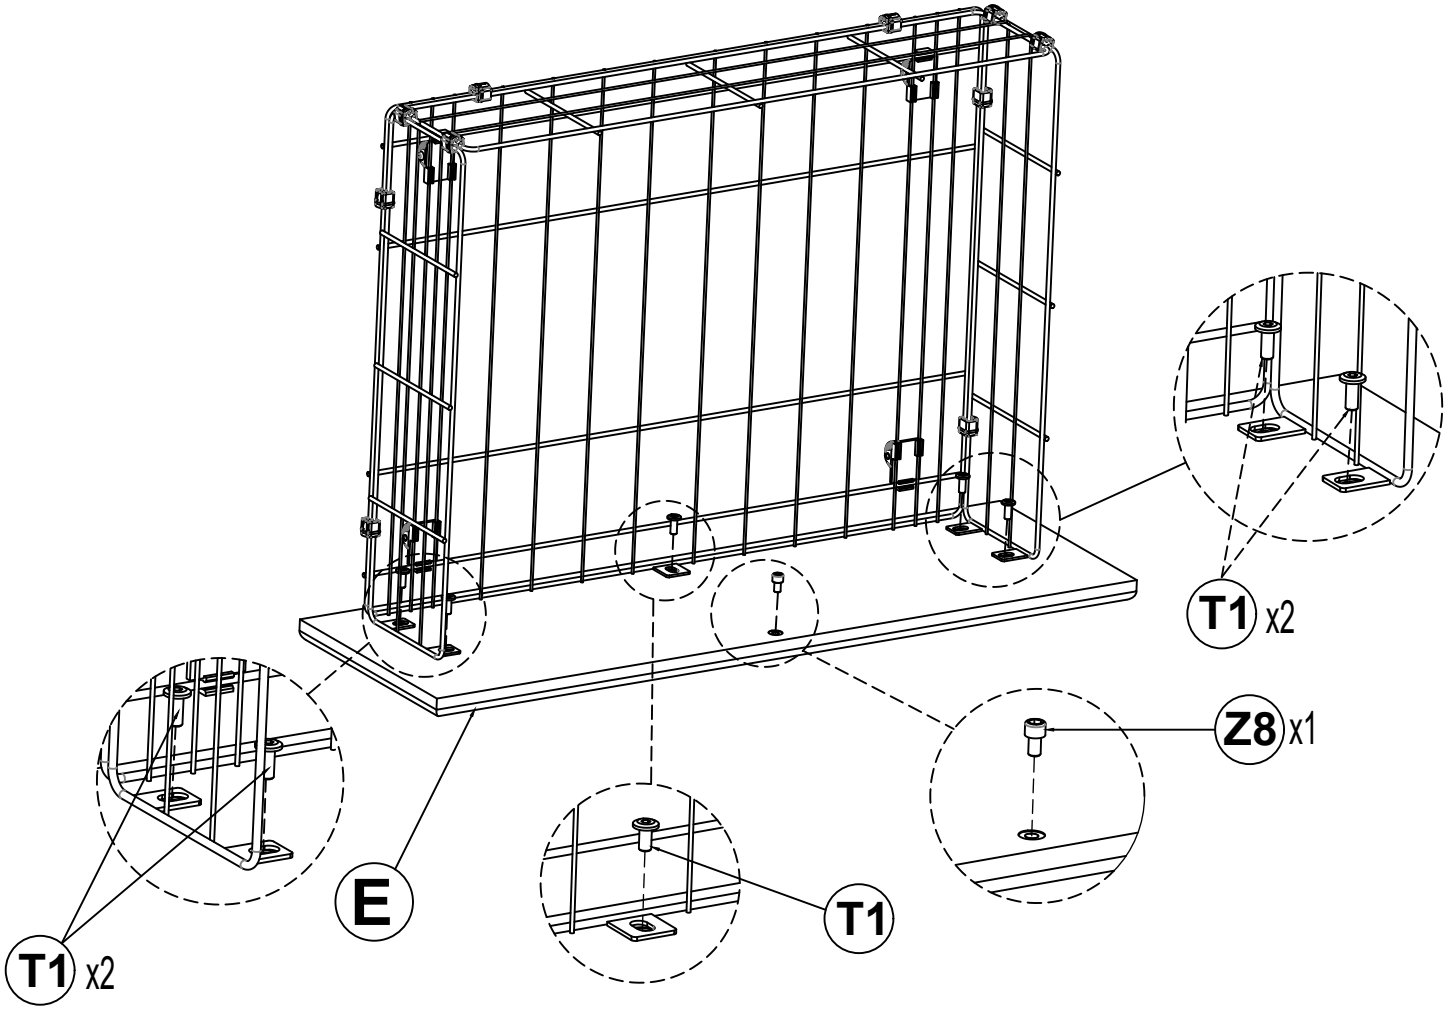


2pcs E

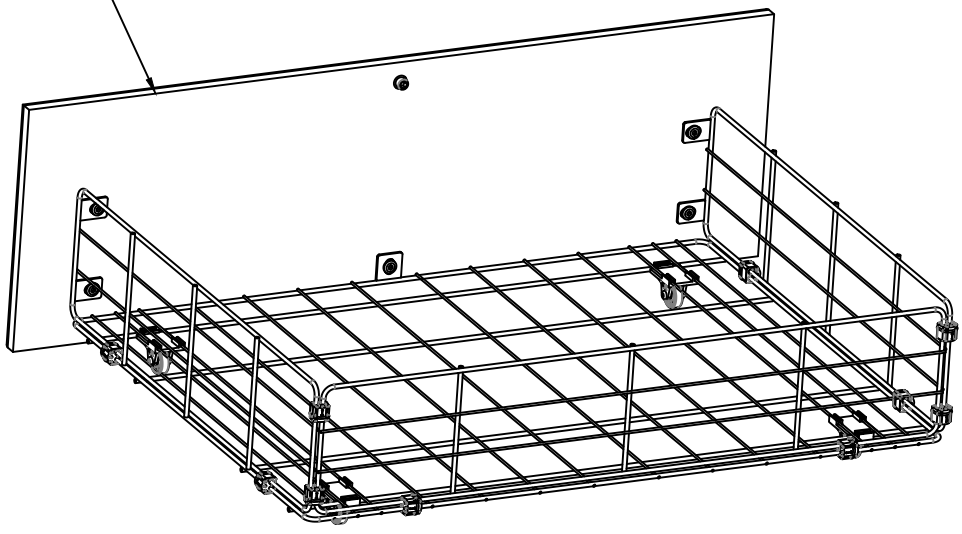


Step 18

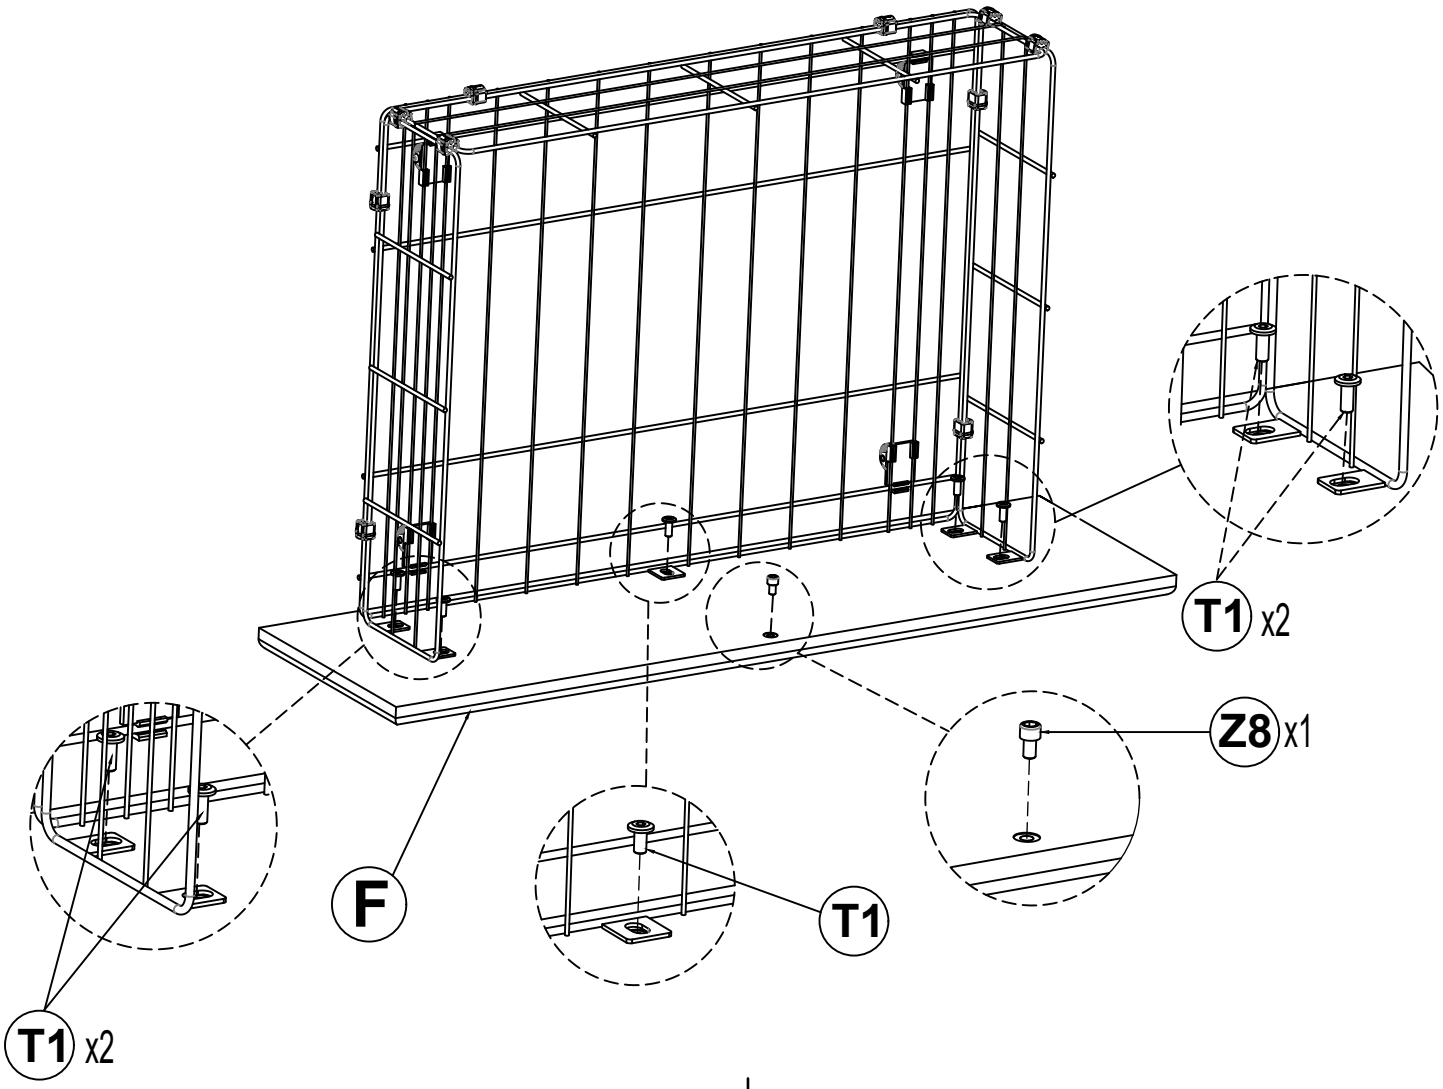

2pcs F

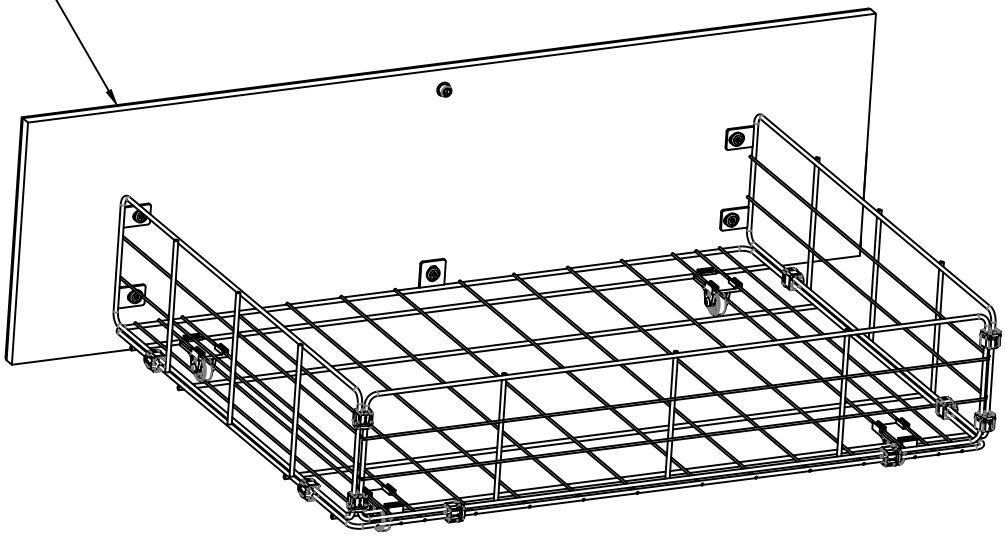

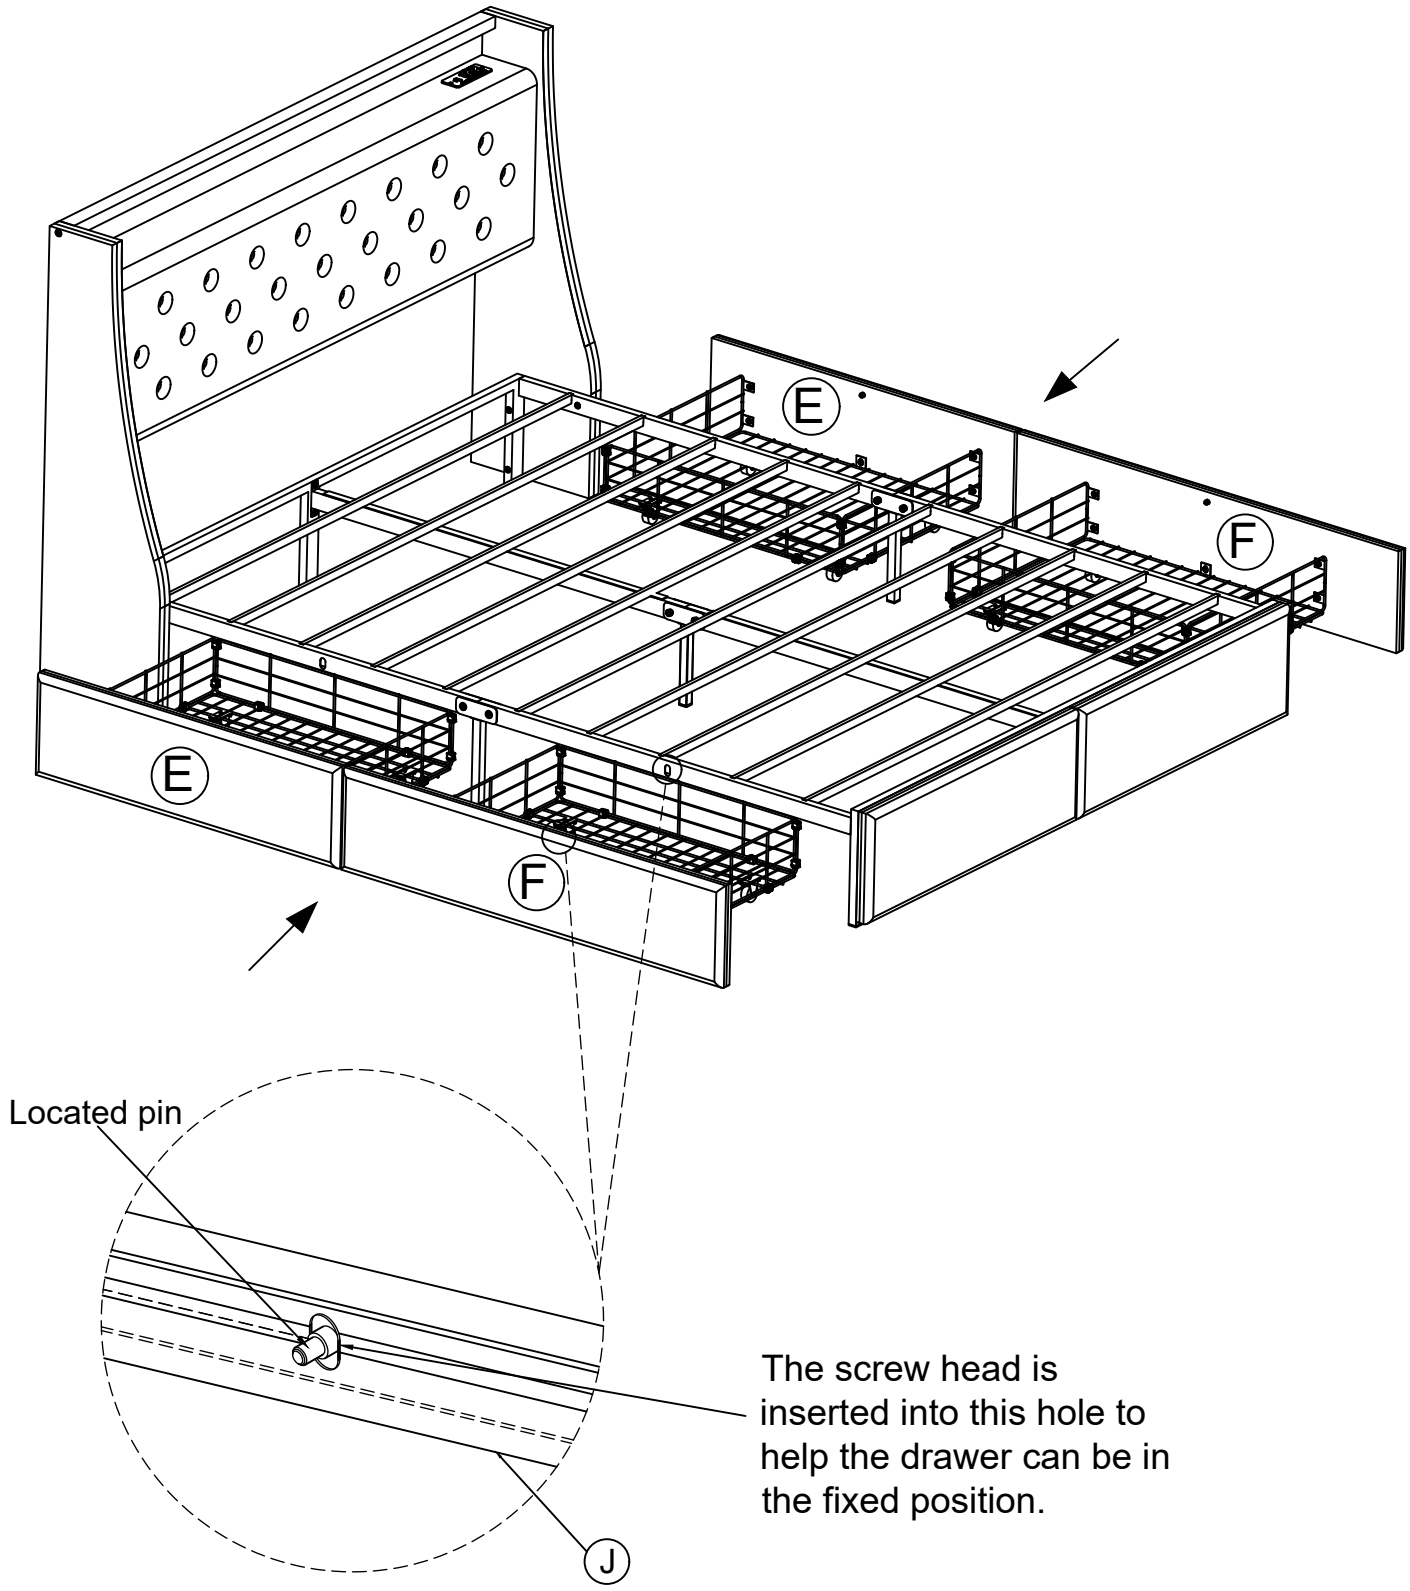
E
F
E
F
Located pin
The screw head is inserted into this hole to help the drawer can be in the fixed position.
J