


Assembly Instructions


Set of 2 Round Metal Planters

Precautions:

1. It is recommended to wear gloves for assembly to protect hands from injury,
2. When assembling, please strictly follow the installation direction and order in the instruction manual.
3. When assembling the side panels, tighten the screws only after all components have been successfully installed.
Tightening the screws too early may cause other holes to become misaligned, requiring you to disassemble and reassemble the parts.
4. Please place all parts correctly to avoid unnecessary trouble.

Thank you for your patience in reading. Wish you a happy life!

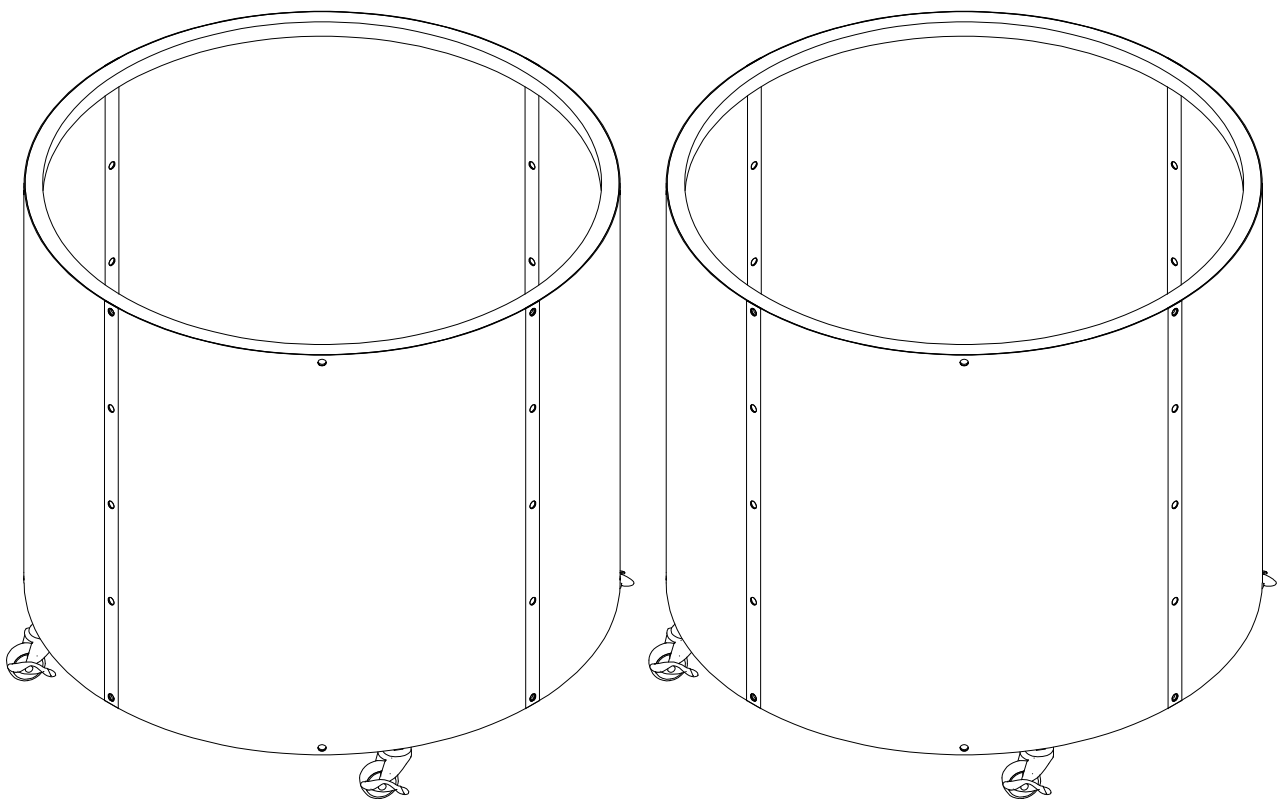


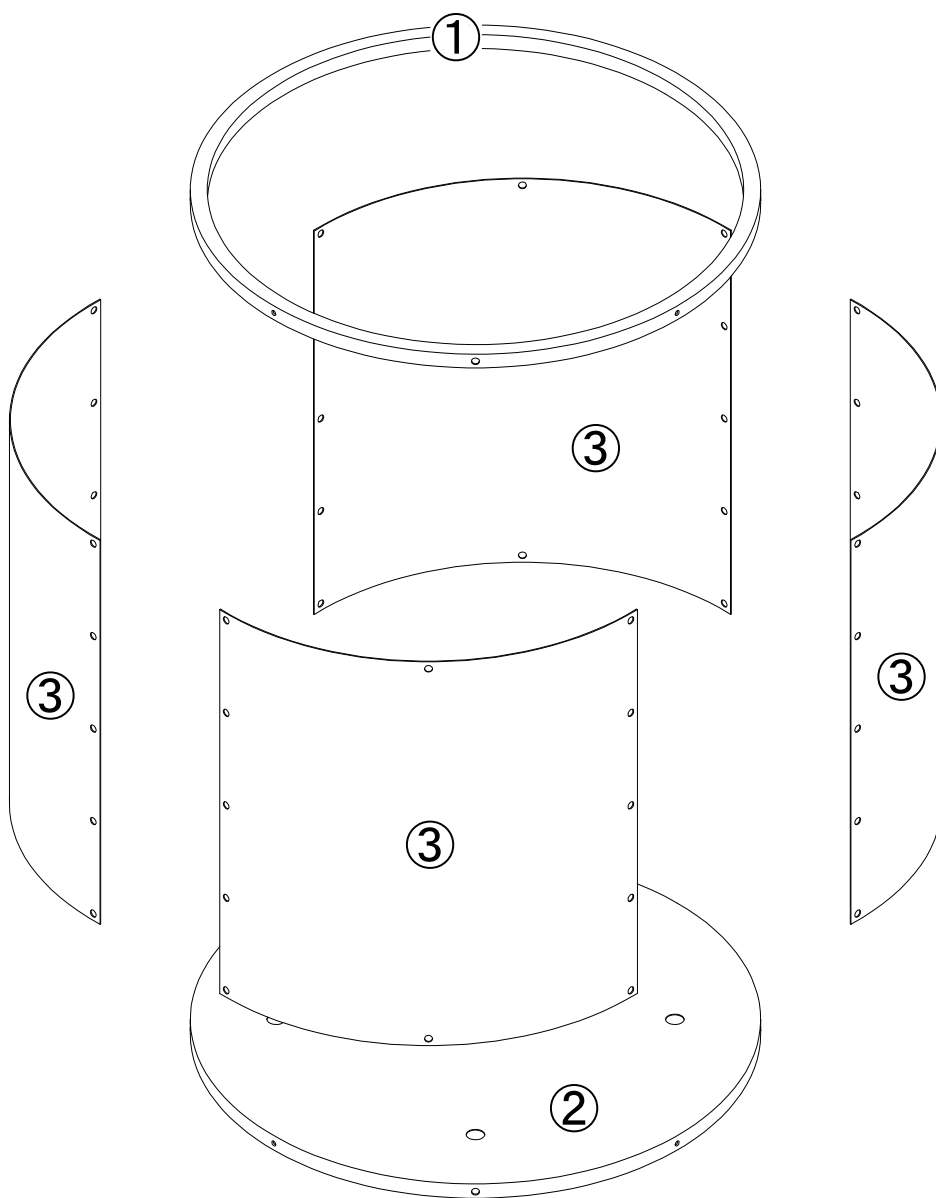

x 2


Part list

①




x 2

②



x 2

③

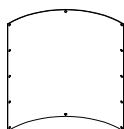

x 8

Hardware list

Ⓐ



M6*10


x 56

Ⓑ



x 24

Ⓒ



x 8

Ⓓ



M4

x 1

Ⓔ



10mm

x 1

Ⓕ





14mm

x 1

Step 1

x 4



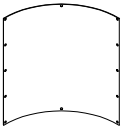
③  x 8	④  M4 x 1
⑤  M6*10 x 12	⑥  10mm x 1
⑦  x 12	

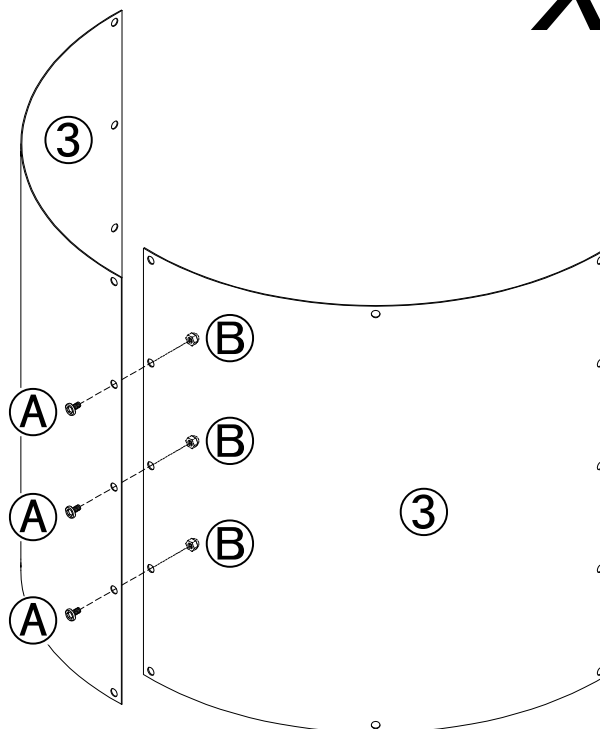


Do not fully
tighten the bolts

Step 2

x 2


①  x 2	④  M4 x 1
②  x 2	
⑤  M6*10 x 12	

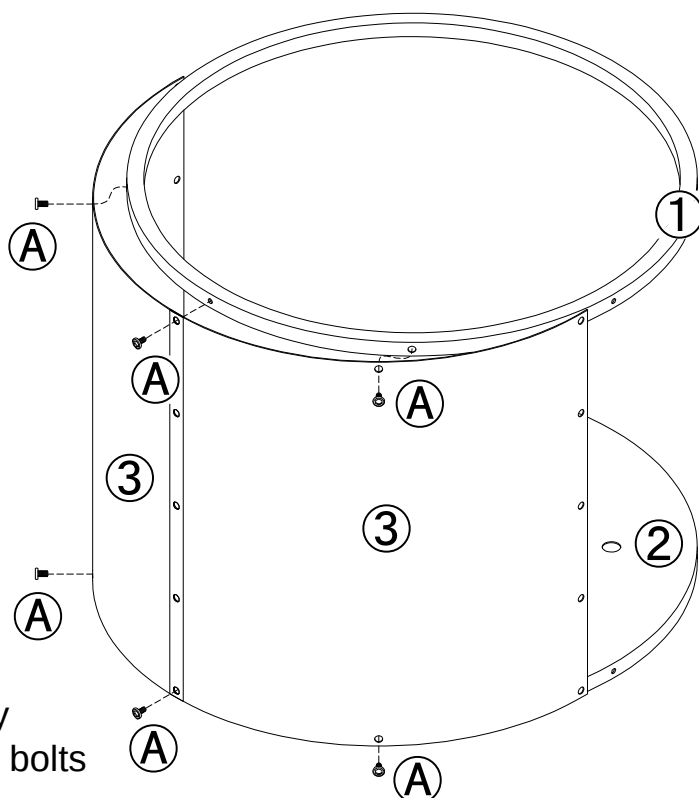

Do not fully
tighten the bolts

Step 3




x 2

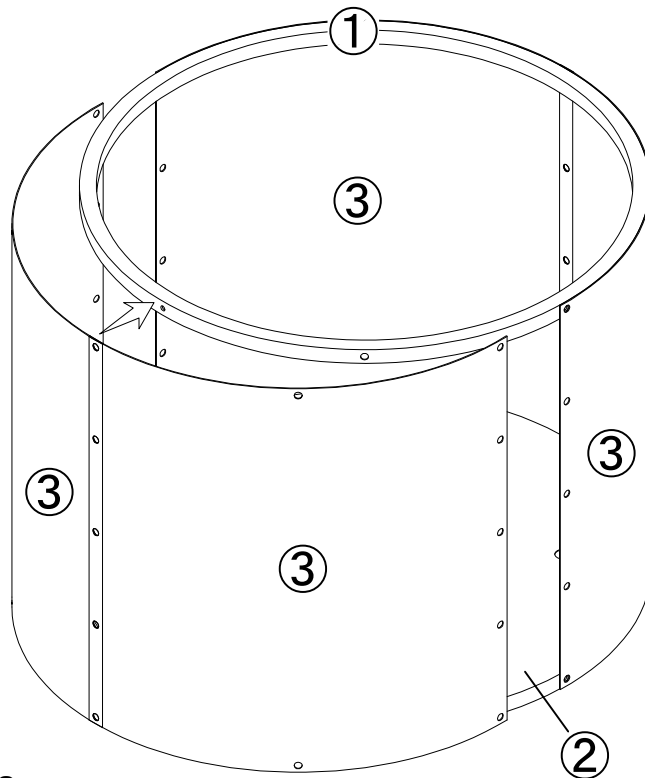

Do not fully
tighten the bolts

Step 4



x 2

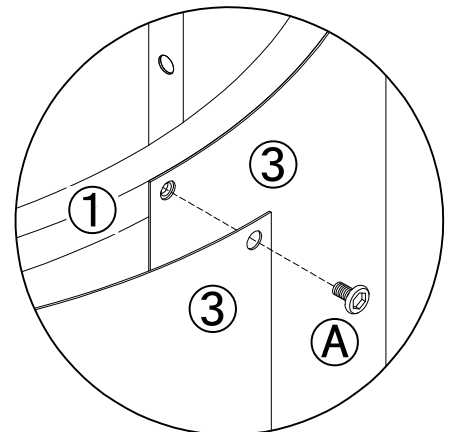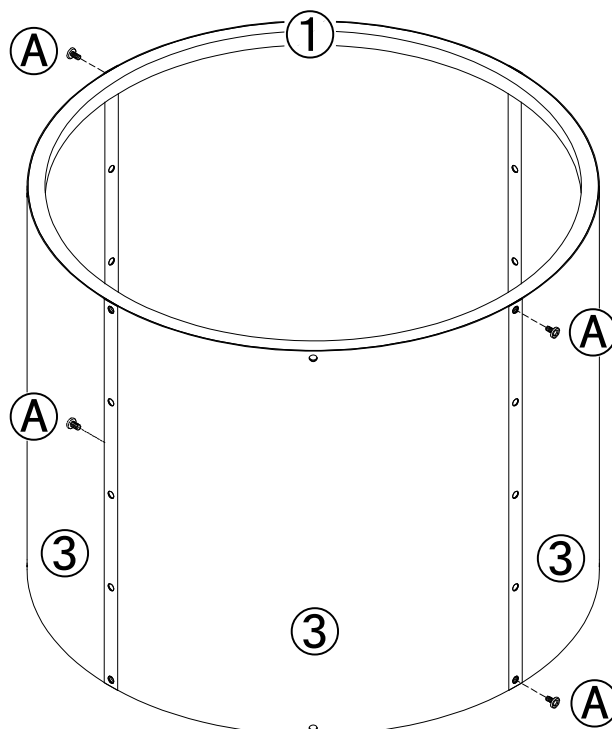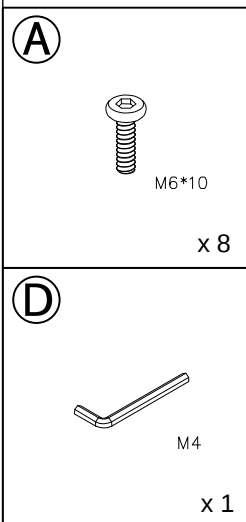

Do not fully
tighten the bolts

Step 5



x 2

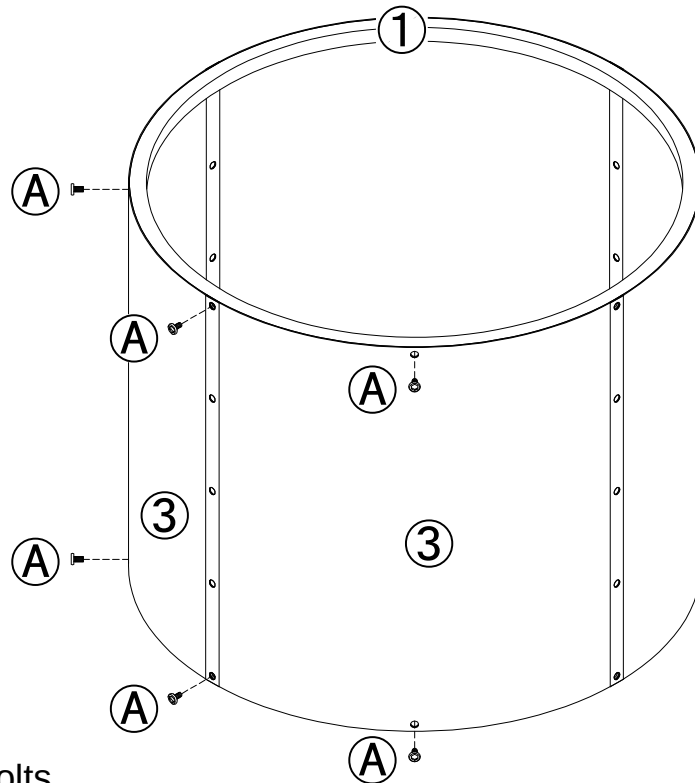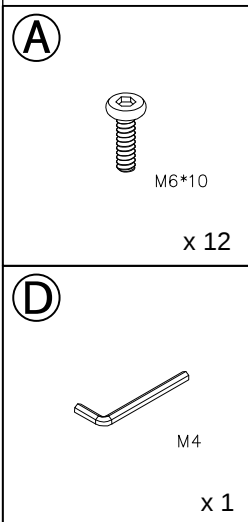

Do not fully tighten the bolts



Step 6

x 2

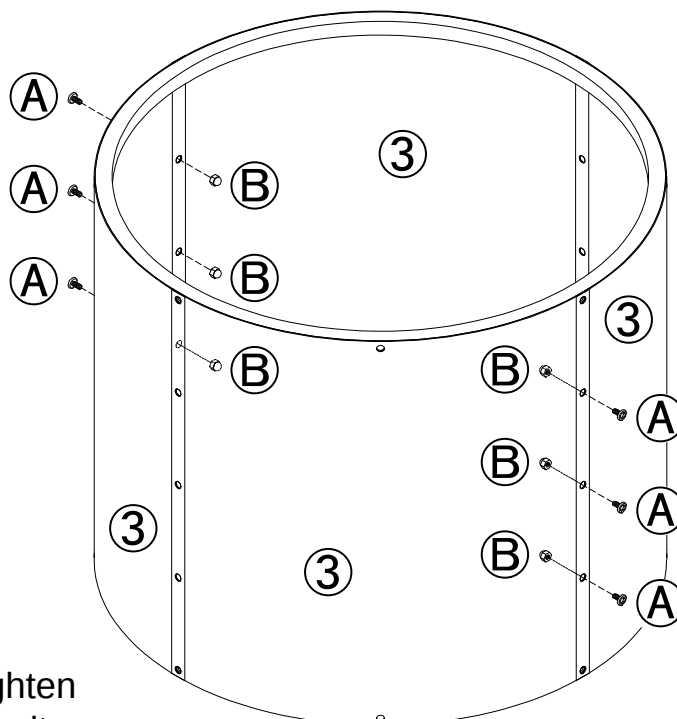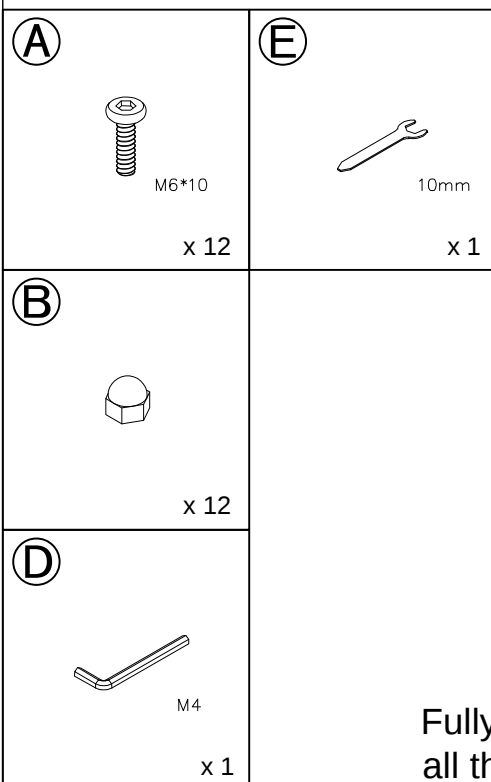

Fully tighten all the bolts.

Step 7

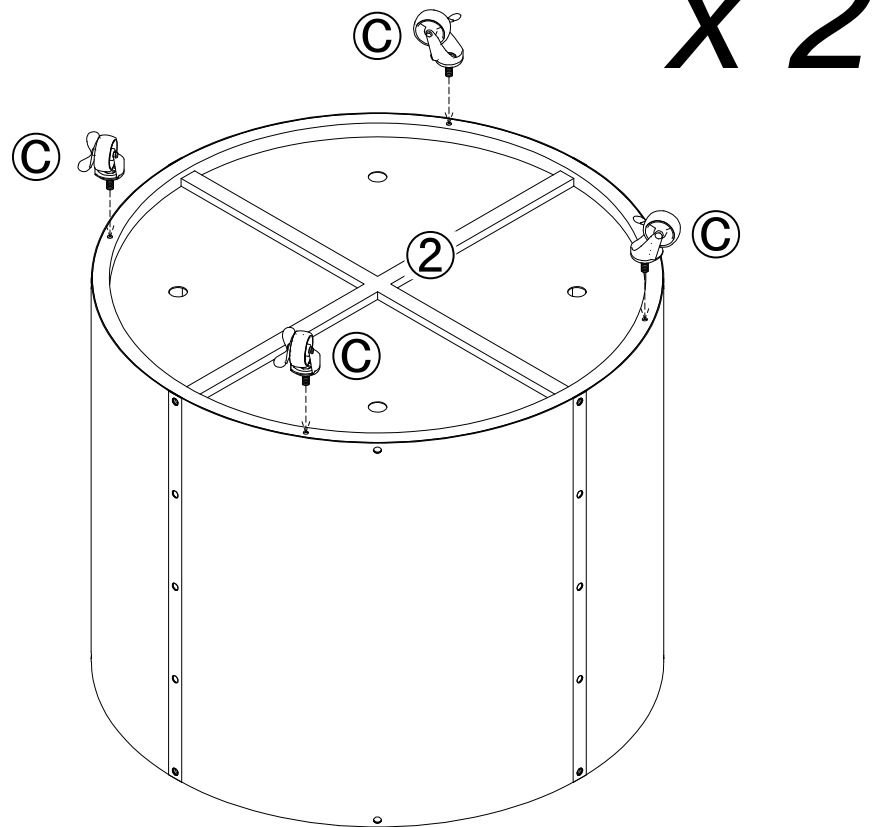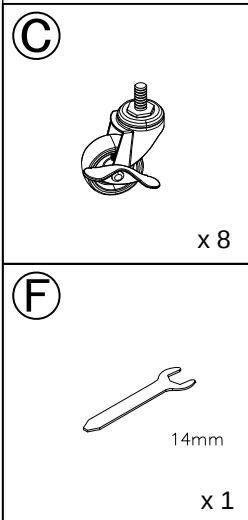

Step 8

