


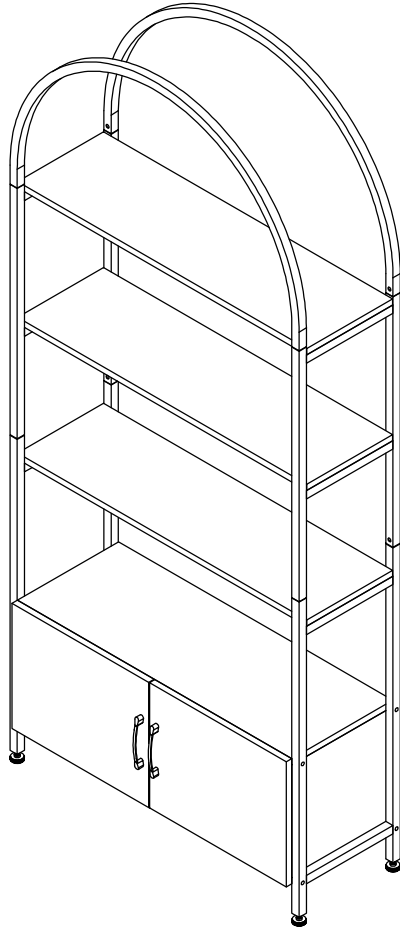


Attention: Don't tighten the screw before all screws are in place


UESR'S MANUAL

094


Explosion view

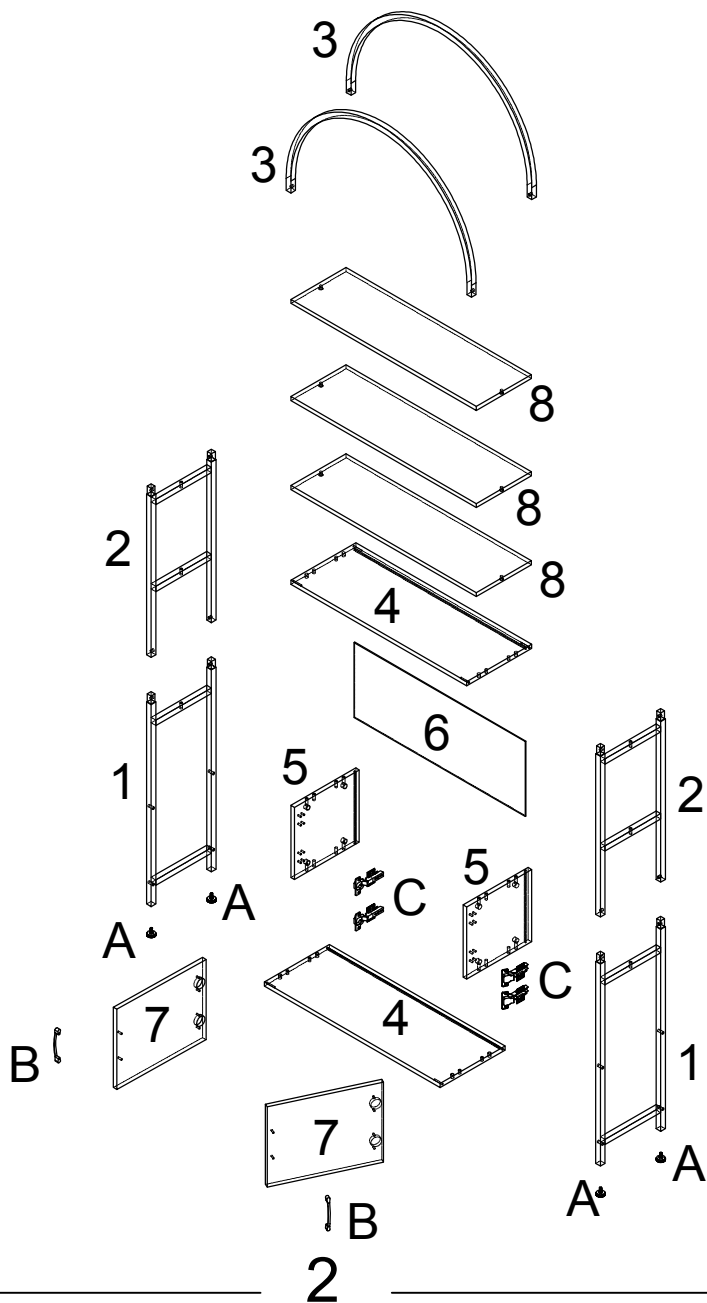




Hardware List

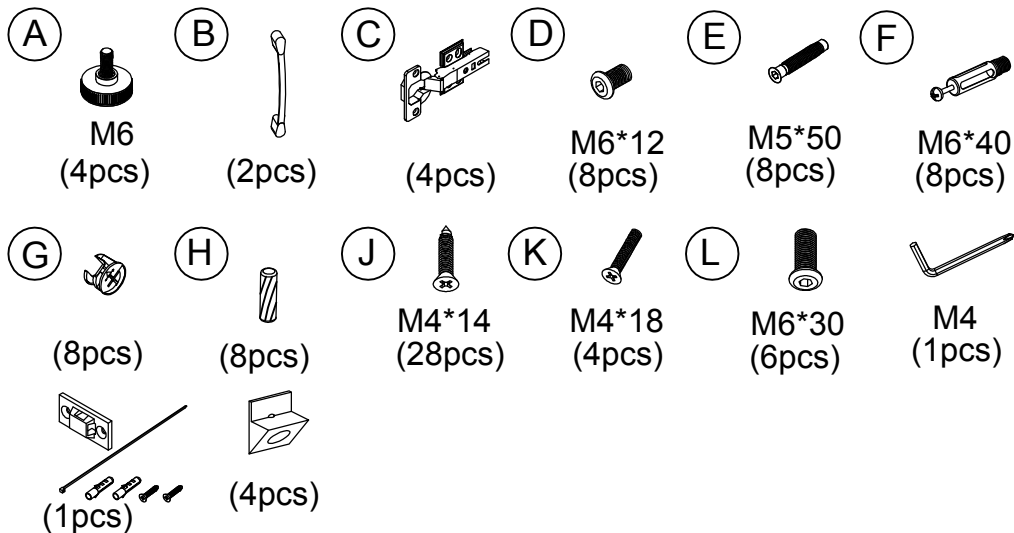


Panel List

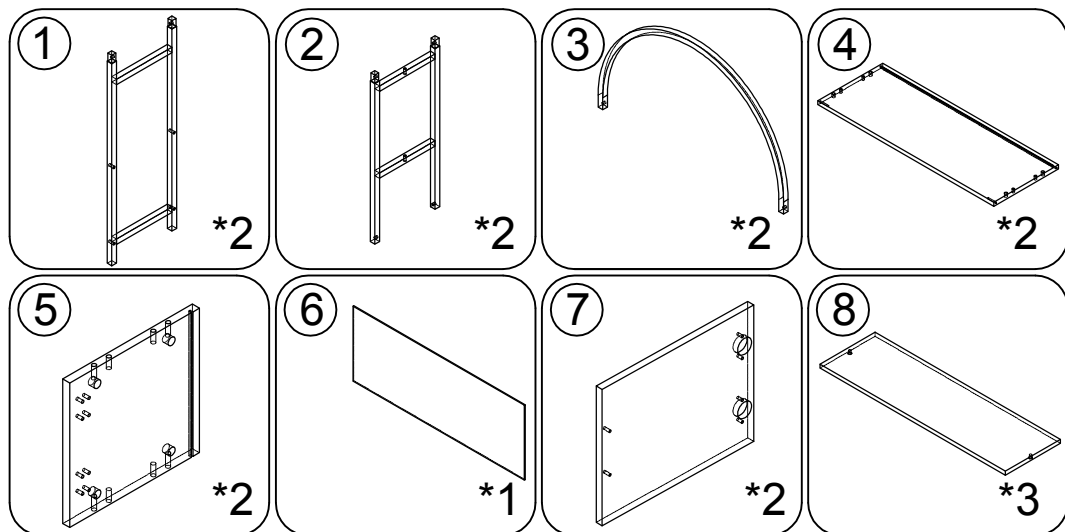

Assembling the unit with camlocks and wood dowels.

			
Gently screw cam bolt into the threaded anchor.	Tap one end of the wooden dowel gently into the hole.	Gently attach the dowel to the second panel and insert it into the hole.	Screw the camlock firmly into locked position.

Installation method of hinge

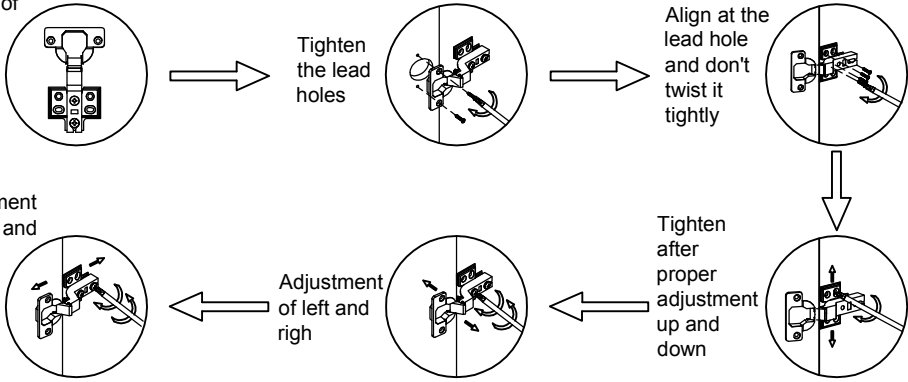

Align at the lead hole and don't twist it tightly

Tighten the lead holes



Tighten after proper adjustment up and down

Adjustment of left and right

Adjustment of front and back

Assembly instructions


Step 1

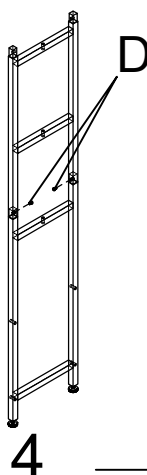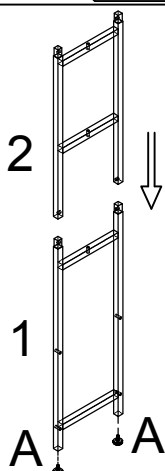



D *4
M6*12

X2

Step 2

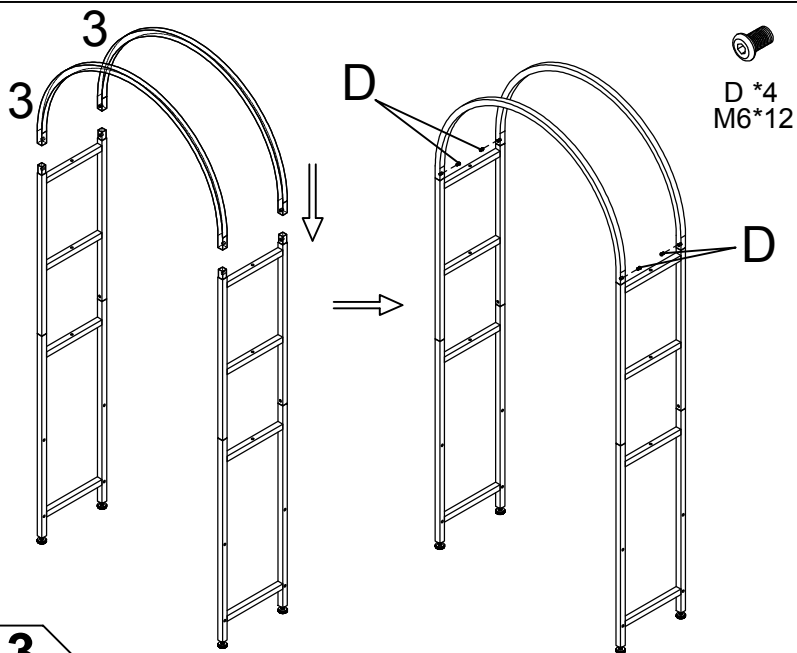

Step 3

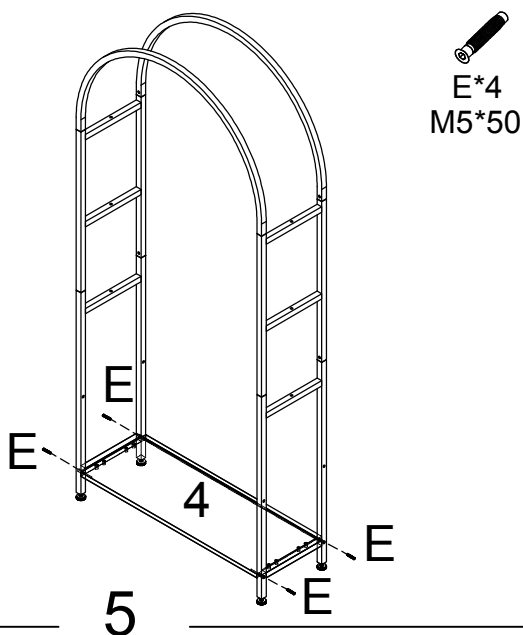

Step 4




F*4
M6*40




G*4



H*4
Ø8*30

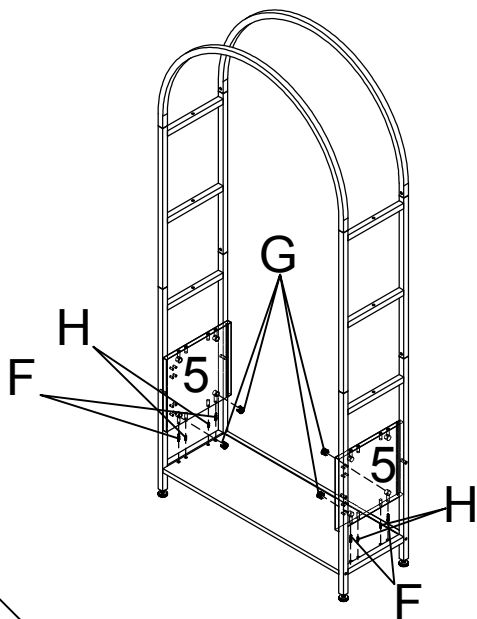


Step 5

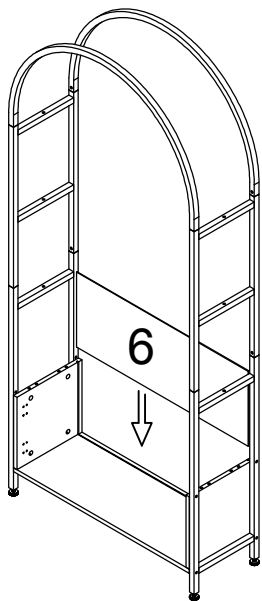


6

Step 6

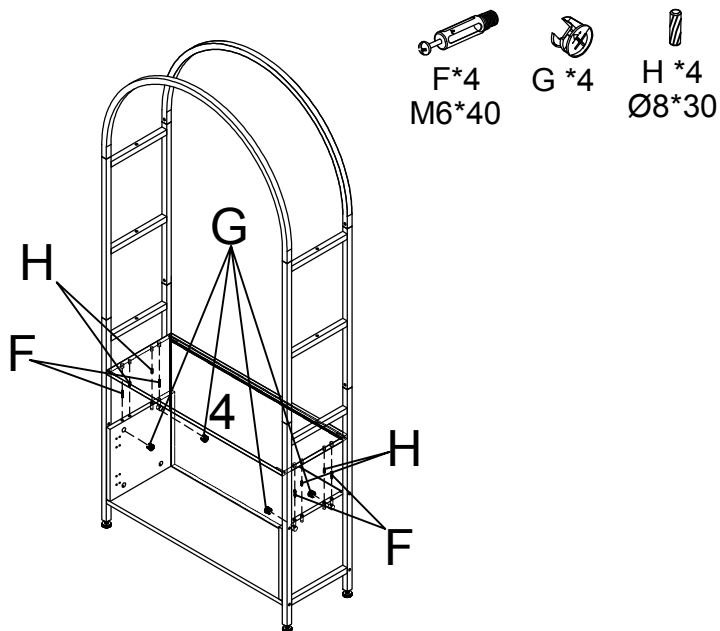


Step 7

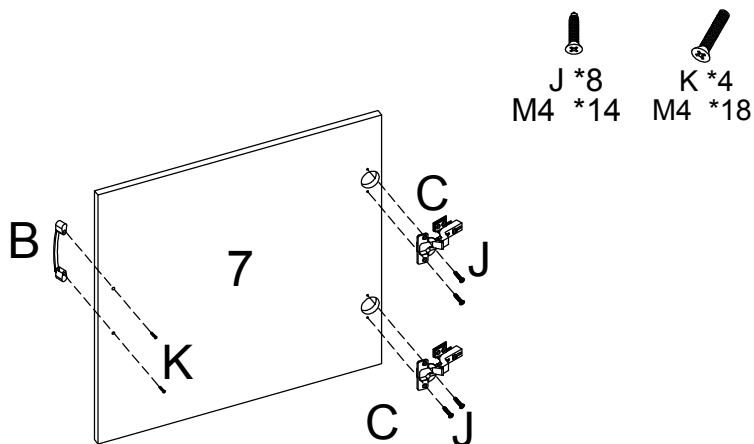


X2

Step 8

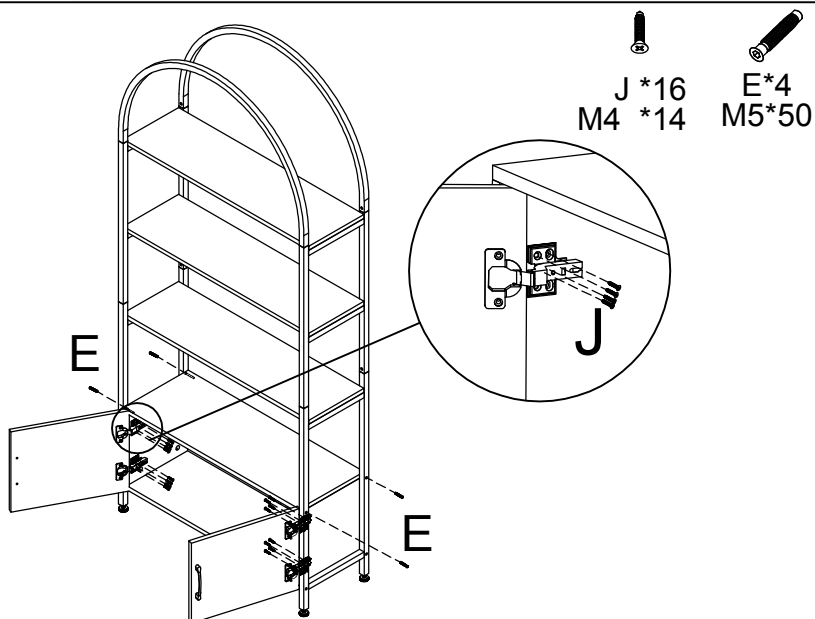


Step 9

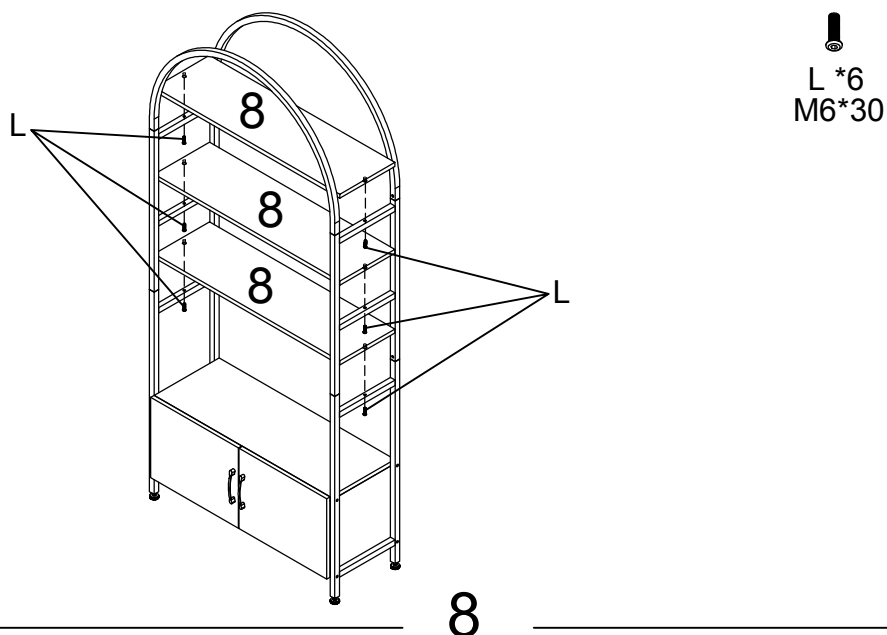


Step 10



J *4
M4 *14

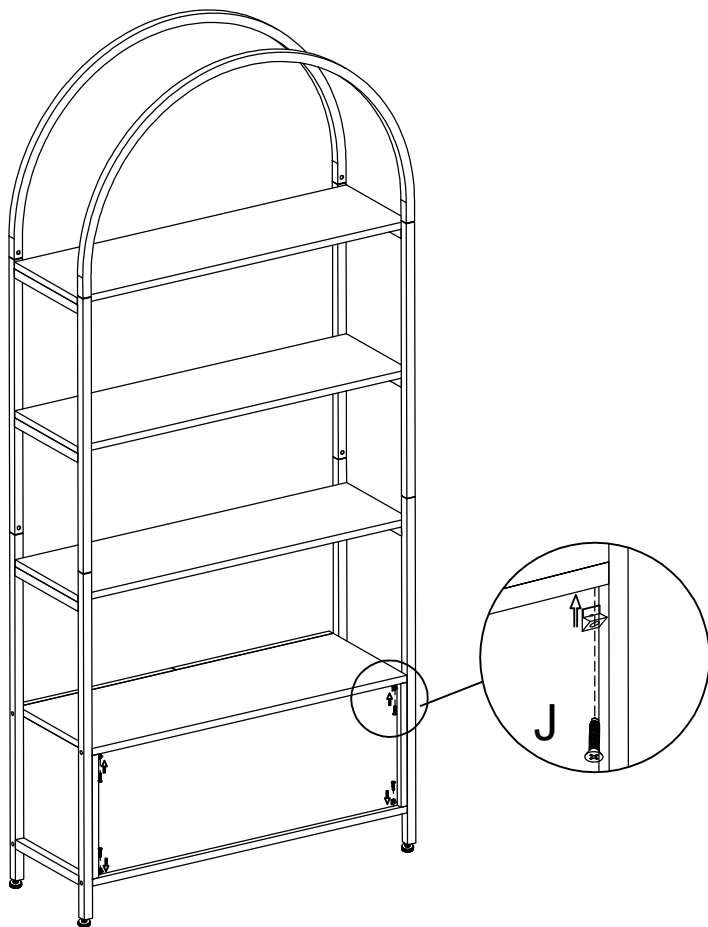


Step 11

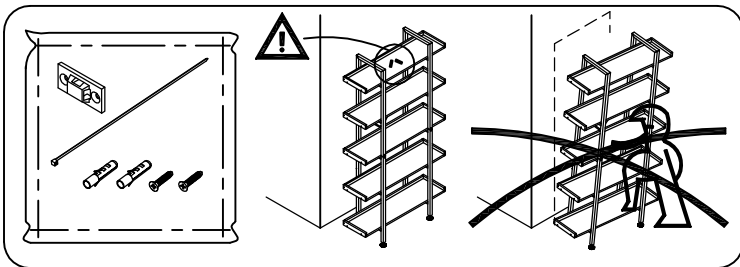


**DO NOT CLIMB
ON DRAWERS.
DOING SO MAY CAUSE
INJURY OR DEATH**


Please assemble part H to avoid dumping.

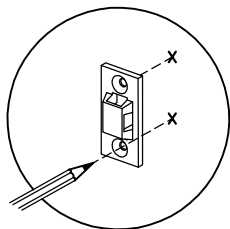


a. Mark on the wall

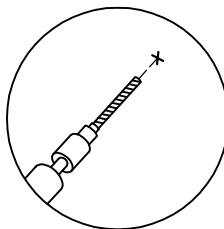


b. Make holes in the wall

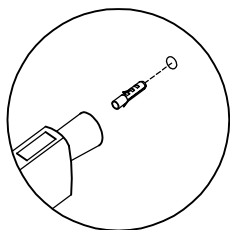

c. Push in the plastic wall anchor

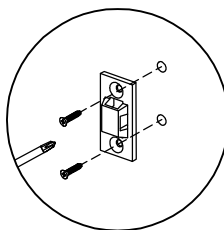

d. Insert long screws 4x35mm
into the wall to fix the iron clasp

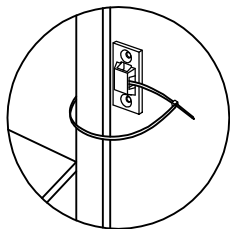

e. The plastic straps pass through the iron clasp
and then ring the steel frame and tighten it

CONTACT US

Dear customer, thank you for purchasing our products!
We are proud to present our customers with high quality products!

If you have any product quality or use problems,
please contact our customer service by email,
we will ensure your satisfaction.

Customer Service Team: support@bophy.net