
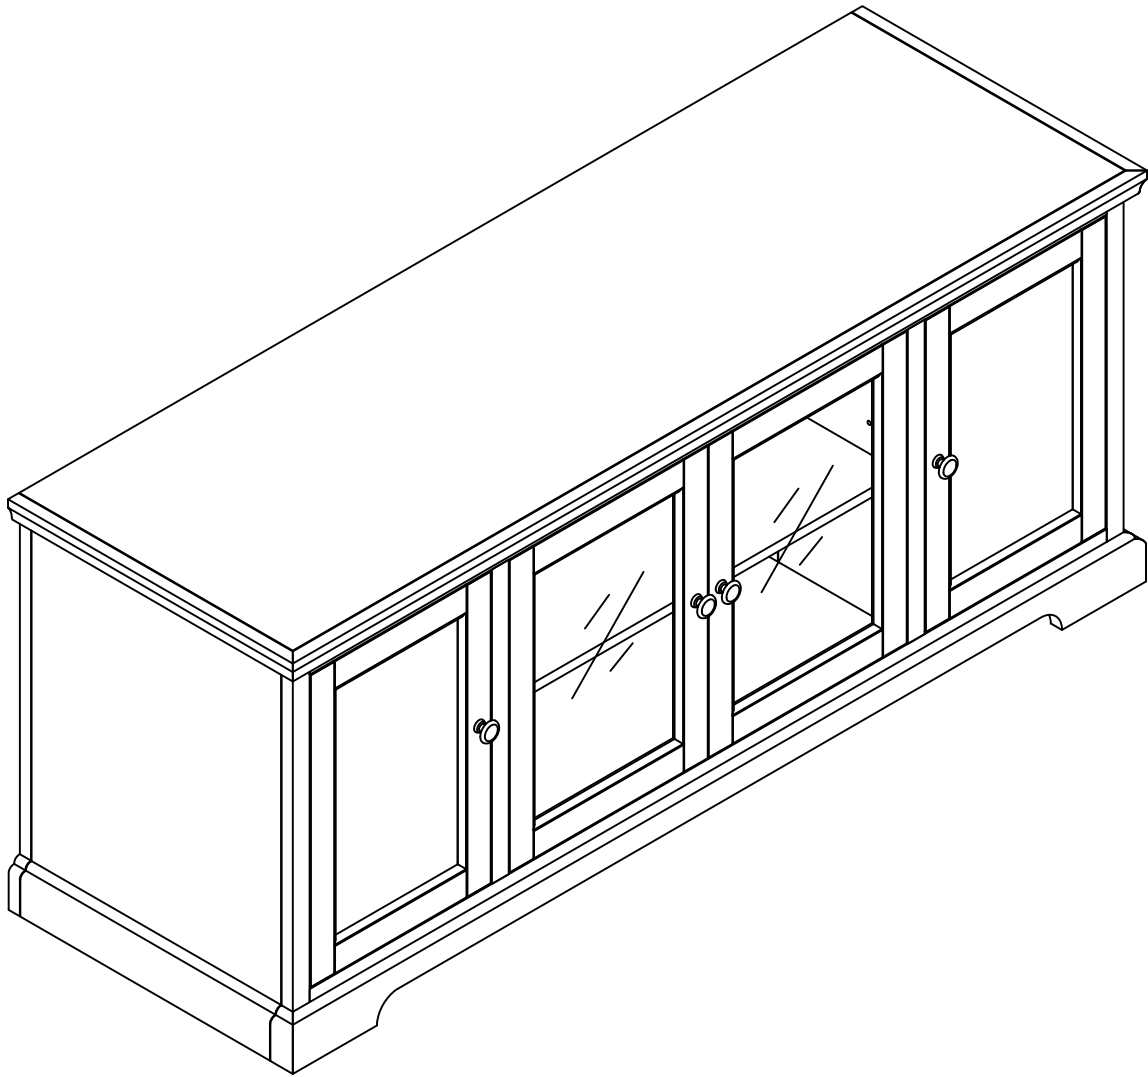

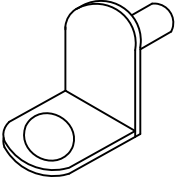









Slate 25" H, 60" W Console

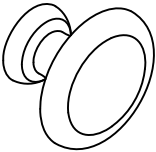

Hardware List

	Item	Description	Qty
a		Bolt 1/4" * 1-1/8"	6PCS
b		Allen wrench	1PC
c		Washer 1/4" * 12mm	6PCS
d		Shelf metal clip	12PCS
e		Door Pull	4PCS
f		Machine screw for door pull 5/32" * 3/4"	4PCS

Parts List

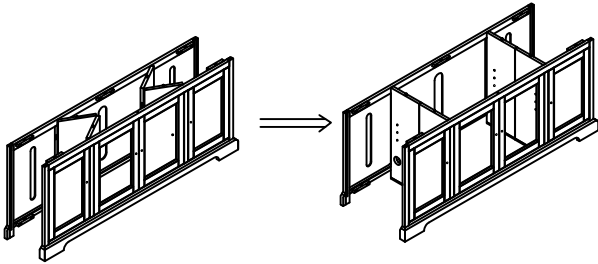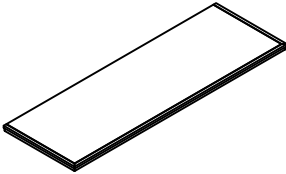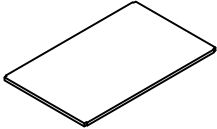
Item	Description		Qty
A		Cabinet	1PC
B		Top Panel	1PC
C		Side Panel	2PCS
D		Middle Bottom Panel	1PC
E		Side Bottom Panel	2PCS
F		Middle Adjustable Shelf	1PC
G		Side Adjustable Shelf	2PCS

Assembly Instructions

Two person assembly recommended.


step 1

Unfold Cabinet.

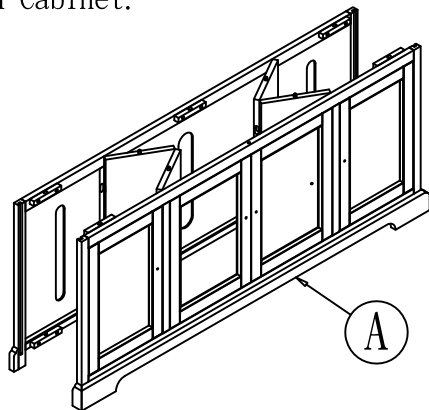


step 2

Open 4 doors. Insert the middle bottom panel first, then insert side bottom panels.

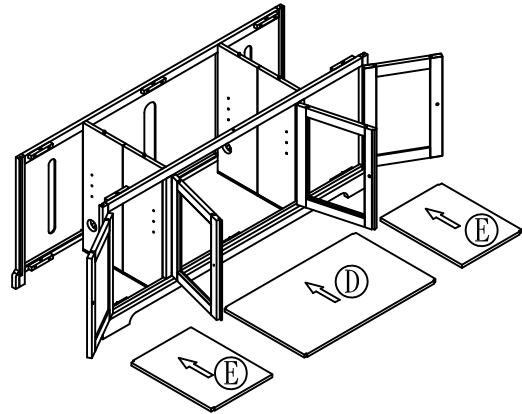

step 3


Insert two side panels.

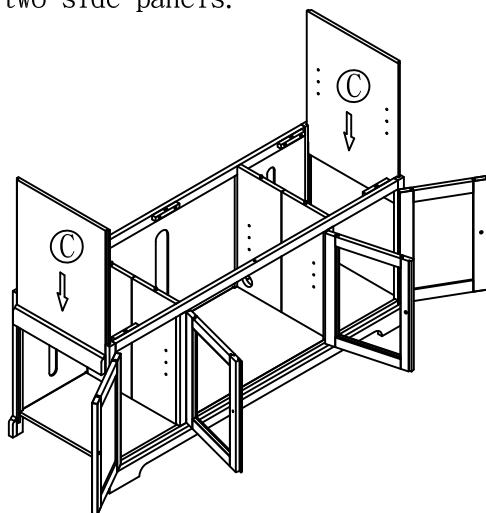

step 4


Bolt on top with 6 bolts.

DO NOT OVER TIGHTEN.

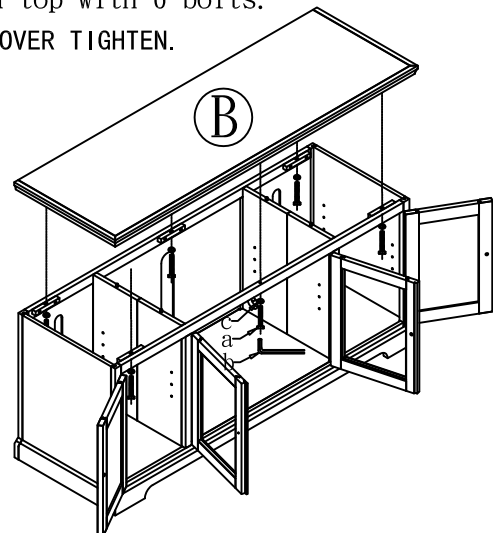

step 5

Install shelf clips and insert shelves.

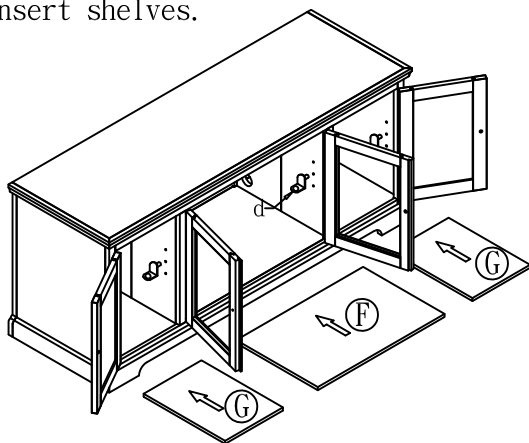

step 6

Install door pulls.

