



ASSEMBLY INSTRUCTIONS


PARTS:

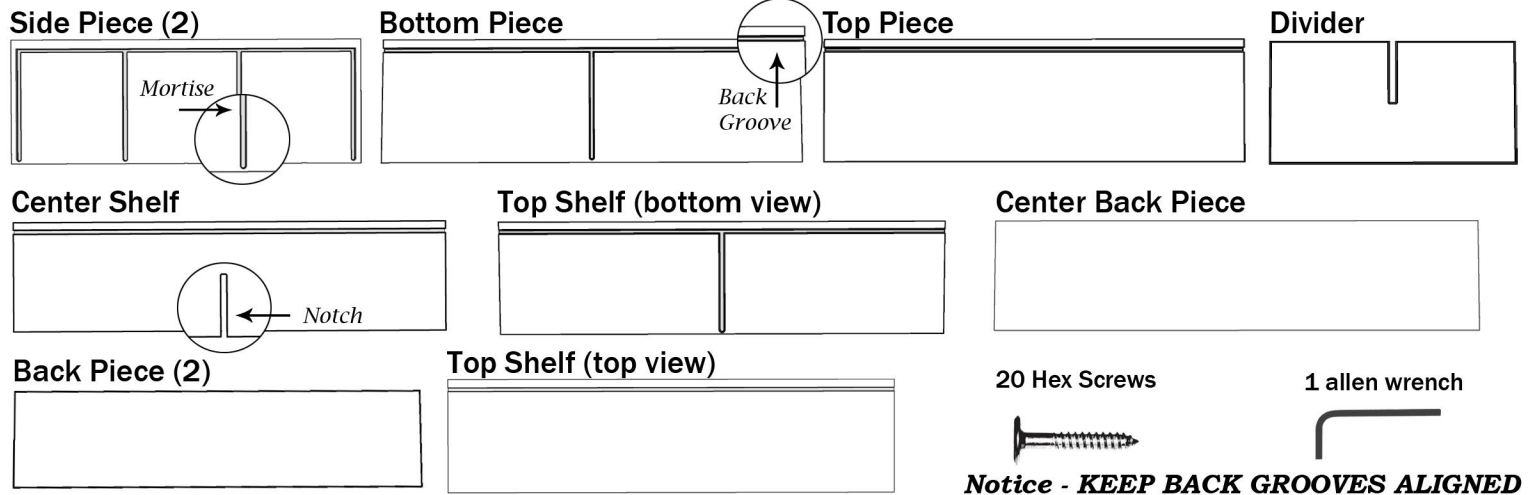

Notice - KEEP BACK GROOVES ALIGNED

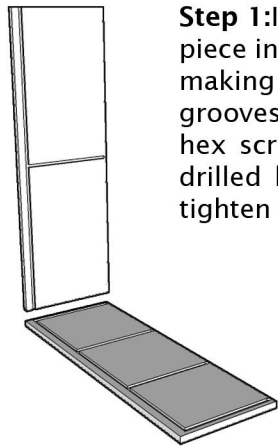


Step 1: Insert edge of **bottom** piece into mortise of **side** piece, making sure to align back grooves of both pieces. Insert hex screws in each of (2) pre-drilled holes in **side** piece and tighten down halfway.

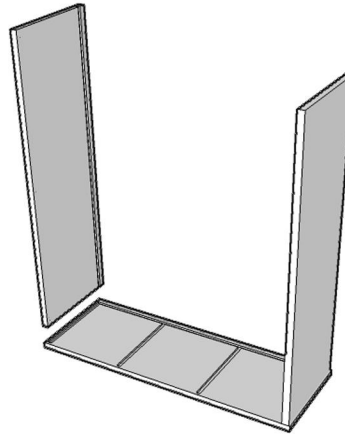


Step 2: Insert edge of **top** piece into mortise of **side** piece, making sure to align back grooves on all pieces. Insert hex screws in each of (2) pre-drilled holes in **side** piece and tighten down halfway.


Step 3: Insert edge of **top shelf** piece into mortise of **side** piece closest to **top** piece. Make sure that mortise in center of **top shelf** is facing **bottom** piece. Keep back grooves aligned on all pieces. Insert hex screws in each of (2) pre-drilled holes in **side** piece and tighten down halfway.

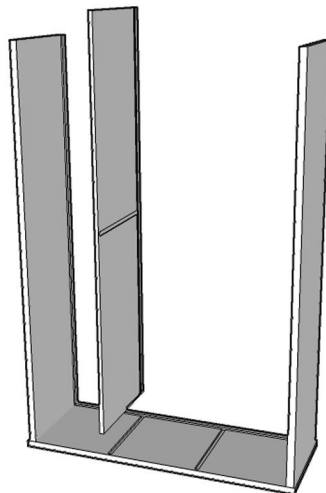


Step 4: Insert **center shelf** into remaining mortise of **side** piece, making sure notch faces back grooves of assembled pieces. Insert hex screws into each of (2) pre-drilled holes in **side** piece and tighten down halfway.

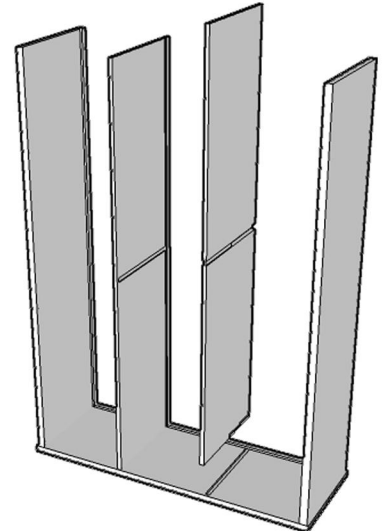

ASSEMBLY INSTRUCTIONS

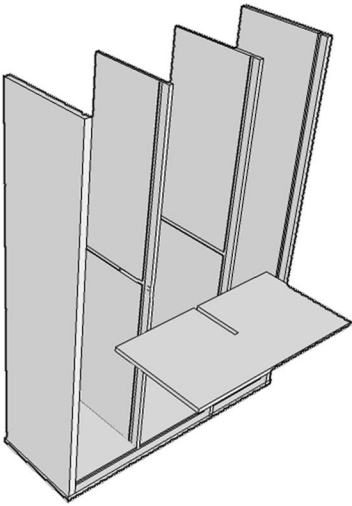


Step 5: Insert edges of **divider** into center mortises of **bottom** piece and **top shelf**. Make sure the notch of **divider** intersects with notch of **center shelf**.

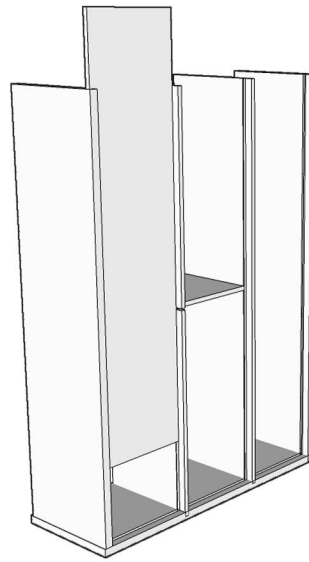


Step 6: Insert sides of **back** piece into back grooves of **bottom** piece and **top shelf**. Slide into place until edge of **large back** piece rests in back groove of **side** piece.


Step 7: Insert sides of **remaining back** piece into back grooves of **top shelf** and **top** piece. Slide into place until edge of **small back** piece rests in back groove of **side** piece.

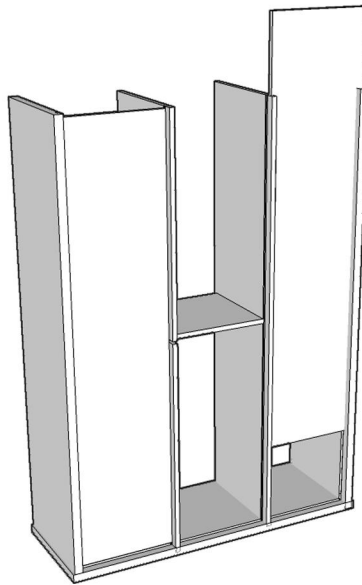

Step 8: Insert sides of **center back** piece into back grooves of **shelf** pieces. Slide into place until edge of **small back** piece rests in back groove of **side** piece.

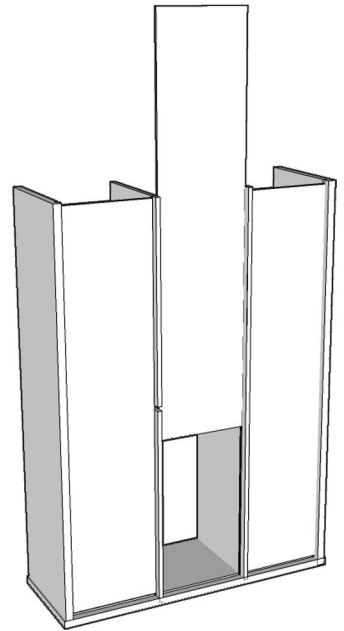

Step 9: Place remaining **side** piece over edges of assembled pieces. Insert edges of **bottom**, **top**, **center shelf**, and **top shelf** pieces into mortises of **side** piece. Make sure edges of back pieces rest firmly in back grooves of **side** piece. Insert hex screws into each of (8) pre-drilled holes on **side** piece and tighten down halfway.

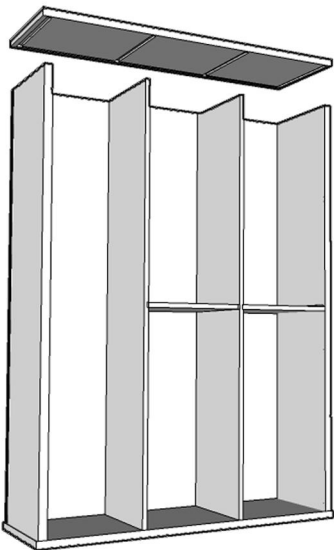

Step 10: Tighten down all screws until snug. **DO NOT OVER TIGHTEN.** **DO NOT DRILL.** rotate unit until it rests on **bottom** piece and edges of **side** piece. Assembly is now complete.

