
Vendor Cart

ASSEMBLY, CARE & USE INSTRUCTIONS




















XNY25121101

PACKAGE CONTENTS

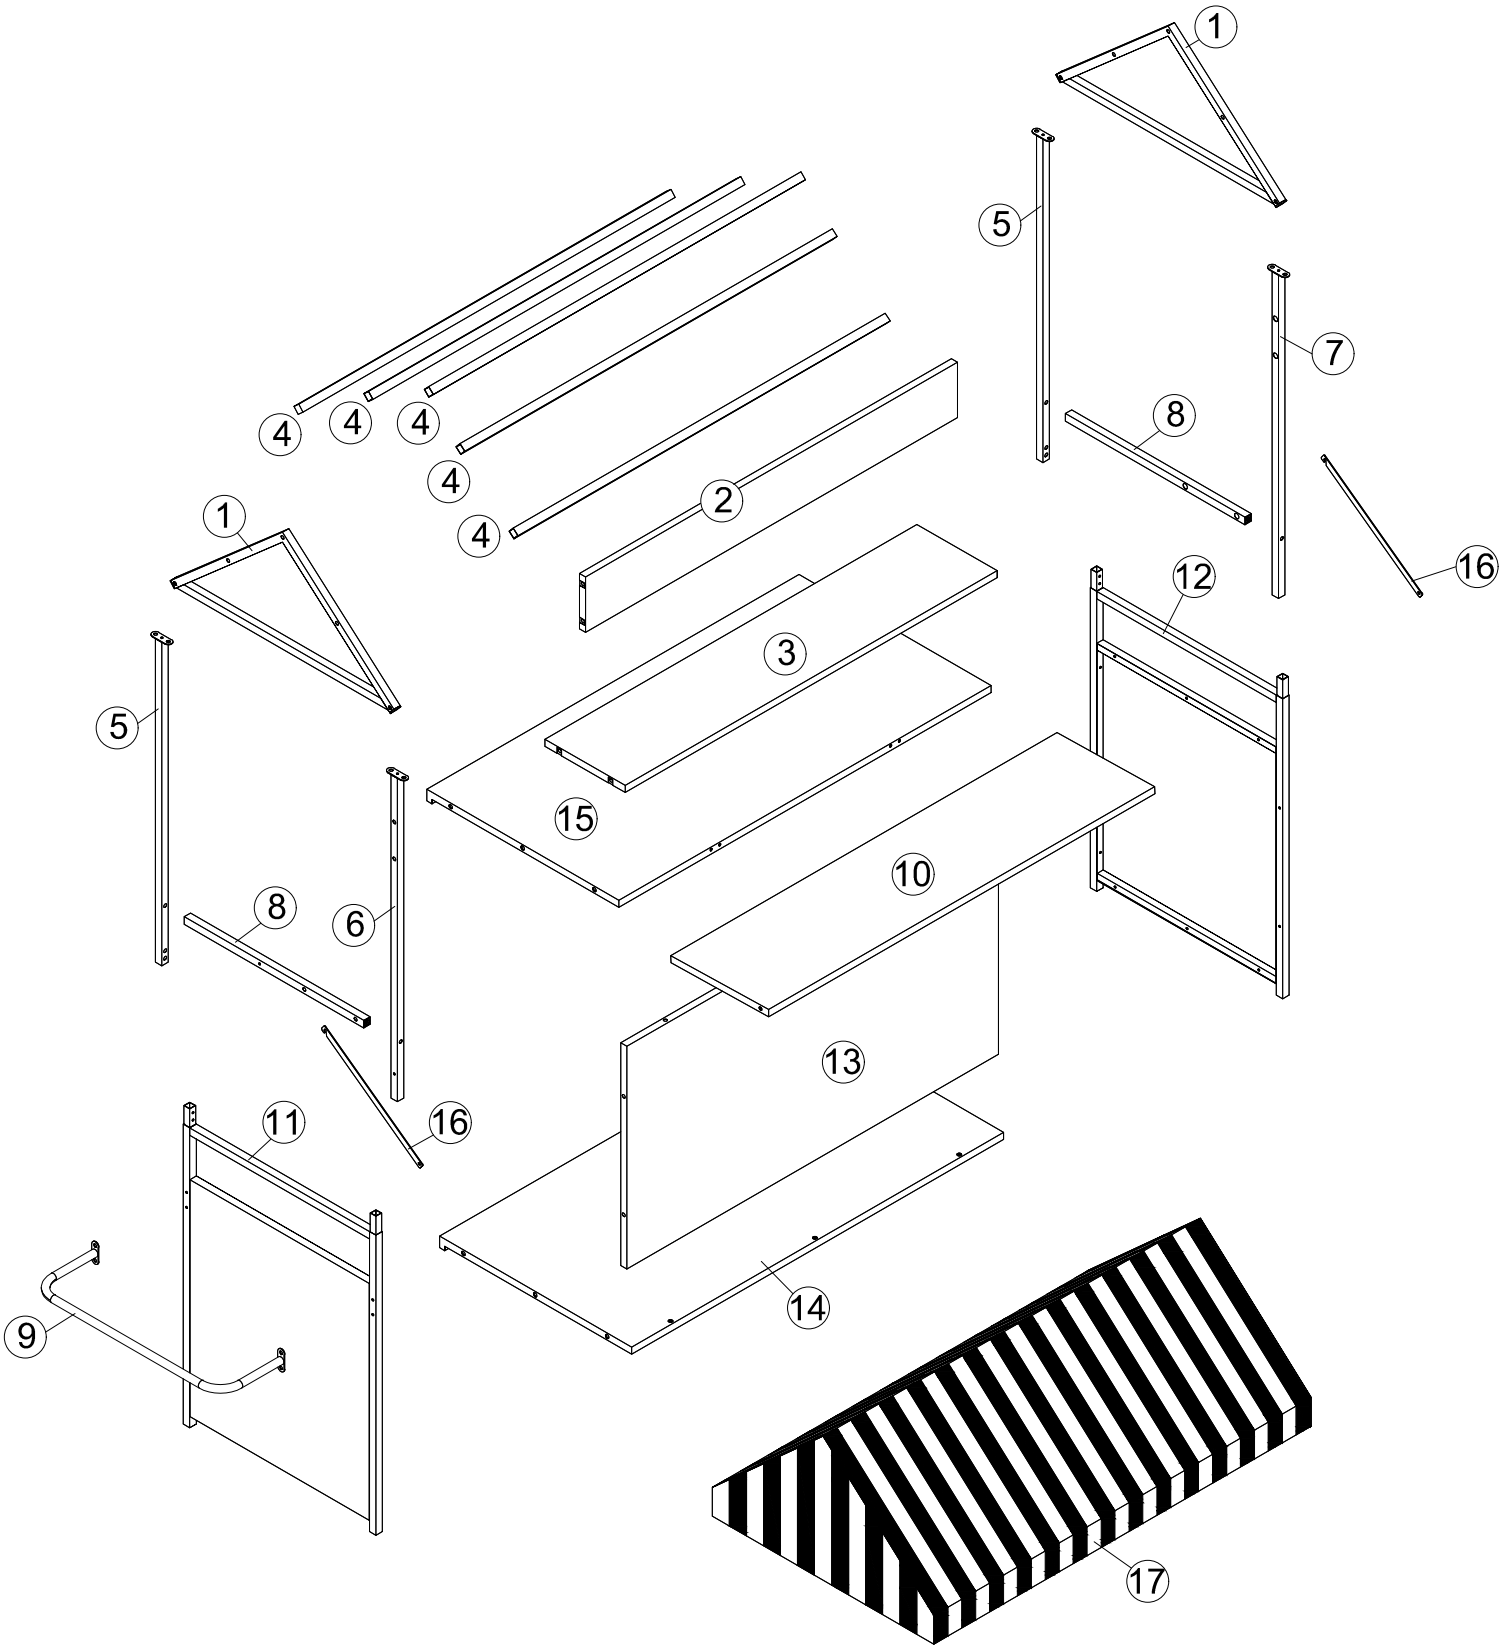


Part List

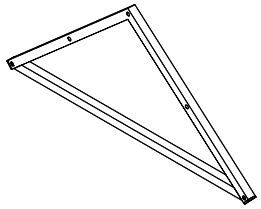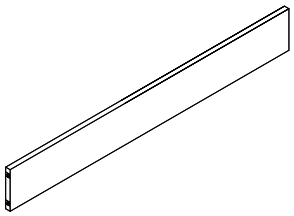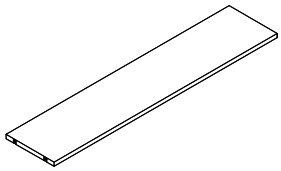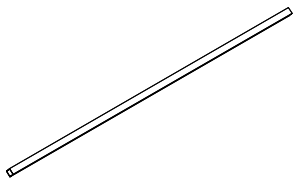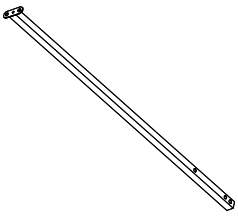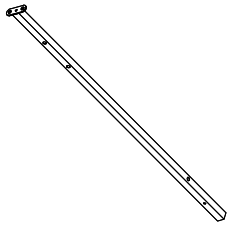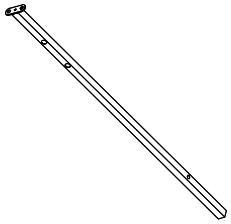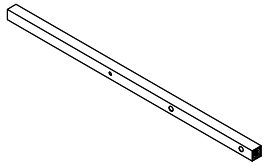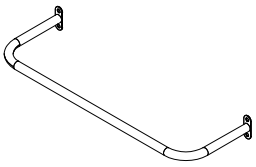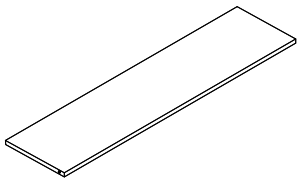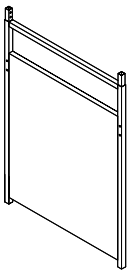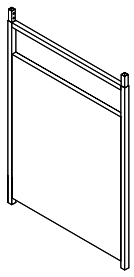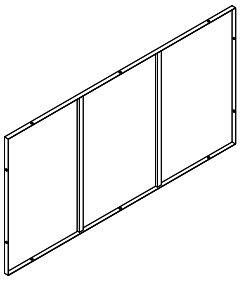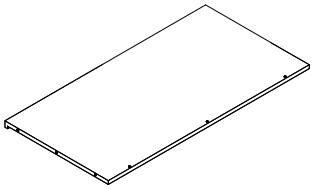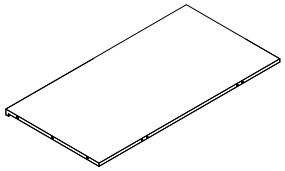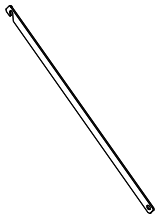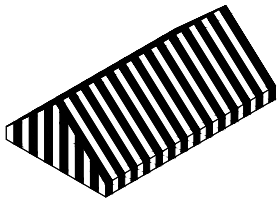
①  x 2	②  x 1	③  x 1	④  x 5
⑤  x 2	⑥  x 1	⑦  x 1	⑧  x 2
⑨  x 1	⑩  x 1	⑪  x 1	⑫  x 1
⑬  x 1	⑭  x 1	⑮  x 1	⑯  x 2
⑰  x 1			


Hardware List

A			S-hook	5 PCS
B		6x12mm	Hexagonal socket screw	30+3 PCS
C		6x28mm	Hexagonal socket screw	32+3 PCS
D		6x30mm	Hexagonal socket screw	2 PCS
E		m4x12mm	Flat head cross screw	8+1 PCS
F			Allen wrench S4	1 PC
G			Hinge	2 PCS
H			Caster	1 PC
I		6x15mm	Wing screw	6 PCS


Step 1

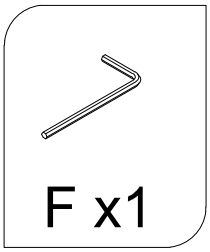


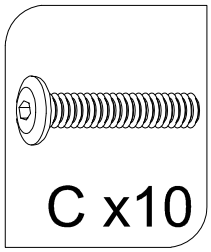


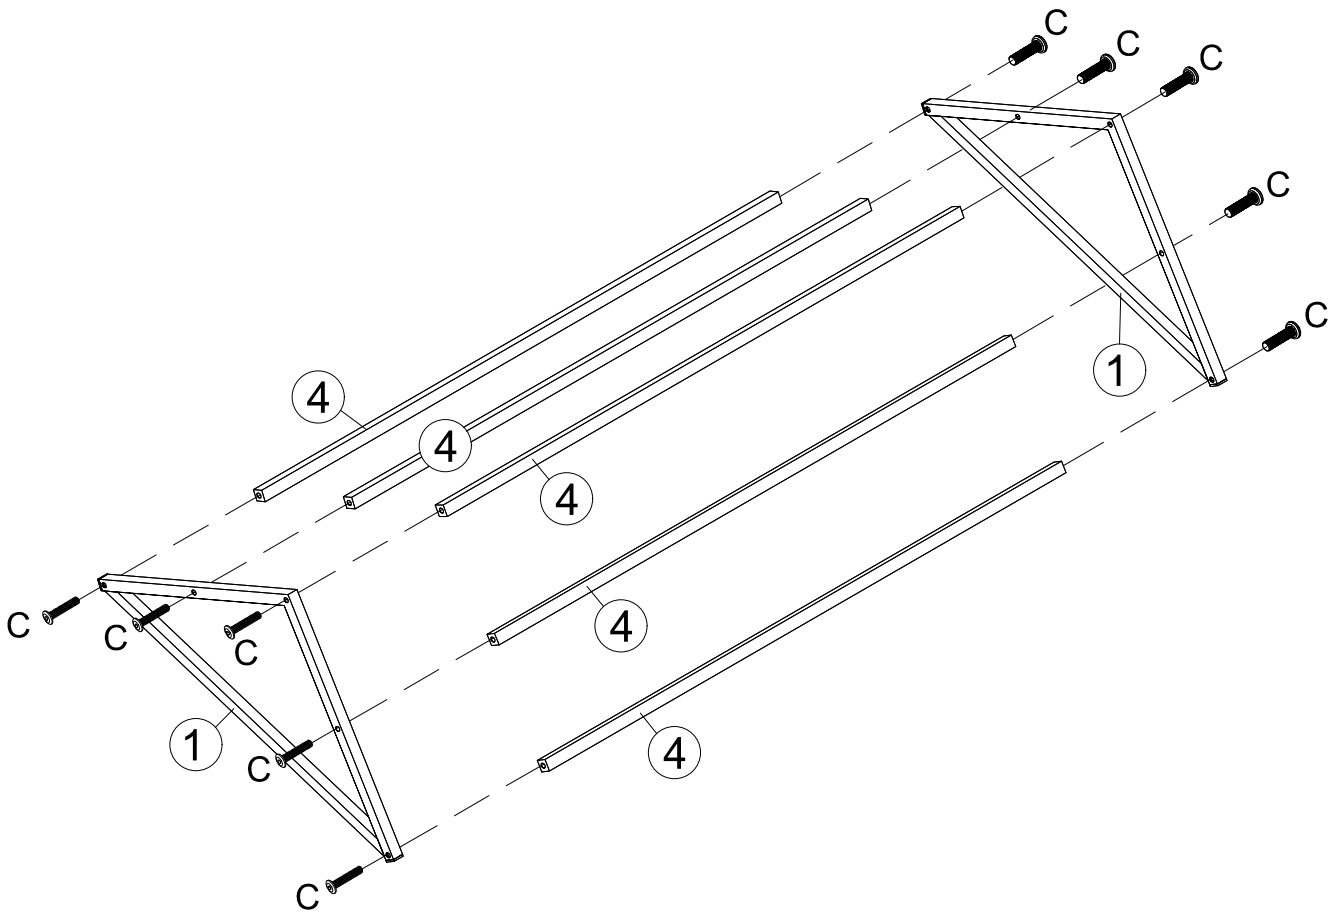


Step 2

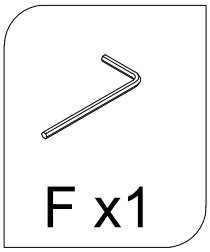


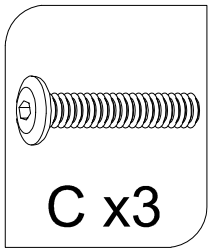

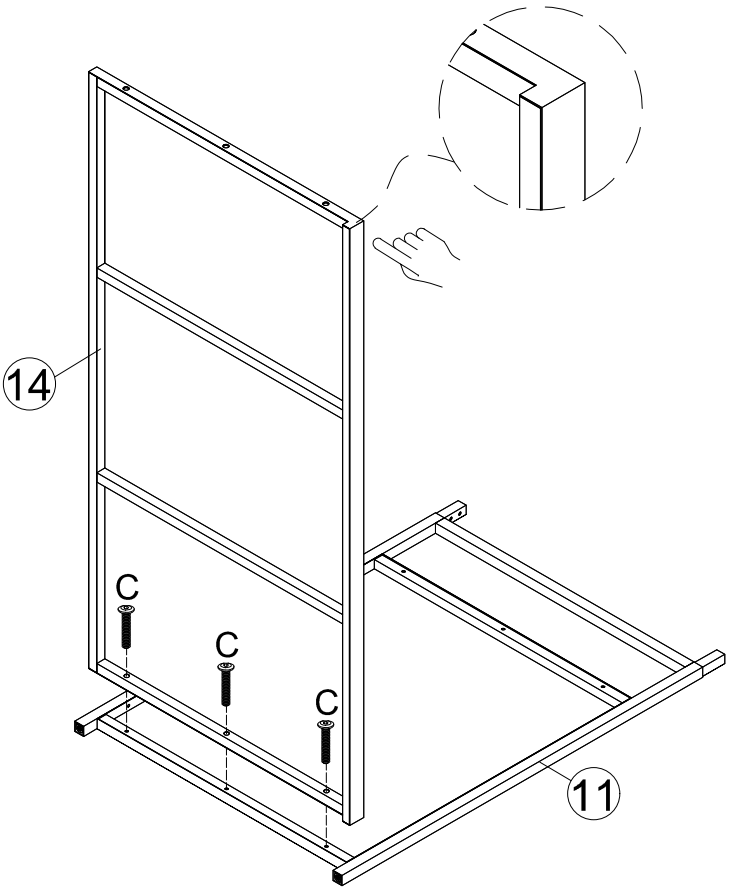



Step 3

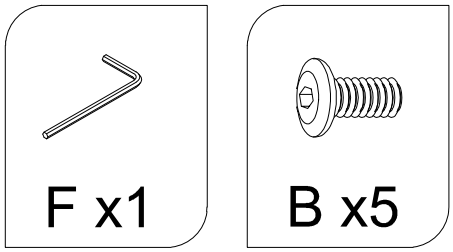


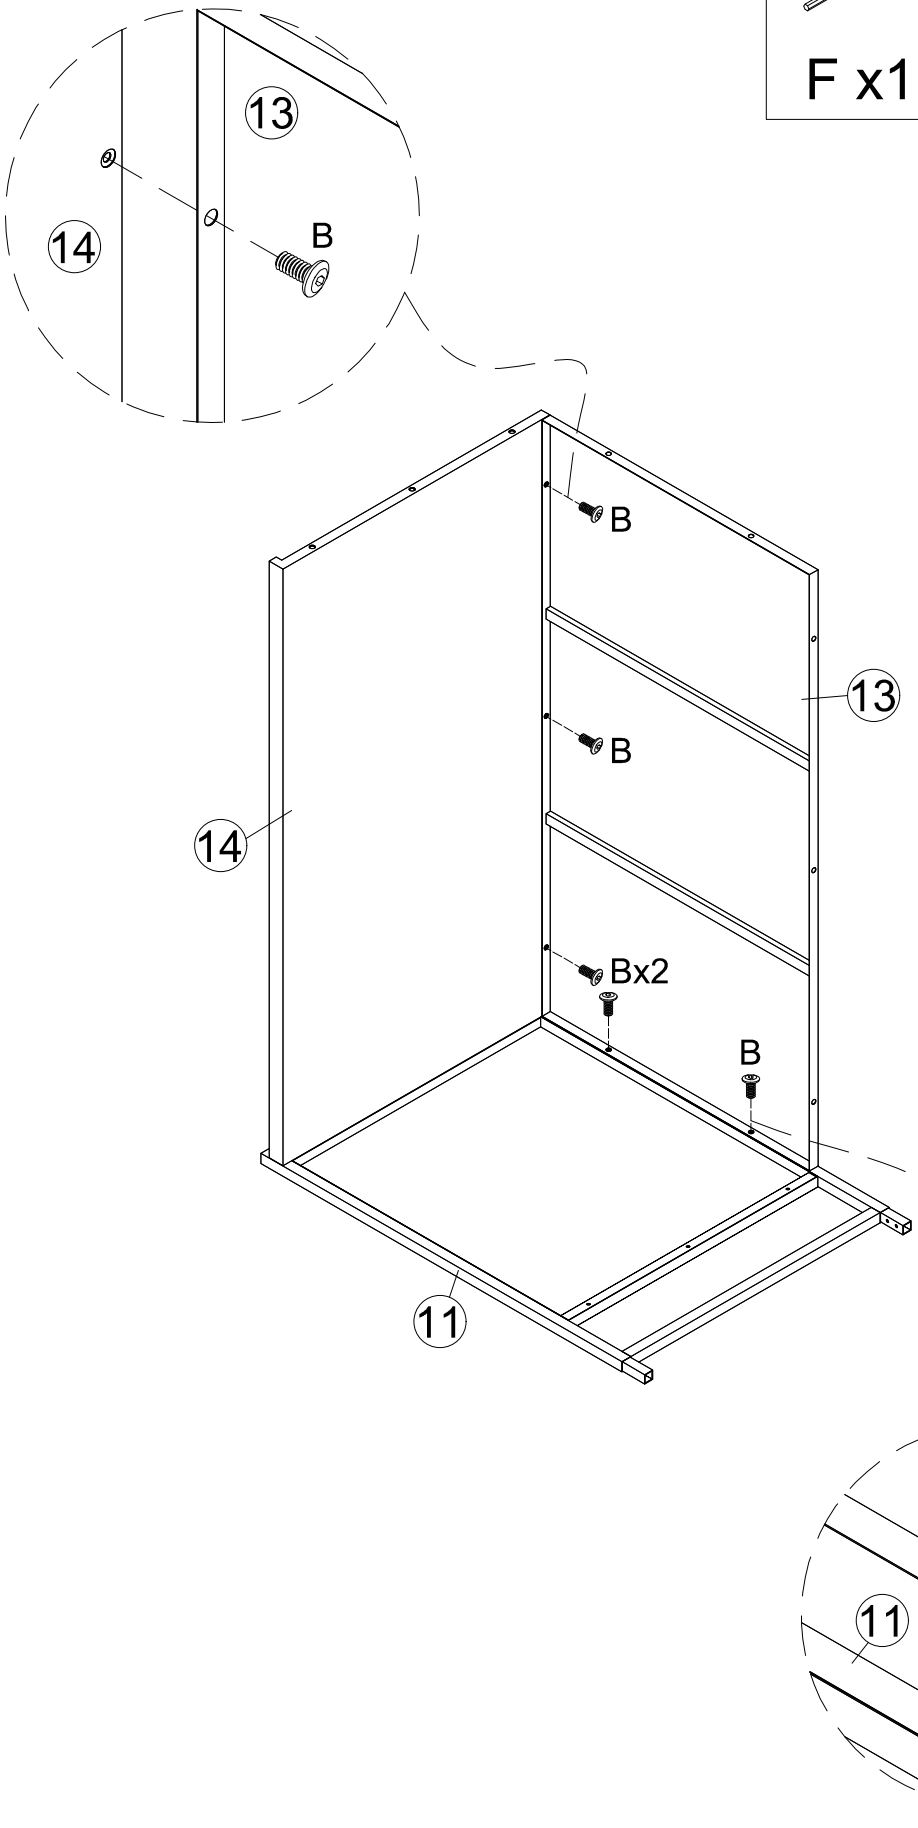


Step 4

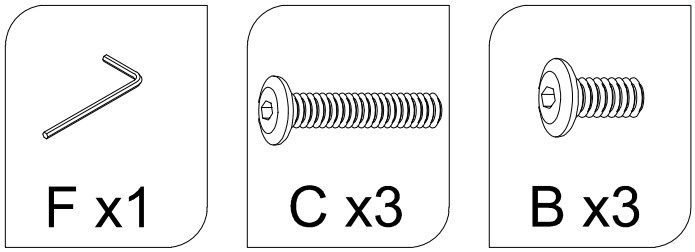


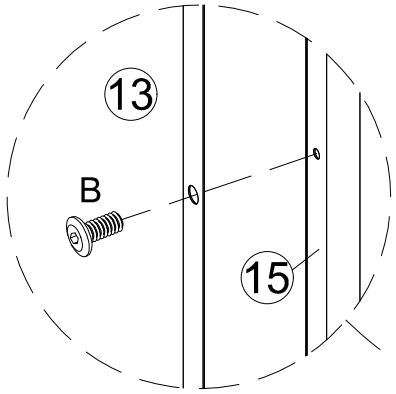


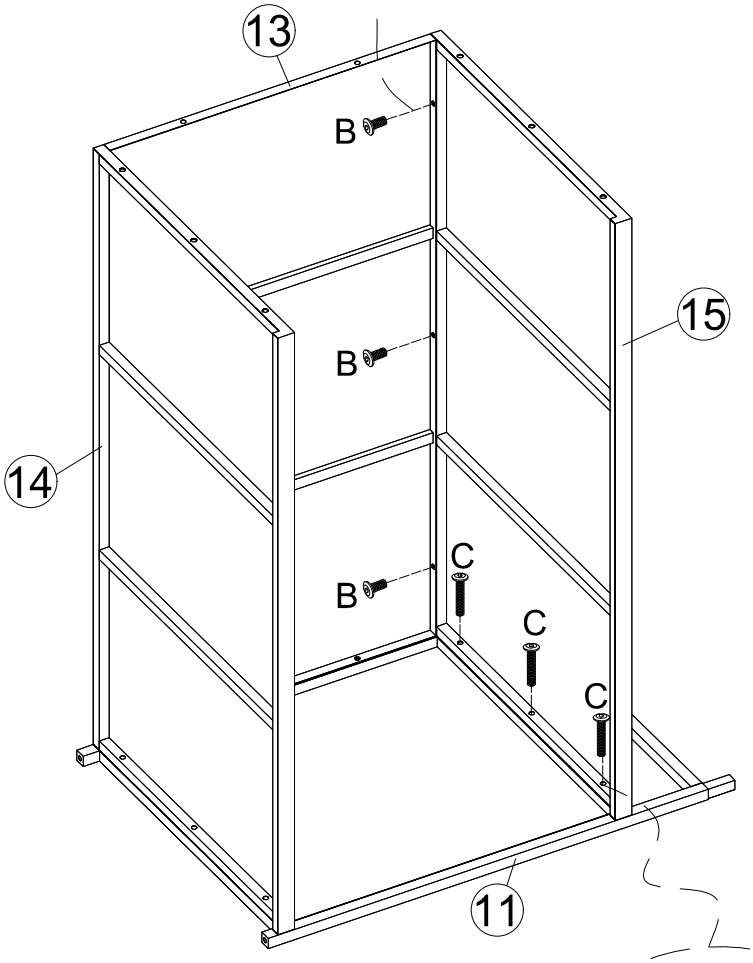

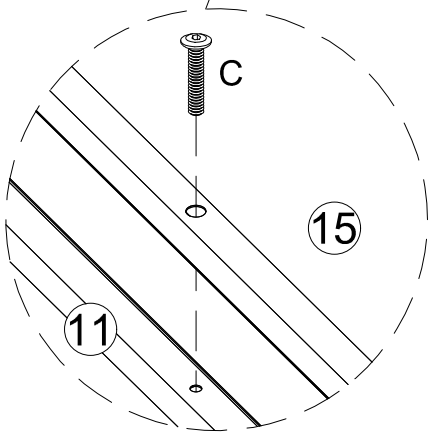



Step 5

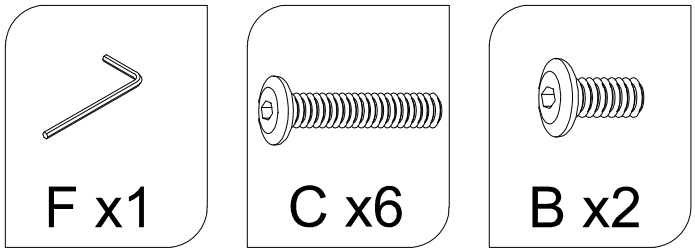

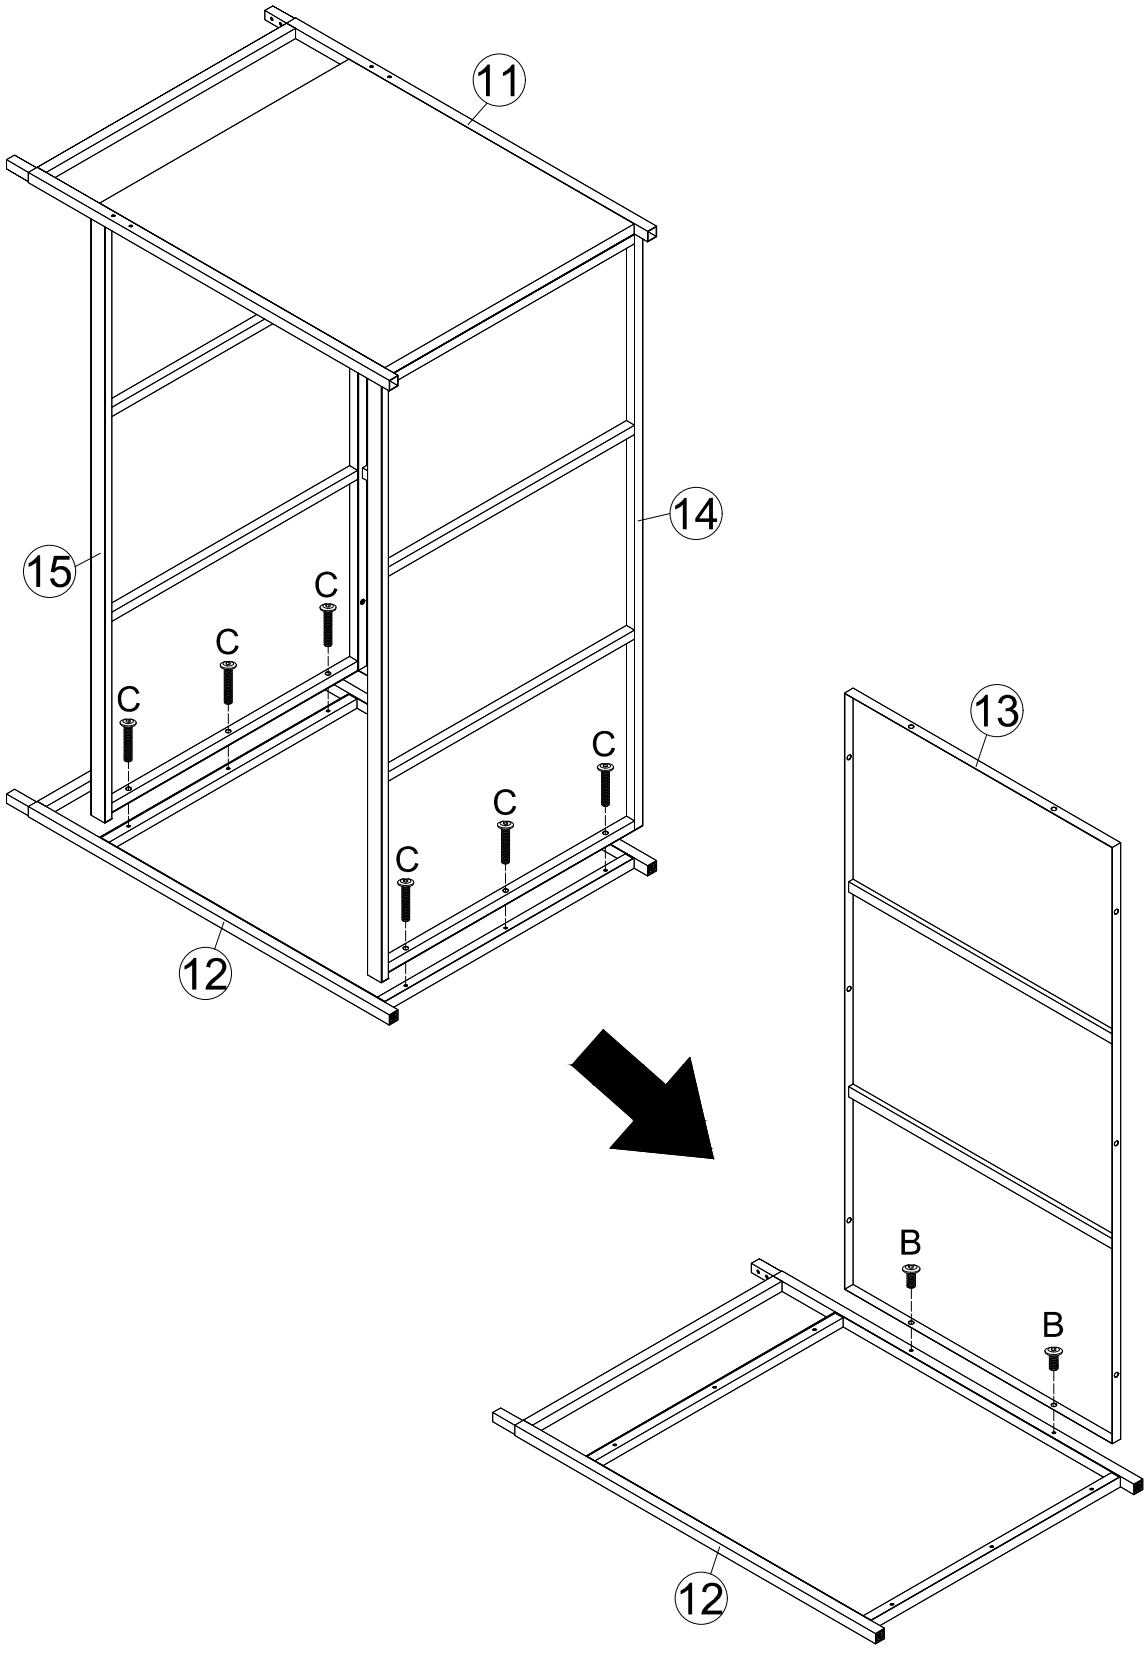



Step 6

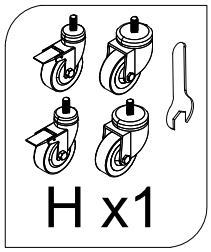

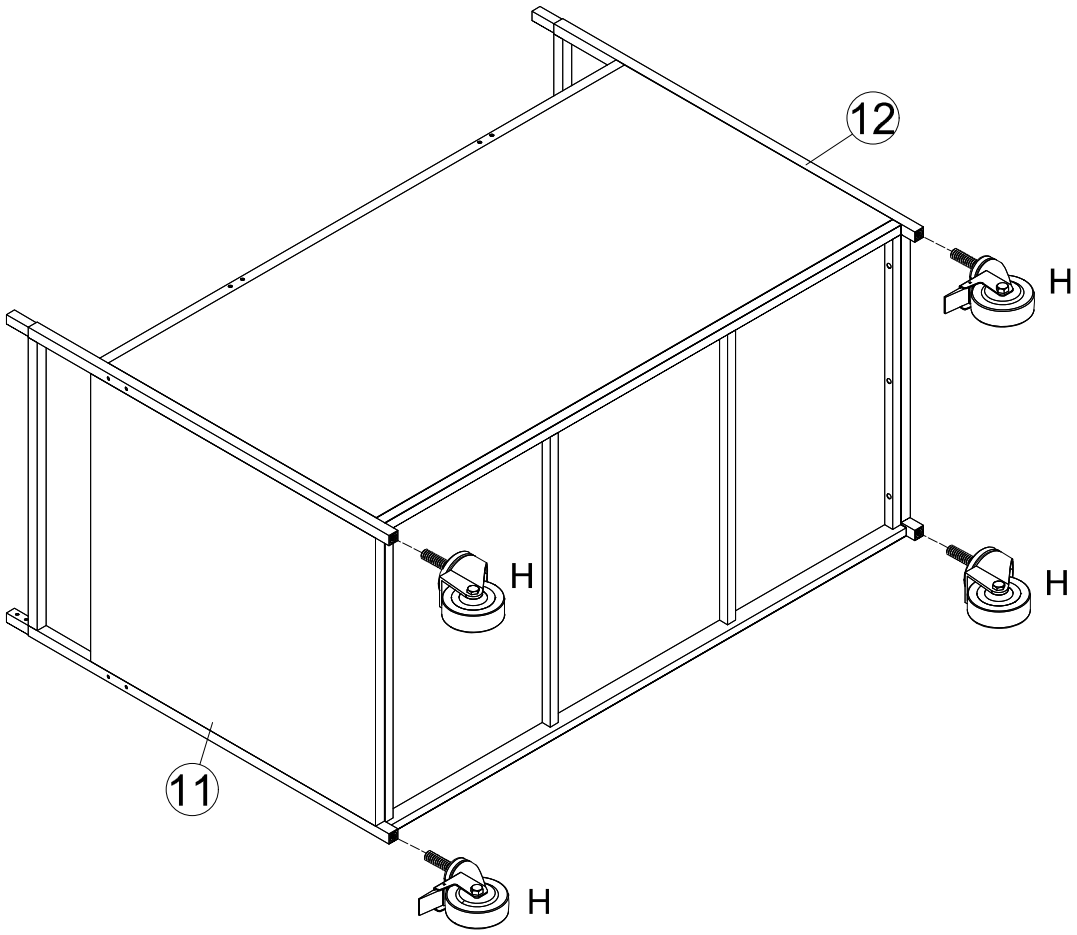



Step 7

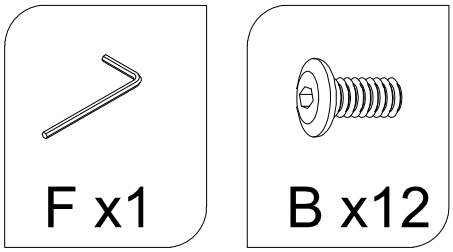

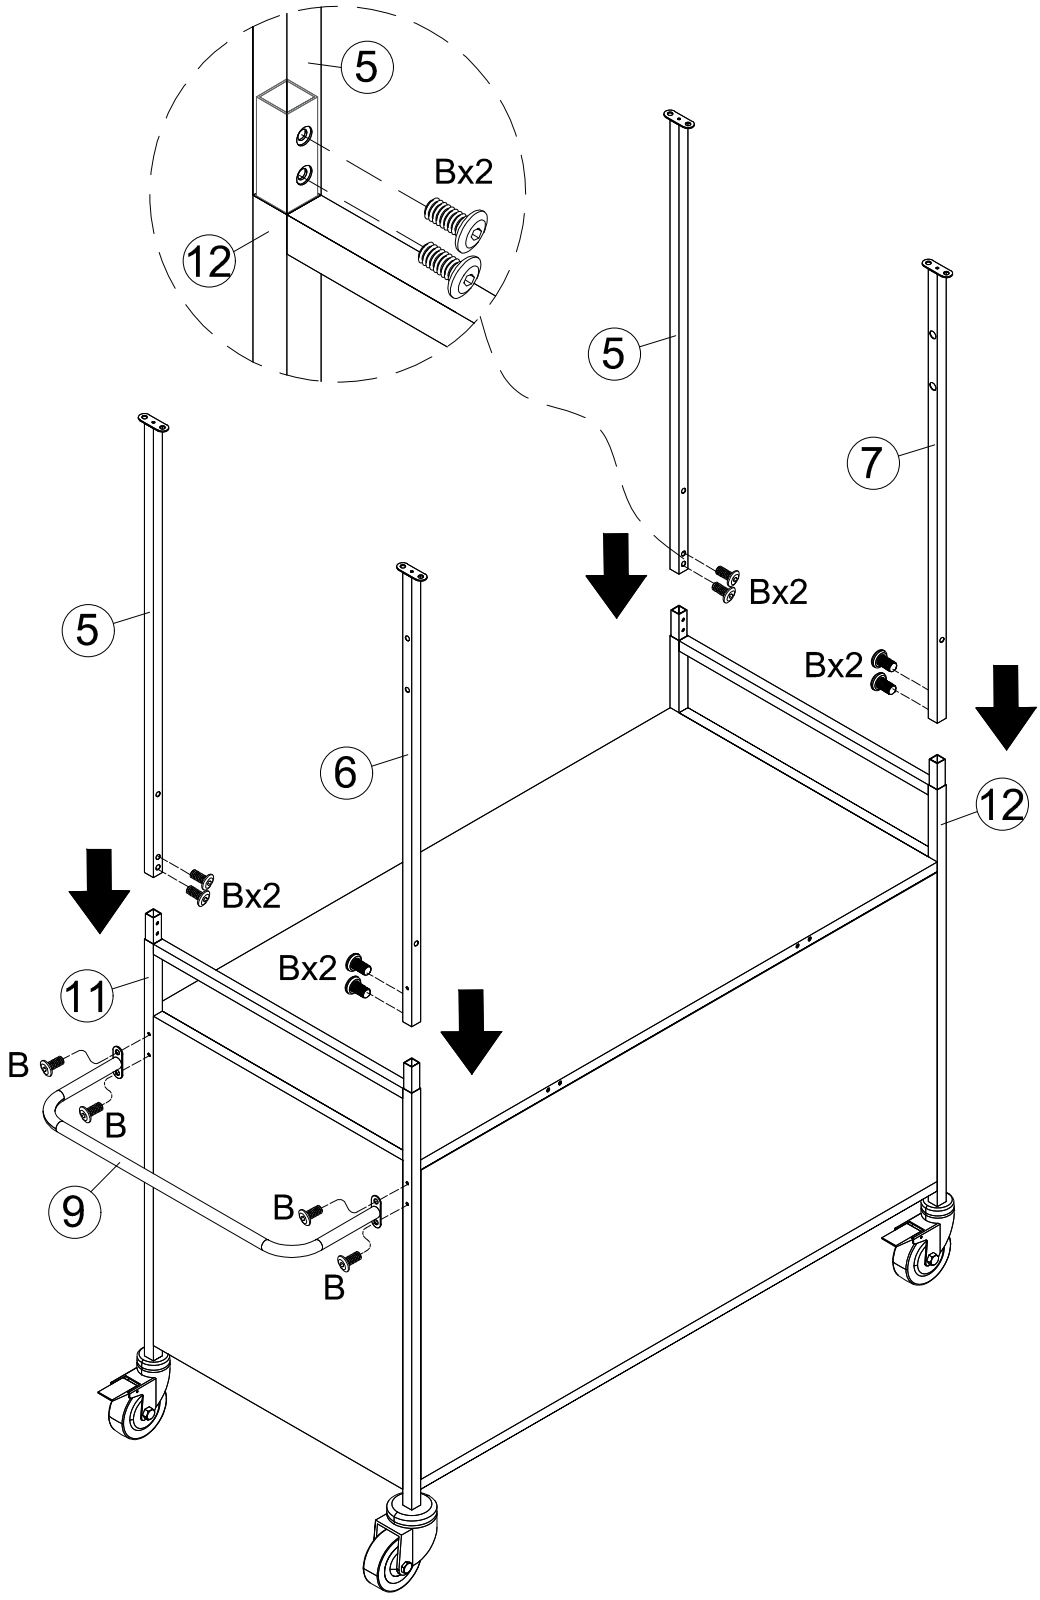



Step 8

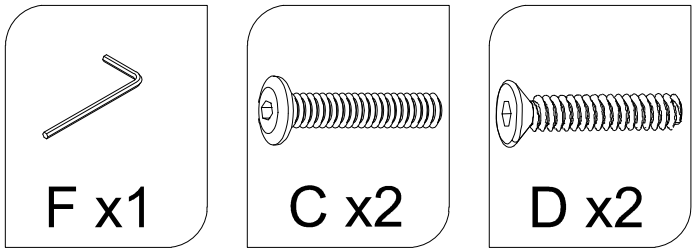

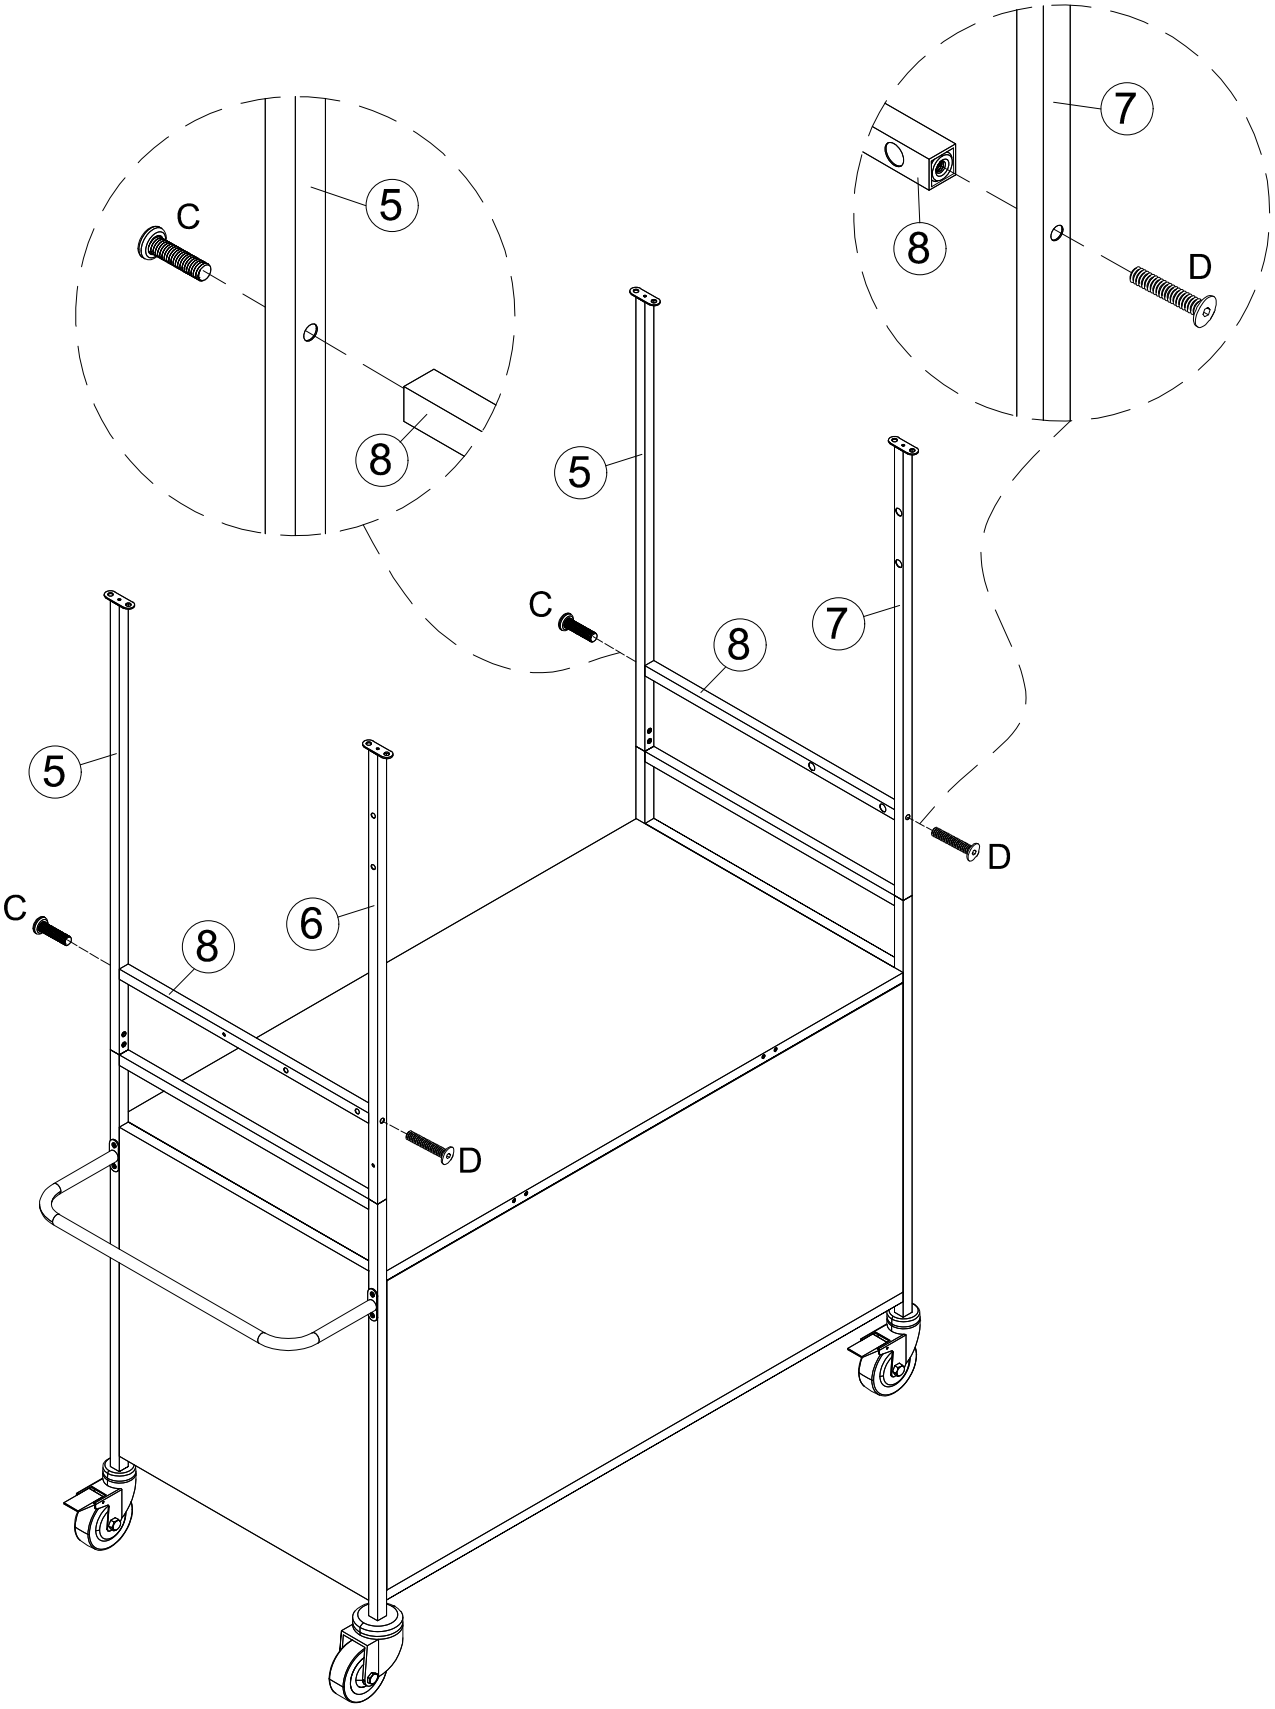



Step 9

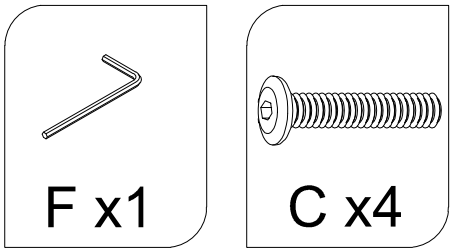

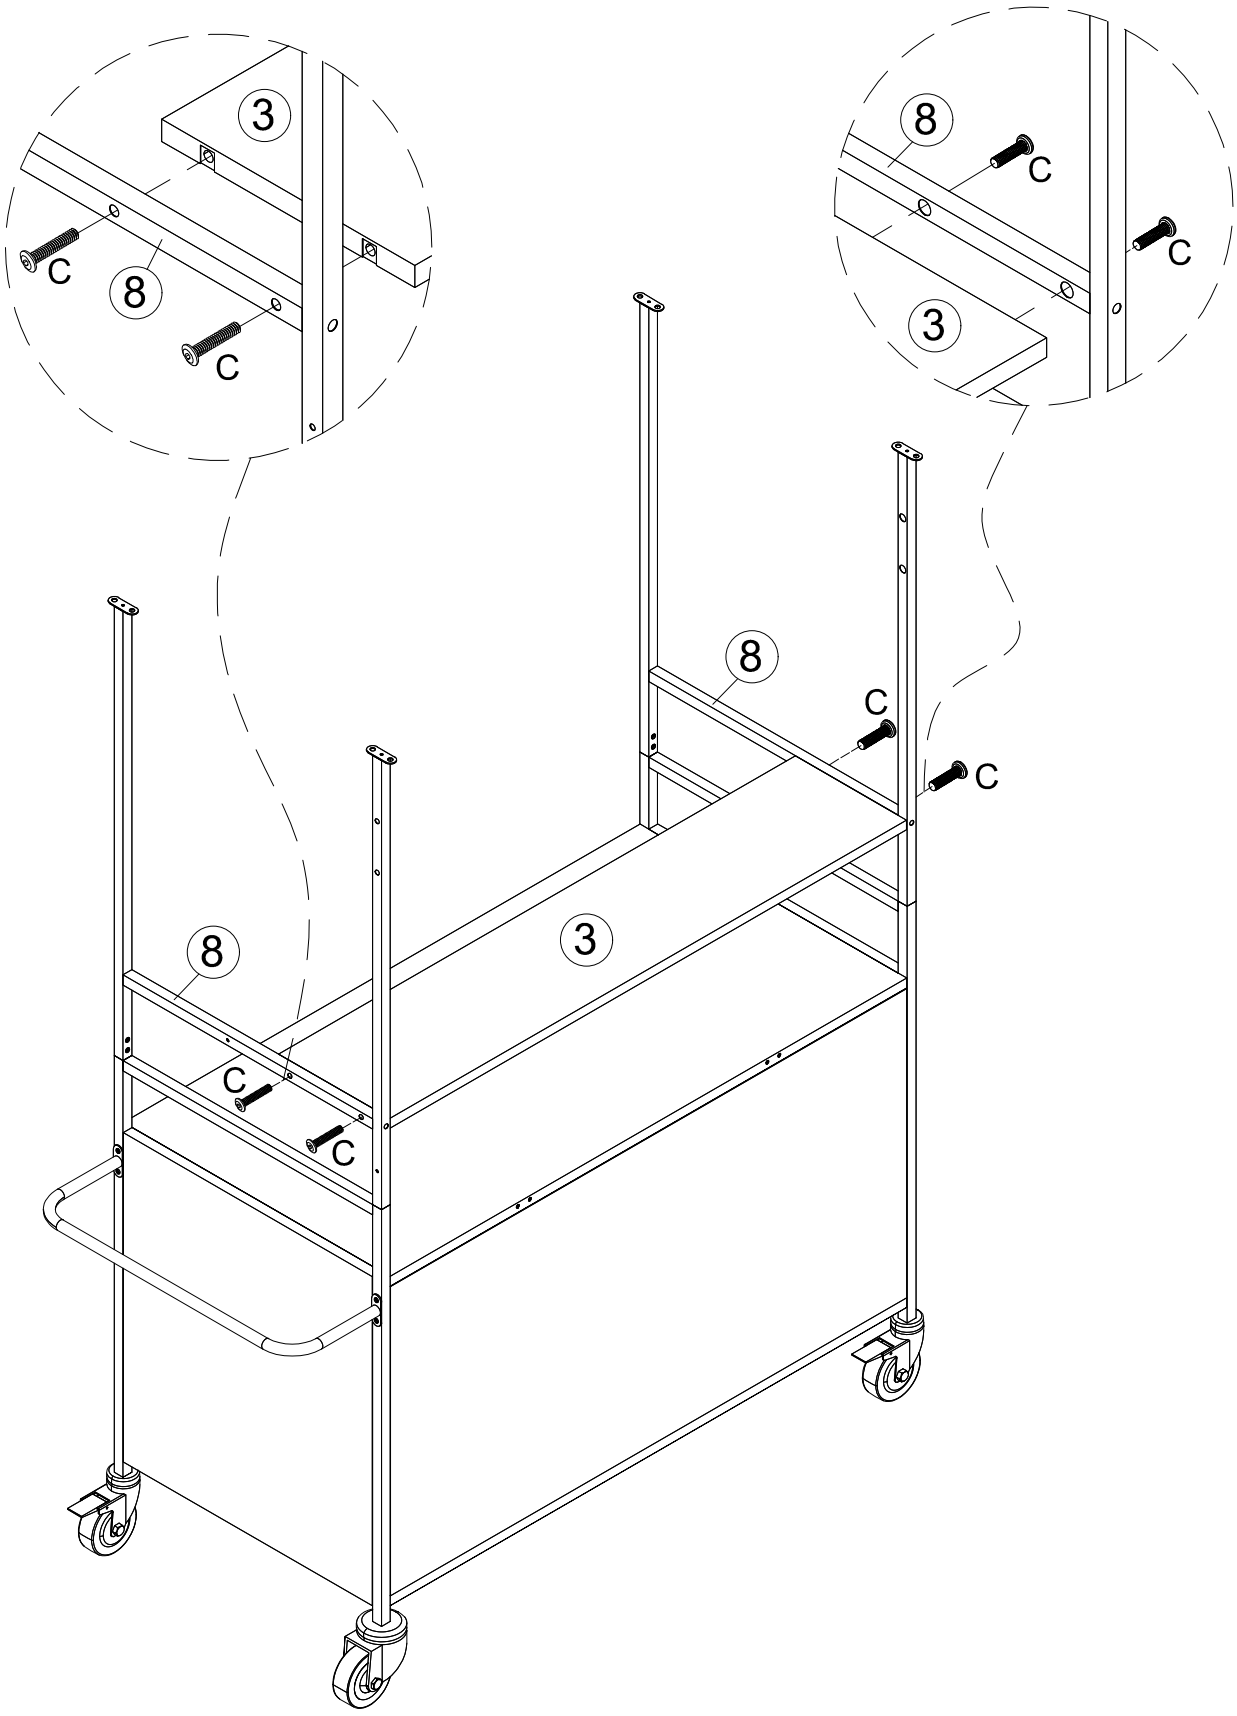



Step 10

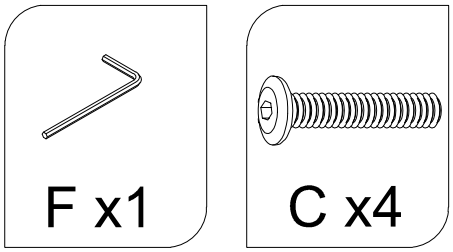

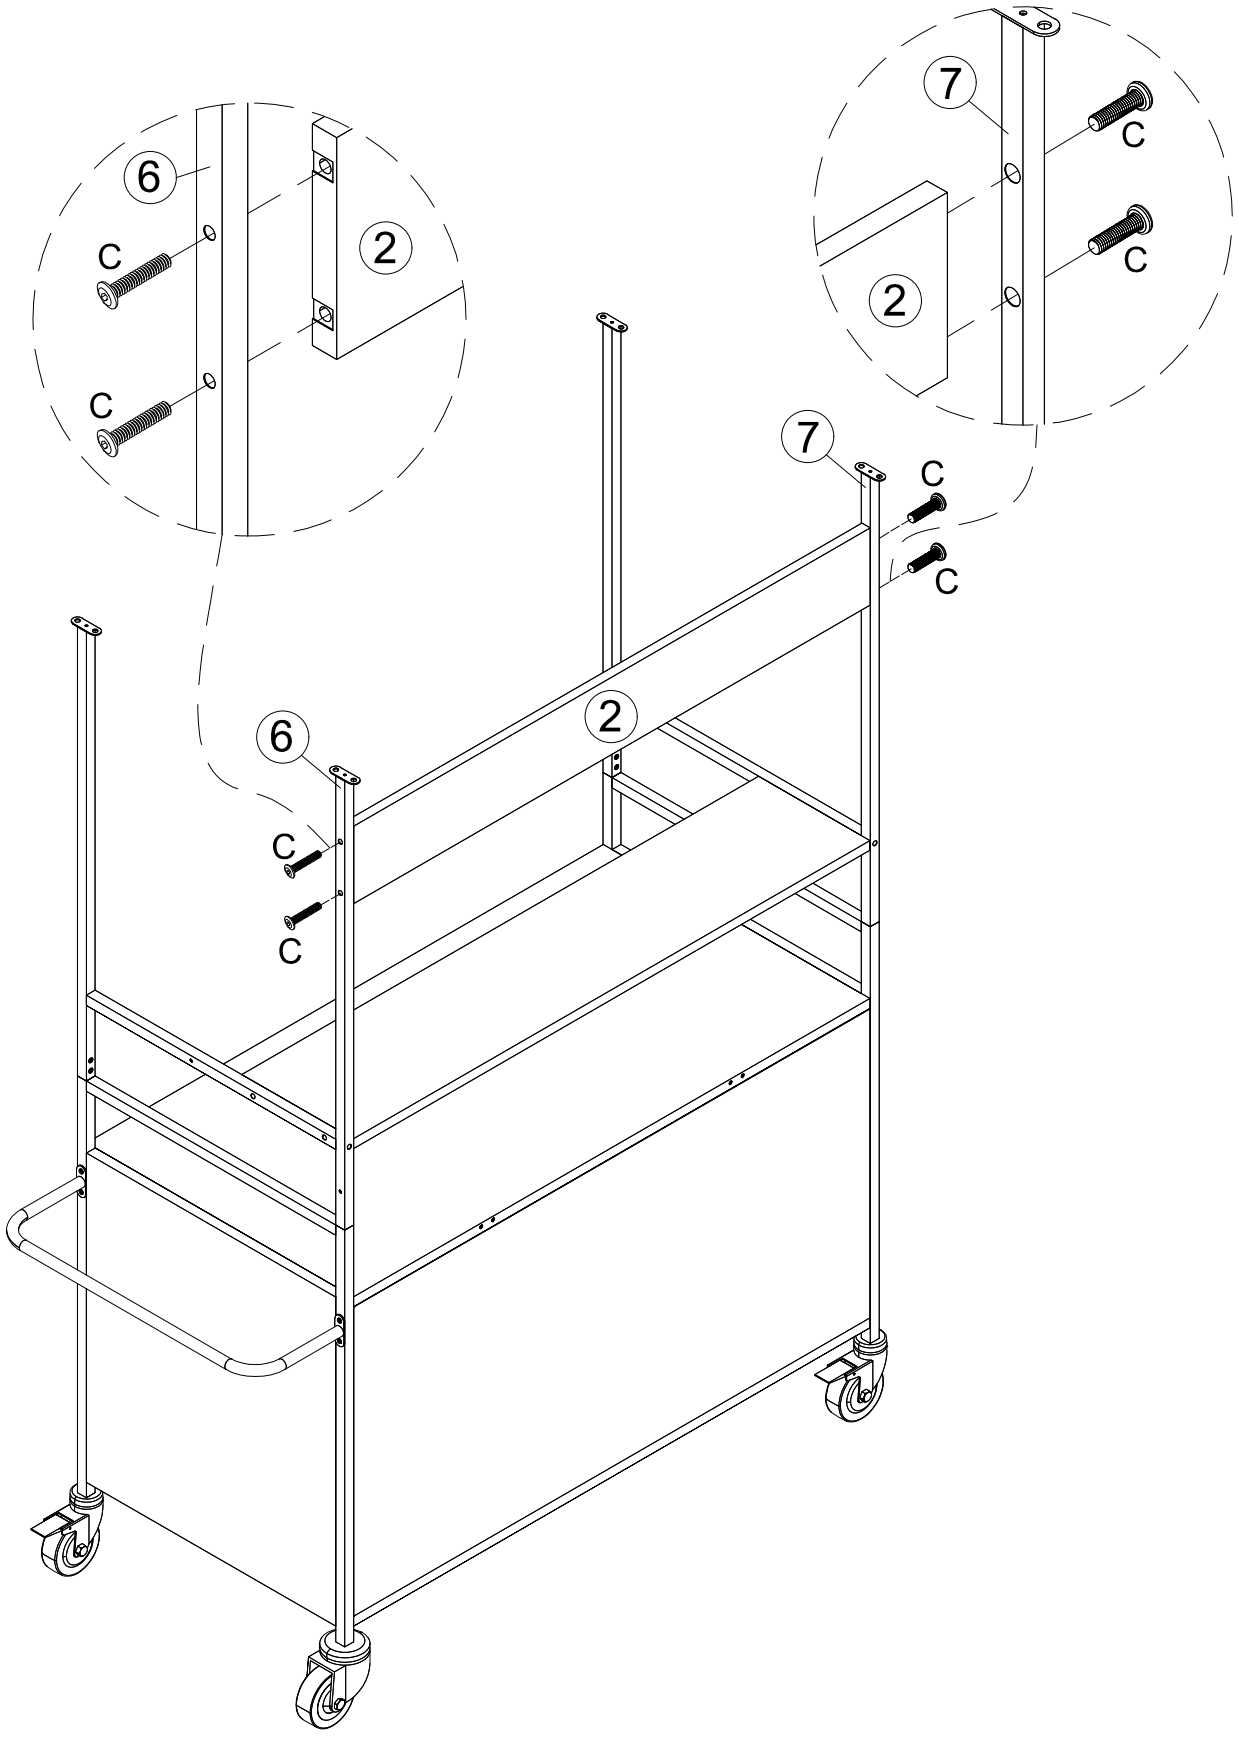


Step 11

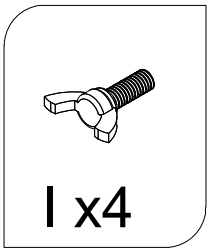


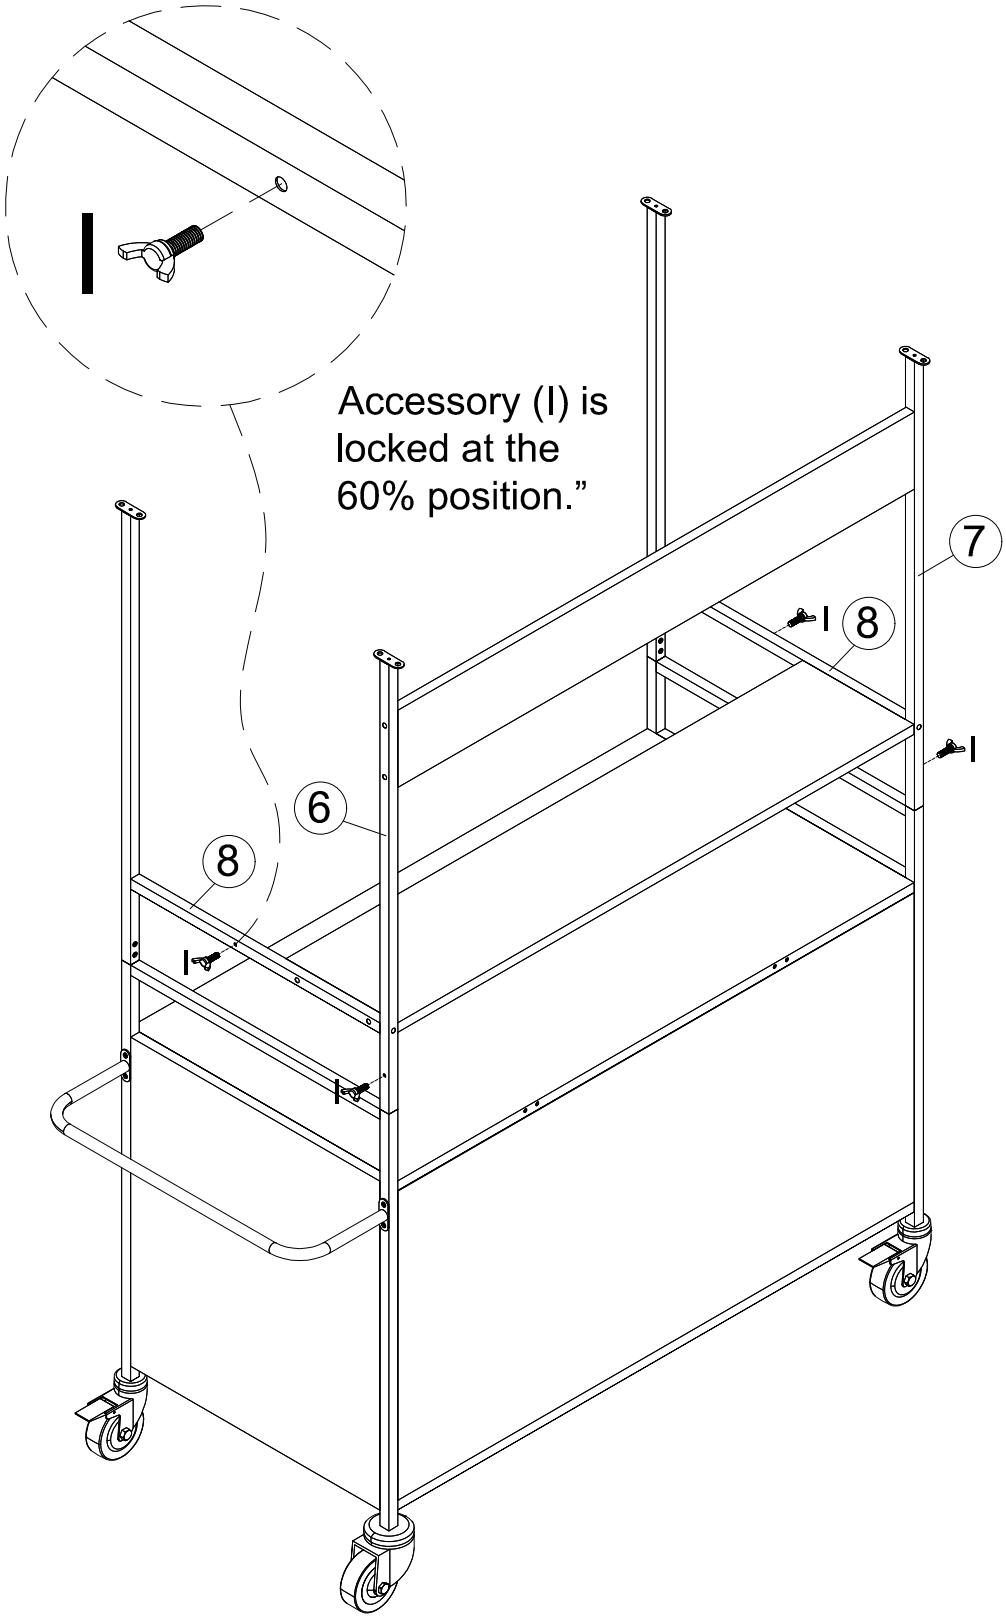


Step 12

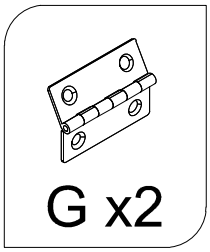


G x2

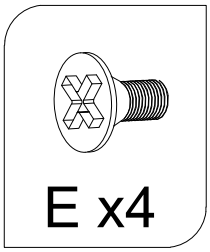


E x4

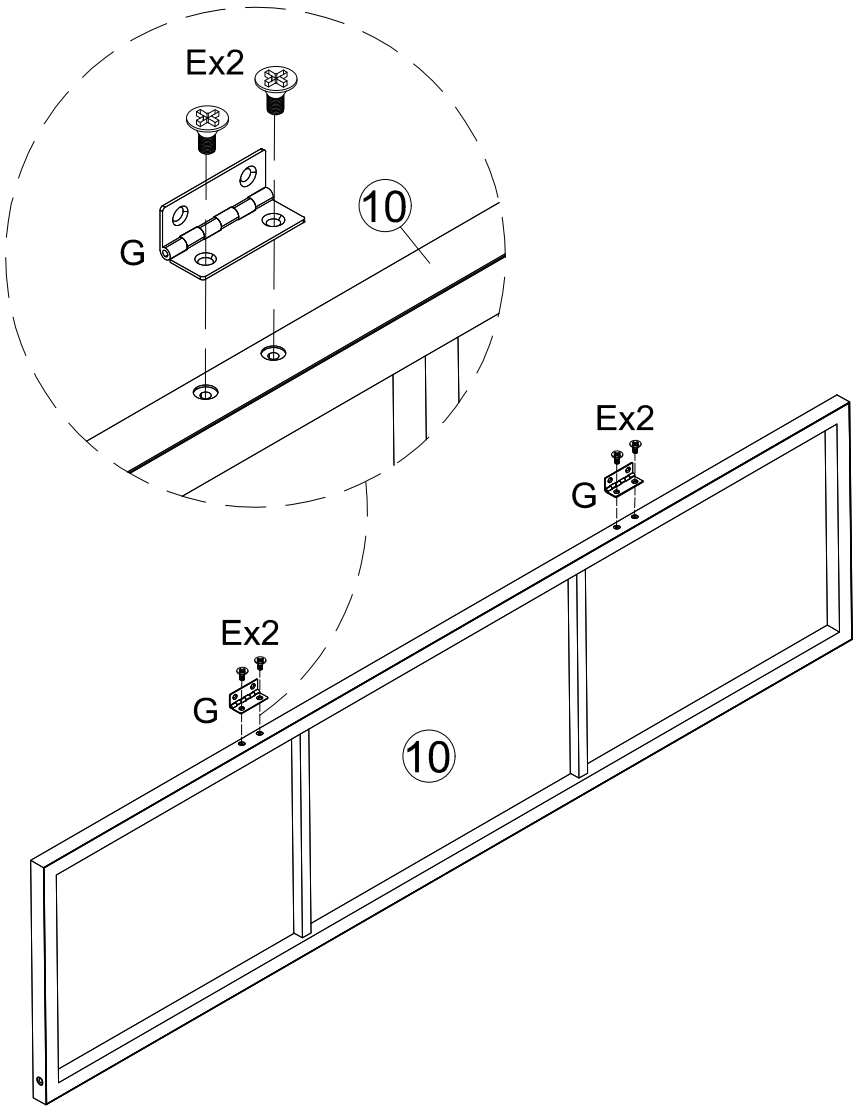


Step 13

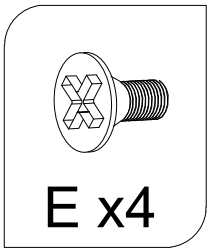


This step does not involve side-tilt assembly. This view is intended to better illustrate the assembly content.

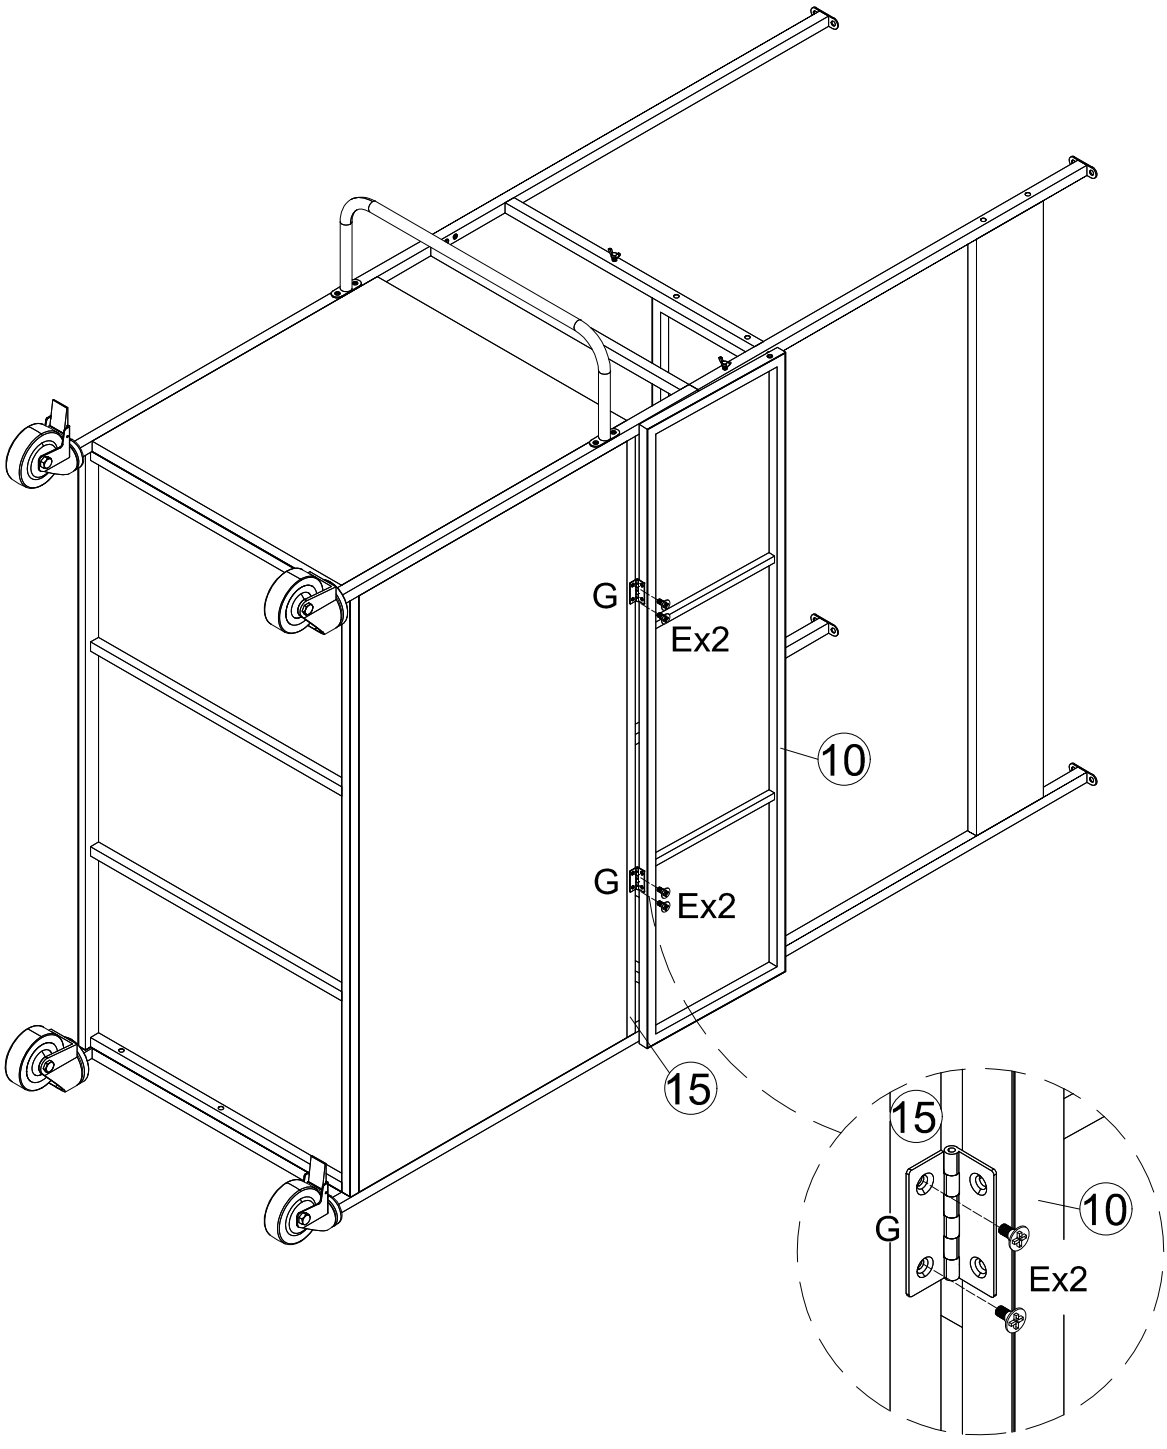


Step 14

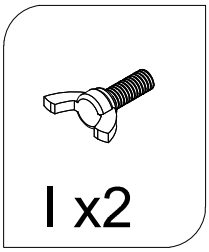


Connect part 16 and part 10 together, then attach the assembled unit onto accessory (I) by hanging.

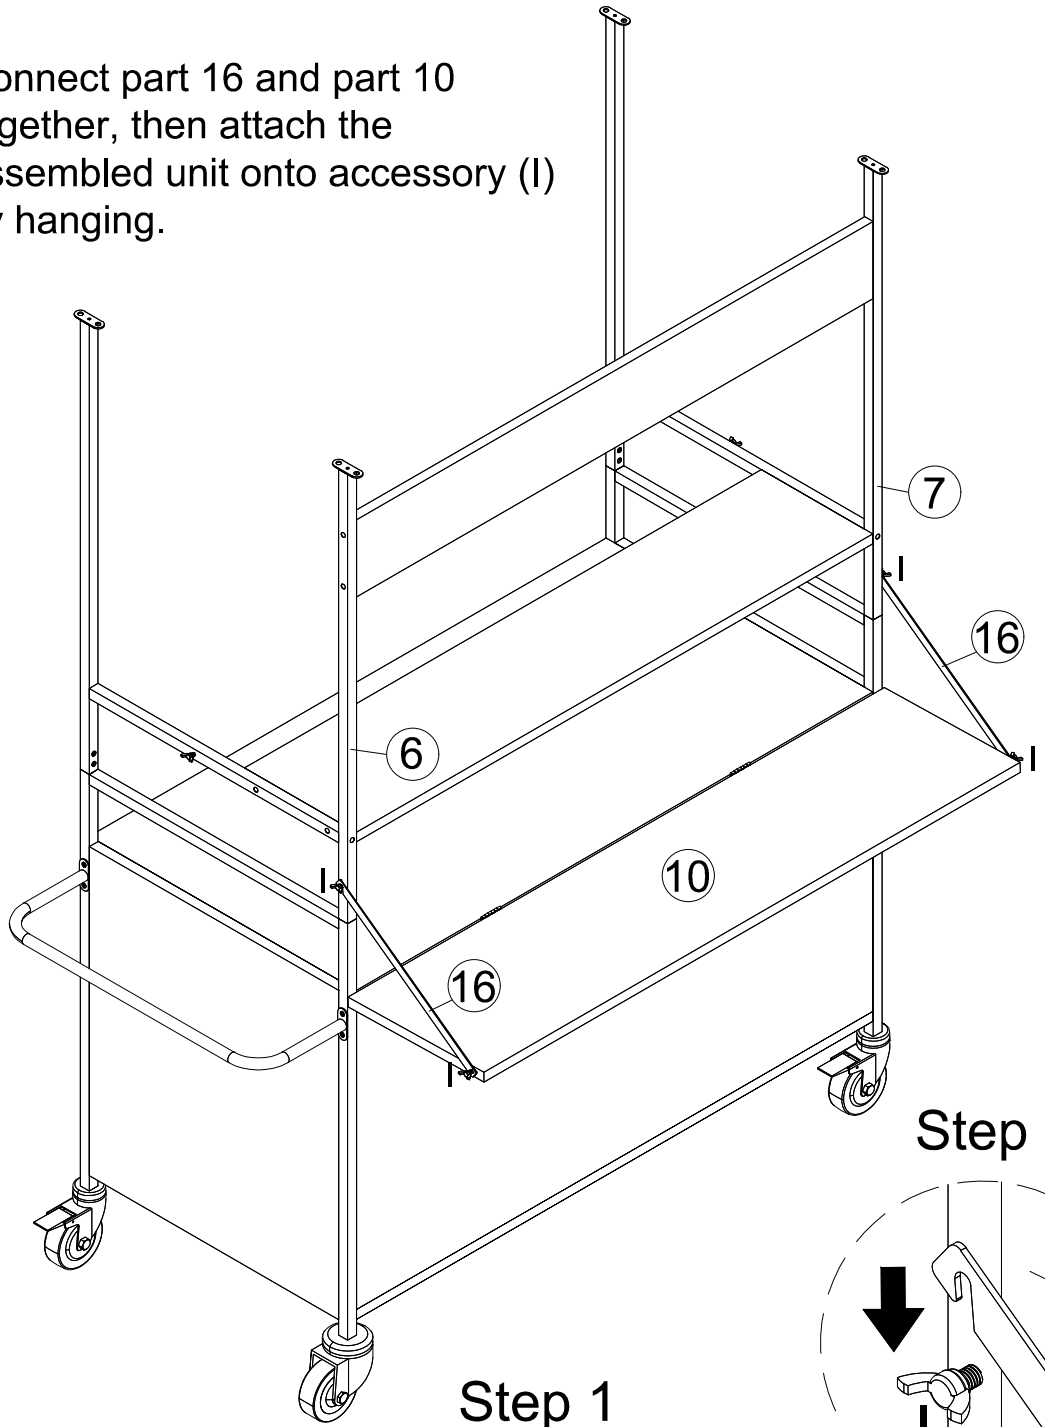

Step 2

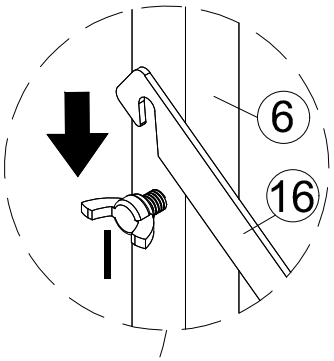


Step 1

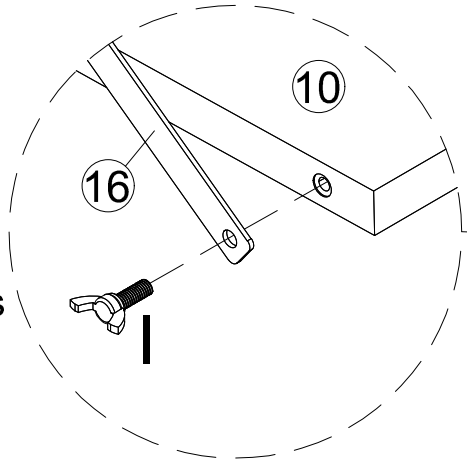

Accessory (I) is locked at the 60% position.


Step 14 -1

Part 10 in unfolded position.

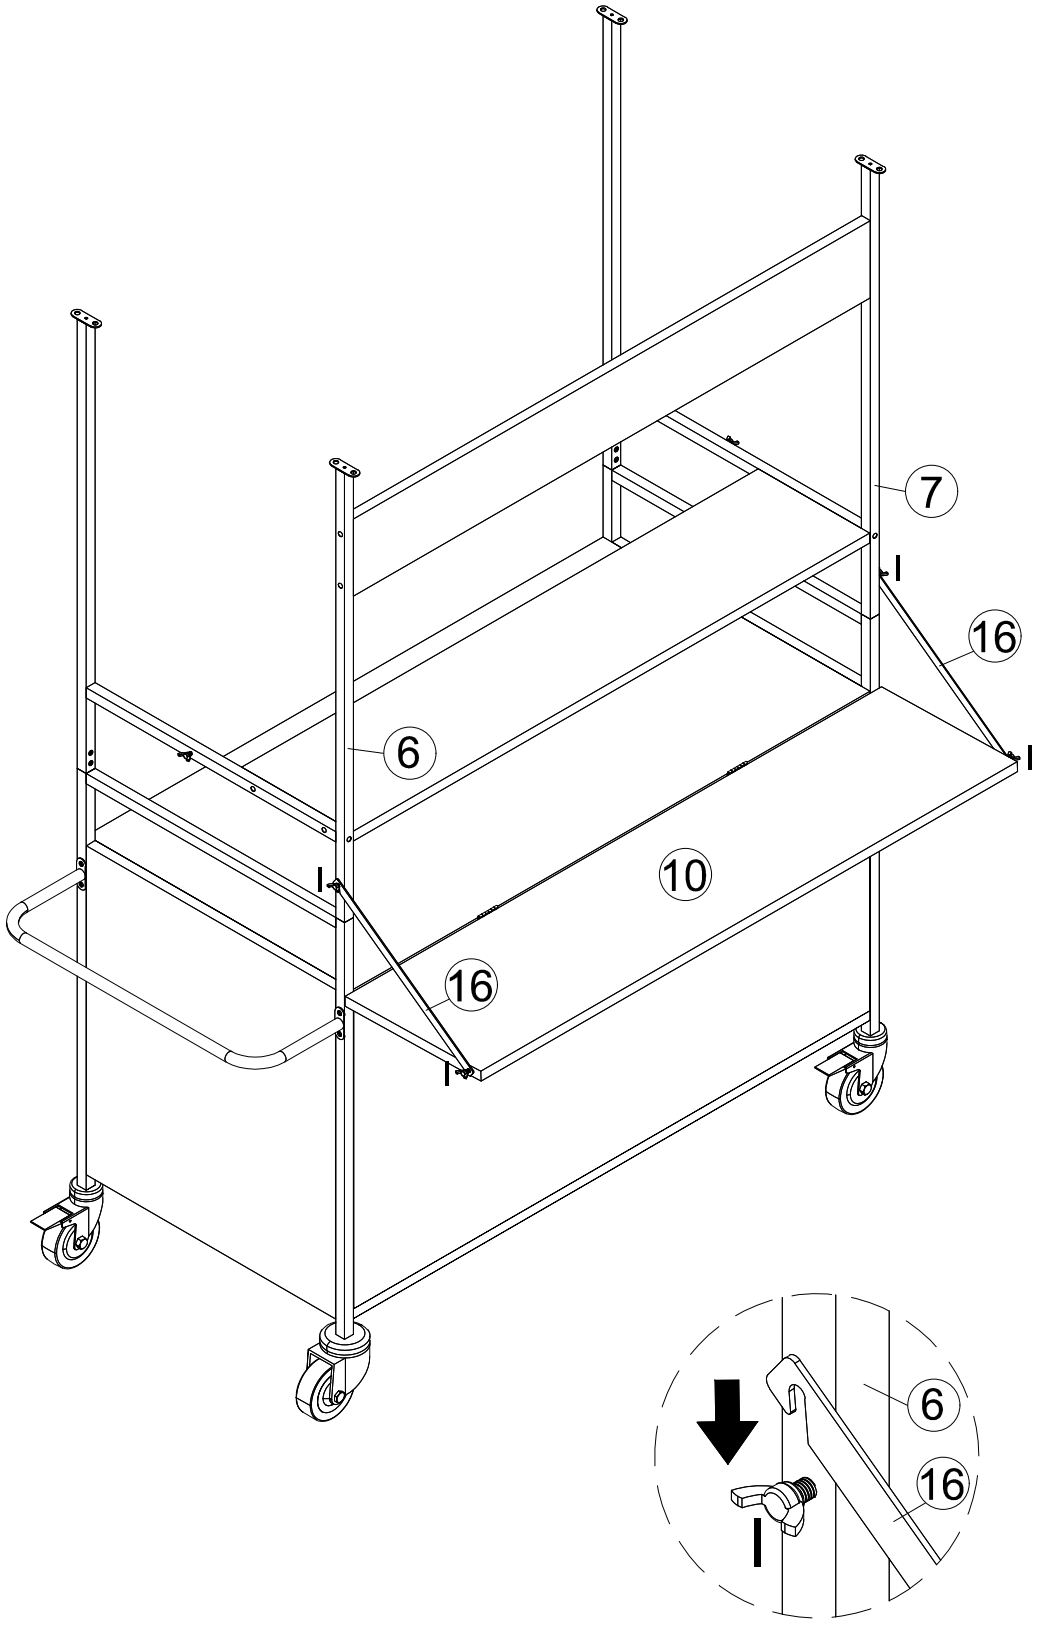


Step 14 -2

Part 10 in retracted position

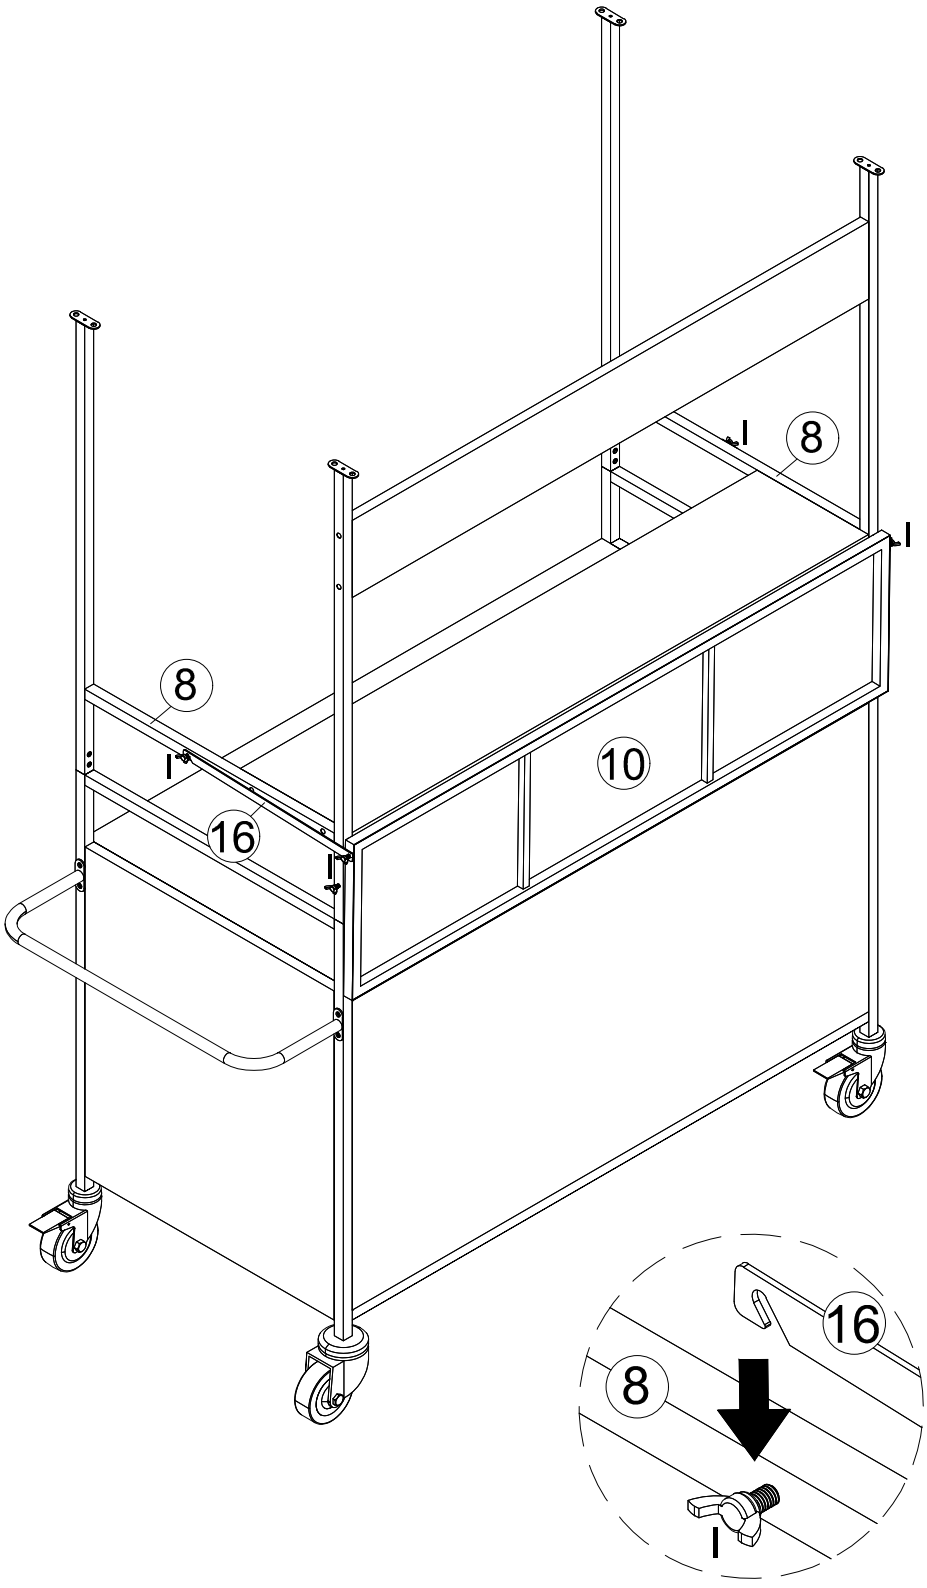


Step 15

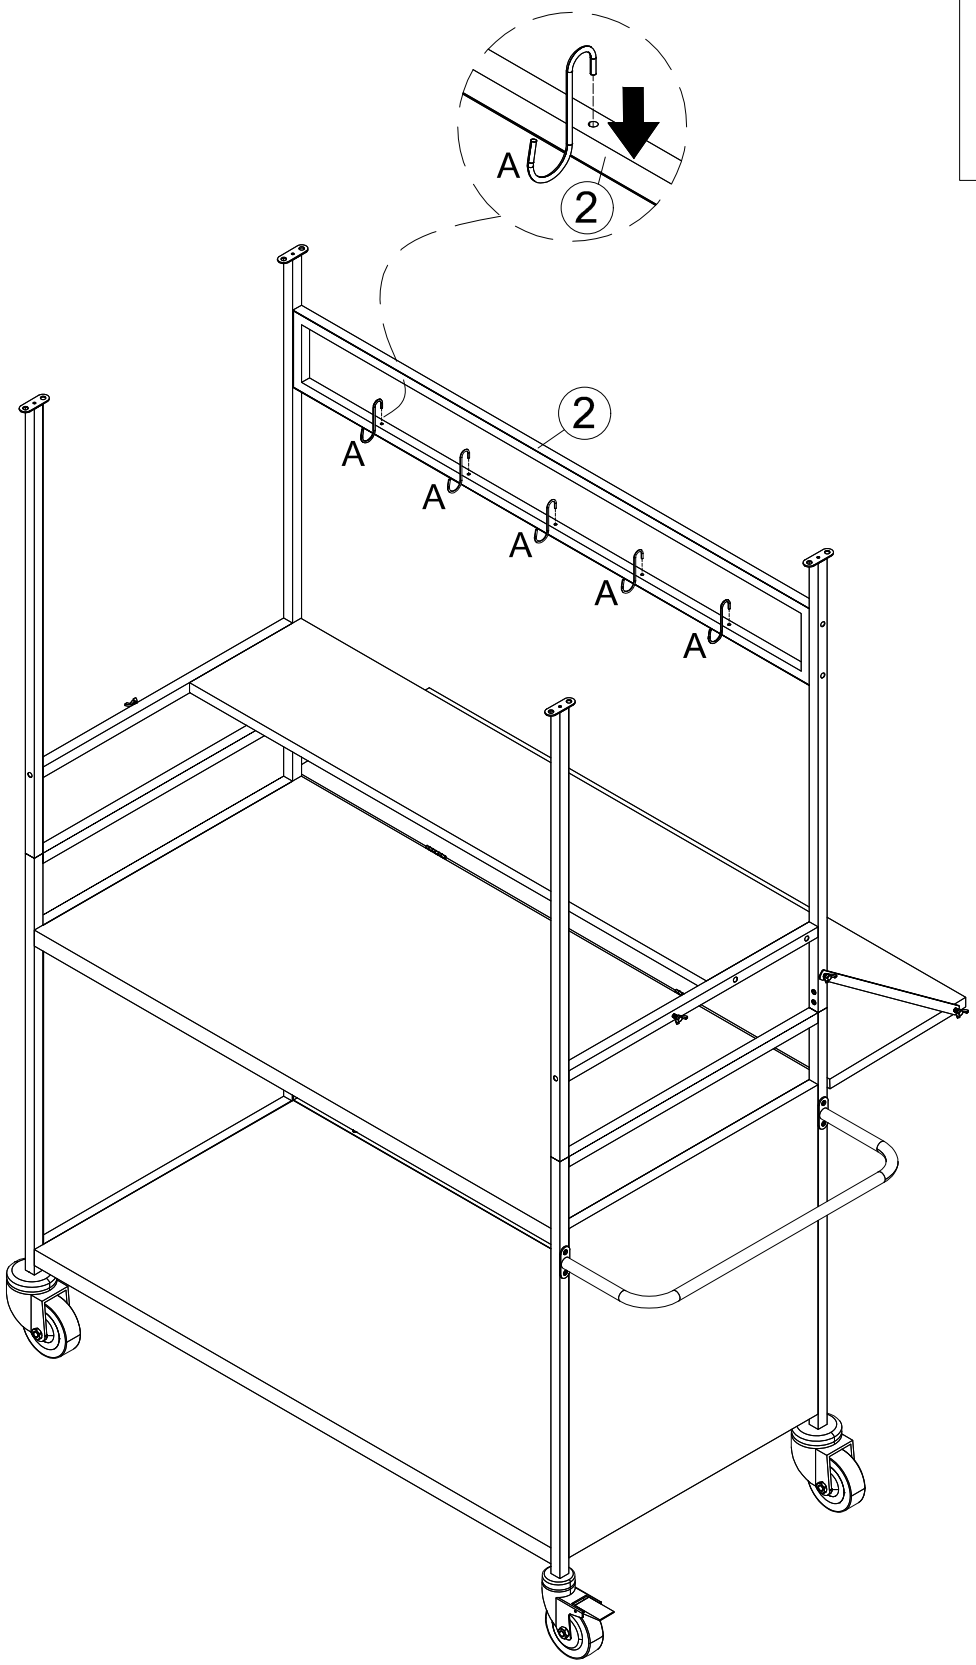


A x5

Step 16




F x1




B x8

Tighten all loose screws fully.

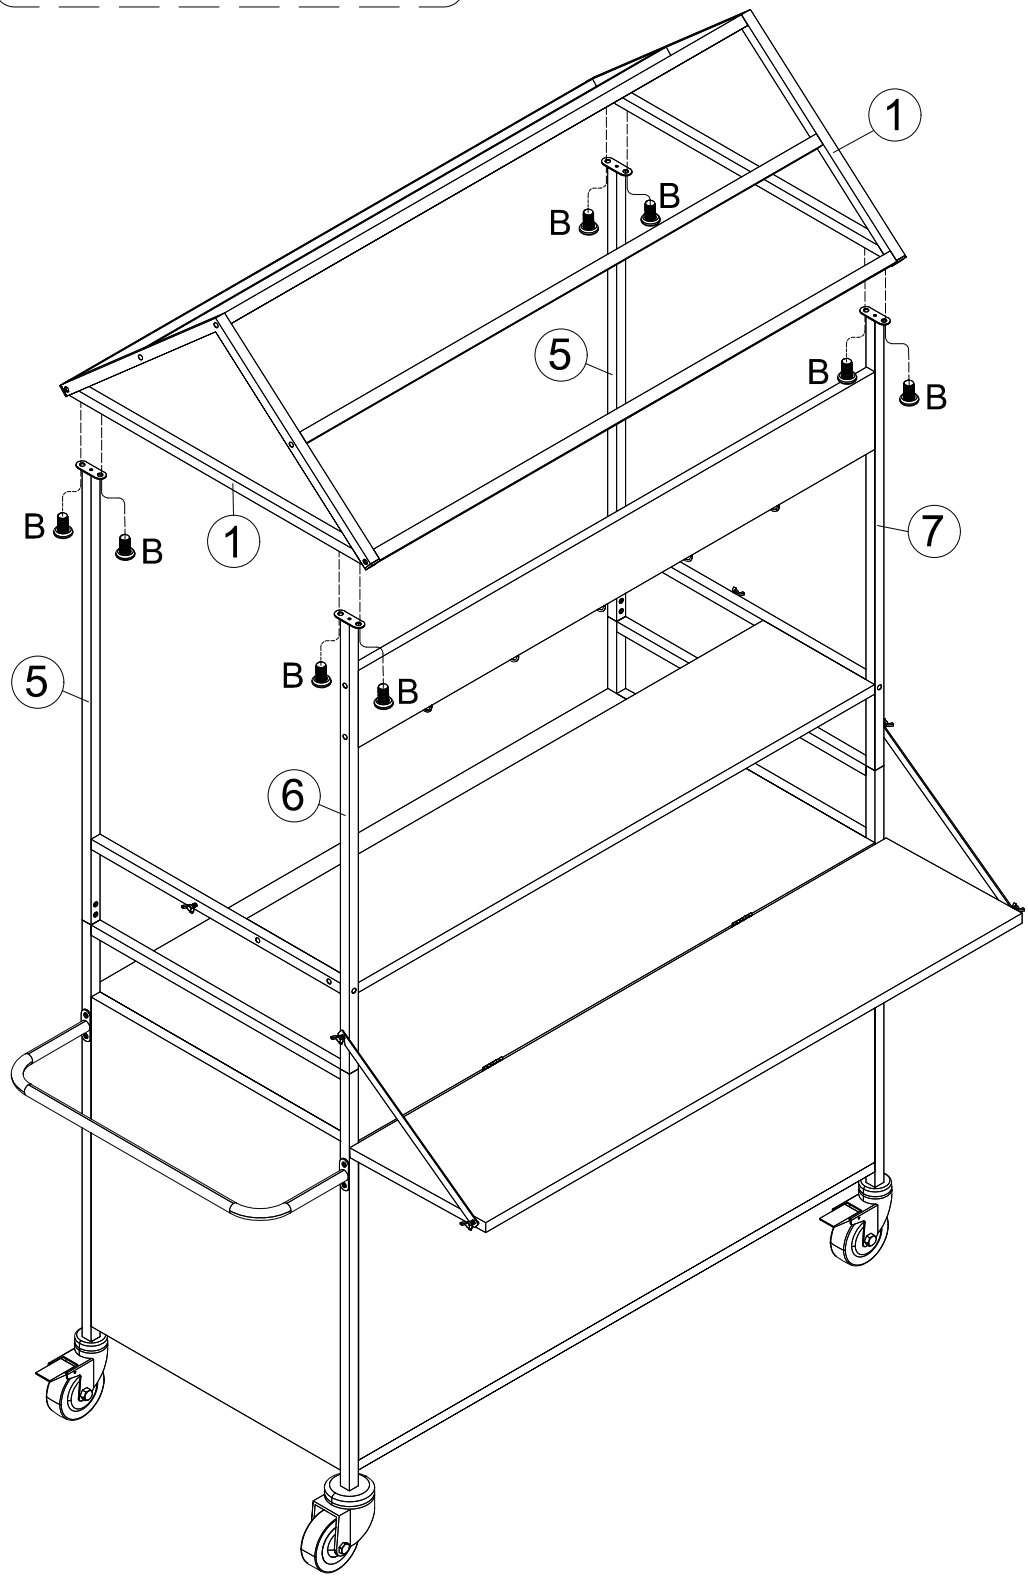

Step 17

1. Position part 17 over the top iron frame.
2. Secure by wrapping the internal hook-and-loop fastener around part 4.
3. Fasten the four corner ropes to the iron frame.
4. Adjust to the desired configuration.

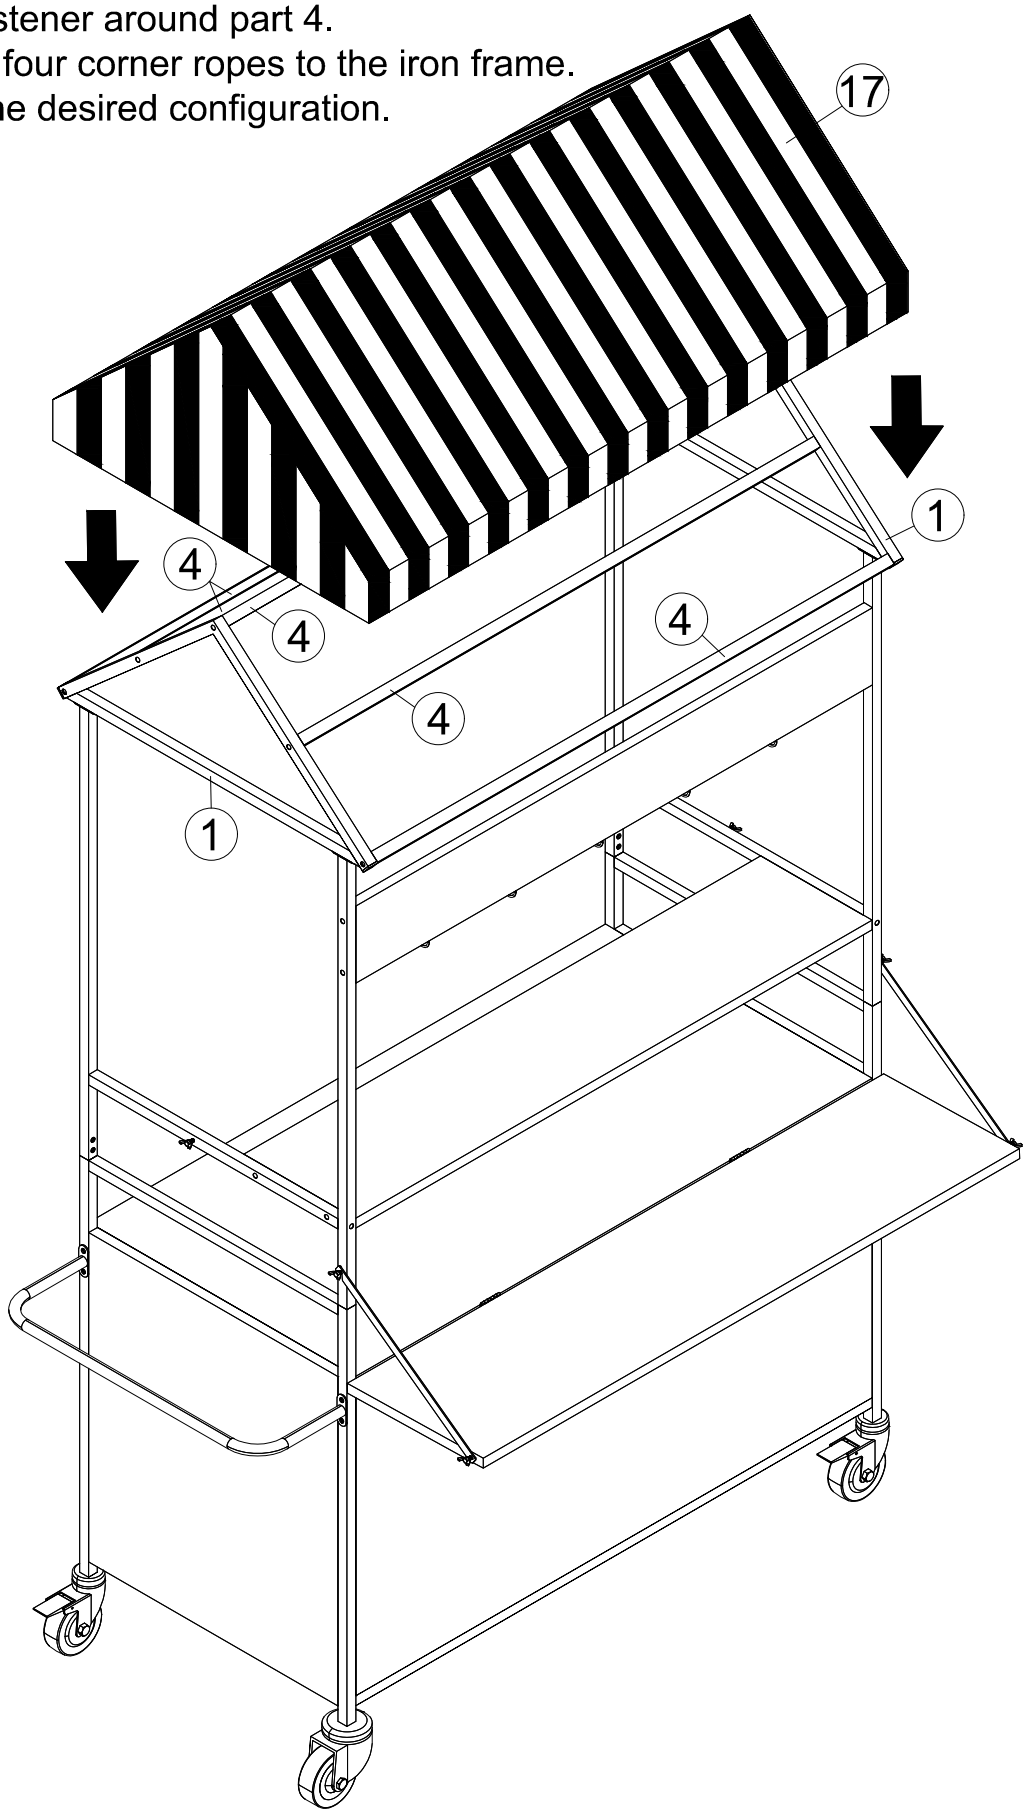

Step 18

