



Two shoe changing stools

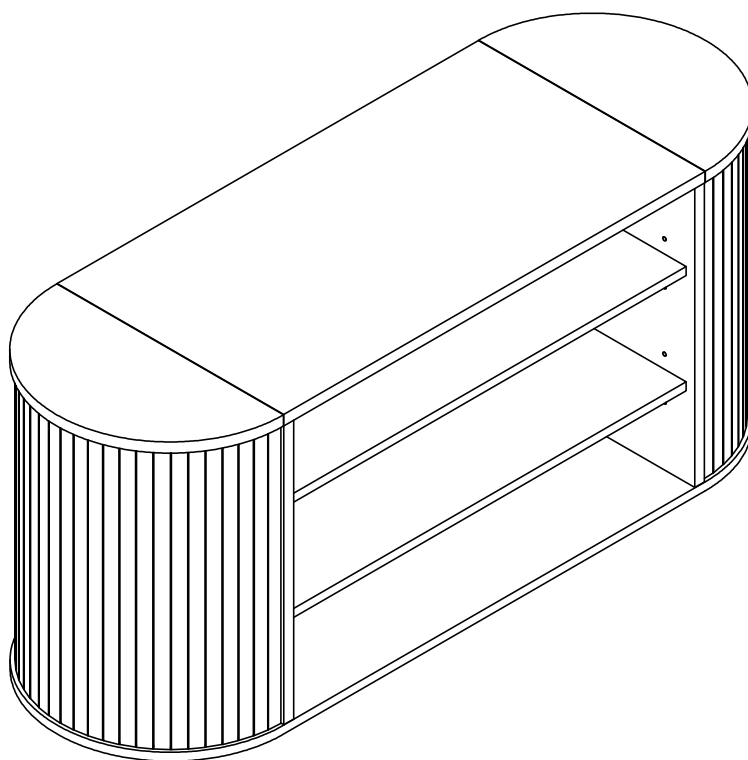


Assembling

What you need

- Use the packaging carton as a working surface to prevent product damage during assembly
- Phillips head screwdriver



Weight Limitation

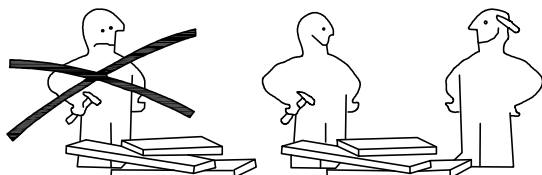


What' included


Code	Description	Qty
A	Cam Bolt M6X35MM	11
B	Cam Lock15X10MM	11
C	Wooden Dowel M8X30MM	12
D	Screw M4X40MM	9
E	Screw M3.5X14MM	2
F	Hole position sticker	11
G	Shock absorbing pad	6
H	Nylon Strap	2
I	Shelf Holder	8
J	Anchor	2
K	Screw M3.5X14MM	24
L	Shelf Holder	4
N	Screw M6X10MM	8
M	Screw M6X35MM	8
O	Screw M6X25MM	15
P	Metal handhandle	1

The Hardwares


(A)




(B)



(C)



(D)



(E)




(F)



(G)



(H)



(I)



(J)



(K)



(L)



(N)



(M)



(O)



(P)




IMPORTANT:

1. Do not tighten bolts / screws completely until all bolts / screws are lined up and inserted into holes.
2. Do not over tighten screws and bolts to avoid stripping
3. Please use hand tools to assemble this product, you can also use power tools (please use power tools carefully)


Included Accessories




Code	Description	Qty
1	Cabinet Top	1
2	Bottom panel	1
3	Left Side Panel	1
4	Right Side Panel	1
5	Backboard	1
6	The door	2
7	Coaming panel	2
8	Movable shelf	2
9	Arc-shaped side frame	2
10	Arc-shaped side frame	2
11	Support rod	2
12	Connecting rod	4
13	Panel reinforcement	1

The Accessoriess

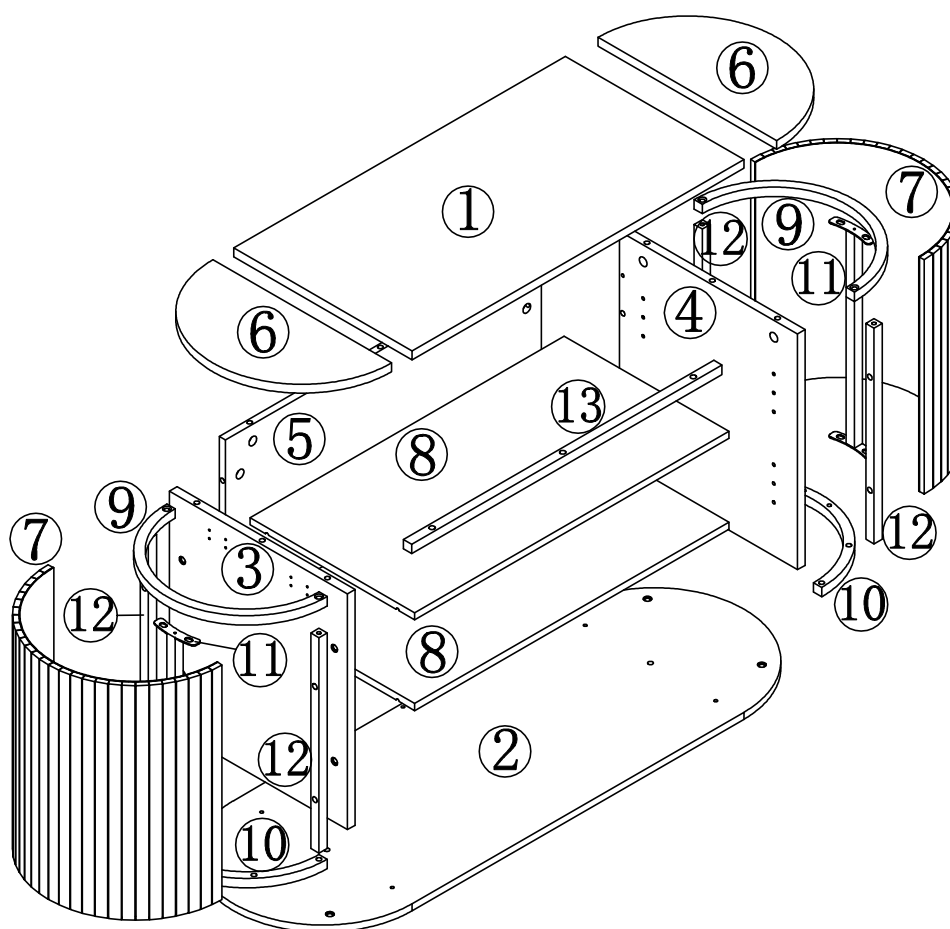

Step 1

A	×4
	

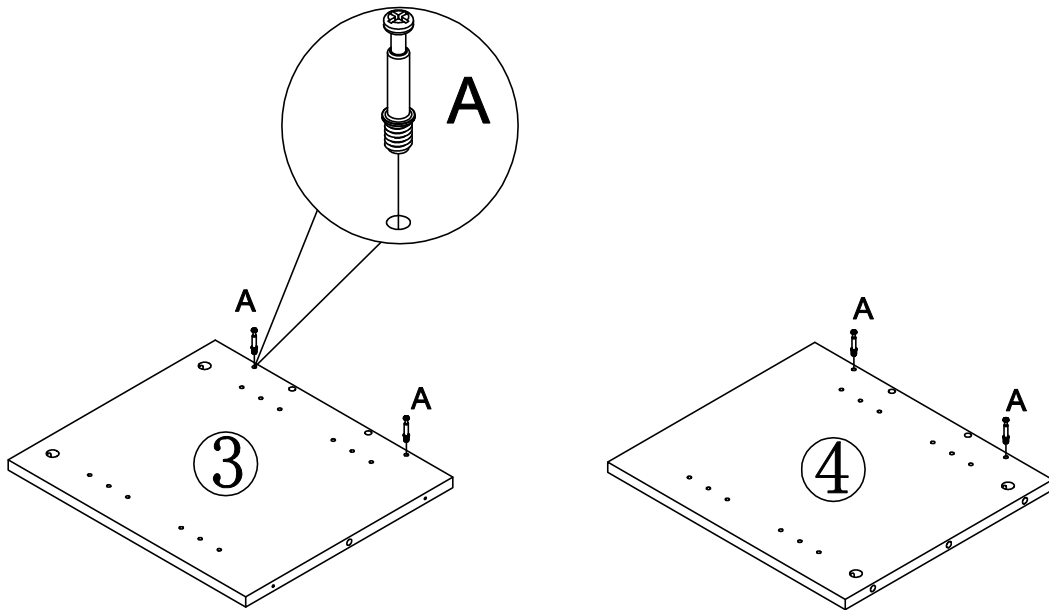




Step 2


F	×4
	



C	×4
	

B	×4
	

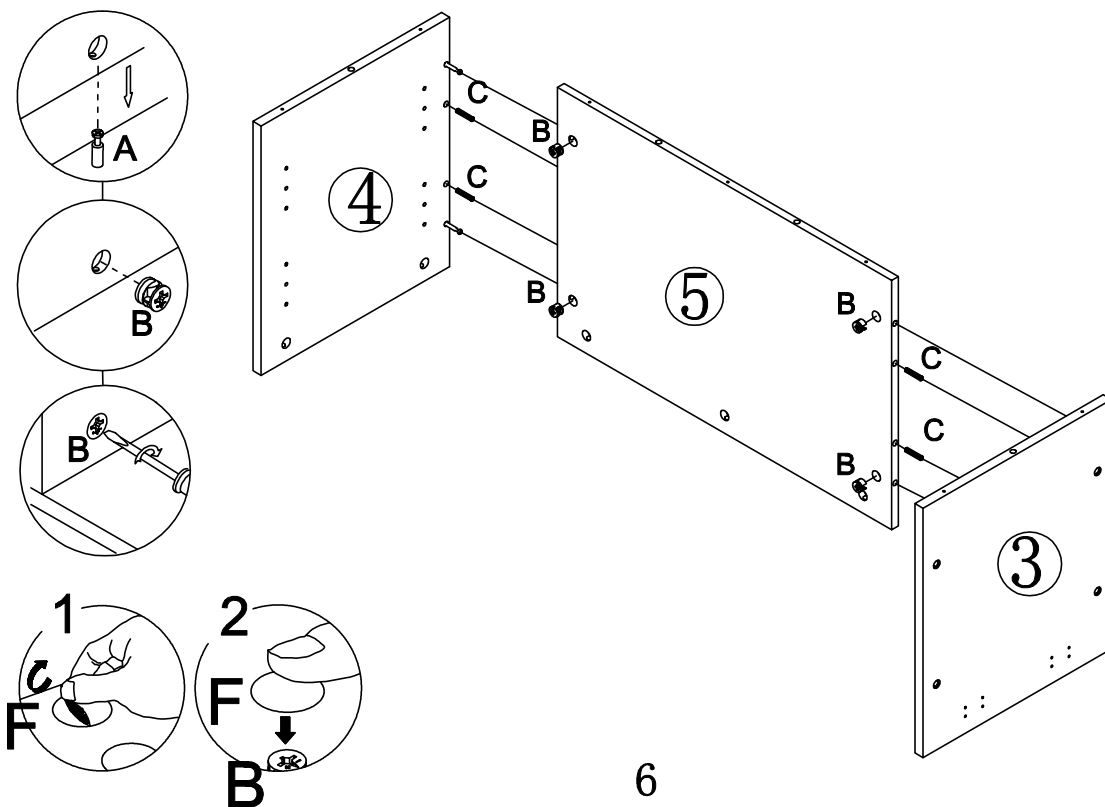


Step 3



G	X6	C	X4	D	X7
					

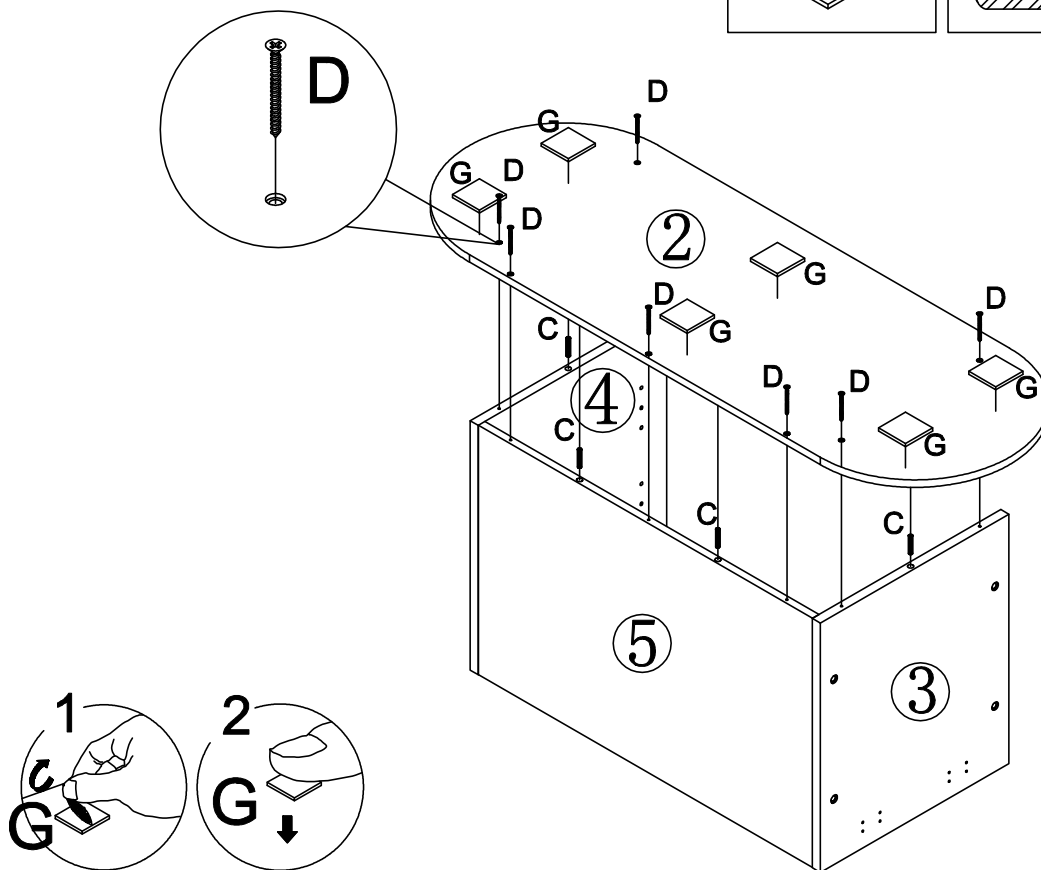


Step 4







P	X1	A	X7	O	X3
					

M6X25MM

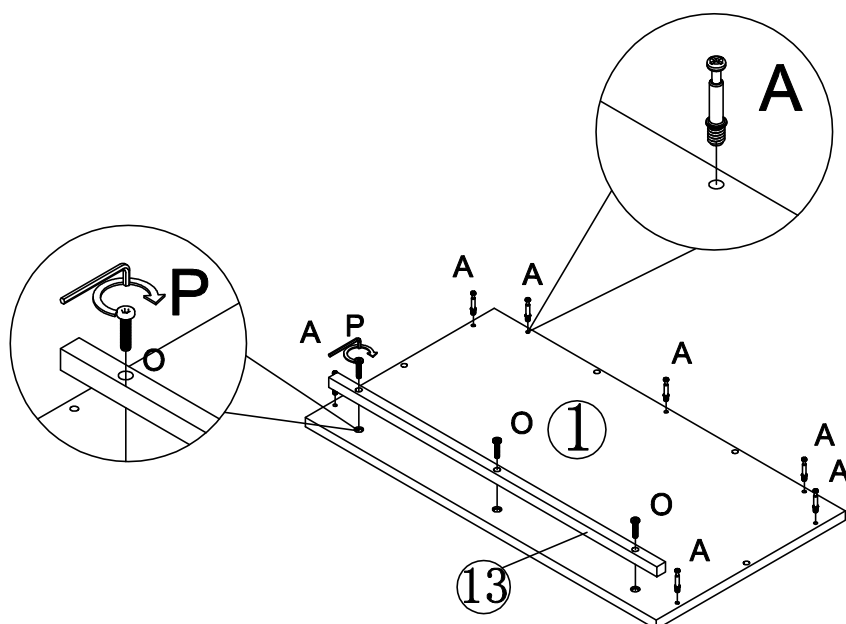


Step 5

F	×	7	C	×	4	B	×	7
								

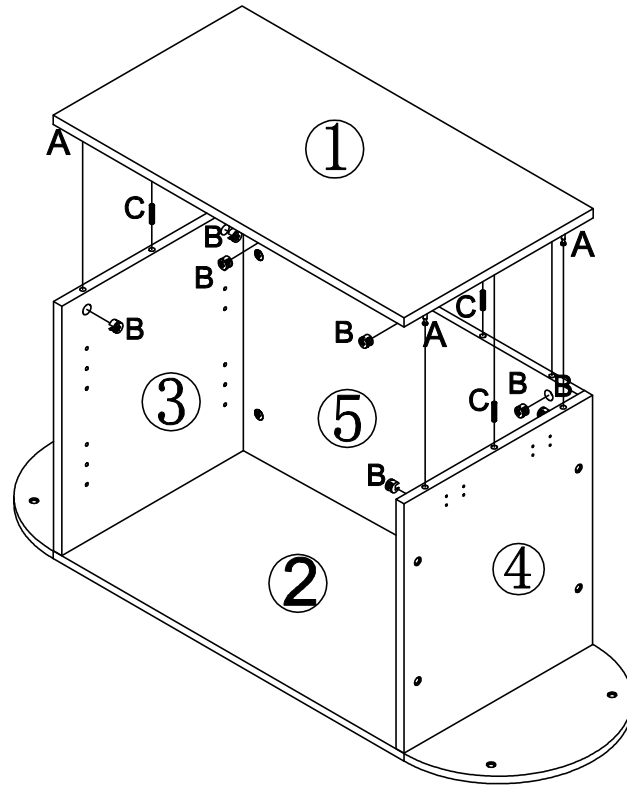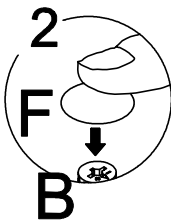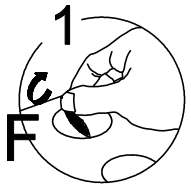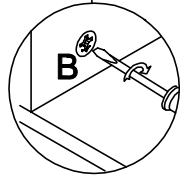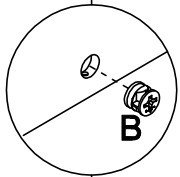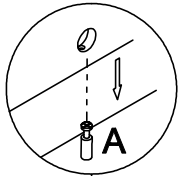


Step 6

I	×	8
		

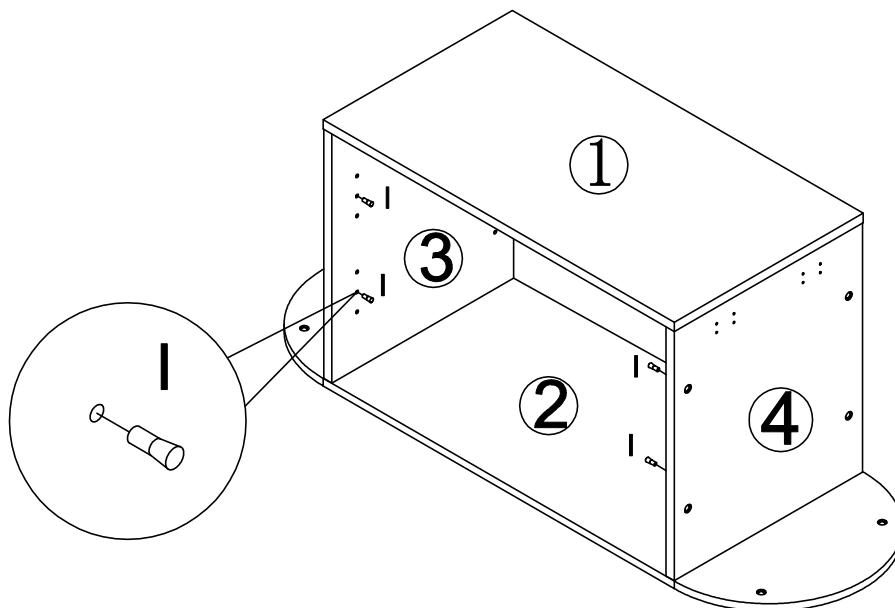


Step 7

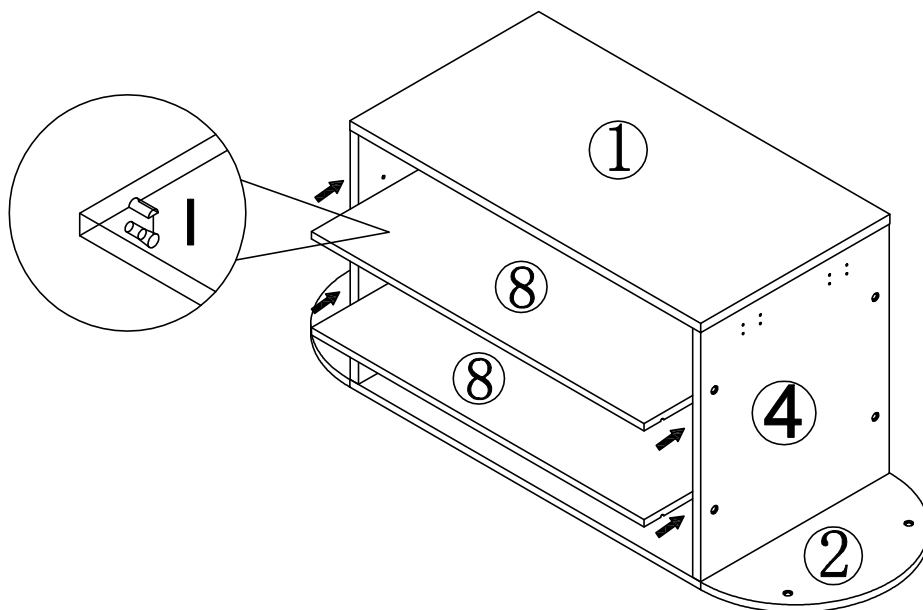




Step 8

When installing components N and M, first tighten them to 80%. After confirming that all components have been correctly tightened, then continue to fully tighten them

P	×1	N	×8	M	×8
					
		M6X10MM		M6X35MM	


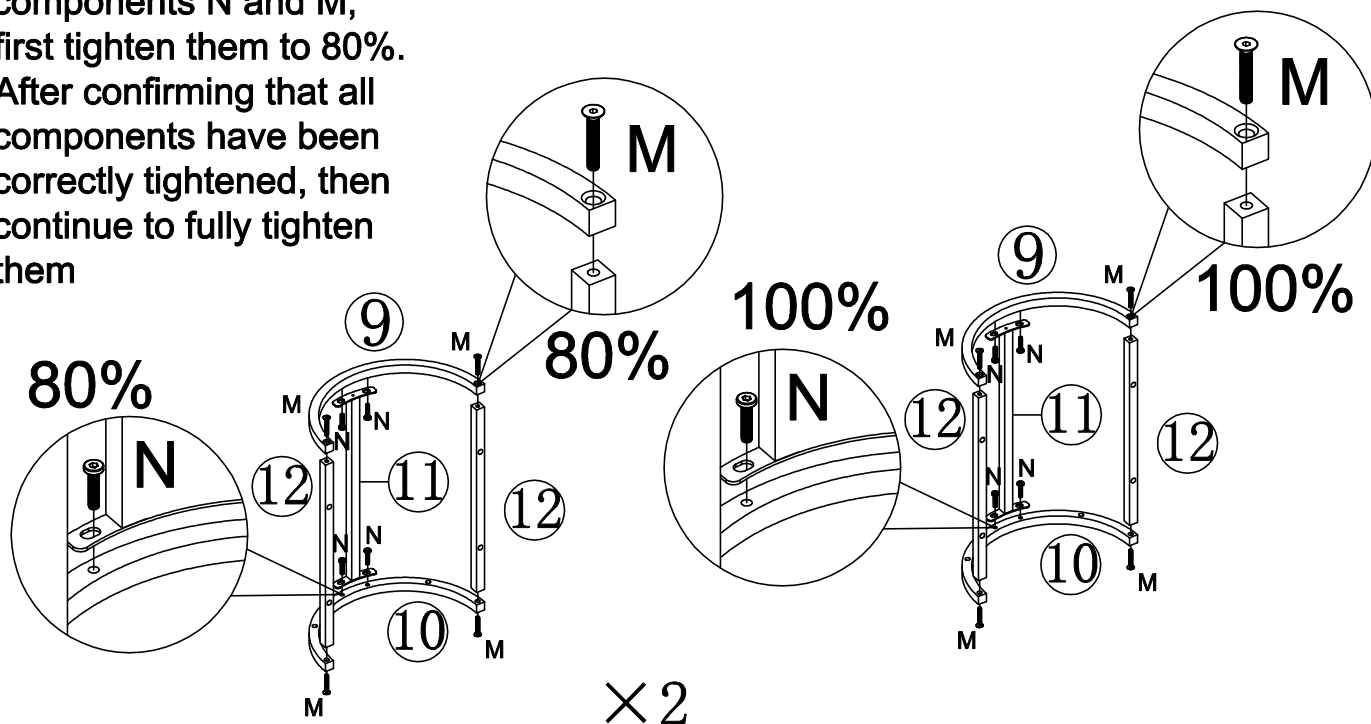


Step 9

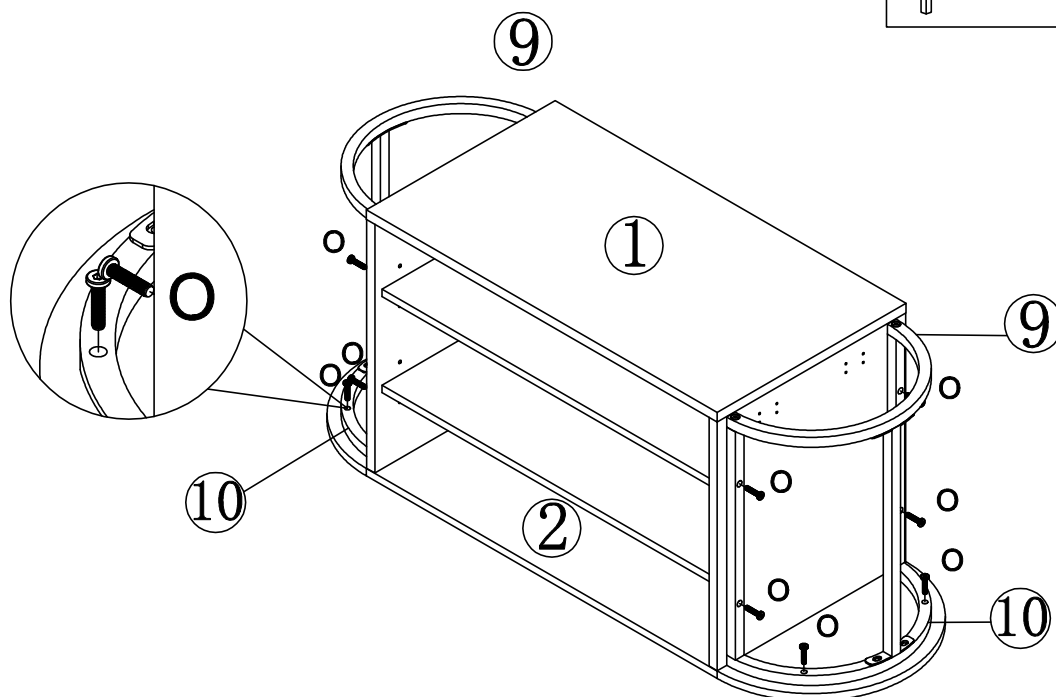
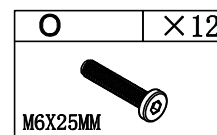
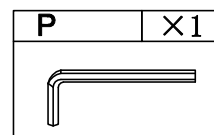


Please insert all the O-shaped screws into the holes and lock them 80% tightly. Then, adjust their positions properly and lock them 100% firmly


Step 10

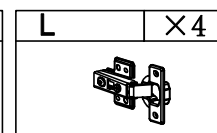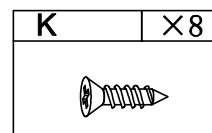




⑥ × 2

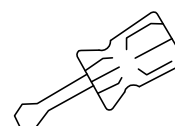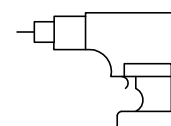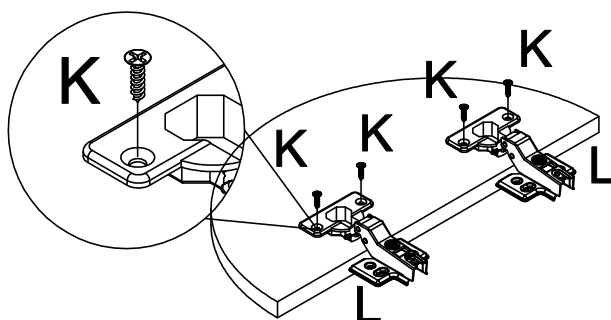

Step 11

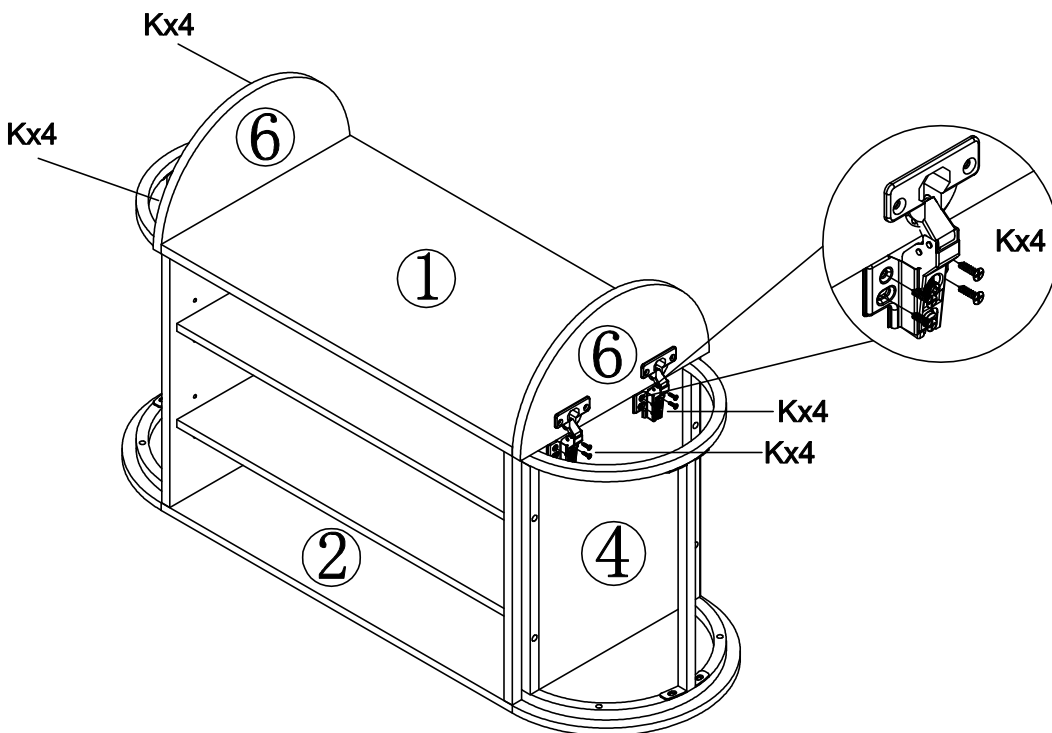


K	×16

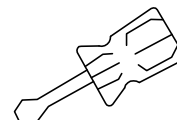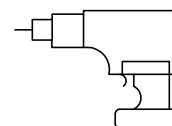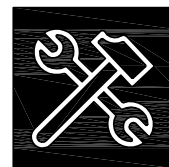


How do I get the two doors to align flat by adjusting the hinges?

Adjust up and down

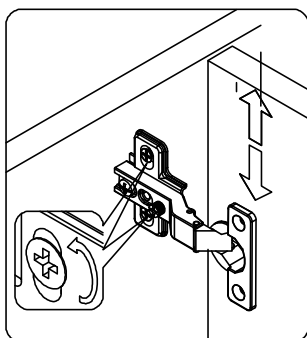


1. First, loosen the screws as shown in Figure 1, then place the door in the appropriate position and tighten the screws. This way, you can adjust the vertical position of the door.

Adjust left and right

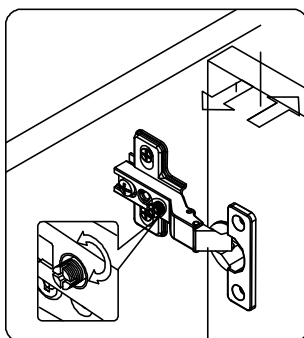

2. Adjust the screws shown in Fig. 2 and pull the door back and forth so that it can be opened smoothly.


Adjust before and after

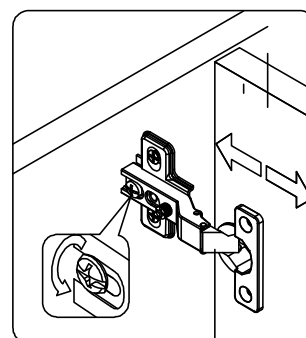


3. First, loosen the screws as shown in Figure 3, then place the door in the appropriate position, and then tighten the screws. In this way, you can adjust the left-right position of the door.



Step 12

Attach Board 7 neatly to the Velcro of iron 9 and 10(Attention: Please fully stretch part 4 and then stick it tightly along the Velcro to avoid gaps that affect the appearance. If there are obvious gaps, tear them off and stick them again.)

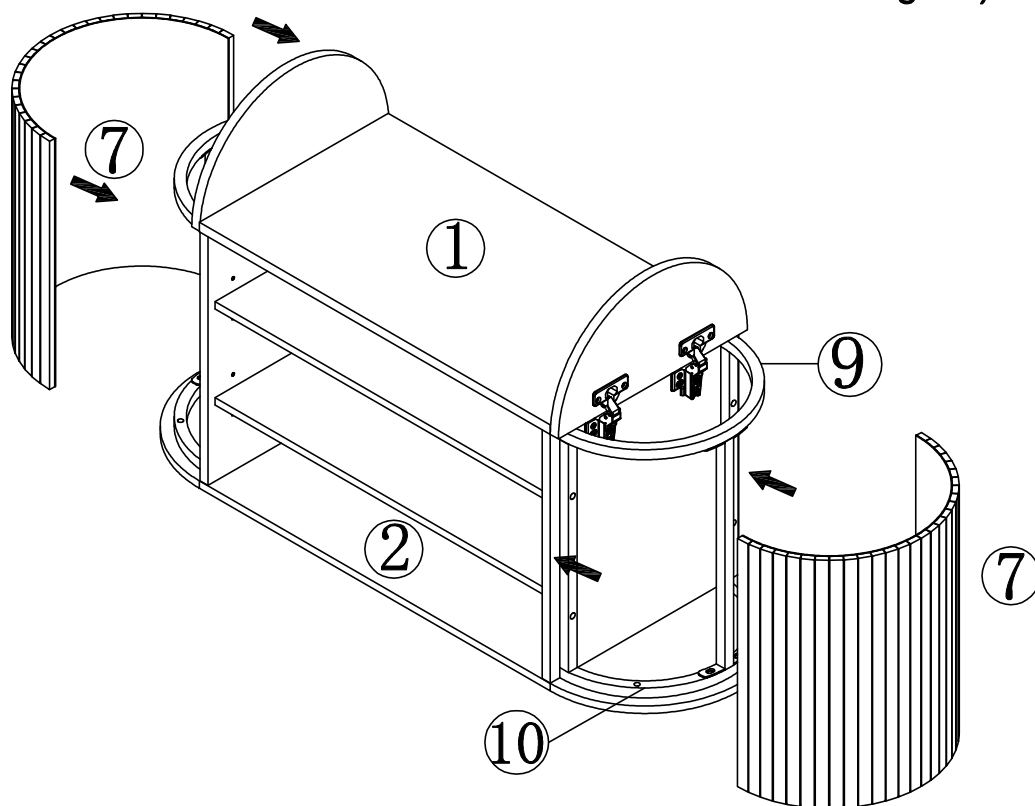







Step 13

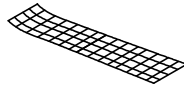E	×2	H	×2
			

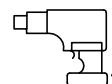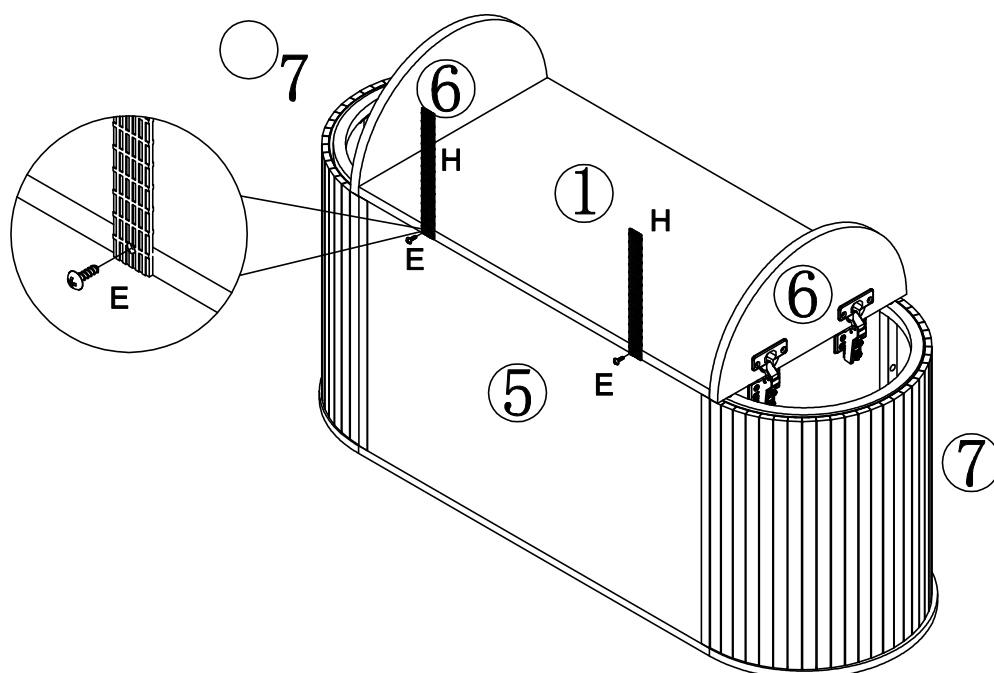

Step 14

D	×2	J	×2
			

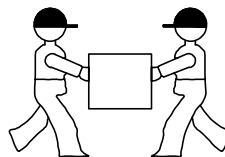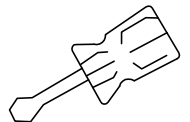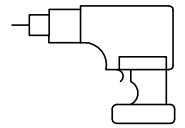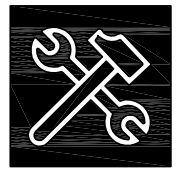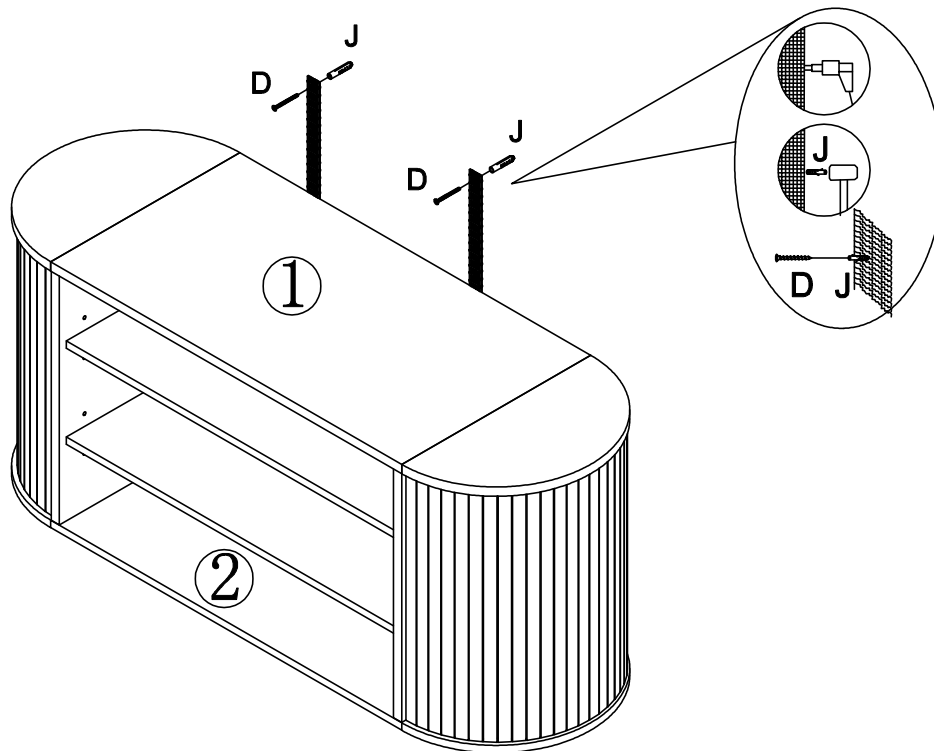

Two people work together to move the cabinet.
Make sure you lift it off the ground.
Don't push and pull.