Alcove TubInstallation Instructions

Installation Notes:

Professional installation by a licensed plumber required. Adhere to all local building and plumbing codes.
Measure the actual tub prior to any construction or installation to ensure accuracy for rough-in.
Be sure that the floor is structurally sound and able to support the full weight of a tub with water and an occupant. Subfloor must be correctly leveled.
Support the bottom of the tub only by the feet or base of the tub. Do not use the rim as a supporting area. Ensure that the tub is perfectly levelled for proper draining. The base area should be set in enough mortar to support the bottom of the tub.
Access should be given to all plumbing connections.
Verify that the bottom of the apron is at the same height as the floor covering.
100%Silicone sealant is recommended.

Prior to commencing installation:

Check bathtub for correct model and size. Carefully inspect the tub for any damage (i.e., chips, scratches, cracks). If at any point during the pre-installation inspection and water test, you discover a problem with the bathtub or piping system, DO NOT INSTALL the unit and contact us immediately.

All pre installed parts must be checked and retightened before installation.


Post-Installation:

To clean without scratching use a moist soft cloth and a mild liquid detergent, Do not use abrasive cleaners, scraping tools, or any item that could damage or dull the acrylic surface.


Alcove Tub Installation:

Preparation


1. Construct a plumb stud pocket. Refer to the specifcation sheet.

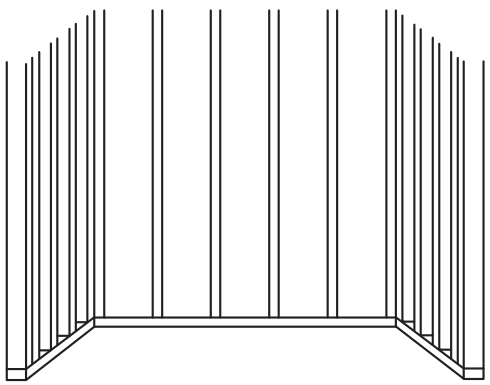


2. Rough-in plumbing for faucets.

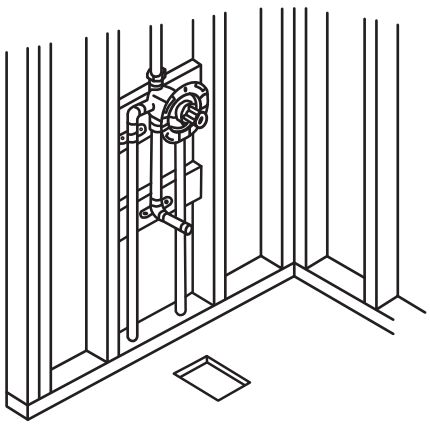


3. The pop-up drain is pre-installed at the factory, requiring no additional personnel for installation. Prior to final installation, please test the drainage system for leaks.

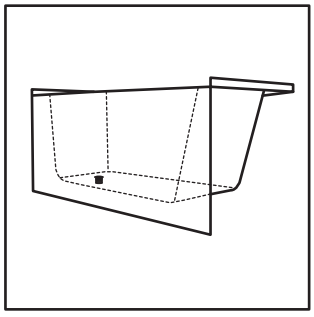

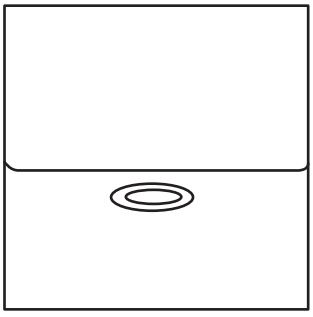



Drain, waste locations and trim options vary bymodel.

4. Apply mortar to the floor surface.

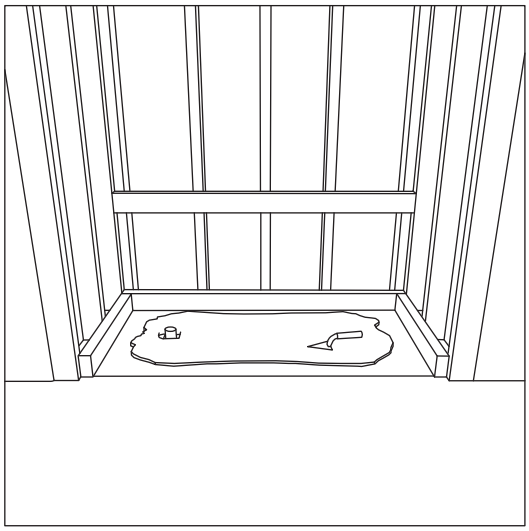

5. Lift the tub into position. Make sure to align thedrain with the pipe.

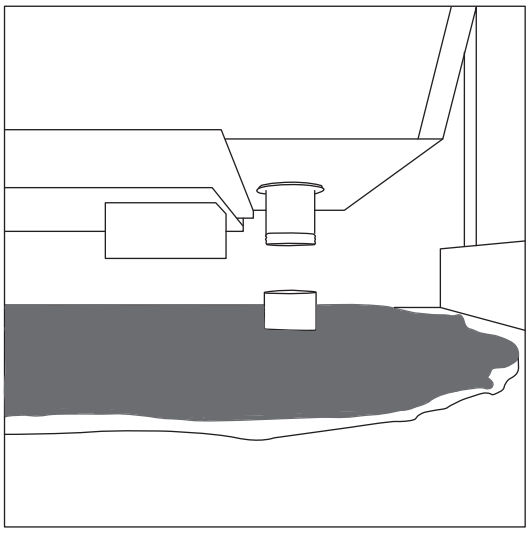

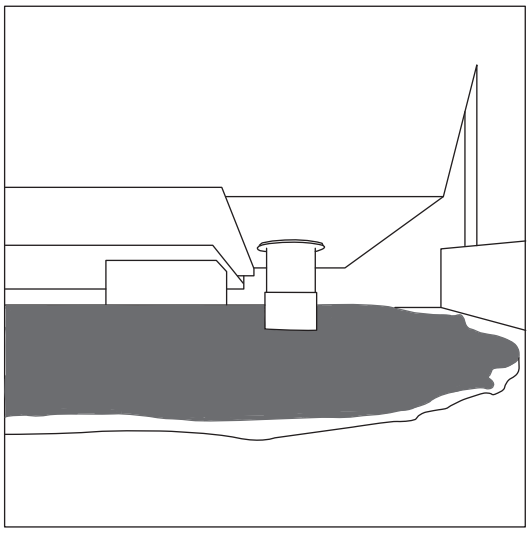

6. Level all sides of the bathtub.Apply 100%silicone sealant around the bath along the fnished walls and deck .

