



ASSEMBLY INSTRUCTIONS

PARTS:

(2) Side Pieces

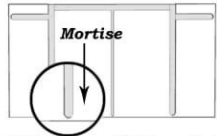


(2) Top/Bottom Pieces (Side A)

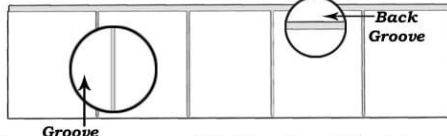

(2) Top/Bottom Pieces (Side B)



(2) Small Back Pieces




(1) Large Back Piece



(1) Center Divider



(4) Small Dividers

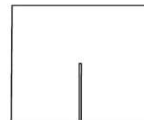

26 Hex Screws



1 Allen Wrench



5 Hooks




10 Small Screws




Tools needed: Phillips head screwdriver
NOTICE - KEEP BACK GROOVES ALIGNED


Step 1: Align holes of **small back** piece with (3) holes of **top/bottom** piece. Insert hex screws into each of (3) pre-drilled holes in **top/bottom** piece and tighten down halfway. Repeat for remaining **small back** piece and remaining **top/bottom** piece combination.

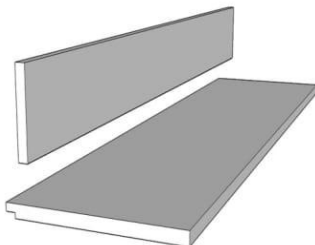


Step 2: Insert edge of one **top/bottom** piece with **small back** piece attached into mortises of **side** piece. Keep back grooves aligned. Insert hex screws into each of (3) pre-drilled holes in **side** piece and tighten down halfway.

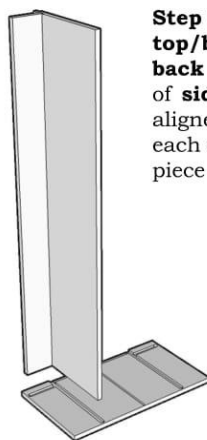



Step 3: Insert edge of remaining **top/bottom** piece with **small back** piece attached into remaining mortise of **side** piece. Keep back grooves aligned. Insert hex screws into each of (3) pre-drilled holes in **side** piece and tighten down halfway.

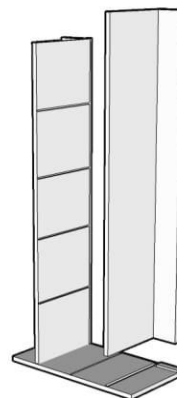


Step 4: Insert edge of **center divider** into center groove of **side** piece, making sure that notches face away from back grooves.

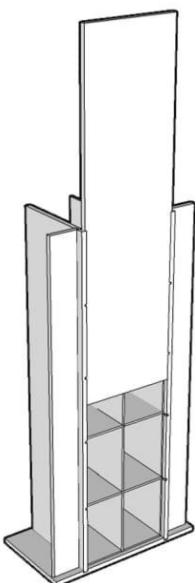


Step 5: Insert each **small divider** so edges rest in grooves of **top/bottom** pieces, and notch intersects with notch on **center divider**.

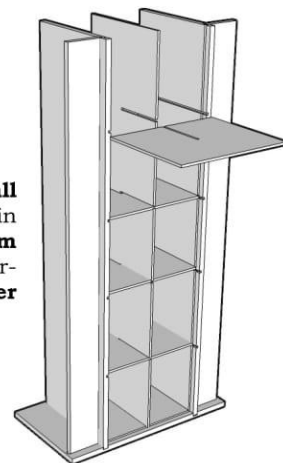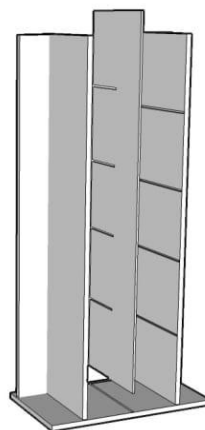

Step 6: Insert sides of **large back** piece into back grooves of **top/bottom** pieces and slide down till edge rests firmly in back groove of **side** piece. Insert hex screws into each of (2) pre-drilled holes in **side** piece and (2) pre-drilled holes in each **top/bottom** piece and tighten down halfway.

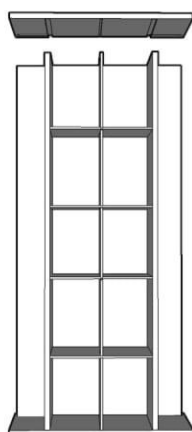

Step 7: Insert edges of assembled pieces into mortises and grooves of remaining **side** pieces. Insert hex screws into each of (8) pre-drilled holes in remaining **side** piece and tighten down halfway.

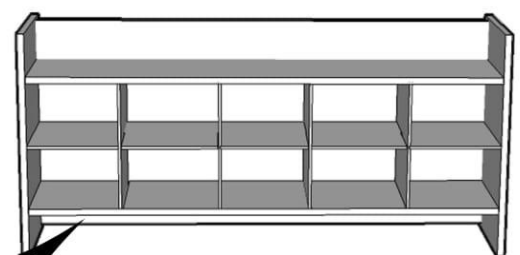

Step 8: Tighten down all screws. DO NOT DRILL. DO NOT OVER TIGHTEN. Attach hooks to lower **small back** piece using phillips head screwdriver to screw small screws into pre-drilled holes. Assembly is now complete.

